 
 
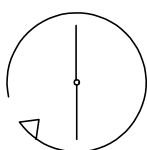 


4 Door Wardrobe

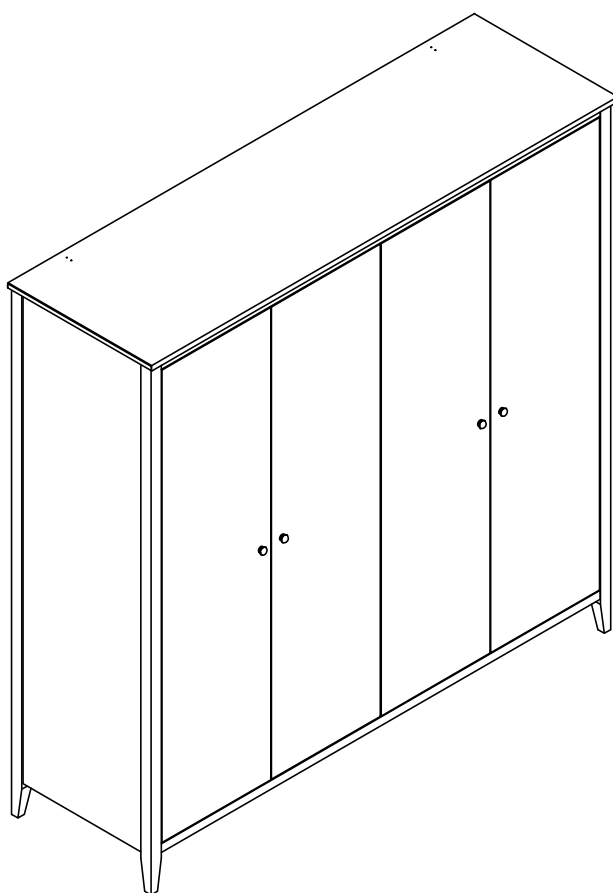

Up to 90 minutes
assembly time

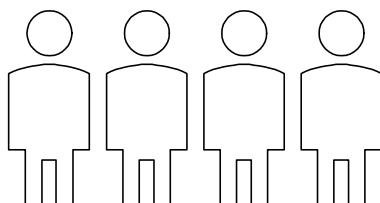

Four person assembly



Electric screwdriver
prohibited

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your 4 Door Wardrobe frame.

We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the 4 Door Wardrobe in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

 
RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the 4 Door Wardrobe when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

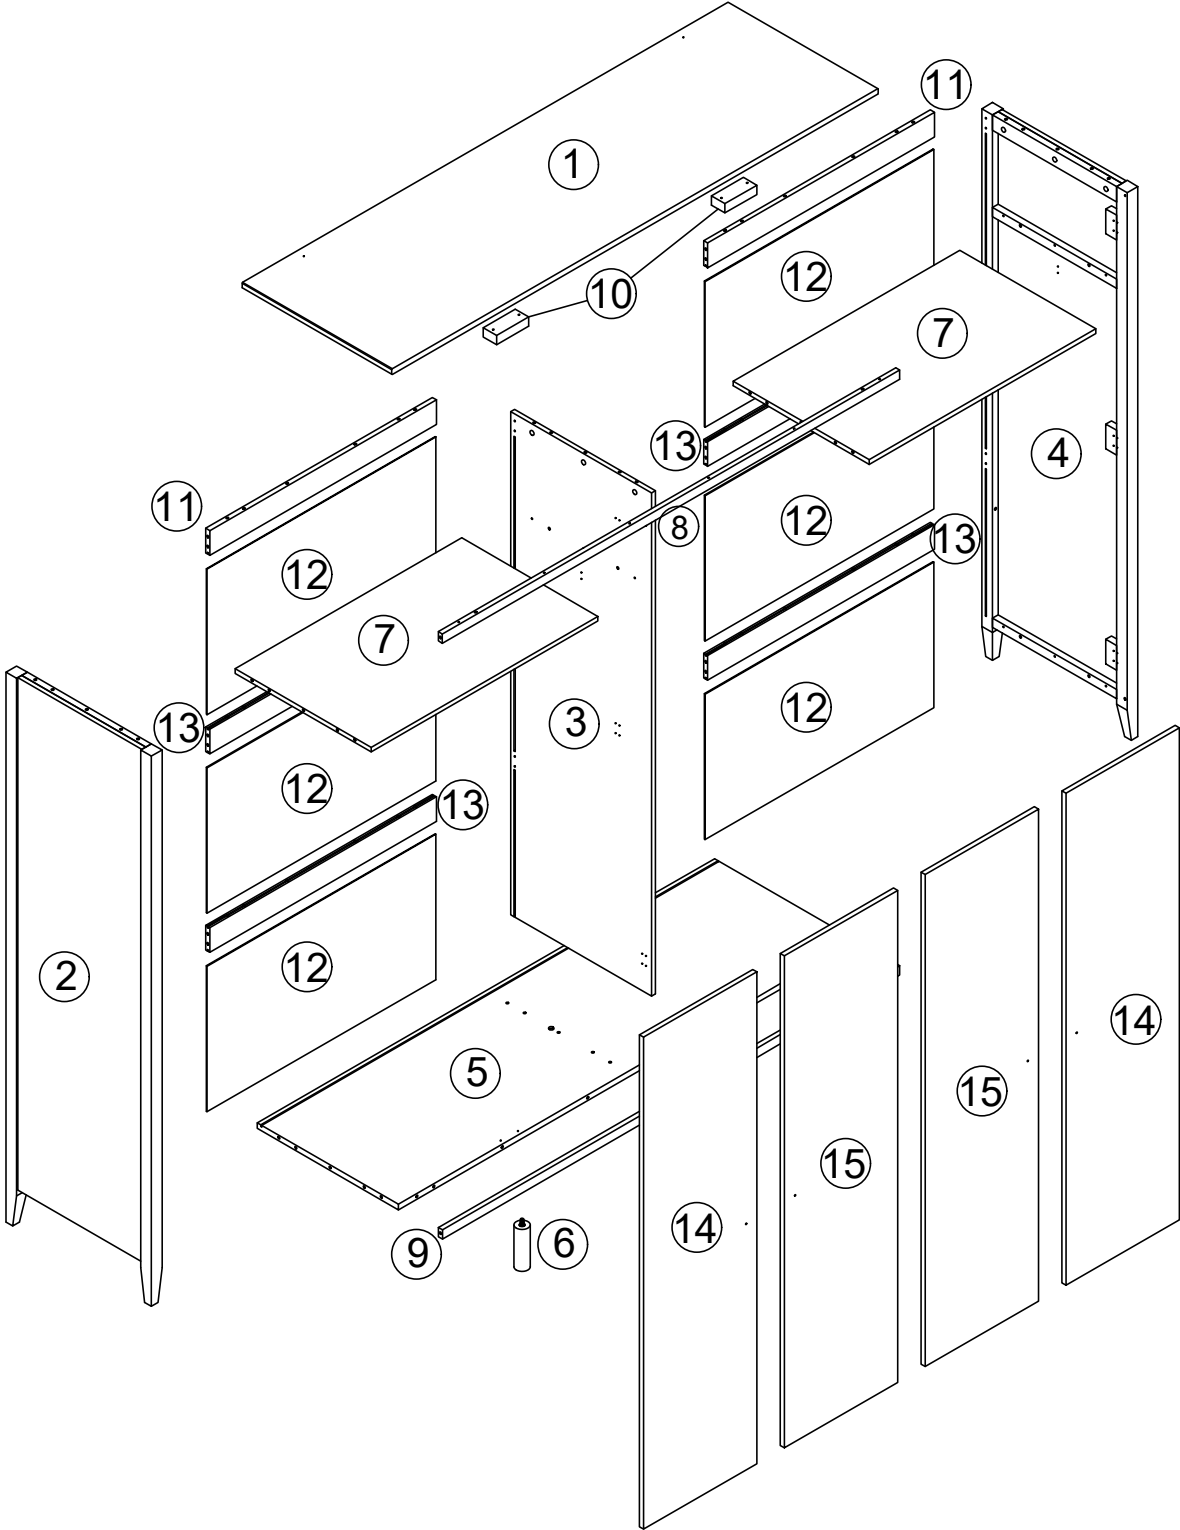

Parts list

Before you begin building your 4 Door Wardrobe, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top	1pc	Box 2
②	Left Side Panel	1pc	Box 1
③	Middle panel	4pcs	Box 2
④	Right Side Panel	2pcs	Box 1
⑤	Bottom Panel	2pcs	Box 2
⑥	Centre Leg	6pcs	Box 2
⑦	Shelf Panel	2pcs	Box 2
⑧	Centre Support	1pc	Box 2


Part Number	Part Description	Quantity	Box No
⑨	Centre Support	1pc	Box 2
⑩	wooden block	2pcs	Box 2
⑪	Centre Support	2pcs	Box 2
⑫	Back Panel	6pcs	Box 2
⑬	Centre Support	4pcs	Box 2
⑭	Door Panel	2pcs	Box 1
⑮	Door Panel	2pcs	Box 1

Fittings

Please check you have all the fittings listed below with your product box 1.

A  M6*35mm Bolt 67pcs+3pcs extra	B  Ø15x9.5mm Cam Lock 67pcs+3pcs extra	C  Ø8x30mm Dowel 26pcs+3pcs extra	D  magnetic pad 8pcs+1pc extra	E  magnetic catch 4pcs	F  Ø4*14mm Screw 88pcs+3pcs extra	G  Tube Bracket 4pcs	H  Clothes rail 2pcs
I  Felt pad 4pcs	J  Steel L bracket 2pcs	K  Ø4*14mm Screw 4pcs	L  Ø4*35mm Screw 15pcs	M  Back panel clip 36pcs+3pcs extra	N  Ø3*16mm Screw 36pcs+3pcs extra	O  Ø3*12mm Screw 8pcs+1pc extra	P  Hinge 6pcs
Q  M4*18mm Bolt 4pcs	R  Handle 4pcs	S  Wall Plug 2pcs	T  Adjustable foot pads 1pc	U  Cover 17pcs+2pcs extra	V  Hinge 6pcs	W  Ø8x50mm Dowel 2pcs	

 Bolt Length Ruler:





Tool required




Crosshead Screwdriver (not provided)

  
1.Attach parts to the side panel.

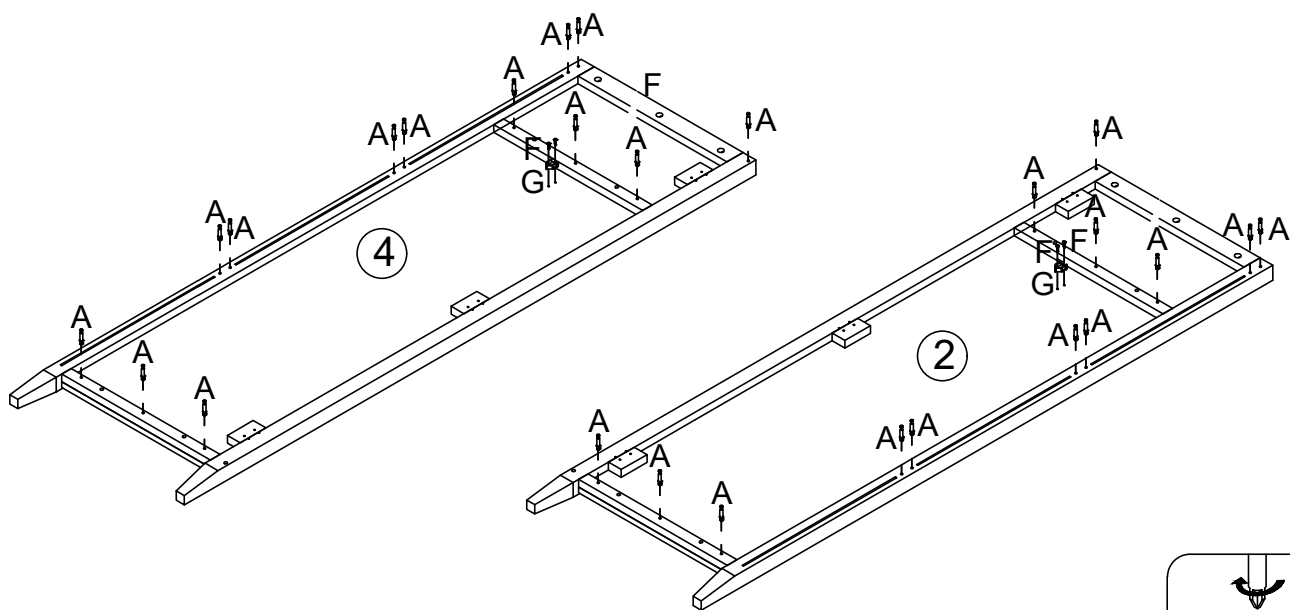



A	F	G
		
M6*35mm Bolt	Ø4*14mm Screw	Tube Bracket
26pcs	4pcs	2pcs

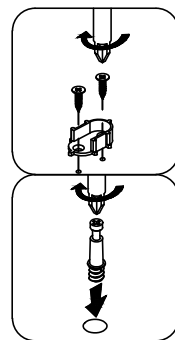 


2.Attach the centre support and the shelf panel to the left side panel.

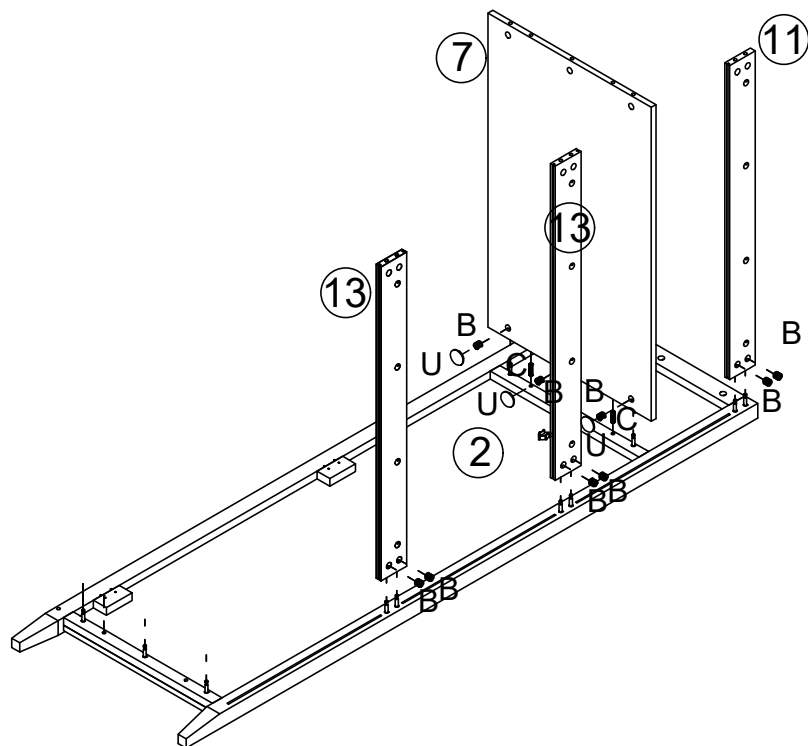 

 
B	C	U
		
Ø15x9.5mm Cam Lock	Ø8x30mm Dowel	Cover
9pcs	2pcs	3pcs

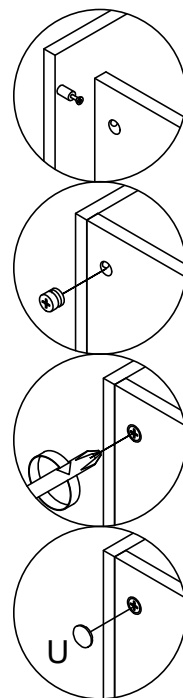 



3.Attach the back panel to the left side panel.

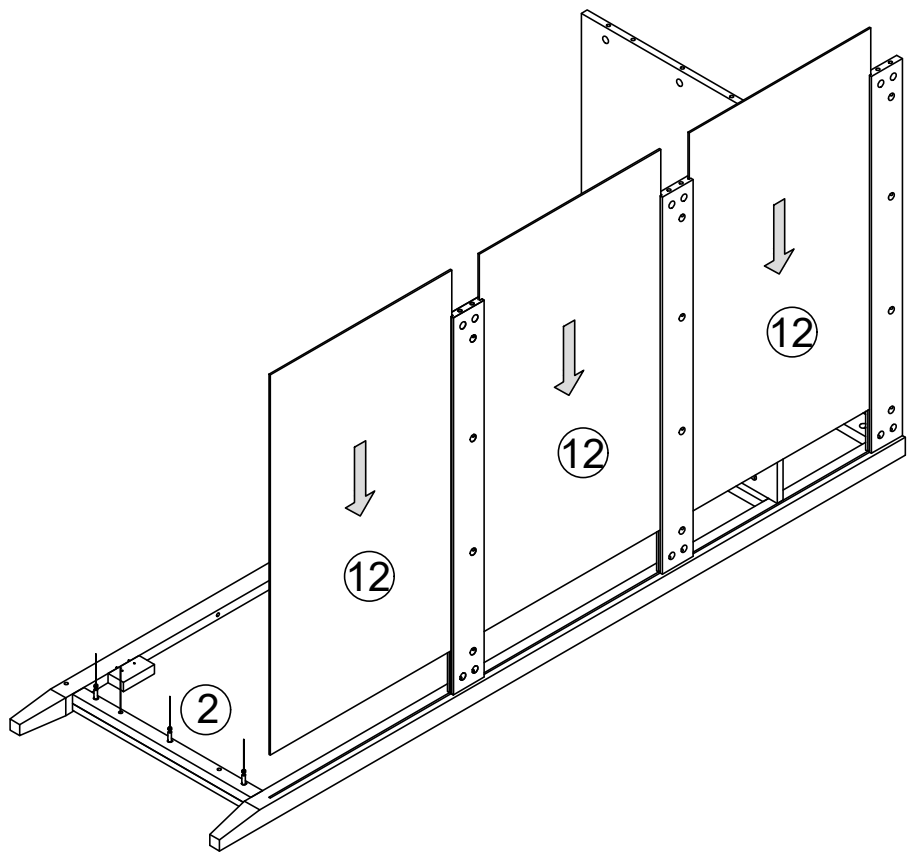 


4.Attach parts to the middle panel.

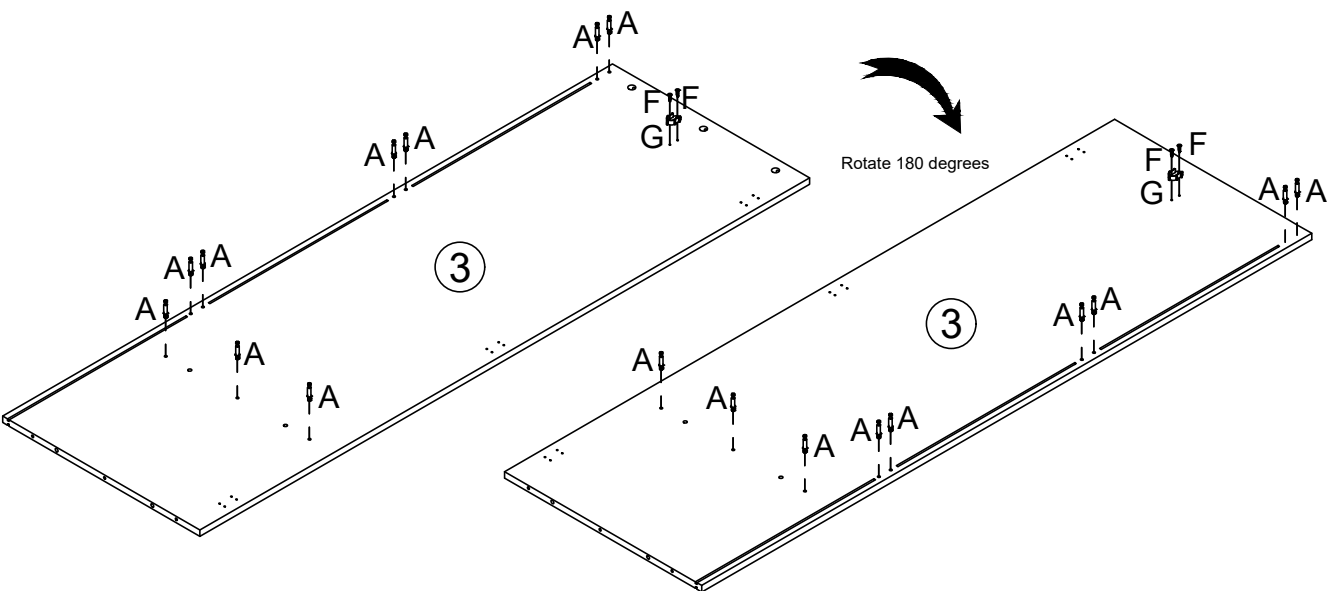 

 A 	F 	G 
M6*35mm Bolt 18pcs	Ø4*14mm Screw 4pcs	Tube Bracket 2pcs

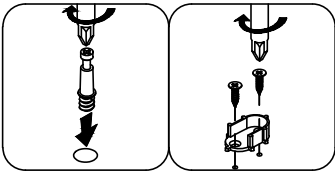 



5.Attach the middle panel to the frame.

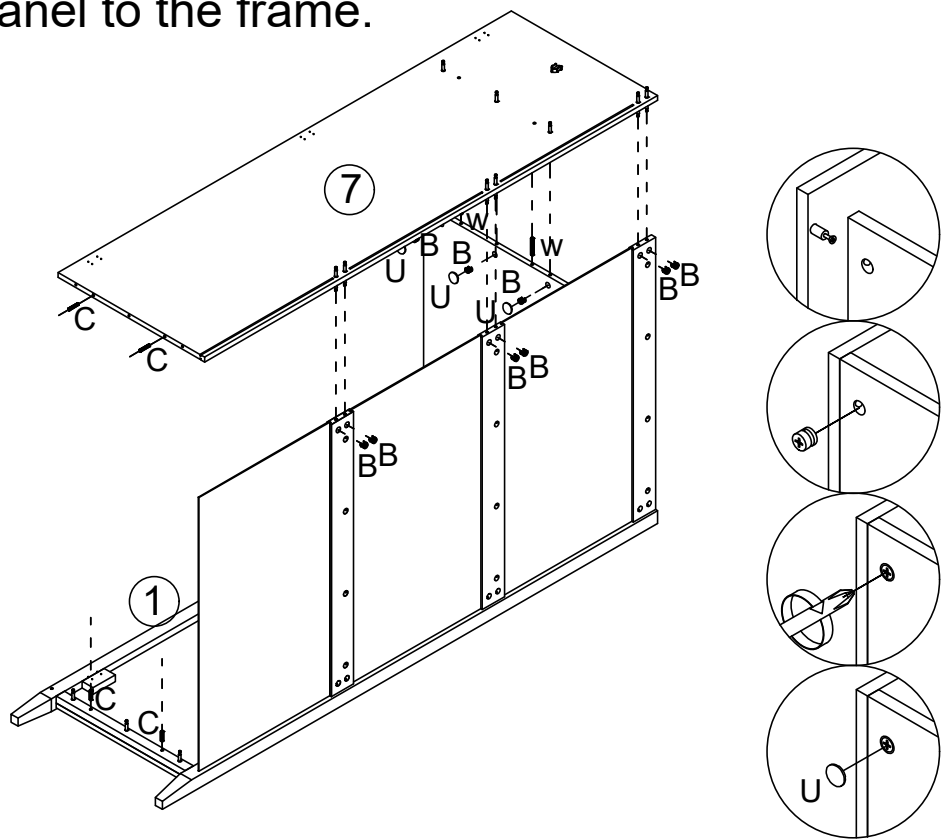 


B		W		C		U	
Ø15x9.5mm Cam Lock		Ø8x50mm Dowel		Ø8x30mm Dowel		Cover	
9pcs		2pcs		4pcs		3pcs	

  
6.Attach parts to the bottom panel.

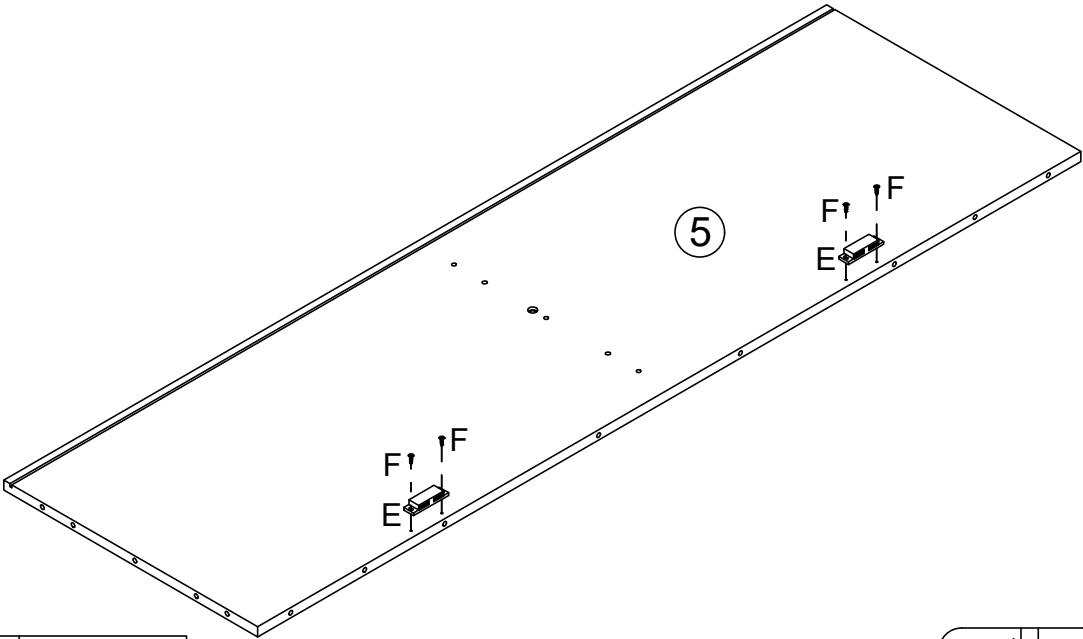



F		E	
Ø4*14mm Screw		magnetic catch	
4pcs		2pcs	

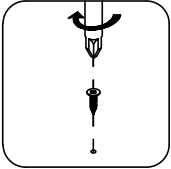 


7.Attach the centre support to the bottom panel.

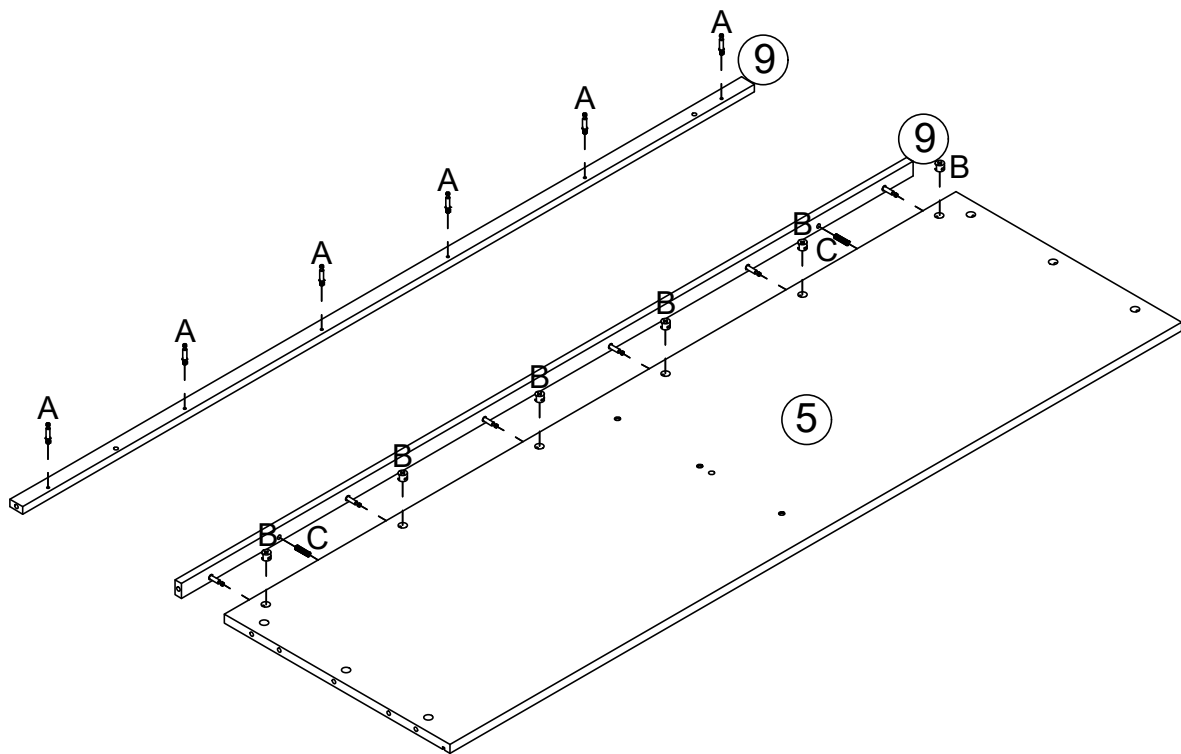 


 
A	B	C
		
M6*35mm Bolt 6pcs	Ø15x9.5mm Cam Lock 6pcs	Ø8x30mm Dowel 2pcs

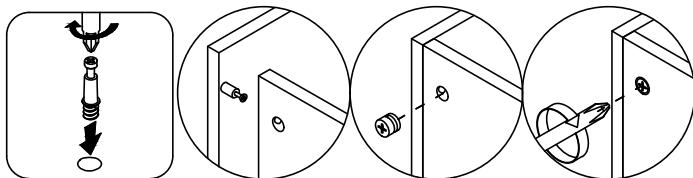 


8.Attach the bottom panel to the frame.

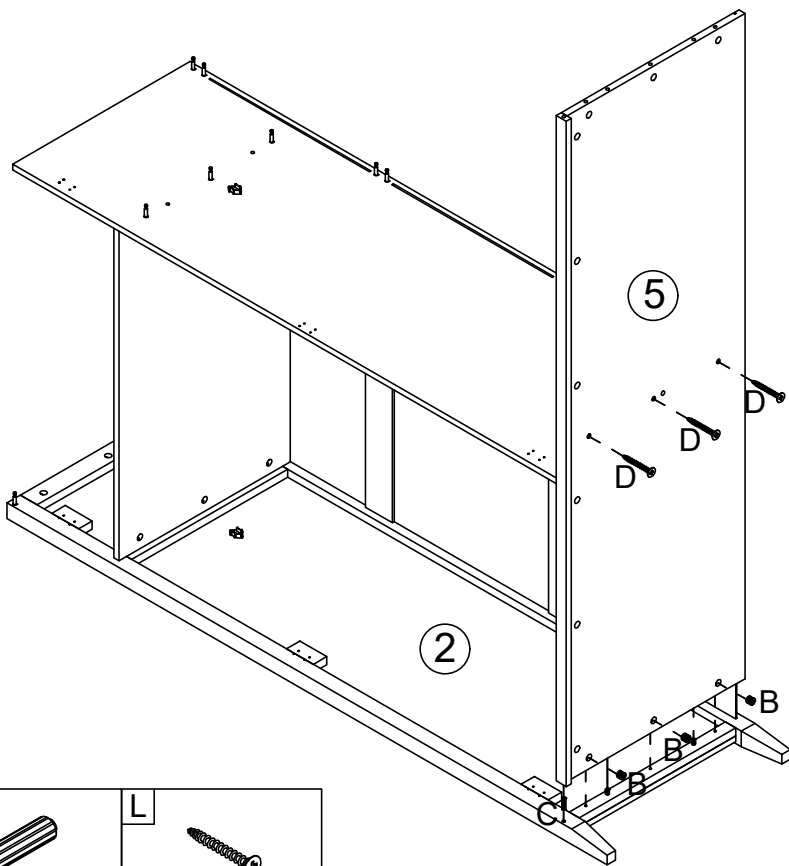 

 B	C	L
		
Ø15x9.5mm Cam Lock 3pcs	Ø8x30mm Dowel 1pc	Ø4x35mm Screw 3pcs


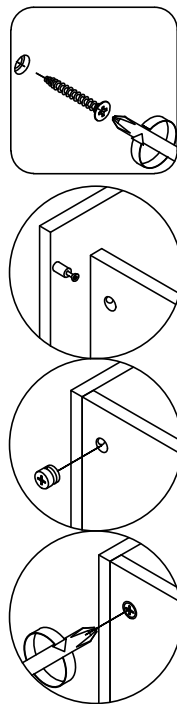 


9.Attach the centre leg to the bottom panel.

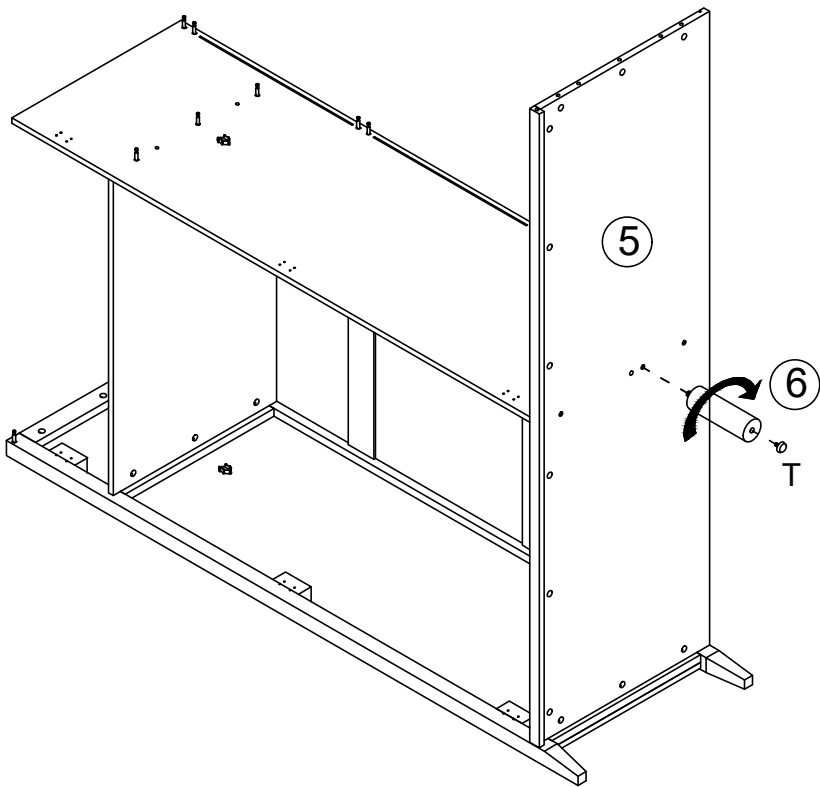 



T	
Adjustable foot pads	
1pc	

  10.Attach the centre support and the shelf panel to the frame.

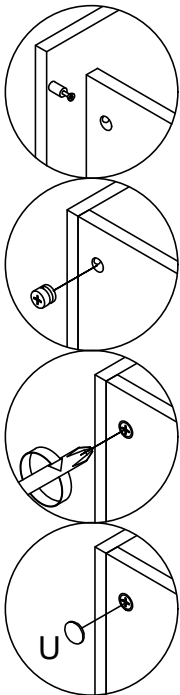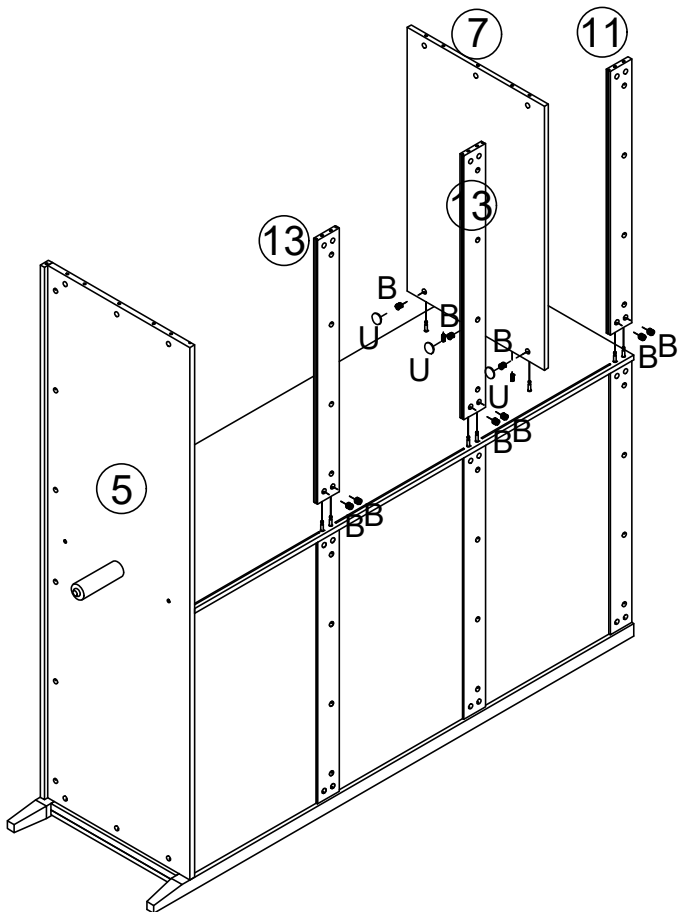



B		U	
Ø15x9.5mm Cam Lock		Cover	
9pcs		3pcs	

  11.Attach the centre support and the back panel to the frame.

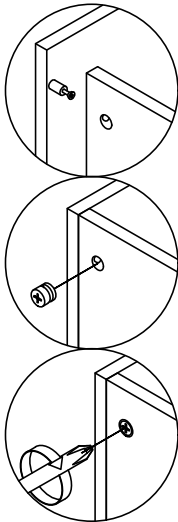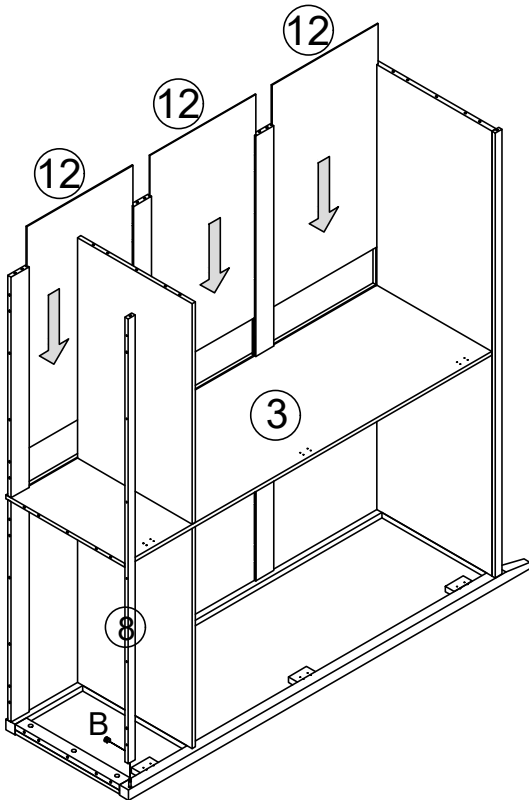


B	
Ø15x9.5mm Cam Lock	
1pc	

  
12.Attach the left side panel to the frame.

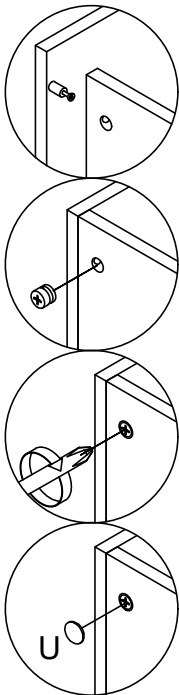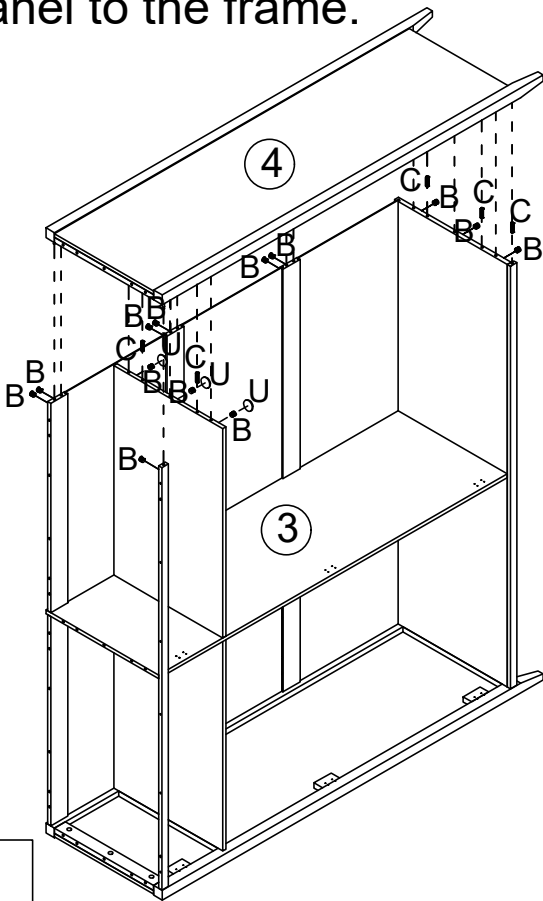


B		C		U	
Ø15x9.5mm Cam Lock		Ø8x30mm Dowel		Cover	
13pcs		5pcs		3pcs	

  
13.Attach felt pads to legs.

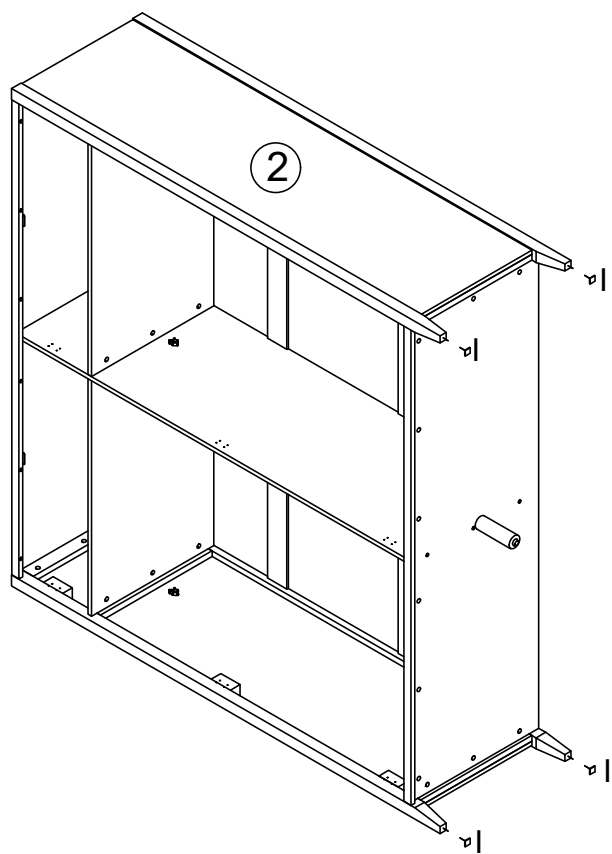


I	
Felt pad	
4pcs	

  
14.Attach parts to the top panel.

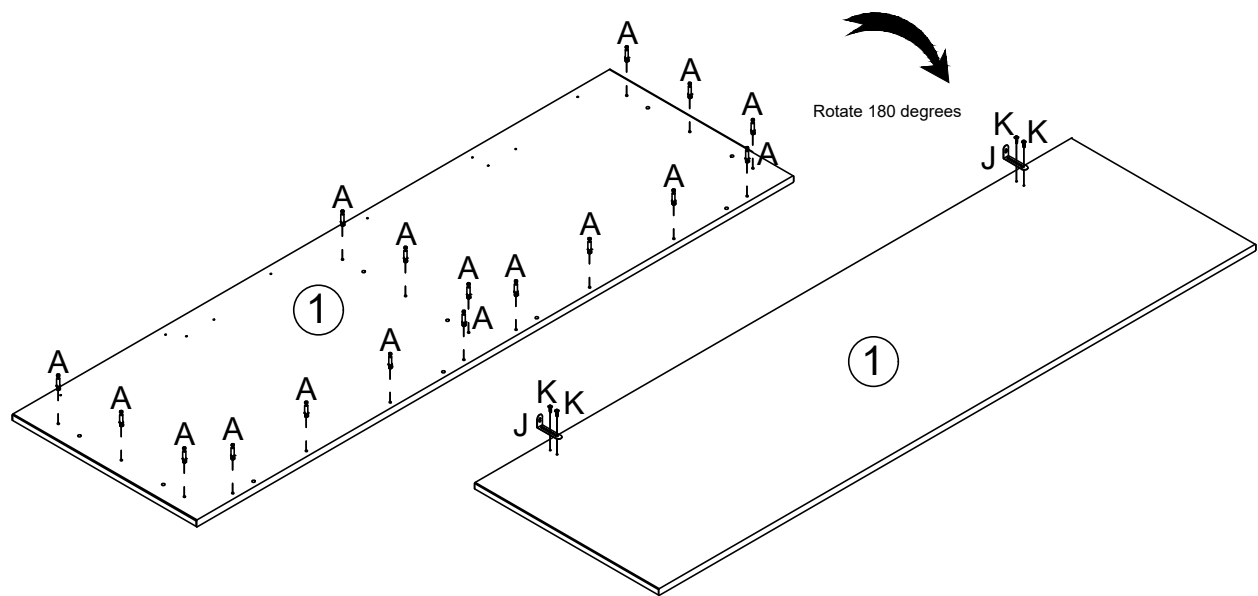


A	K	J
		
M6*35mm Bolt	Ø4*14mm Screw	Steel L bracket
17pcs	4pcs	2pcs

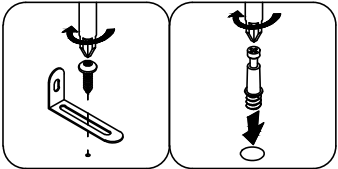 


15.Attach wooden block to the top panel.

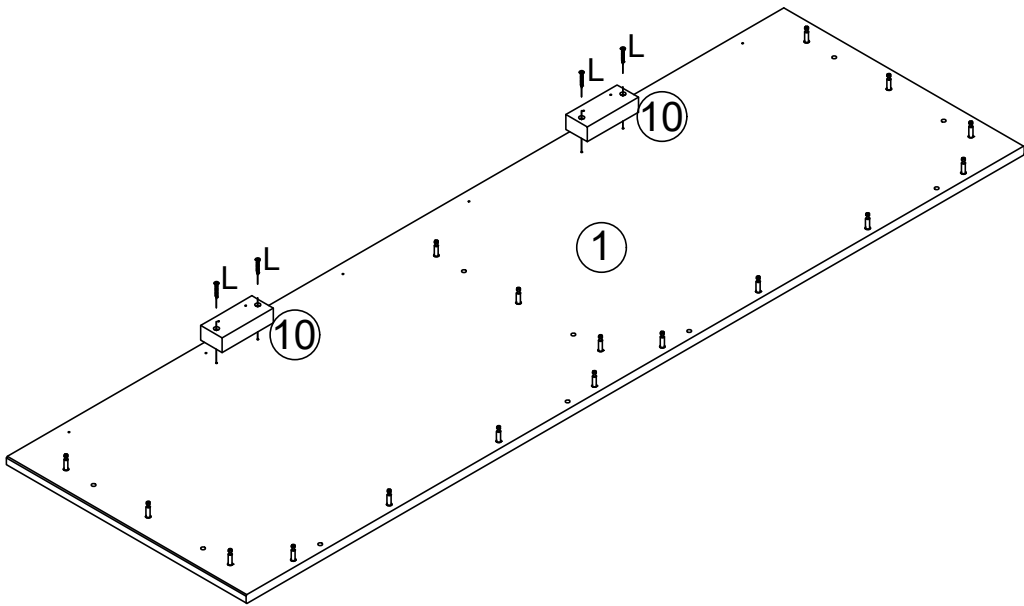 


L	
Ø4*35mm Screw	
4pcs	


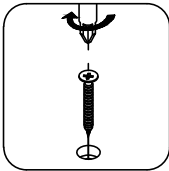 



16.Attach parts to the wooden block.

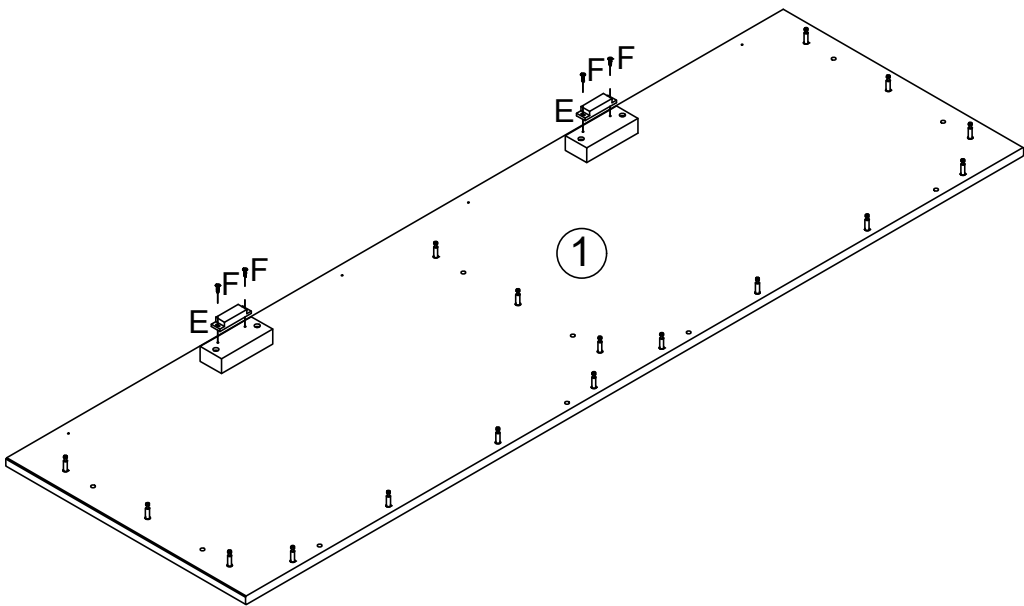 

 
F		E	
Ø4*14mm Screw		magnetic catch	
4pcs		2pcs	

   17.Attach the top panel to the frame.

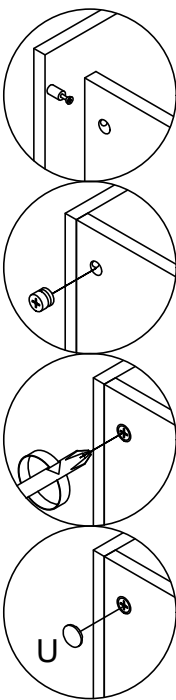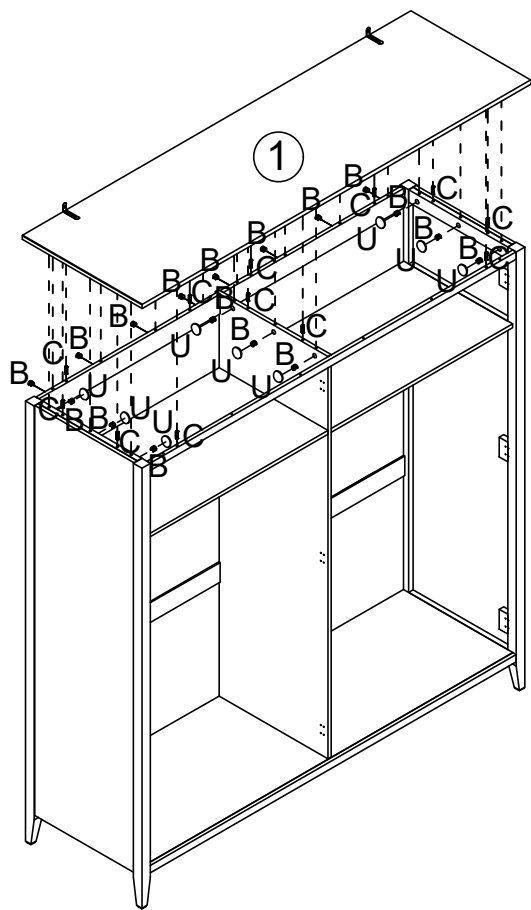


B		C		U	
Ø15x9.5mm Cam Lock		Ø8x30mm Dowel		Cover	
17pcs		12pcs		9pcs	

 
18.Attach parts to the top panel.

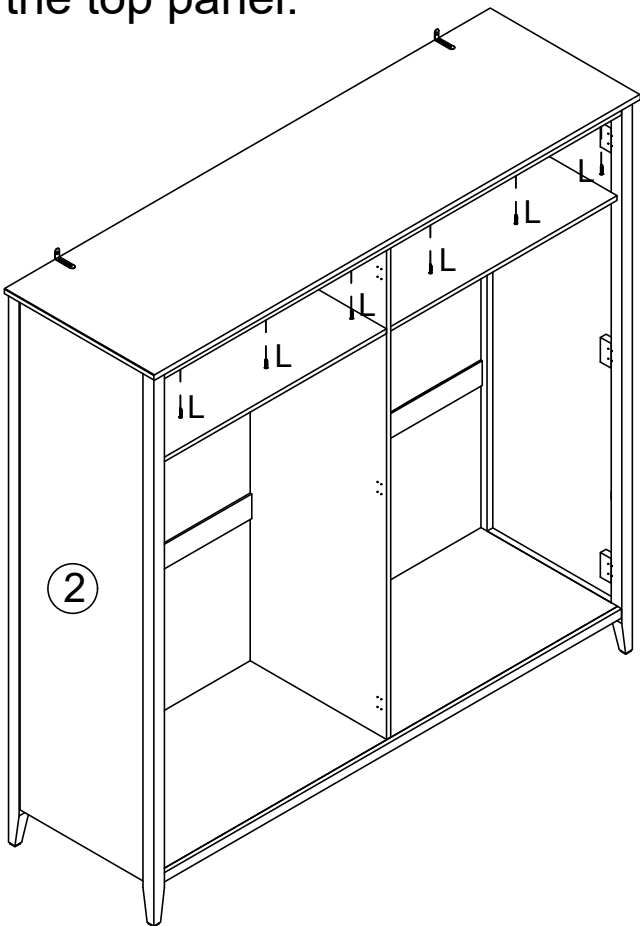


L	
Ø4*35mm Screw	
6pcs	

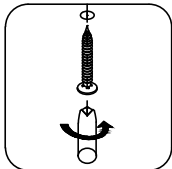 


19.Attach the clothes rail to the frame.

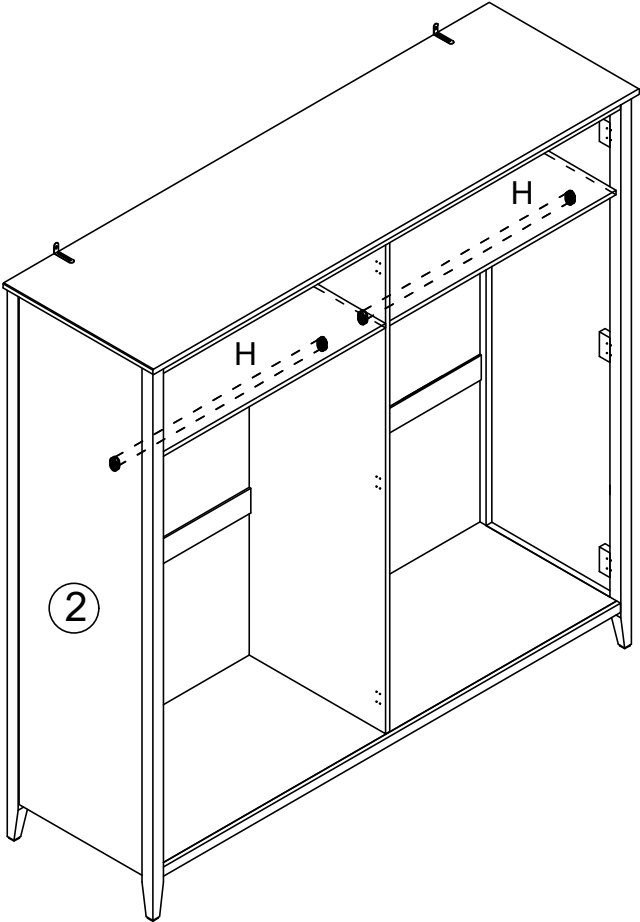 


H	
Clothes rail	
2pcs	

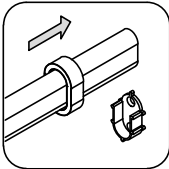 


20.Attach parts to the back panel.

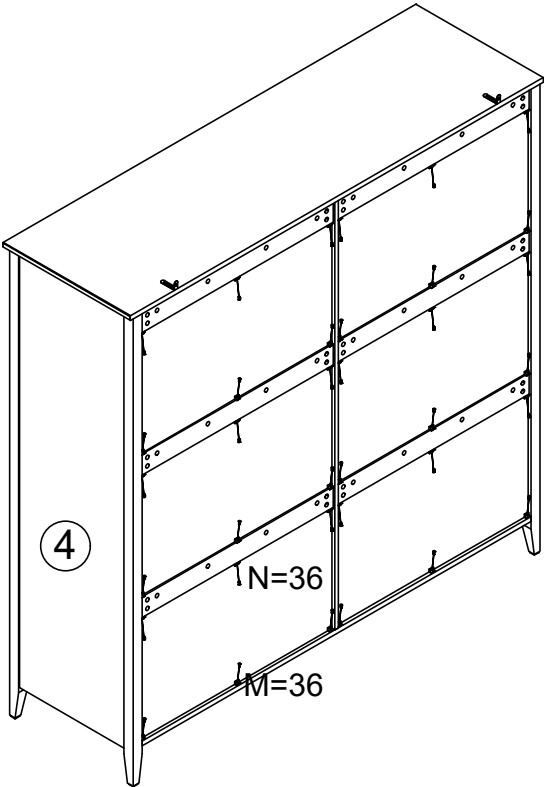 

M	N
	
Back panel clip	Ø3*16mm Screw
36pcs	36pcs


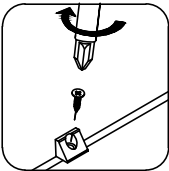 


21.Attach parts to door panels.

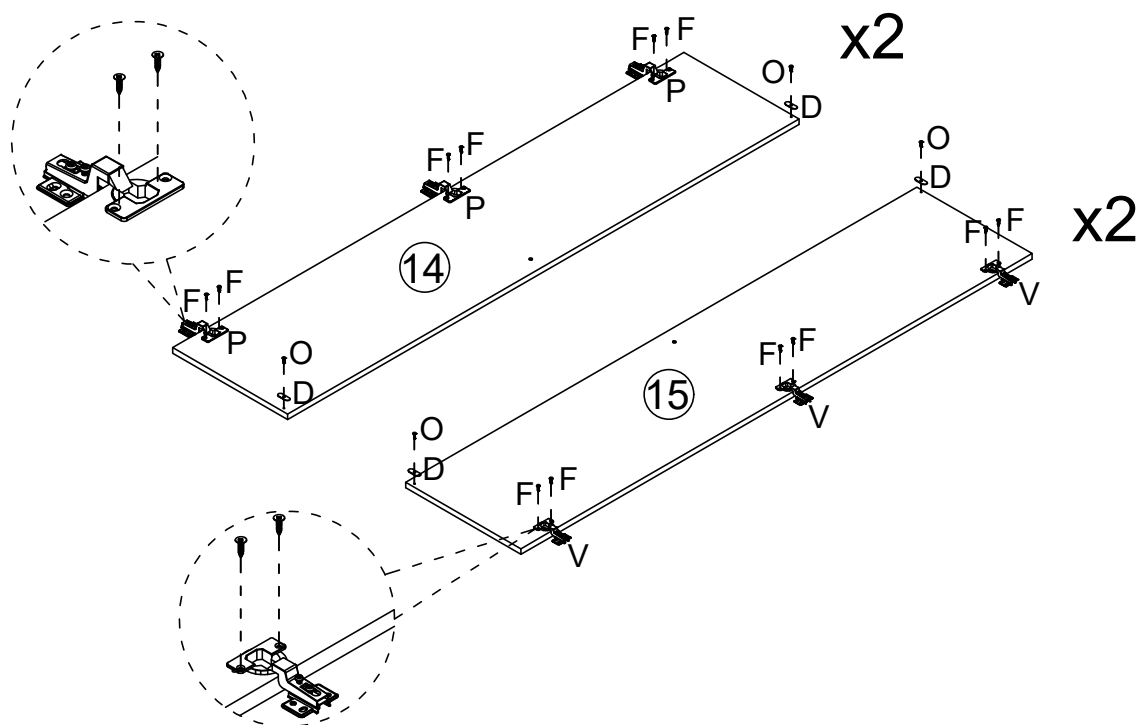 


P	V	F	O	D
Hinge	Hinge	Ø4*14mm Screw	Ø3*12mm Screw	magnetic pad
6pcs	6pcs	24pcs	8pcs	8pcs

 
 
22.Attach the door panel to the frame.

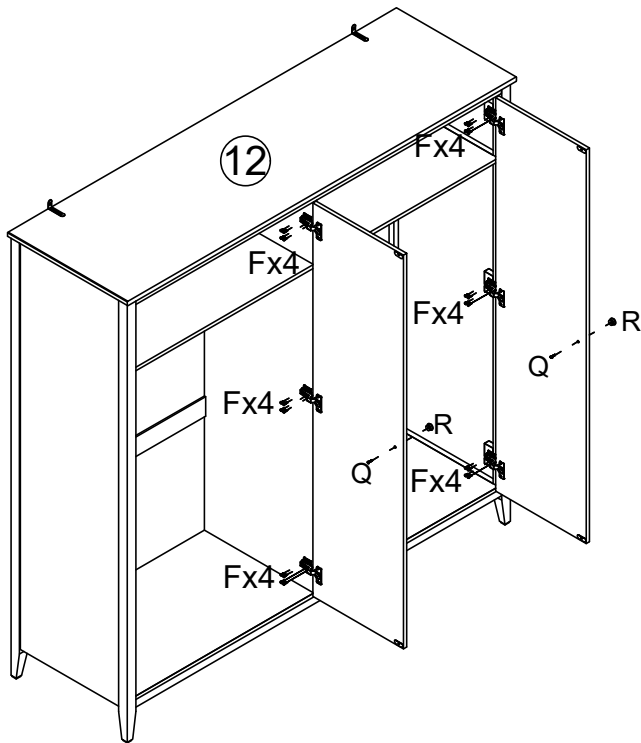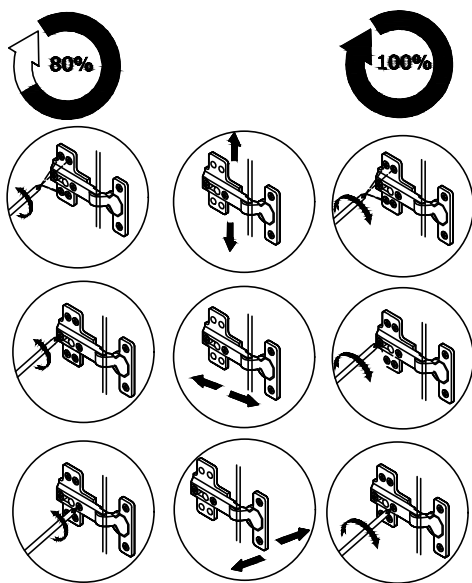


Q	R	F
M4*18mm Bolt	Handle	Ø4*14mm Screw
2pcs	2pcs	24pcs

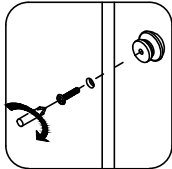 


23. Attach the door panel to the frame.

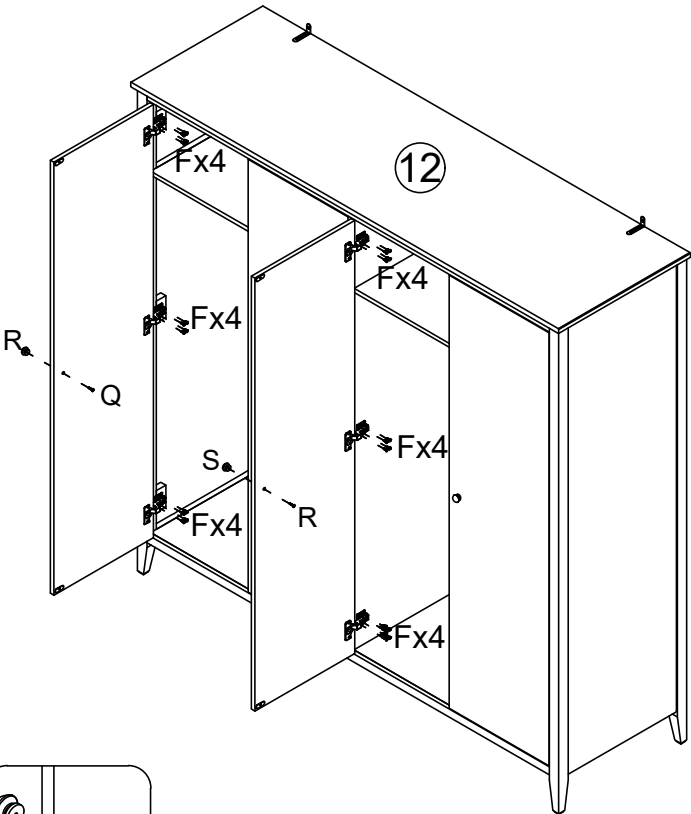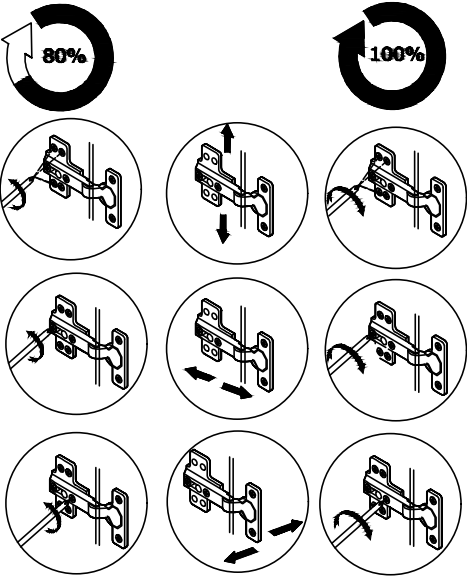  


Q	R	F
		
M4*18mm Bolt	Handle	Ø4*14mm Screw
2pcs	2pcs	24pcs

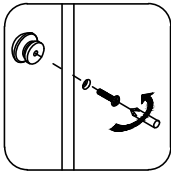 

 24. Fix the steel L bracket to the wall.

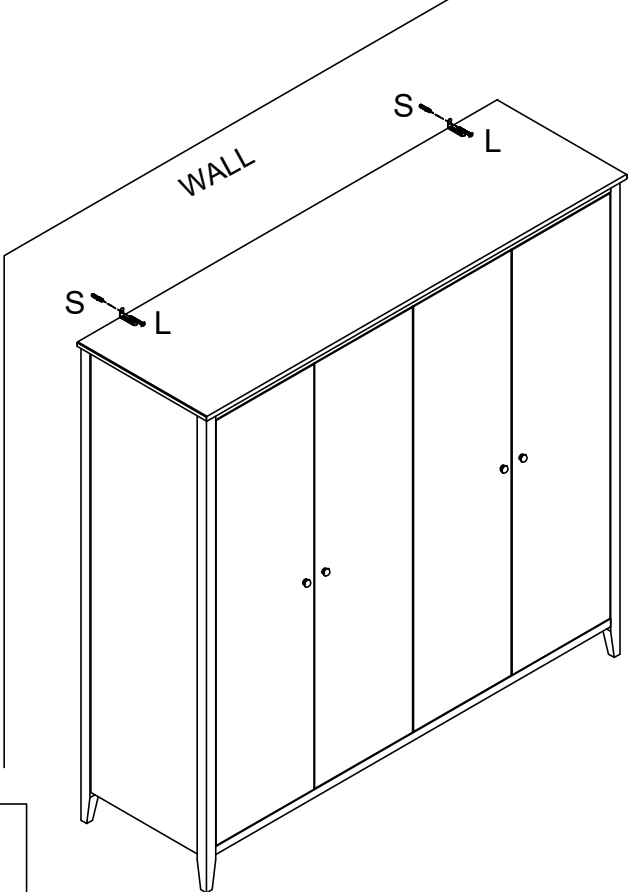

Pre-drilled hole at wall

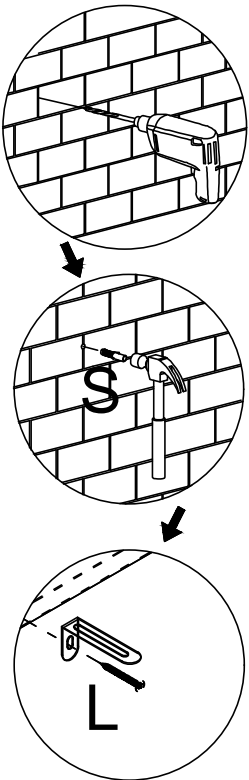 

L	S
	
Ø4*35mm Screw	Wall Plug
2pcs	2pcs