

 
# DUSK.COM

LIVING | BEDROOM | DINING


Range Name: Alice

Box Dimensions: L109.5 x W55 x H27.5(cm)

## Alice Dining Chair

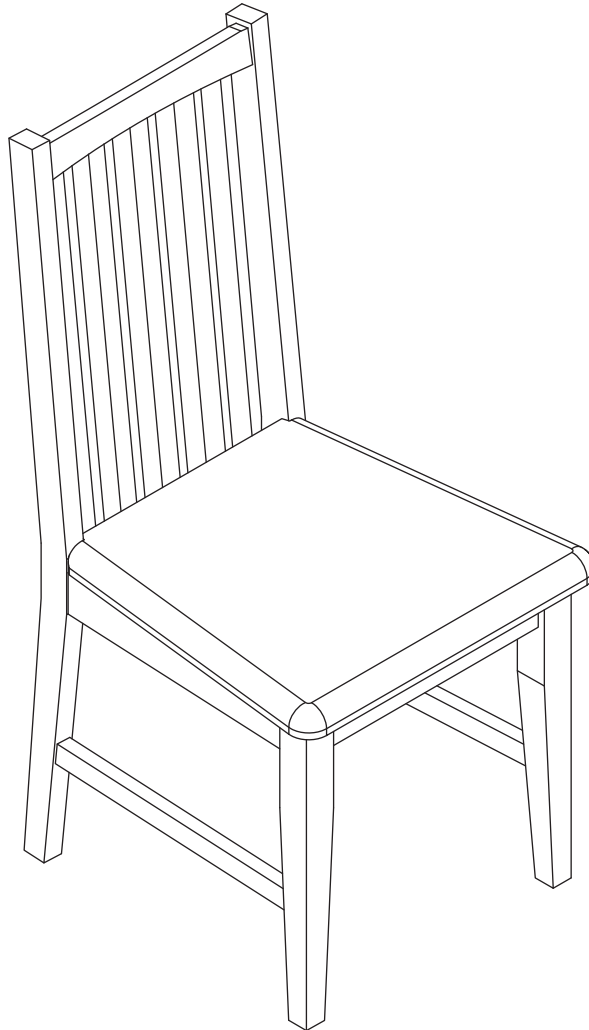

Up to 30 minutes  
assembly time

 

One person  
assembly

This product is intended for domestic use only, not for commercial purpose.

# IMPORTANT

## ASSEMBLY TIP

Before you begin, we advise laying everything out on a clean and soft level surface to avoid damaging the unit or your floor. It's best to identify all of the parts and fittings to build your dining chair, and to familiarise yourself with all of the parts and fittings before building.

## TOP TIP

We recommend that you assemble the chair in the room you'd like it to be used. This will help prevent the chance of damaging the item when moving it around.

## SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

Do not stand on your product. Pregnant women should take additional care when using this product. Do not leave the children unattended. Children should always be under direct adult supervision whilst using this product.

Always use on firm level ground, ensuring all legs remain in contact with the ground.

## HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

## RECYCLING

 
Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

# CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the dining chair when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the change of the humidity and temperature.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

## Parts List



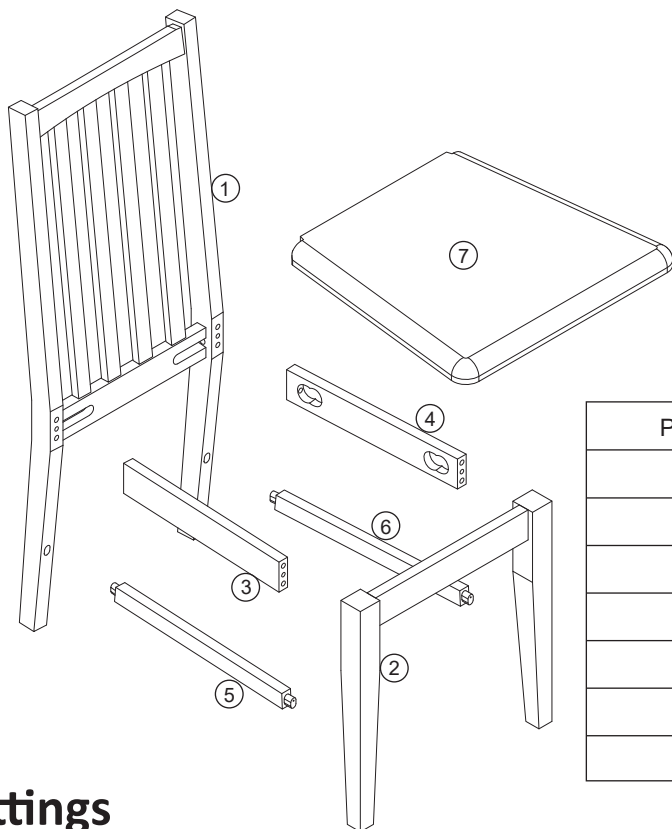 


 
 

 
 
Before you start to build your Alice dining chair, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.




Part No.	Part Name	Quantity
1	Chair Back	1
2	Front Leg Frame	1
3	Top Left Support Rail	1
4	Top Right Support Rail	1
5	Bottom Left Support Rail	1
6	Bottom right Support Rail	1
7	Upholstered Seat Pad	1

## Fittings

 Please check you have all the fittings listed below with your product.

 <b>A</b> M6x80mm Bolt 4pcs+1extra	 <b>B</b> Ø10x20mm Nut 4pcs+1extra	 <b>C</b> Half moon washer 4pcs+1extra	 <b>D</b> Ø10x30mm Wooden Dowel 8pcs+1extra
 <b>E</b> Angle Iron 4pcs+1extra	 <b>F</b> Ø10x16mm Nut 4pcs+1extra	 <b>G</b> Ø3.5x40mm Screw 4pcs+1extra	 <b>H</b> Ø3.5x14mm Screw 8pcs+1extra
 <b>I</b> Spanner 1pc	 <b>J</b> Ø25mm Felt Pad 4pcs+1extra		

## Bolt Length Ruler:



## Tool required (not provided)



⊖ Slotted Screwdriver

 


⊕ Crosshead Screwdriver

## Step 1: Attaching the nuts and bolts to the chair back and front leg frame.


**A**  4pcs

**B**  4pcs

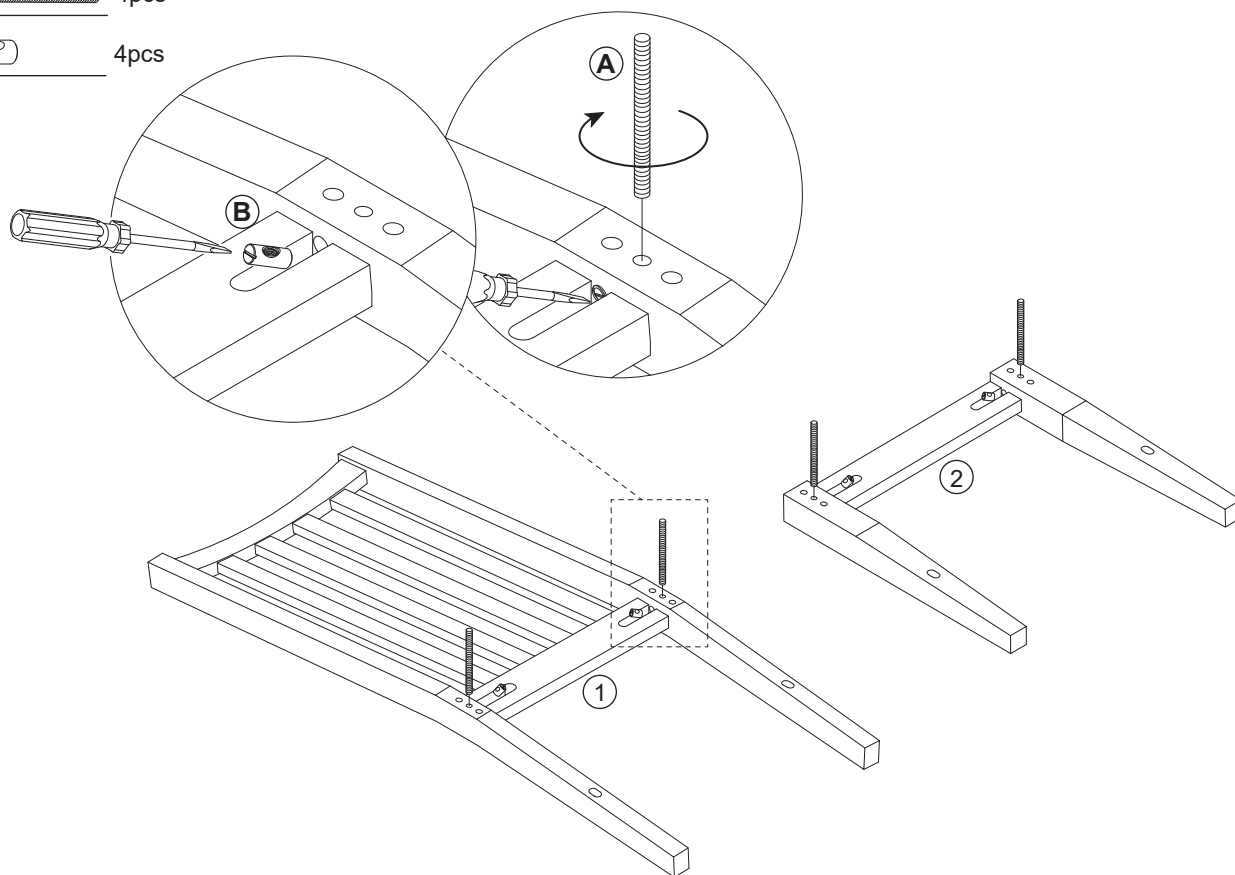


## Step 2: Attaching the four support rails to the chair back.

**C**  2pcs

**D**  4pcs



 
**F**  2pcs


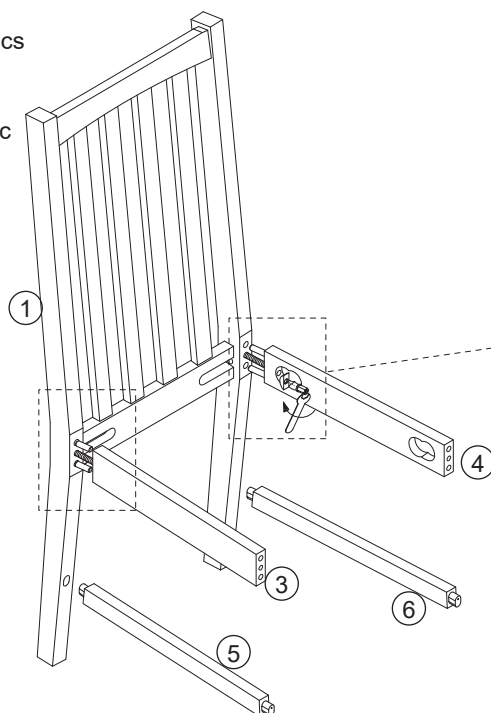
**J**  1pc



**Note:** Please do not fully tighten any bolts or screws until the final step.



### Step 3: Attaching the front leg frame to the four support rails.

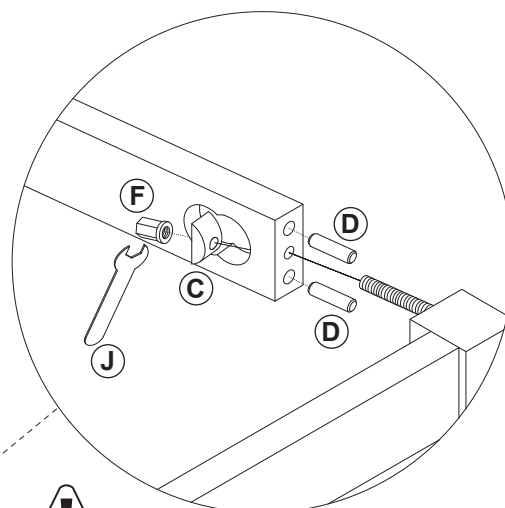 
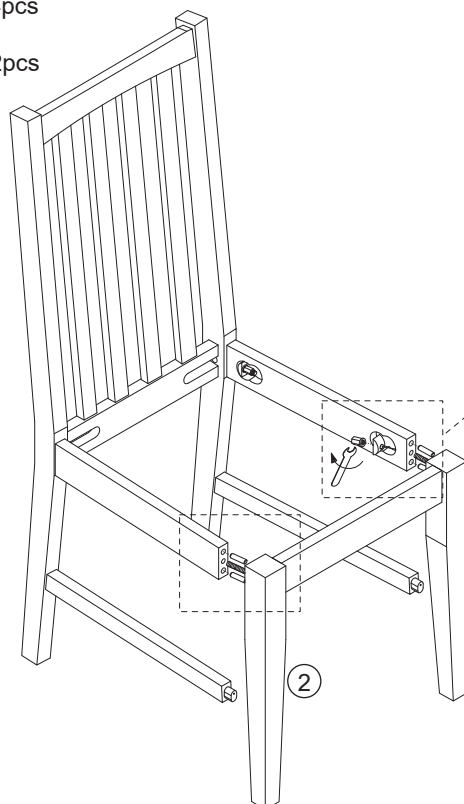 
- (C)**  2pcs
- (D)**  4pcs
- (F)**  2pcs



**Note:** Please do not fully tighten any bolts or screws until the final step.

### Step 4: Attaching the upholstered seat pad to the chair frame.

  - (E)**  4pcs
- (H)**  8pcs

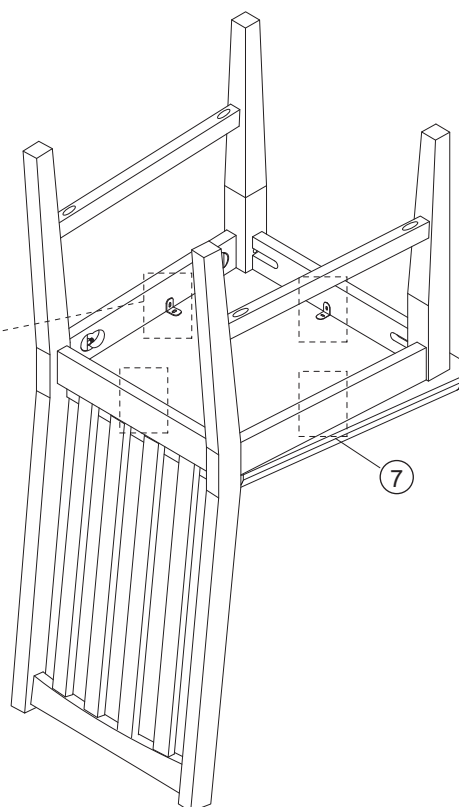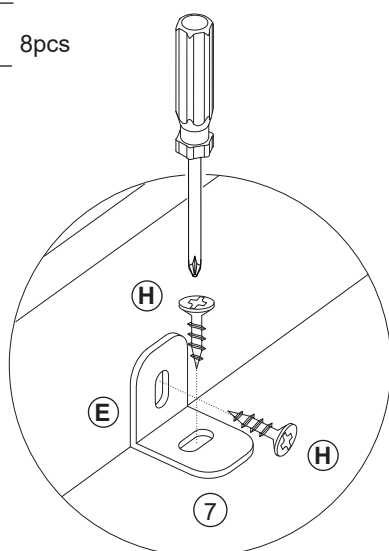

**Step 5:** Strengthen the connection of the support rail and the chair's legs. Applying felt pads. At this step, please fully tighten all bolts and screws.

Ⓔ 4pcs

Ⓚ 4pcs

