

DUSK.COM

 
LIVING | BEDROOM | DINING

Range Name: Avalon

Box Dimensions : W144.5xD53xH17.5 cm

Product Dimensions: W130xD39xH56 cm

TV Unit for TVs up to 50"

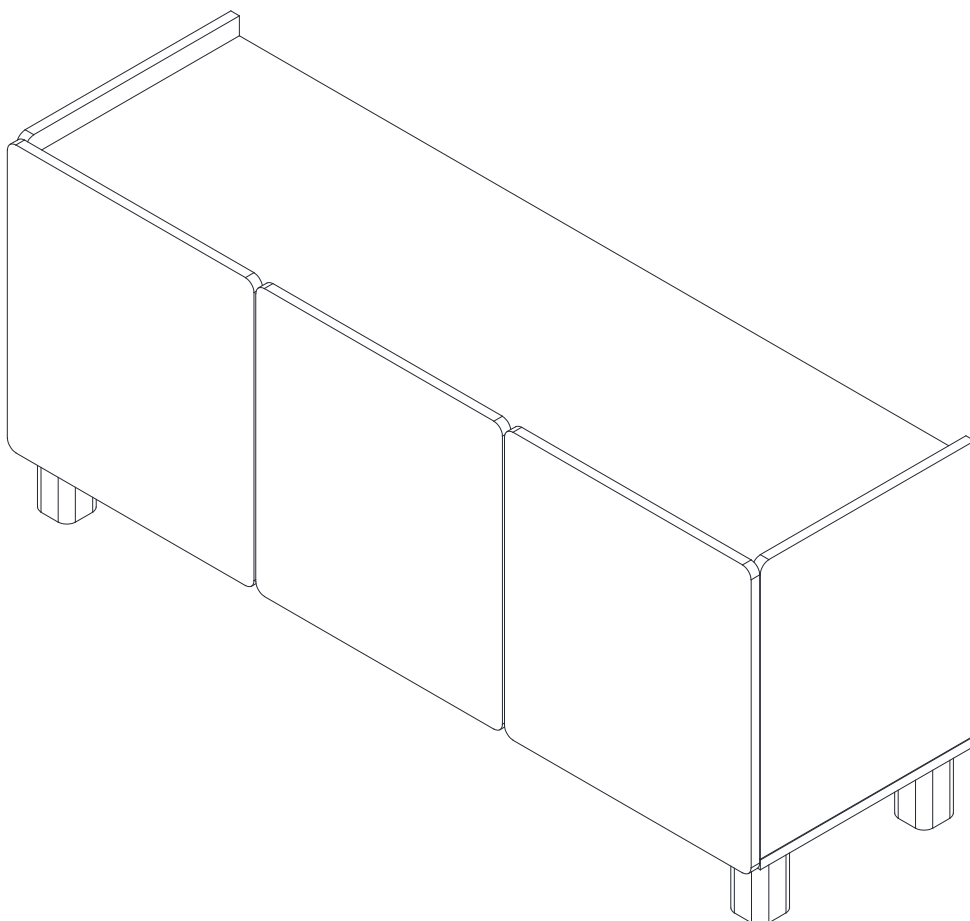


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



70 minutes approx
assembly time



 Two adults
assembly required

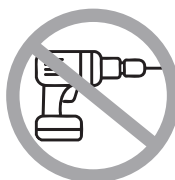

Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

P-1-13
V-1.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Avalon TV Unit for TVs up to 50" frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Avalon TV Unit for TVs up to 50" in the room you'd like it to be located.

This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

 
RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Avalon TV Unit for TVs up to 50" when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

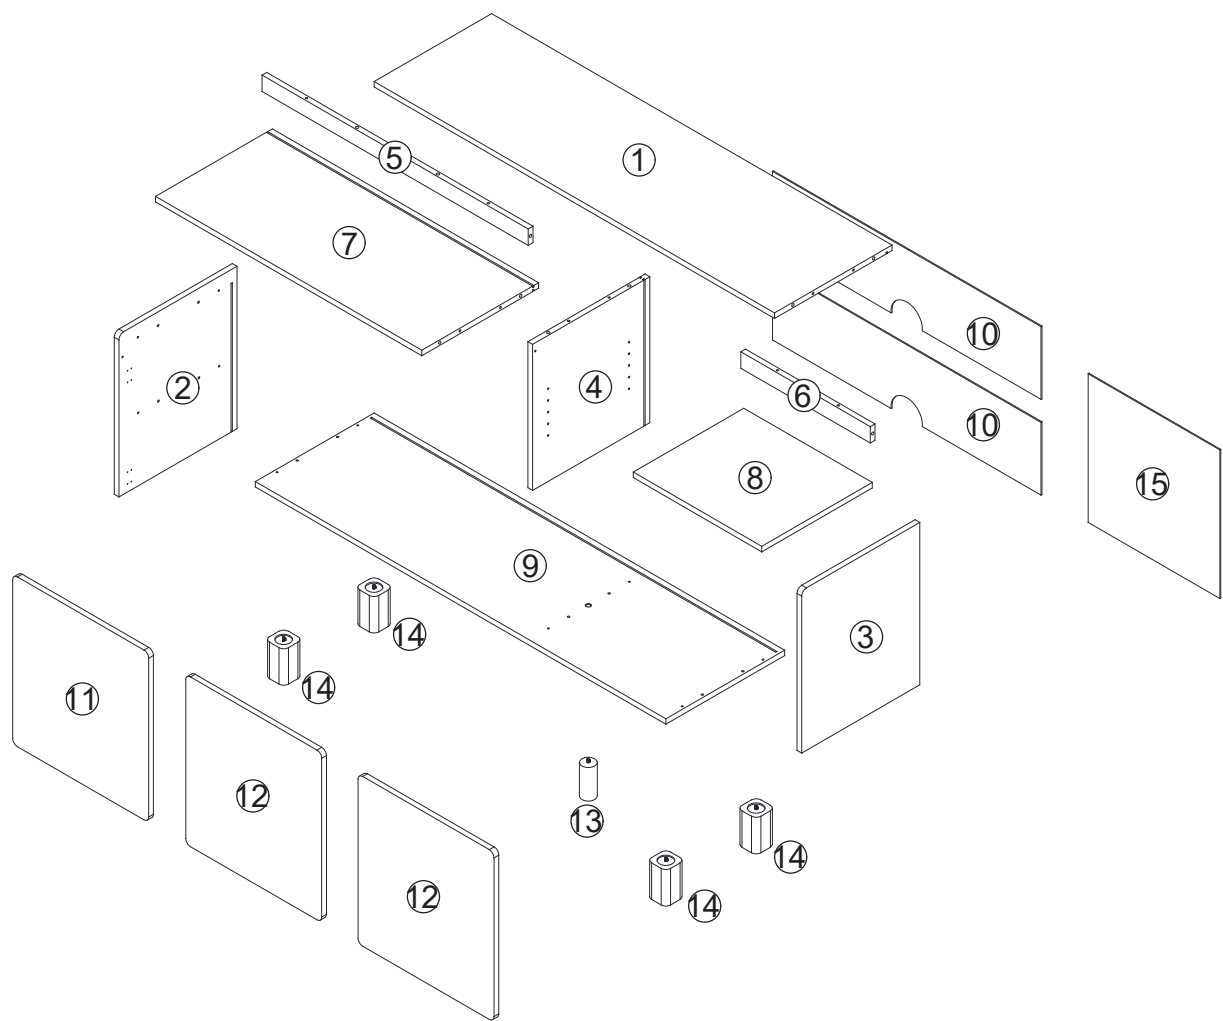

Parts list





Before you begin building you Avalon TV Unit for TVs up to 50" , please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Qty	Box No
1	Top Panel	1 pc	1
2	Left side panel	1 pc	1
3	Right side panel	1 pc	1
4	Partition board	1 pc	1
5	Slat	1 pc	1
6	Slat	1 pc	1
7	shelf board	1 pc	1
8	Plywood	1 pc	1


Part Number	Part Description	Qty	Box No
9	Bottom panel	1 pc	1
10	Back	2 pcs	1
11	Door panel	1 pc	1
12	Door panel	2 pcs	1
13	foot post	4 pcs	1
14	Adjust the foot post	1 pc	1
15	Back	1 pc	1

Fittings list

    Please check you have all the fittings listed below with your product in box 1

 A M6x35mm Cam Bolt x17pcs(+1 extra)	 B Ø15x10mm Cam x 17pcs(+1 extra)	 C Ø5.8x30mm Wood Dowel x20pcs(+2 extra)
 D Shelf Support x4 pcs	 E M4x40mm Screw x 6 pcs	 F M4x14mm Screw x48pcs(+2 extra)
 G Hinge x4 pcs	 H Hinge x2 pcs	 I Foot pad x4pcs
 J Plastic Buckle x12pcs	 K M3x14mm Screw x12 pcs	 L Three-hole nut x4pcs
 M Adjustable foot x1pc	 N Hole Sticker x6pcs	

 Bolt Length Ruler:





Tool required



⊕ Crosshead Screwdriver (not provided)



Step 1:

  A 5pcs

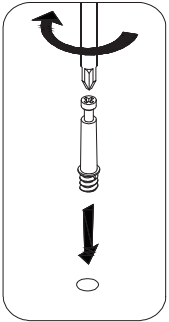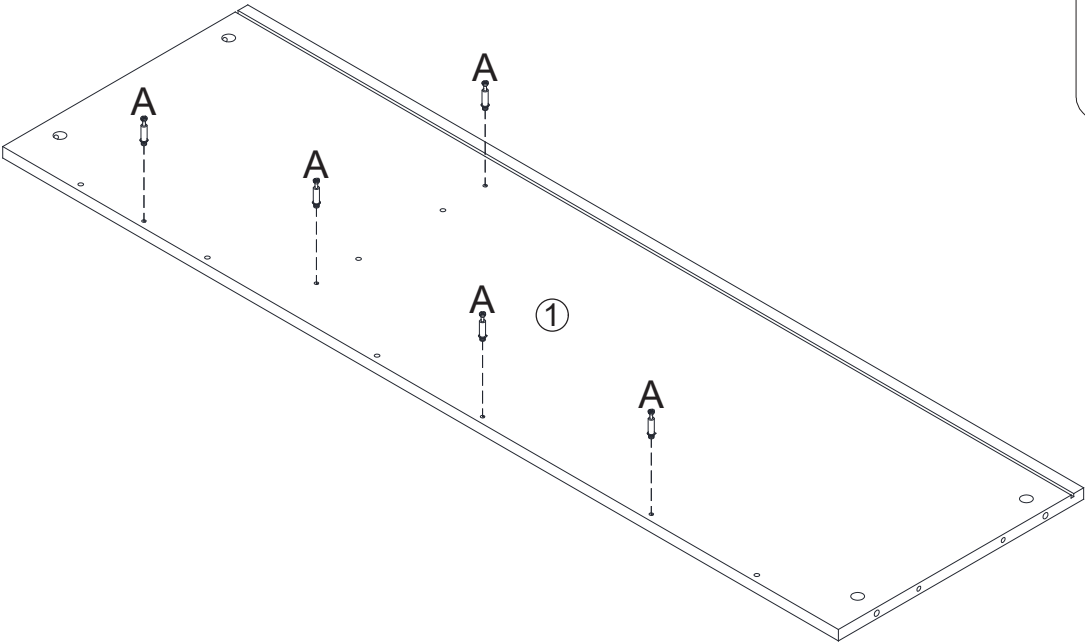



Step 2:

  A 12pcs

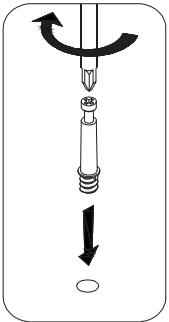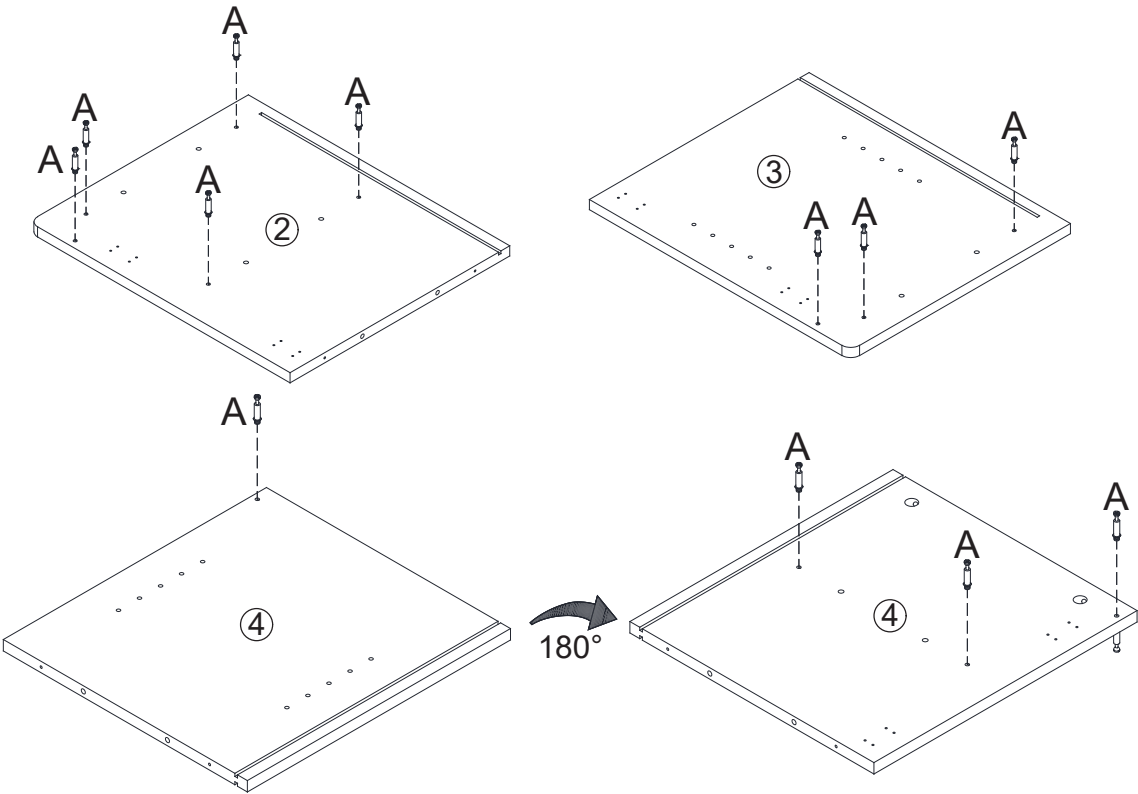

Step 3:

  (B)  2pcs


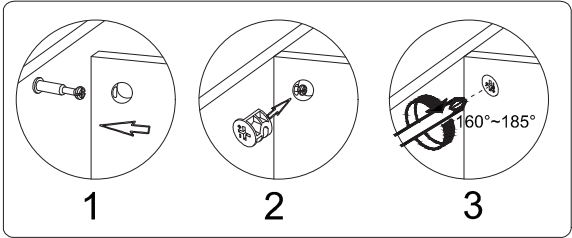
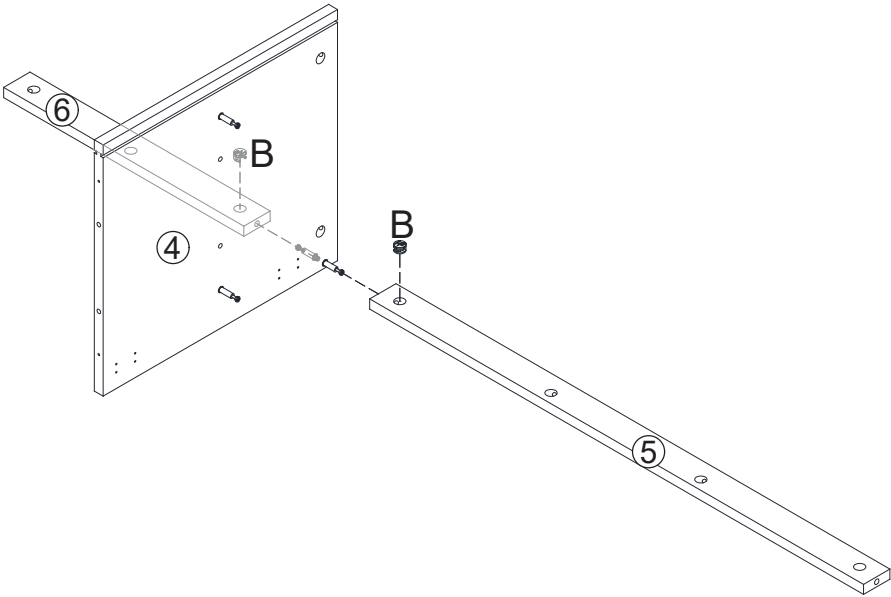


Step 4:

(B)  5pcs



(C)  6pcs

   (N)  2pcs

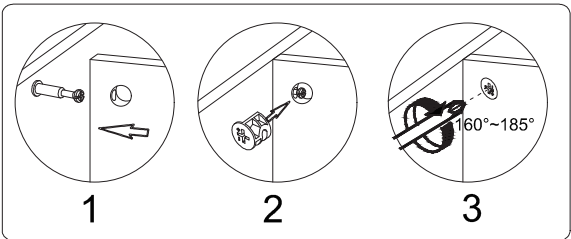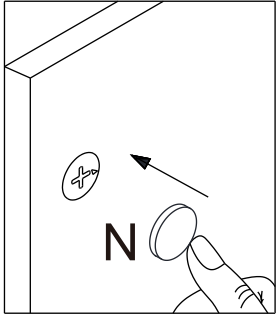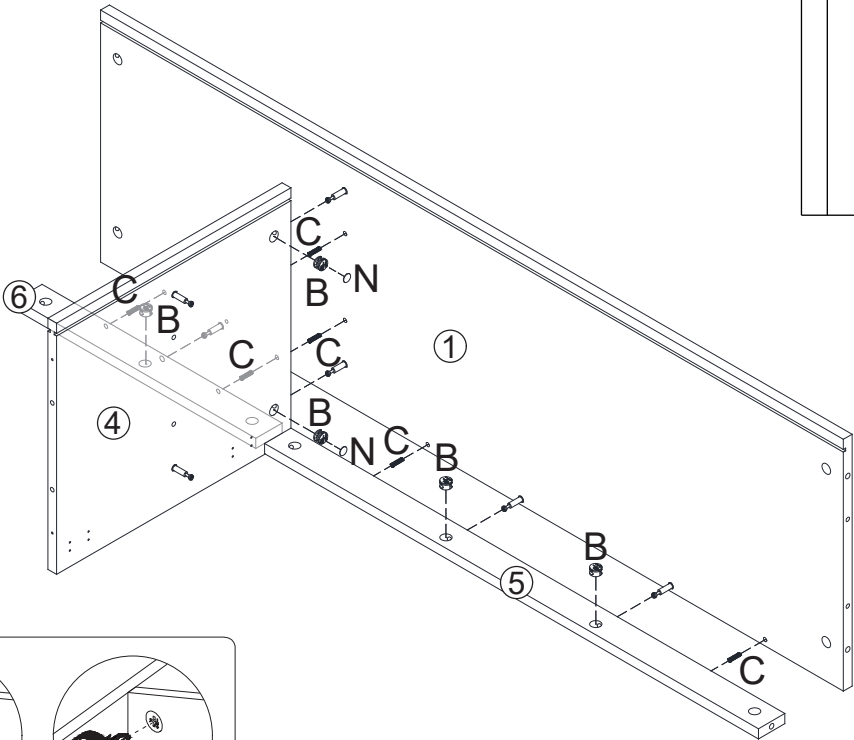


Step 5:

  - Ⓑ  2pcs
- Ⓒ  2pcs


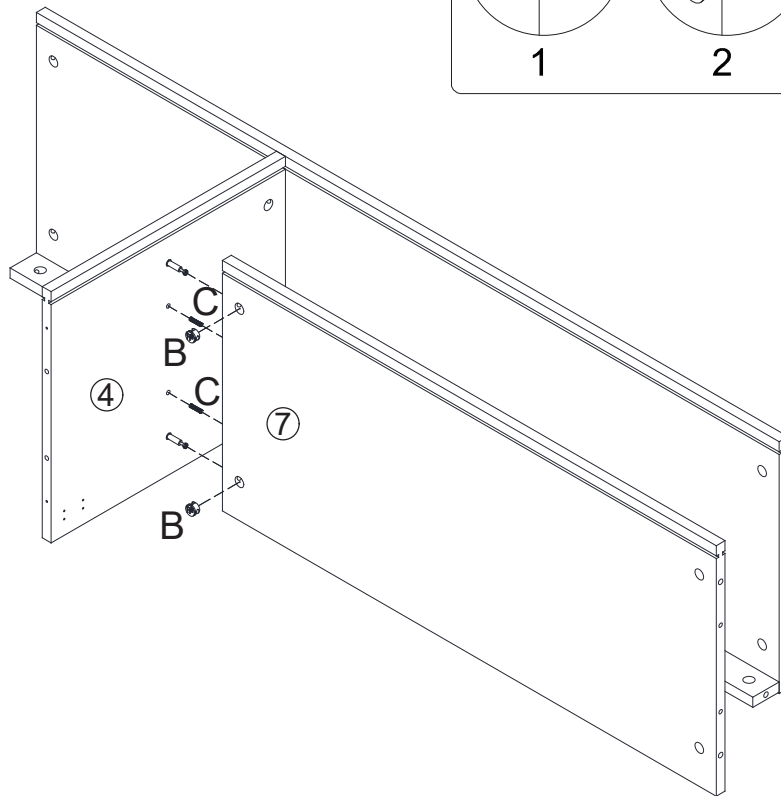
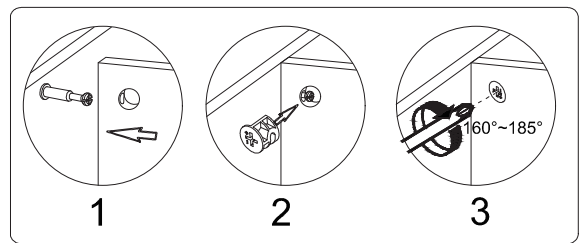


 Step 6:

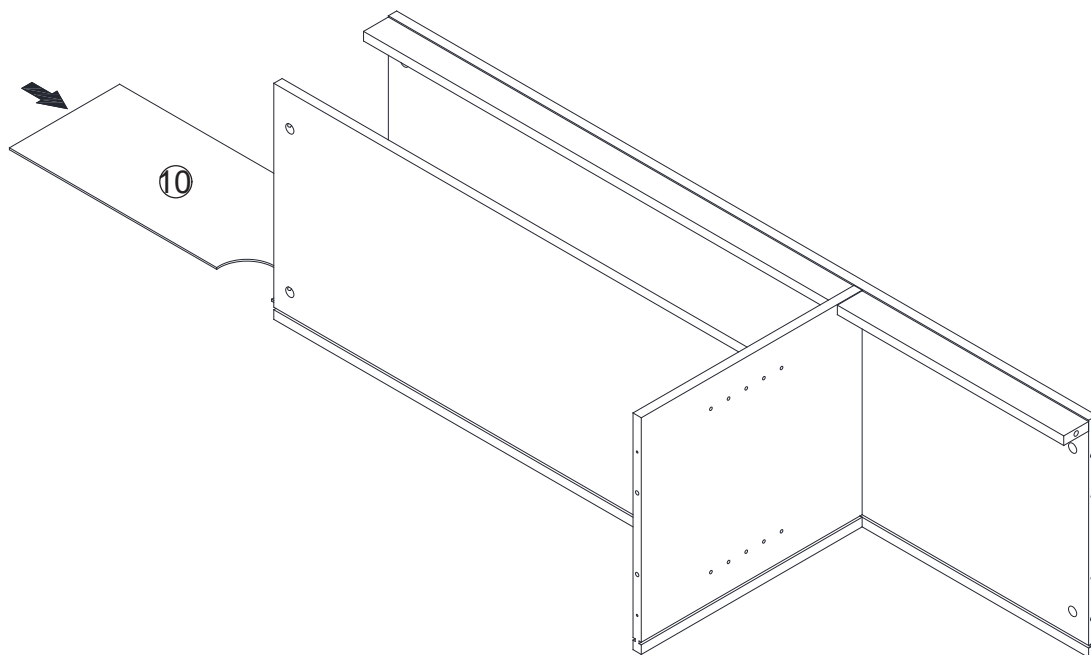




Step 7:

   - (B)  5pcs
- (C)  4pcs
- (N)  2pcs

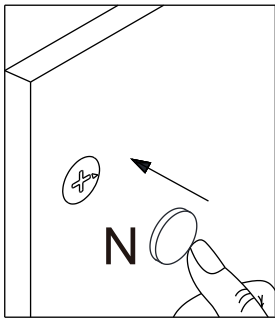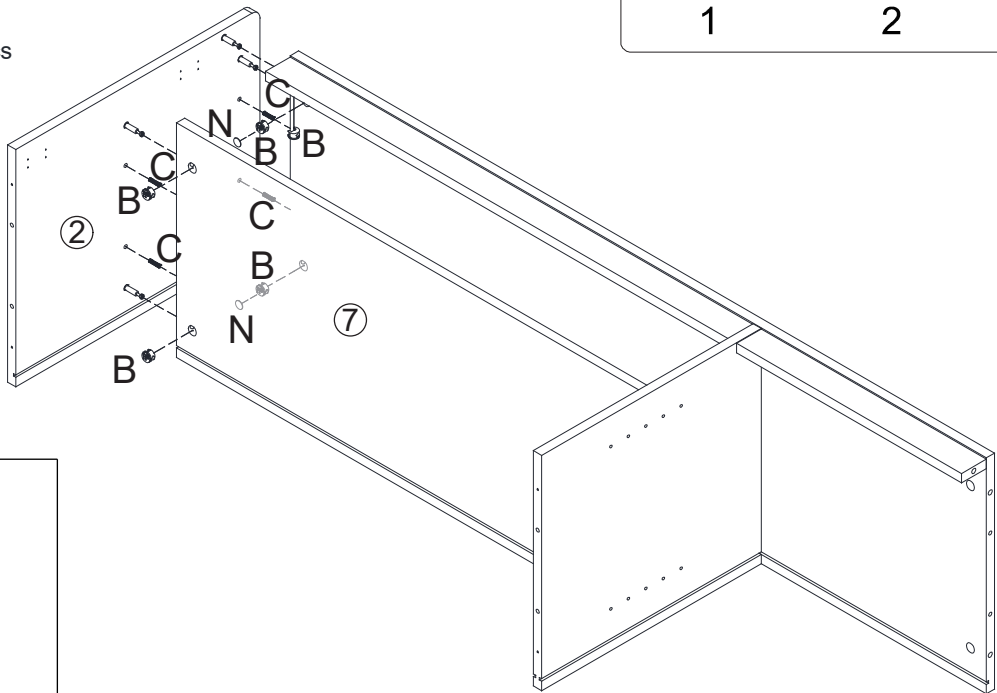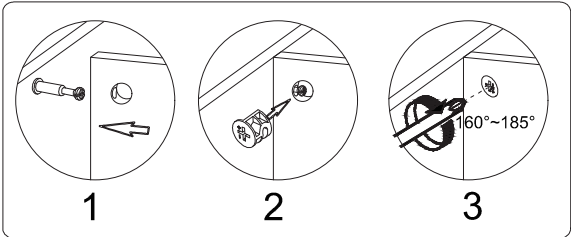


Step 8:

   - (B)  3pcs
- (C)  2pcs
- (N)  2pcs

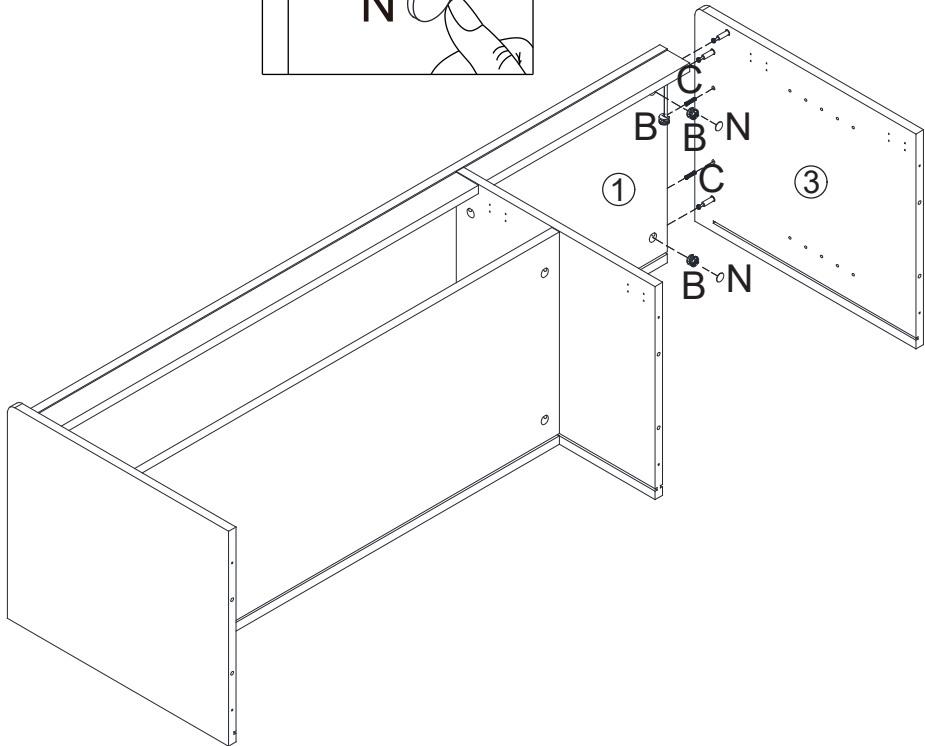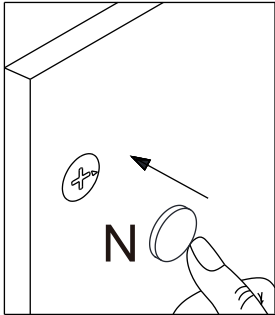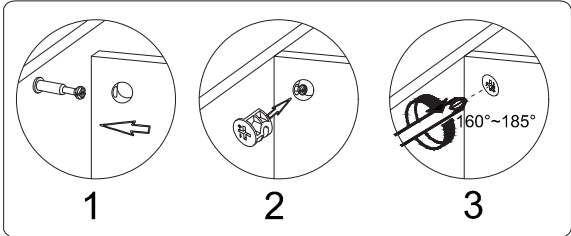

 Step 9:

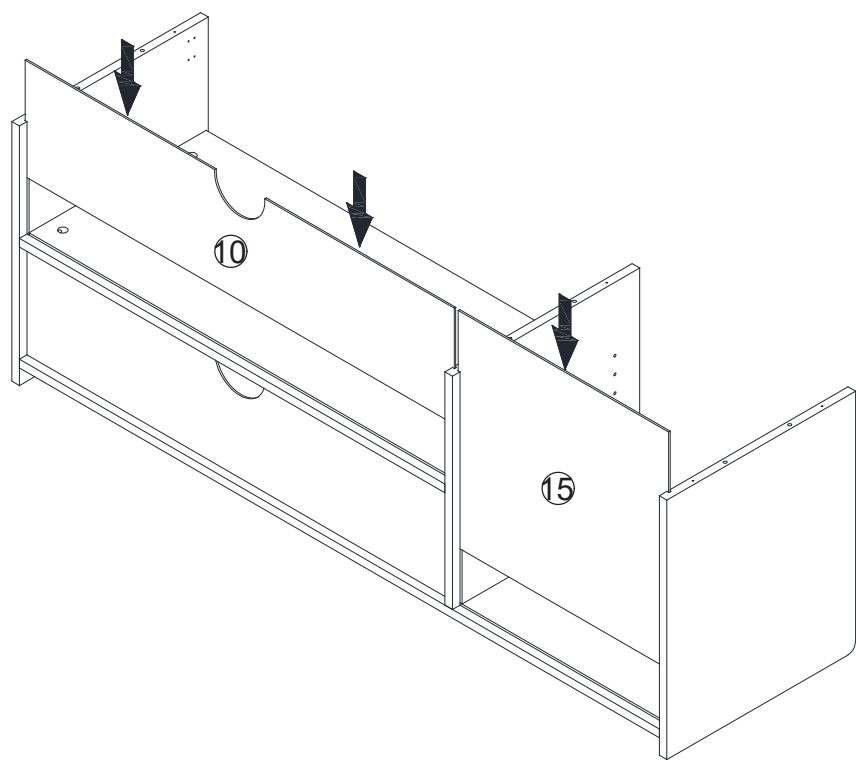


Step 10:

- C

6pcs
- E

 
6pcs

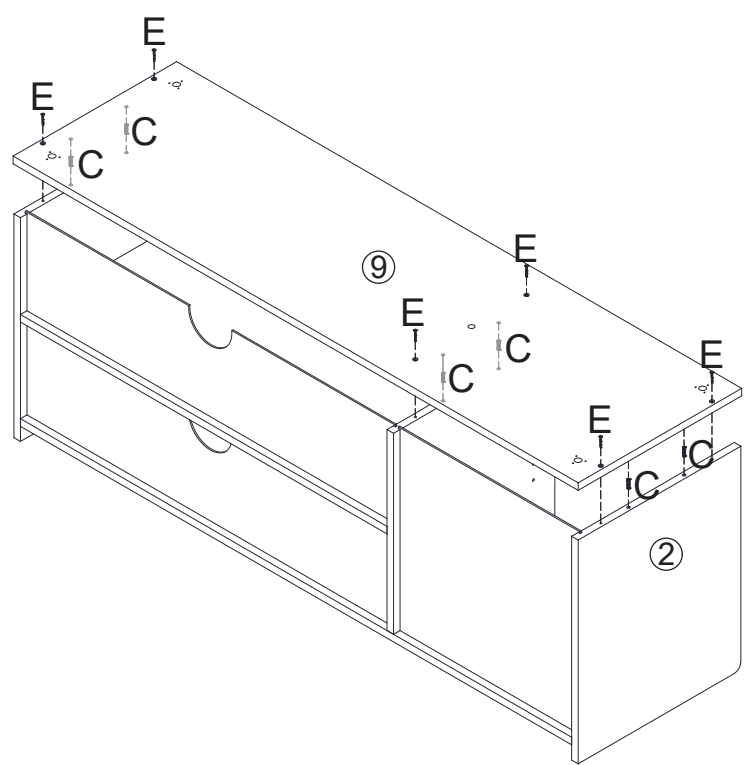

Step 11:

(F)  12pcs



 
(L)  4pcs

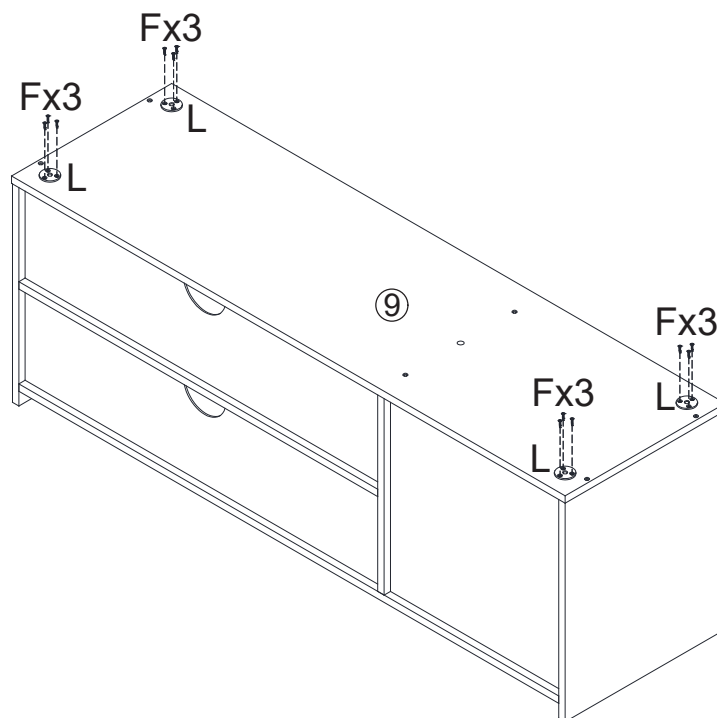

Step 12:

(M)  1pc

   
(I)  4pcs

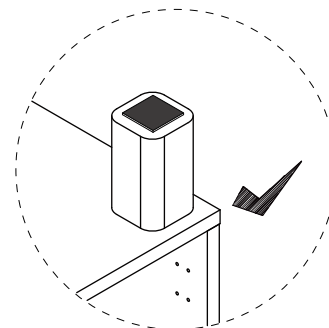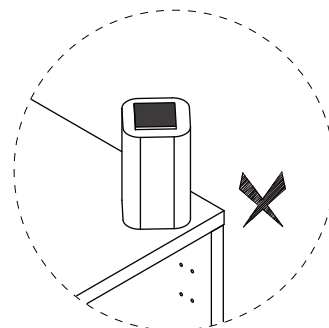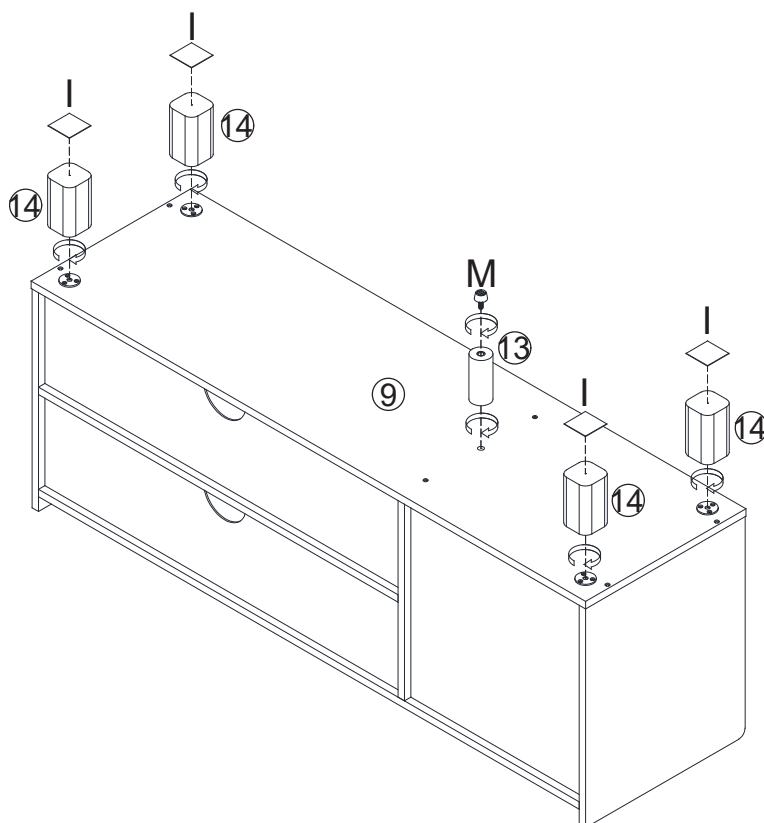

Step 13:


ⓐ 12pcs

 ⓑ 12pcs

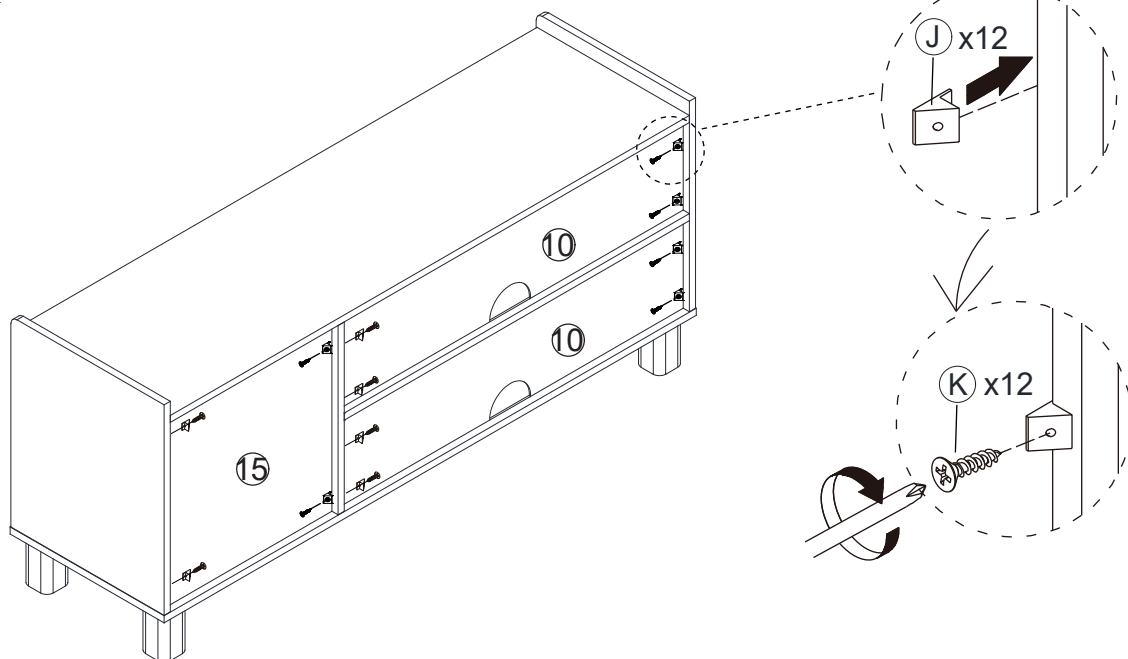


Step 14:

 Ⓓ 4pcs

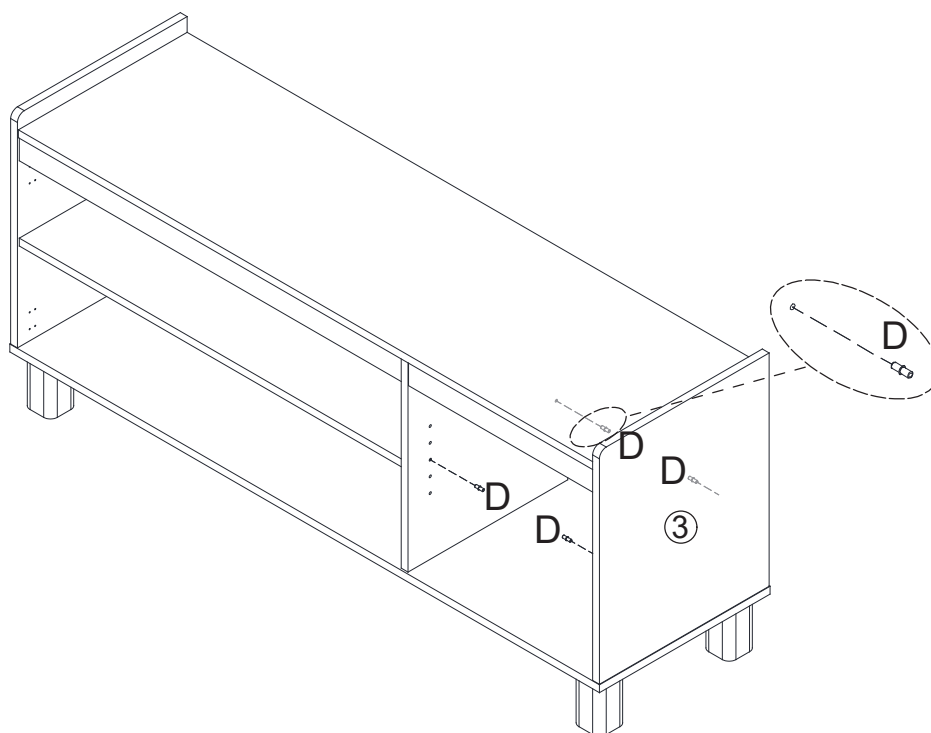


 Step 15:

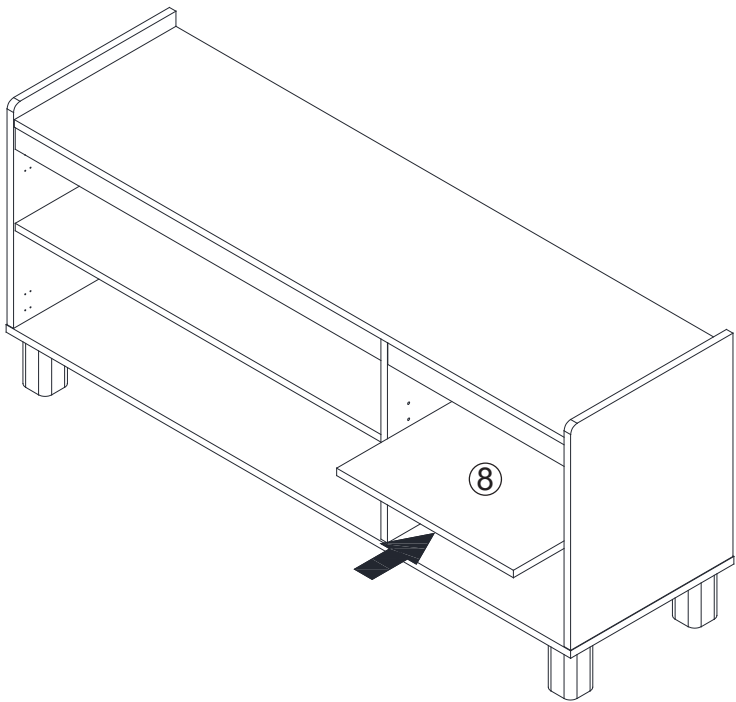

Step 16:

 - (F)  12pcs
- (G)  4pcs
- (H)  2pcs

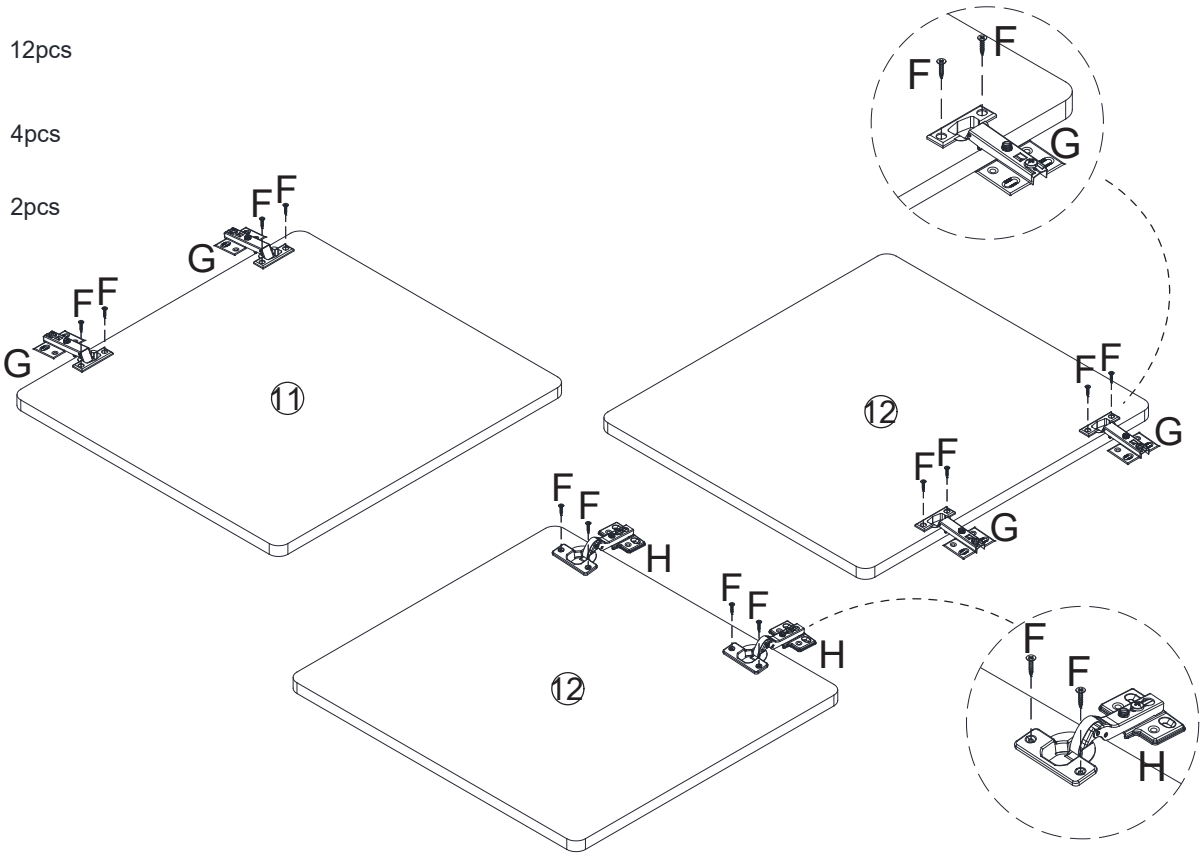

Step 17:

F  24pcs

