

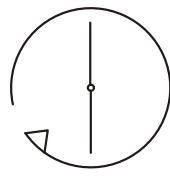


Heidi TV Unit

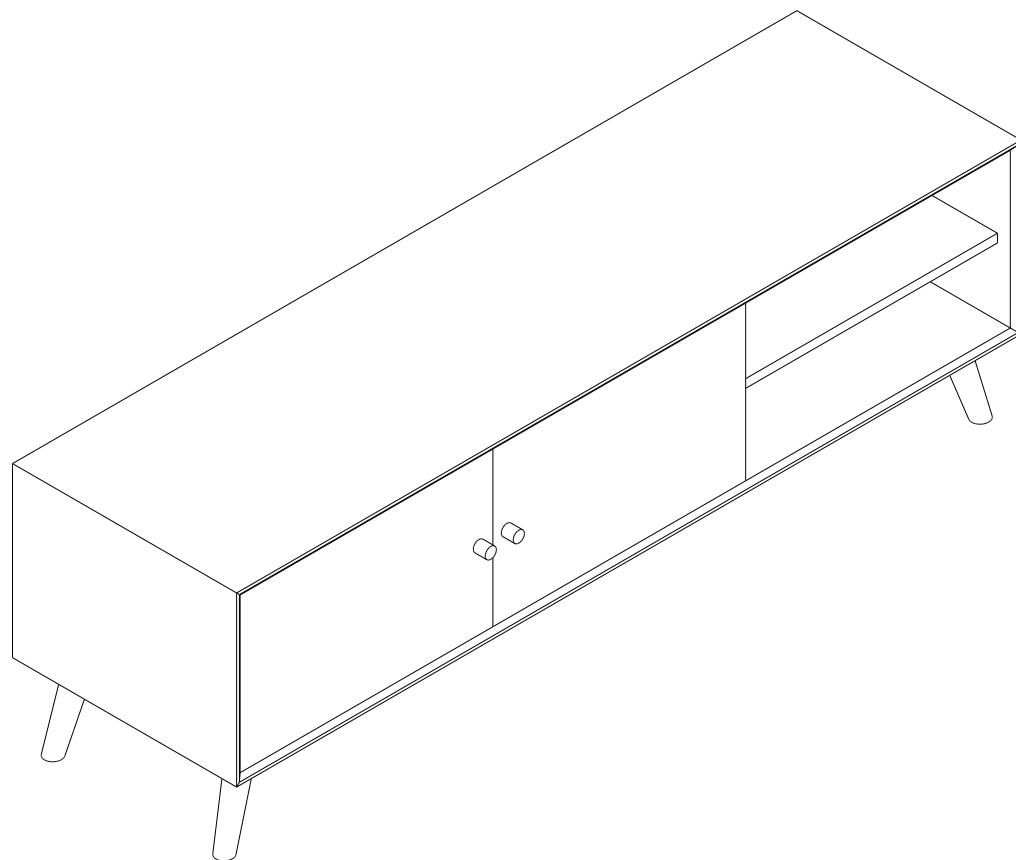

Up to 60 minutes
assembly time

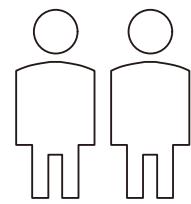

Two person
assembly



Electric screwdriver
prohibited

IMPORTANT

ASSEMBLY TIP

Before you begin, we recommend laying everything out on a clean and soft level surface to avoid damaging the unit or floor. It is recommended to identify all of the parts and fittings to build your TV Unit and to familiarise yourself with all of the parts and fittings before assembly.

TOP TIP

We recommend that you assemble the TV Unit in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest shelves.
5. Children should always be under supervision whilst using this product. Never allow children to climb on the TV Unit.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.


CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the TV Unit when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list



Before you start to build your Heidi TV Unit, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts checklist.

Part Number	Part Description	Quantity	Part Number	Part Description	Quantity
1	Top Panel	1 pc	7	Middle Shelf	1 pc
2	Bottom Panel	1 pc	8	Door	2 pcs
3	Left Side Panel	1 pc	9	Right Back Panel	1 pc
4	Right Side Panel	1 pc	10	Left Back Panel	1 pc
5	Middle Panel	1 pc	11	Leg	4 pcs
6	Middle Panel	1 pc	12	Middle Support Leg	1 pc

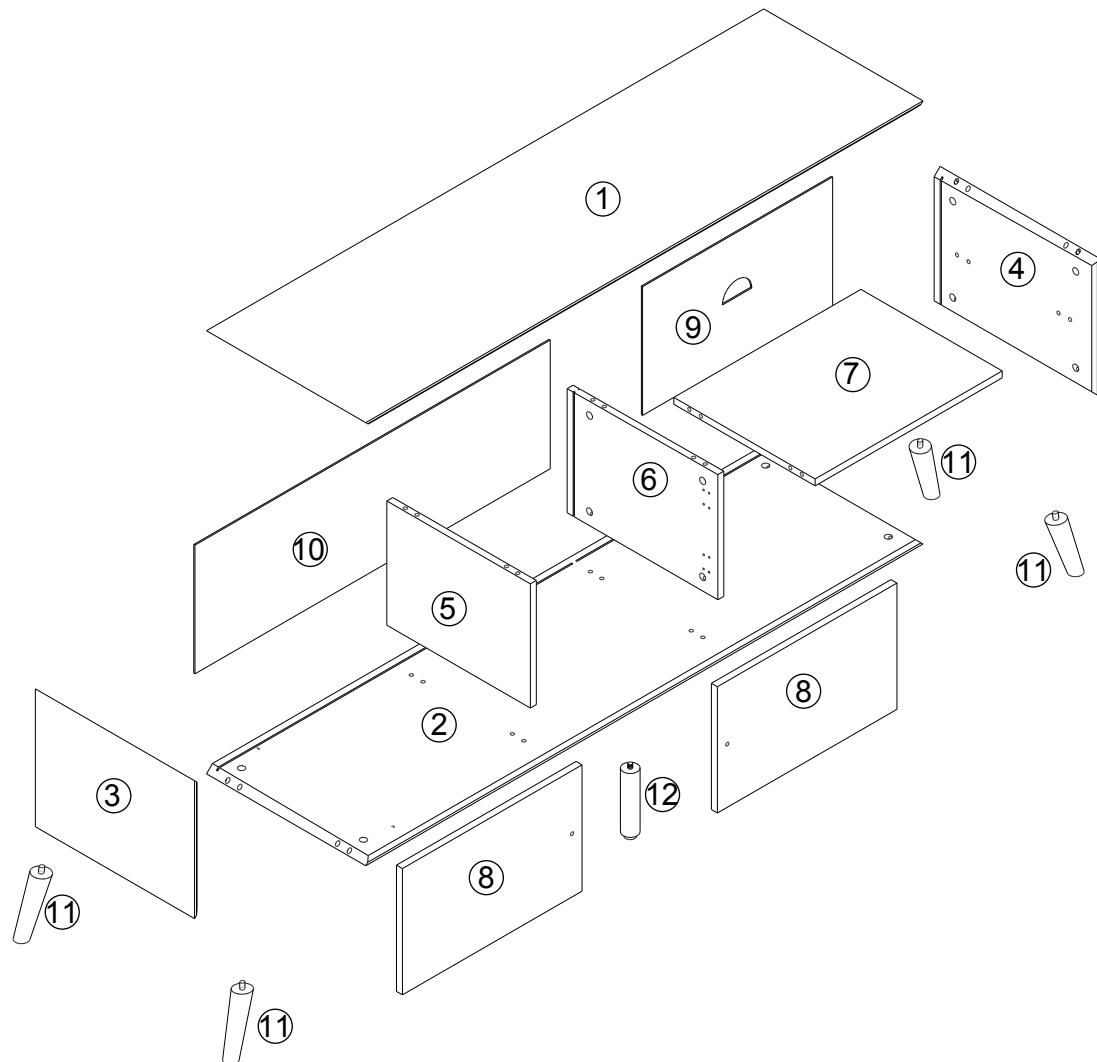


Fittings

  Please check you have all the fittings listed below with your product.


A		B		C		D		E		F	
	M6x76mm CAM Lock Screw		M6x40mm CAM Lock Screw		Φ15x11.5mm CAM Lock		Cover		Φ8x30mm Wooden Dowel		Φ18mm Felt Pad
	8pcs+1pc extra		12pcs+1pc extra		28pcs+3pcs extra		28pcs+3pcs extra		20pcs+2pcs extra		4pcs
G		H		I		J		K		L	
	M3.5x15mm Screw		Hinge		Φ20x25mm Metal Handle		M4x20mm Handle Bolt		Metal Plate		Hinge
	52pcs+4pcs extra		2pcs		2pcs		2pcs		4pcs		2pcs
M											
	15x9mm Plastic Buckle										
	8pcs+1pc extra										

Pre-assembled Fittings.


N	
	Adjustable Foot
	1pc

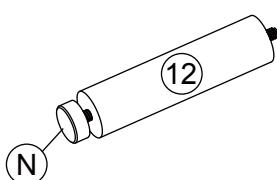


1. Attach parts to the Panels.

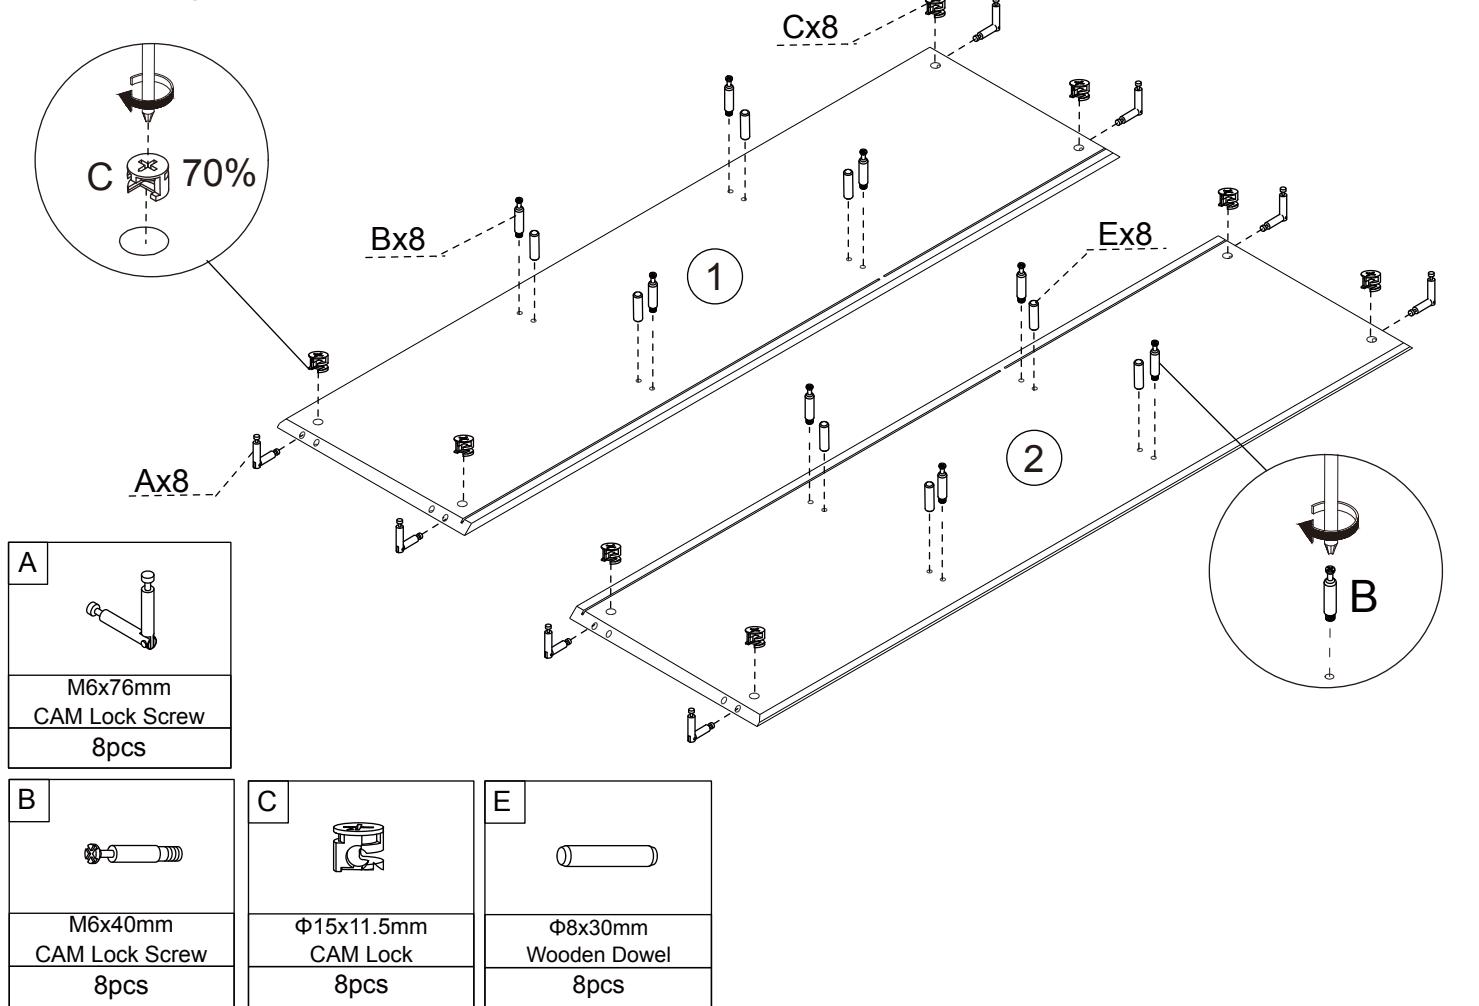

2. Attach parts to the Panels.

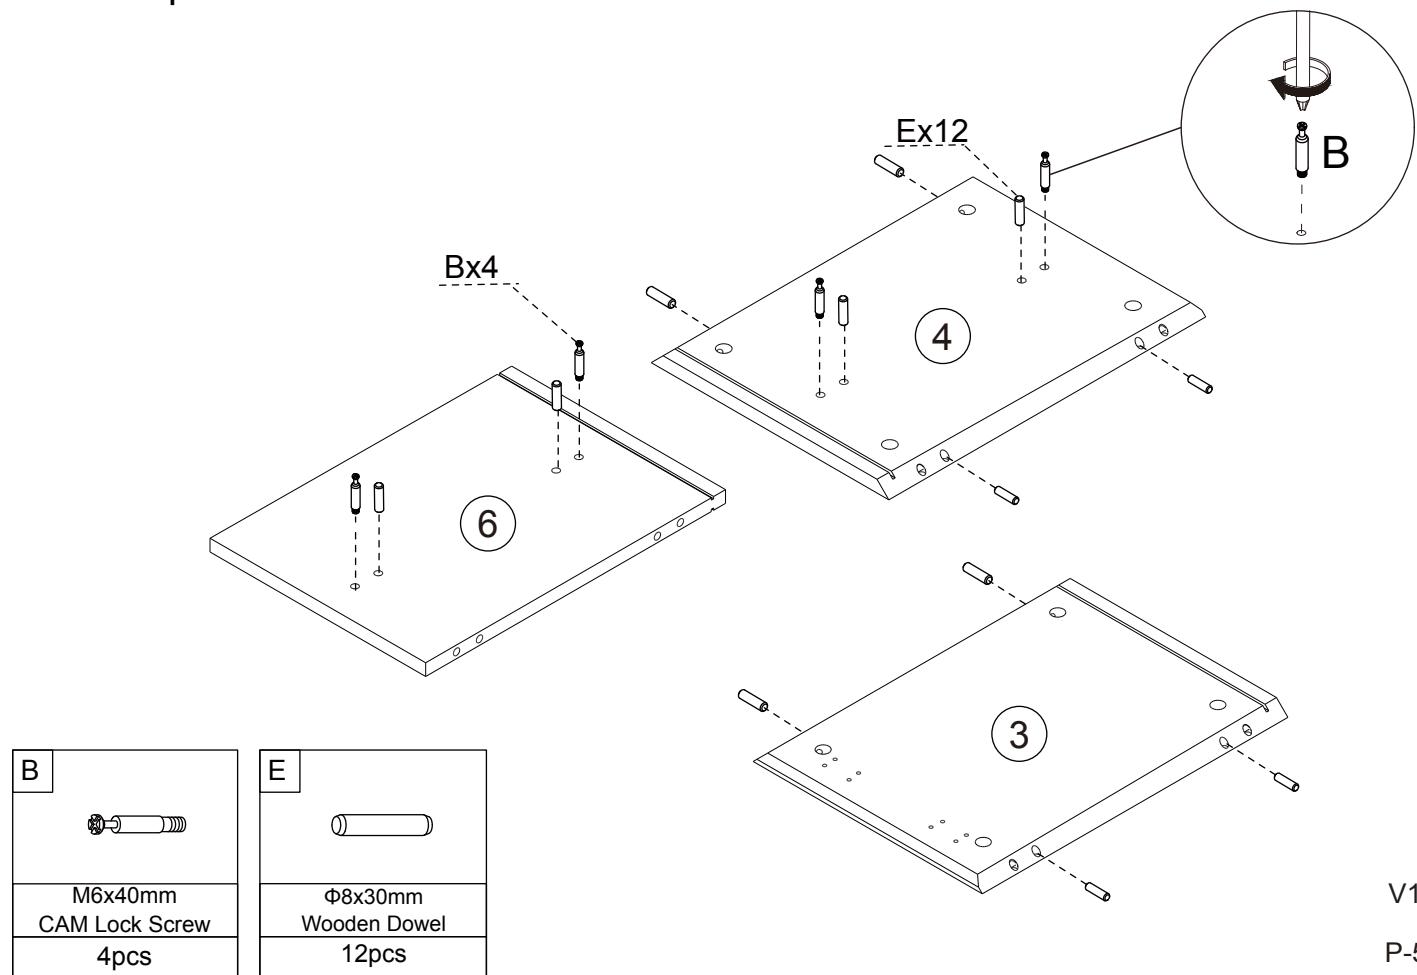


3. Attach parts to the Panels.

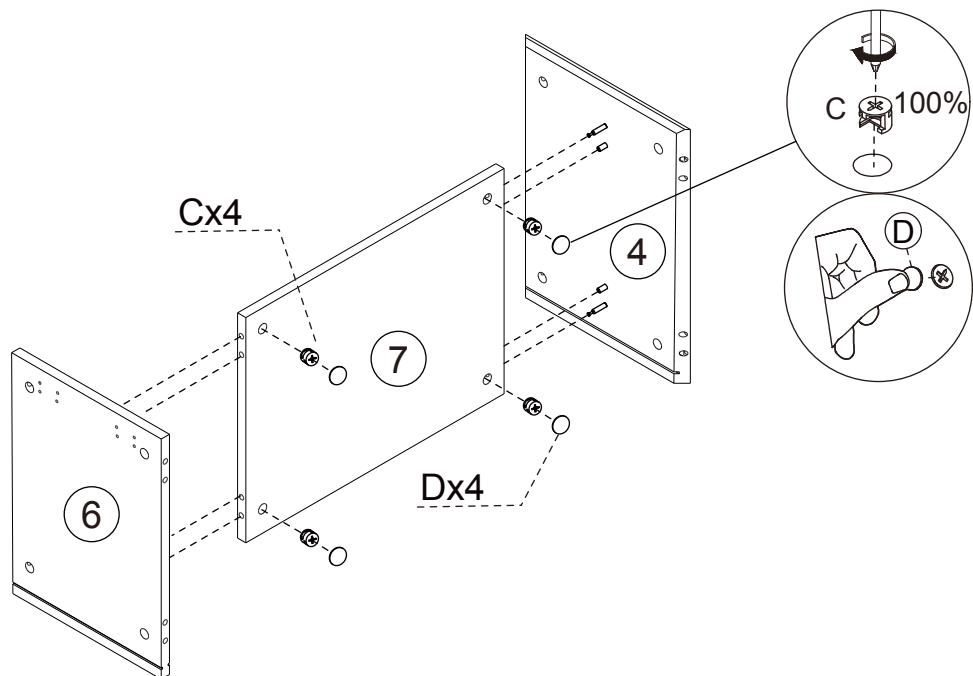

C	
Φ15x11.5mm CAM Lock	
4pcs	

D	
Cover	
4pcs	


4. Attach parts to the Top Panel.

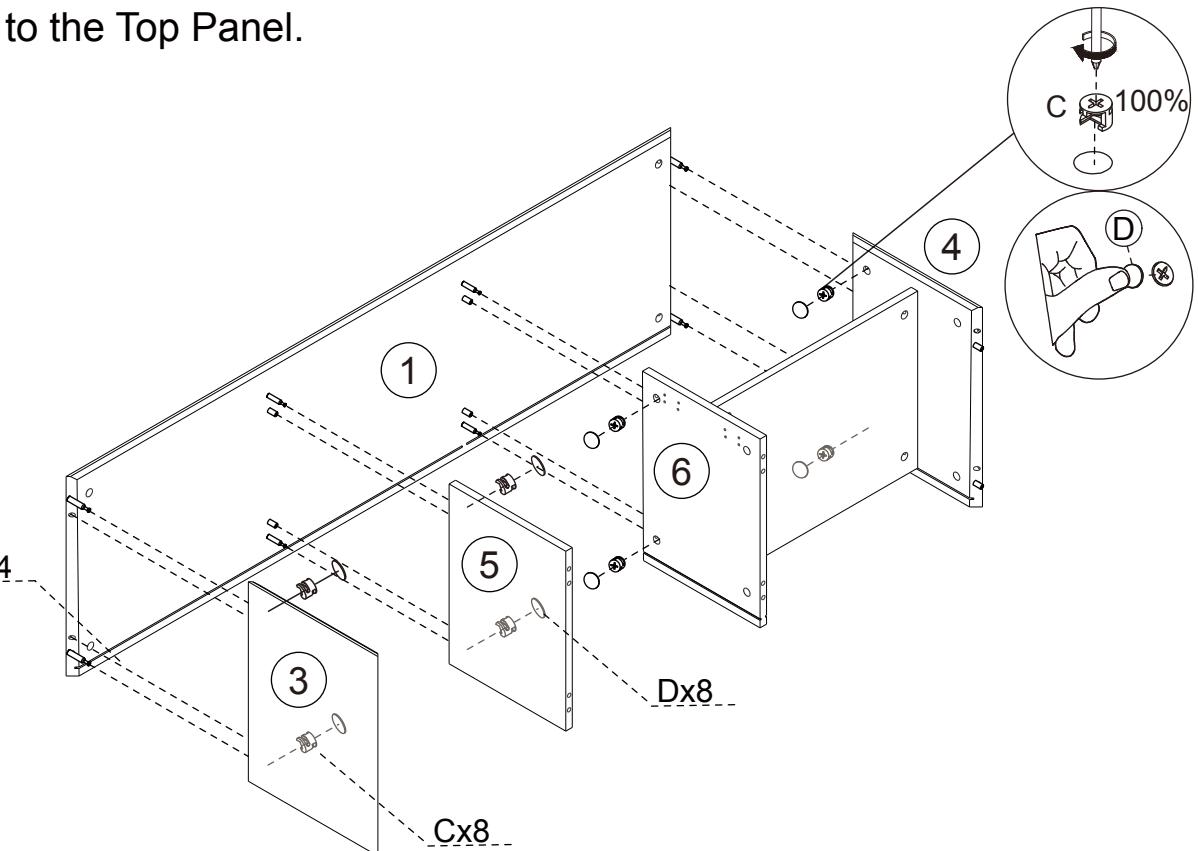


C	
Φ15x11.5mm CAM Lock	
8pcs	

D	
Cover	
8pcs	

5. Attach the Back Panels into the Frame.

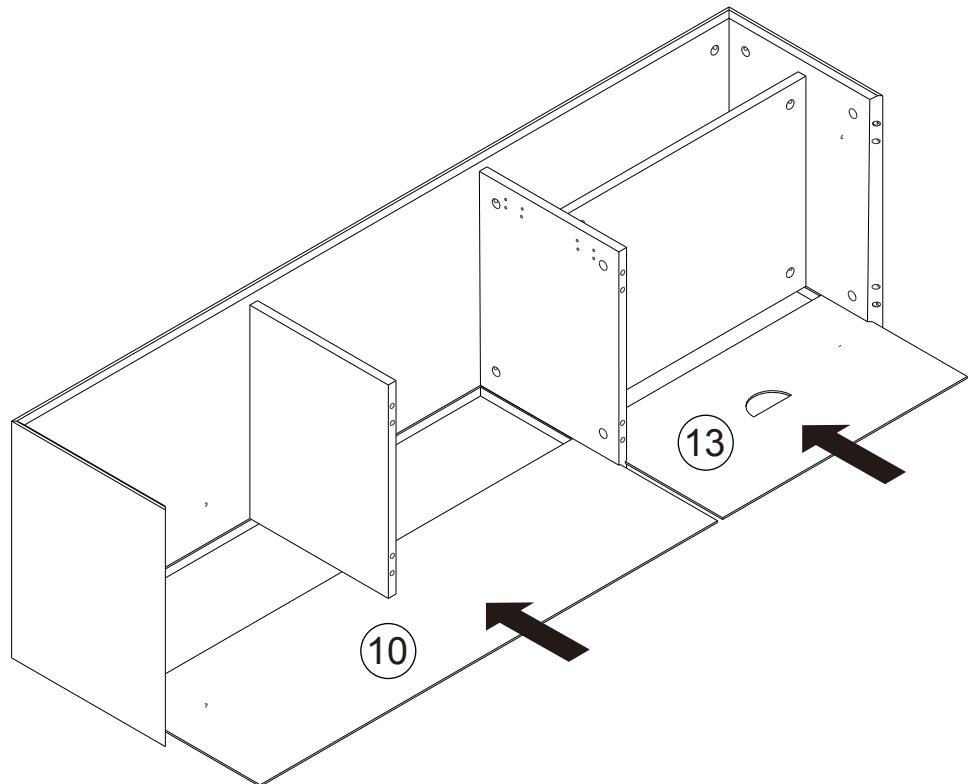


6. Attach parts to the Bottom Shelf Panel.

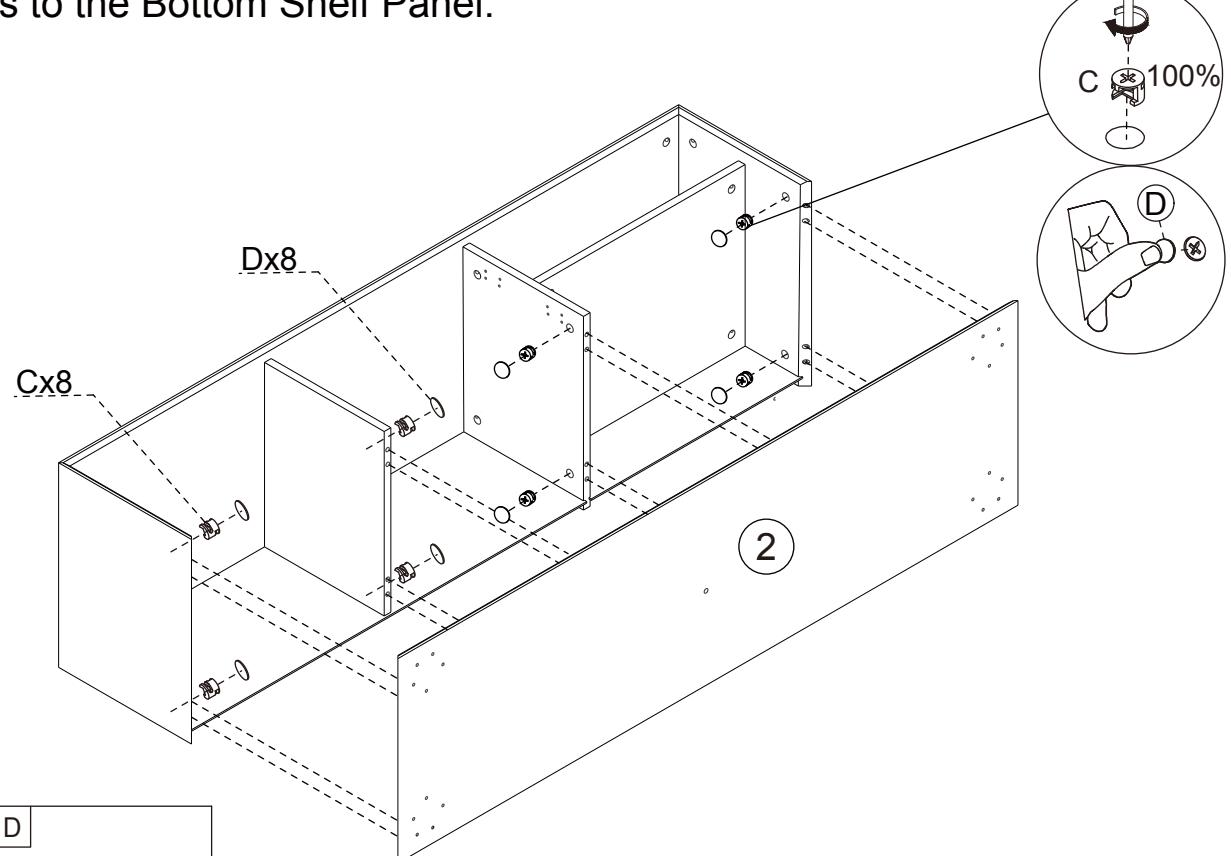


C	
Φ15x11.5mm CAM Lock 8pcs	

D	
Cover 8pcs	


7. Attach the cam locks and covers.

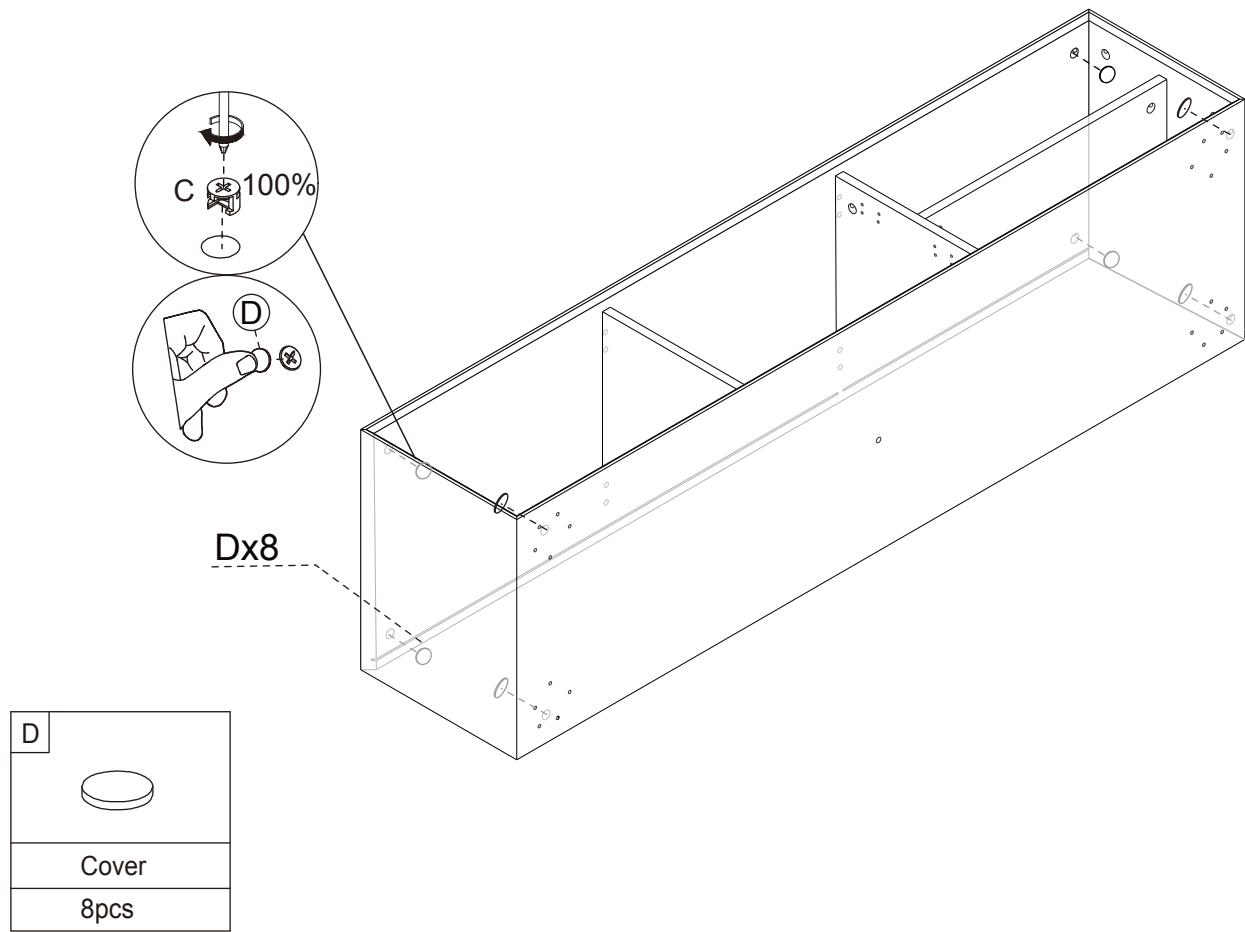

8. Attach the Metal Plate.

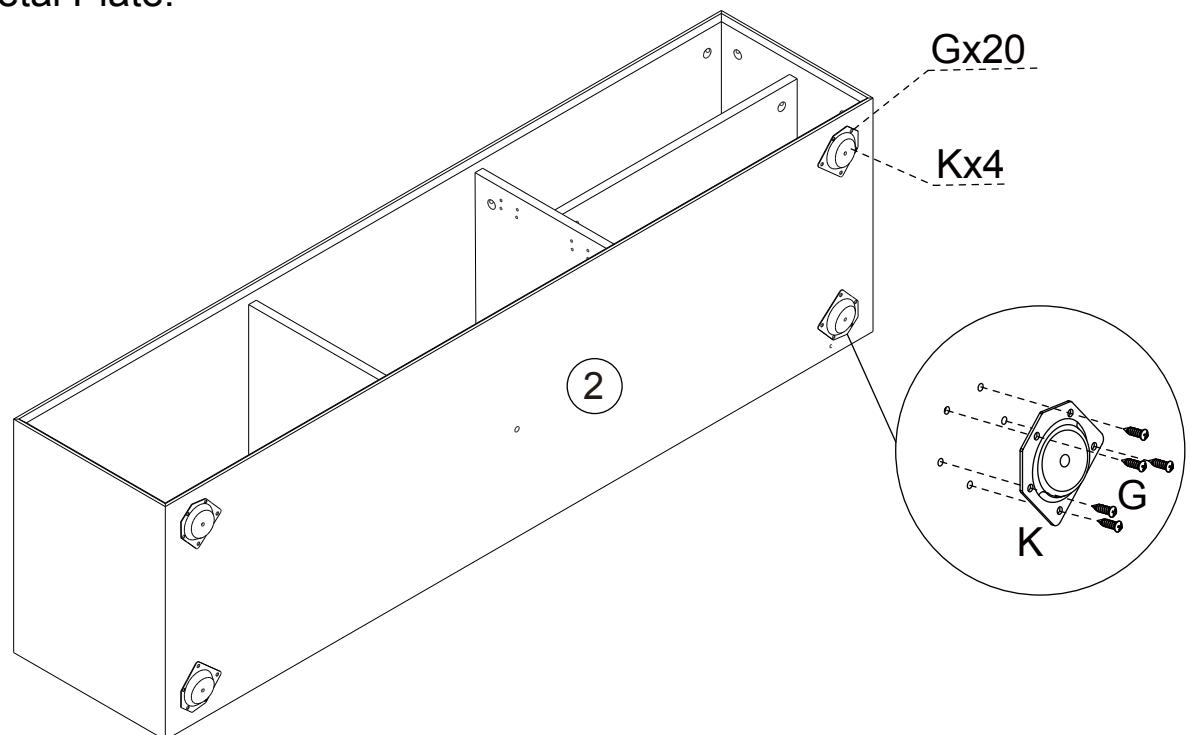


9. Attach the legs.

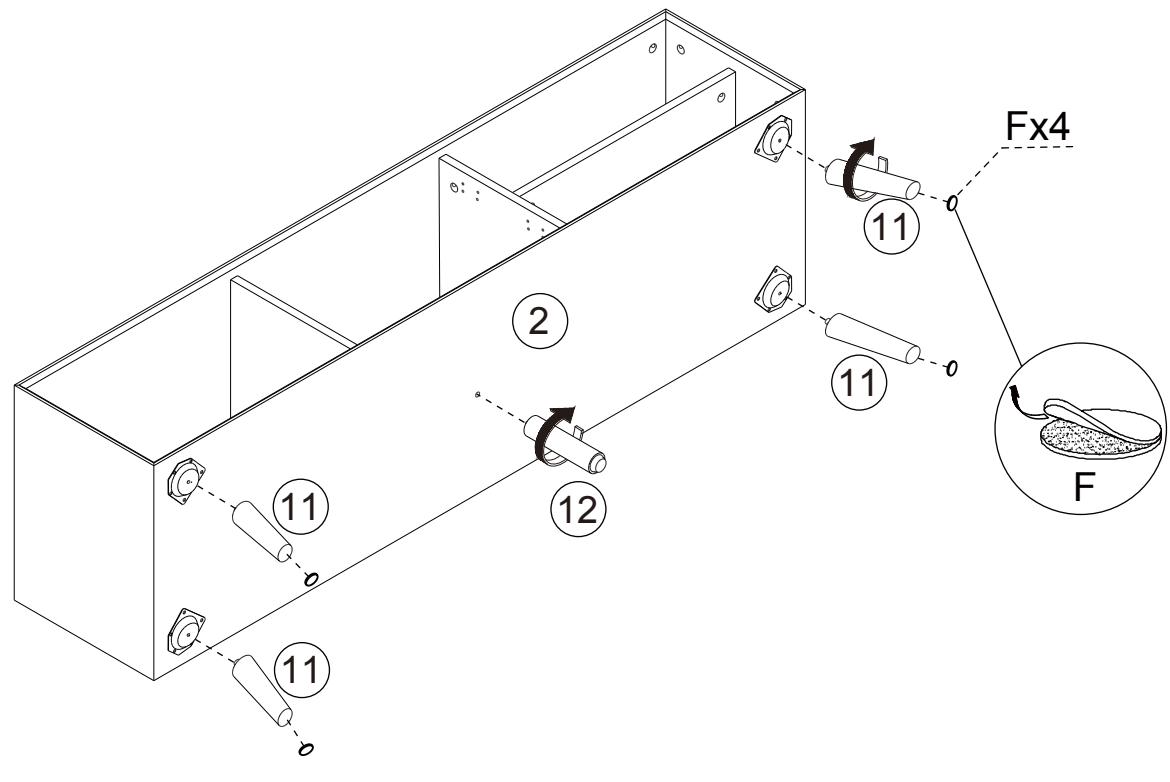

F	
Φ18mm Felt Pad	
4pcs	

10. Attach parts to the Doors.

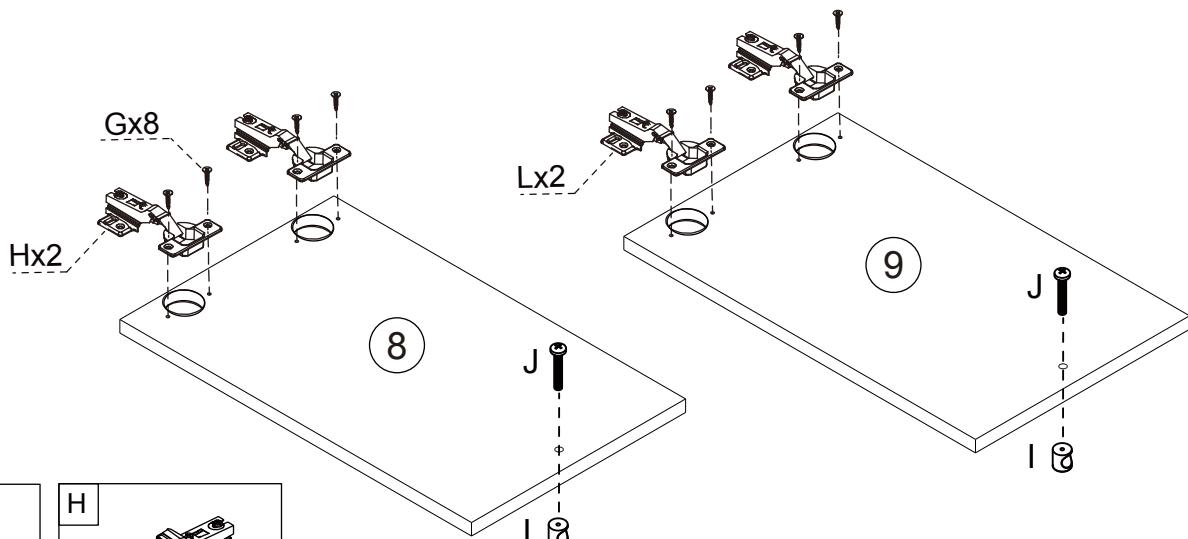


G	
M3.5x15mm Screw	
8pcs	

H	
Hinge	
2pcs	


I	
Φ 20x25mm Metal Handle	
2pcs	

J	
M4x20mm Handle Bolt	
2pcs	

11. Attach the Doors to the Frame.

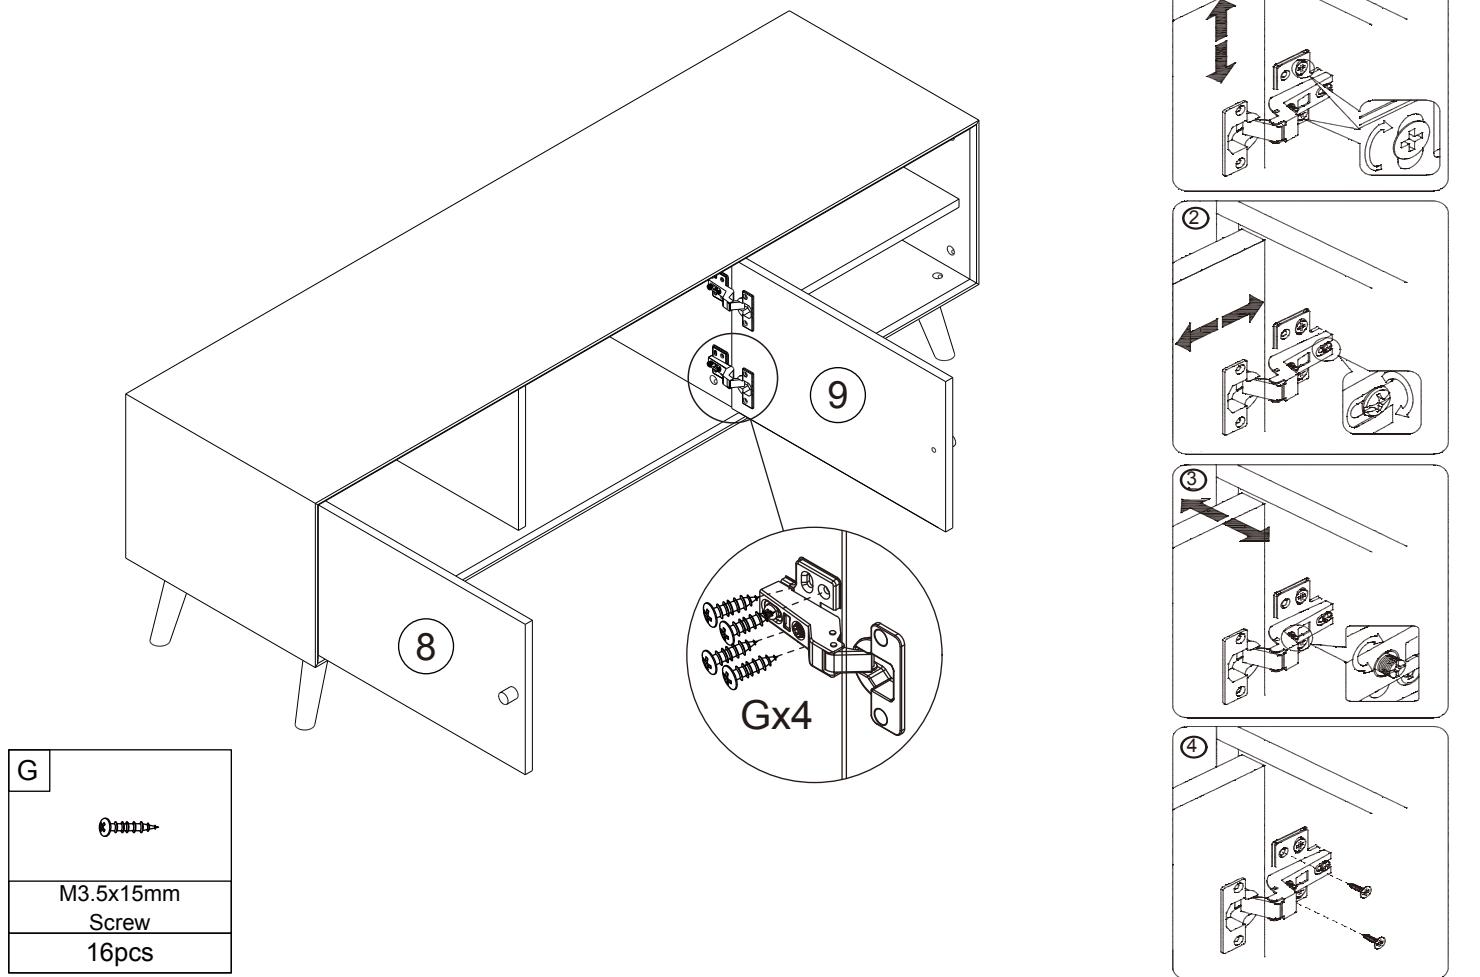

12. Attach the Plastic Buckles.

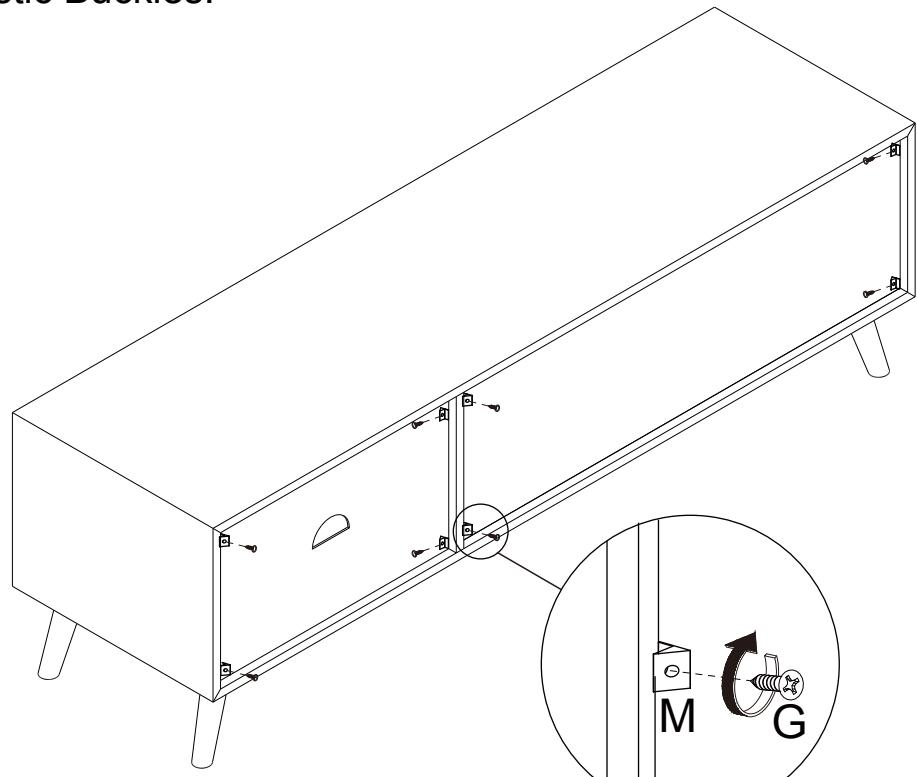

13.Finish

