

DUSK.COM

 
LIVING | BEDROOM | DINING

Range Name: Carly

Box Dimensions : W163xD51xH18.5 cm

Product Dimensions:W150xD39xH55cm


TV Unit for TVs up to 65"

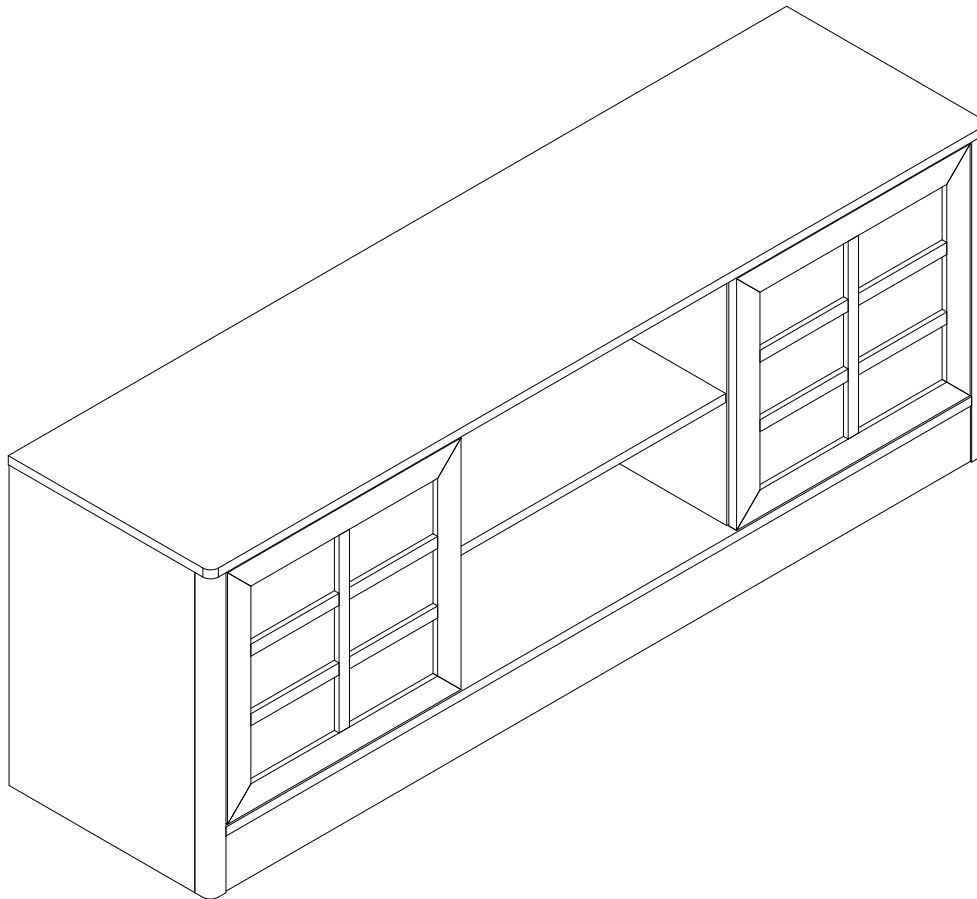


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



 70 minutes approx
assembly time

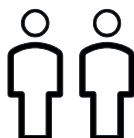

Two adults
assembly required

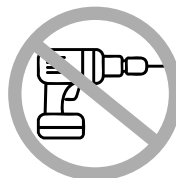 

Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

P-1-14

V-1.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Carly TV Unit for TVs up to 65" frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Carly TV Unit for TVs up to 65" in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

 
RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Carly TV Unit for TVs up to 65" when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

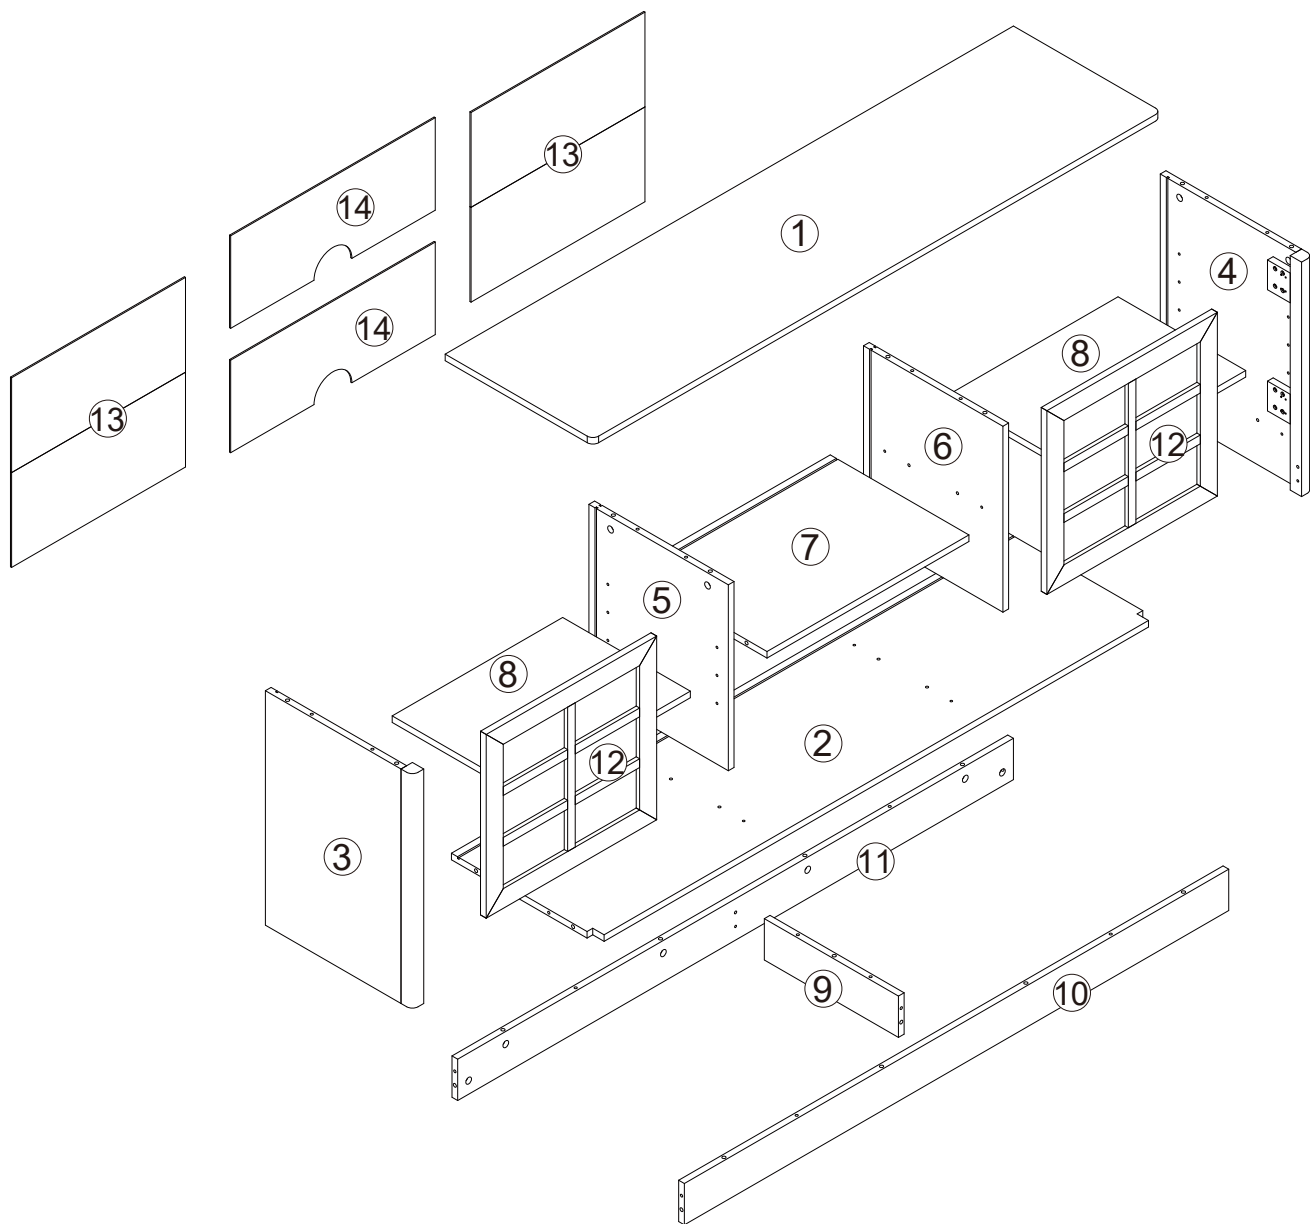

Parts list




Before you begin building your Carly TV Unit for TVs up to 65", please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Qty	Box No
1	Top Panel	1 pc	1
2	Bottom Panel	1 pc	1
3	Left side panel	1 pc	1
4	Right Side panel	1 pc	1
5	Left Middle Panel	1 pc	1
6	Right Middle Panel	1 pc	1
7	Shelf Centre Panel	1 pc	1


Part Number	Part Description	Qty	Box No
8	Shelf panel	2 pcs	1
9	Leg Short Panel	1 pc	1
10	Front long leg panel	1 pc	1
11	Rear long leg panel	1 pc	1
12	Door Panel	2 pcs	1
13	Back Panel	2 pcs	1
14	Back Panel	2 pcs	1

Fittings list

   
Please check you have all the fittings listed below with your product in box 1

 (A) M6x35mm Cam Bolt x31pcs(+2 extra)	 (B) Ø15x10mm Cam x 31 pcs(+2 extra)	 (C) Ø5.8x30mm Wood Dowel x32pcs(+2 extra)
 (D) M4x40mm Screw x4 pcs	 (E) Shelf Support x8pcs(+1 extra)	 (F) Wall Bracket x2 pcs
 (G) Plastic foot pad x8pcs (+1 extra)	 (H) M4x14mm Screw x32pcs(+2 extra)	 (I) Hinge x4 pcs
 (J) Hole Sticker x12pcs (+1 extra)	 (K) Plastic Buckle x24pcs(+1 extra)	 (L) M3x14mm Screw x24pcs(+1 extra)

 Bolt Length Ruler:





Tool required

 

Step 1:

 
 
(A)  4pcs

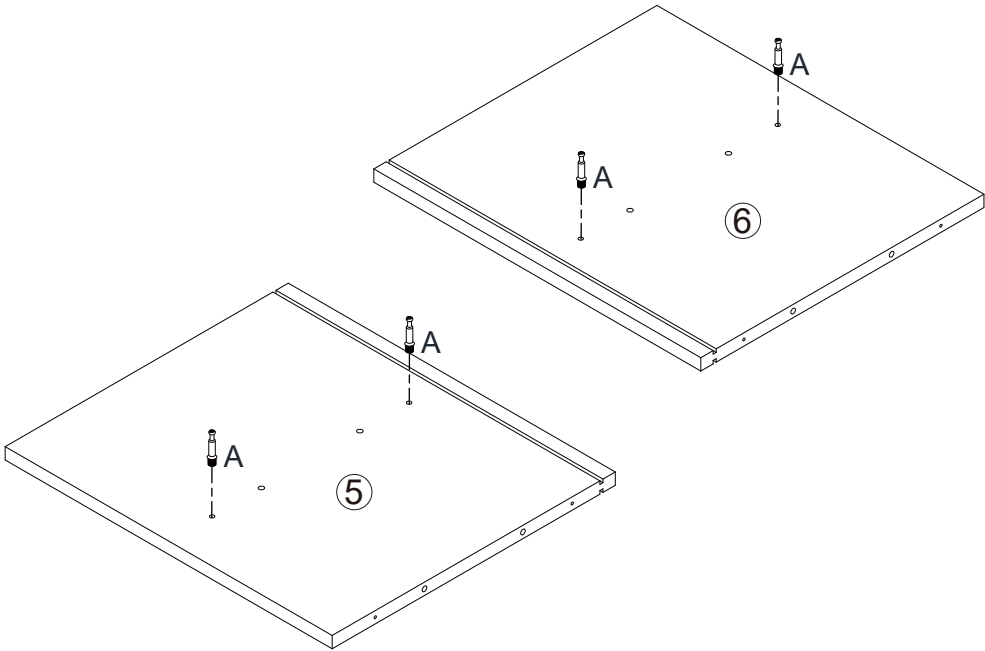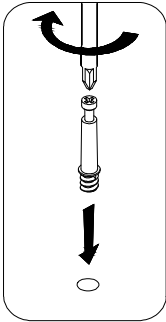



Step 2:

(B)  4pcs

  (C)  4pcs

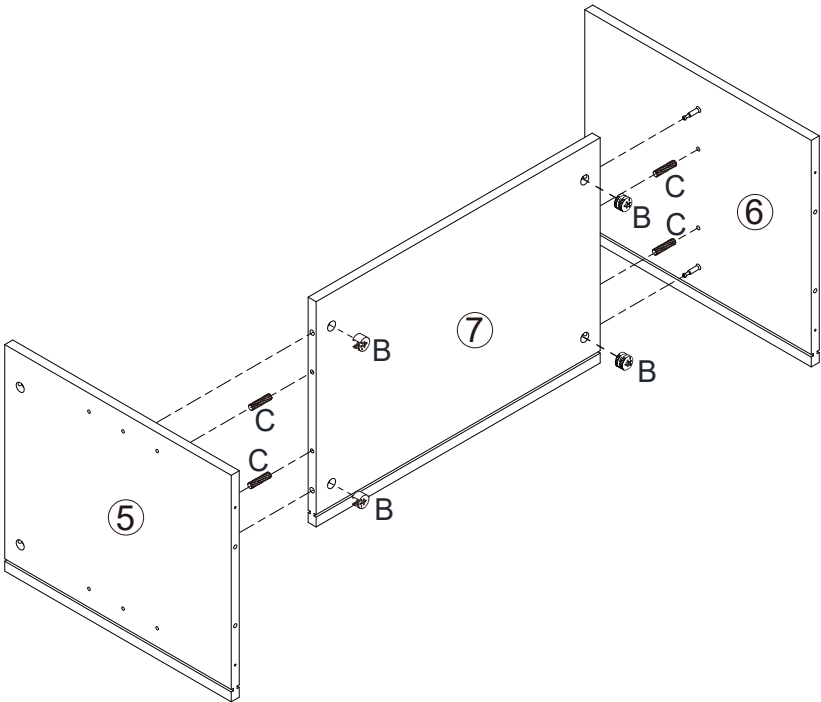
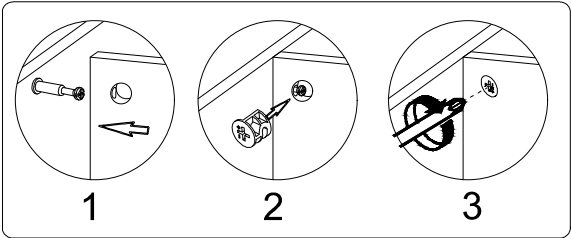


  Step 3:

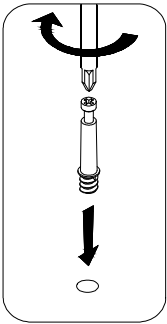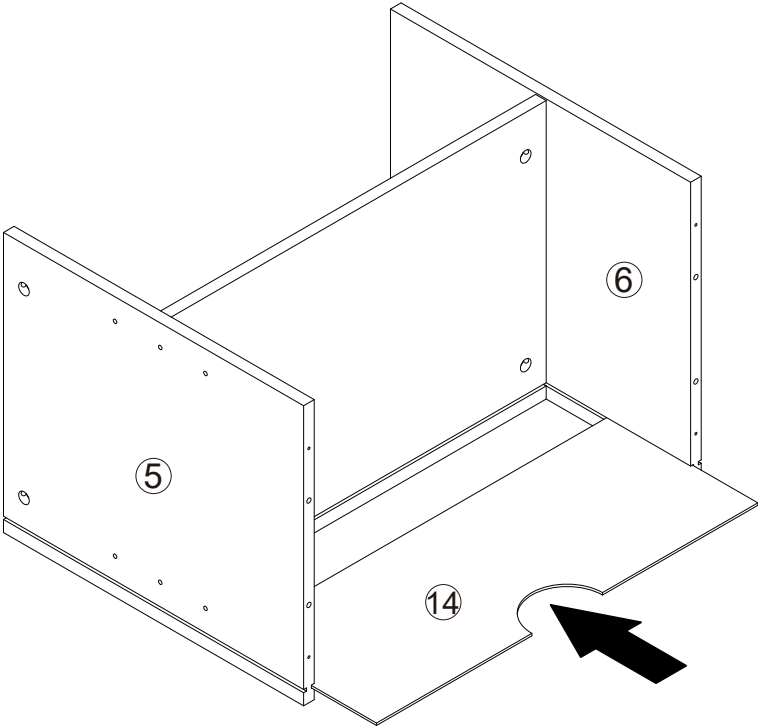

Step 4:

 
 
(A)  11pcs

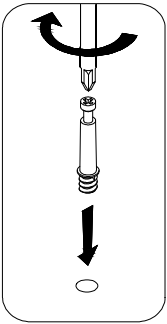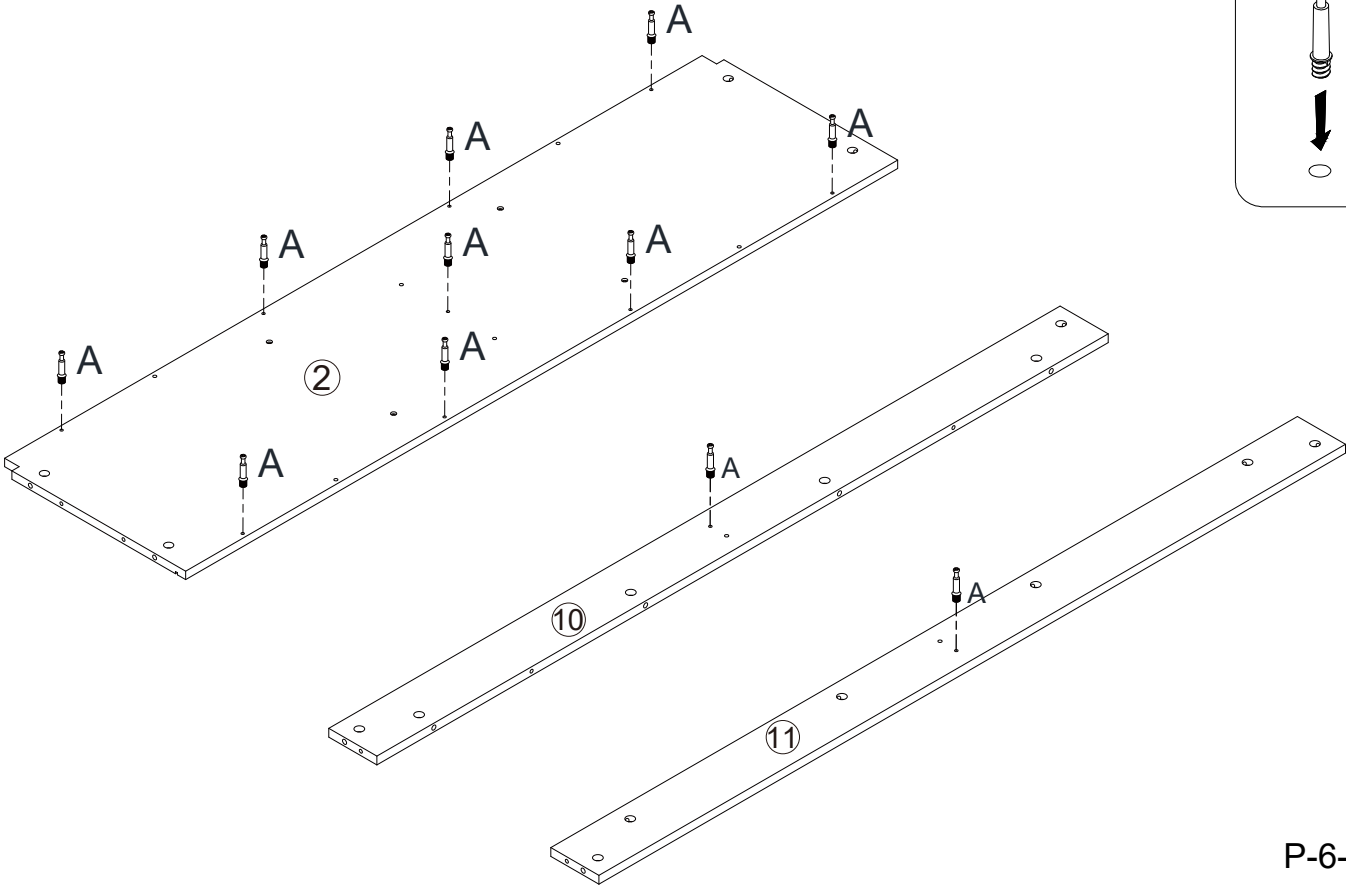

Step 5:

Ⓑ 2pcs

 
 
Ⓒ 2pcs

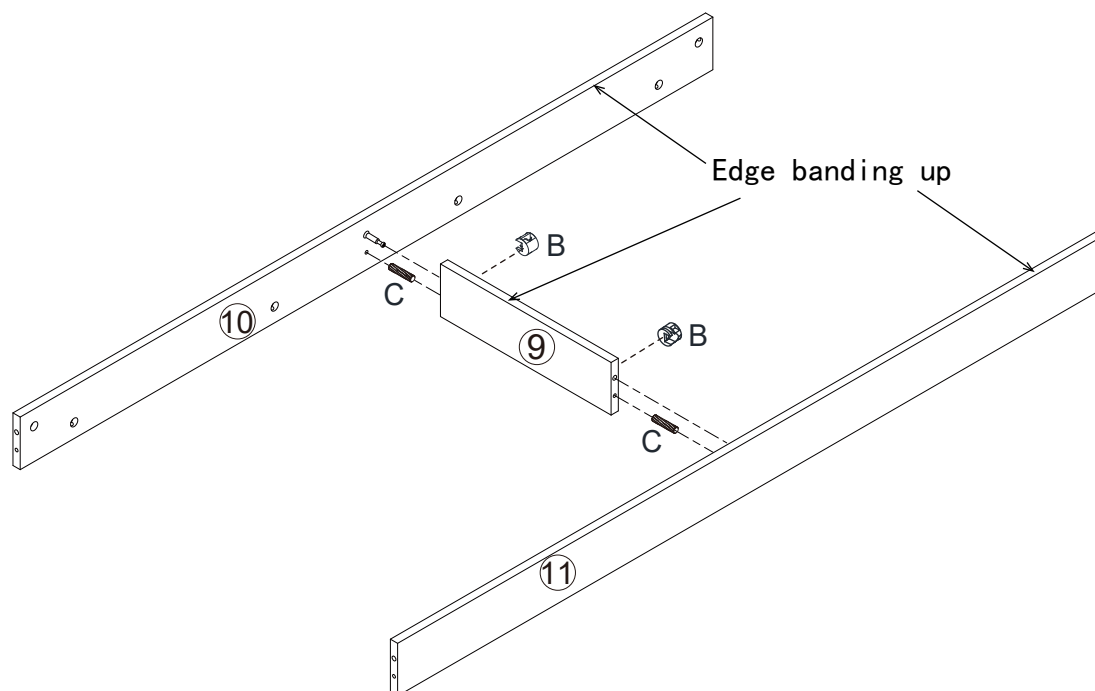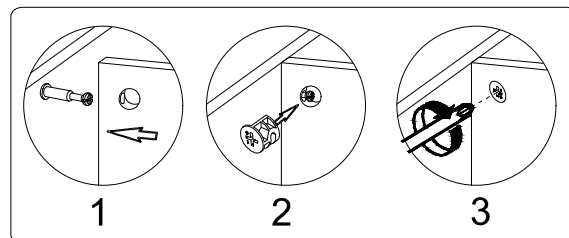

Step 6:


Ⓑ 9pcs

  Ⓒ 6pcs

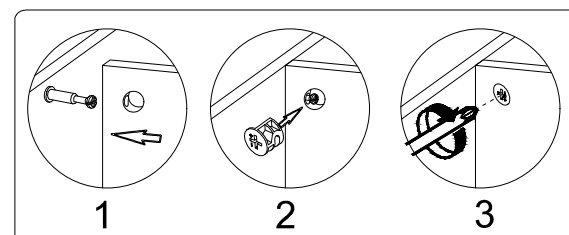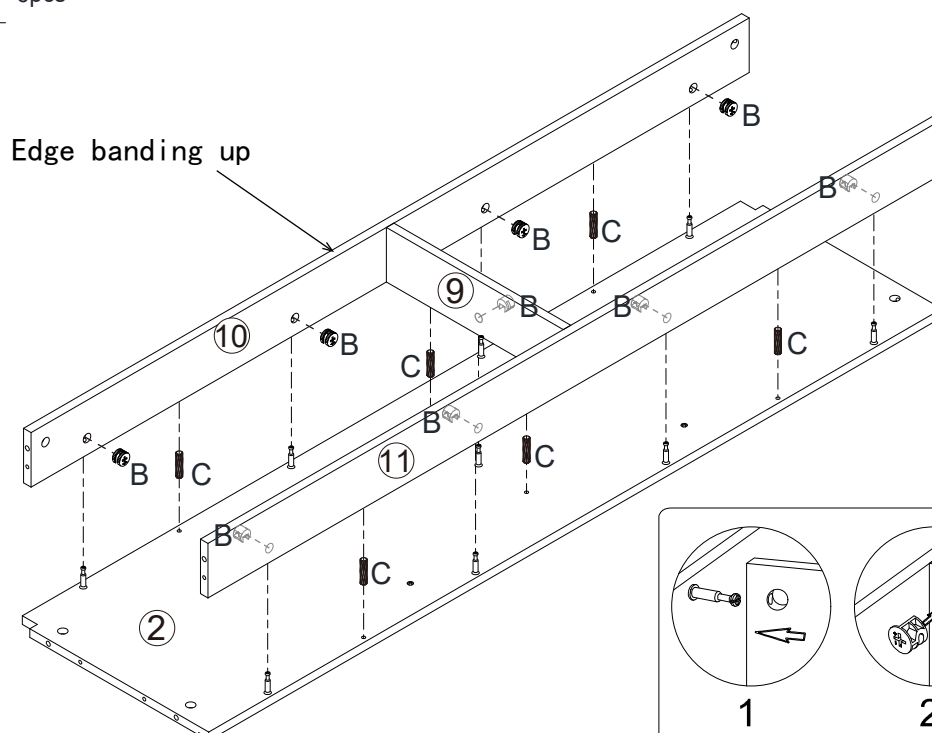

Step 7:

 
ⓖ  4pcs

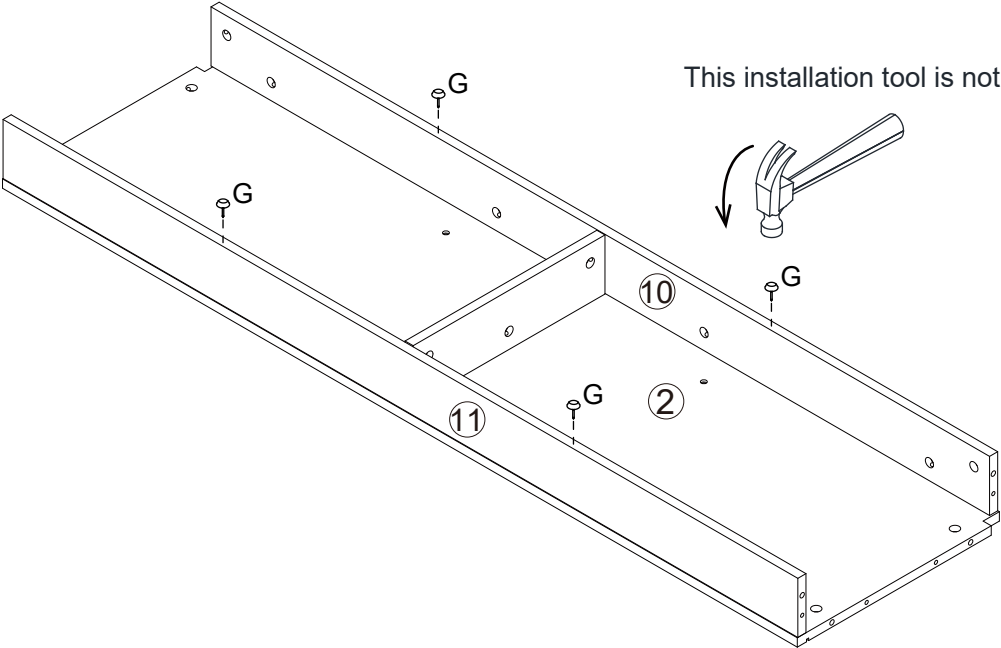

Step 8:



Ⓒ  4pcs

 Ⓓ  4pcs

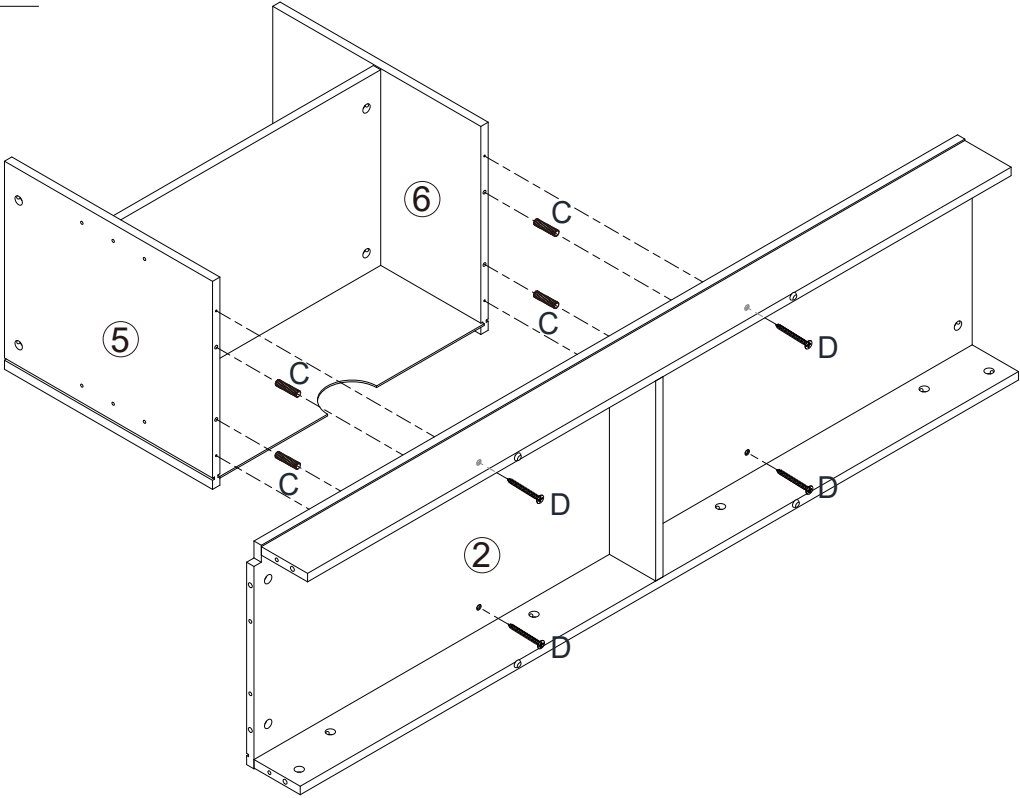

Step 9:

 
 
(A)  8pcs

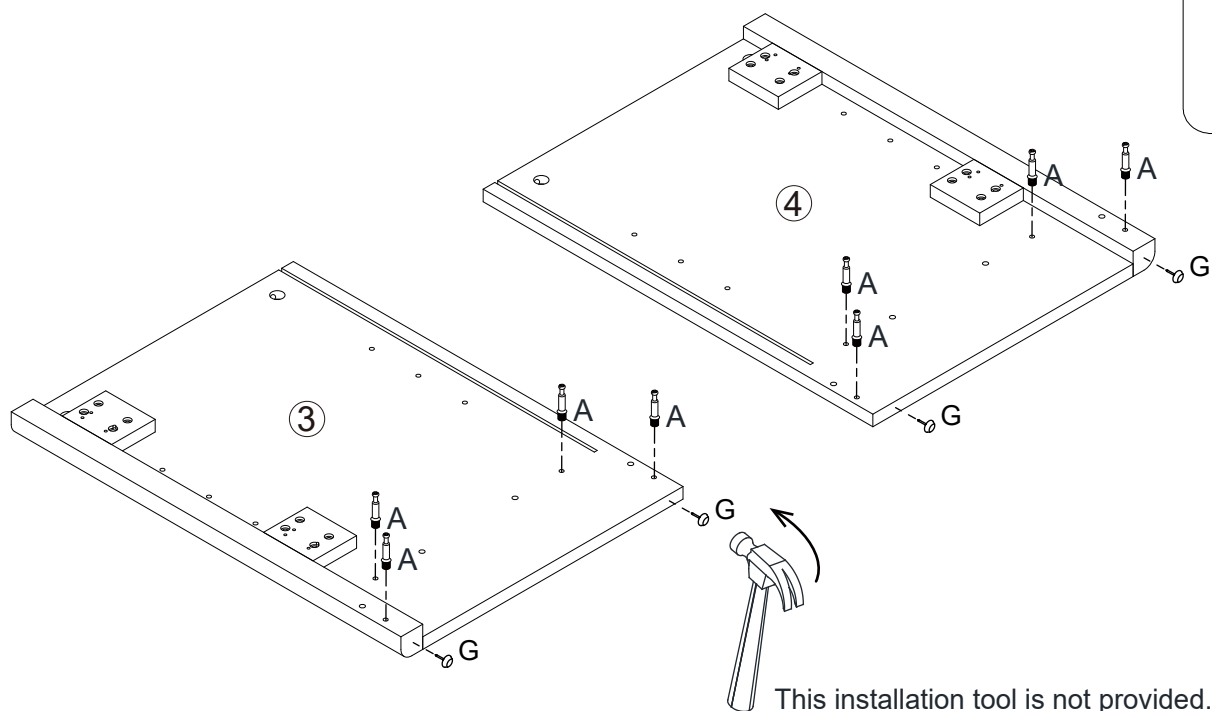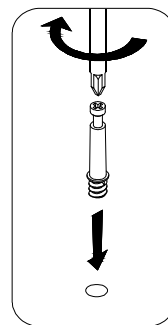

Step 10:

(B)  4pcs

 
 
(C)  4pcs

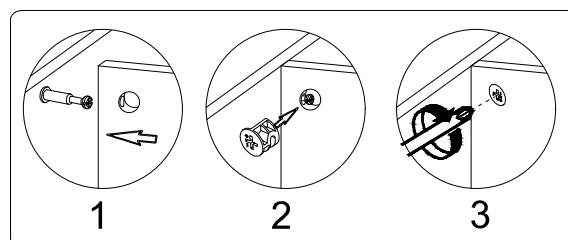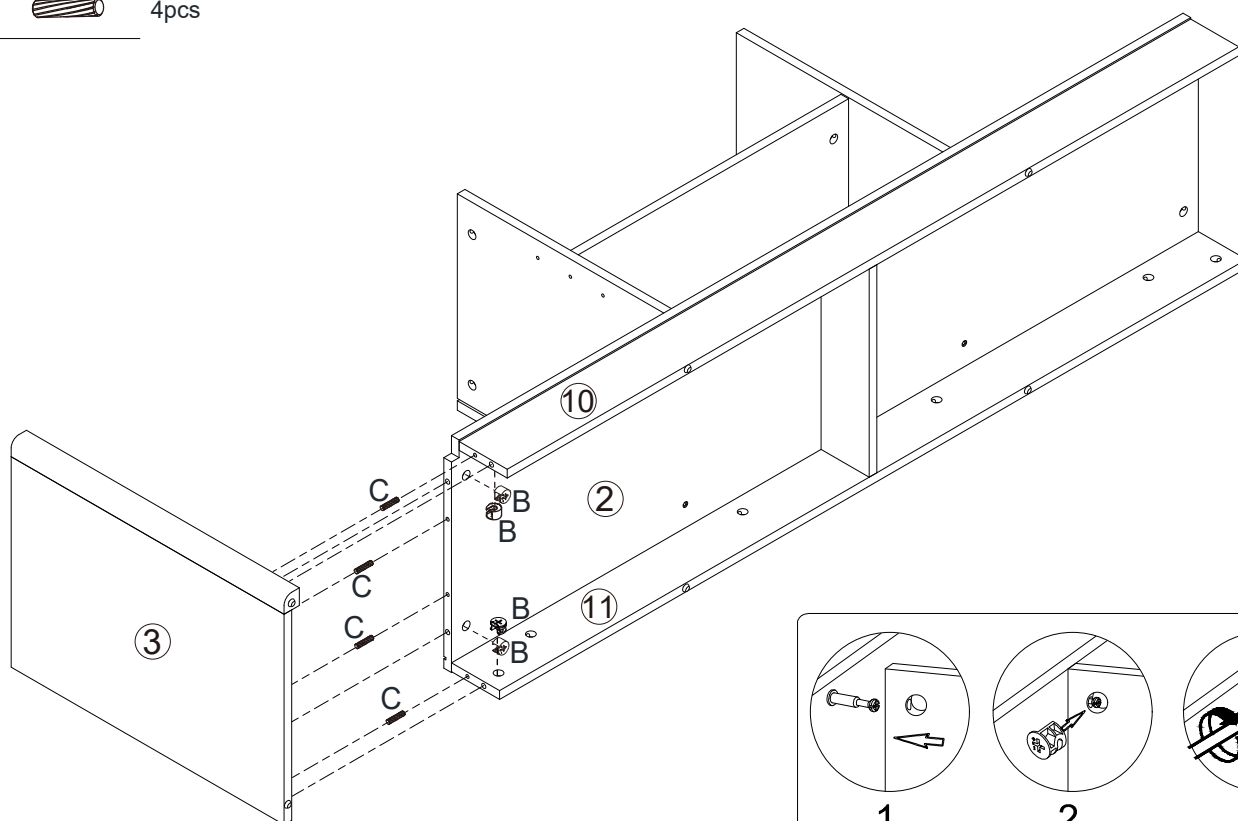




Step 11:

Ⓑ 4pcs

  Ⓒ 4pcs

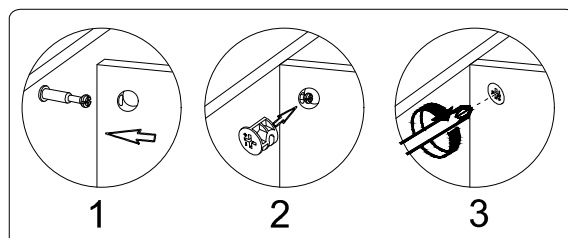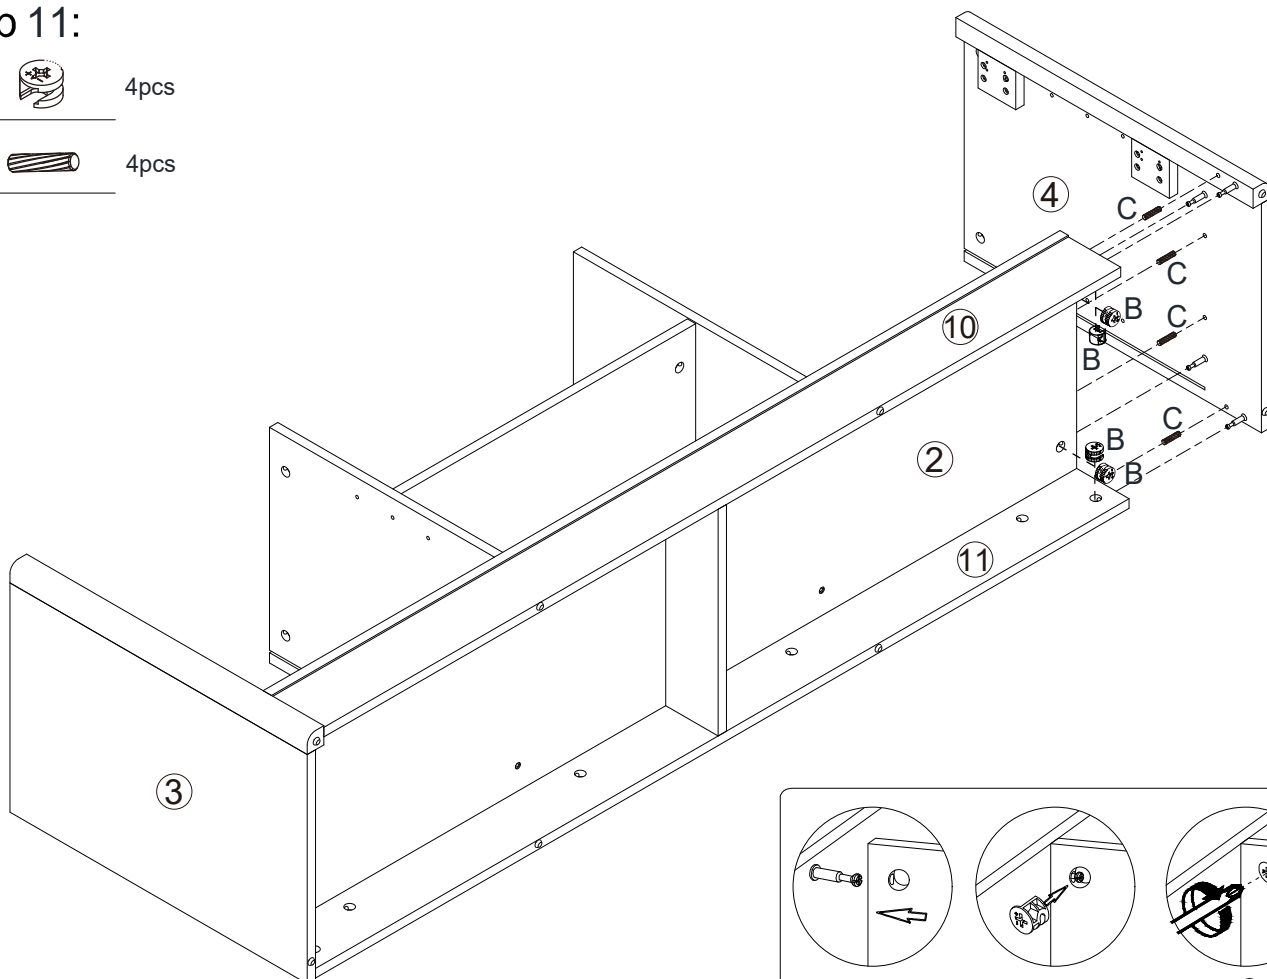

   
Step 12:

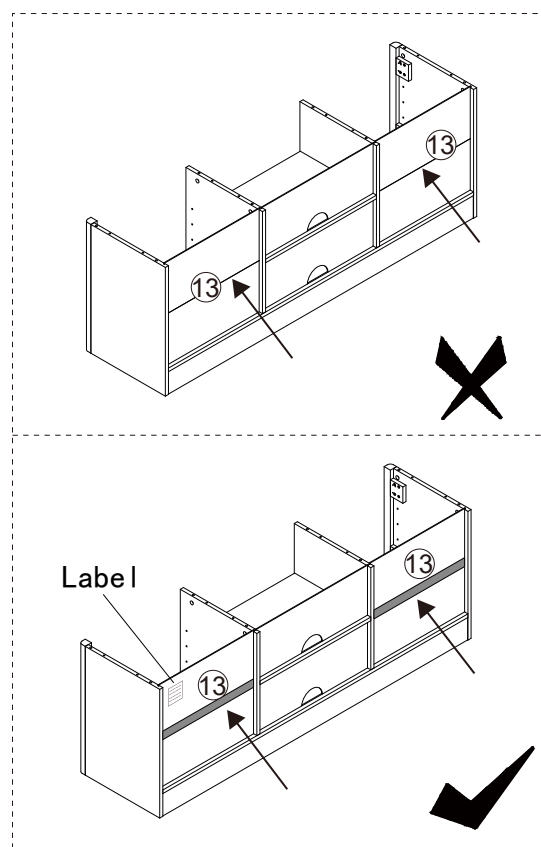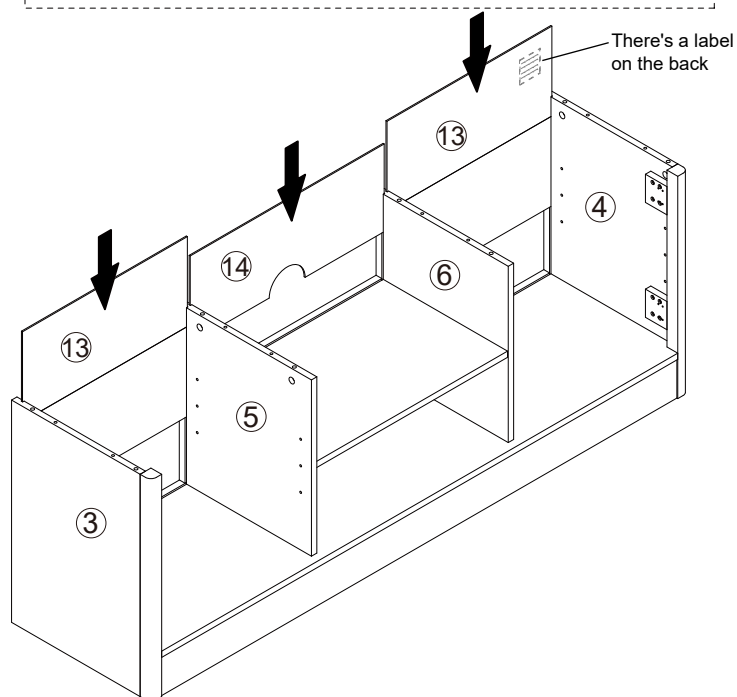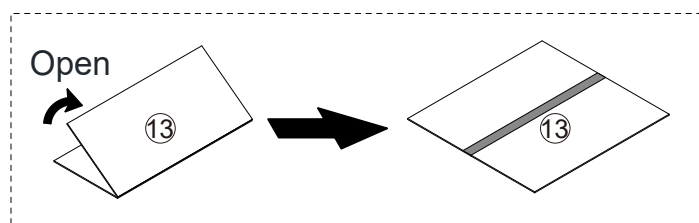


Step 13:

(A)  8pcs

 (H)  8pcs

 (F)  2pcs


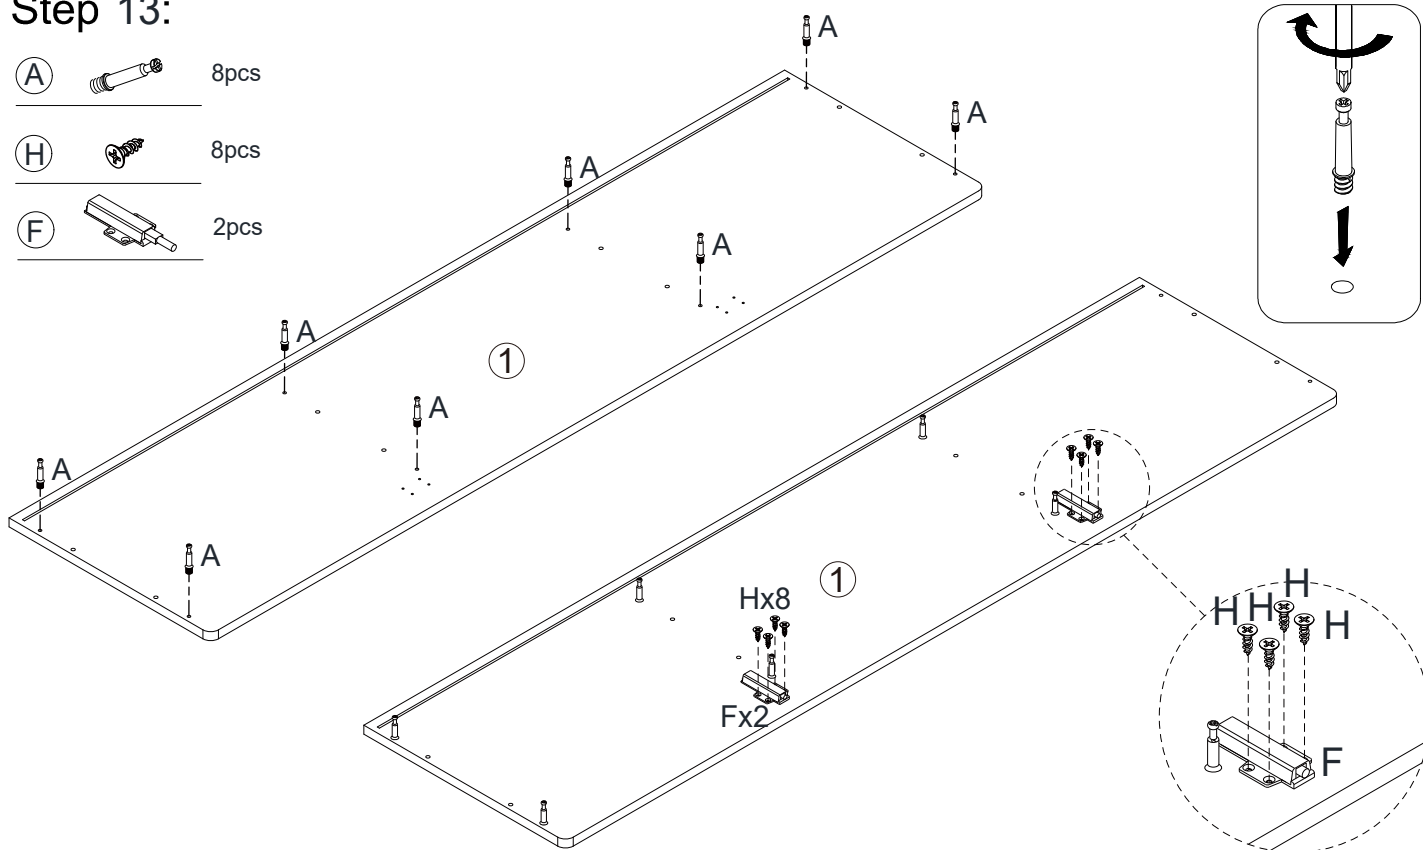


Step 14:


(B)  8pcs

(C)  8pcs

 
 
(E)  8pcs

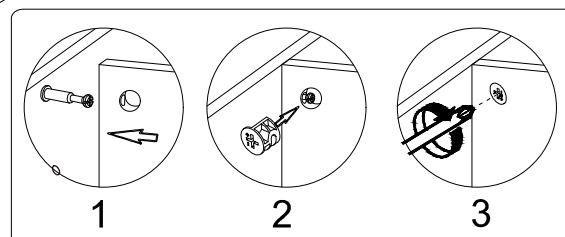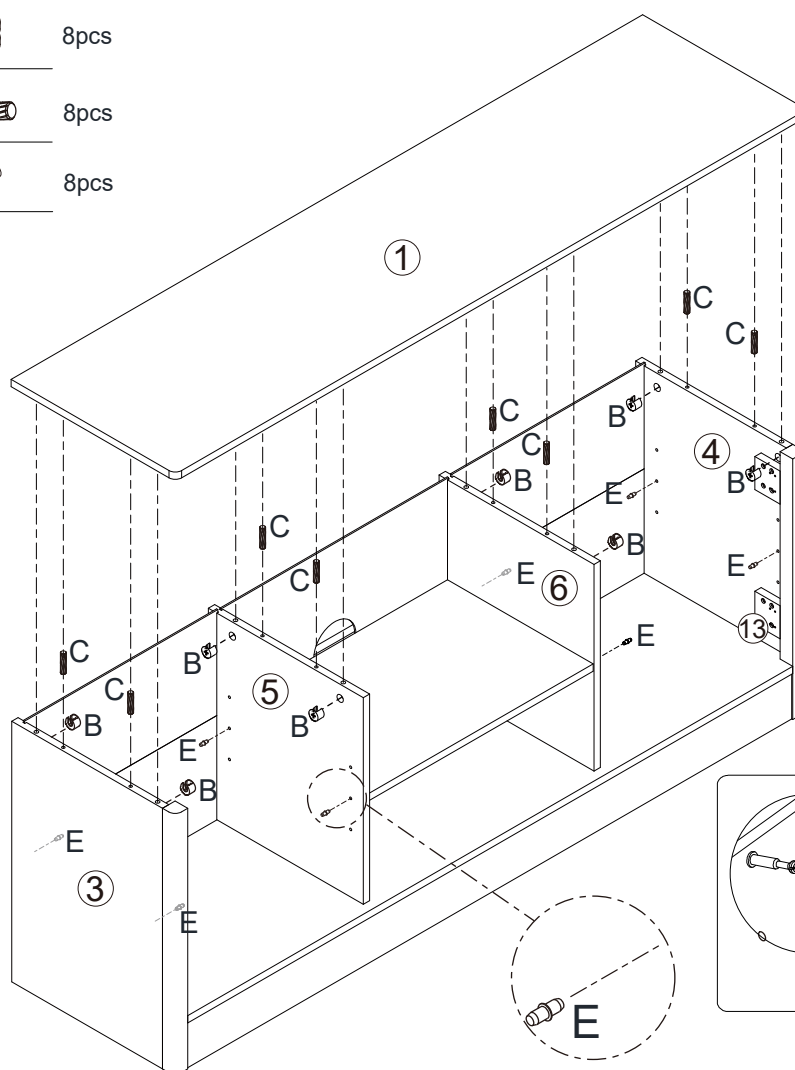

 Step 15:

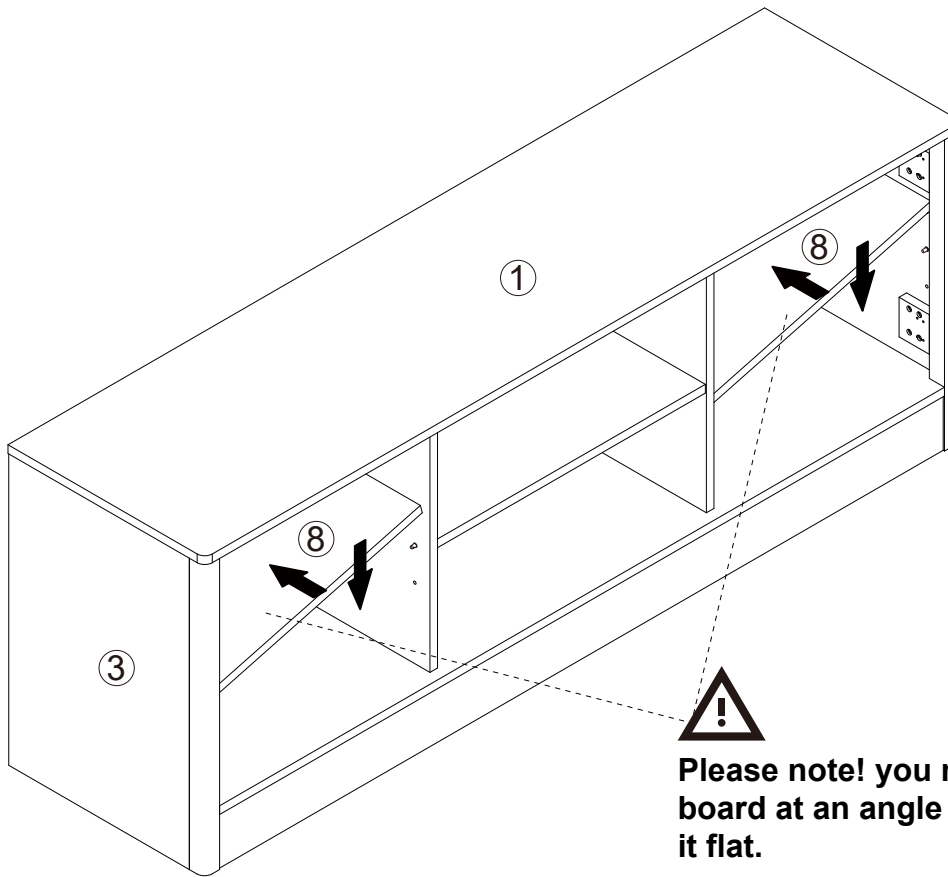

  Step 16:

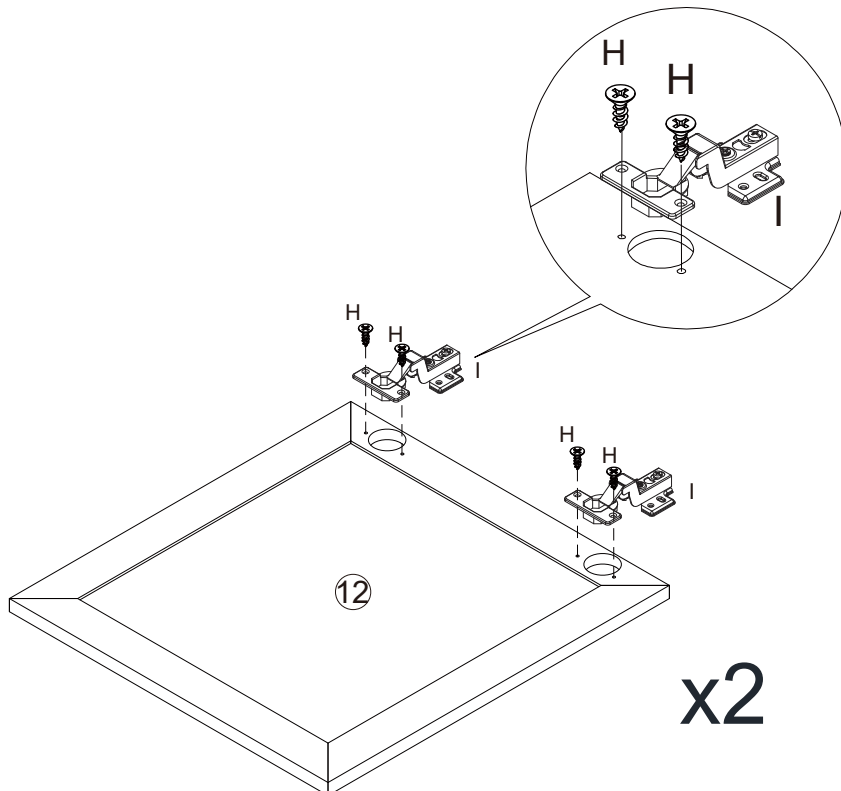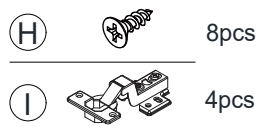

Step 17:

Ⓜ

 
 


16pcs

Ⓜ




12pcs

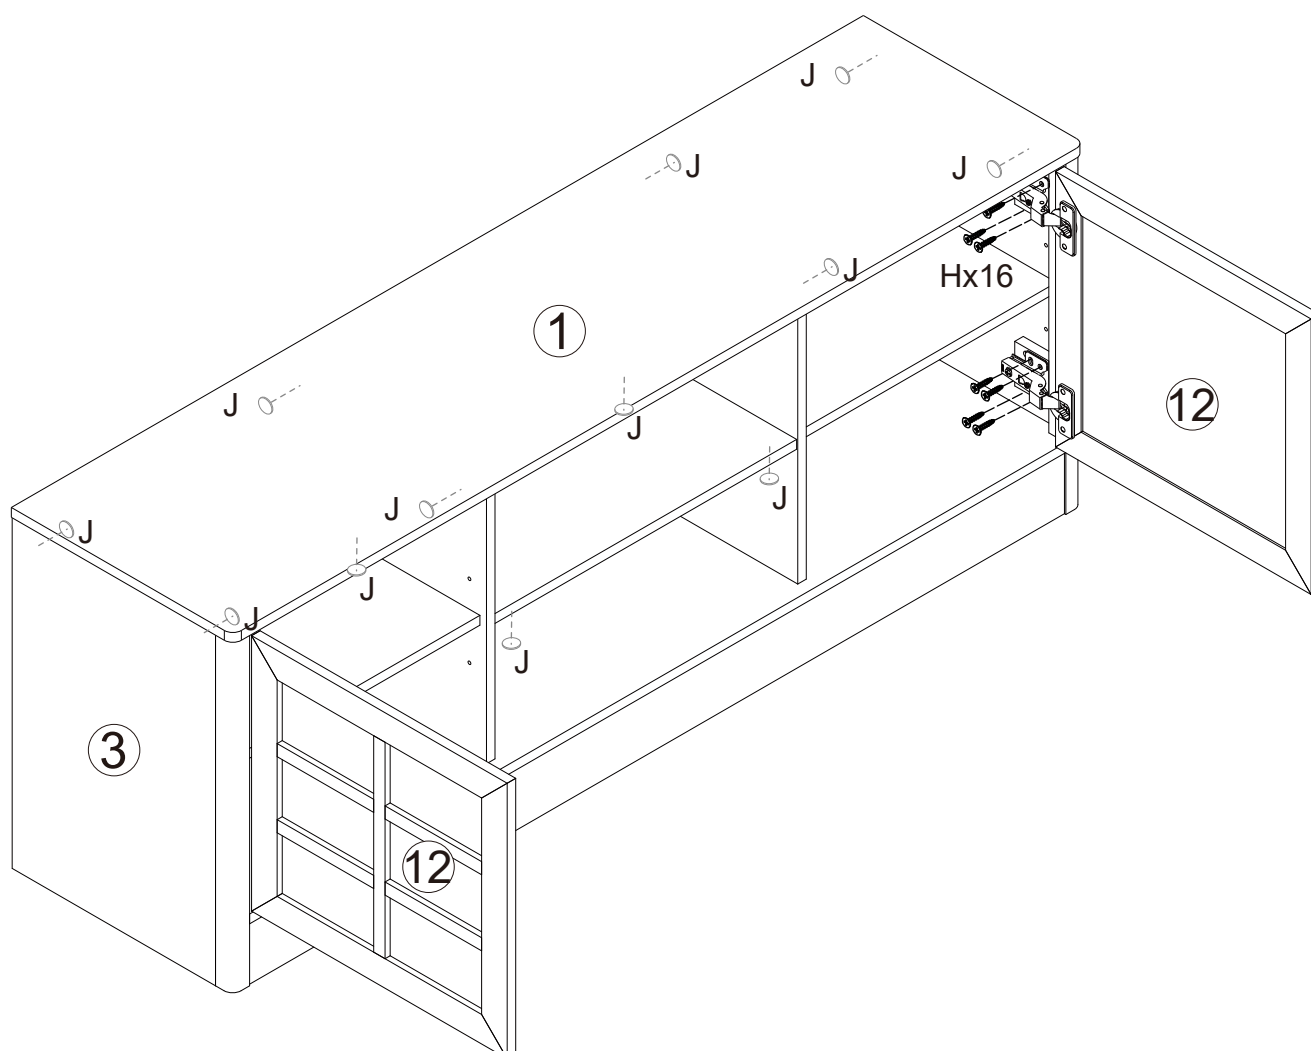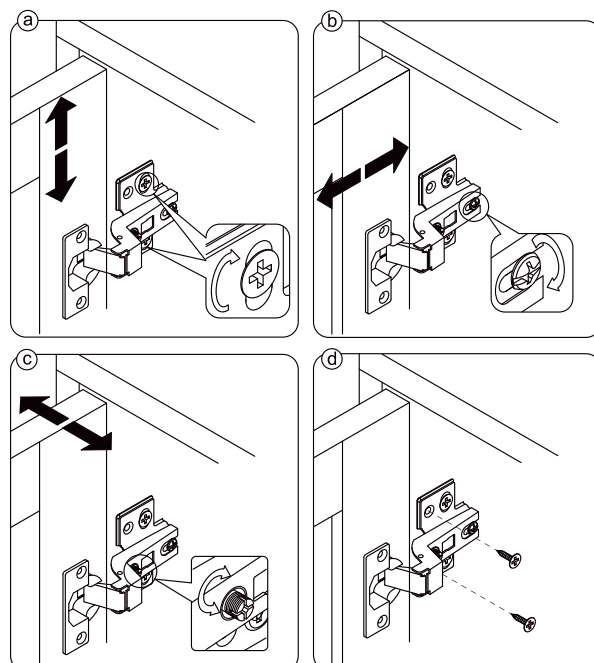

Step 18:

(K)  24pcs

 (L)  24pcs

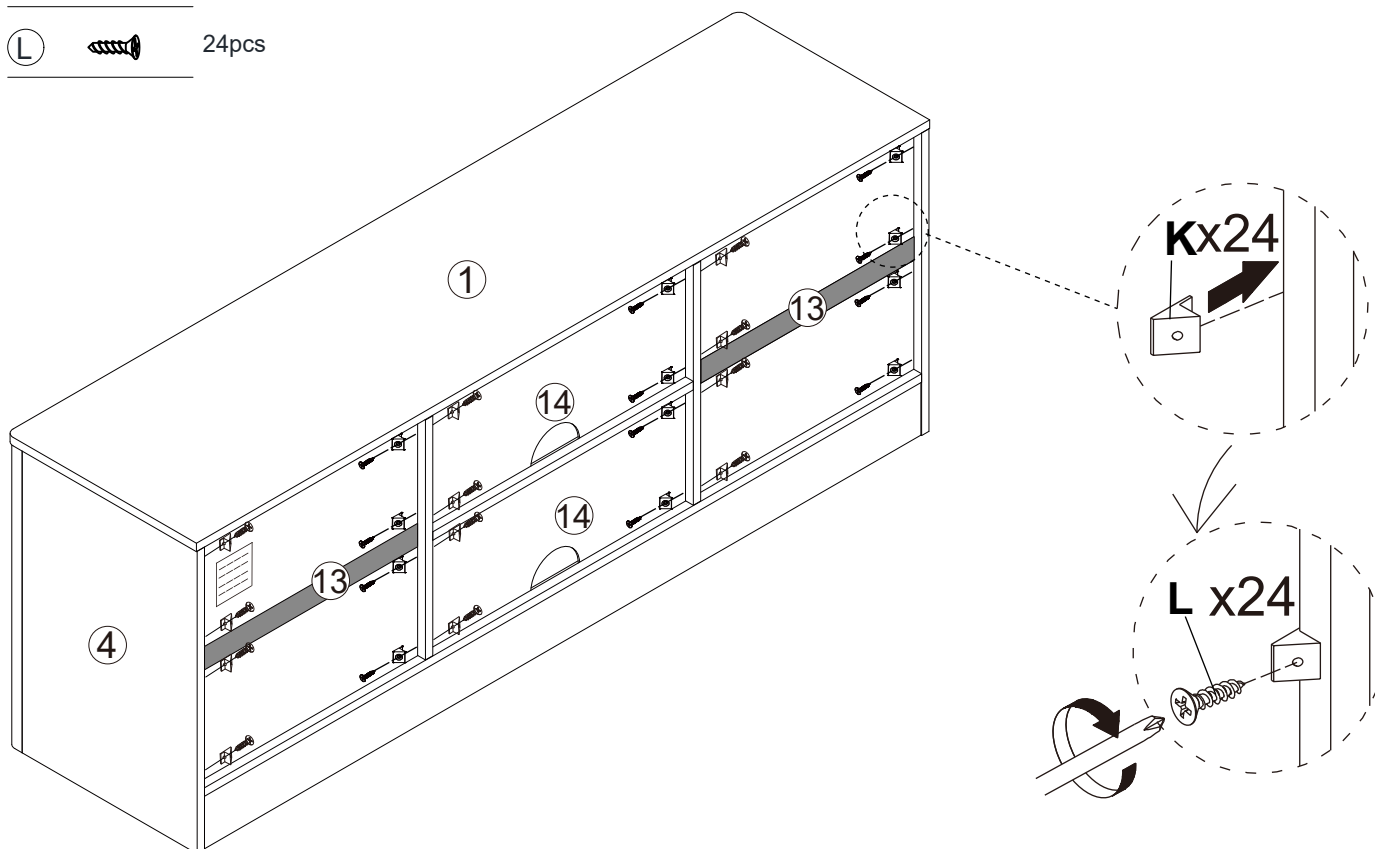

Step 19:

