


Range Name: DORA

 
Box 1 dimensions: W153.5xD49.5xH13.5cm Product Dimension: W140xD40xH45cm

Dora TV Unit

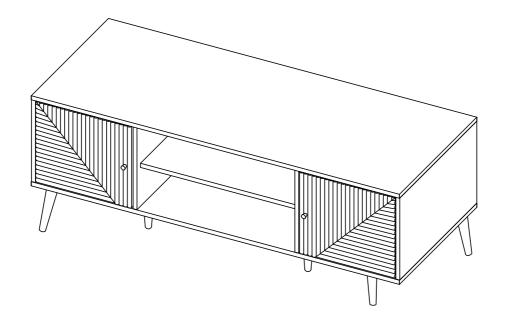



Up to 30 minutes assembly time



Two person assembly

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Dora TV Unitframe. We advise laying these out on the floor to check you have everything, and to familiariseyourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Dora TV Unit in the room you'd like it to be located.

This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.


CARE AND MAINTENANCE:

- 1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
- 2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
- 3.Do not scrub or rub the surface when cleaning.
- 4. Do not drag the Dora TV Unit when moving, lift it off the floor instead.
- 5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
- 6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
- 7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
- 8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
- 9. Avoid sharp items such as a screwdriver or any pointy tools.
- 10. Dispose of all packaging carefully and responsibly recycle where possible.

Parts list


Before you begin building your Dora TV Unit, please take a moment to read through the instructions and make surethat you have all the relevant parts listed on the parts check list.


Part Number	Part Description	Quantity	Box No
1	Тор	1pc	Box 1
2	Bottom Panel	1pc	Box 1
3	Left Side Panel	1pc	Box 1
4	Left Middle Panel	1pc	Box 1
5	Right Middle Panel	1pc	Box 1
6	Right Side Panel	1pc	Box 1
7	Shelf Panel	1рс	Box 1
8	Left Door Panel	1рс	Box 1
9	Right Door Panel	1рс	Box 1
10	Back Panel	1рс	Box 1
11	Back Middle Panel	1pc	Box 1
12	Leg	4pcs	Box 1
13	Centre Leg	2pcs	Box 1
14)	Back Panel	1pc	Box 1

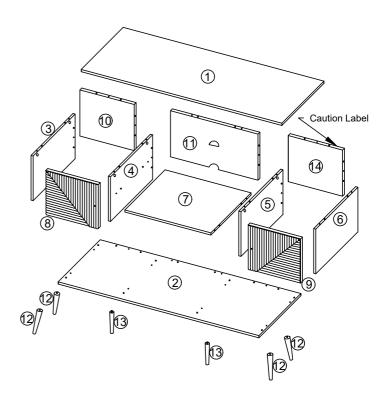


Fittings


Please check you have all the fittings listed below with your product in box 1.

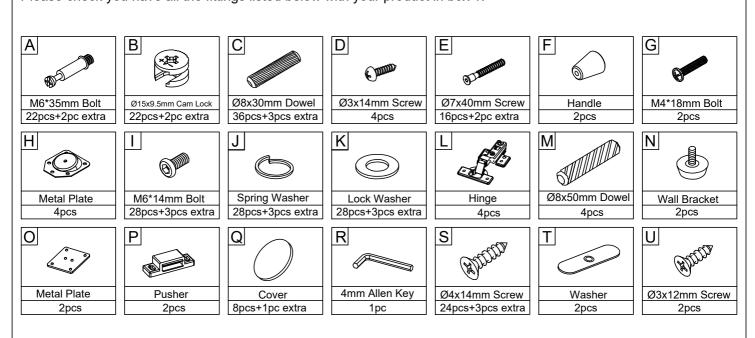

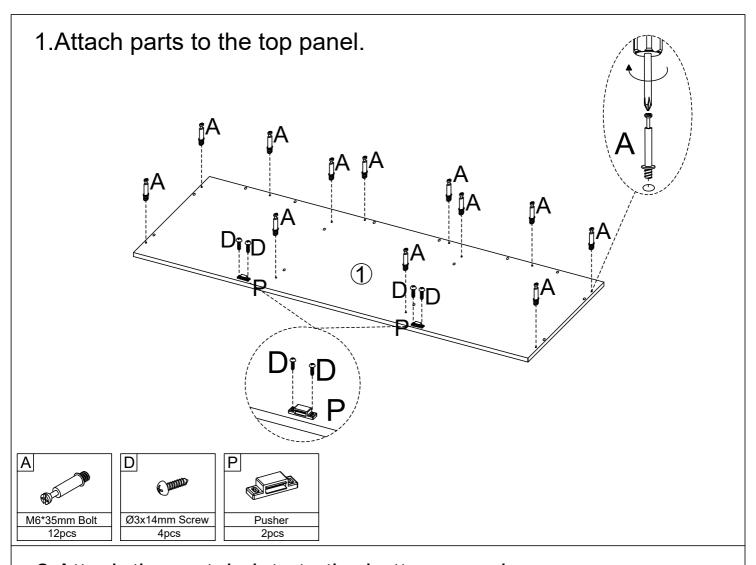


2.Attach the metal plate to the bottom panel.

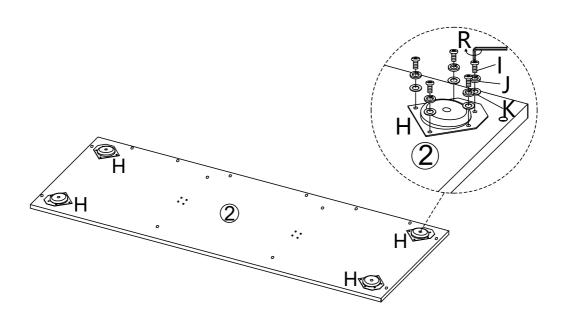

 







 




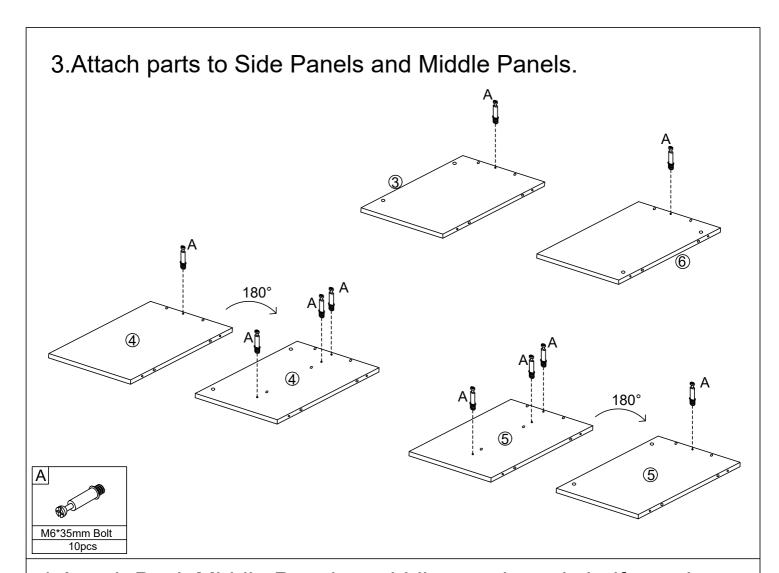


4. Attach Back Middle Panel to middle panels and shelf panel.

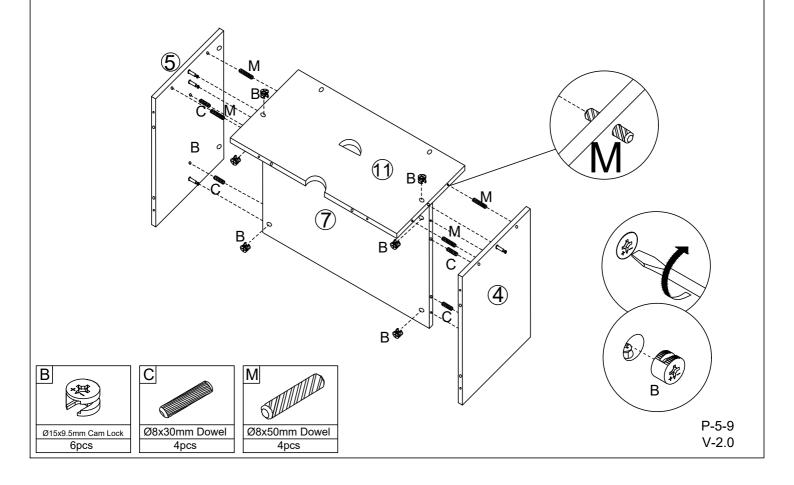

6.Attach bottom panel to the frame.

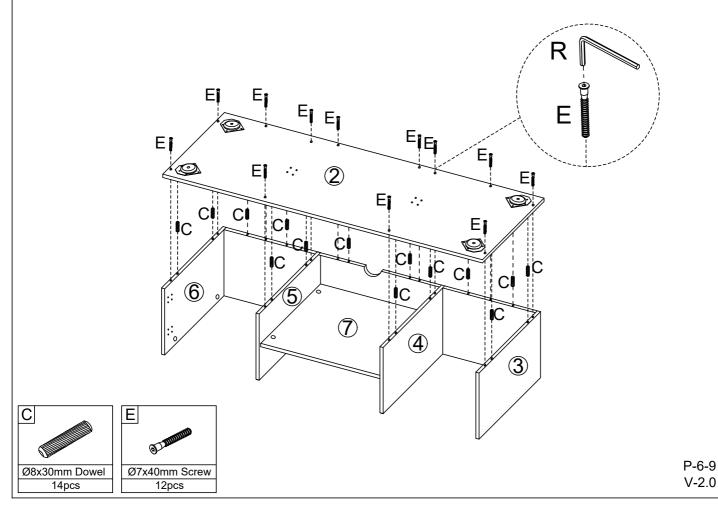


7. Attach middle legs to the frame.

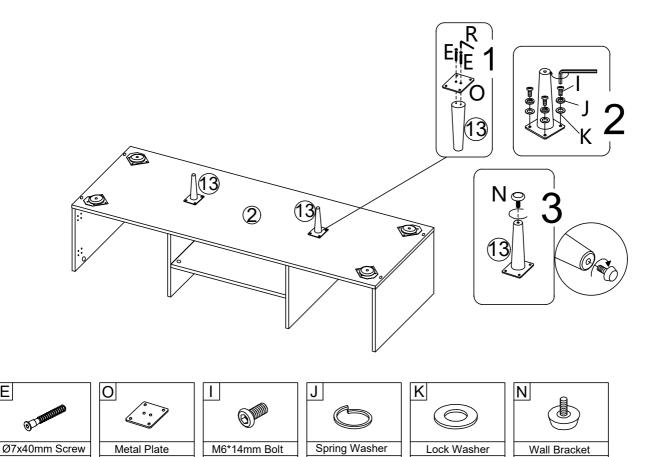


8.Attach legs to the frame.


E

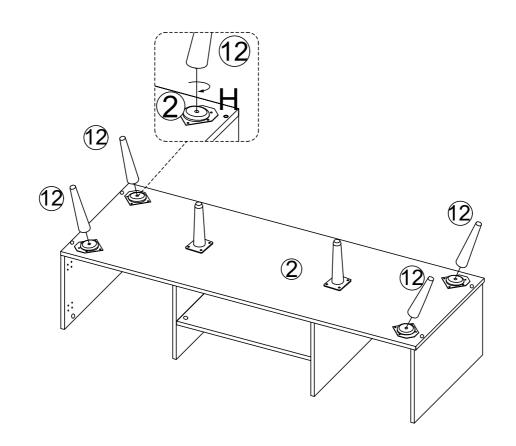


8pcs

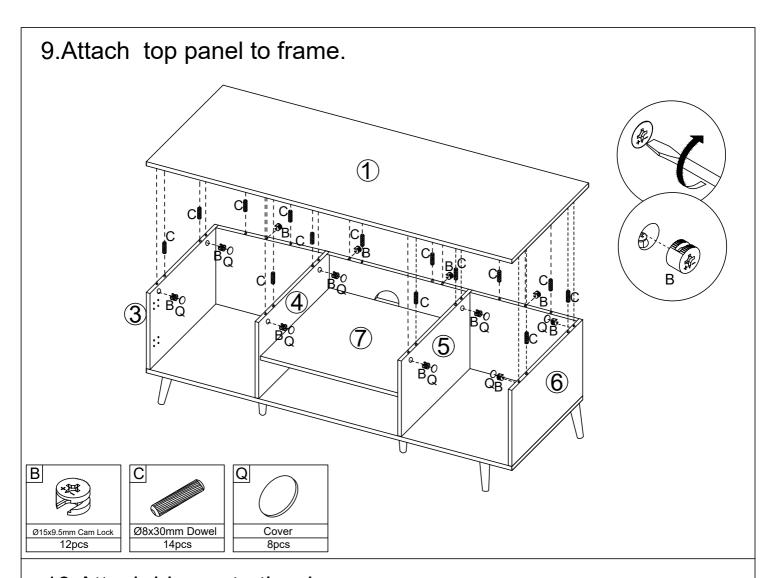



10.Attach hinges to the door.

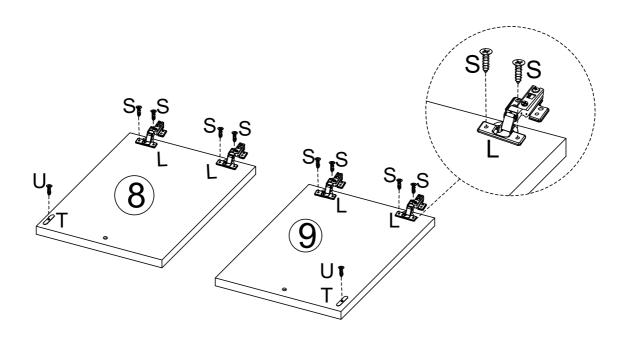



 

 

 

11. Attach door panels to the frame.

