
DUSK.COM

ENOKIW01

SR [₩[C €

ASSEMBLY INSTRUCTIONS

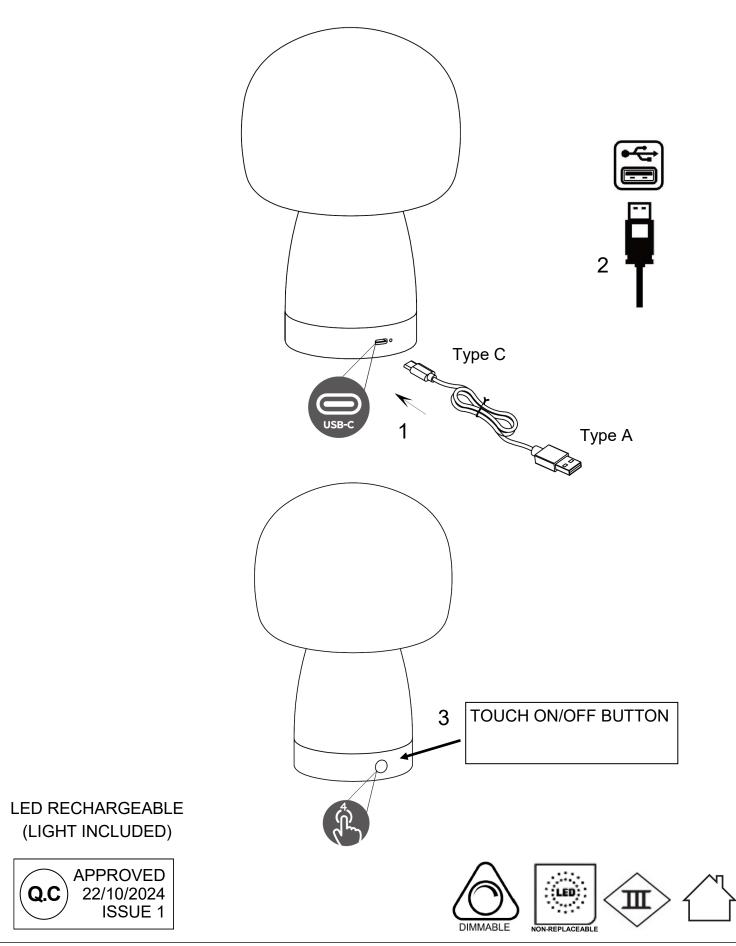



• Safety Information: (Please retain for future reference)

About this product:

- Suitable for indoor use.
- Operation Voltage: 5V~ 1A USB Type C Connection.
- Please remove all the packaging before use.
- Using the USB cable provided attach the Type C connector to the fitting, then attach the USB connector to a suitable USB port to operate this product and recharge the battery.
- Switch product off to fully charge.
- Charging time: 3-4 hrs. Operating time: 5-6 hrs
- Suitable to plug in indoors only.
- This product has a touch on/off button with dimming function.

(ON/15%/50%/100%/OFF)

• This product contain non-replaceable battery and LED lamps, if the LED lamp or battery reach the end of their life the whole product must be replaced.

Warnings:

- This is a decoration product and NOT a toy, keep out of the reach of babies and children.
- If the USB cable is damaged you must dispose of the cable and replaced with new one.



This symbol indicates that the item should be disposed of separately from house hold waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item

from household waste you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment.