

DUSK.COM

 
 
LIVING | BEDROOM | DINING

Range Name : EVIE


Box 1 Dimensions : W162xD54xH18.5cm

Product Dimension : W147xD40xH61cm

Evie TV Unit

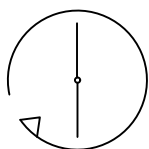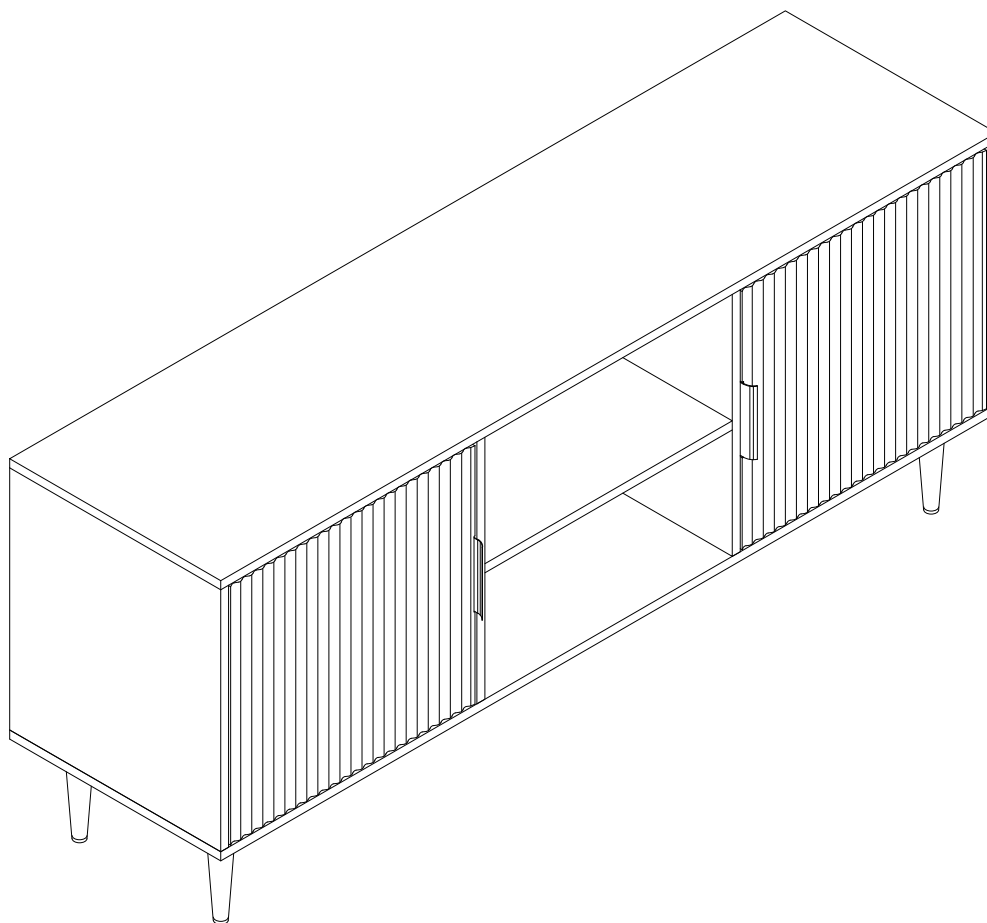

Up to 30 minutes
assembly time

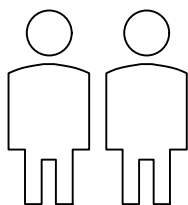 

Two person
assembly

This product is intended for domestic use only, not for commercial purposes.

P-1-12
V-2.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Evie TV Unit frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Evie TV Unit in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

 
RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Evie TV Unit when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

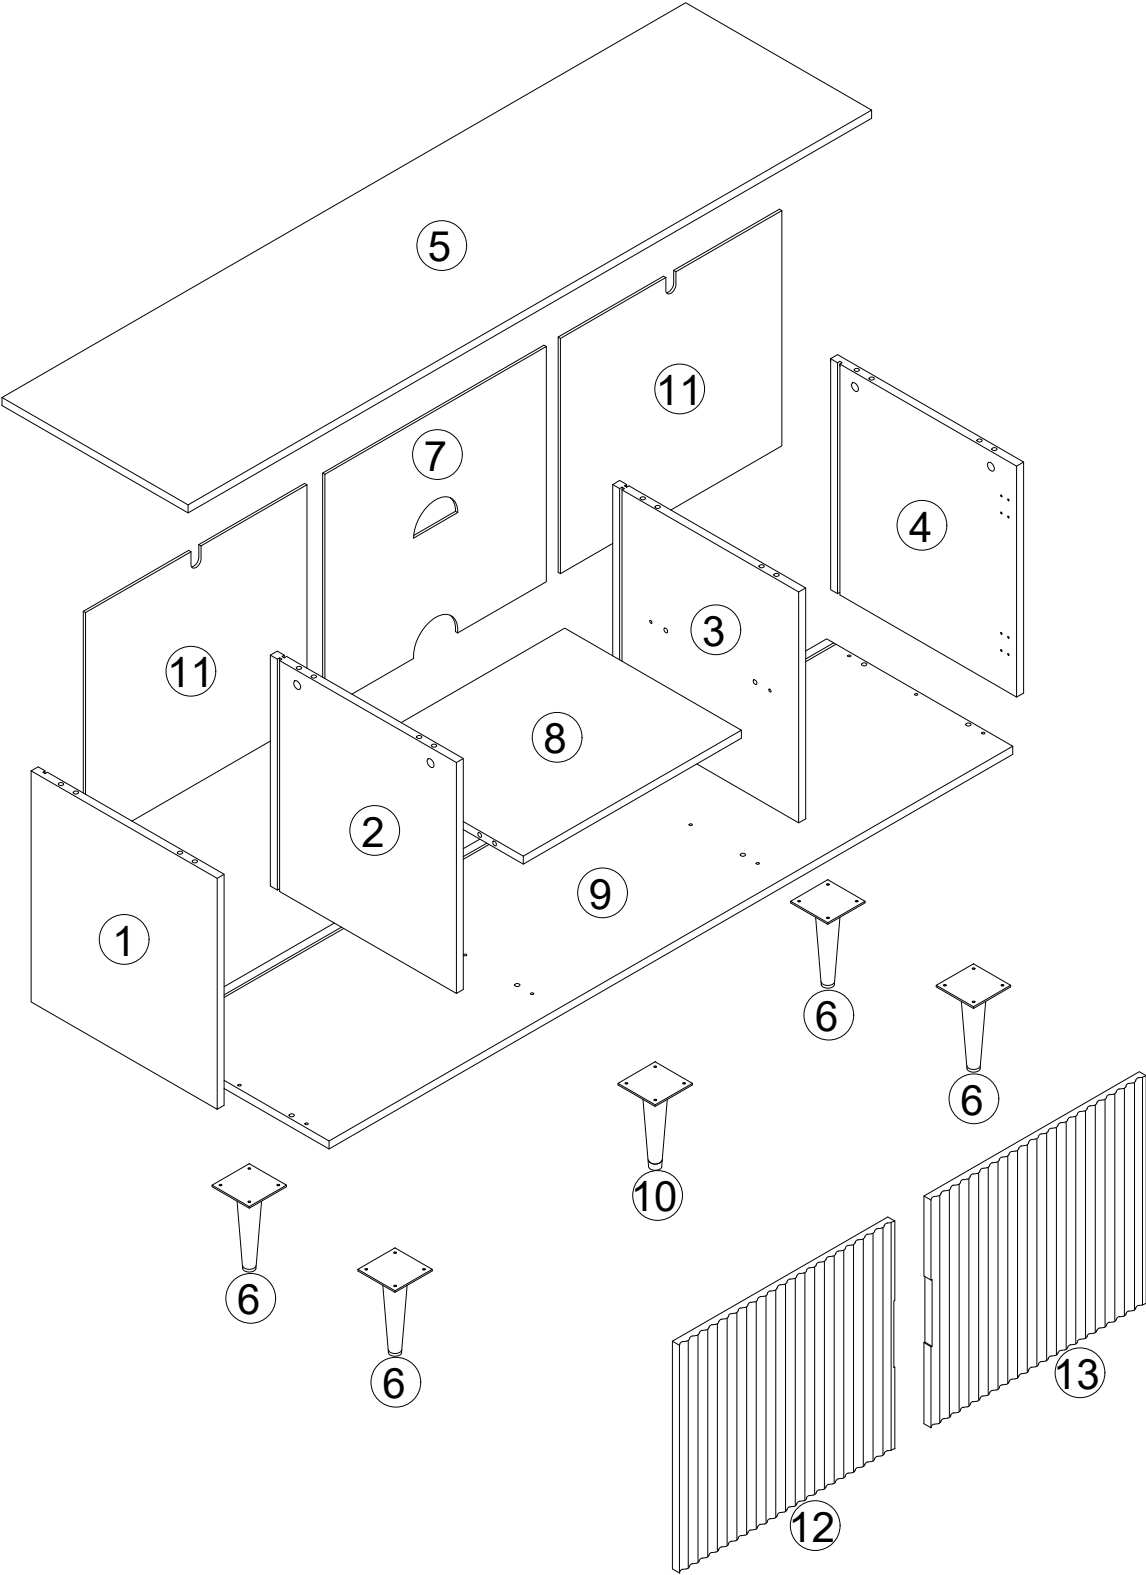

 
 
 






 




 
 

 
Parts list

Before you begin building your Evie TV Unit, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.


Part Number	Part Description	Quantity	Box No
①	Left Side Panel	1pc	Box 1
②	Left Middle Panel	1pc	Box 1
③	Right Middle Panel	1pc	Box 1
④	Right Side Panel	1pc	Box 1
⑤	Top	1pc	Box 1
⑥	Leg	4pcs	Box 1
⑦	Back Middle Panel	1pc	Box 1
⑧	Shelf Panel	1pc	Box 1
⑨	Bottom Panel	1pc	Box 1
⑩	Centre Leg	1pc	Box 1
⑪	Back Panel	2pcs	Box 1
⑫	Left Door Panel	1pc	Box 1
⑬	Right Door Panel	1pc	Box 1

Fittings







Please check you have all the fittings listed below with your product in box 1.

A 	B 	C 	D 	E 
M6*35mm Bolt 12pcs+1pc extra	Ø15x9.5mm Cam Lock 12pcs+1pc extra	Ø8x30mm Dowel 20pcs+2pcs extra	M3.5*12mm Screw 6pcs	M3*14mm Screw 16pcs+1pc extra
F 	G 	H 	I 	J 
M4*35mm Screw 2pcs	M5*40mm Screw 12pcs+1pc extra	3mm Allen Key 1pc	15x9mm Plastic Buckle 12pcs+1pc extra	Handle 2pcs
K 	L 	M 	N 	O 
M4*14mm Screw 22pcs+2pcs extra	Wall Bracket 2pcs	Washer 2pcs	Ø6x30mm Wall Plug 2pcs	Hinge 4pcs
P 	Q 	R 		
Pusher 2pcs	M4*14mm Screw 24pcs+2pcs extra	Adjustable Foot Pre-assembled 1pc		



 
Pre-assembled Fittings.

R 
Adjustable Foot Pre-assembled 1pc

    
 
 
1.Attach parts to panels.

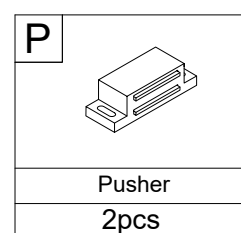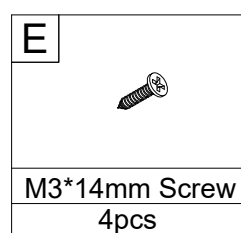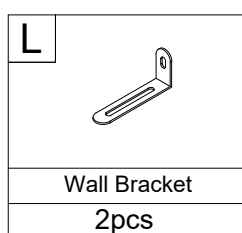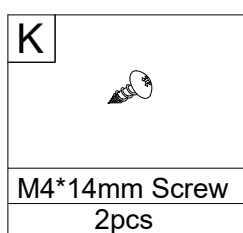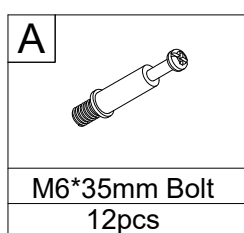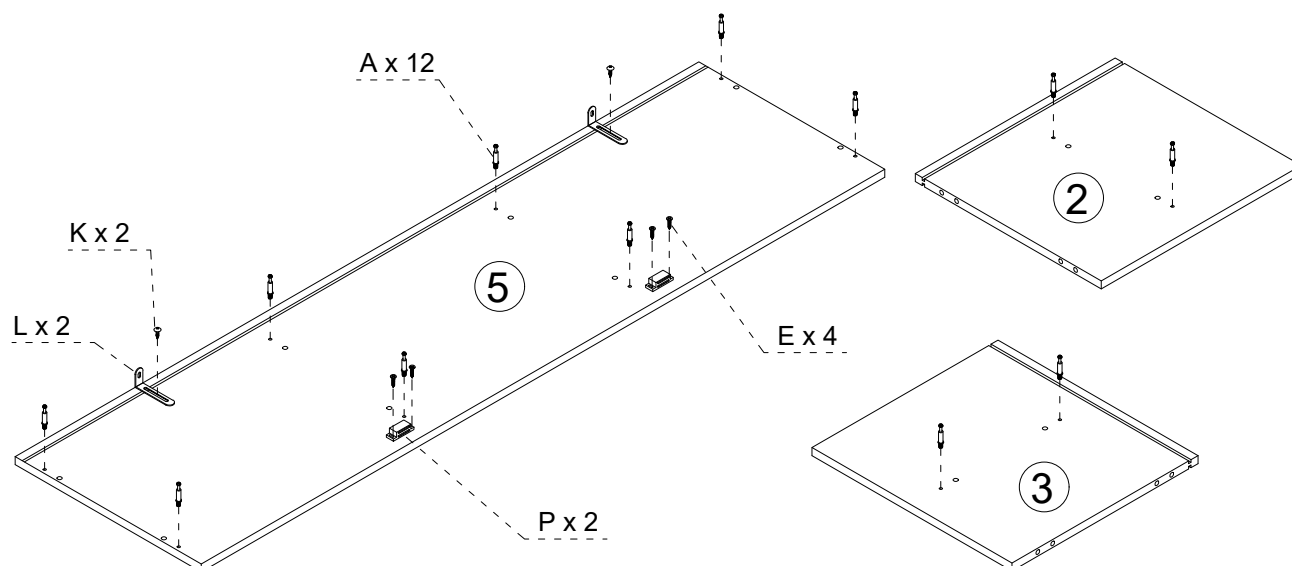


2.Attach shelf panel to middle panels.

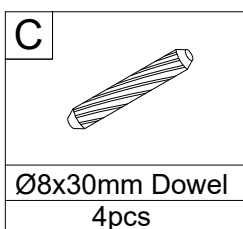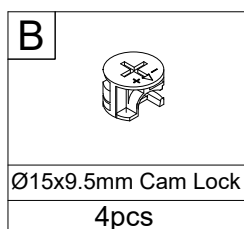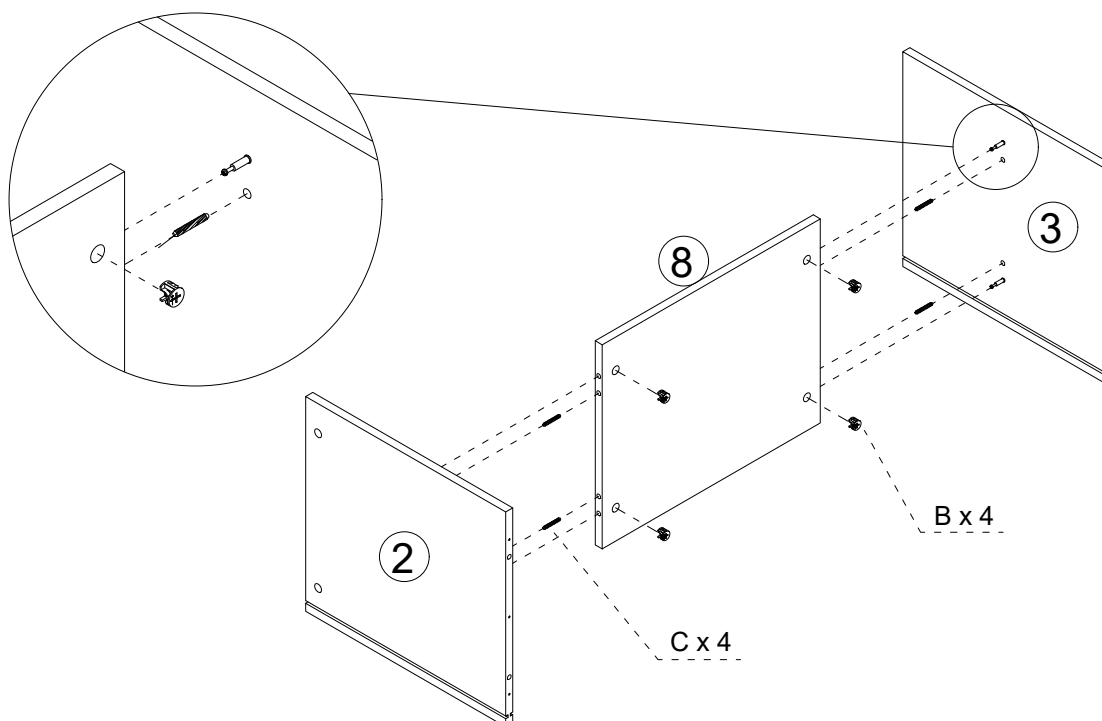   





3. Attach panels to Top.

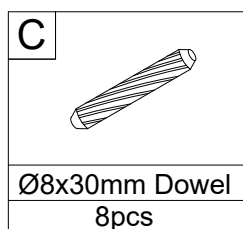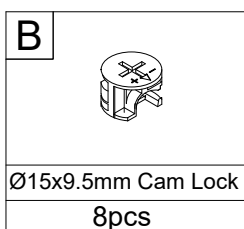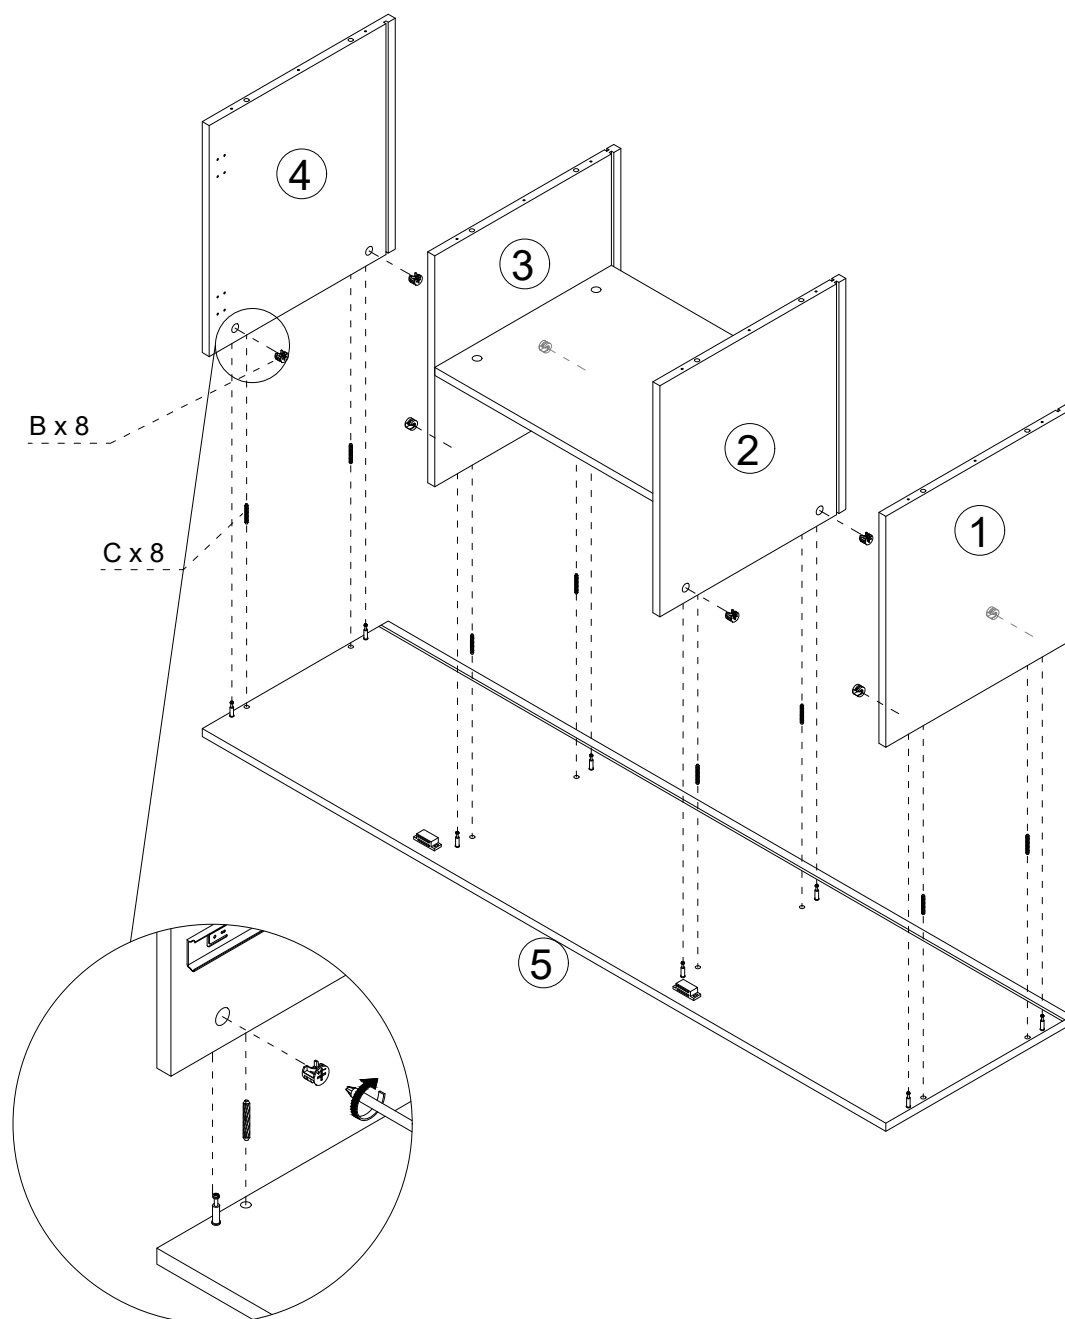   

 
4.Assemble back panels.

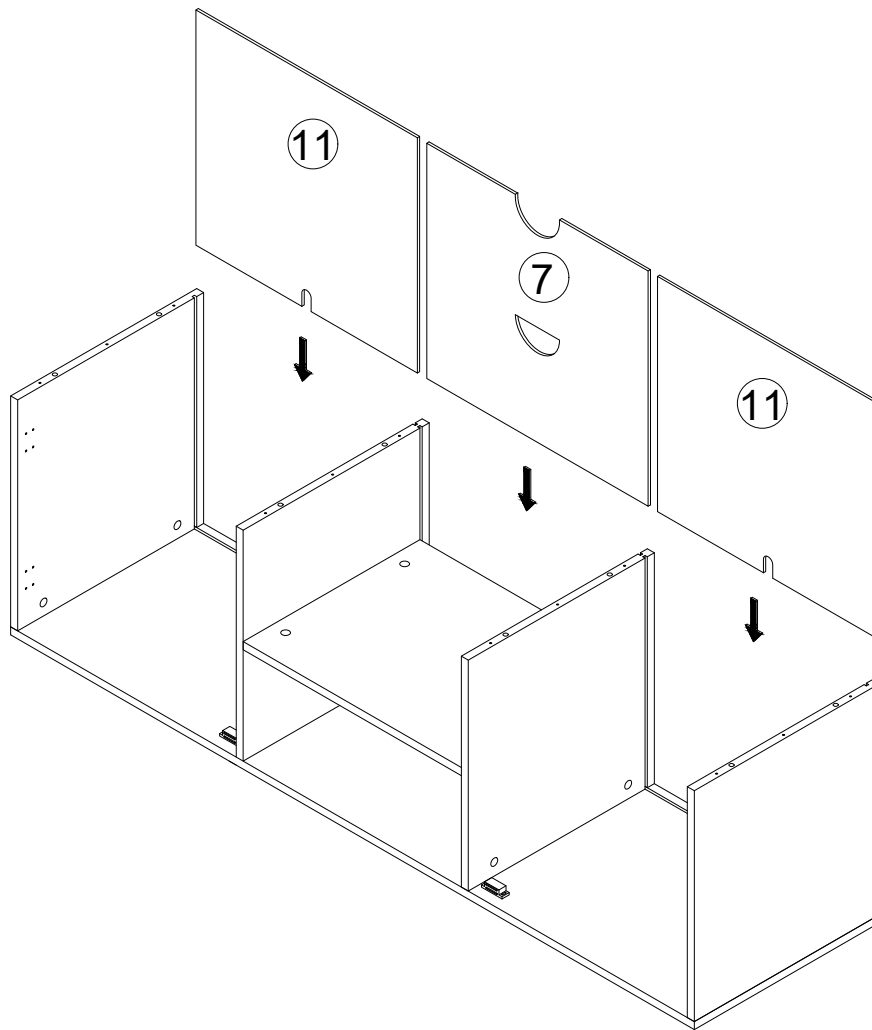


5. Attach bottom panel to the frame.

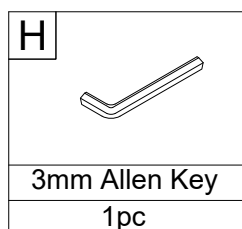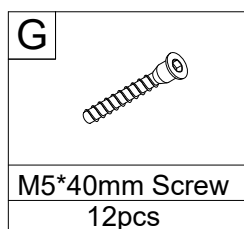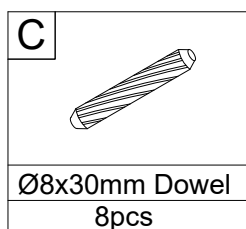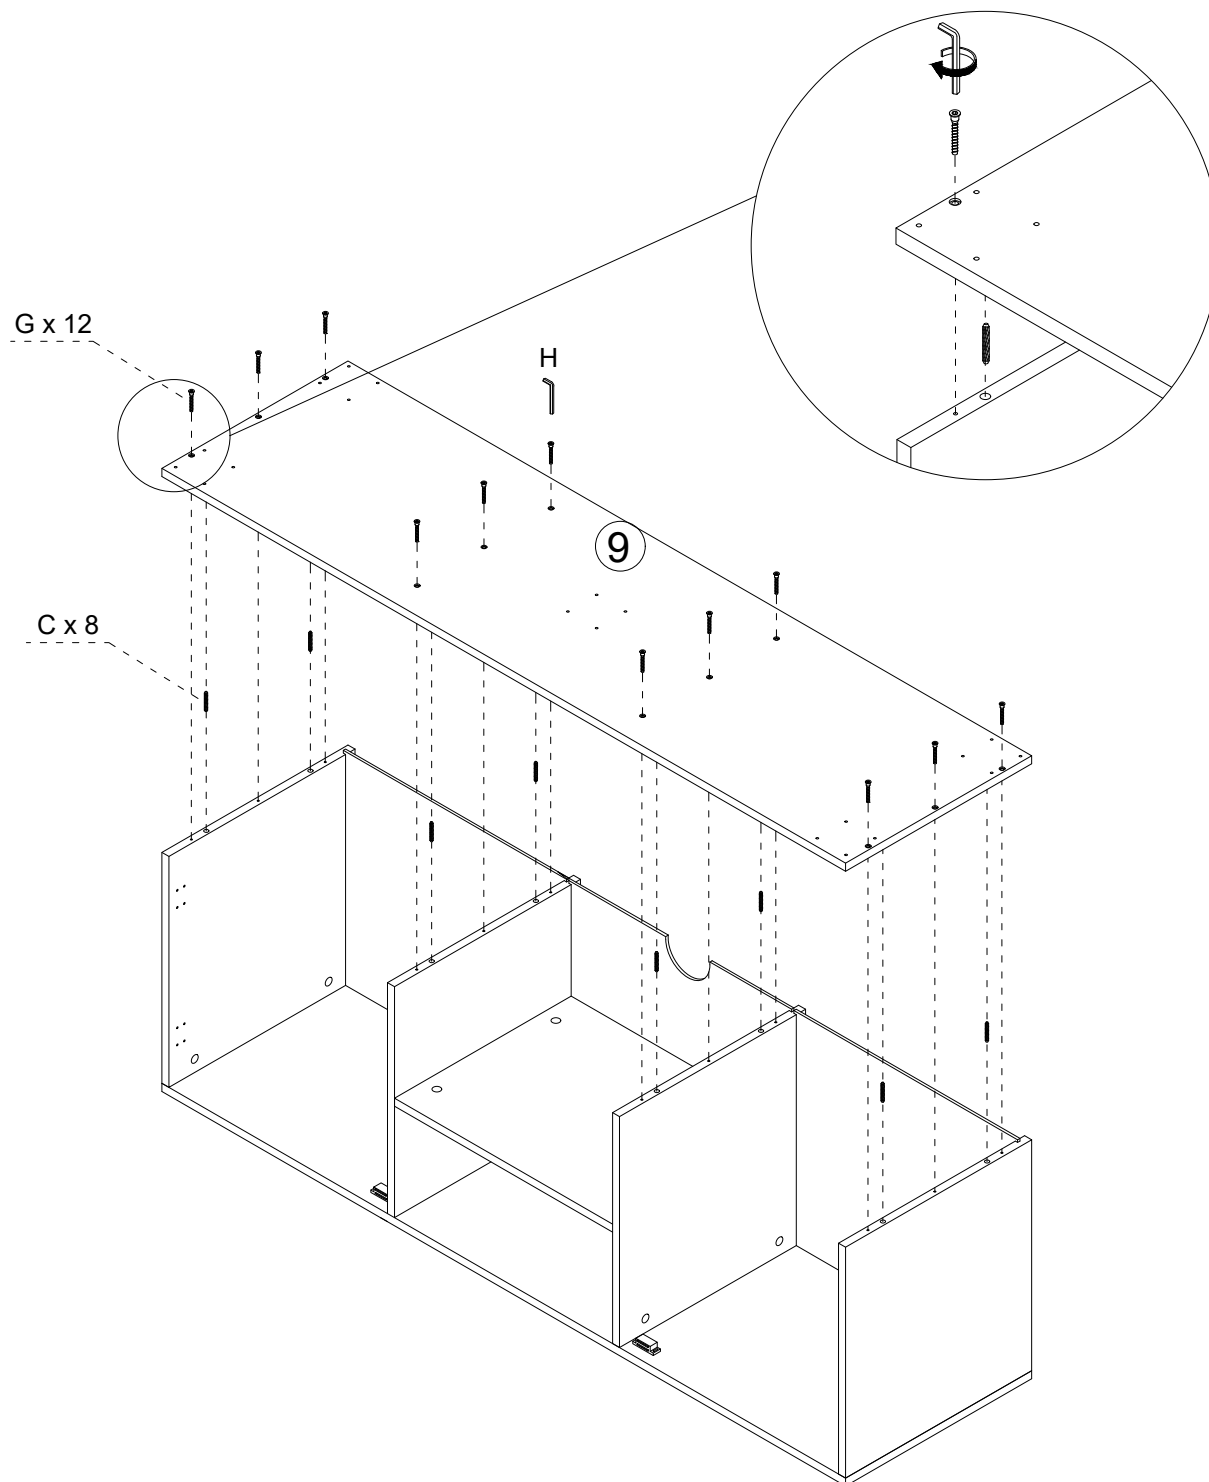    



6. Attach legs to the frame.

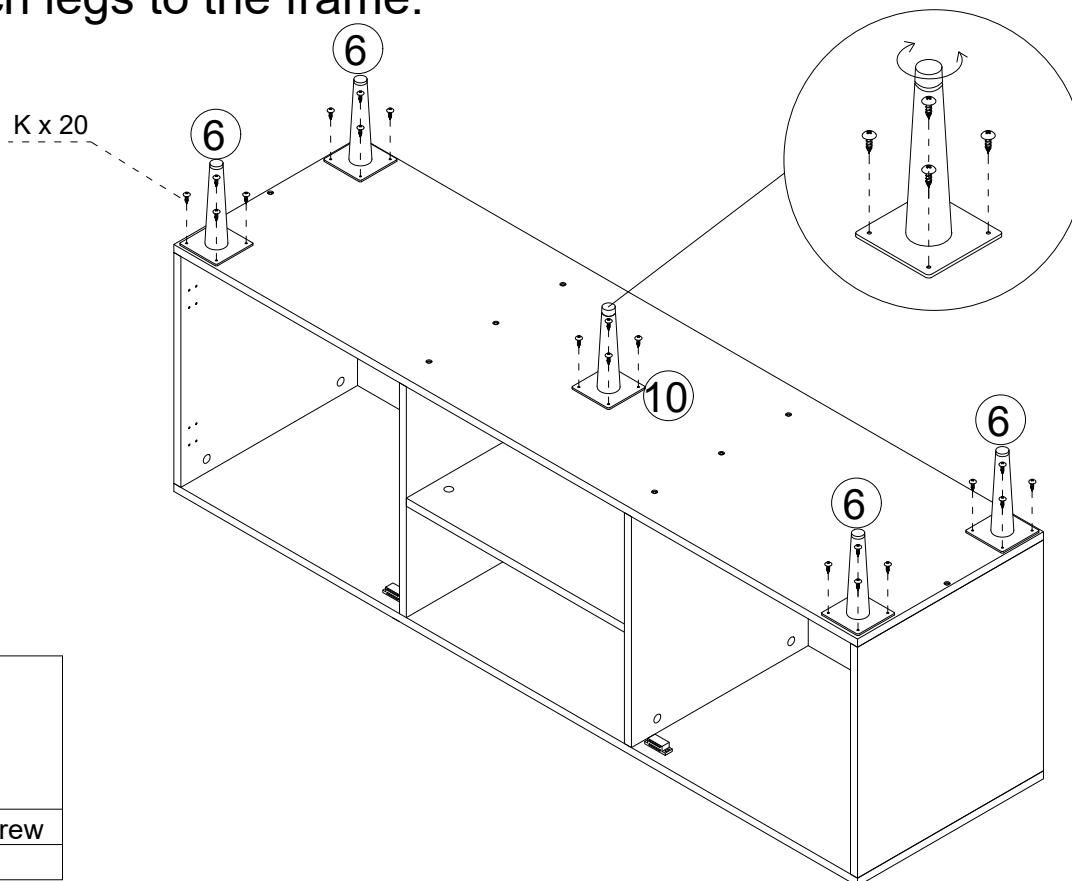 


K	
M4*14mm Screw	
20pcs	






 
7. Attach plastic buckles.

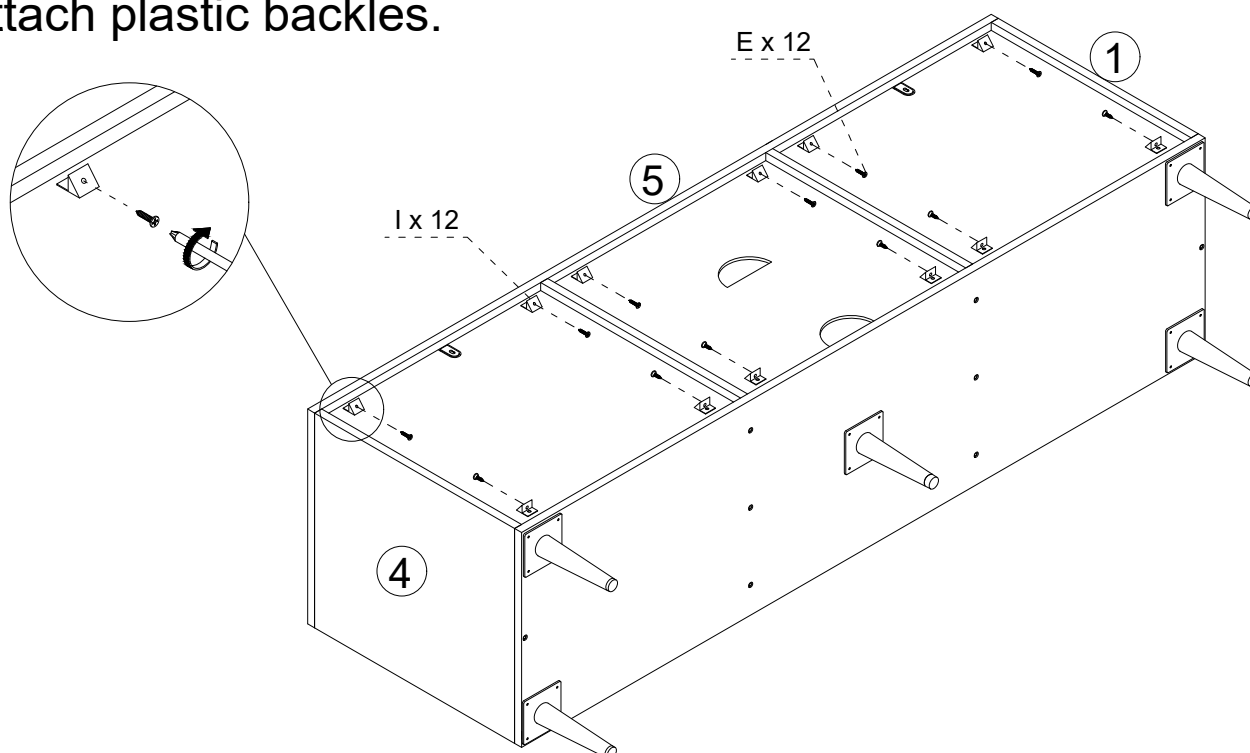



E	
M3*14mm Screw	
12pcs	

I	
15x9mm Plastic Buckle	
12pcs	

      8. Attach hinges to the door.

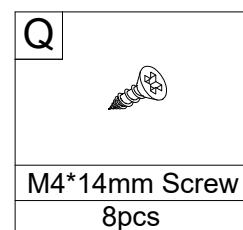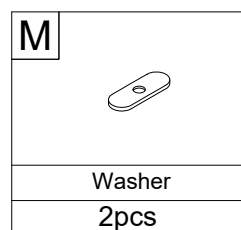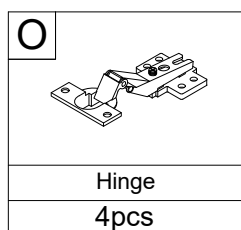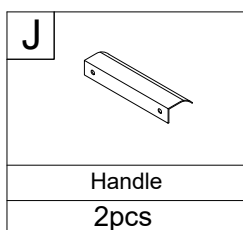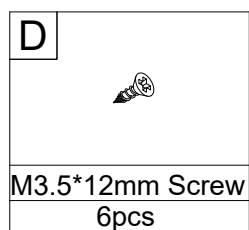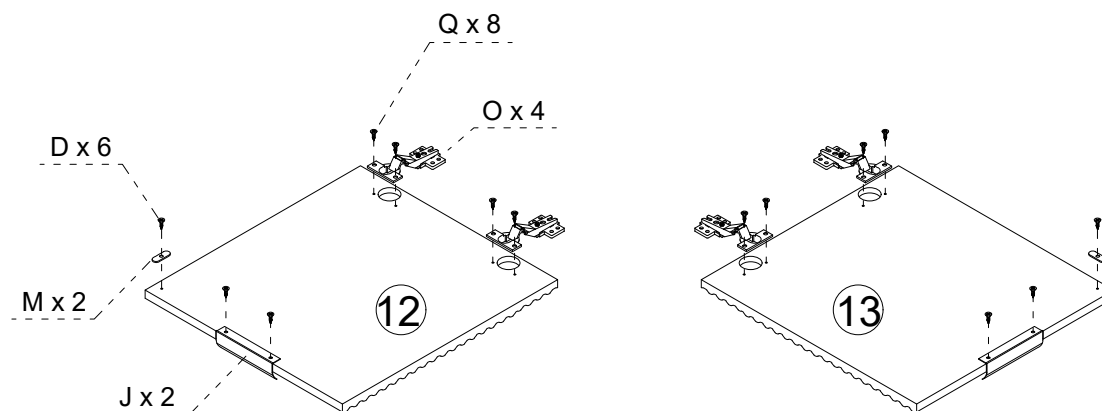

9. Attach door panels to the frame.

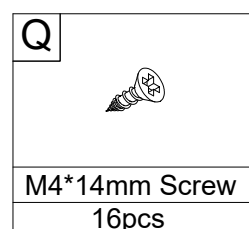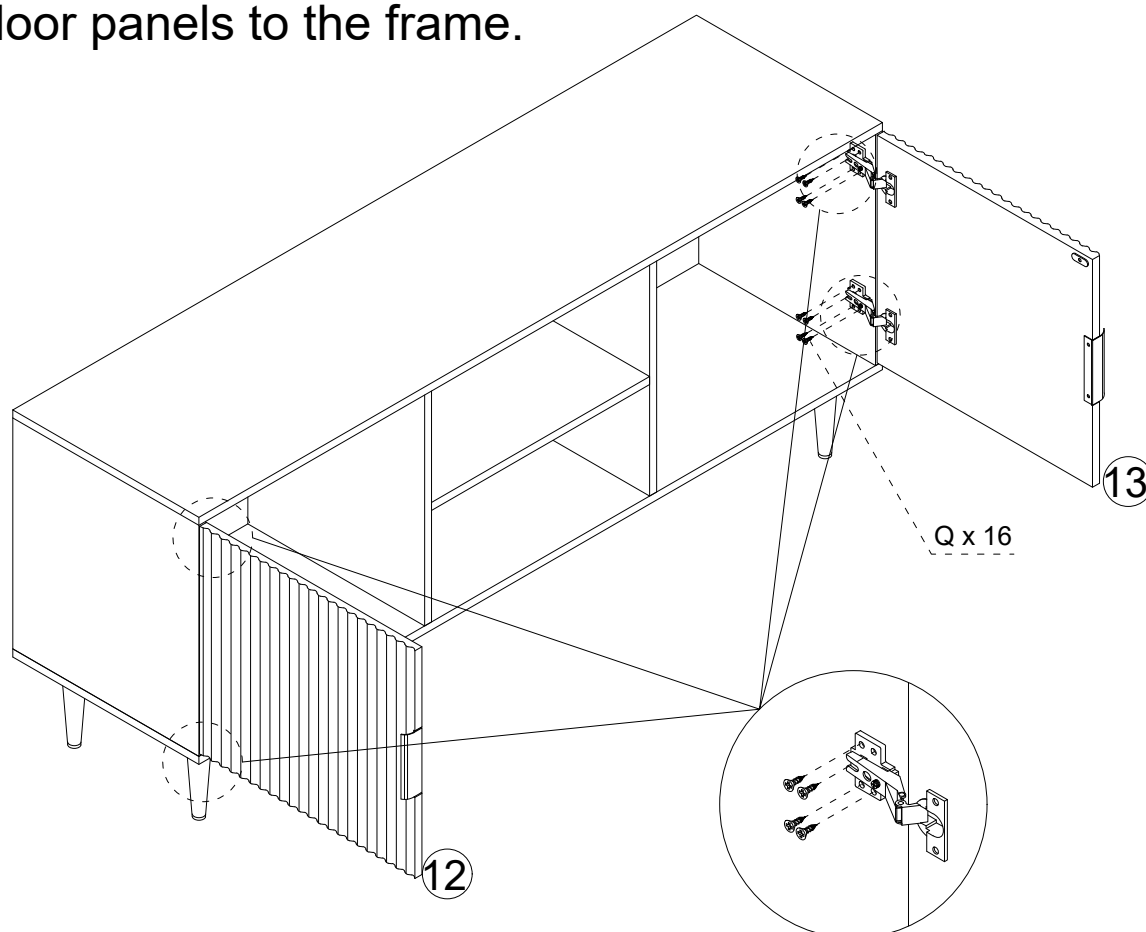  

10. Fix the L-shaped Bracket to the wall.

