

DUSK.COM

LIVING | BEDROOM | DINING

Range Name: Poppy/Nell

Box 1 Dimensions (Body): W146xD47xH11cm

 
Poppy Top Box Dimensions: W148xD45xH5cm

Nell Top Box Dimensions: W150.5xD46.5xH5cm

Poppy Product Dimensions: W137xD38.5xH45cm

Nell Product Dimensions: W140xD40xH45cm


TV Unit

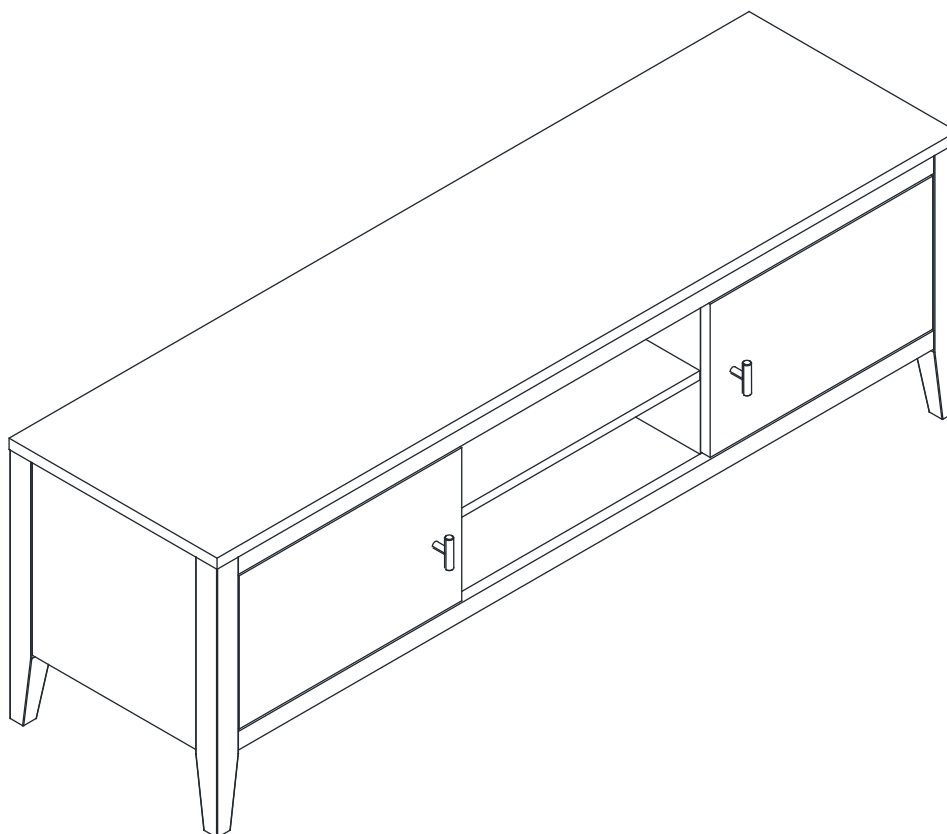

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



 45 minutes approx
assembly time

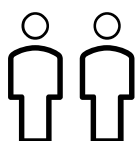

Two adults
assembly required

This product is intended for domestic use only, not for commercial purposes.

P-1-12
V-2.0

Important

Assembly Tip

Before you begin, we advise laying everything out on a clean and soft level surface to avoid damaging the unit or your floor. It's best to identify all of the parts and fittings to build your TV unit, and to familiarise yourself with all of the parts and fittings before building.

Top Tip

We recommend that you build your new TV unit in the room you'd like it to be located. This will help prevent any risk of damage to the product whilst moving it.

Safety and Care

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this TV unit which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. The installation of anti tipping kit to secure your furniture is strongly suggested.
9. Serious or fatal crushing injuries can occur from tipping furniture.

Help and Support

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

Recycling

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

 
Care and Maintenance

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
3. Do not scrub or rub the surface when cleaning.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
4. Do not drag the TV unit when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the change of the humidity and temperature.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts checklist

Please check you have all the parts listed below with your product:
Do not discard any of the packaging until you have checked that you have all the parts and the pack of fixings.

 
 
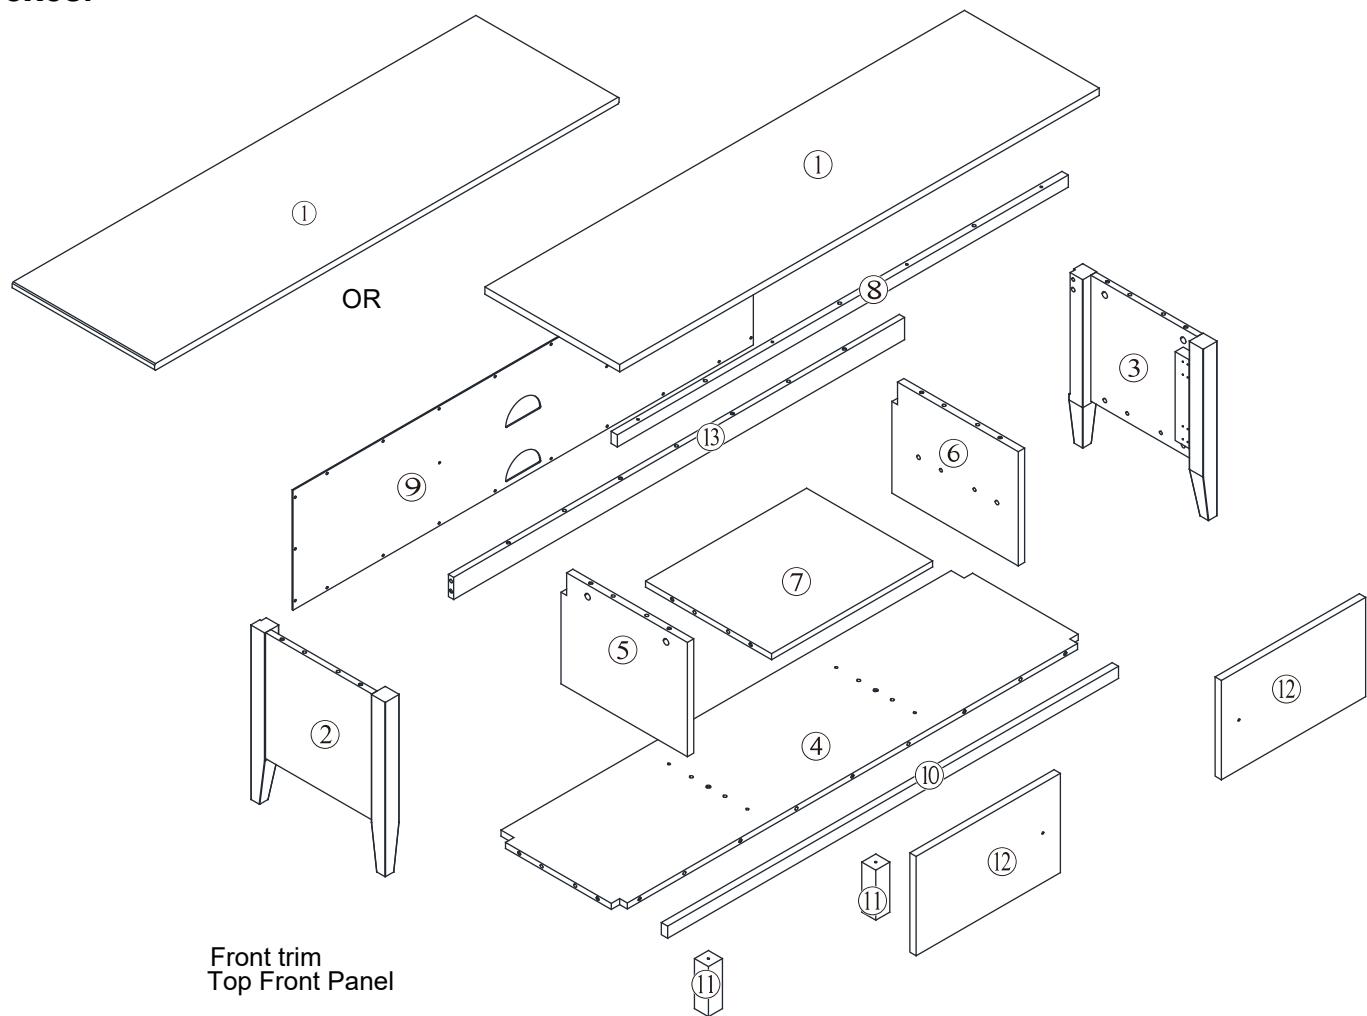 



 

 
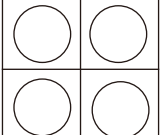 
 
 
Note: There are 2 styles of Part 1, both assemble identically so please follow the same instructions for whichever style you have chosen. Part 1 is packed in other boxes.




Part Number	Part Description	Quantity	Box No	Part Number	Part Description	Quantity	Box No
①	Top	1PC	separate packaging	⑧	Top Trim	1PC	Box 1
②	Left Side Panel With Slide	1PC	Box 1	⑨	Back Panel	1PC	Box 1
③	Right Side Panel With Slide	1PC	Box 1	⑩	Bottom Front Trim	1PC	Box 1
④	Bottom Panel	1PC	Box 1	⑪	Support Feet	2PCS	Box 1
⑤	Left Divider Panel	1PC	Box 1	⑫	Door	2PCS	Box 1
⑥	Right Divider Panel	1PC	Box 1	⑬	Back Rail	1PC	Box 1
⑦	Fixed Shelf	1PC	Box 1				

Fittings checklist

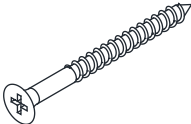
Please check you have all the fittings listed below with your product (in box 1):

 (A) M5x50mm Screw x6pcs(+1 extra)	 (B) M7.8x30mm Wood dowel x33pcs(+2 extra)	 (C) 36mm Cam bolt x27pcs
 (D) M15x9.5mm Cam x27pcs	 (E) M4x35mm Screw x5pcs	 (F) Hinge x4pcs
 (G) Screw M4x20mm or M4x16mm x2pcs	 (H) M3x14mm Screw x24pcs(+2 extra)	 (I) 20x20mm Felt pad x4pcs
 (J) M20 Sticker x8pcs(+1 extra)	 (K) M4x14mm Screw x24pcs	 (L) Adjustable Foot x2pcs

 
Separate Packaging.


Handle x2pcs
Screw M4x20mm x2pcs

 
OR


Handle x2pcs
Screw M4x16mm x2pcs

OR



Handle x2pcs
Screw M4x20mm x2pcs

OR


Handle x2pcs
Screw M4x20mm x2pcs

Note: We have 4 styles of handle, all assemble identically so please follow the same instructions for all. Handle and corresponding screws are packaged separately.

 Bolt Length Ruler:



Tool required

  Crosshead Screwdriver (not provided)

Helpful hints

WARNING: Open and close the doors to make sure they are aligned and shut correctly. If necessary, adjust the screws and bolts for a good fit.

1

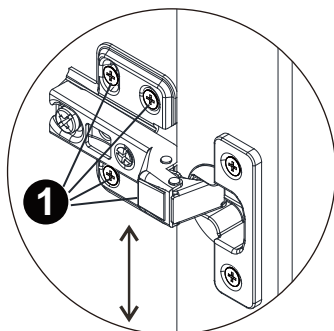 


Figure 1: Adjust these 4 screws to adjust the up and down direction of the door.

2

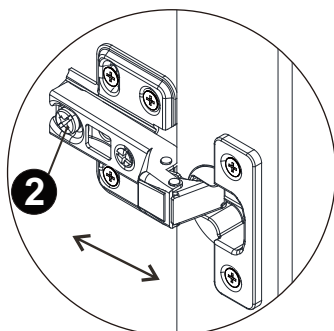 


Figure 2: Adjust the bolt to adjust the front and rear direction of the door.

3


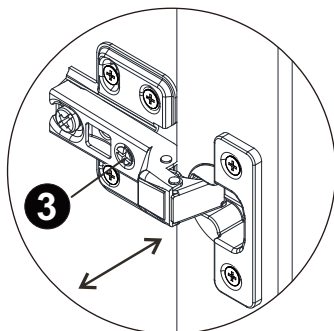 


Figure 3: Adjust the bolt to adjust the left and right direction of the door.

Step 1:


 
③ 5pcs

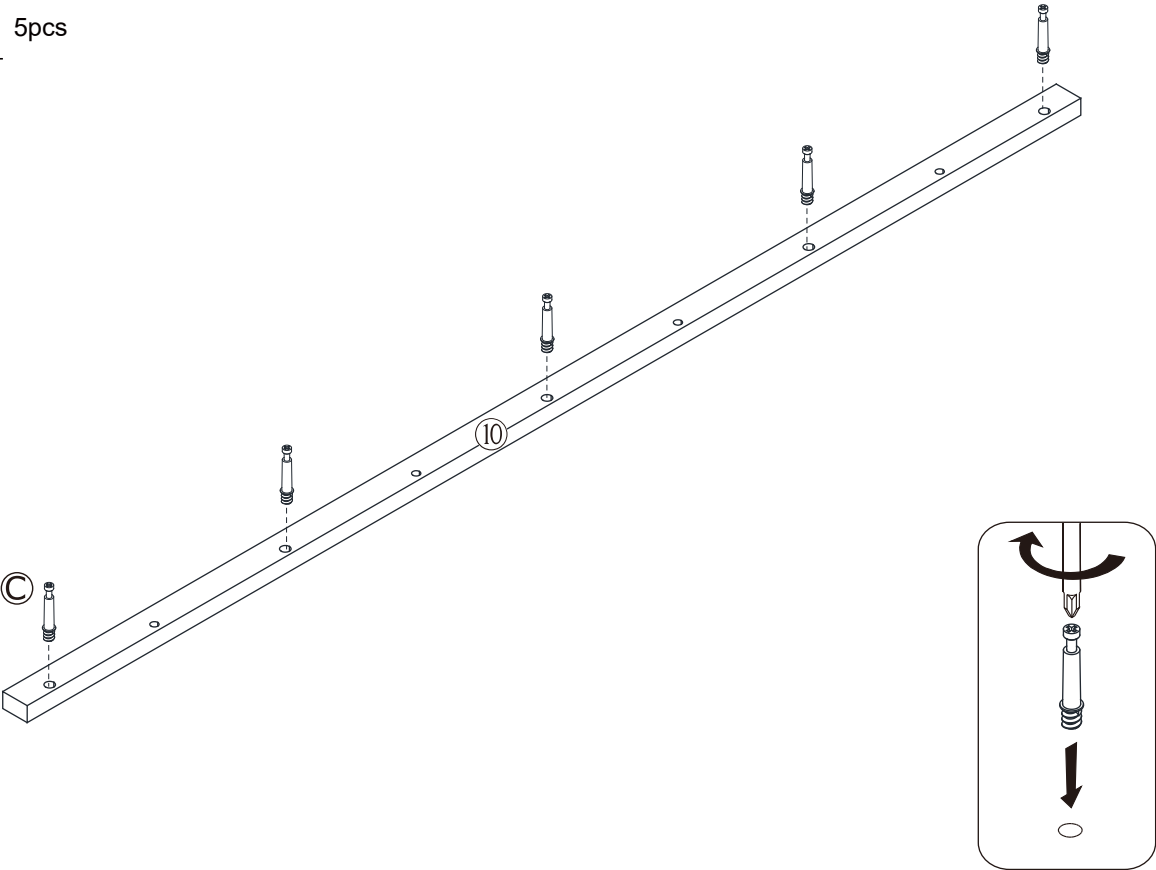


Step 2:

② 4pcs

 
 
④ 5pcs

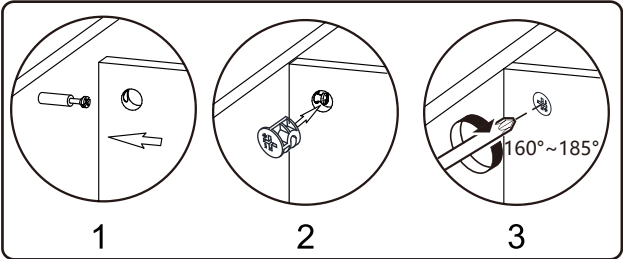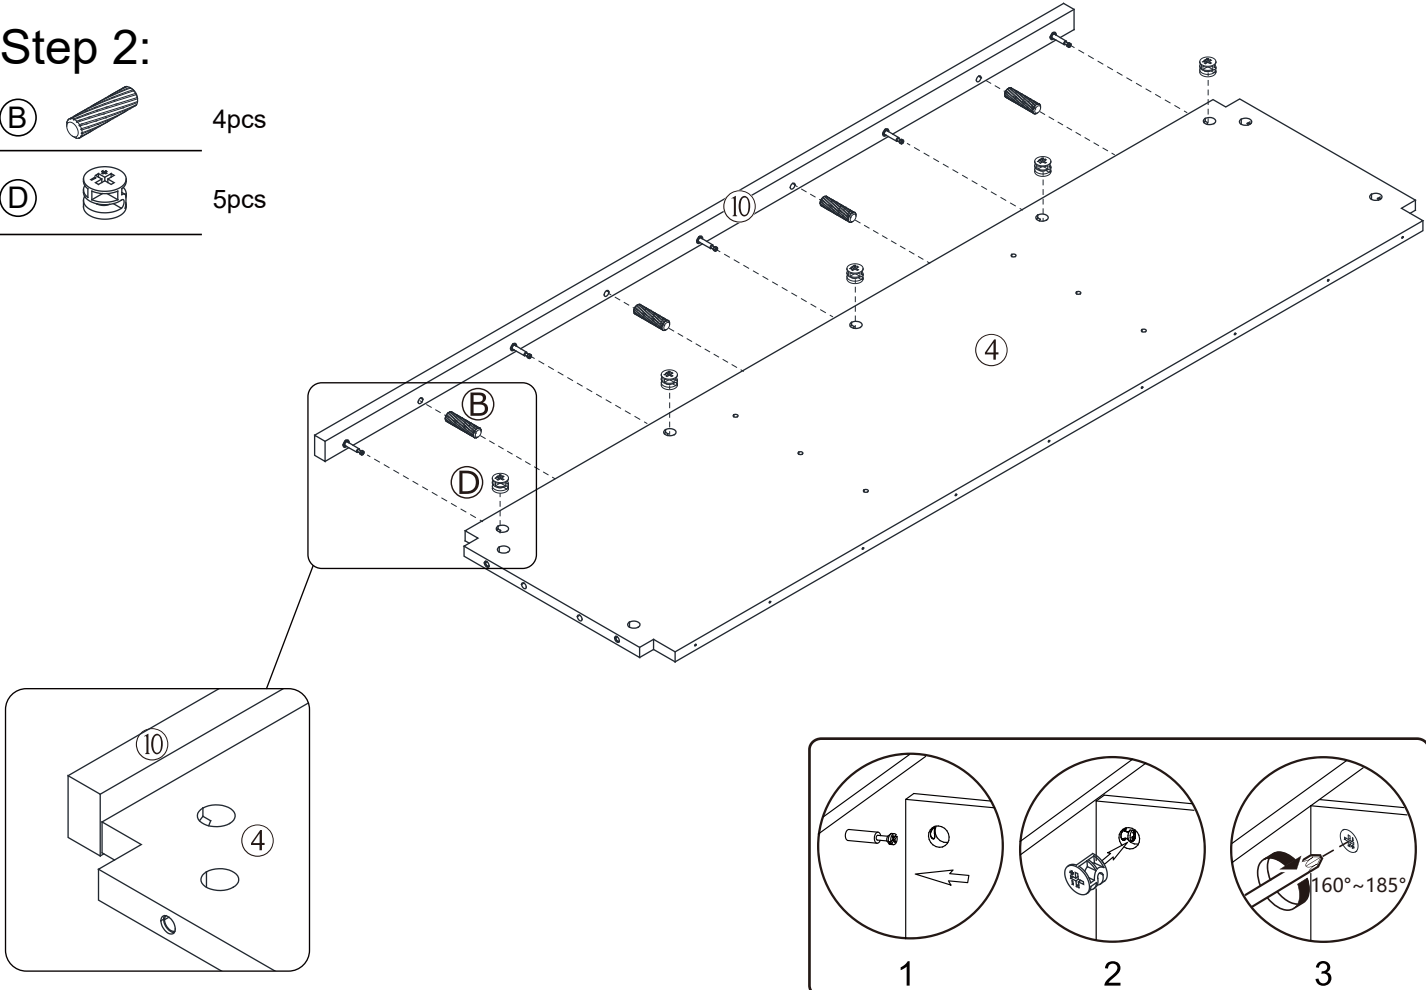


 
Step 3:

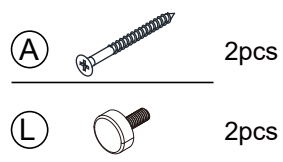

x2

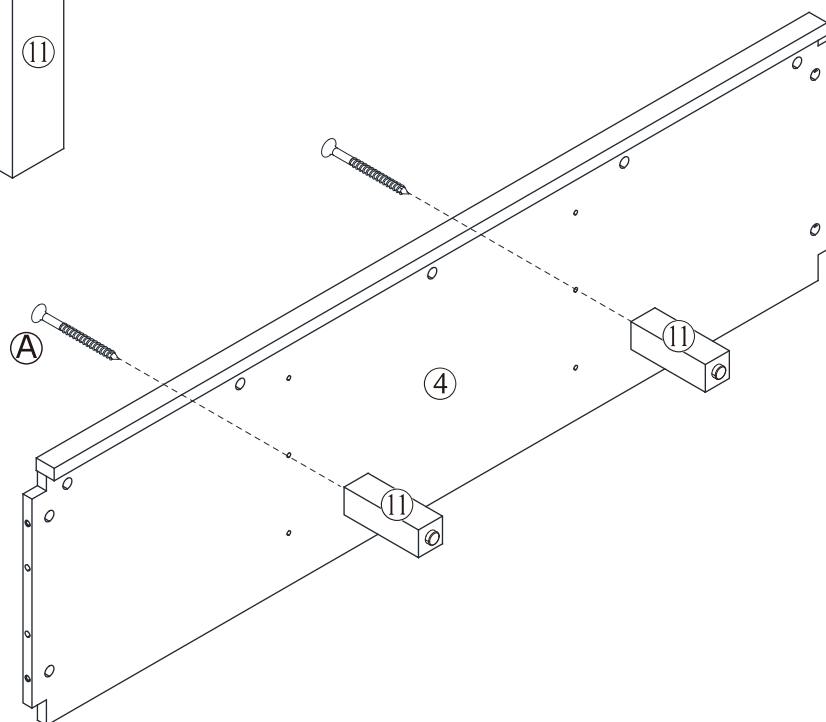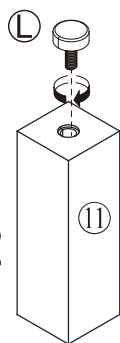  

  
Step 4:

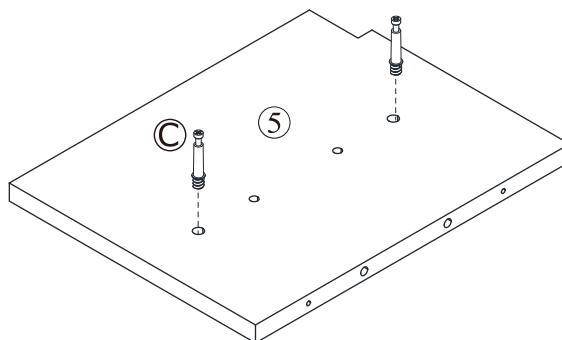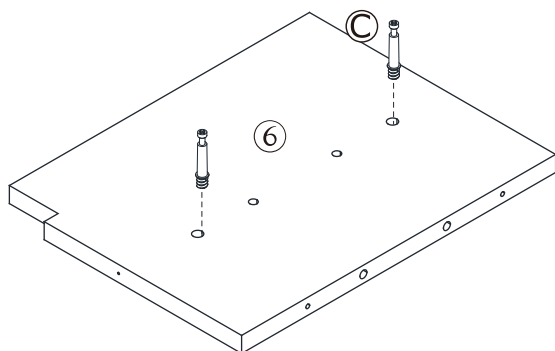

Step 5:

Ⓑ  4pcs

 
Ⓓ  4pcs

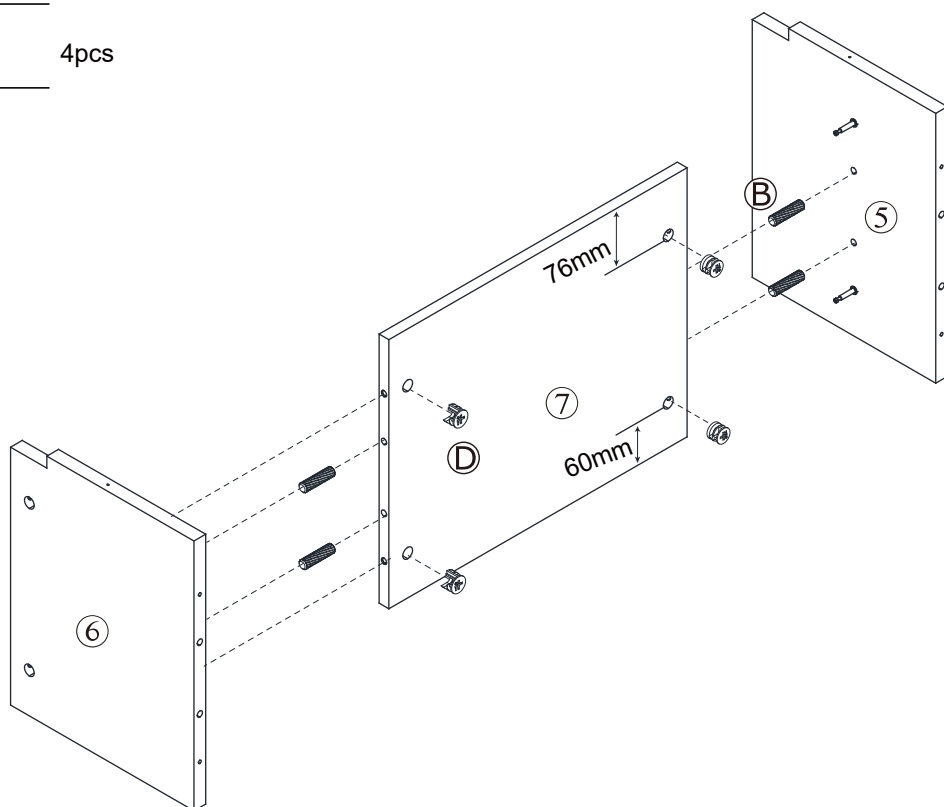

Step 6:


Ⓐ  4pcs

 Ⓑ  4pcs

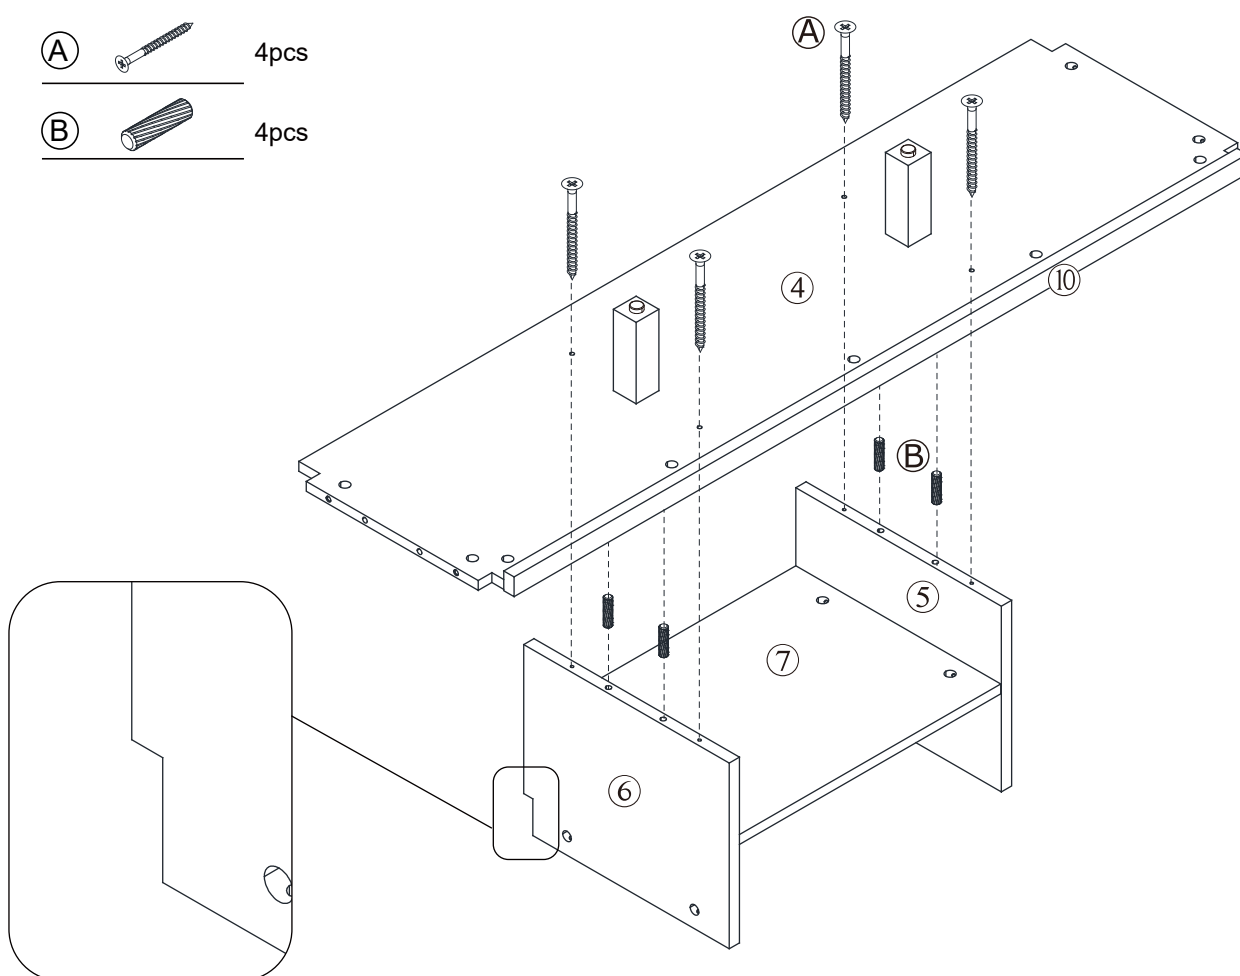


Step 7:

 Ⓒ 3pcs

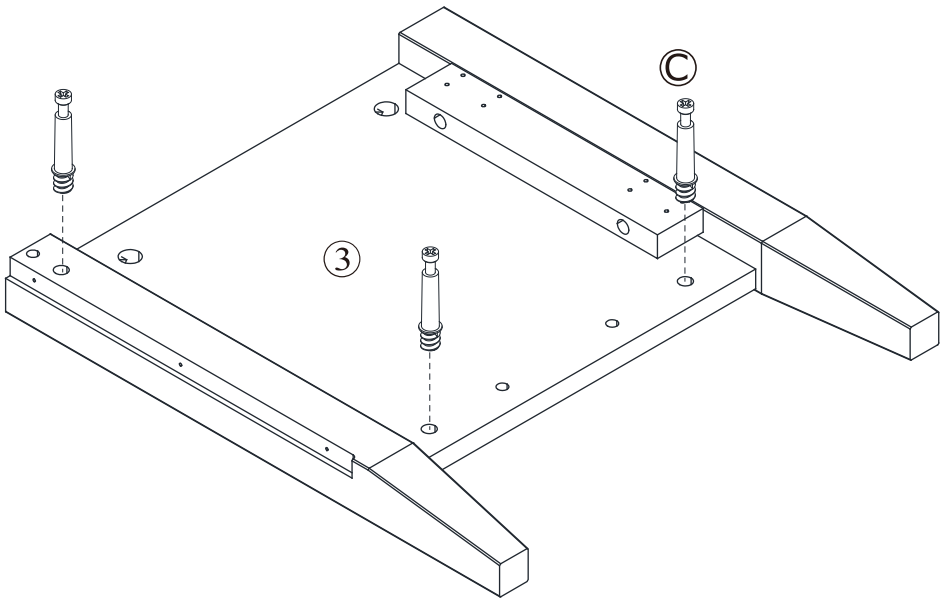



 Step 8:

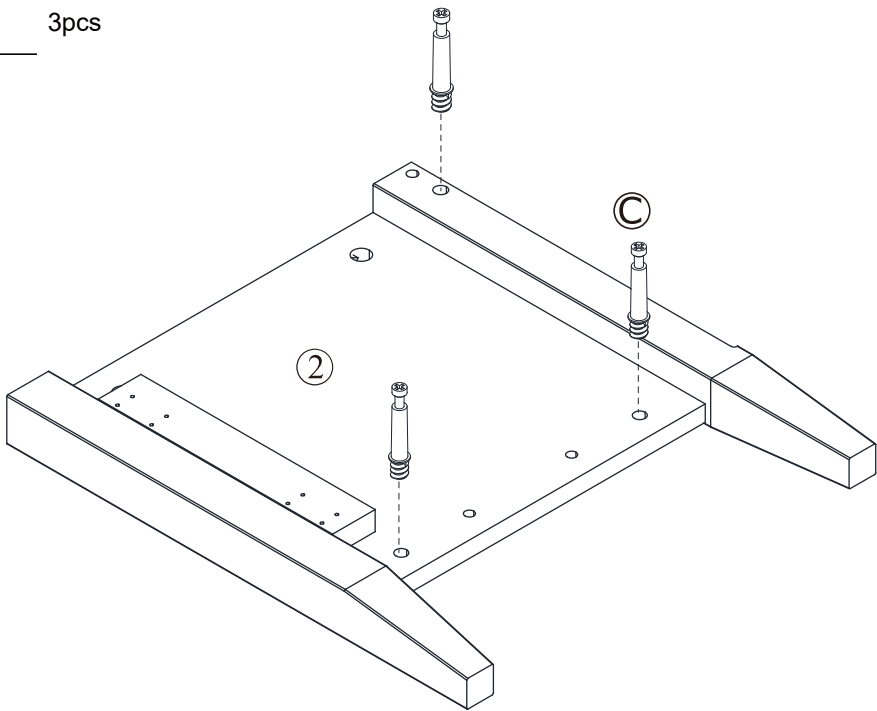
Ⓒ 3pcs





Step 9:


- B

 6pcs


- D

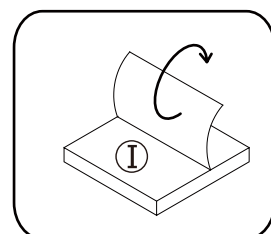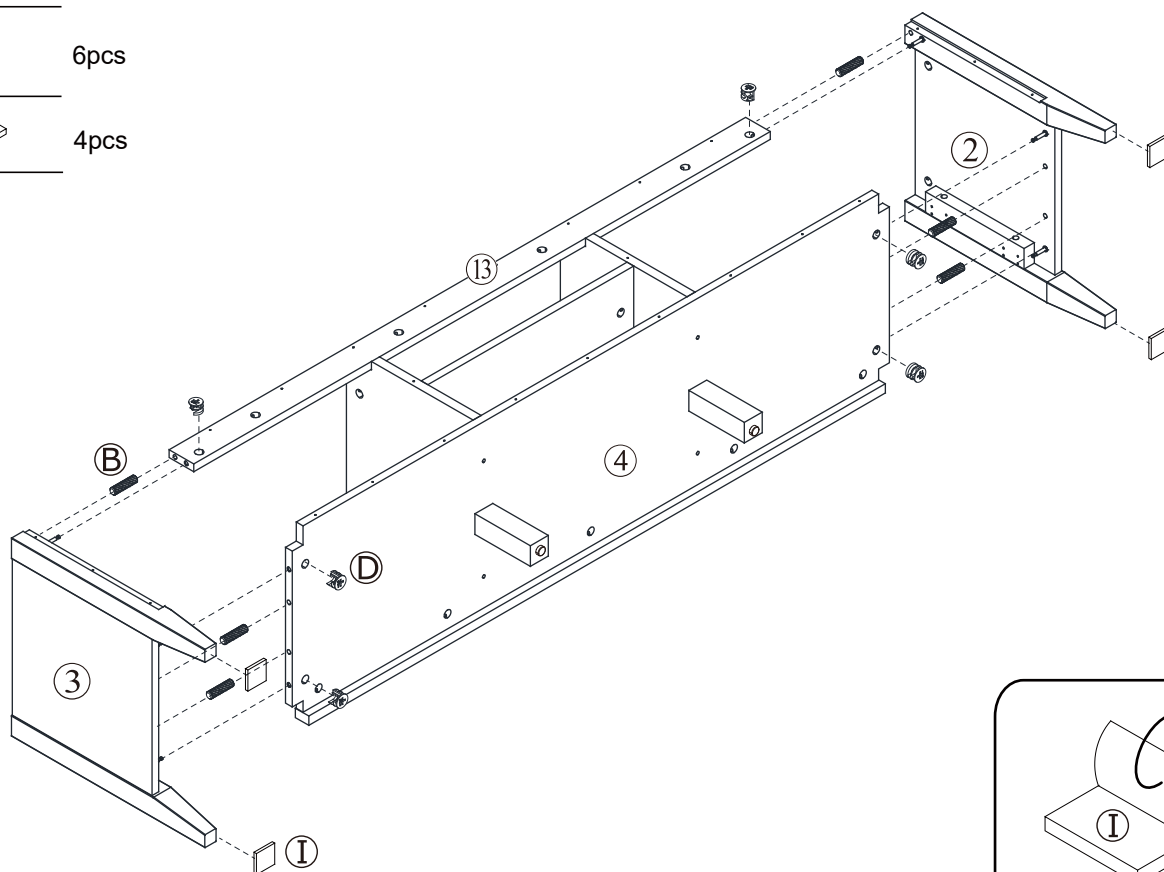  6pcs


- I

4pcs

 


Step 10:

- C

12pcs

- B

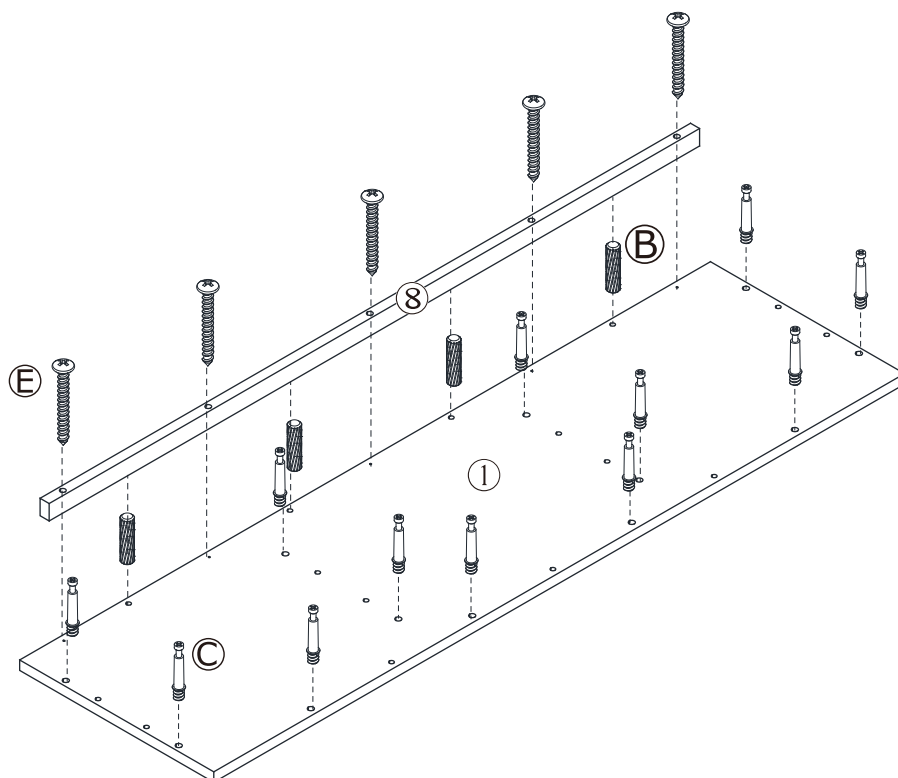4pcs

- E

5pcs

 


Step 11:

Ⓑ 11pcs


Ⓓ 12pcs

Ⓙ 8pcs

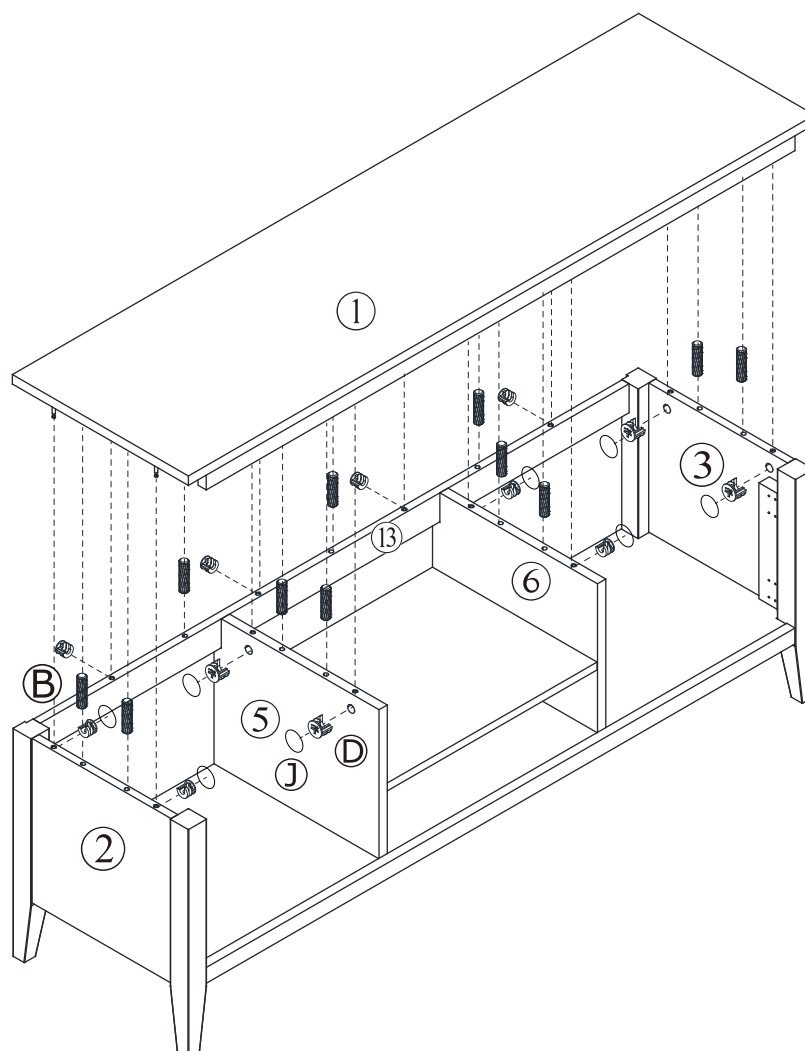

Step 12:

 Ⓗ 24pcs

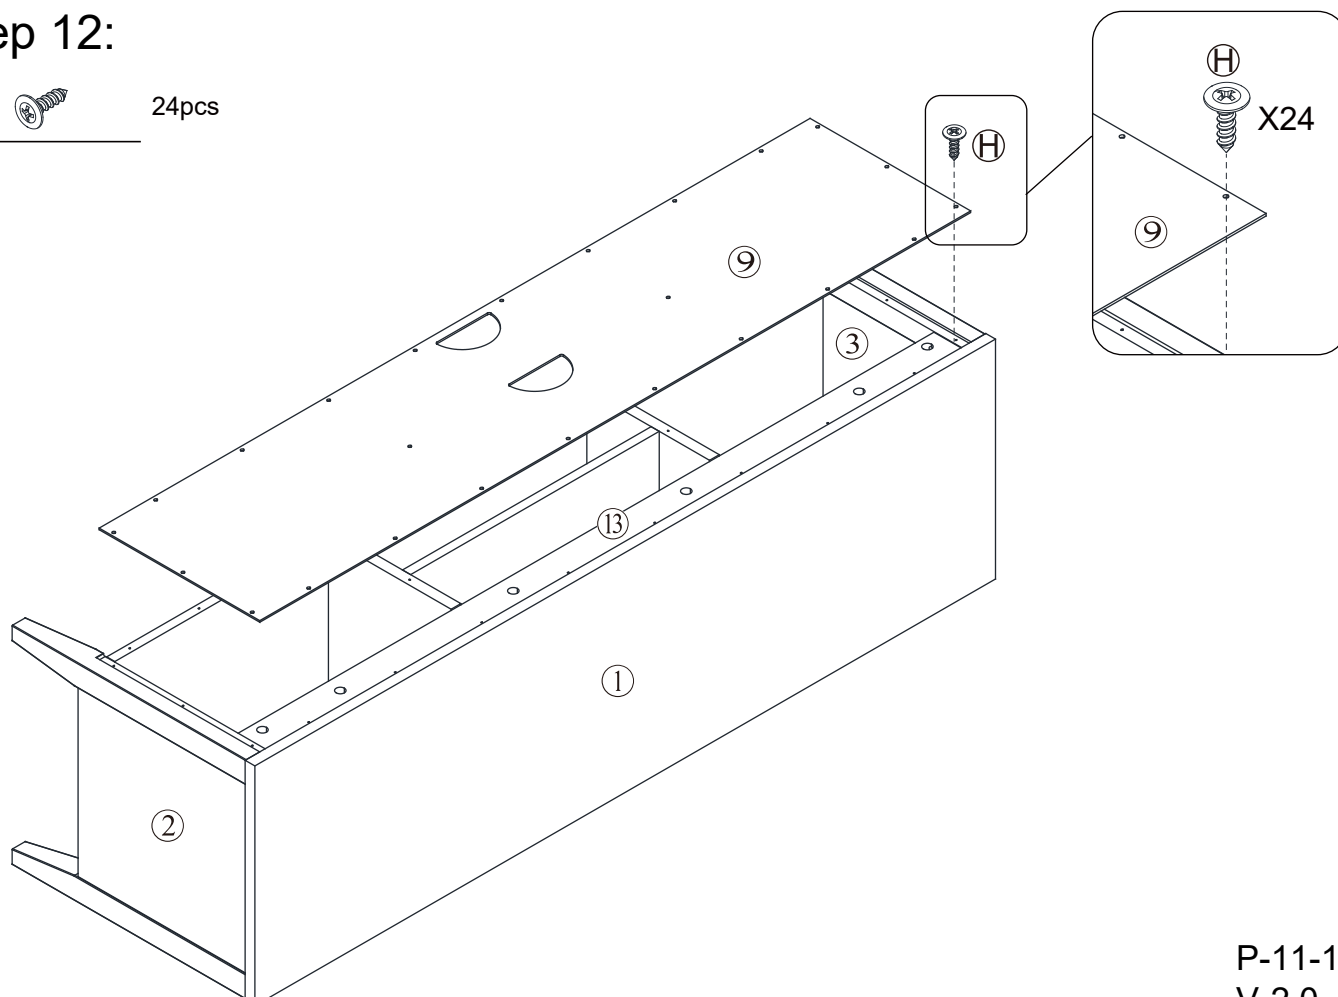


Step 13:

Ⓕ 4pcs

Ⓖ 2pcs

Ⓖ 8pcs

 Ⓜ 2pcs

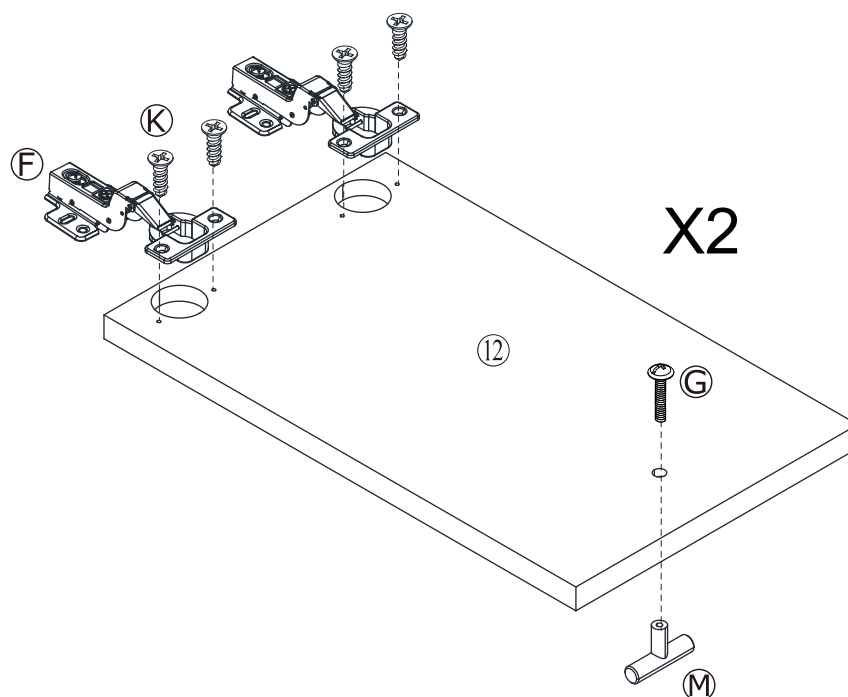

Step 14:

Ⓖ 16pcs

