

DUSK.COM

 
 
LIVING | BEDROOM | DINING

Range Name: Sienna

 
Box 1 dimensions: L113xW47xH16 cm

Product dimensions: W100xD40xH50 cm

Corner TV Unit

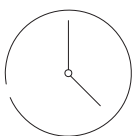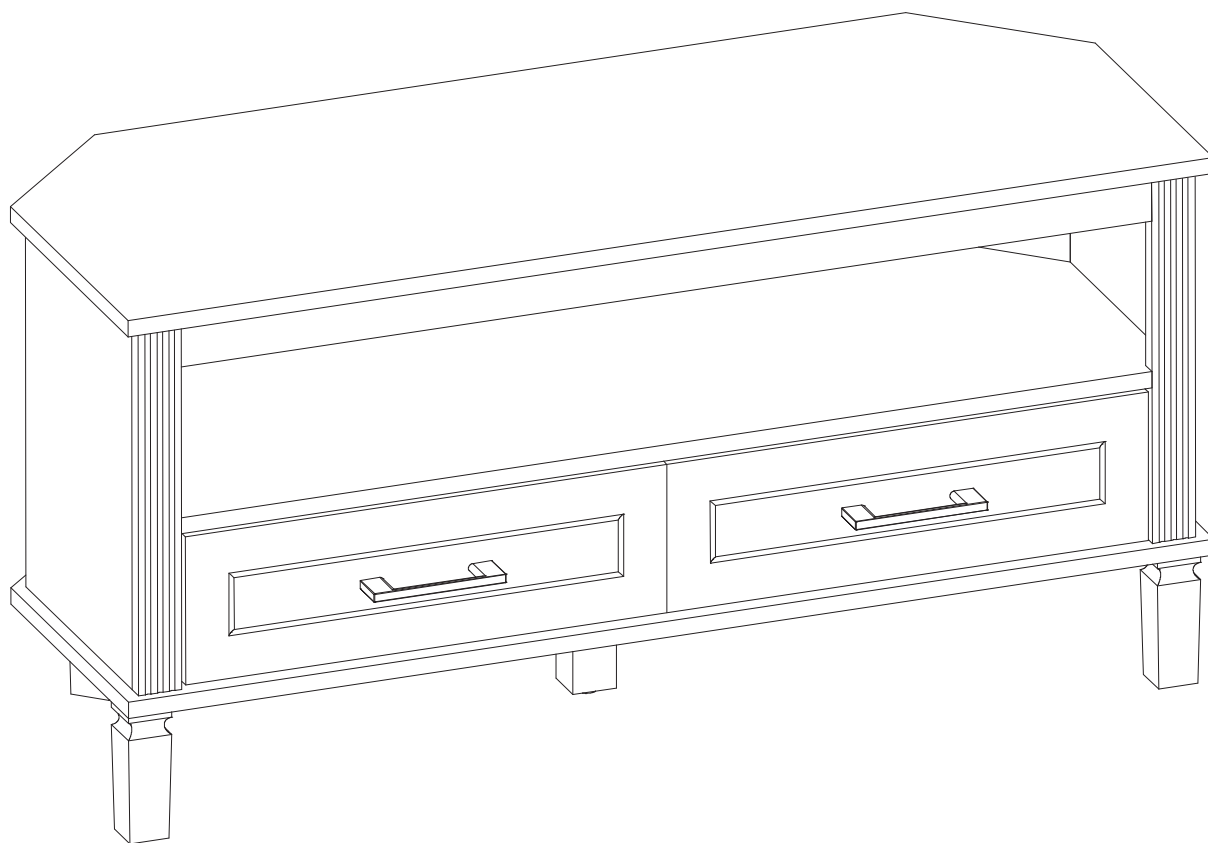

Up to 40 minutes
assembly time

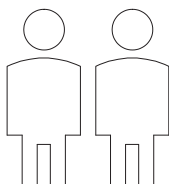

Two person
assembly

This product is intended for domestic use only, not for commercial purposes.

P-1-14
V-2.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your TV unit frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the TV unit in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
6. Never keep more than one drawer open at the same time.
7. Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

 
RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the TV unit when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Maximum TV size 42", maximum TV weight 20kg.

Parts list

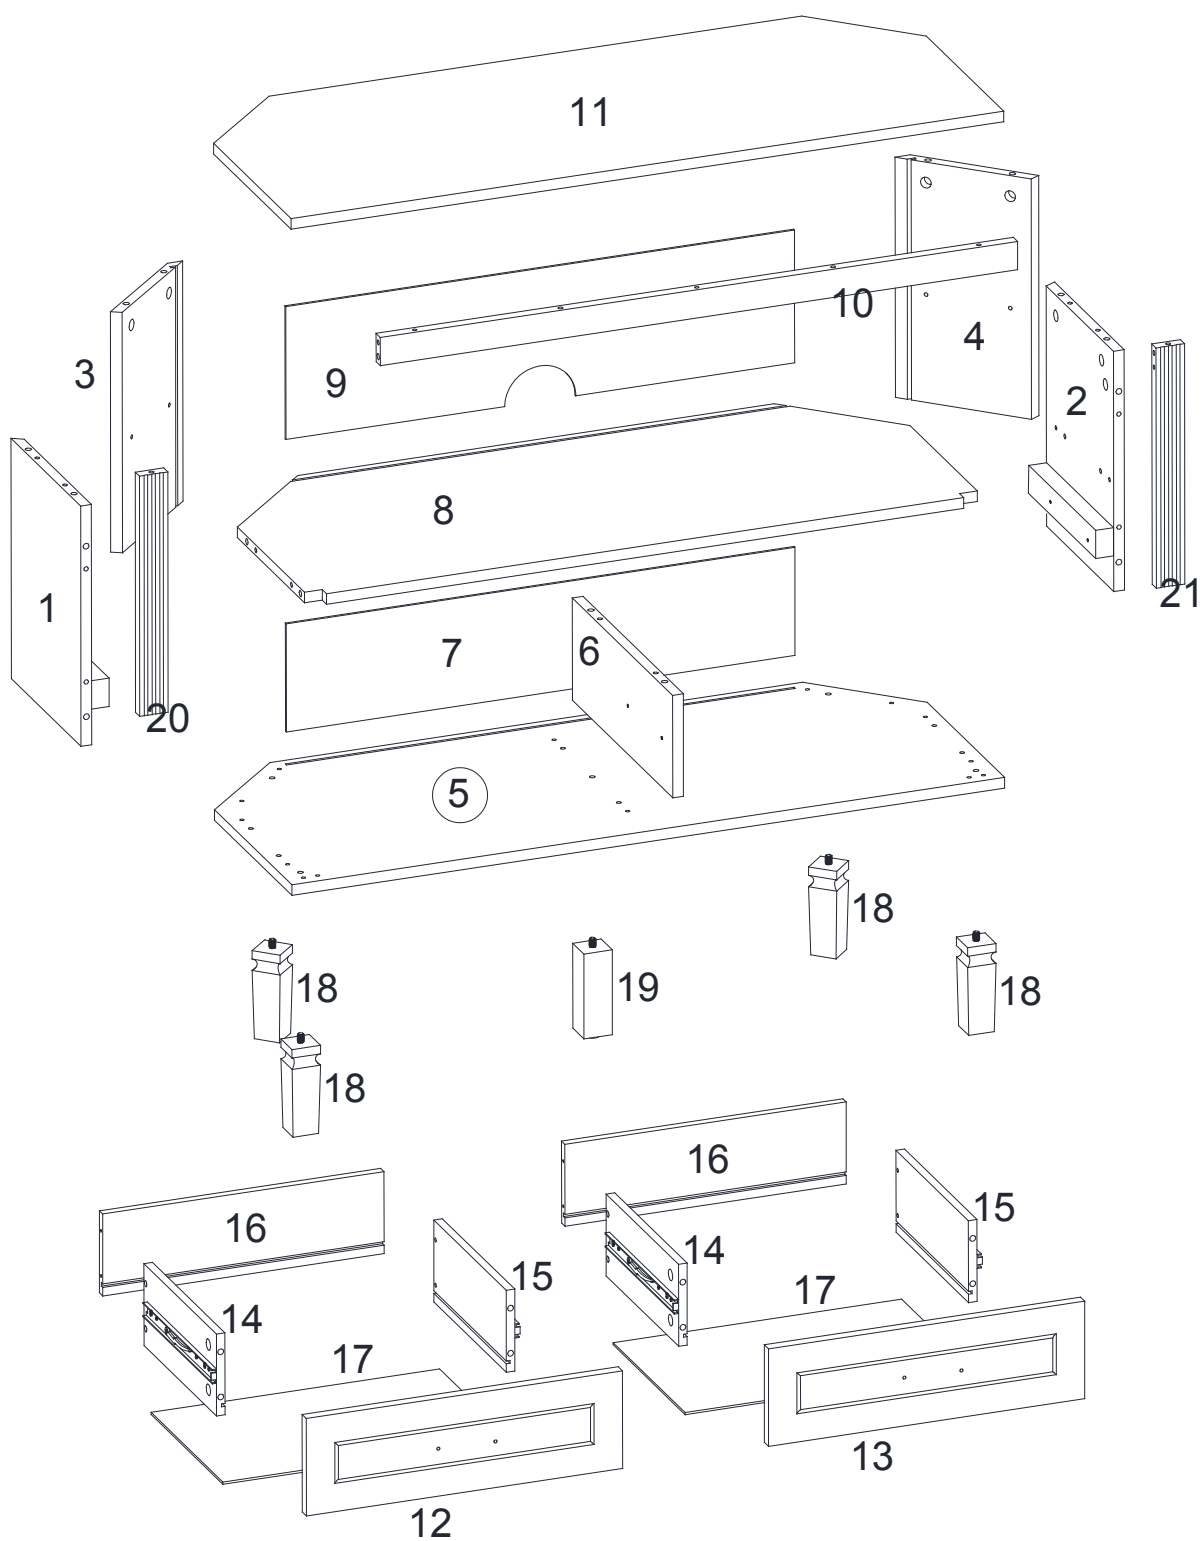

 
 

 

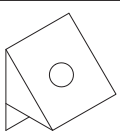 
 

 
 

 
 
Parts list

Before you begin building your TV unit, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

 
Part Number	Part Description	Quantity	Box No
1	Left Side Panel	1 pc	Box 1
2	Right Side Panel	1 pc	Box 1
3	Left Corner Panel	1 pc	Box 1
4	Right Corner Panel	1 pc	Box 1
5	Bottom Panel	1 pc	Box 1
6	Centre Panel	1 pc	Box 1
7	Lower Back Panel	1 pc	Box 1
8	Shelf	1 pc	Box 1
9	Upper Back Panel	1 pc	Box 1
10	Front Support Bar	1 pc	Box 1
11	Top Panel	1 pc	Box 1
12	Drawer Front	1 pc	Box 1
13	Drawer Front	1 pc	Box 1
14	Drawer Left Side	2 pcs	Box 1
15	Drawer Right Side	2 pcs	Box 1
16	Drawer Back Side	2 pcs	Box 1
17	Drawer Bottom	2 pcs	Box 1
18	Leg	4 pcs	Box 1
19	Centre Leg	1 pc	Box 1
20	Left Side Bar	1 pc	Box 1
21	Right Side Bar	1 pc	Box 1

Fittings

 
Please check you have all the fittings listed below with your product in box 1.

A  M6*35mm Cam Lock Screw 32pcs+3pcs extra	B  Ø15*9mm Cam Lock 32pcs+3pcs extra	C  Ø6*30mm Dowel 26pcs+2pcs extra	D  M4*35mm Screw 8pcs+1pcs extra	E  Cover 8pcs+1pc extra	F  Plastic Buckle 11pcs+1pc extra
G  M3.5*14mm Screw 11pcs+1pc extra	H  Handle 2pcs	I  M4*20mm Bolt 4pcs	J  M4*45mm Screw 17pcs+2pcs extra	K  M3.5*10mm Screw 16pcs+2pcs extra	L  Slide Rail 4 sets
M  Adjustable Foot Pre-assembled 1pc					

 
Pre-assembled Fittings

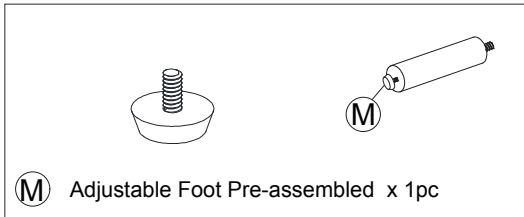

Bolt Length Ruler:



 
Tool required



Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Pay attention when connecting !
The sliding module must be at the front end.

STEP 1 : Extend Slide

 
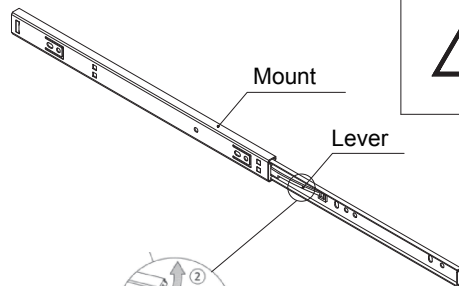 


STEP 2: Push Lever UP

 


 
Push lever for the left of drawer ,
press the lever for the right of drawer

STEP 3: Remove Runner

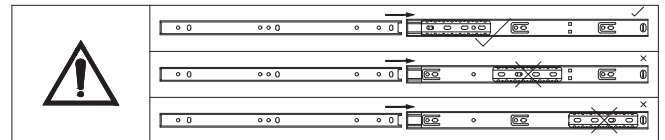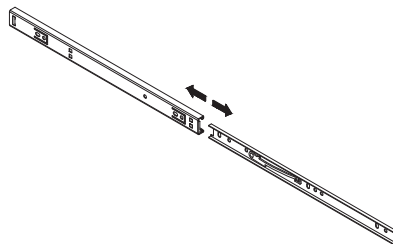 


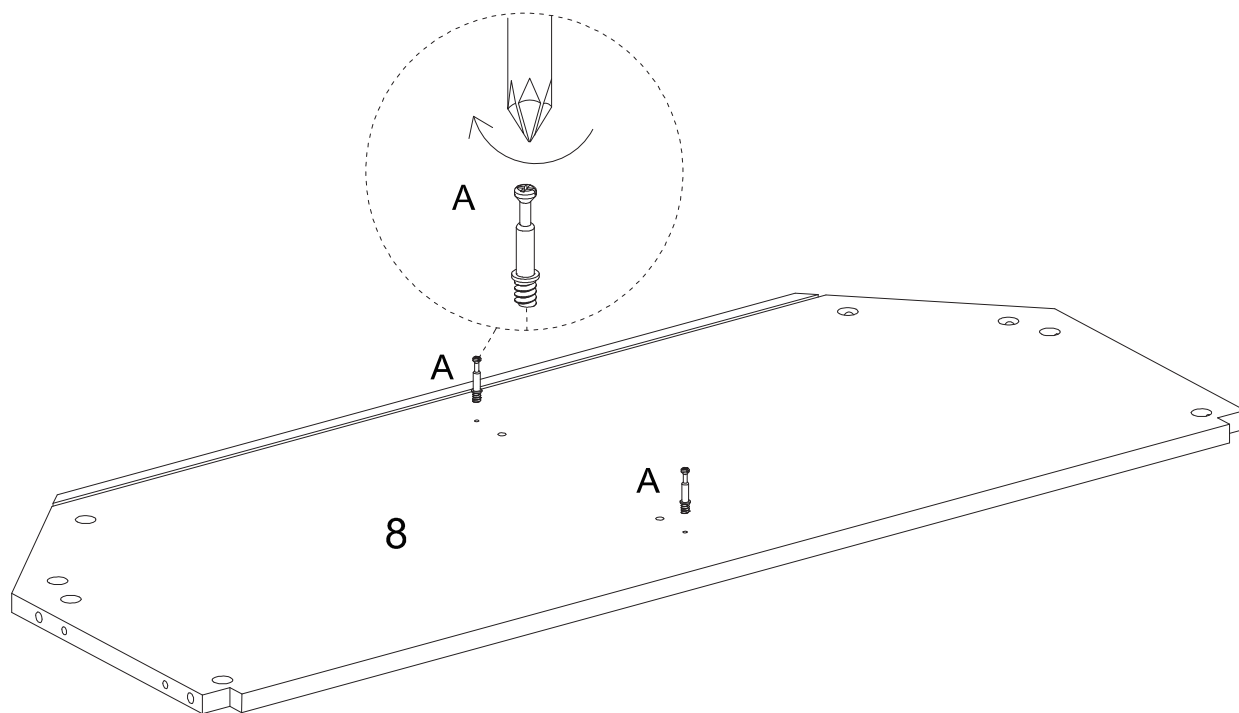 



1. Attach Cam Lock Screw to Shelf (8).

 


A	
	M6*35mm Cam Lock Screw
	2pcs

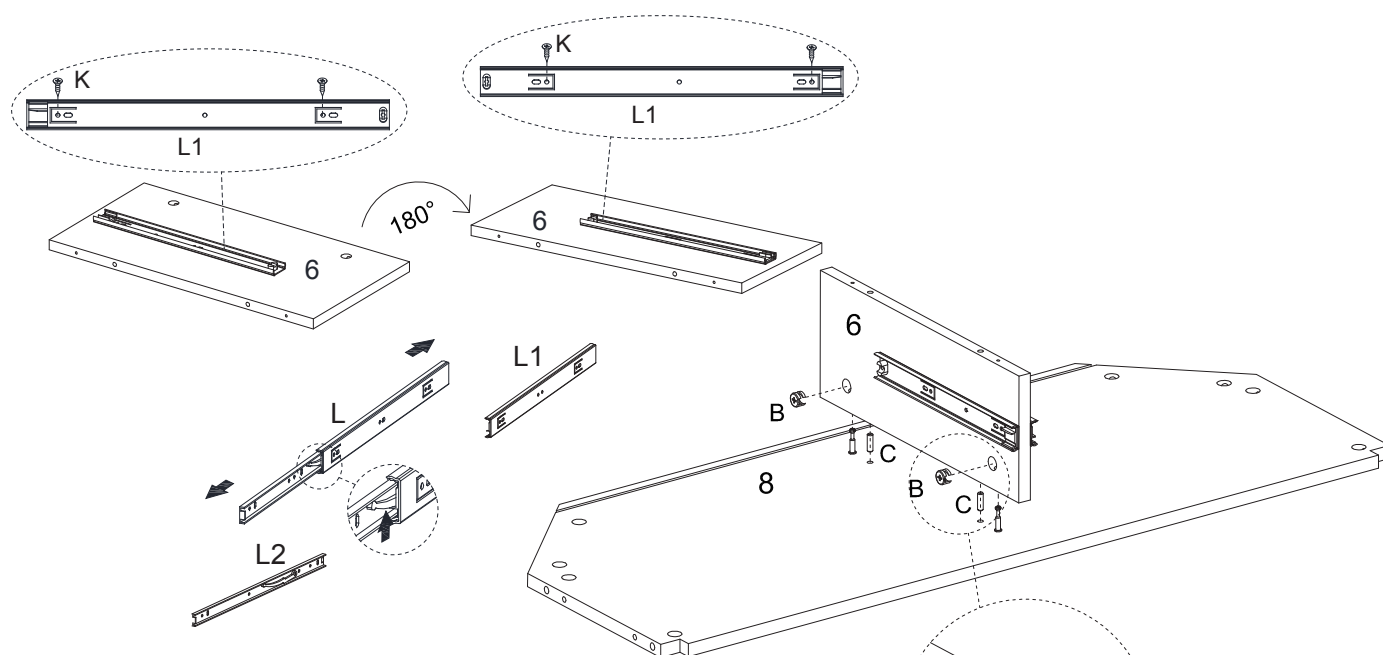 
2. Attach the Slide Rail to Centre Panel (6) two sides, then attach Centre Panel (6) to Shelf (8).

 




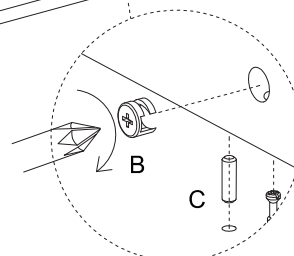

B	C	K	L
 Ø15*9mm Cam Lock 2pcs	 Ø6*30mm Dowel 2pcs	 M3.5*10mm Screw 4pcs	 Slide Rail 2pcs

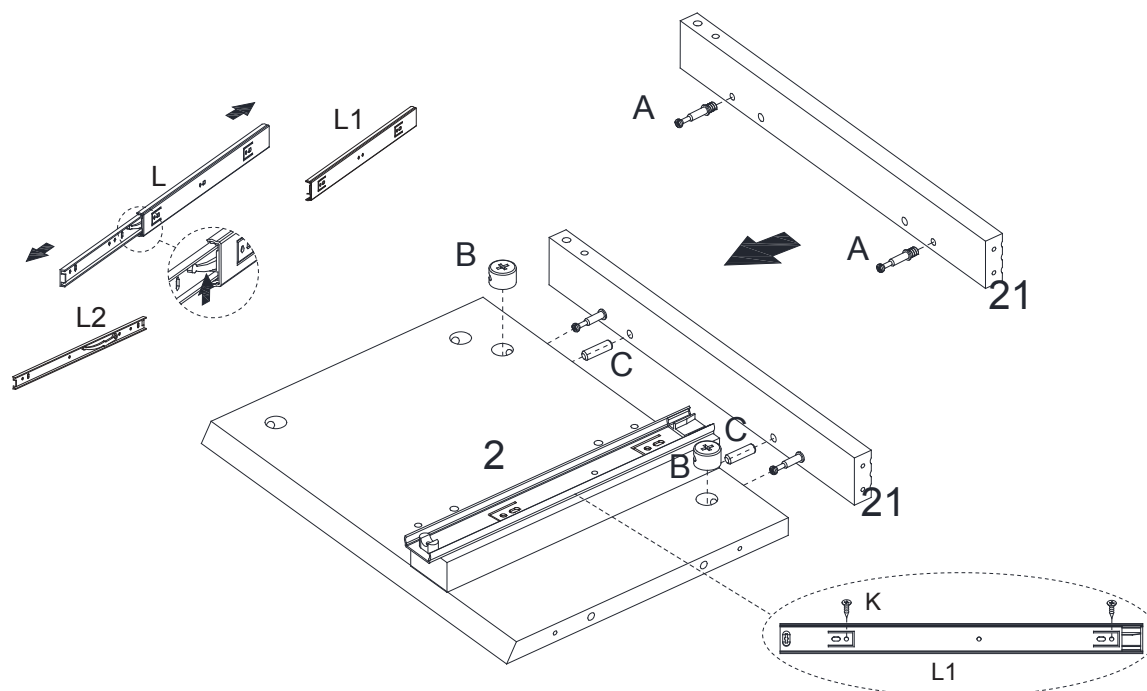 


 




3. Attach Cam Lock Screws to Right Side Bar (21) ,then attach Right Side Bar (21) and Right Side Panel (2) .

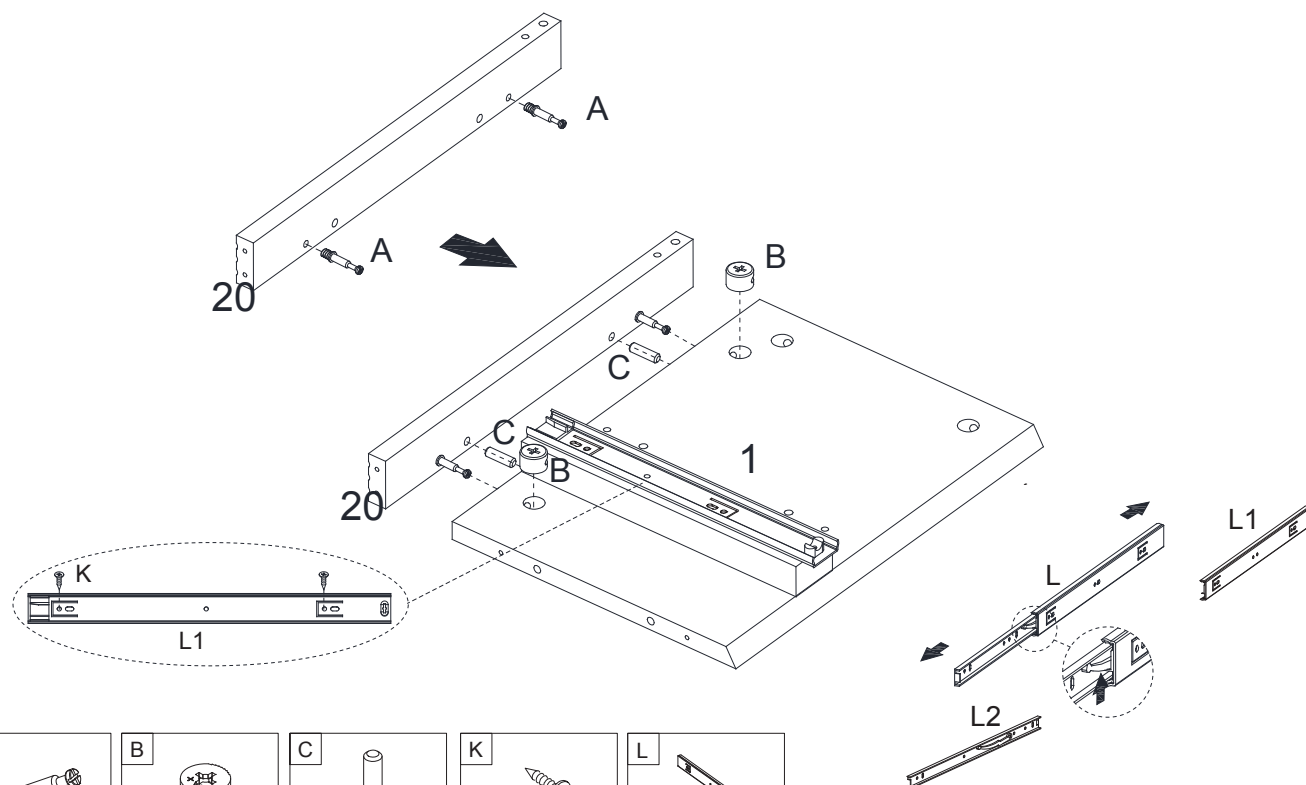

 
A	B	C	K	L
				
M6*35mm Cam Lock Screw 2pcs	Ø15*9mm Cam Lock 2pcs	Ø6*30mm Dowel 2pcs	M3.5*10mm Screw 2pcs	Slide Rail 1pc

 
4. Attach Cam Lock Screws to Left Side Bar (20) ,then attach Left Side Bar (20) and Left Side Panel (1) .



 
A	B	C	K	L
				
M6*35mm Cam Lock Screw 2pcs	Ø15*9mm Cam Lock 2pcs	Ø6*30mm Dowel 2pcs	M3.5*10mm Screw 2pcs	Slide Rail 1pc

 

5. Attach Cam Lock Screw to Left Side Panel (1) and Right Side Panel (2).

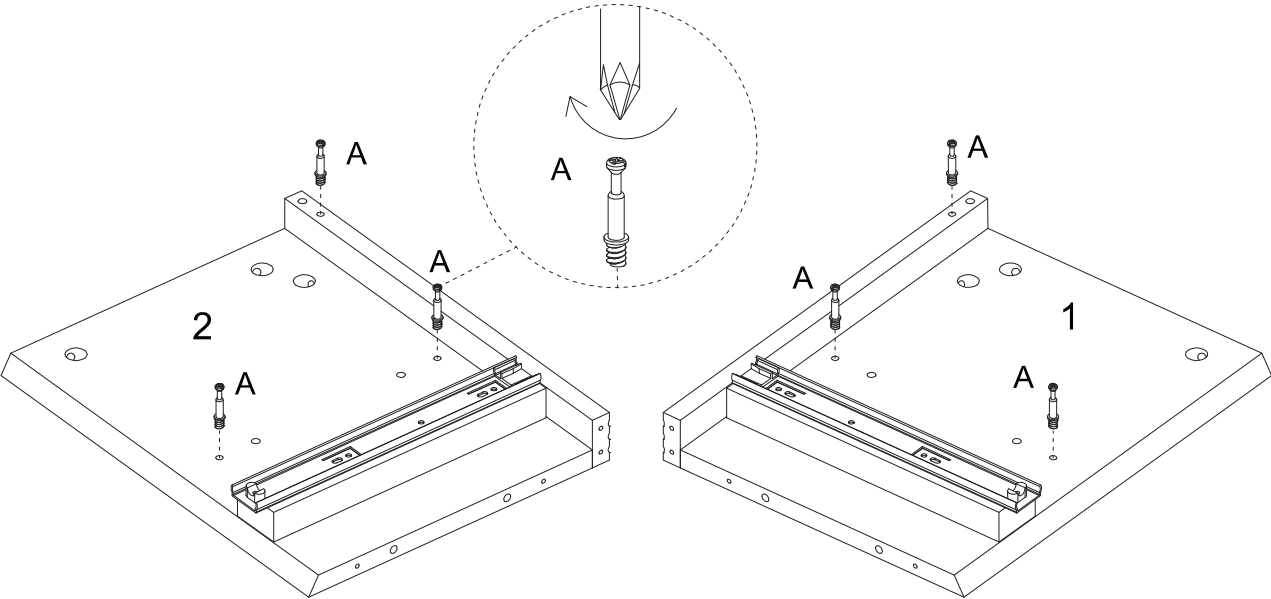

 
A

M6*35mm Cam Lock Screw
6pcs

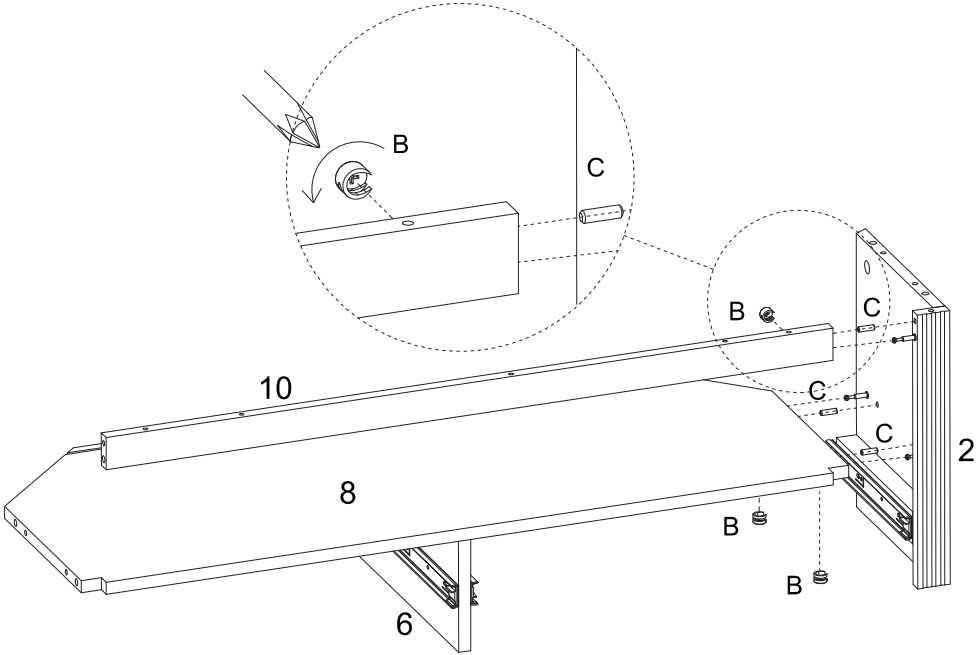 

6. Attach Shelf (8) and Front Support Bar (10) to Right Side Panel (2).



 
B		C	
Ø15*9mm Cam Lock		Ø6*30mm Dowel	
3pcs		3pcs	

 
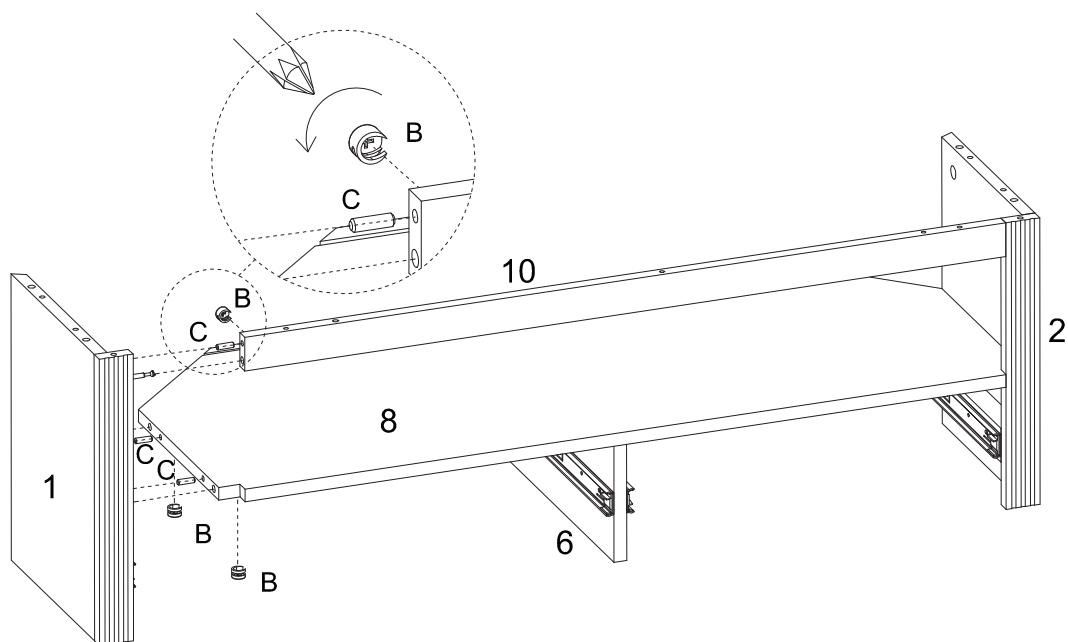 
7. Attach Left Side Panel (1) to the Frame.



 
B 	C 
Ø15*9mm Cam Lock 3pcs	Ø6*30mm Dowel 3pcs

8. Attach Left Corner Panel (3) and Right Corner Panel (4) to the Frame.

 
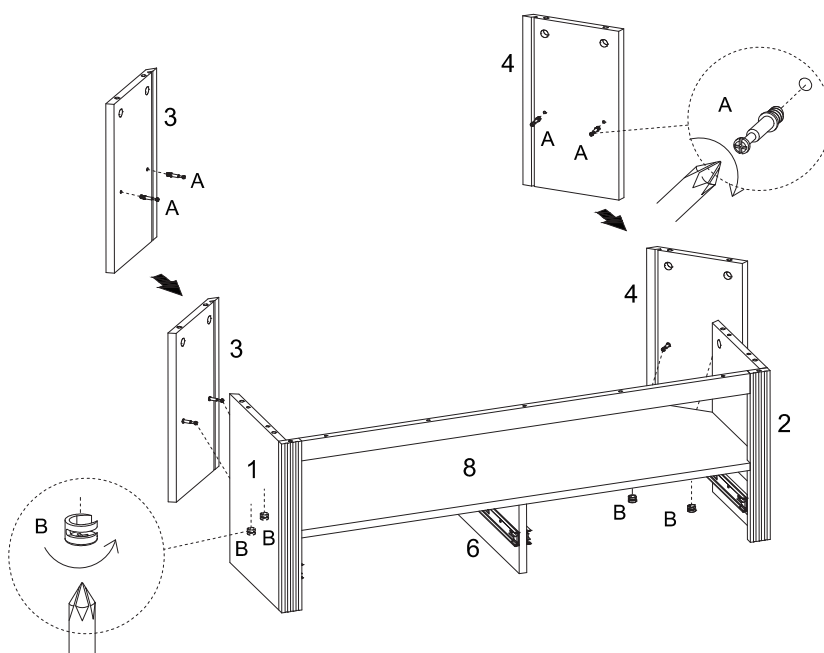 


A 	B 
M6*35mm Cam Lock Screw 4pcs	Ø15*9mm Cam Lock 4pcs

 
9. Insert the Upper Back Panel (9) to the Frame.

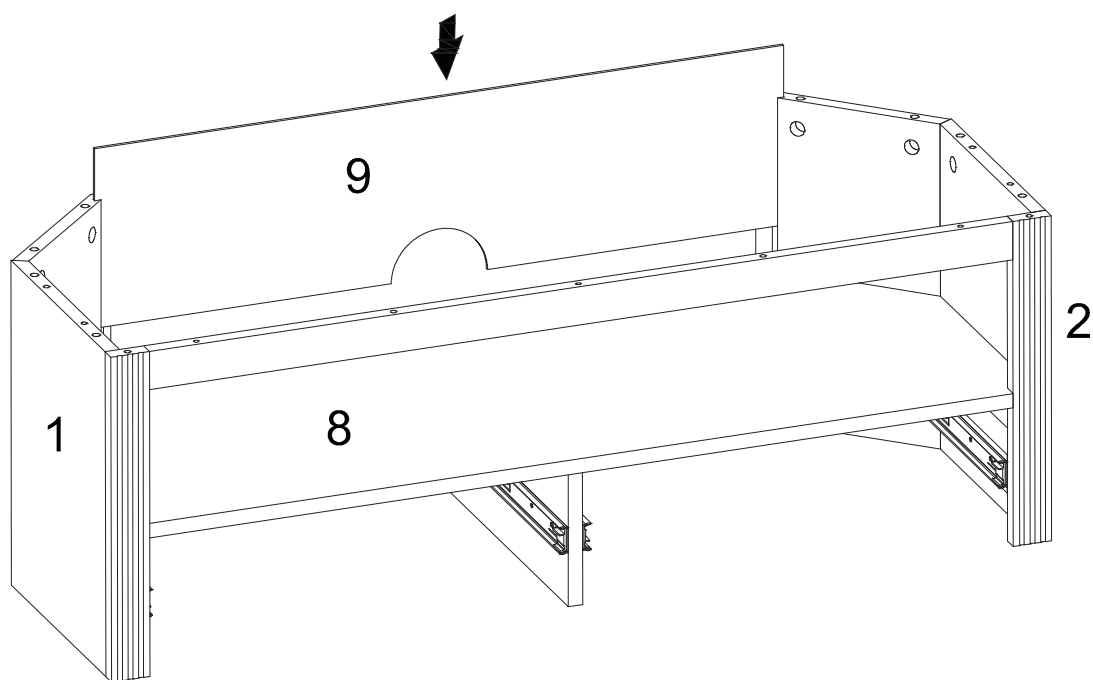

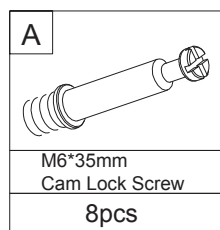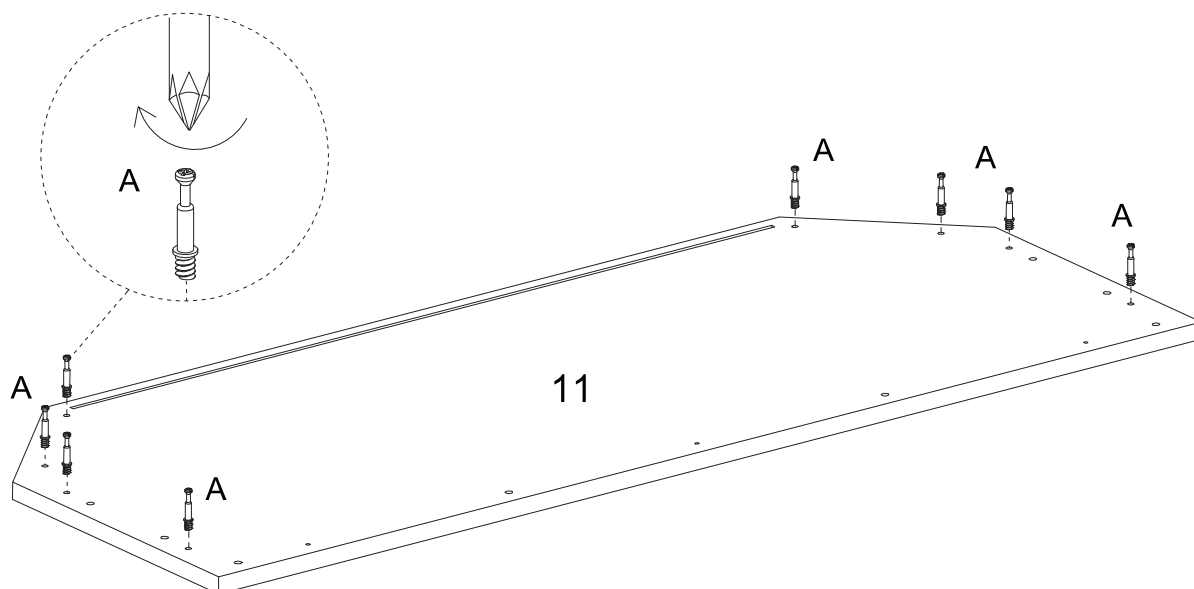 


10. Attach Cam Lock Screws to Top Panel (11).

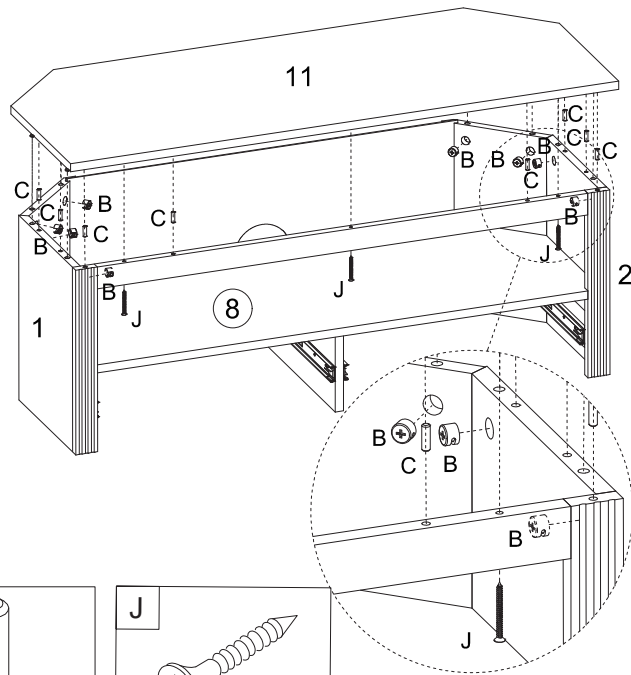 


11. Attach Top Panel (11) to the Frame.

 



 
B	C	J
		
Ø15*9mm Cam Lock	Ø6*30mm Dowel	M4*45mm Screw
8pcs	8pcs	3pcs

12. Insert Lower Back Panel (7) into the Frame.

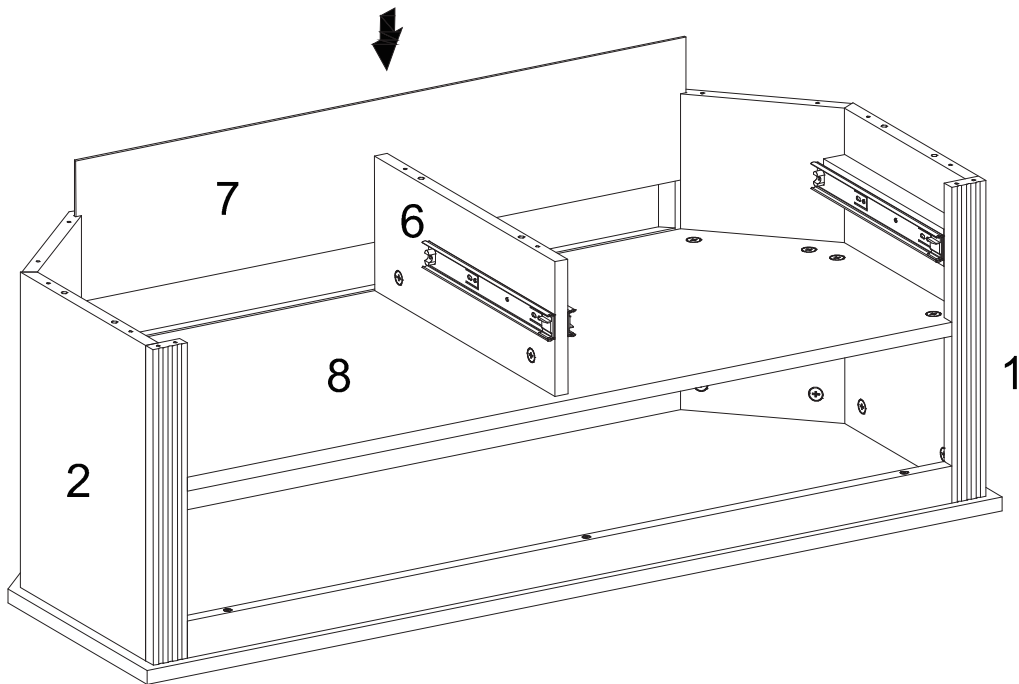 


13. Attach Bottom Panel (5) to the Frame.

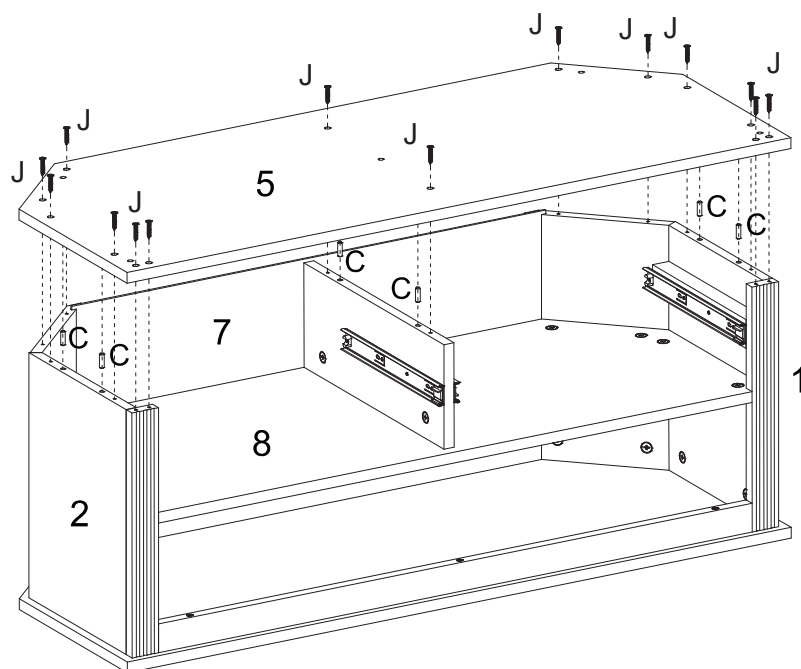 


C		J	
Ø6*30mm Dowel		M4*45mm Screw	
6pcs		14pcs	

 
14. Attach Legs (18) and Centre Leg (19) to the Frame.

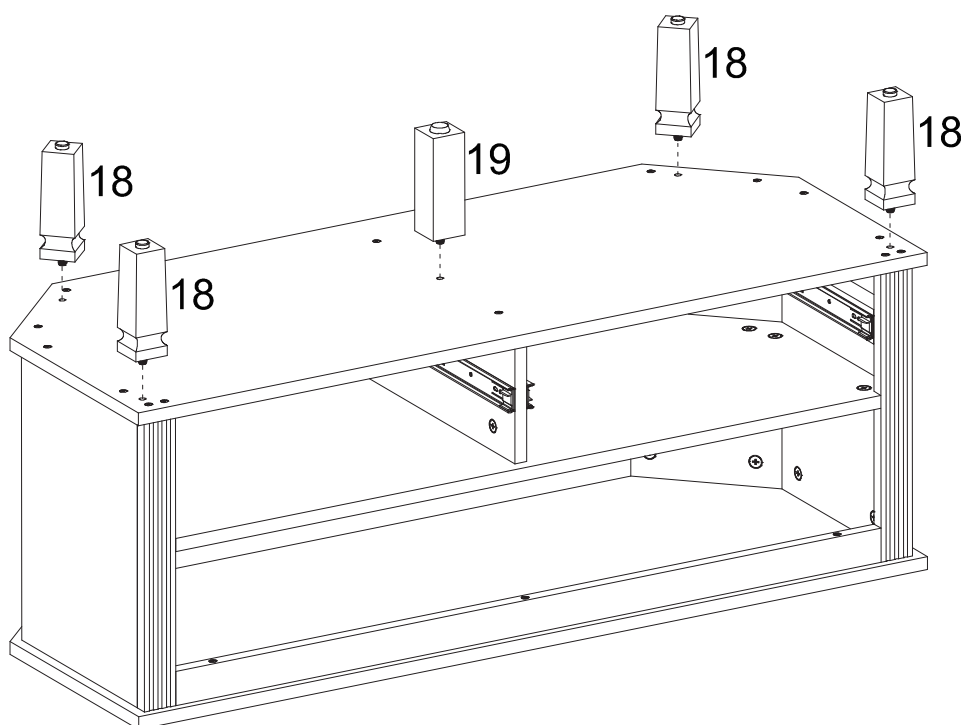

15. Assemble the drawer by following the steps shown in the illustration below.

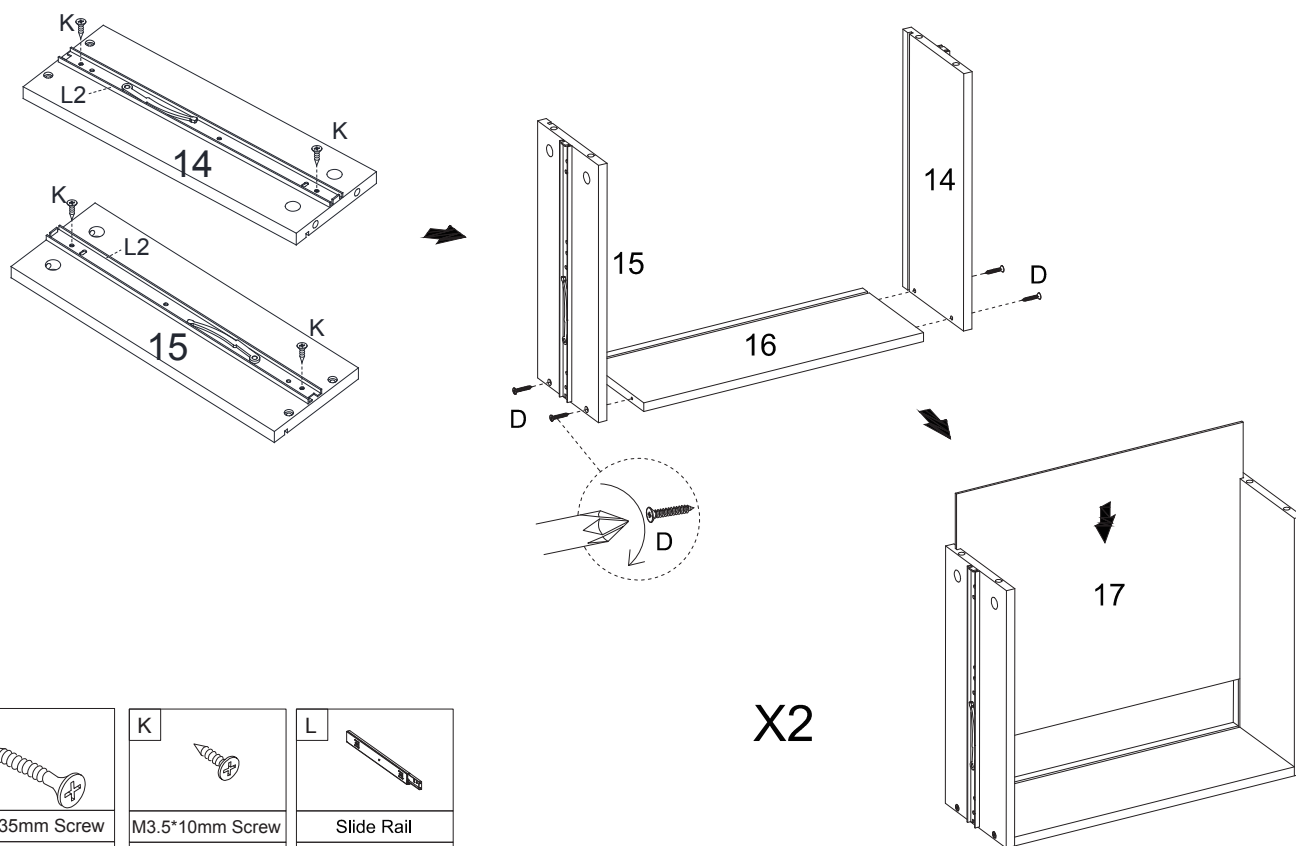 


16. Assemble the drawer by following the steps shown in the illustration below.

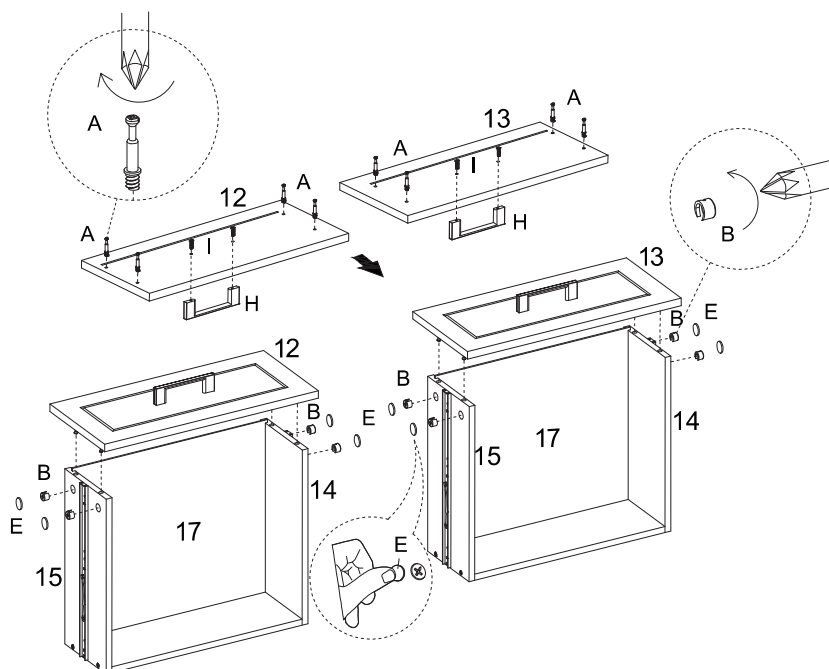 


 
 
A	B	E	H	I
M6*35mm Cam Lock Screw 8pcs	Ø15*9mm Cam Lock 8pcs	Cover 8pcs	Handle 2pcs	M4*20mm Bolt 4pcs

17. Slide the Drawers into the Frame. The Centre Leg is adjustable if necessary.

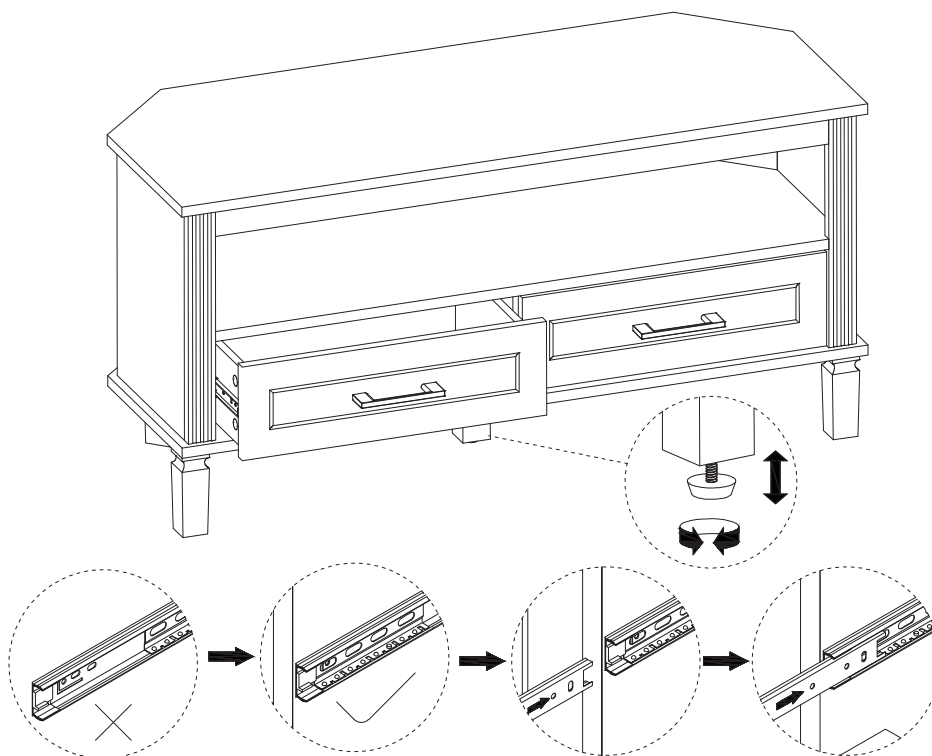

18. Attach the plastic buckles on back. Before securing them, manually adjust the frame to ensure the drawers are properly aligned, even, and parallel.

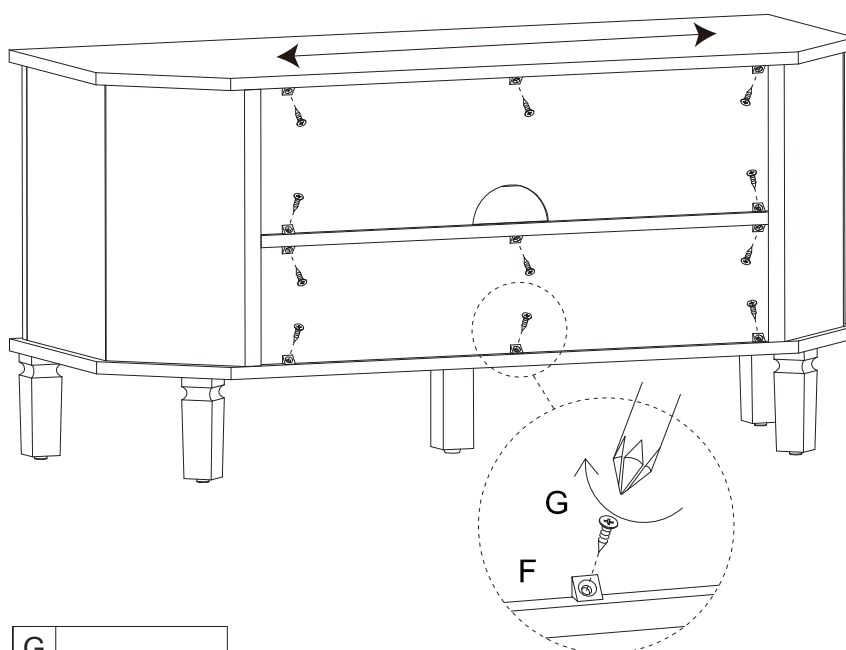

F 	G 
Plastic Buckle 11pcs	M3.5*14mm Screw 11pcs