 
 
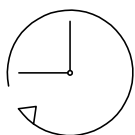 


Willow TV Unit

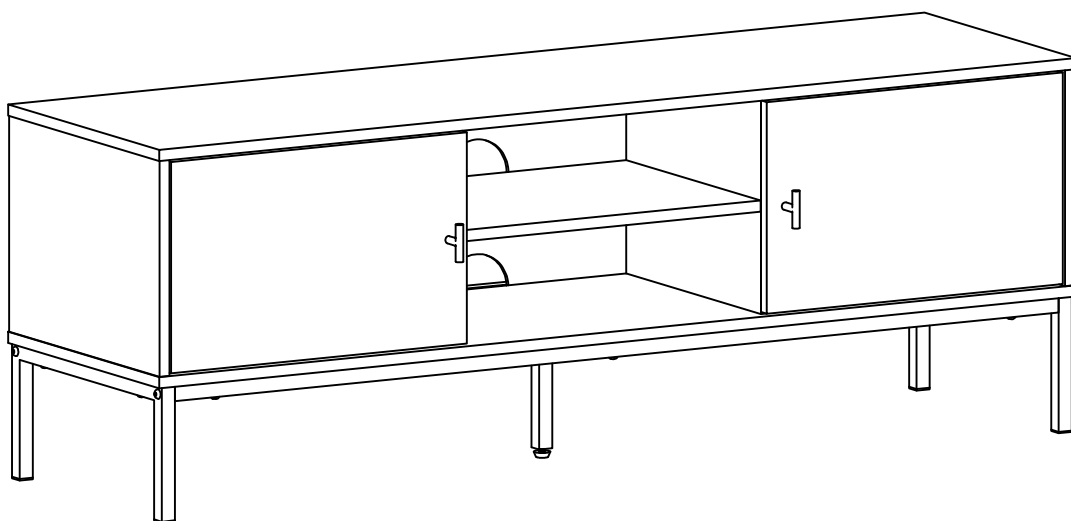

Up to 45 minutes
assembly time

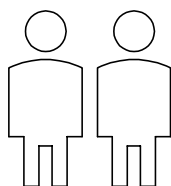

Two person
assembly

This product is intended for domestic use only, not for commercial purposes.

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Willow TV Unit frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Willow TV Unit in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

 
RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Willow TV Unit when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

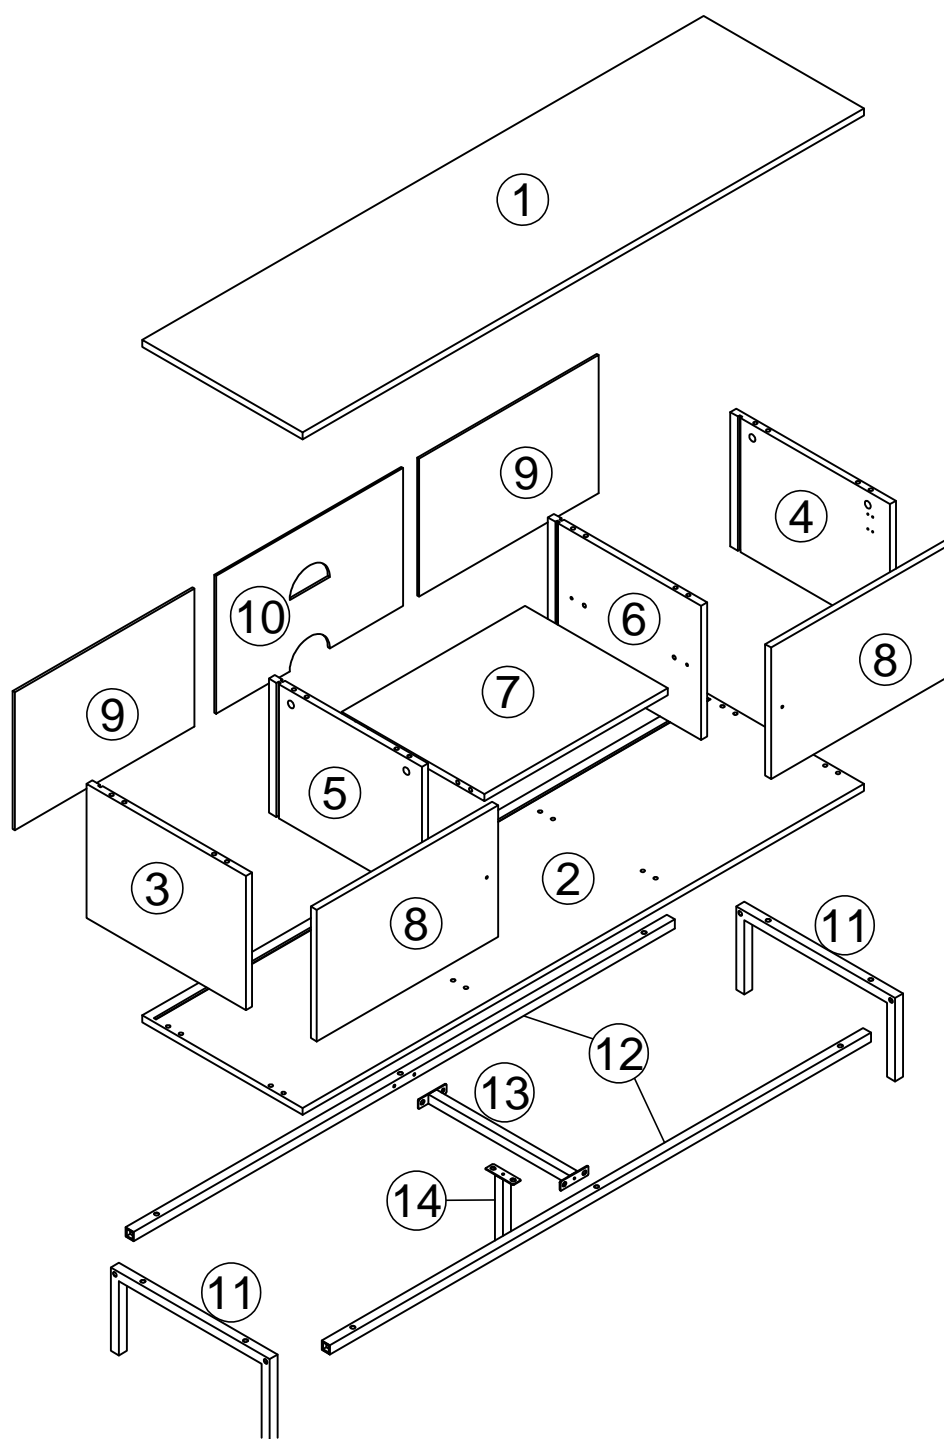

Parts list



 





 


 

 

Before you begin building your Willow TV Unit , please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	TV Unit Top	1 pc	Box 1
②	Bottom Panel	1 pc	Box 1
③	Left Side Panel	1 pc	Box 1
④	Right Side Panel	1 pc	Box 1
⑤	Left Middle Panel	1 pc	Box 1
⑥	Right Middle Panel	1 pc	Box 1
⑦	Shelf Panel	1 pc	Box 1

 
 
Part Number	Part Description	Quantity	Box No
⑧	Door Panel	2 pcs	Box 1
⑨	Back Panel	2 pcs	Box 1
⑩	Middle Back Panel	1 pc	Box 1
⑪	Leg	2 pcs	Box 1
⑫	Leg Side Support	2 pcs	Box 1
⑬	Leg Centre Support	1 pc	Box 1
⑭	Centre Leg	1 pc	Box 1

Fittings

 
 
Please check you have all the fittings listed below with your product in Box 1.

<div>A</div>  <div>M6*12mm Bolt 6pcs+1pc extra</div>	<div>B</div>  <div>M6*30mm Bolt 10pcs+1pc extra</div>	<div>C</div>  <div>M6*40mm Bolt 4pcs</div>	<div>D</div>  <div>M6*35mm Bolt 12pcs+2pcs extra</div>	<div>E</div>  <div>Ø15mm Cam lock 12pcs+2pcs extra</div>	<div>F</div>  <div>Ø7.8*30mm Dowel 20pcs+2pcs extra</div>
<div>G</div>  <div>M7*48mm Screw 8pcs+1pc extra</div>	<div>H</div>  <div>M3.5*14mm Screw 36pcs+3pcs extra</div>	<div>I</div>  <div>Handle 2pcs</div>	<div>J</div>  <div>M4*20mm Bolt 2pcs</div>	<div>K</div>  <div>Adjusting feet 1pc</div>	<div>L</div>  <div>Allen Key 1pc</div>
<div>M</div>  <div>Hinge 4pcs</div>	<div>N</div>  <div>plastic Buckle 12pcs+2pcs extra</div>	<div>O</div>  <div>Ø20mm Sticker 8pcs+1pc extra</div>			

 
1. Attach Bolts to the Middle Panels.

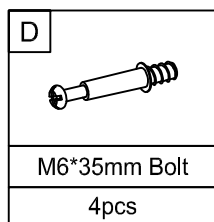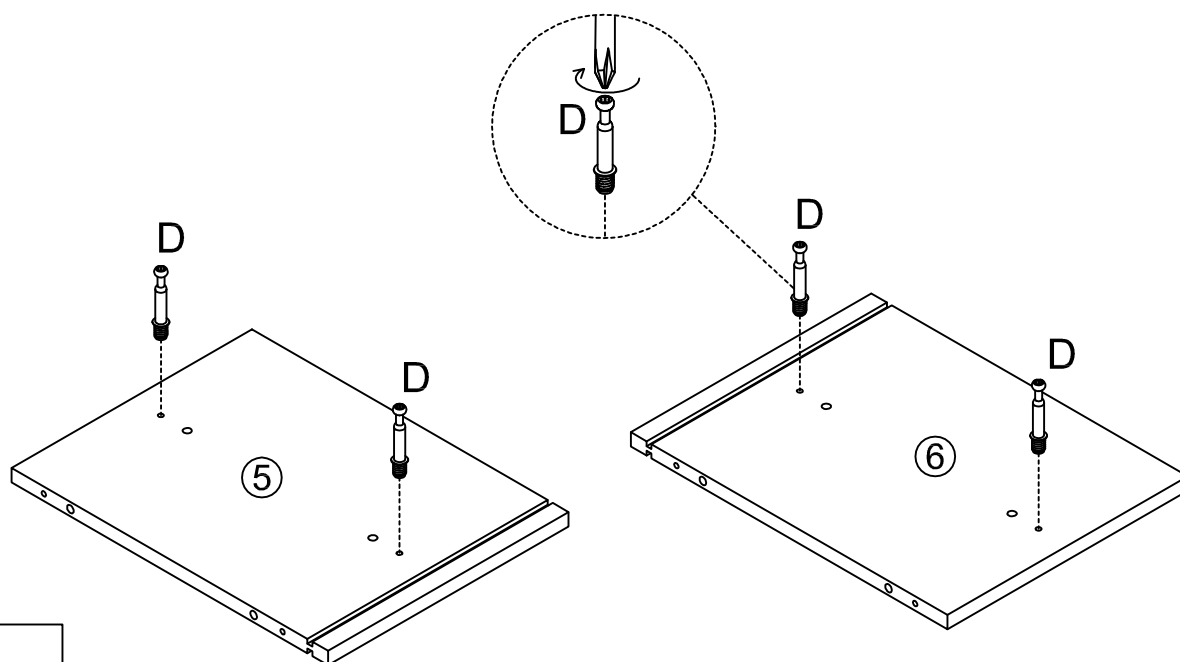

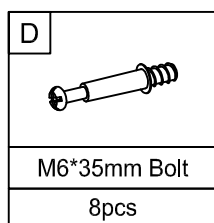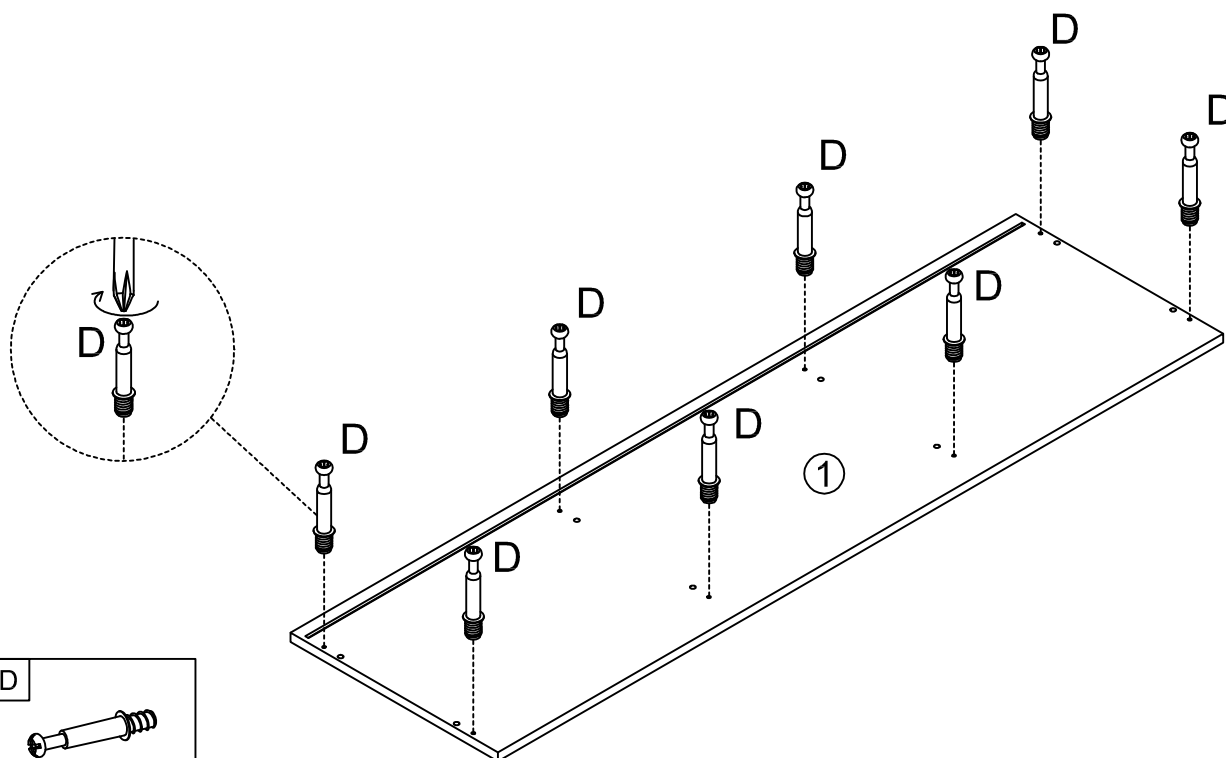

2. Attach Bolts to the TV Unit Top.

 


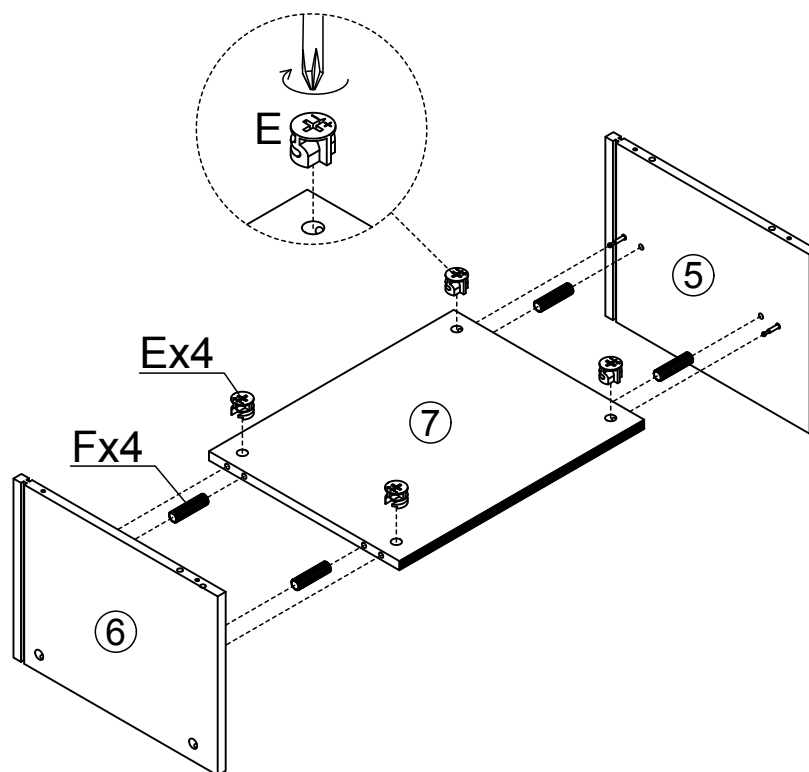

 
3. Attach the Middle Panels to the shelf.

 


<div>E</div> 	<div>F</div> 
<div>Ø15mm Cam lock</div> <div>4pcs</div>	<div>Ø7.8*30mm Dowel</div> <div>4pcs</div>

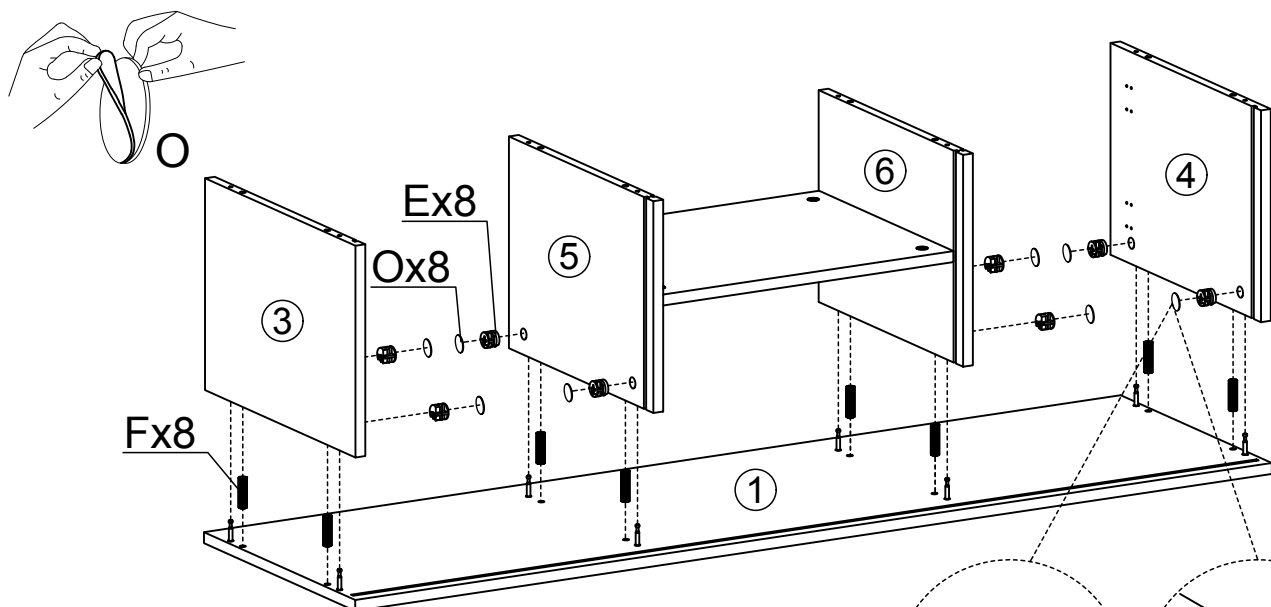 
4. Attach the Side Panels, Middle Panels and Shelf to the TV Unit Top.



 
<div>E</div> 	<div>F</div> 	<div>O</div> 
<div>Ø15mm Cam lock</div> <div>8pcs</div>	<div>Ø7.8*30mm Dowel</div> <div>8pcs</div>	<div>Ø20mm Sticker</div> <div>8pcs</div>

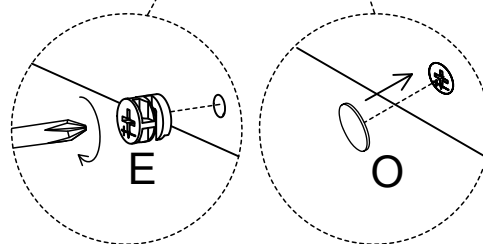

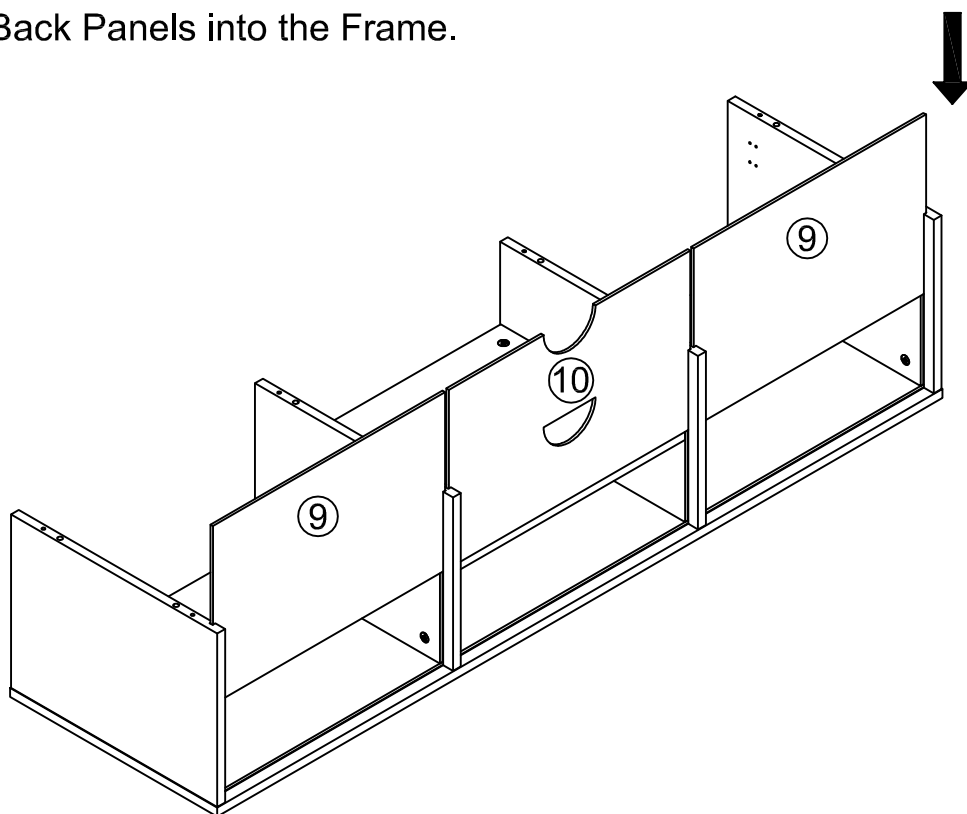


5. Slide Back Panels into the Frame.

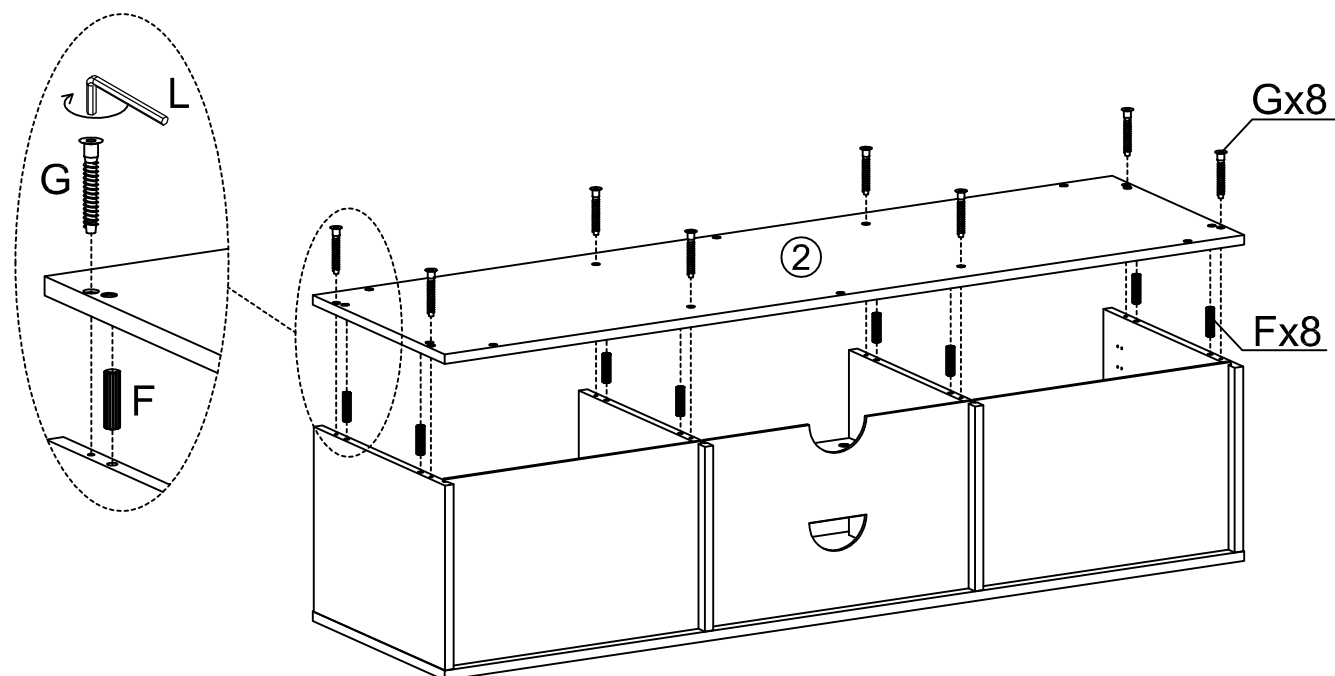 


 
 
6. Attach the Bottom Panel onto the frame.



 
<div data-bbox="119 1892 151 1937">F</div>  <div data-bbox="119 2027 319 2101"> <p>Ø7.8*30mm Dowel</p> <p>8pcs</p> </div>	<div data-bbox="335 1892 367 1937">G</div>  <div data-bbox="335 2027 534 2101"> <p>M7*48mm Screw</p> <p>8pcs</p> </div>	<div data-bbox="550 1892 582 1937">L</div>  <div data-bbox="550 2027 762 2101"> <p>Allen Key</p> <p>1pc</p> </div>
--	--	---


 
7. Attach the Leg Side Support to the Legs.

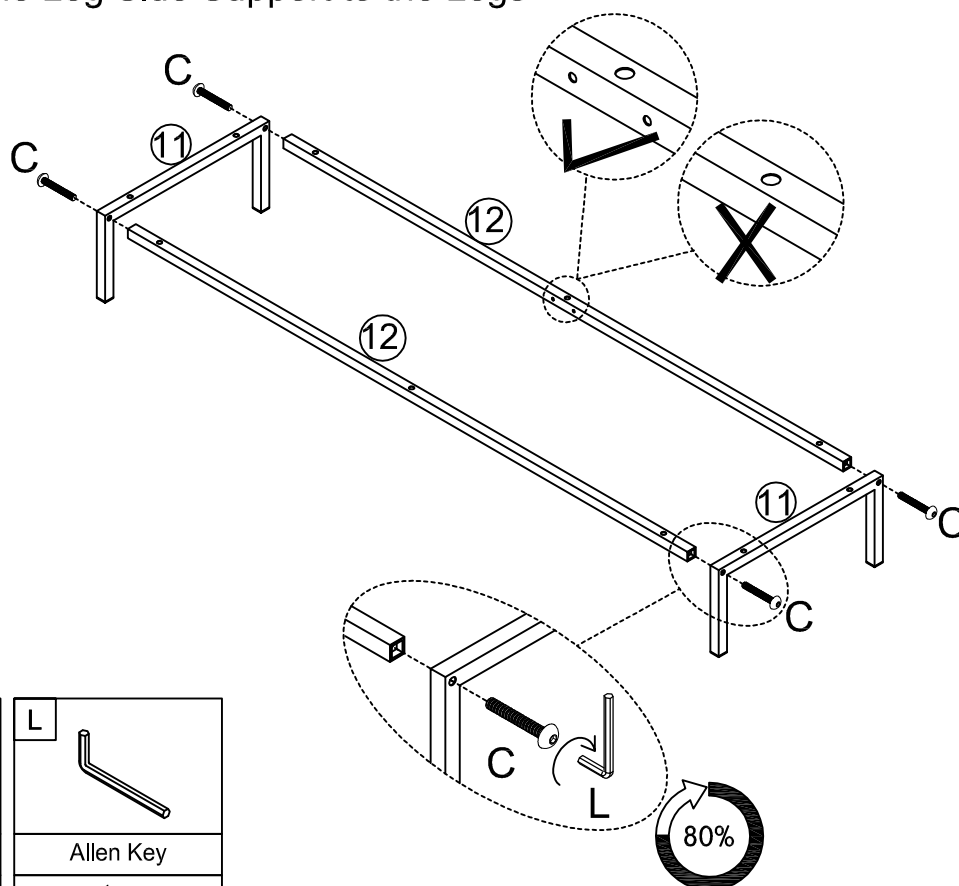

 
C	L
	
M6*40mm Bolt	Allen Key
4pcs	1pc


 
8. Attach the Leg Centre Support.

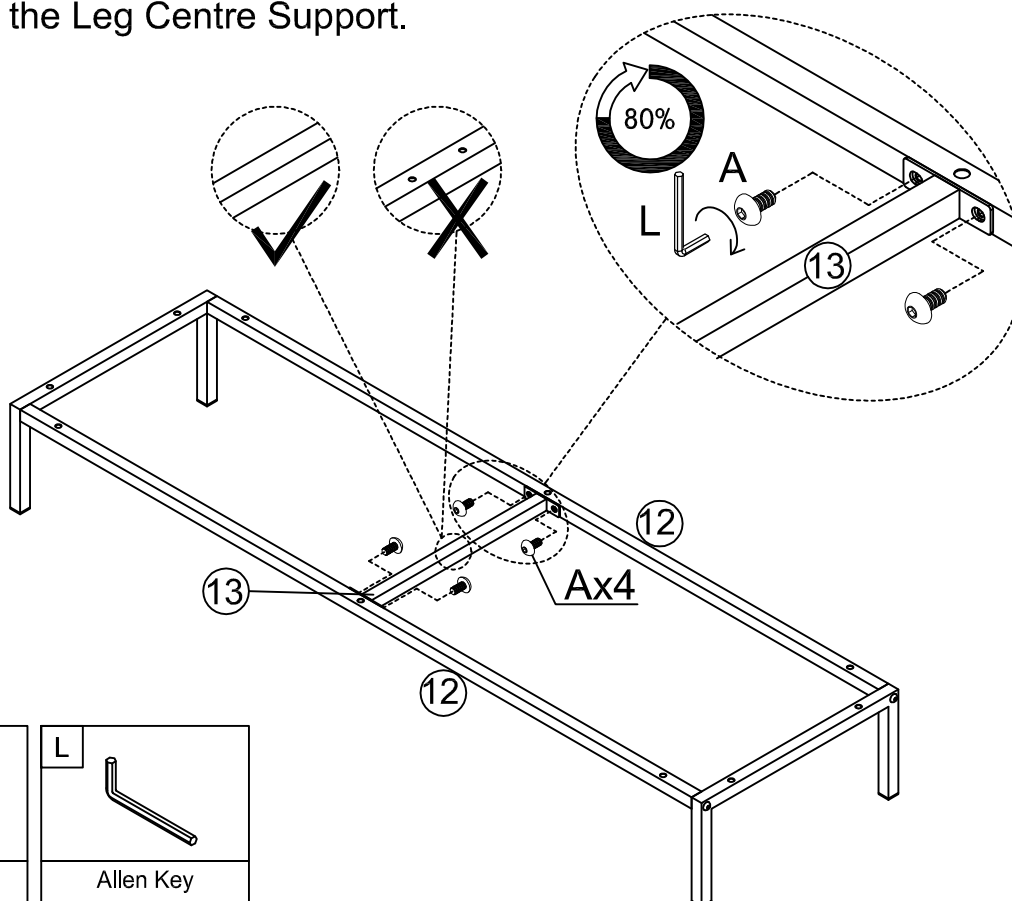

 
 
A	L
	
M6*12mm Bolt	Allen Key
4pcs	1pc


 
 
9. Attach the Legs to the frame.

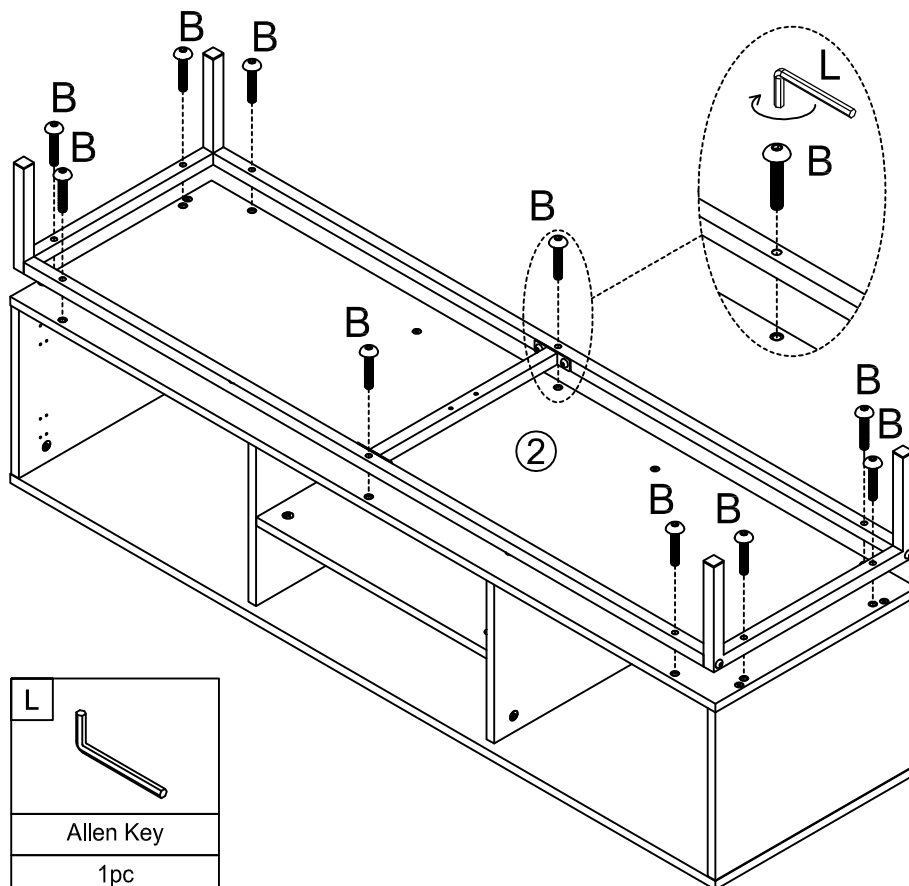

 
<div>B</div> 	<div>L</div> 
M6*30mm Bolt 10pcs	Allen Key 1pc

10. Attach the Centre Leg.

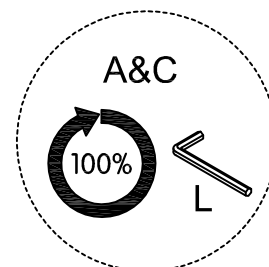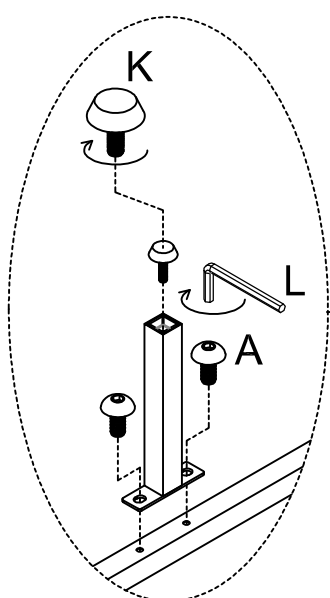



<div>A</div> 	<div>K</div> 	<div>L</div> 
M6*12mm Bolt 2pcs	Adjusting feet 1pc	Allen Key 1pc

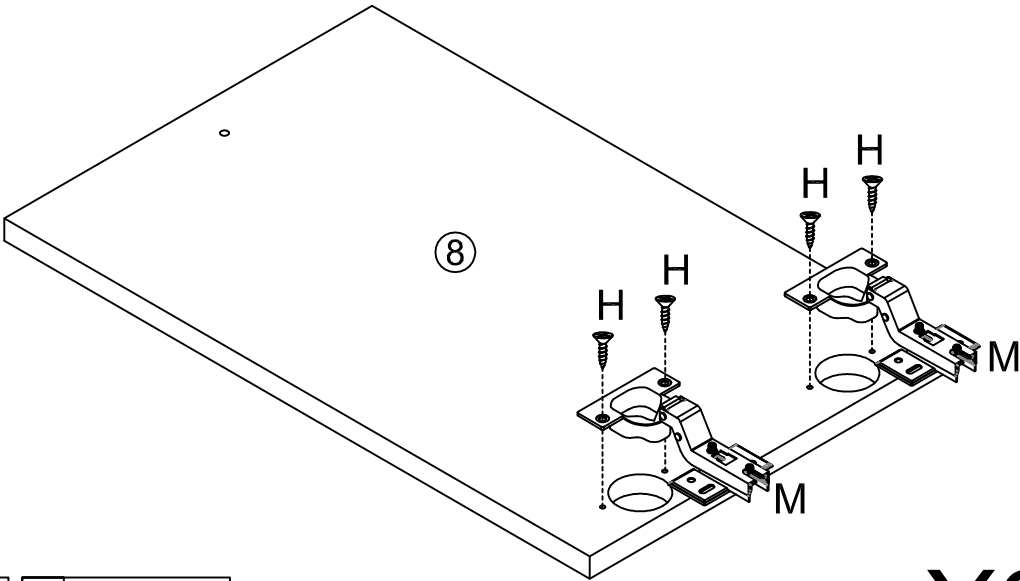 
11. Attach the Hinges to the Door Panel.



 

X2

H	M
	
M3.5*14mm Screw	Hinge
8pcs	4pcs

 
 
 
 
 
 
 
 
 
 
 
 
12. Attach Handles to the Door Panels.

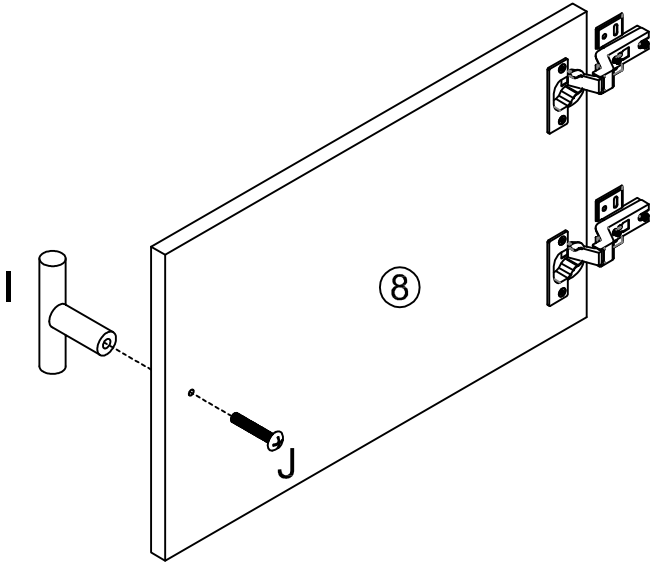


X2

 
I	J
	
Handle	M4*20mm Bolt
2pcs	2pcs

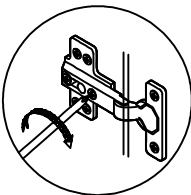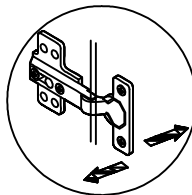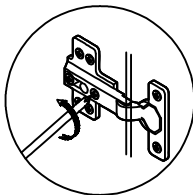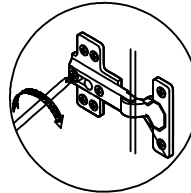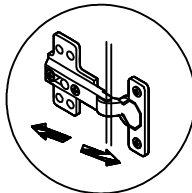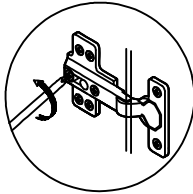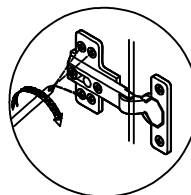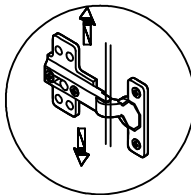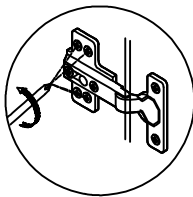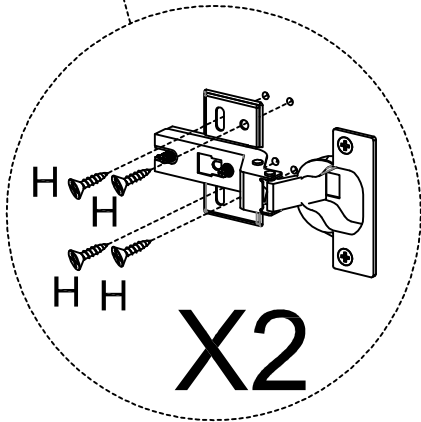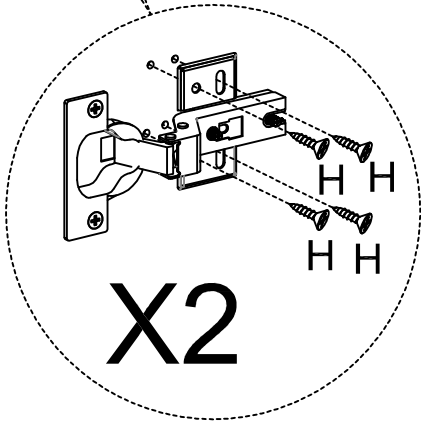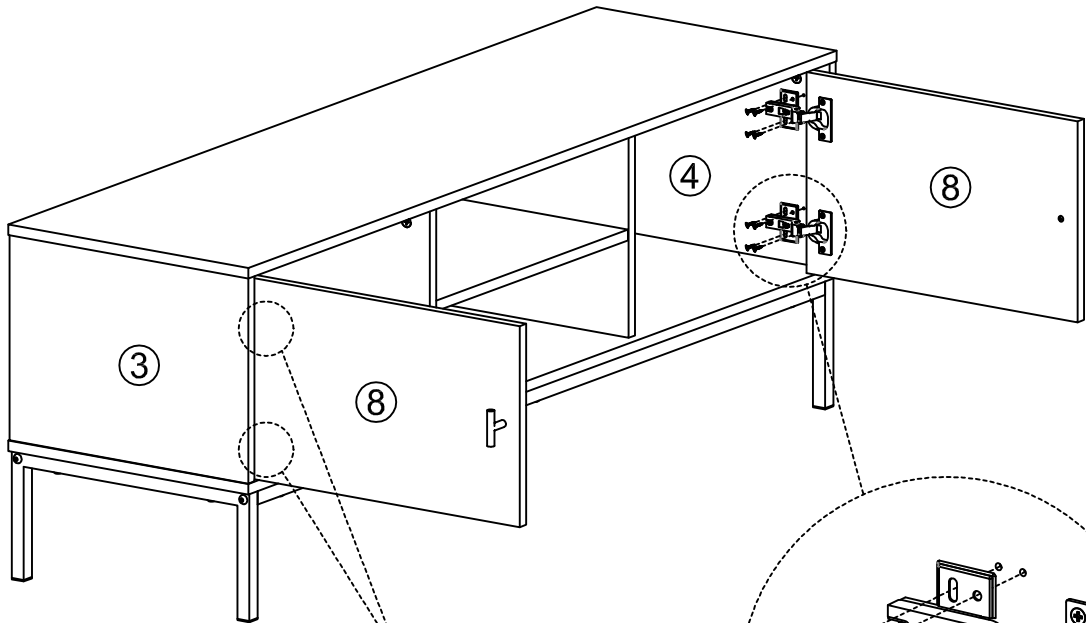

13. Attach the Door Panels to the frame.



H

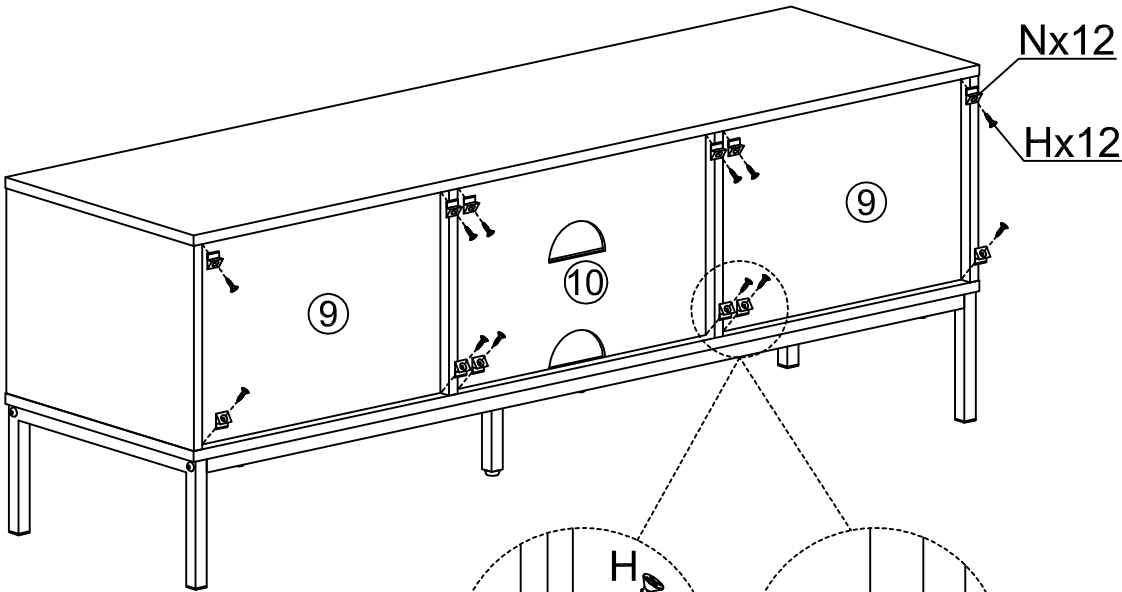M3.5*14mm Screw
16pcs

14. Attach the Plastic Buckles.



H	N
	
M3.5*14mm Screw	plastic Buckle
12pcs	12pcs

15. The Centre Leg is adjustable if necessary.

