

DUSK.COM

LIVING | BEDROOM | DINING



Range Name : Heidi

Box1Dimensions:181.5x66x19.5cm


Box2Dimensions:136x67x16cm

Product Dimension : W120xD55xH180cm

3 Door / 2 Drawer Wardrobe

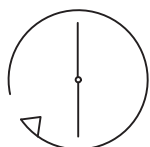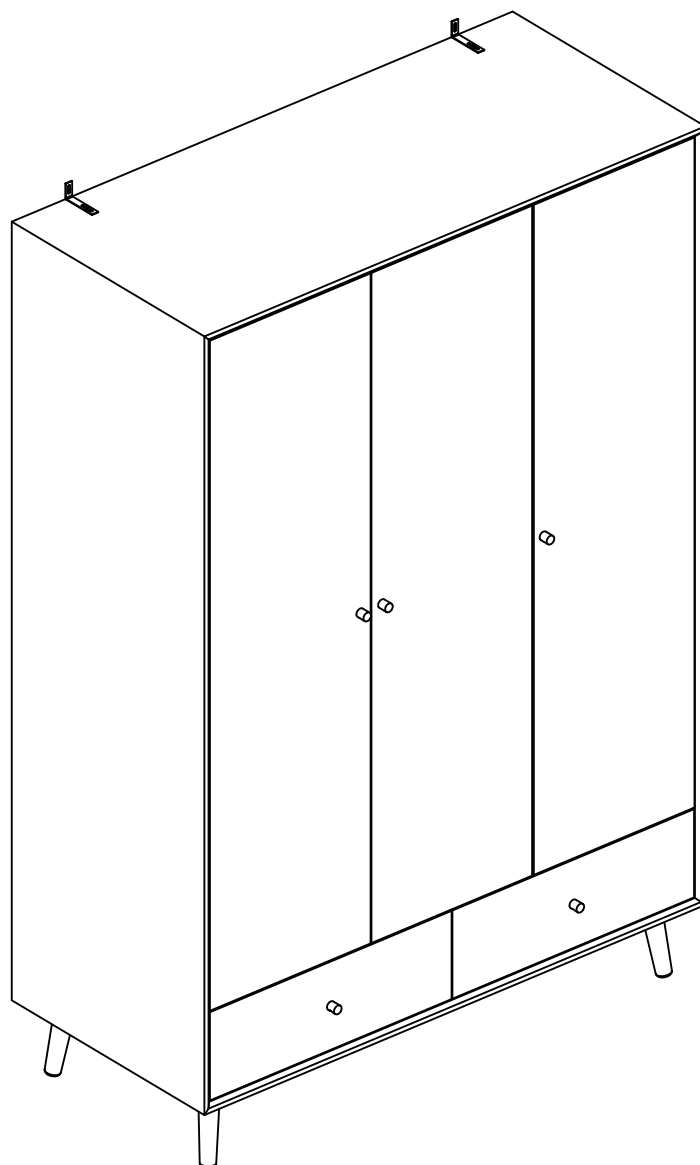

Up to 120 minutes
assembly time

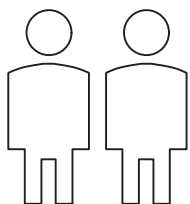

Two person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

V1.0
P-1-17

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

- 1.It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
- 2.Do not stand on your product.
- 3.Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
- 4.Place heaviest items in the lowest drawers.
- 5.Do not set TV or other heavy objects on top of the product.
- 6.Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
- 7.Never keep more than one drawer open at the same time.
- 8.In order to prevent overturning, this product must be used with the wall attachment device provided.
- 9.Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE



- 1.Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
- 2.Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de - laminate.
- 3.Do not scrub or rub the surface when cleaning.
- 4.Do not drag the bedside when moving, lift it off the floor instead.
- 5.Use a potholder or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
- 6.It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
- 7.Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
- 8.Regularly check all fixings to ensure none have come loose. Re - tighten if necessary.
- 9.Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

Before you begin building your Heidi Wardrobe, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.










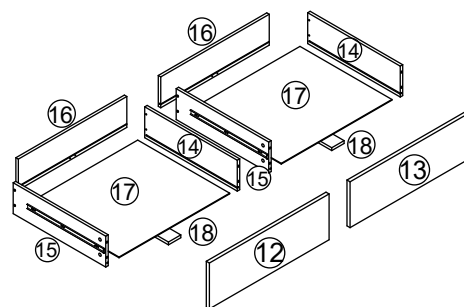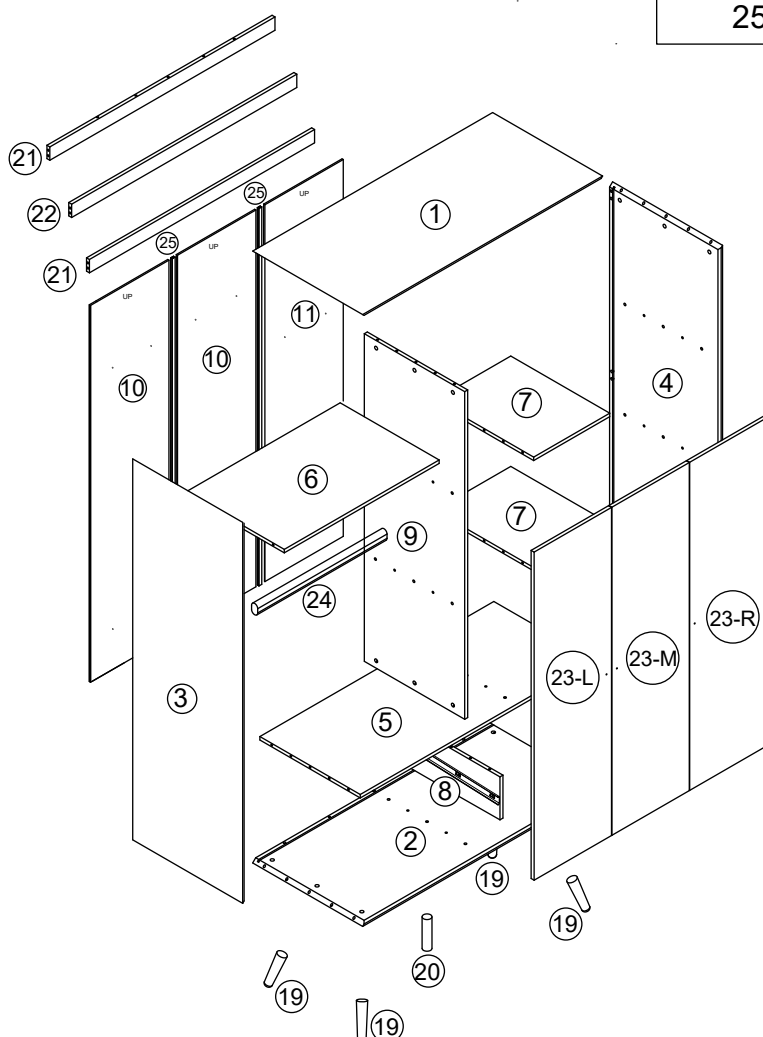














Part Number	Part Description	Quantity
1	Top Panel	1 pc
2	Bottom Panel	1 pc
3	Left Side Panel	1 pc
4	Right Side Panel	1 pc
5	Bottom Shelf Panel	1 pc
6	Left Shelf Panel	1 pc
7	Right Shelf Panel	2 pcs
8	Bottom Middle Panel	1 pc
9	Middle Panel	1 pc
10	Left & Middle Back panel	2 pcs
11	Right Back panel	1 pcs
12	Drawer Front Panel	1 pc
13	Drawer Front Panel	1 pc

Part Number	Part Description	Quantity
14	Drawer Right Side	2 pcs
15	Drawer Left Side	2 pcs
16	Drawer Back Side	2 pcs
17	Drawer Bottom	2 pcs
18	Drawer bottom support	2 pcs
19	Leg	4 pcs
20	Middle Support Leg	1 pc
21	Upper Back Support Bar	2 pcs
22	Middle Back Support Bar	1 pc
23-L	Left Door	1 pc
23-M	Middle Door	1 pc
23-R	Right Door	1 pc
24	Clothes Poles	1 pc
25	Back Slat	2 pcs








Fittings

Please check you have all the fittings listed below with your product.


A  M6x76 CAM Lock Screw 12pcs+1pc extra	B  M6x40 CAM Lock Screw 58pcs+7pcs extra	C  Φ15x11.5mm CAM Lock 72pcs+9pcs extra	D  Φ12x9.5mm CAM Lock 10pcs+1pc extra	E  Φ8x30mm Wooden Dowel 44pcs+5pcs extra	F  15x9mm Plastic Buckle 16pcs+2pcs extra
G  M3x25mm Screw 12pcs+1pc extra	H  M3.5x15mm Screw 18pcs+2pcs extra	I  Clothes Tray 2pcs	J  Φ20x25mm Metal Handle 5 pcs	K  M4x20mm Handrail wire 5pcs	L  Metal Plate 4pcs
M  M4x15mm Screw 74pcs+9pcs extra	N  Hinge 6pcs	O  Hinge 3pcs	P  76x25mm L-shaped Bracket 2pcs	Q  M4x12mm Screw 2pcs	R  Φ6x30mm Expansion Tube 2pcs
S  M4x35mm Screw 2pcs	T  Φ18mm Felt Pad 4pcs	U  Door Sucker 6pcs	V  Cover 82pcs+10pcs extra	Z  M3x15mm Screw 40 pcs+5pcs extra	X  45x12mm Metal Sheet 6pcs



Pre-assembled Fittings.

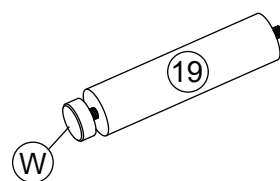

W  Adjustable Foot 1pcs	X1  Slide pre assembled 4pcs	X2  Slide pre assembled 4pcs	Y  M3x12mm Screw 24pcs
--	---	---	---

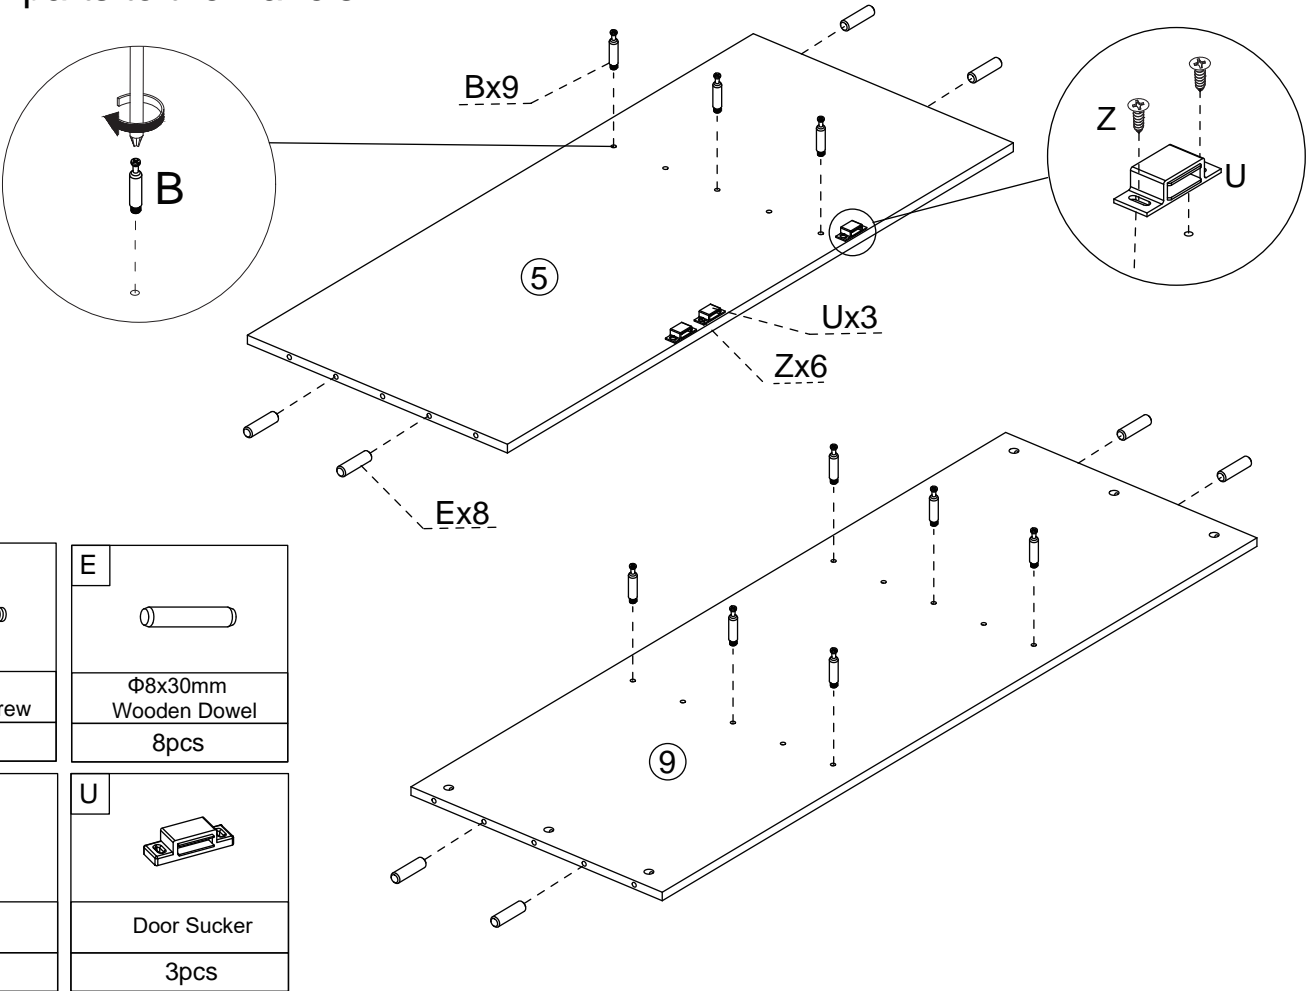


1.Attach parts to the Panels.





B		E	
M6x40 CAM Lock Screw		Φ8x30mm Wooden Dowel	
9pcs		8pcs	


Z		U	
M3x15mm Screw		Door Sucker	
6pcs		3pcs	

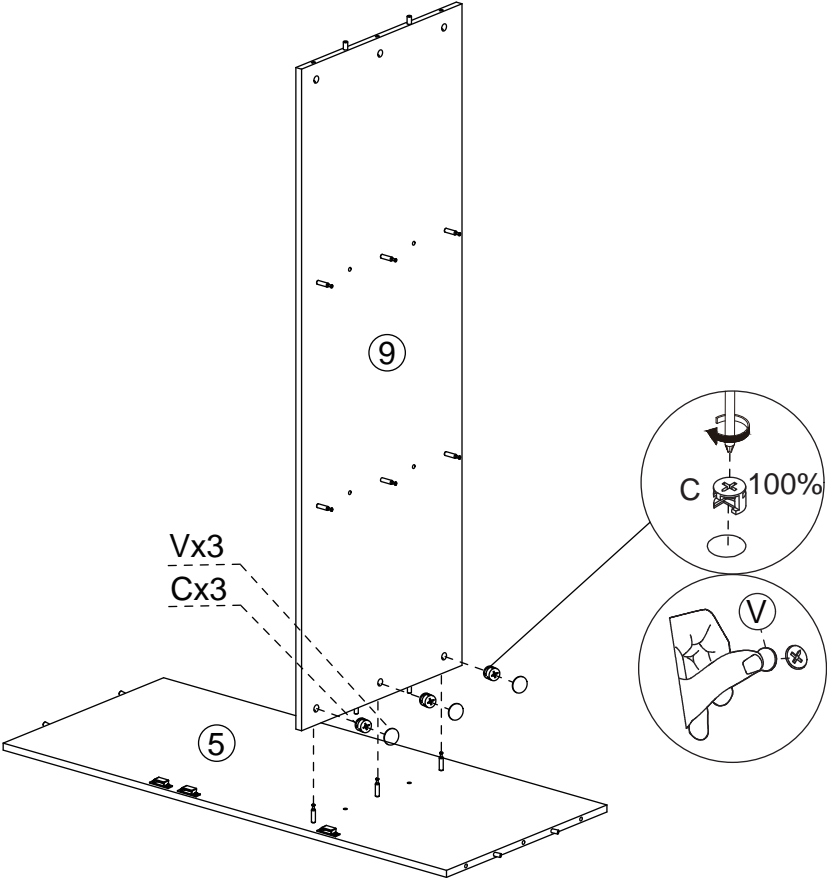2.Attach the Middle Panel to Bottom Shelf Panel.




C		V	
Φ15x11.5mm CAM Lock		Cover	
3pcs		3pcs	


3.Attach parts to the Panels.

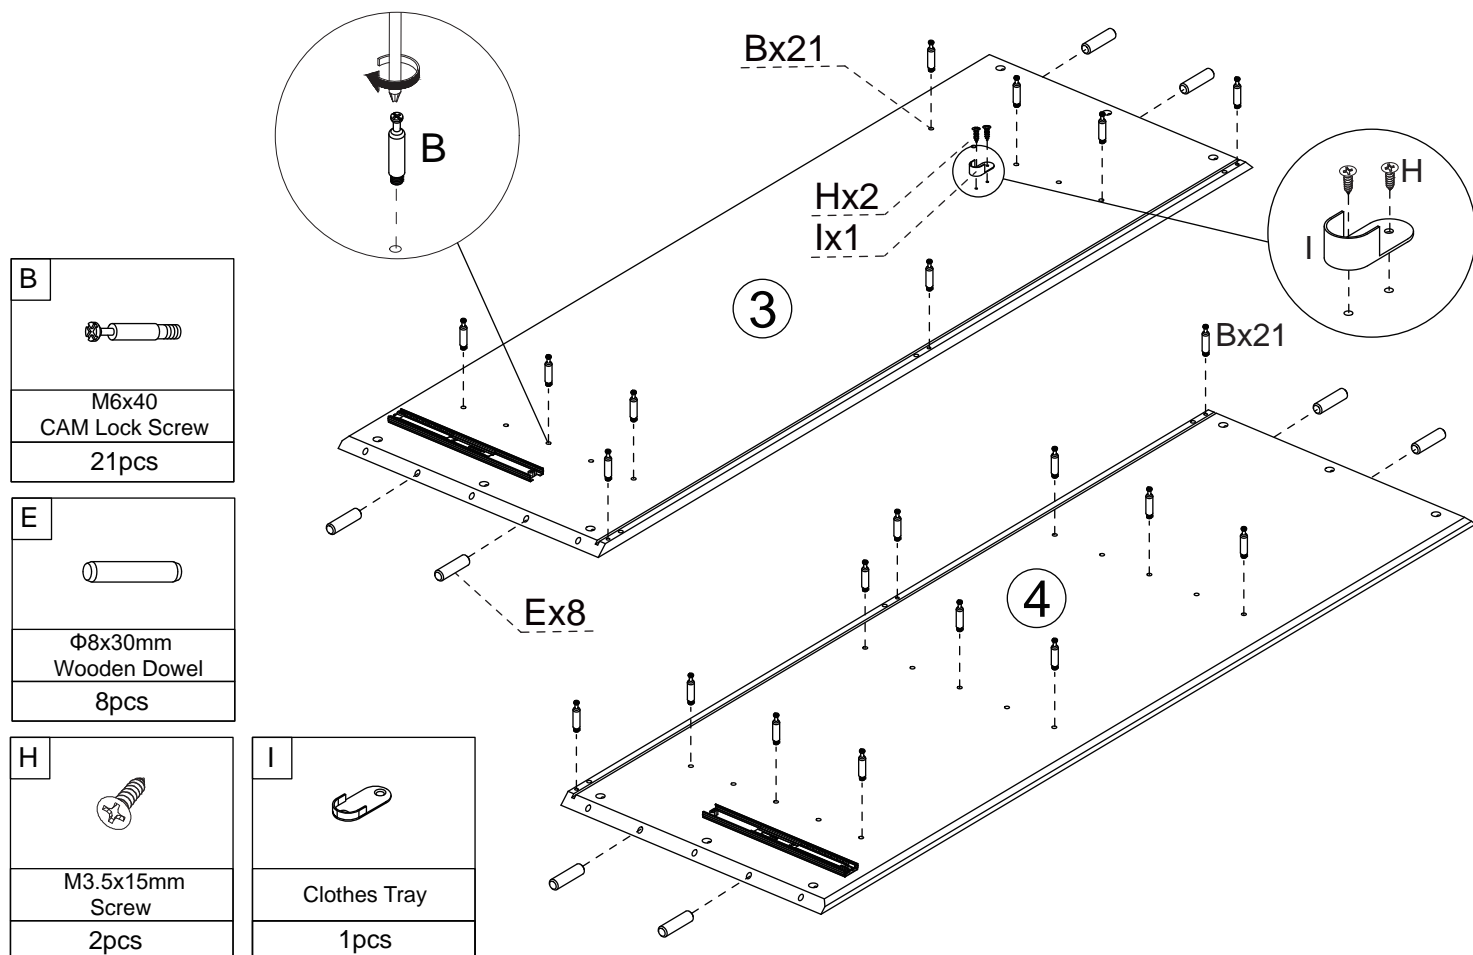


4.Attach parts to the Panels.

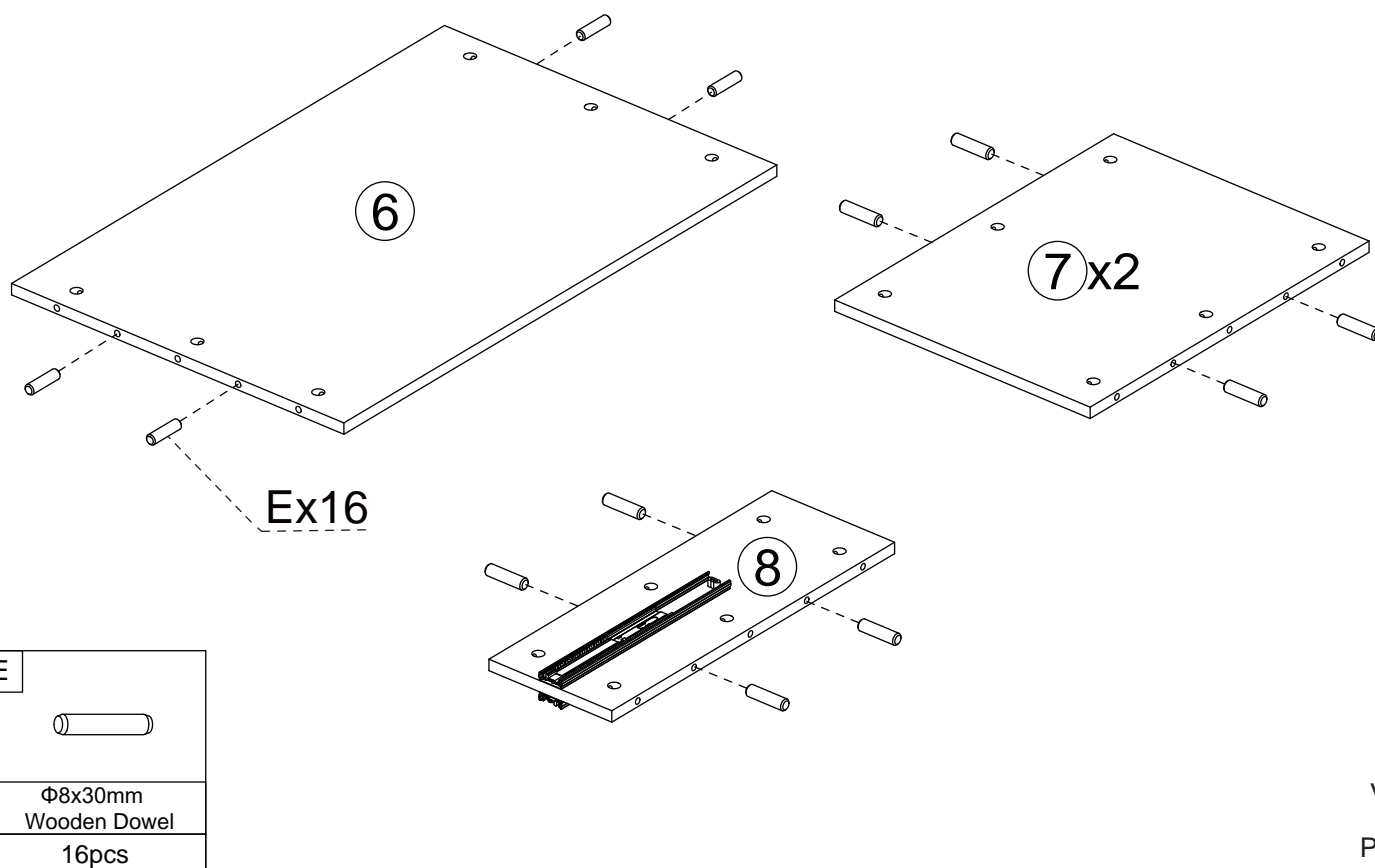


5. Attach the Shelf Panel and Middle panels to Right side panel.

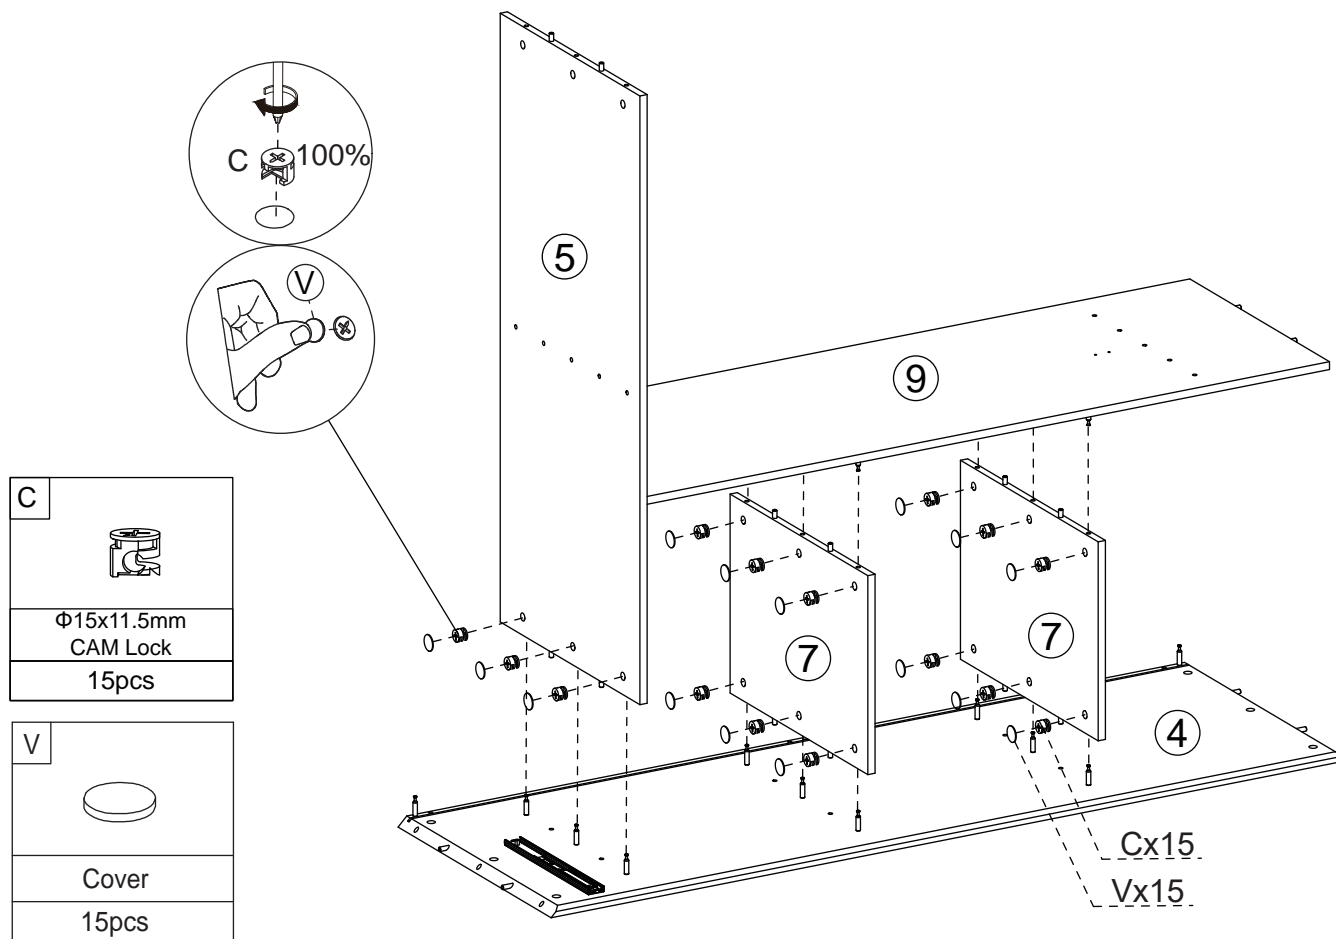


6. Attach parts to the Panels.

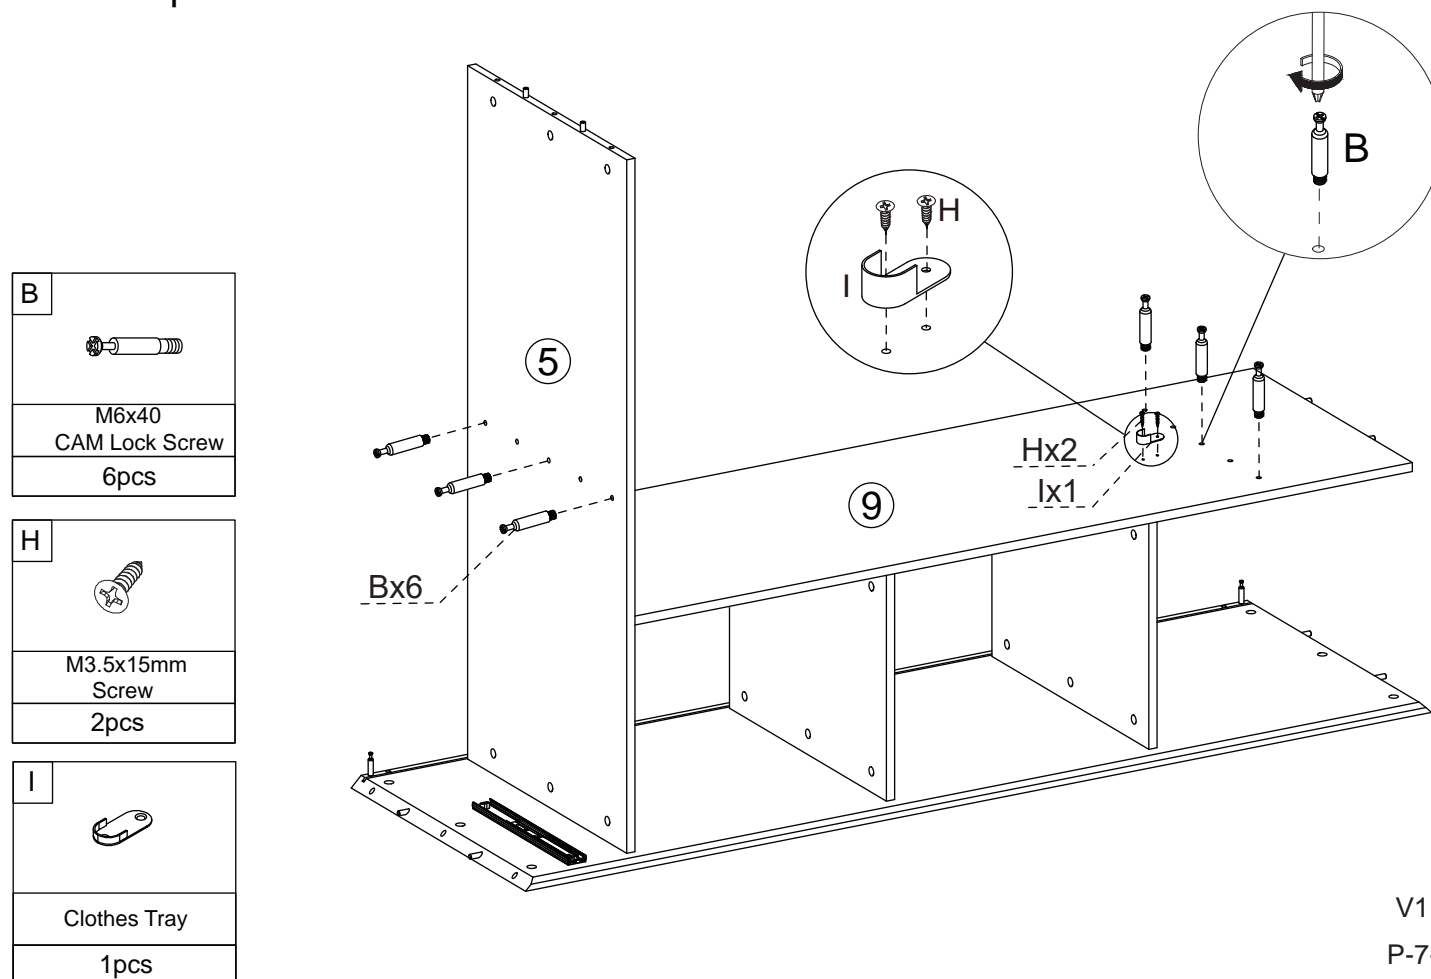


7. Attach the Left Shelf Panel into the Frame.

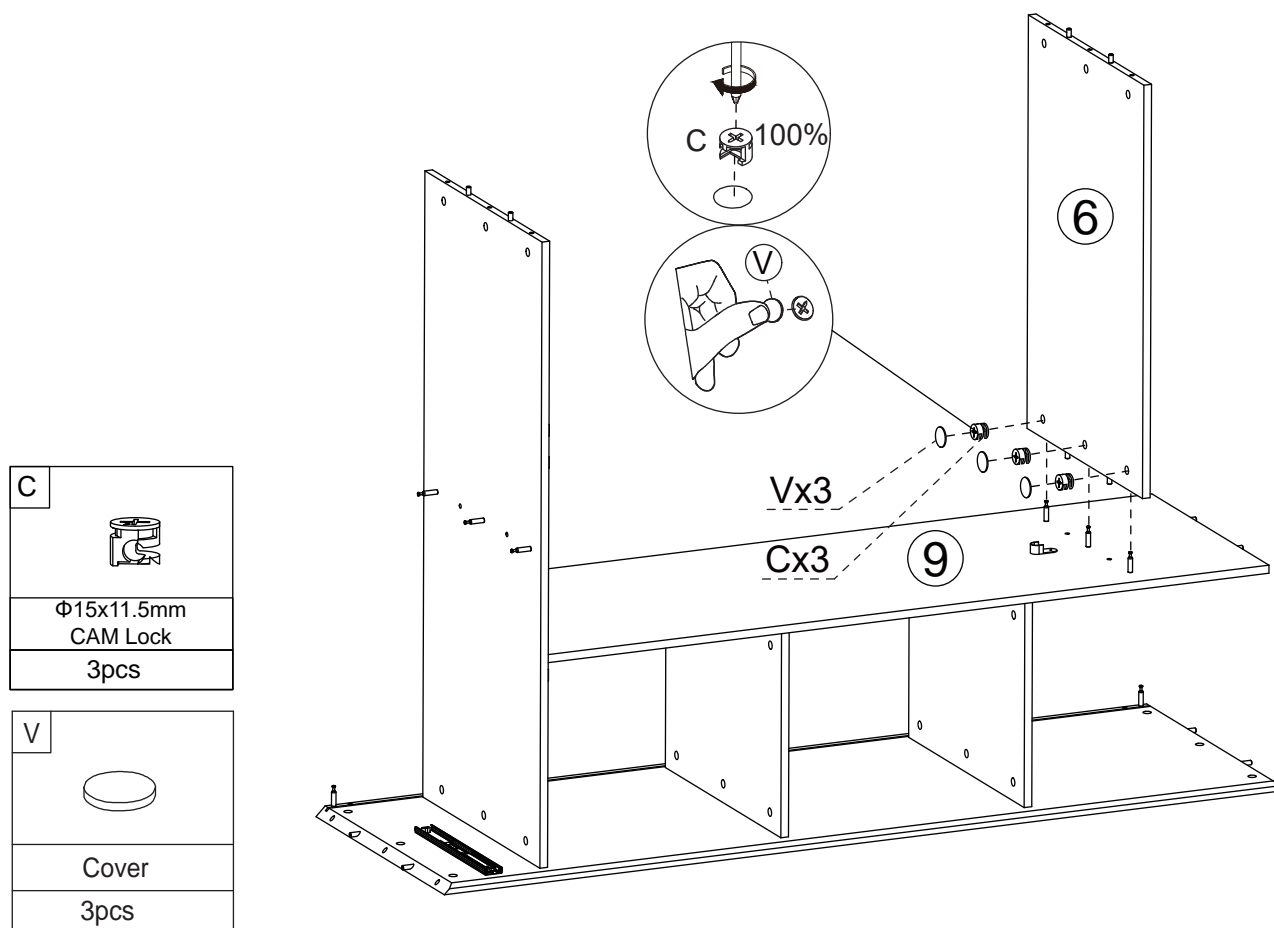



8. Attach the Left side panel into the Frame.

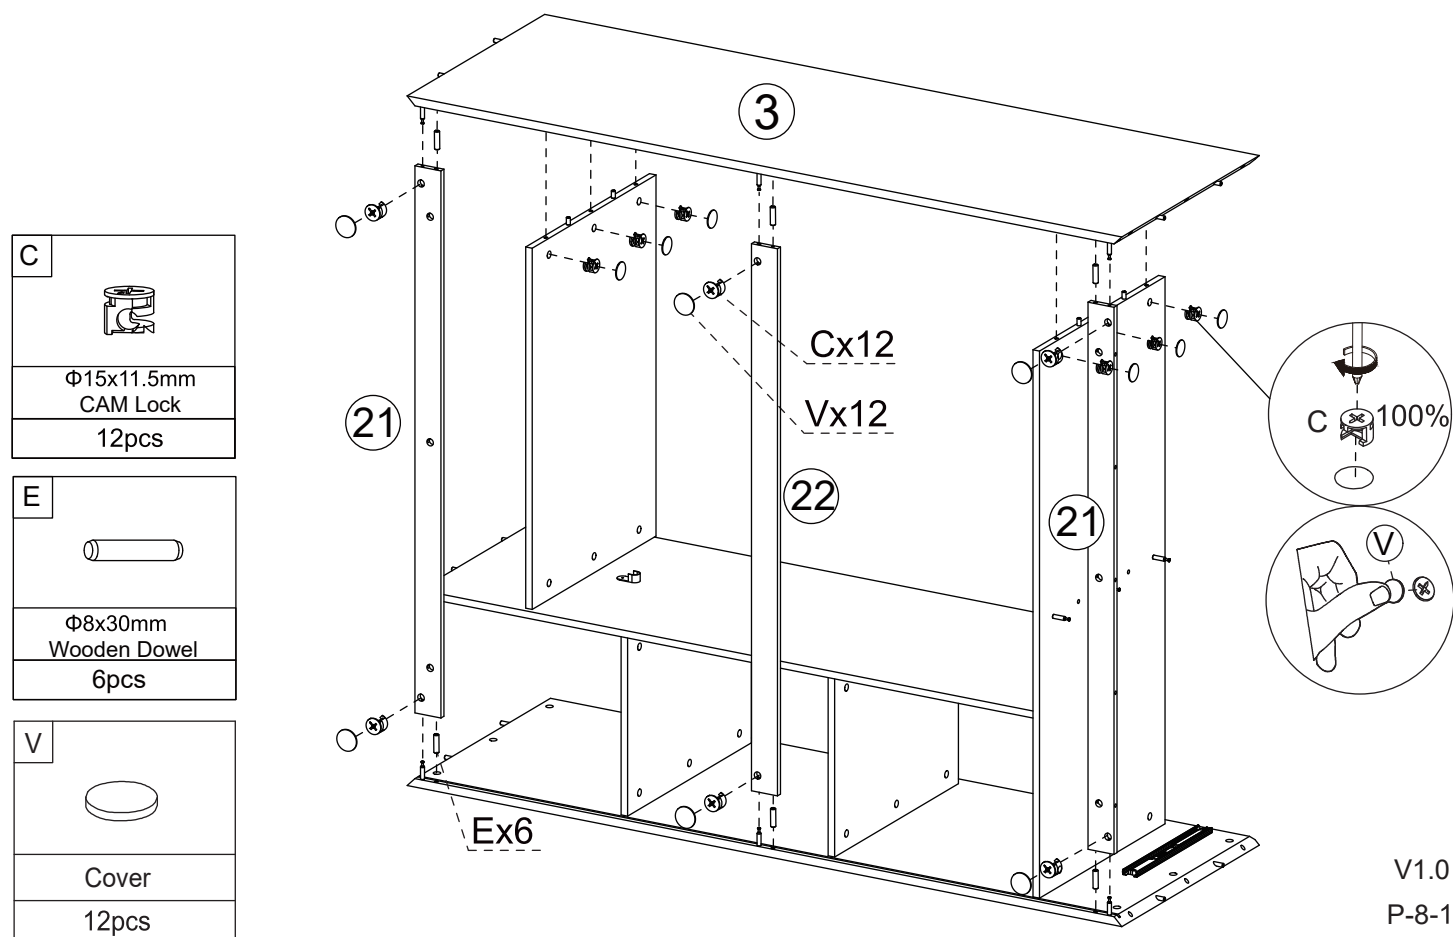

9. Attach parts to the Panels.

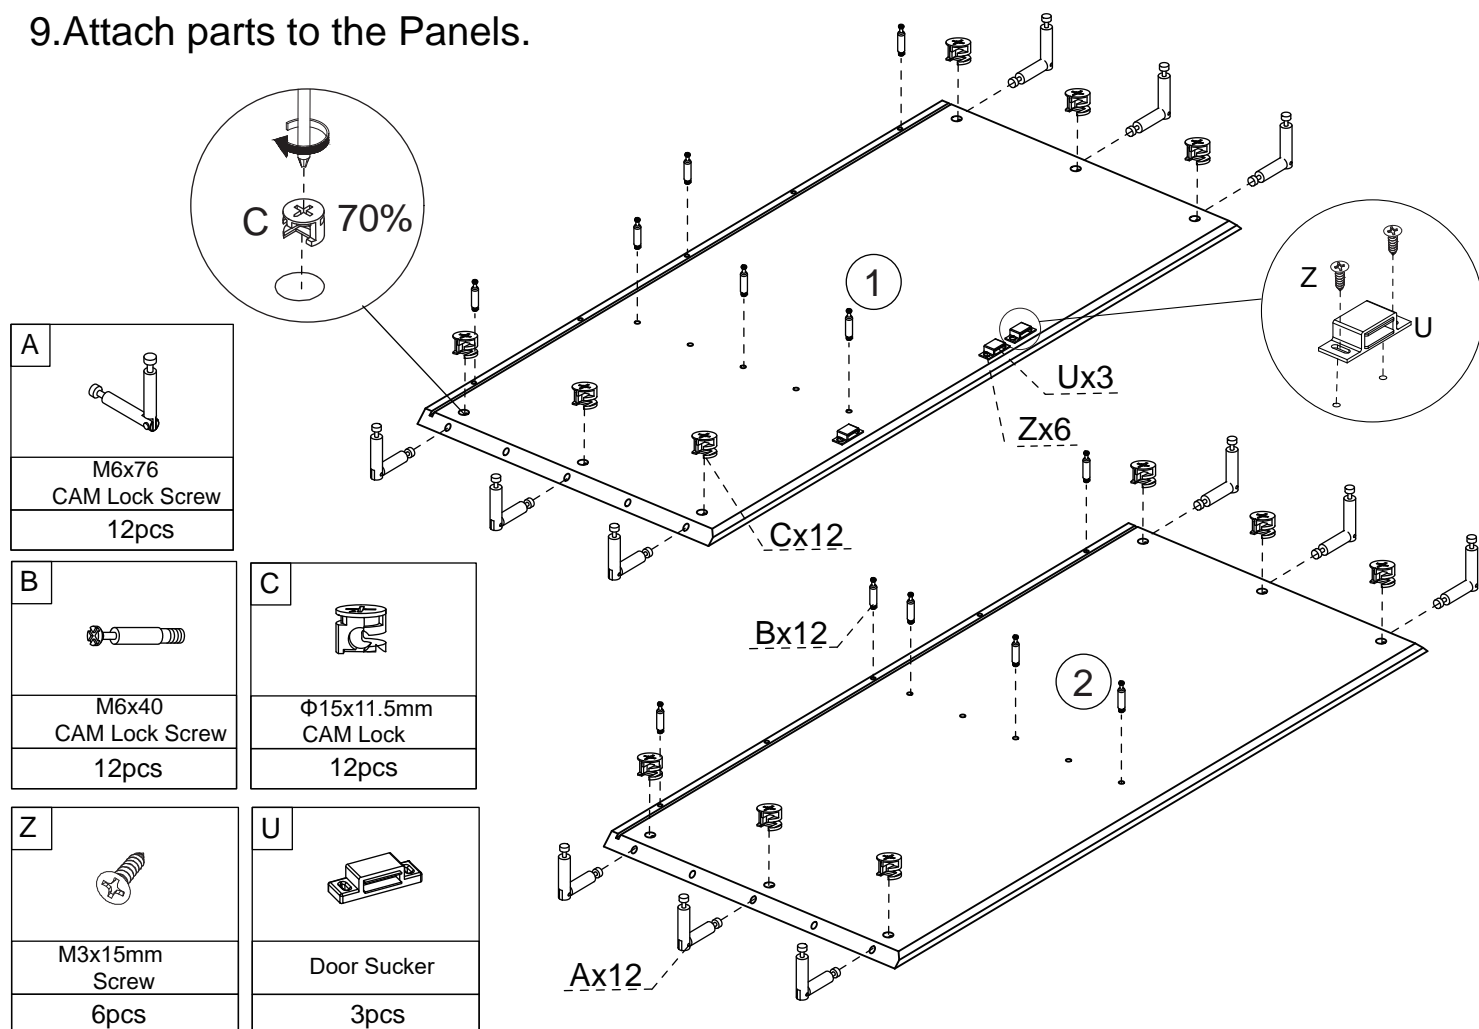


10. Attach Bottom middle panel to Bottom panel.

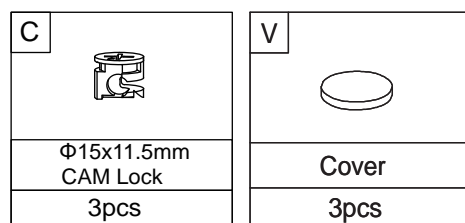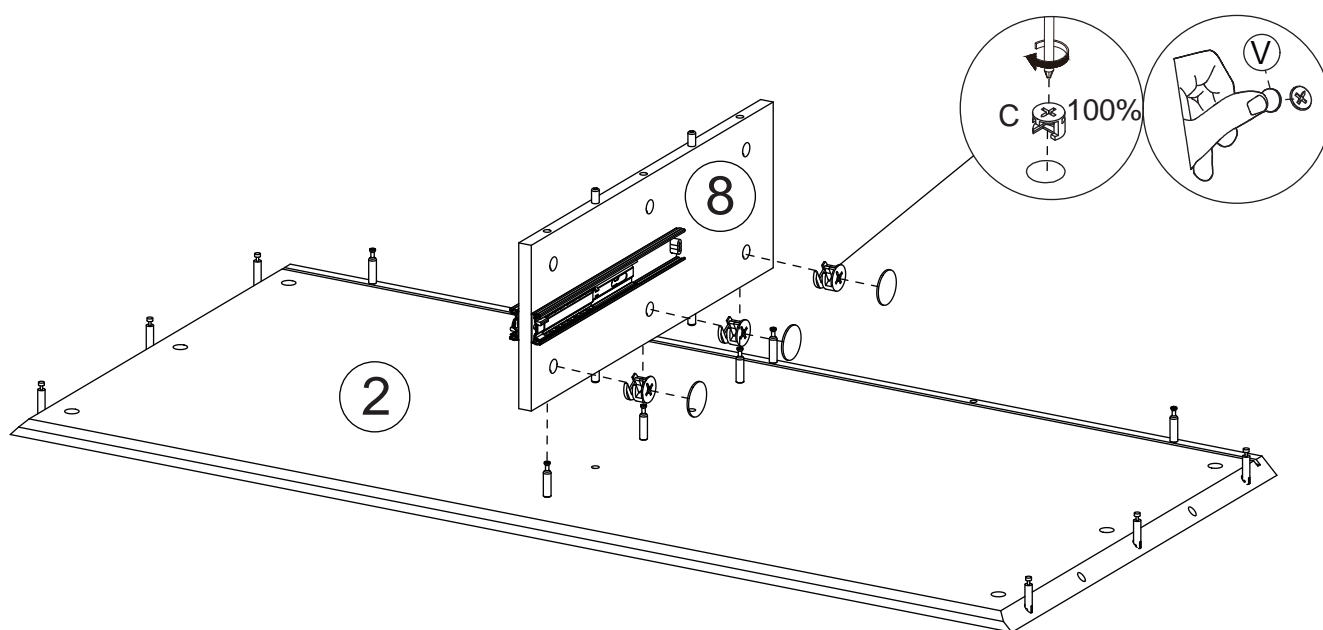

11.Attach the Bottom Panel to the Frame.


C



Φ15x11.5mm
CAM Lock

12pcs


E



Φ8x30mm
Wooden Dowel


2pcs

V





Cover




12pcs

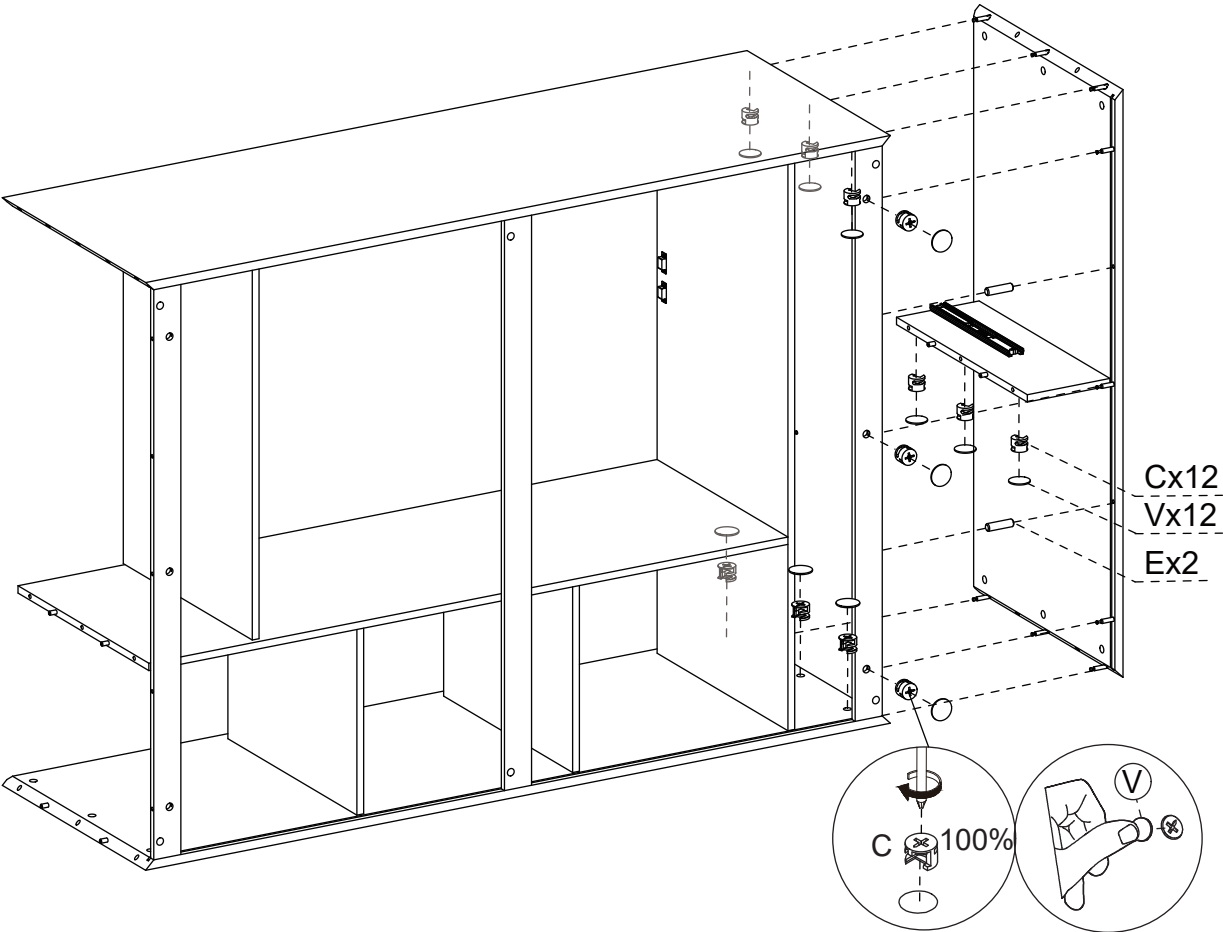


12.Attach the Back Panels into the Frame.

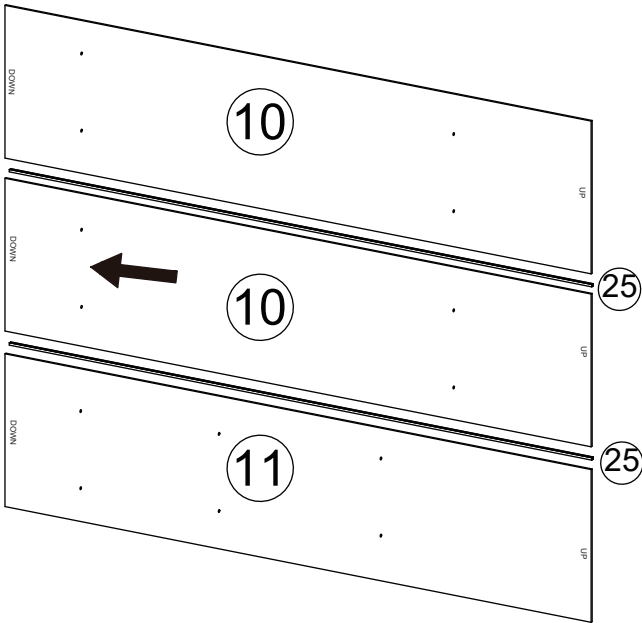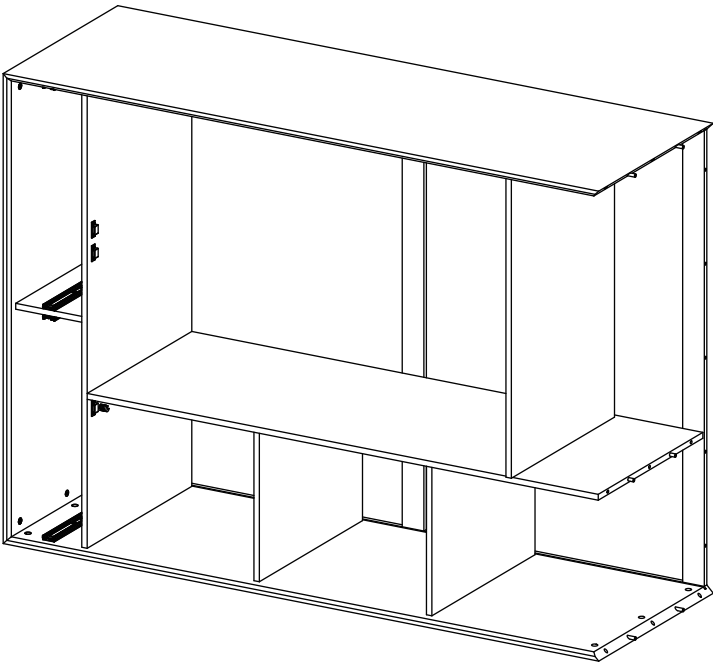




13.Attach the Top Panel to the Frame.

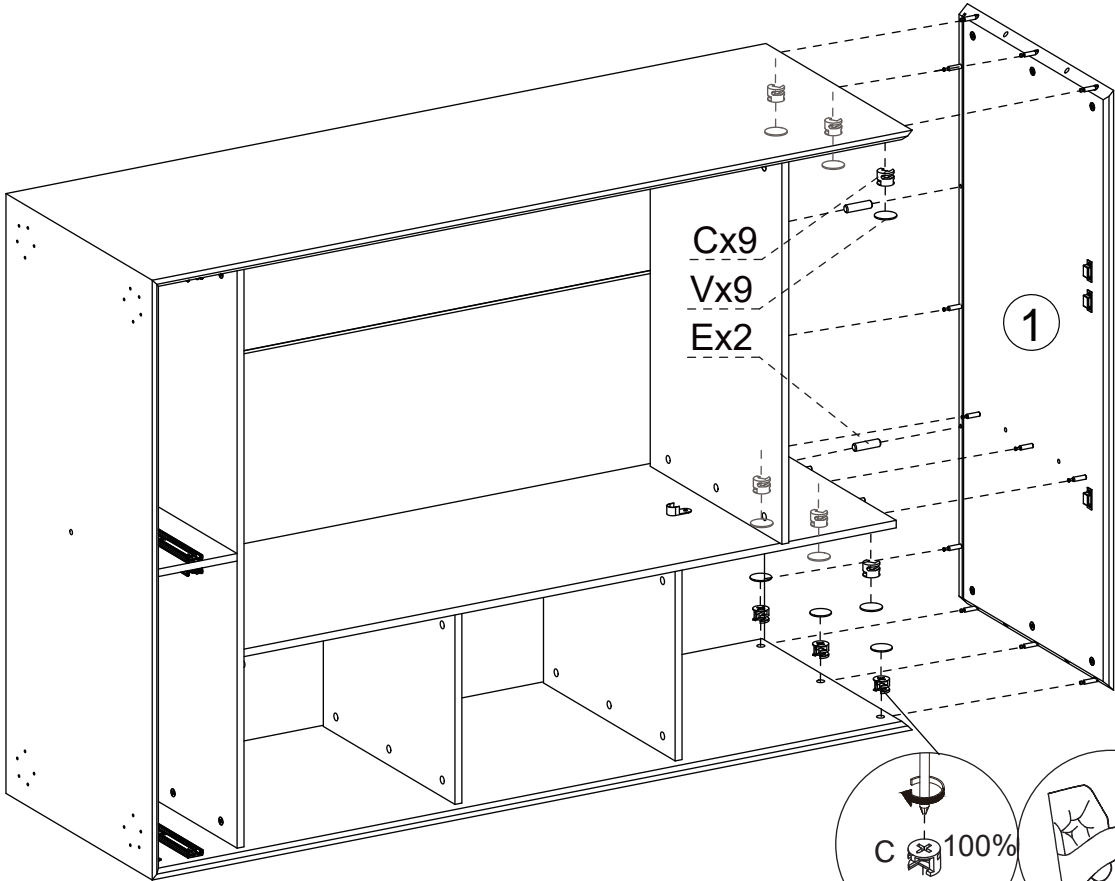C	
Φ15x11.5mm CAM Lock	
9pcs	
E	
Φ8x30mm Wooden Dowel	
2pcs	
V	
Cover	
9pcs	






14.Attach the cam locks and paste the cover.

C	
Φ15x11.5mm CAM Lock	
3pcs	
V	
Cover	
15pcs	

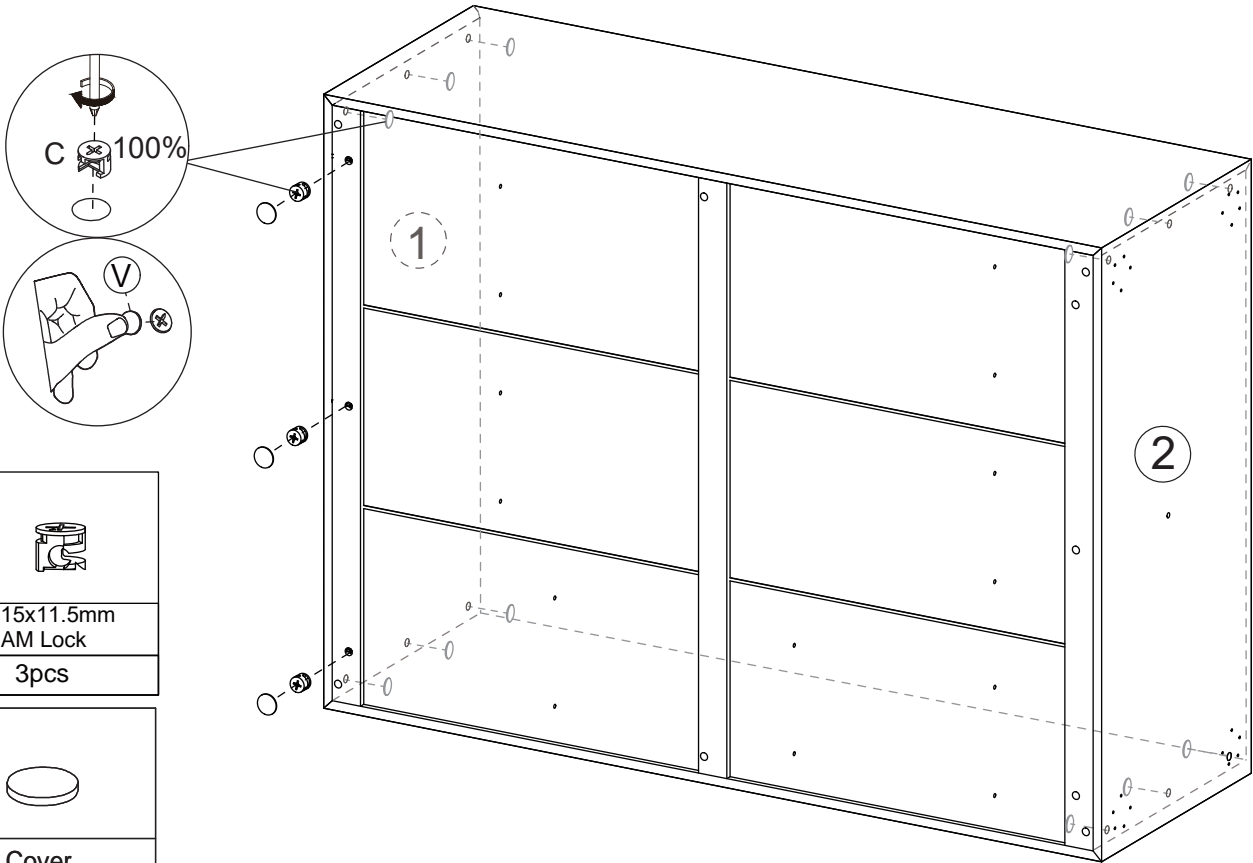



15.Attach the Metal Plate.

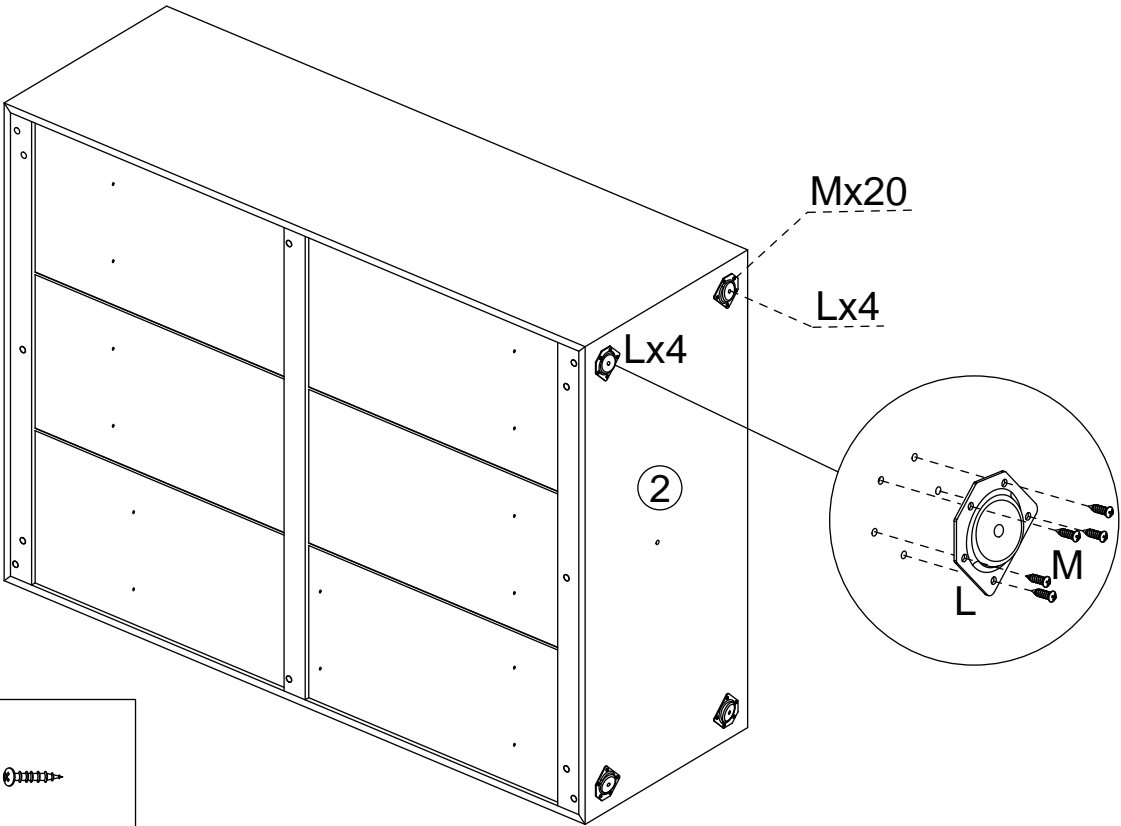


L	M
	
Metal Plate	M4x15mm Screw
4pcs	20pcs

16.Attach the legs.

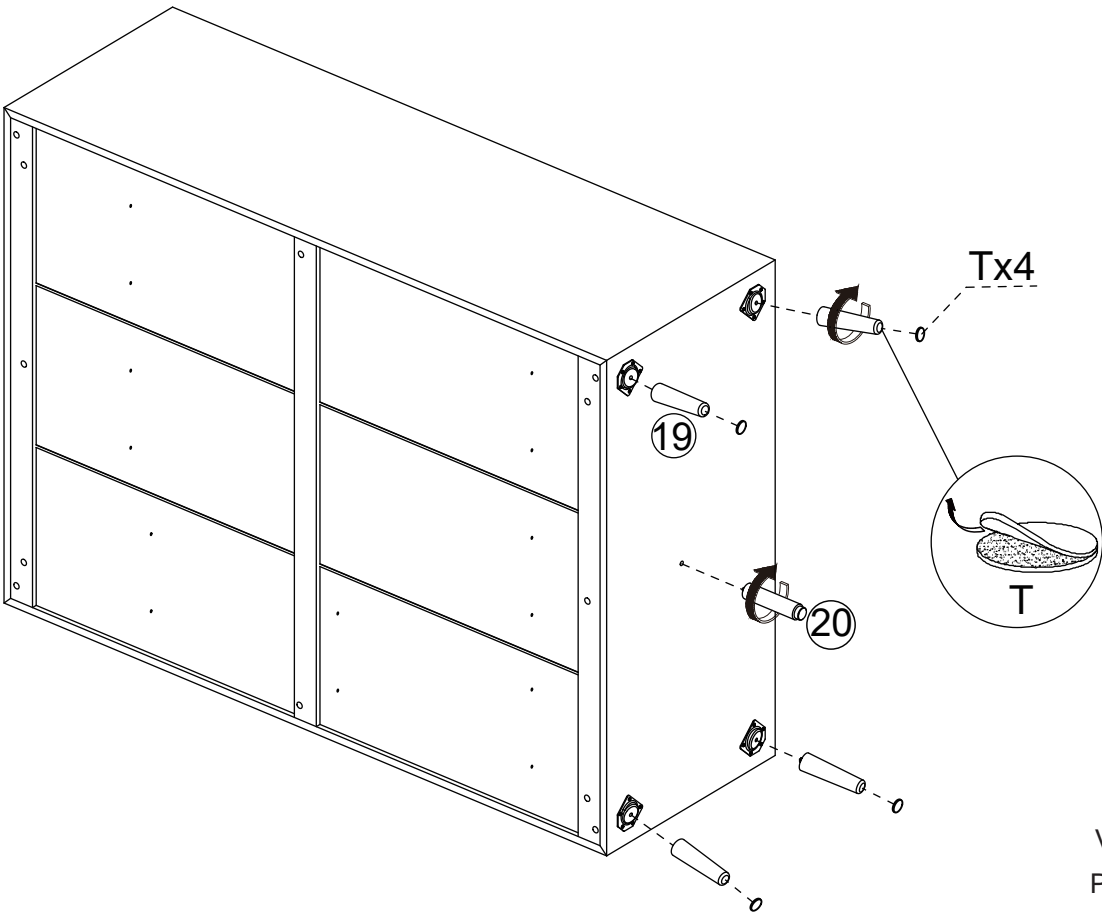


T

Φ18mm Felt pad
4pcs

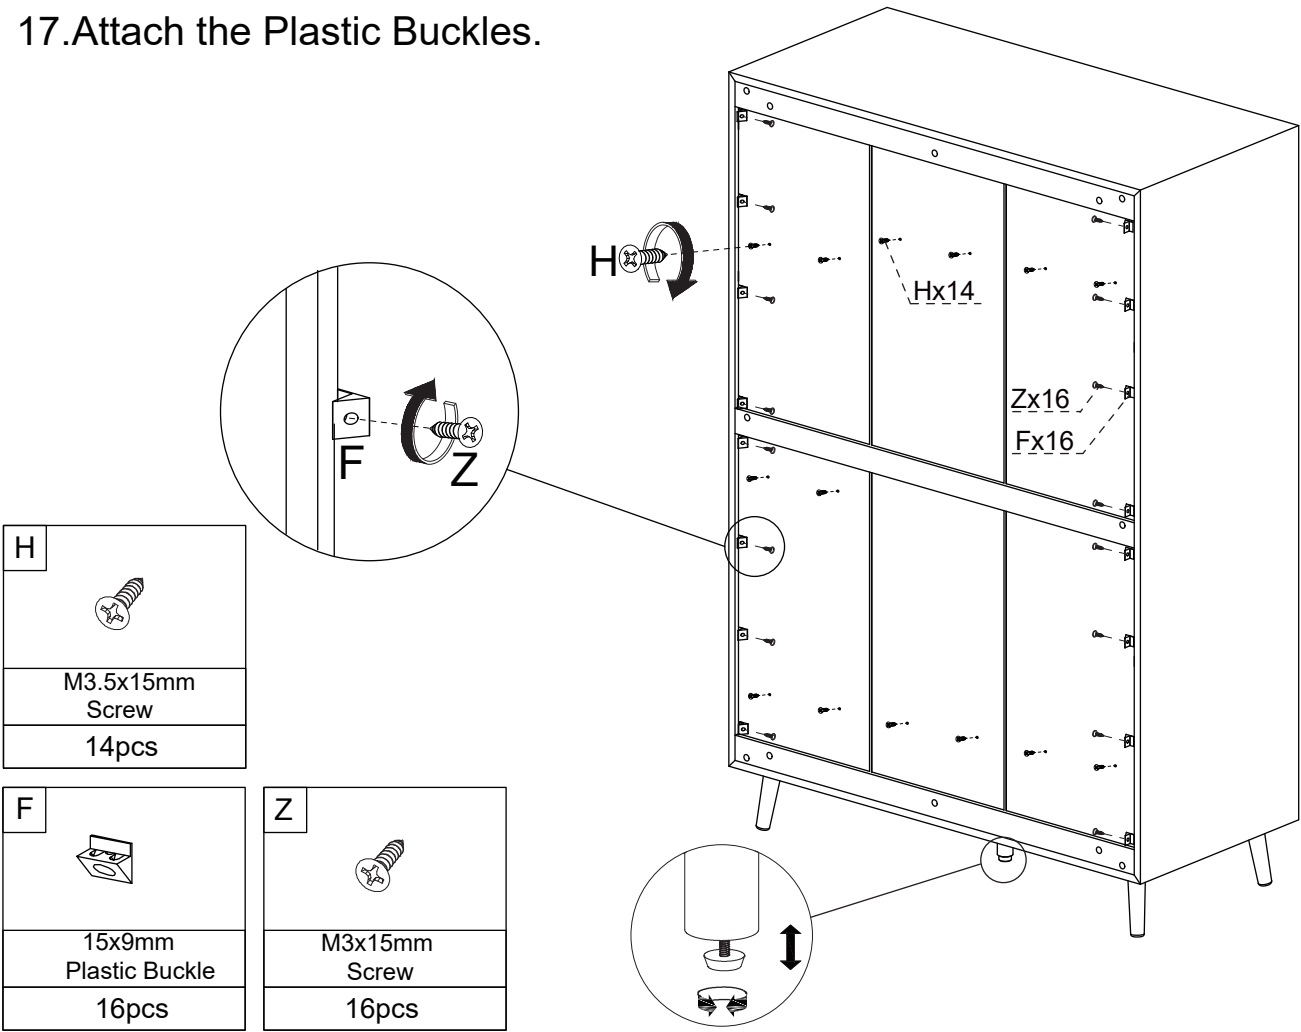


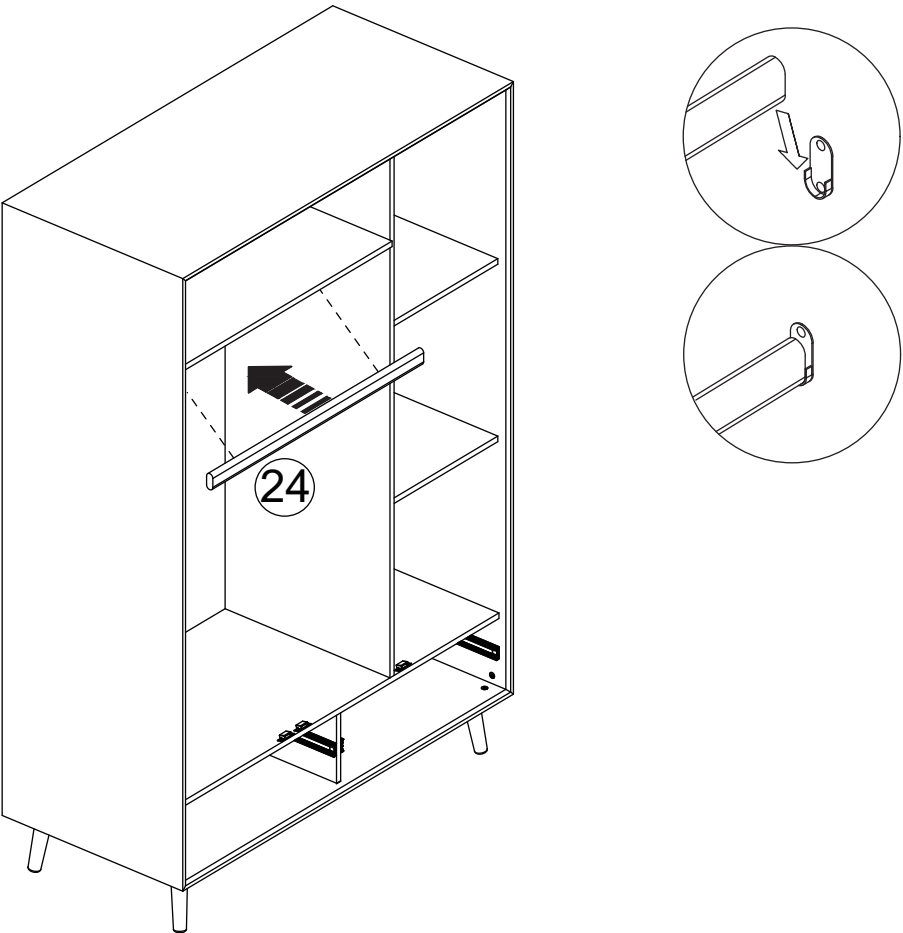


17.Attach the Plastic Buckles.




18.Put the Clothes Poles into the Frame.




19.Attach parts to the Doors.


M		X	
M4x15mm Screw		45x12mm Metal Sheet	
18pcs		6pcs	
N		O	
Hinge		Hinge	
6pcs		3pcs	
J		K	
Φ20x25mm Metal Handle		M4x20mm Handrail wire	
3pcs		3pcs	

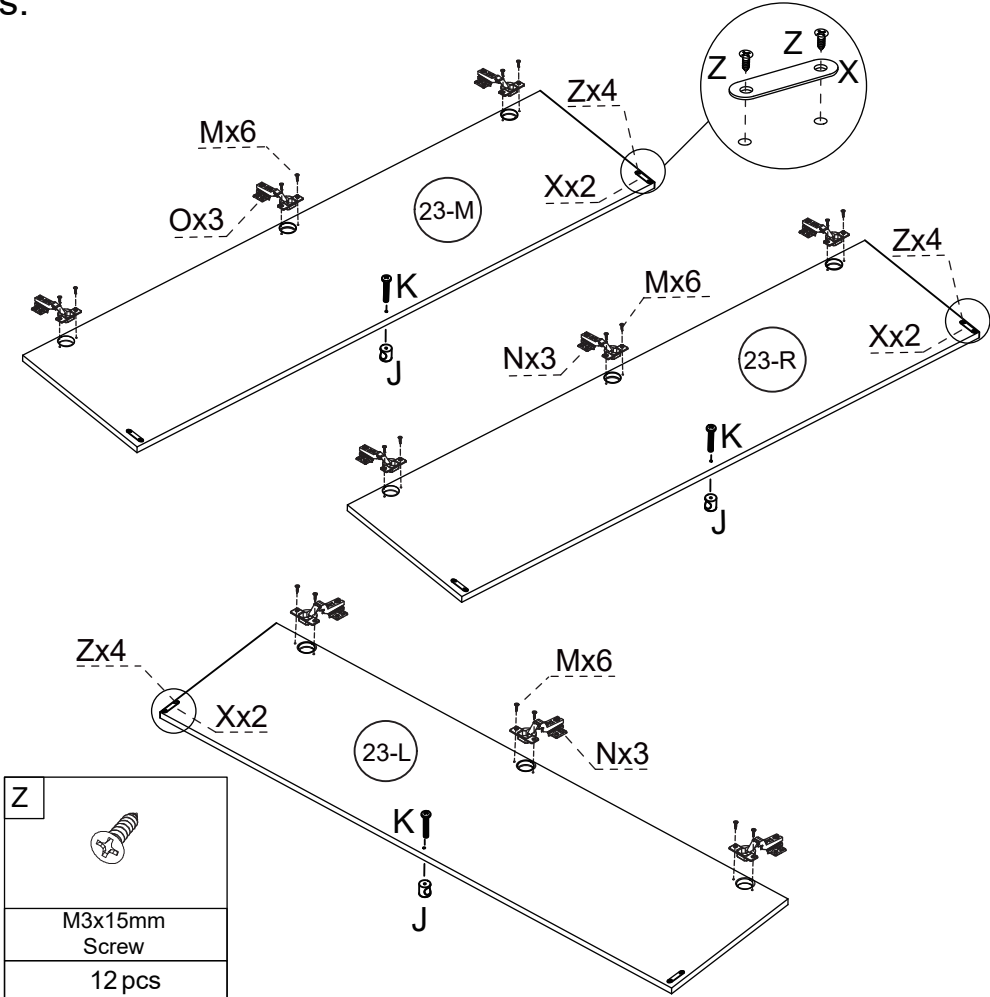


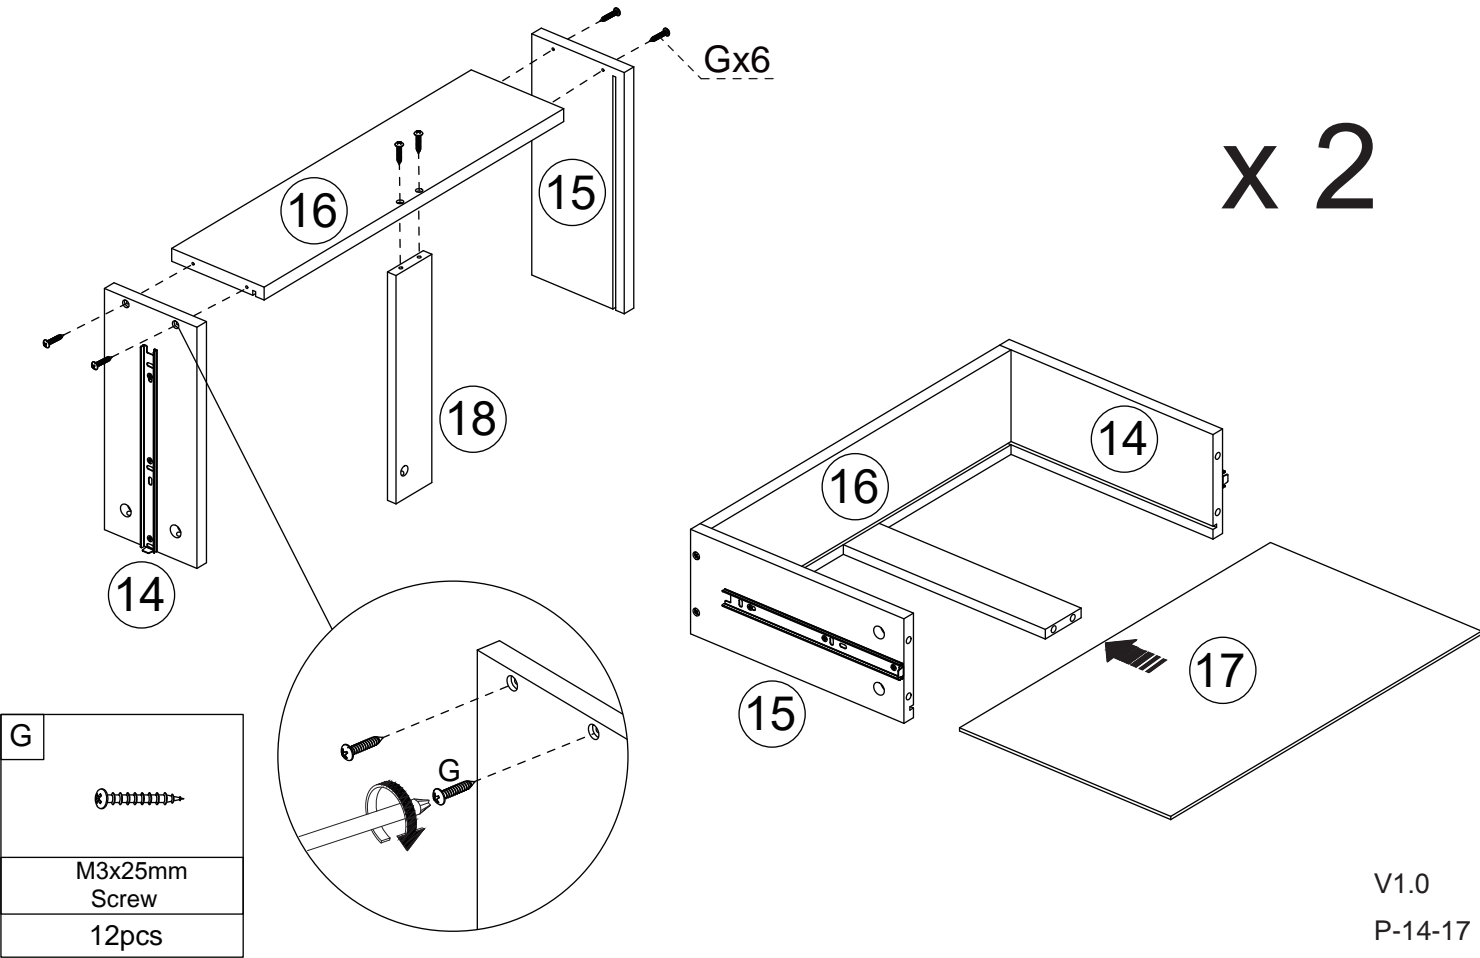


20.Attach parts to the drawer.




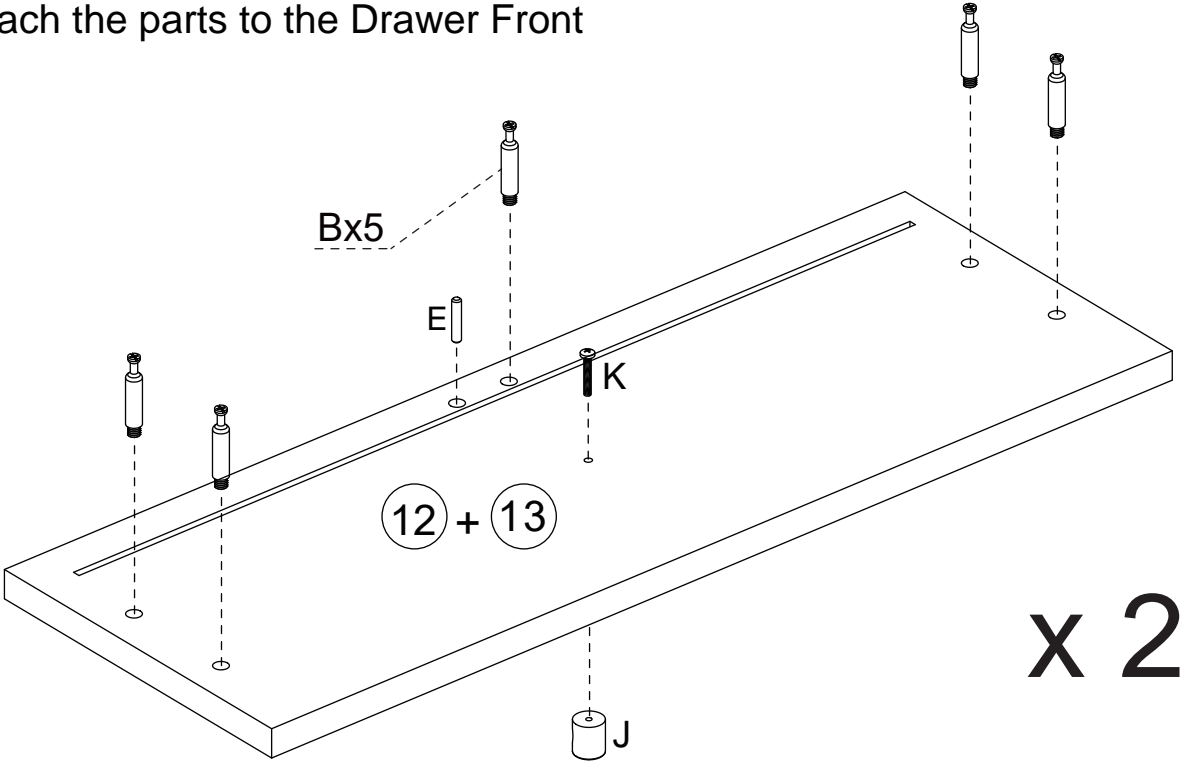

21.Attach the parts to the Drawer Front





B	J	K	E
			
M6x40 CAM Lock Screw 10pcs	Φ20x25mm Metal Handle 2pcs	M4x20mm Handrail wire 2pcs	Φ8x30mm Wooden Dowel 2pcs

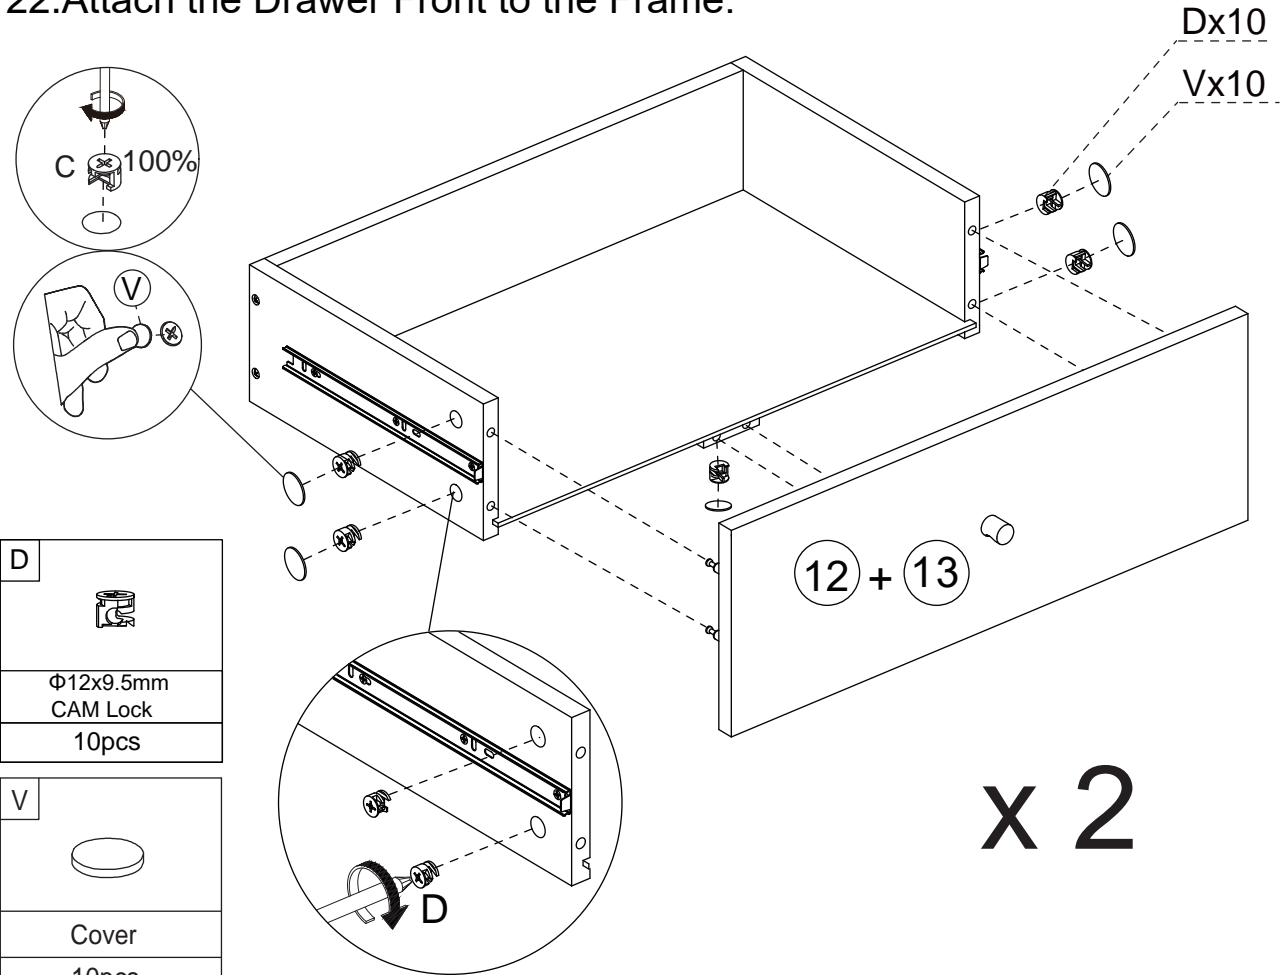22.Attach the Drawer Front to the Frame.





D	V
	
Φ12x9.5mm CAM Lock 10pcs	Cover 10pcs

23.Assemble the drawers in the Wardrobe.

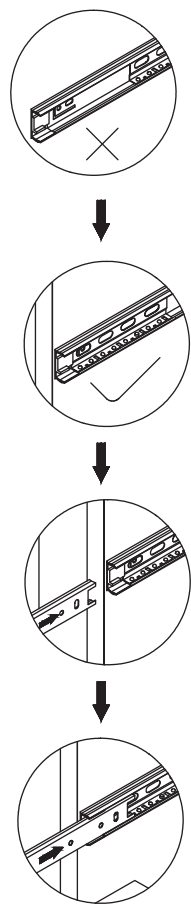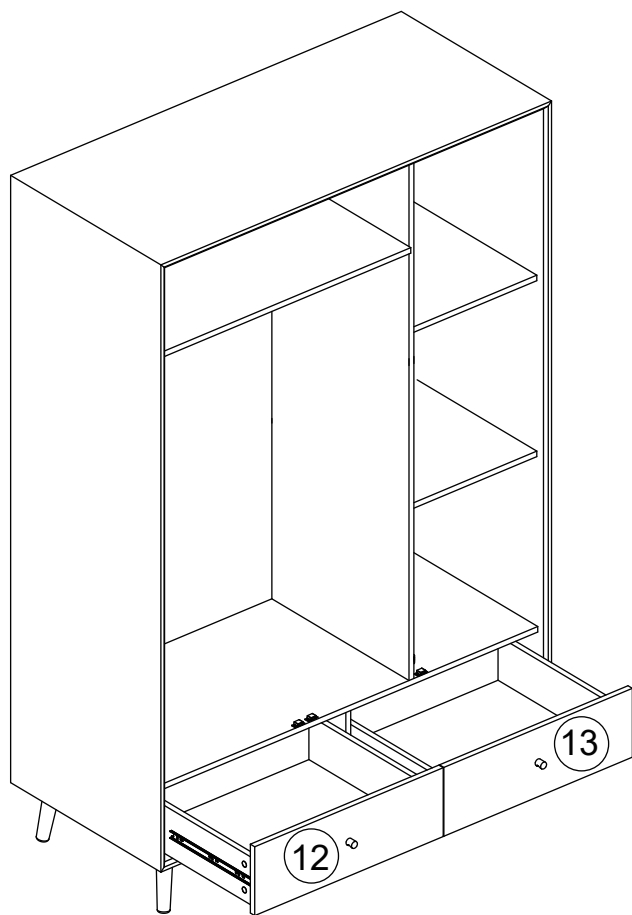



24.Attach the Doors to the Frame.

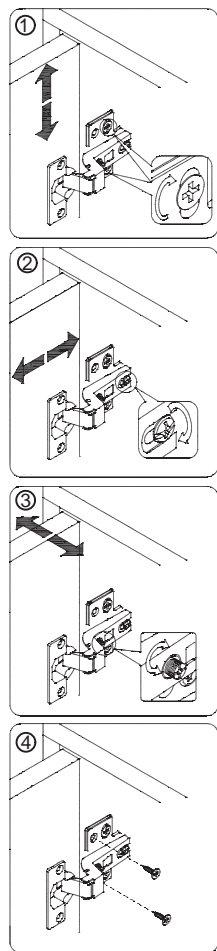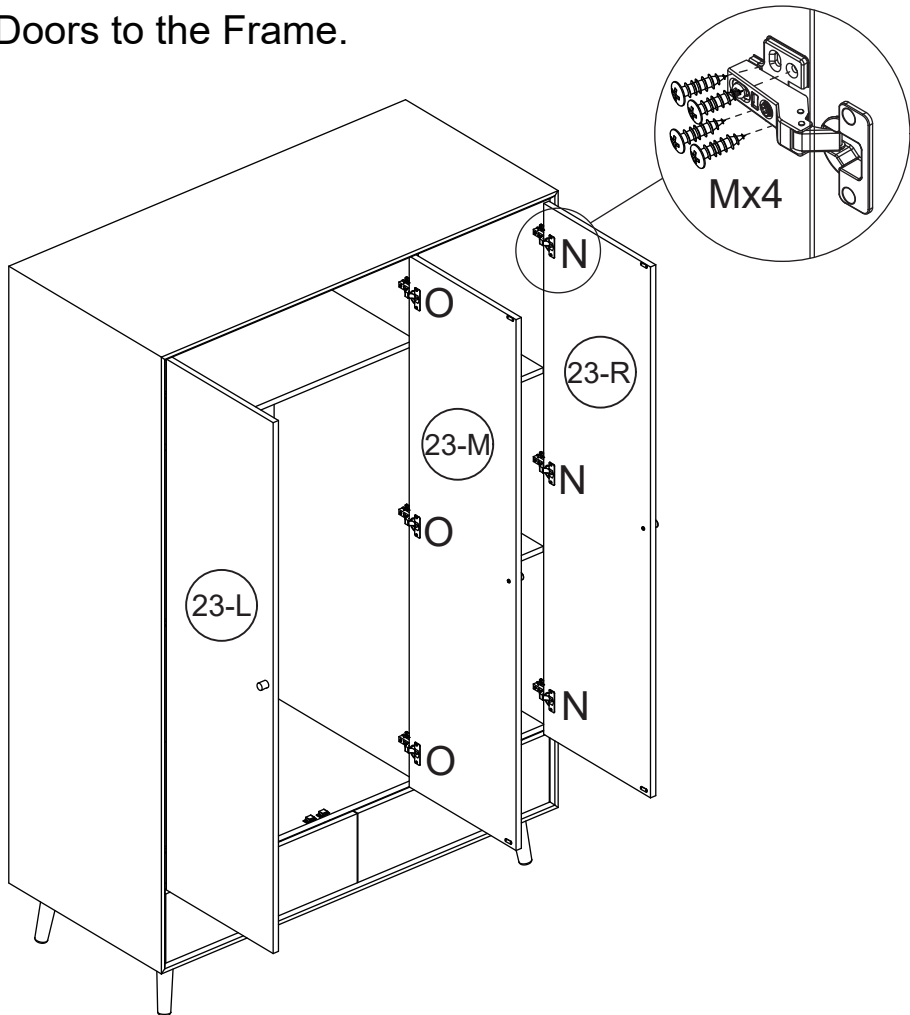


M
M4x15mm Screw
36pcs


25. Attach parts to the frame and adjust the pushers to appropriate position.

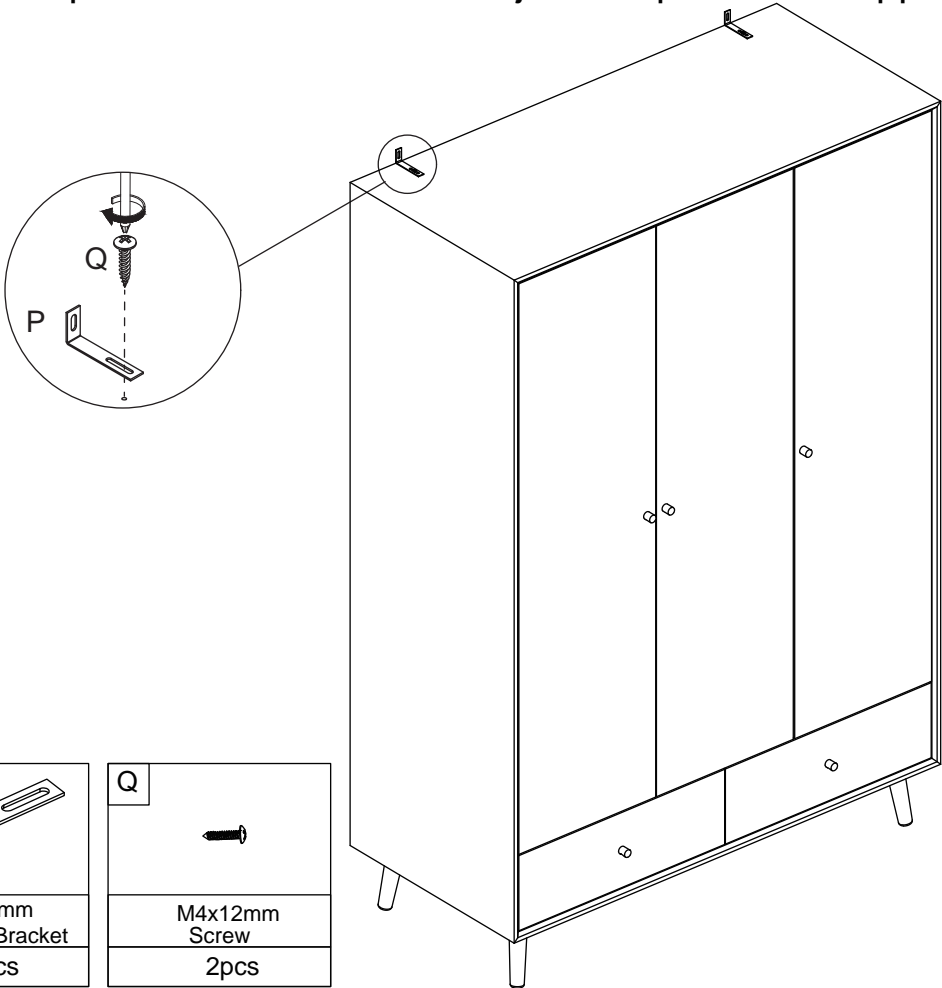



P

76x25mm L-shaped Bracket
2pcs

Q

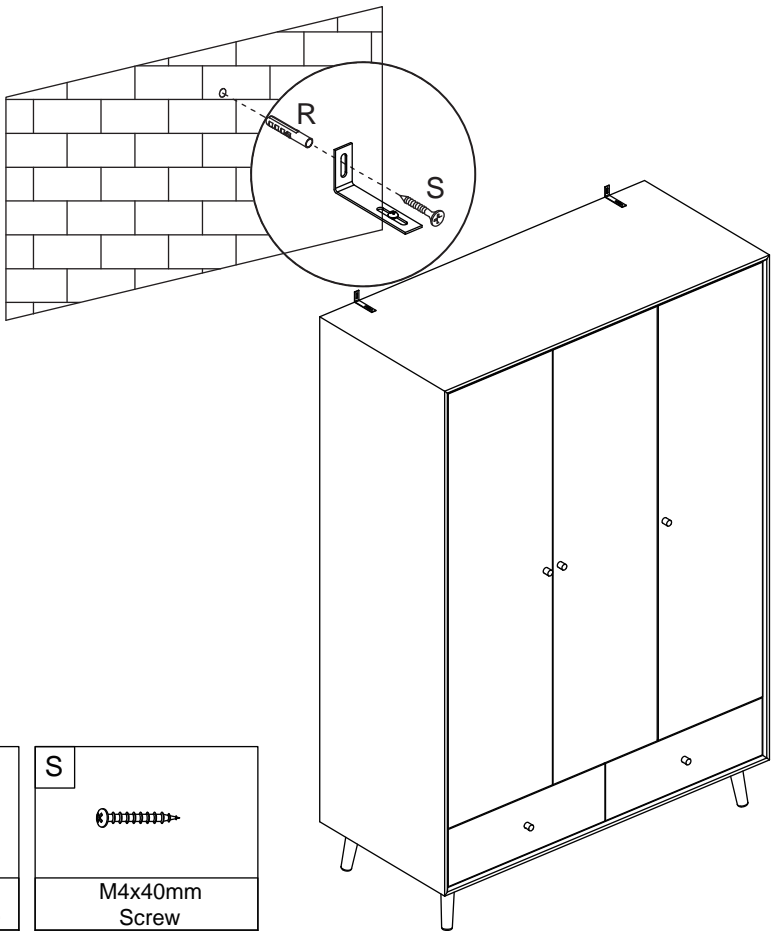M4x12mm Screw
2pcs

26. Fix the L-Shaped Bracket to the wall.



R

Φ6mm Expansion Tube
2pcs

S

M4x40mm Screw
2pcs

