

DUSK.COM


LIVING | BEDROOM | DINING

Range Name : Heidi


Box Dimensions : 94x49x23cm

Product Dimension : W80xD40xH78cm

3 Drawer Chest

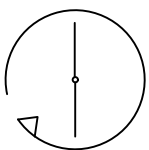

Up to 30 minutes
assembly time

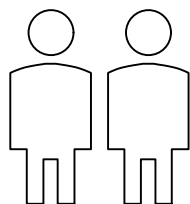

Two person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

V-1.0

P-1-13

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

- 1.It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
- 2.Do not stand on your product.
- 3.Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
- 4.Place heaviest items in the lowest drawers.
- 5.Do not set TV or other heavy objects on top of the product.
- 6.Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
- 7.Never keep more than one drawer open at the same time.
- 8.In order to prevent overturning, this product must be used with the wall attachment device provided.
- 9.Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE


- 1.Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
- 2.Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de - laminate.
- 3.Do not scrub or rub the surface when cleaning.
- 4.Do not drag the bedside when moving, lift it off the floor instead.
- 5.Use a potholder or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
- 6.It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
- 7.Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
- 8.Regularly check all fixings to ensure none have come loose. Re - tighten if necessary.
- 9.Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

Before you begin building your Heidi Chest, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.









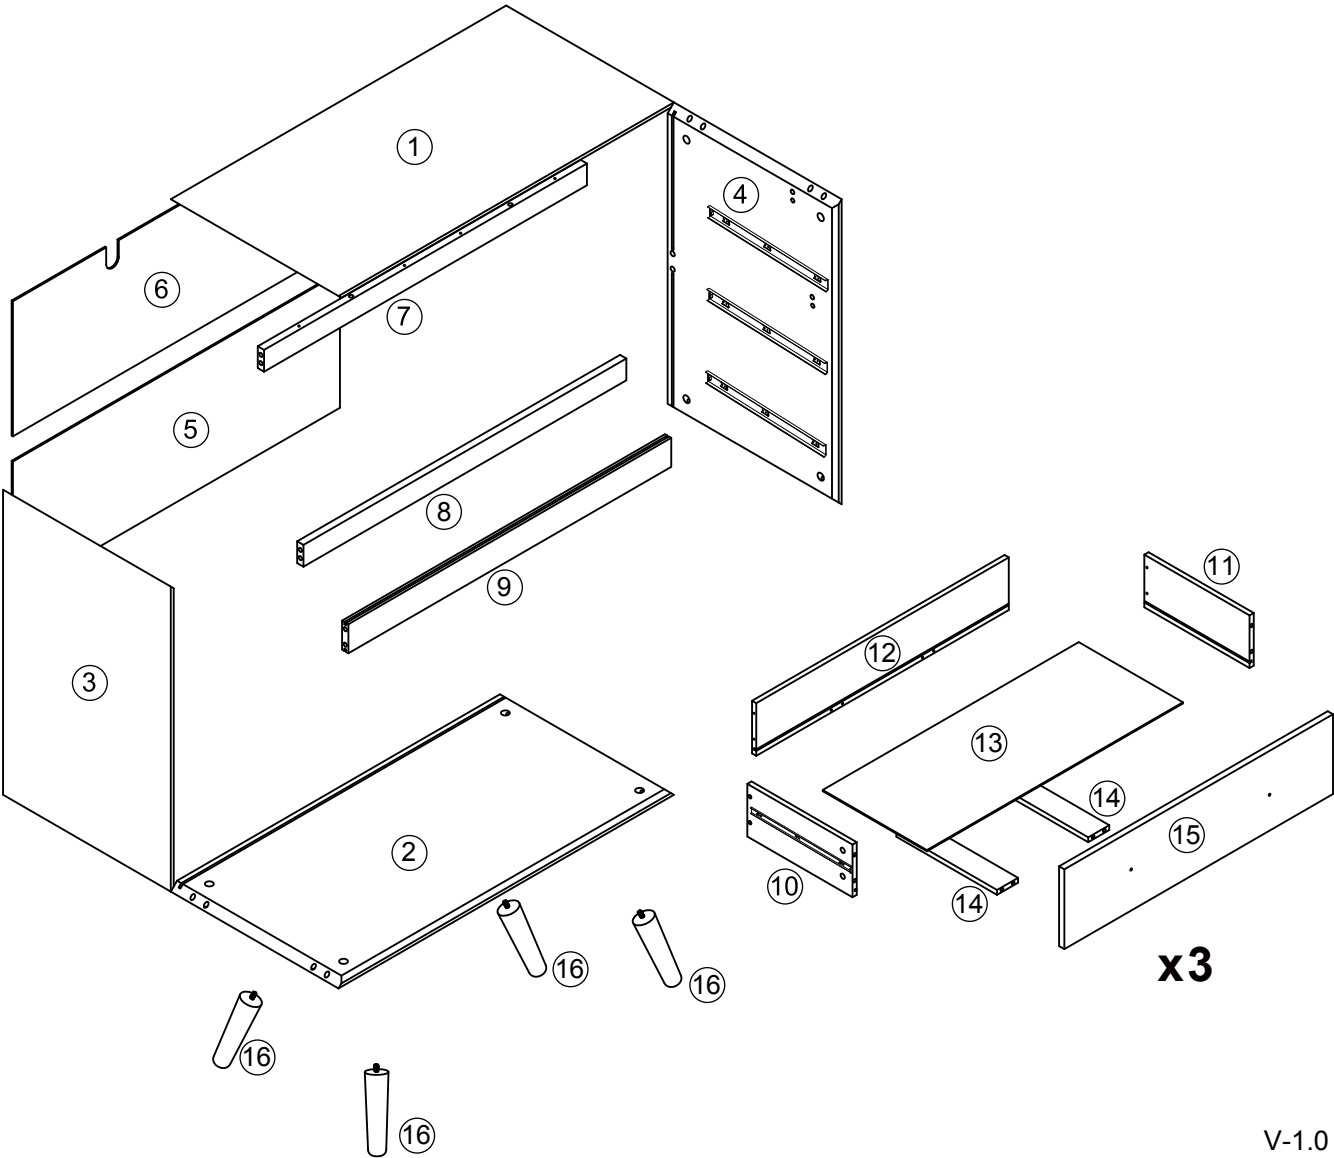










Part Number	Part Description	Quantity
1	Top Panel	1 pc
2	Bottom Panel	1 pc
3	Left Side Panel	1 pc
4	Right Side Panel	1 pc
5	Back Panel	1 pc
6	Back Panel	1 pc
7	Centre Support	1 pc
8	Centre Support	1 pc
9	Back Slats	1 pc
10	Drawer Left Side	3 pcs

Part Number	Part Description	Quantity
11	Drawer Right Side	3 pcs
12	Drawer Back Side	3 pcs
13	Drawer Bottom	3 pcs
14	Drawer bottom support	6 pcs
15	Drawer Front Panel	3 pcs
16	Leg	4 pcs






Fittings


Please check you have all the fittings listed below with your product.

A  M6x76 CAM Lock Screw 8pcs+1pc extra	B  M6x40 CAM Lock Screw 24pcs+3pcs extra	C  Φ15x11.5mm CAM Lock 22pcs+3pcs extra	D  Φ12x9.5mm CAM Lock 18pcs+2pcs extra	E  Φ8x30mm Wooden Dowel 22pcs+2pcs extra	F  M3x25mm Screw 24pcs+3pcs extra
G  M3x15mm Screw 14pcs+2pcs extra	H  15x9mm Plastic Buckle 14pcs+2pcs extra	I  Φ20x25mm Metal Handle 6pcs	J  M4x20mm Handrail wire 6pcs	K  Metal Plate 4pcs	L  M4x15mm Screw 20pcs+2pcs extra
M  76x25mm L-shaped Bracket 2pcs	N  M4x12mm Screw 2pcs	O  Φ6x30mm Expansion Tube 2pcs	P  M4x35mm Screw 2pcs	Q  Φ18mm Felt pad 4pcs	R  Cover 40pcs+5pcs extra
T  M4x40mm Screw 3pcs					



Pre-assembled Fittings.

R1  Slide pre assembled 6pcs	R2  Slide pre assembled 6pcs	S  M3x12mm Screw 36pcs
---	---	---


1. Attach parts to the Panels.

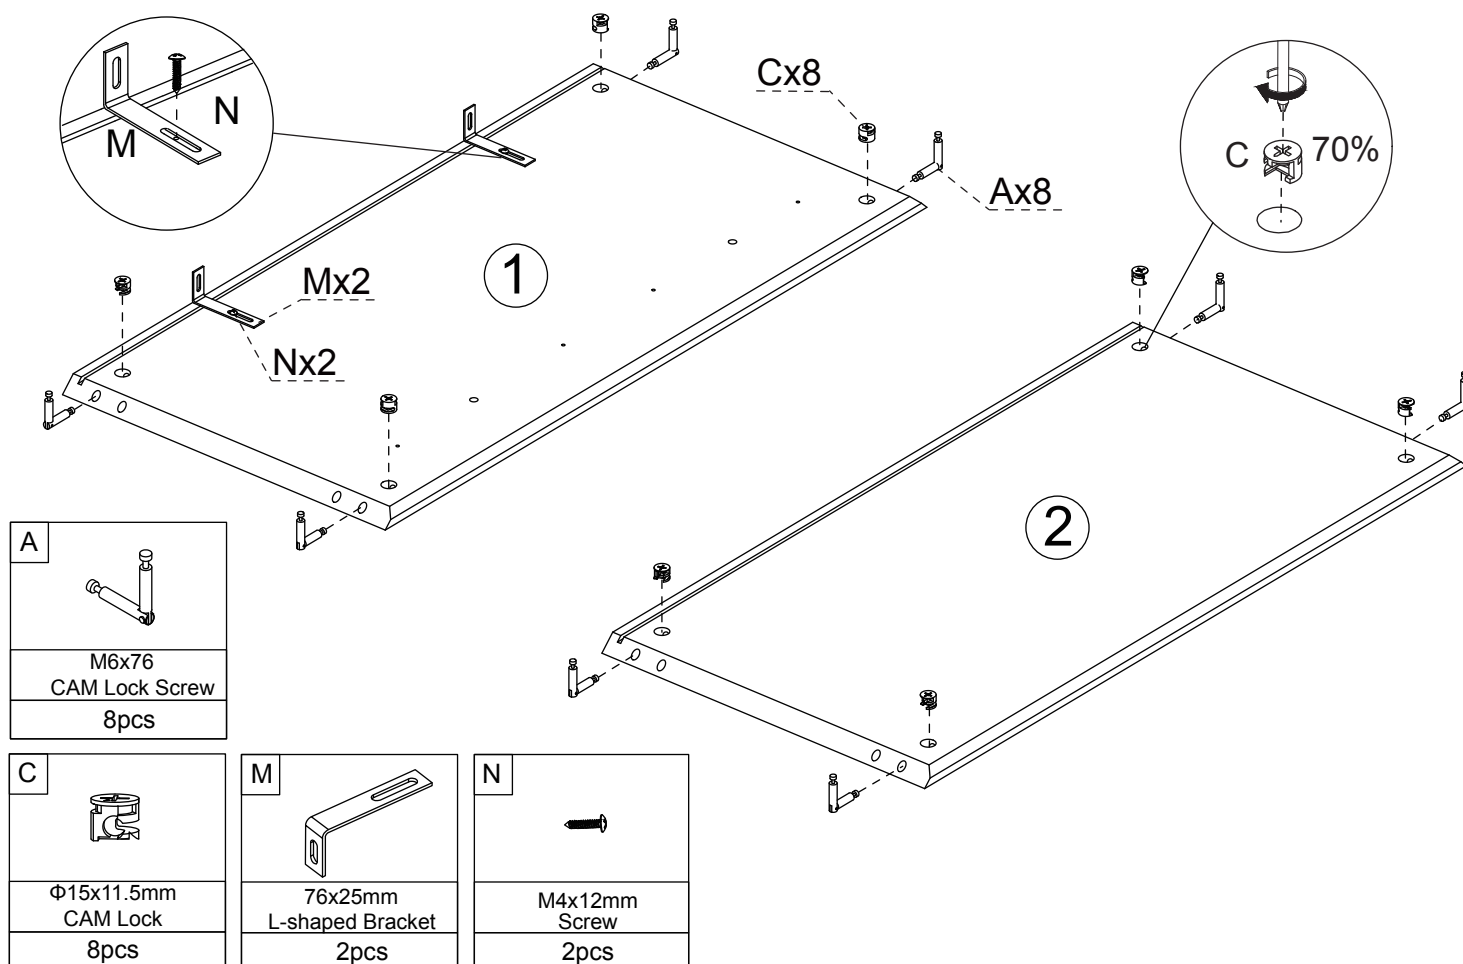


2. Attach parts to left and right side panels.

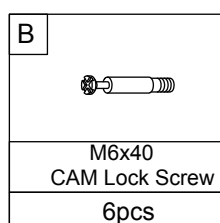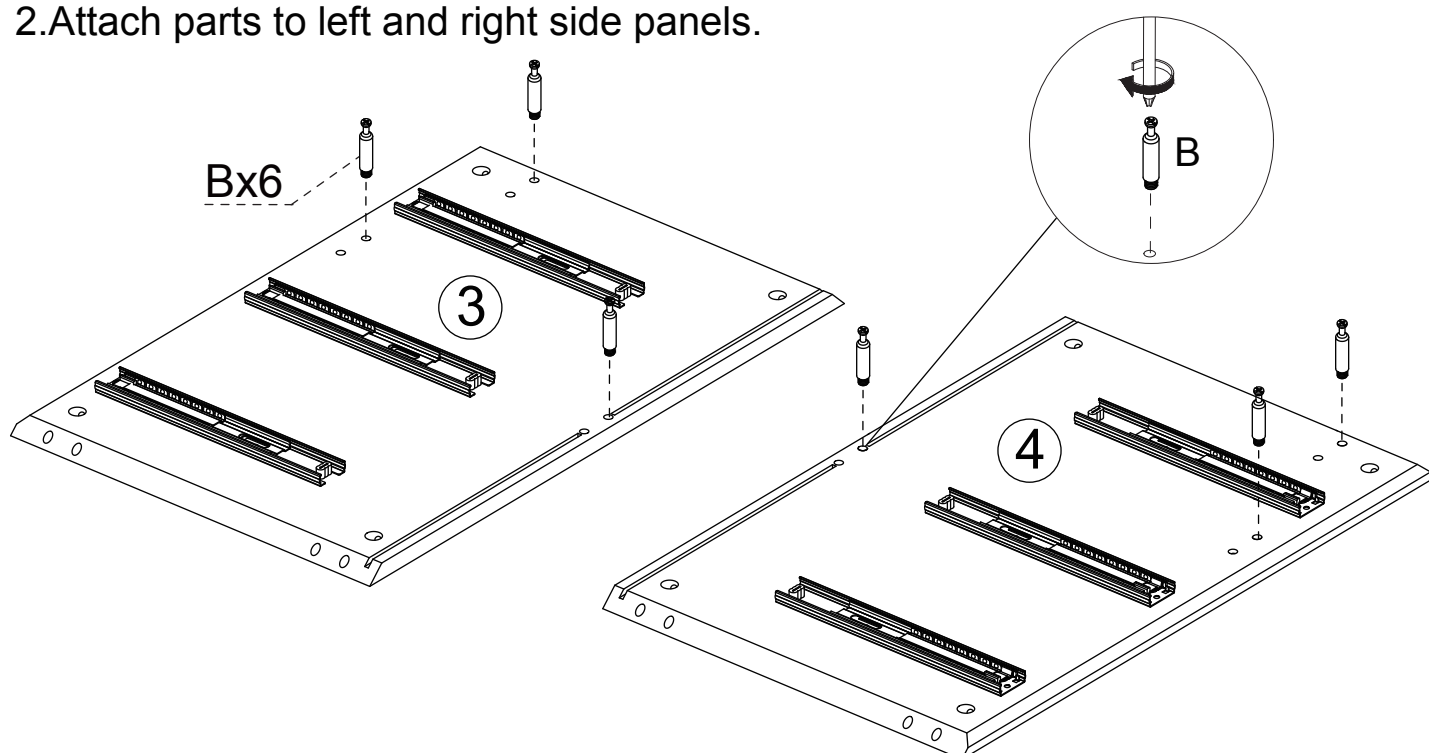




3. Attach Centre Support and Back Slats to side panels.

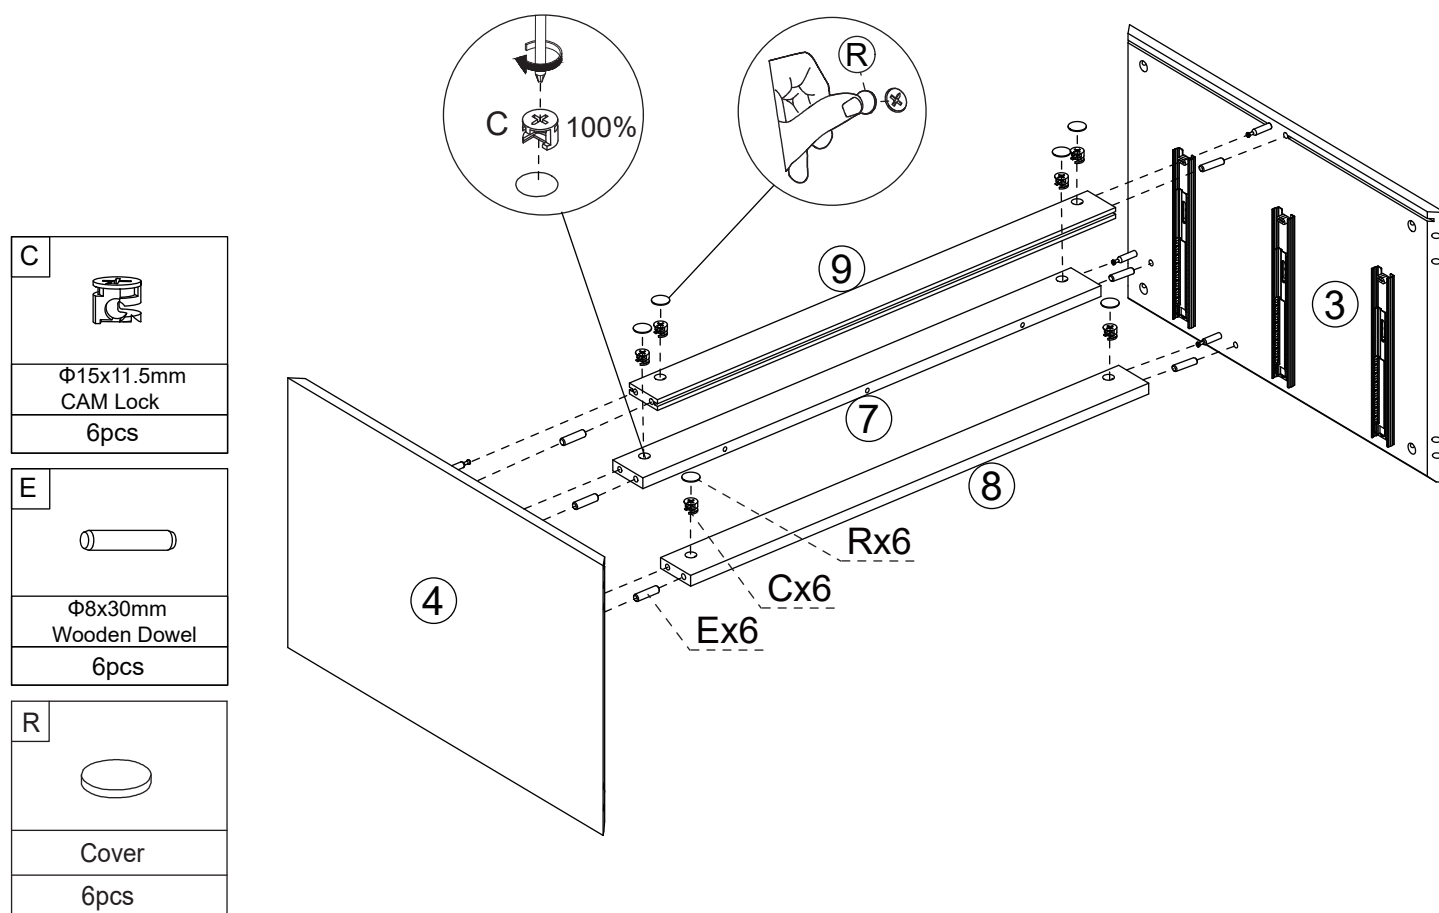


4. Insert dowels into the left and right side panels and Assemble the back panel.

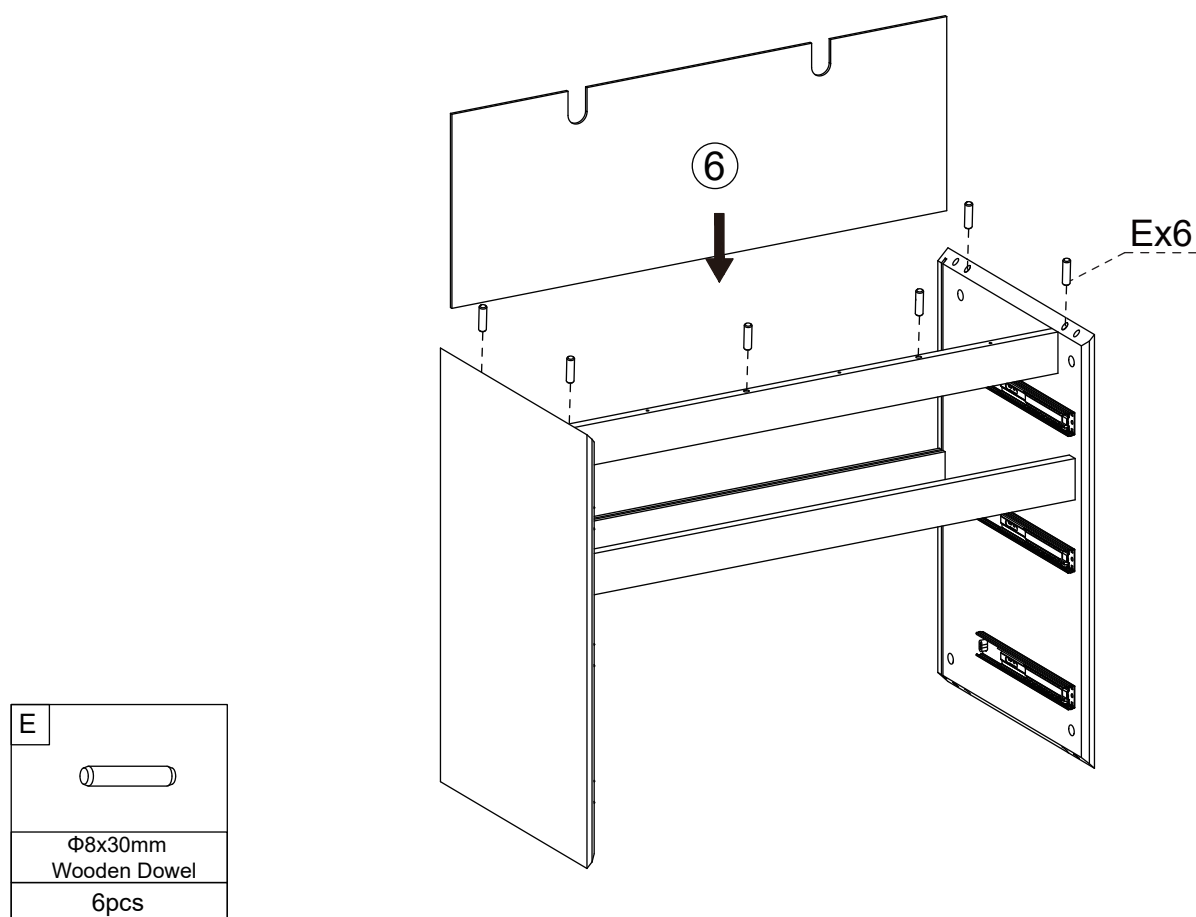



5. Attach top panel to the frame.

C	
Φ15x11.5mm CAM Lock	
4pcs	
T	
M4x40mm Screw	
3pcs	
R	
Cover	
4pcs	



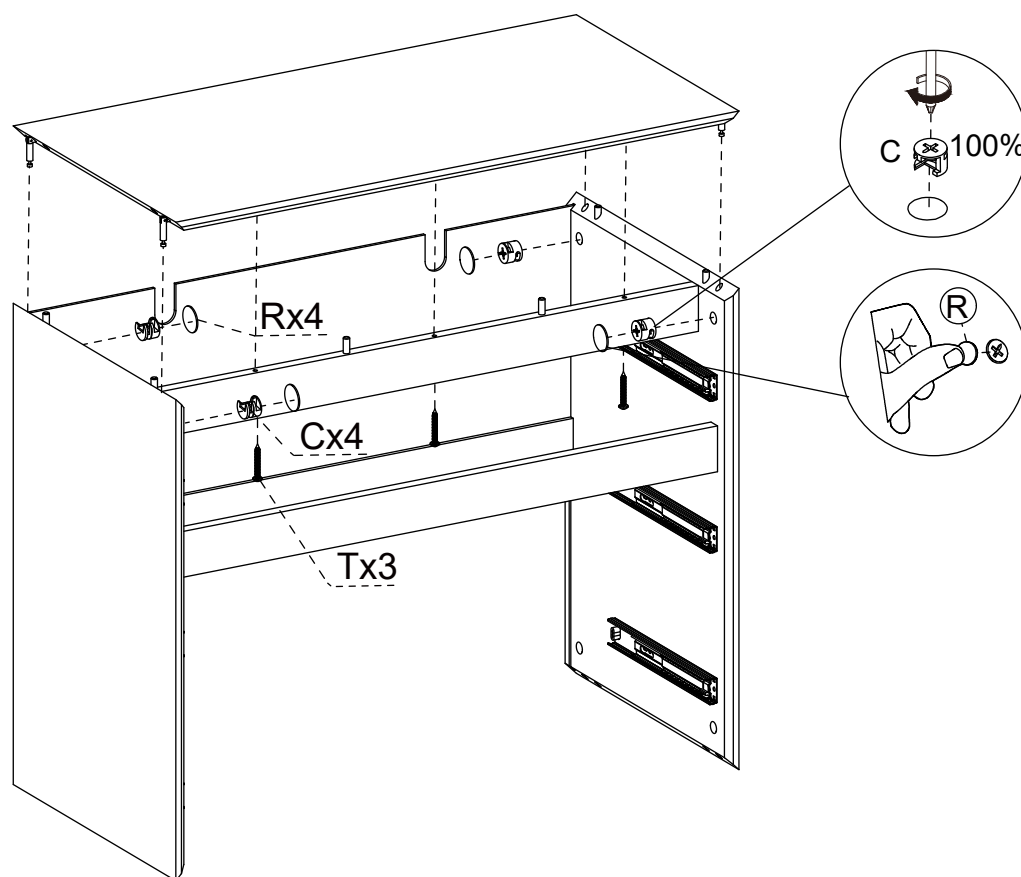


6. Insert dowels into the left and right side panels and Assemble the back panel.

E	
Φ8x30mm Wood Dowel	
4pcs	

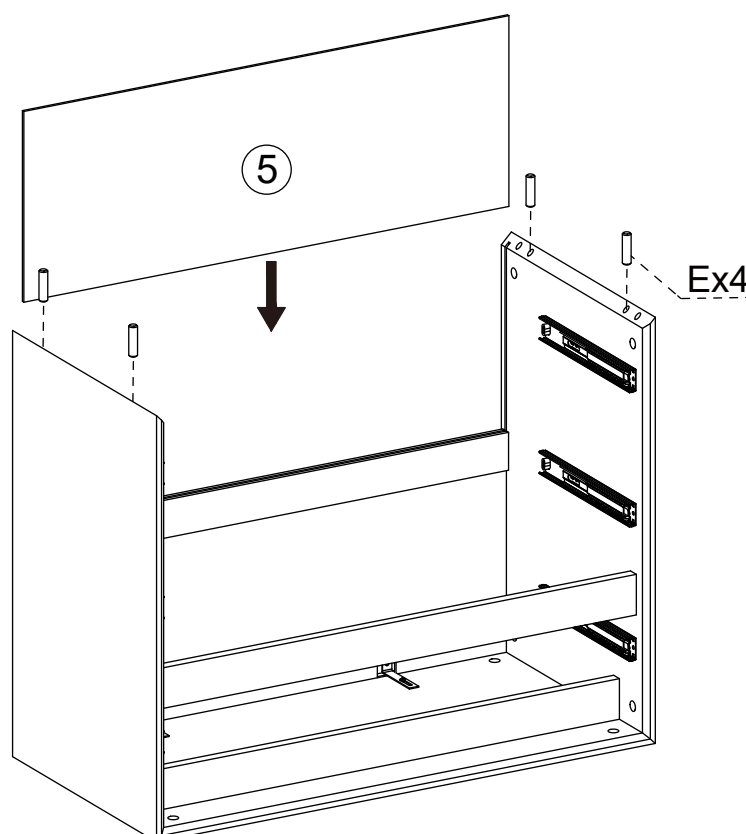





7. Attach bottom panel to the frame.

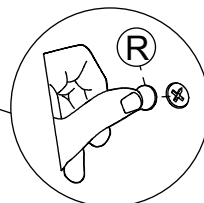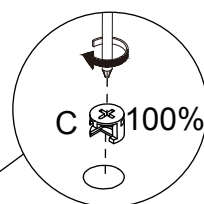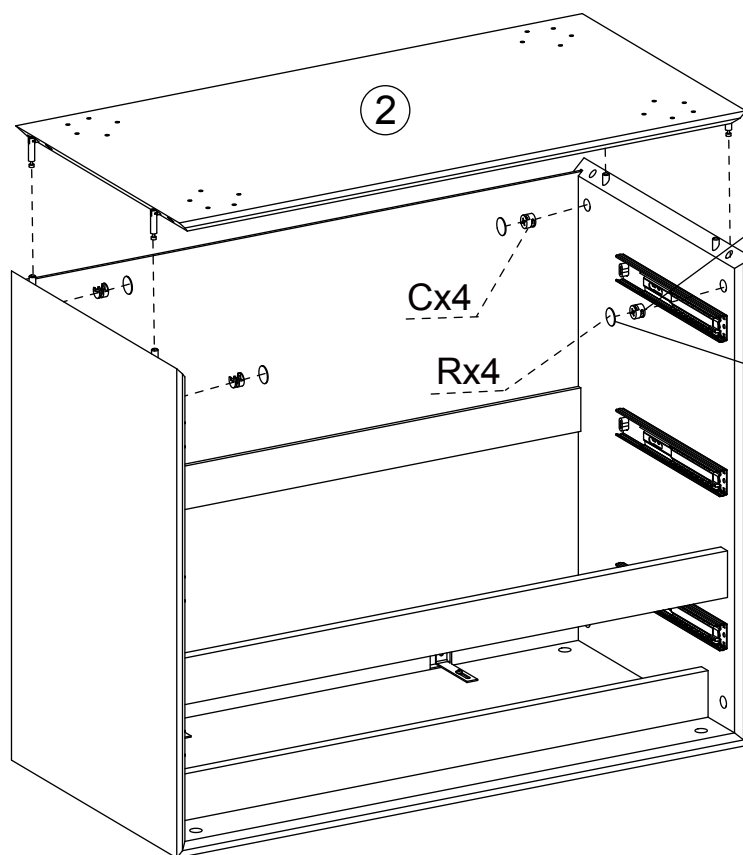

C	
Φ15x11.5mm CAM Lock	
4pcs	


R	
Cover	
4pcs	


8. Screw the cam locks and paste the covers.

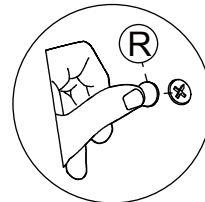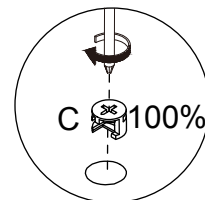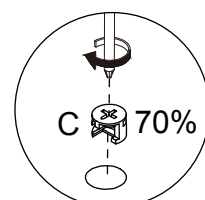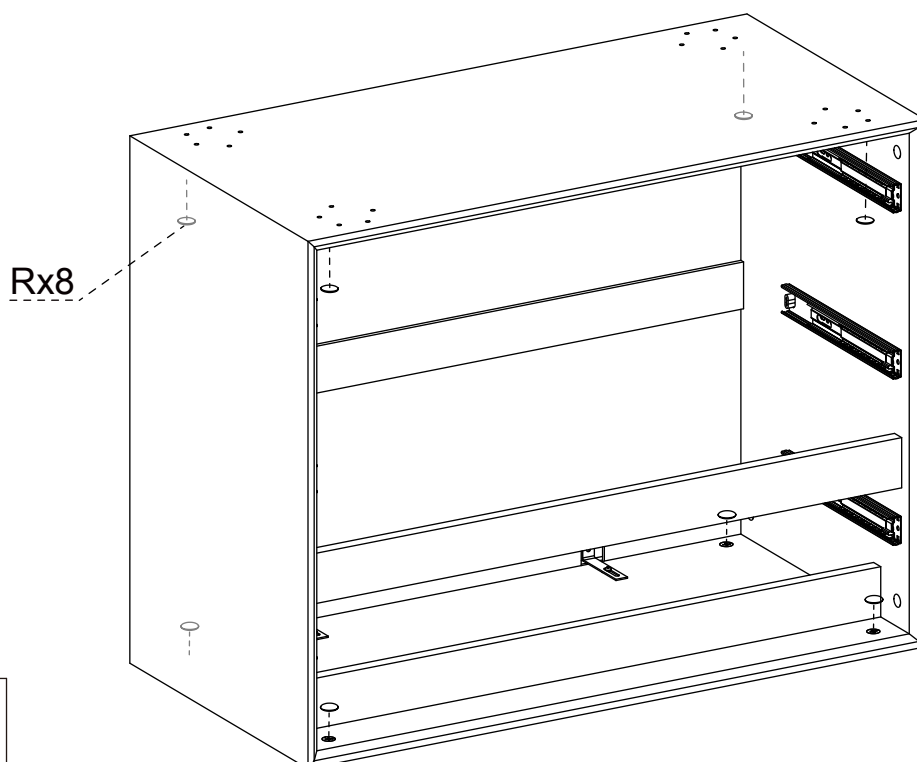


R	
Cover	
8pcs	


9.Attach the metal plate to the bottom panel.

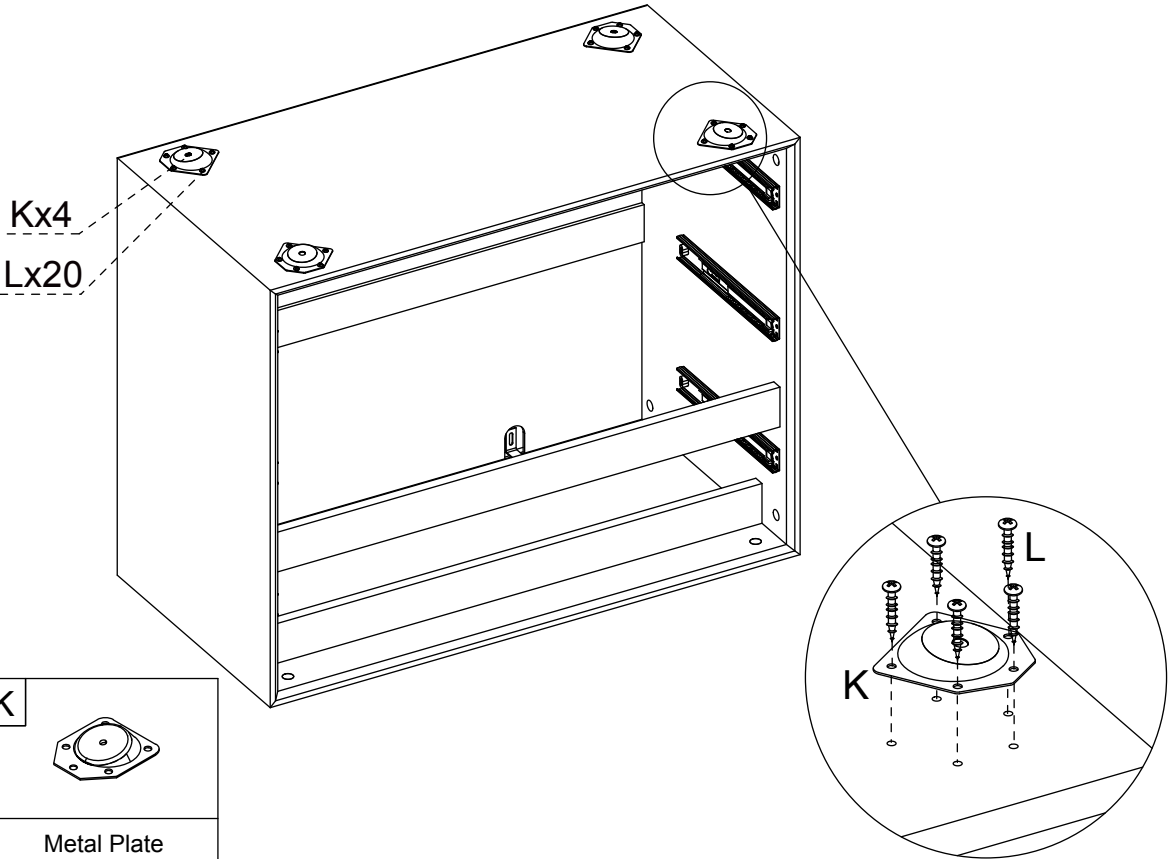


L	
M4x15mm Screw 20pcs	


K	
Metal Plate 4pcs	

10.Assemble the legs and paste the felt pads onto the bottom of Legs.

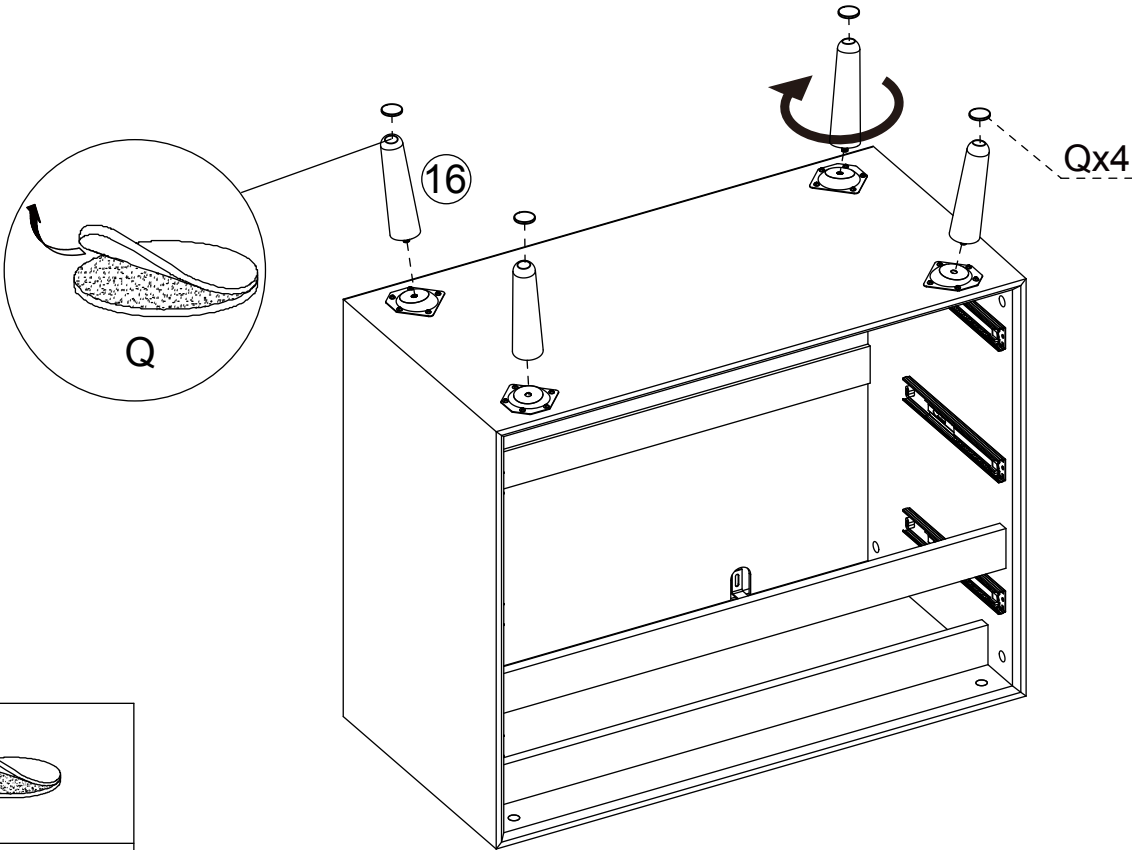


Q	
Φ18 Felt Pads 4pcs	


11.Attach the plastic buckles.


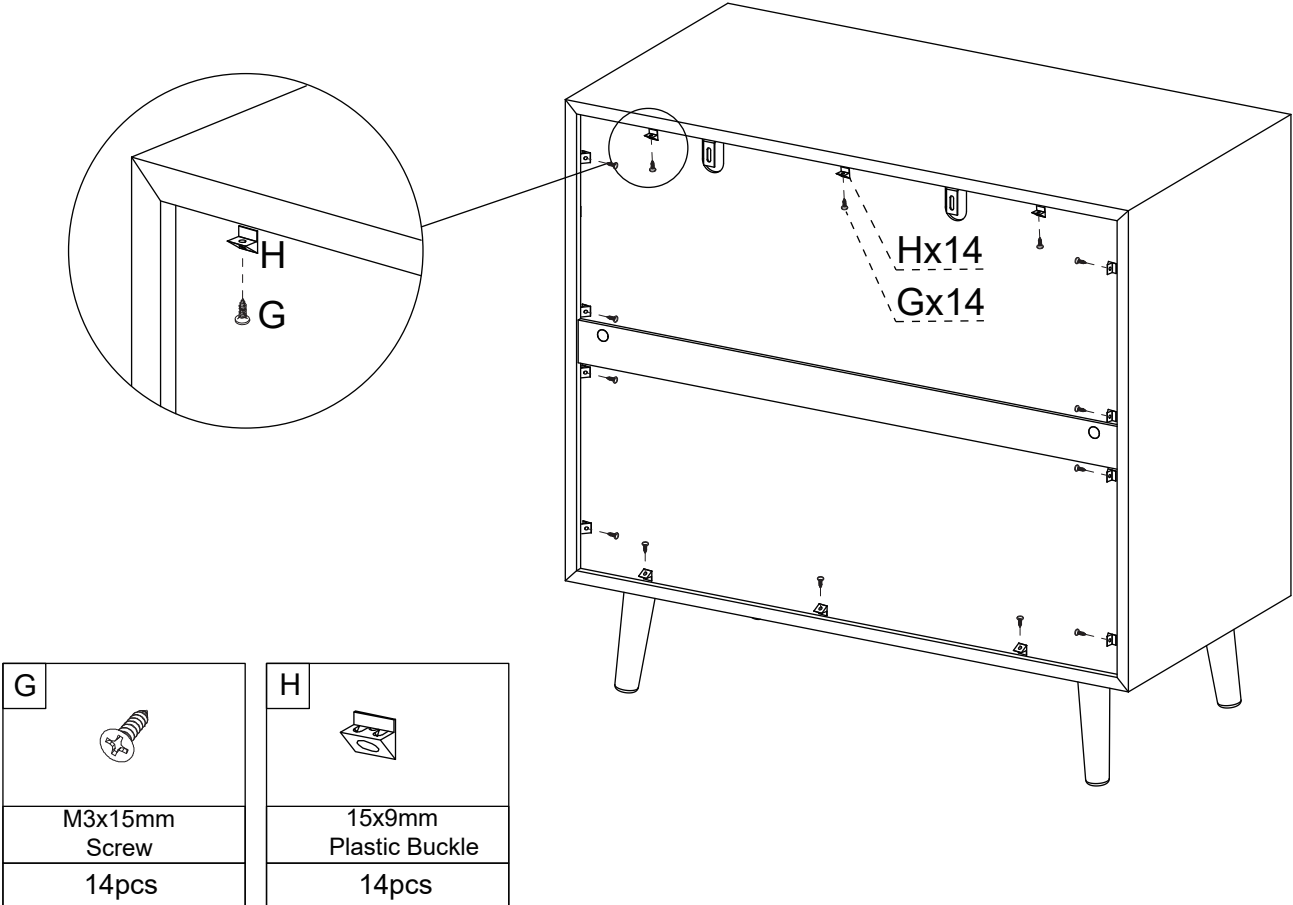


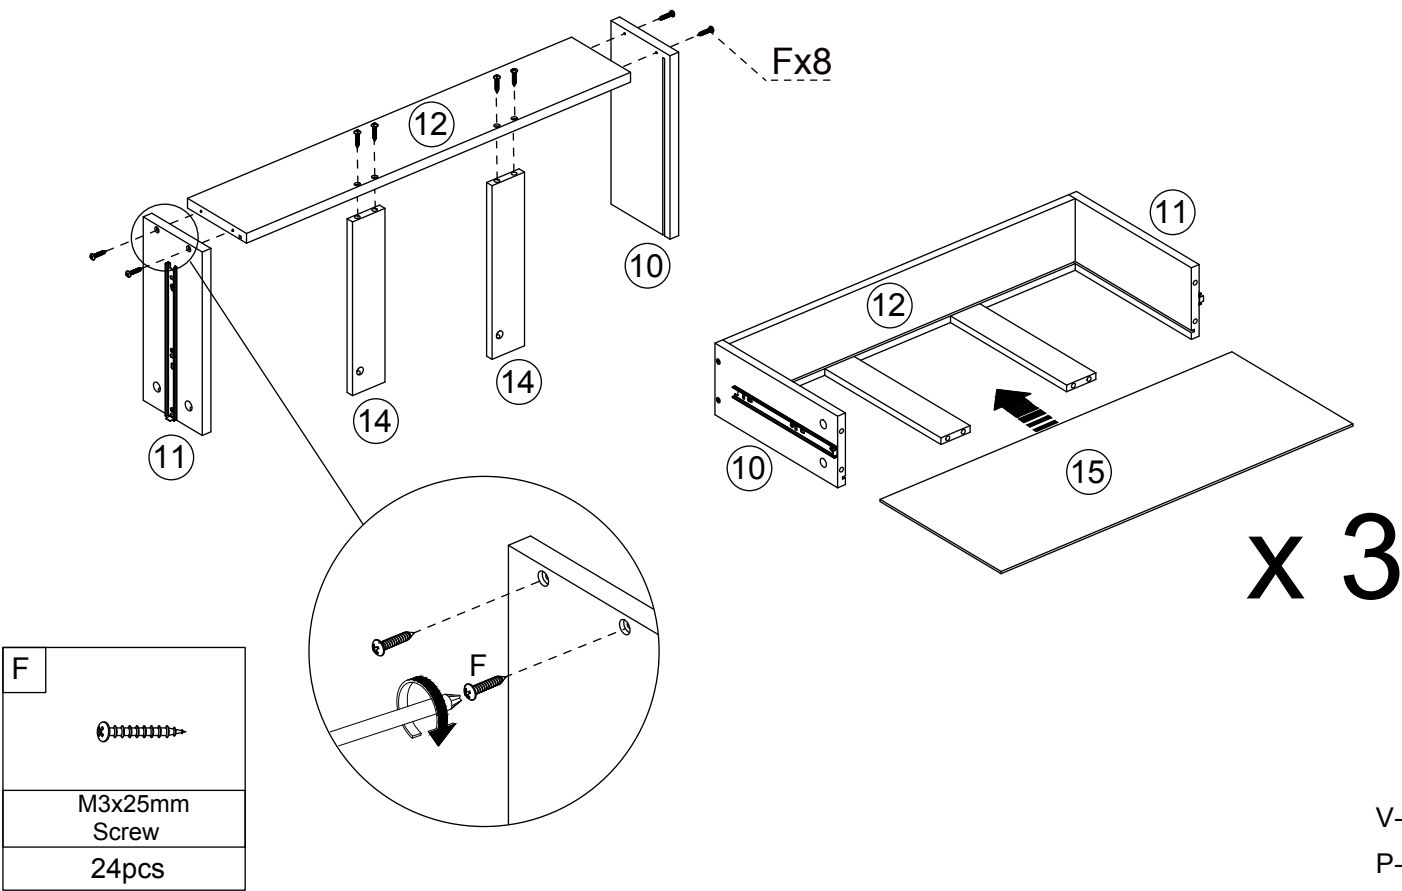

12.Assemble the drawer frame and drawer bottom plate.




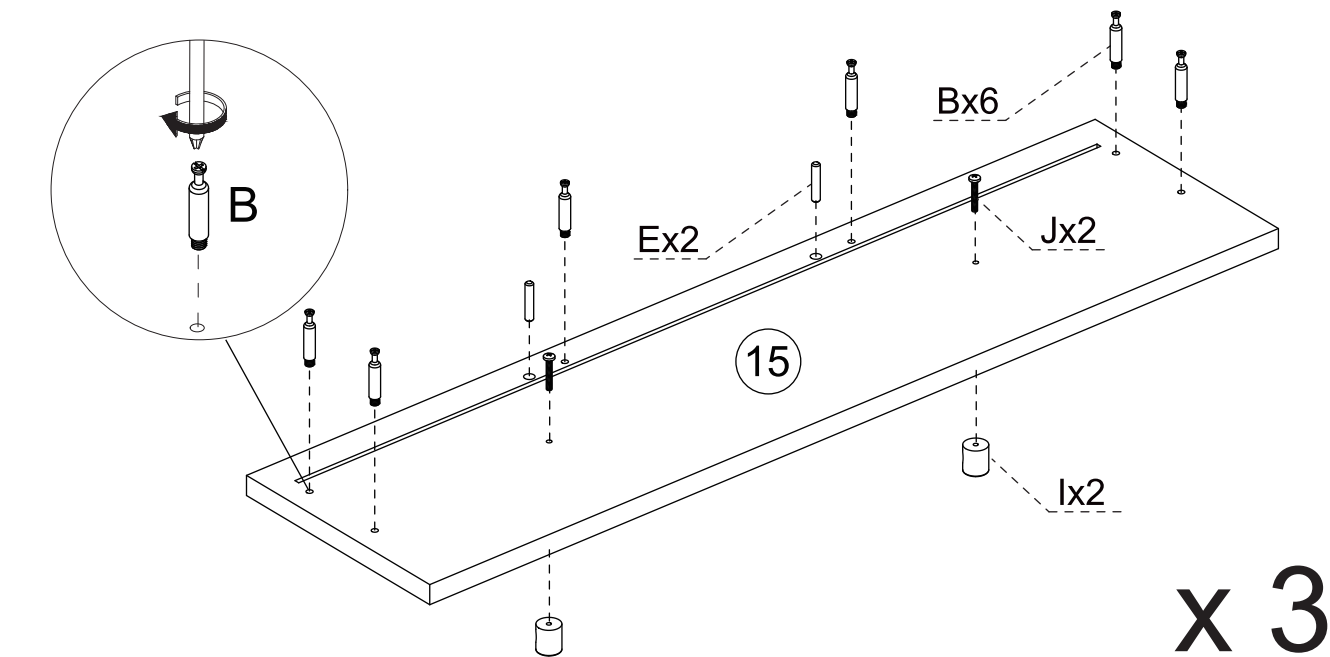

13.Attach parts to the panel.




B	E	I	J
			
M6x40 CAM Lock Screw 18pcs	Φ8x30mm Wooden Dowel 6pcs	Φ20x25mm Metal Handle 6pcs	M4x20mm Handrail wire 6pcs

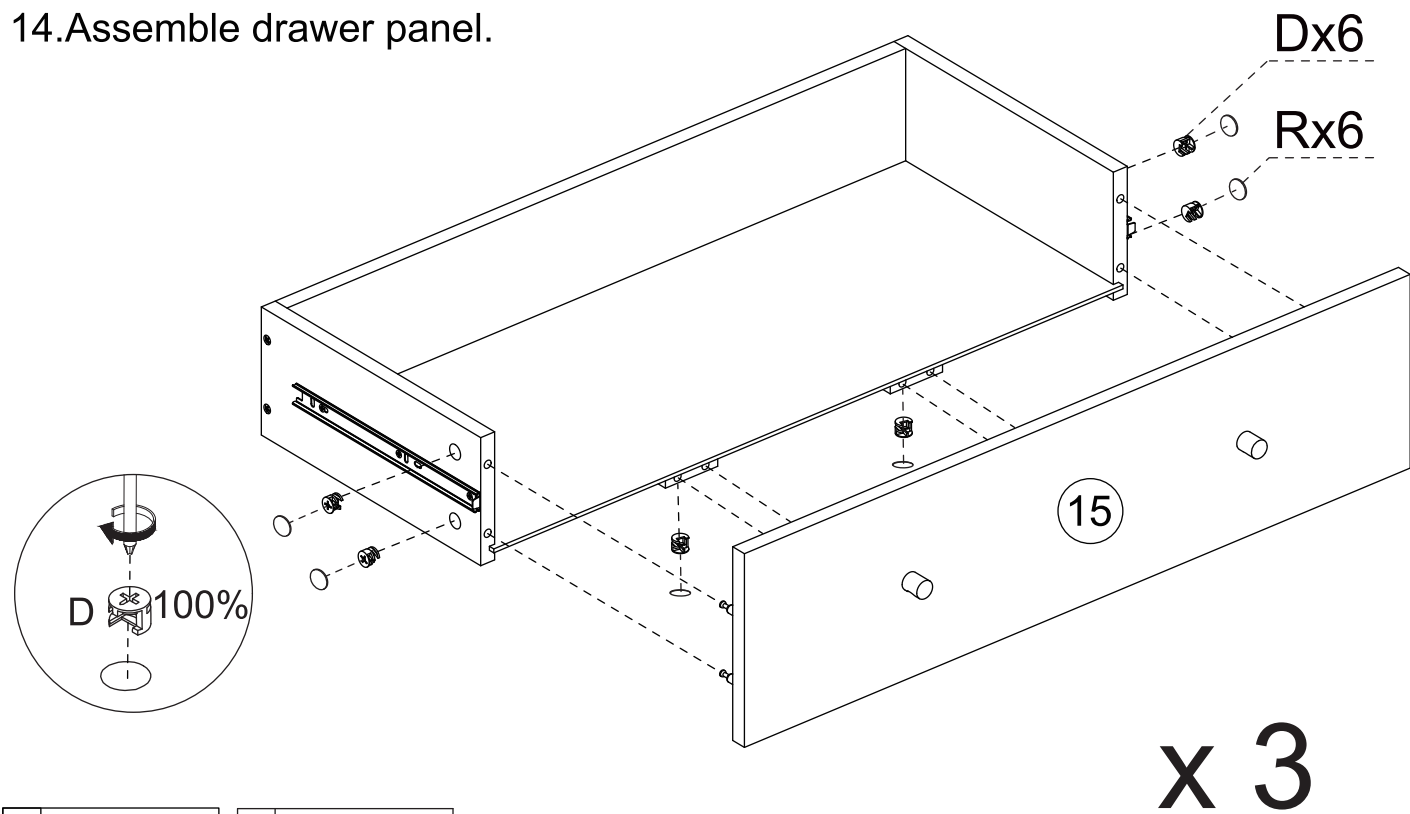14.Assemble drawer panel.







D	R
	
Φ12x9.5mm CAM Lock 18pcs	Cover 18pcs

15 Assemble the drawers in the Chest.

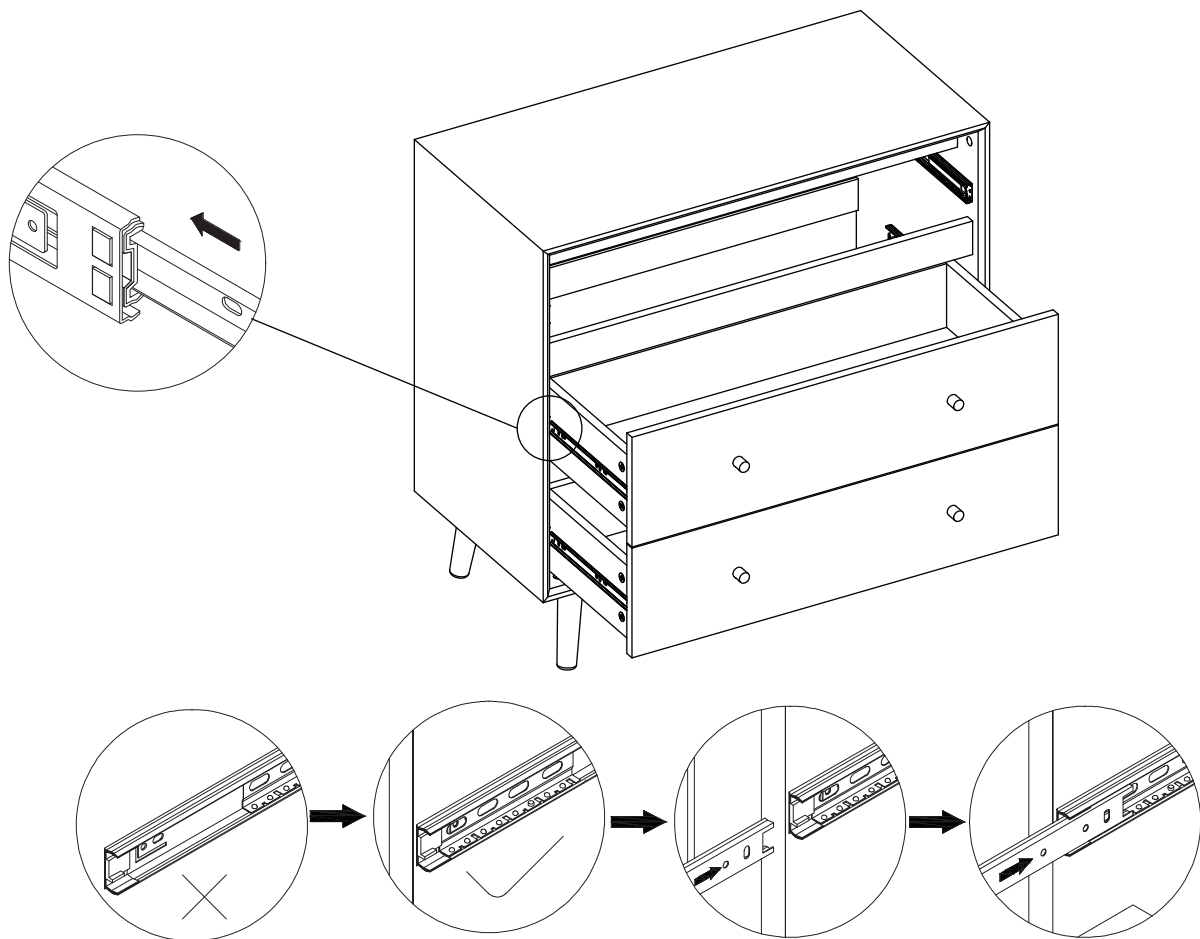


16. Drill holes in the wall, insert expansion bolts, and then fix the furniture to the wall with screws.

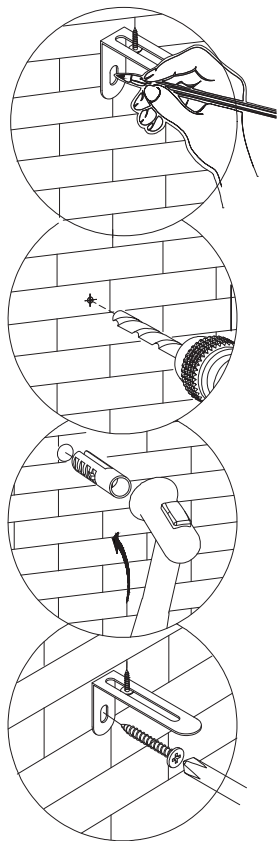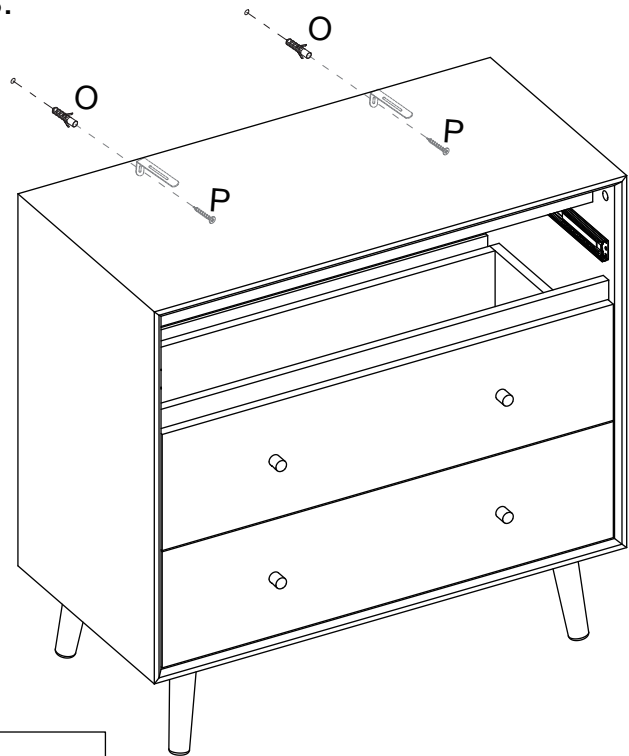

O	P
	
Φ6x30mm Expansion Tube	M4x35mm Screw
2pcs	2pcs

17.Assemble the drawers in the Chest.

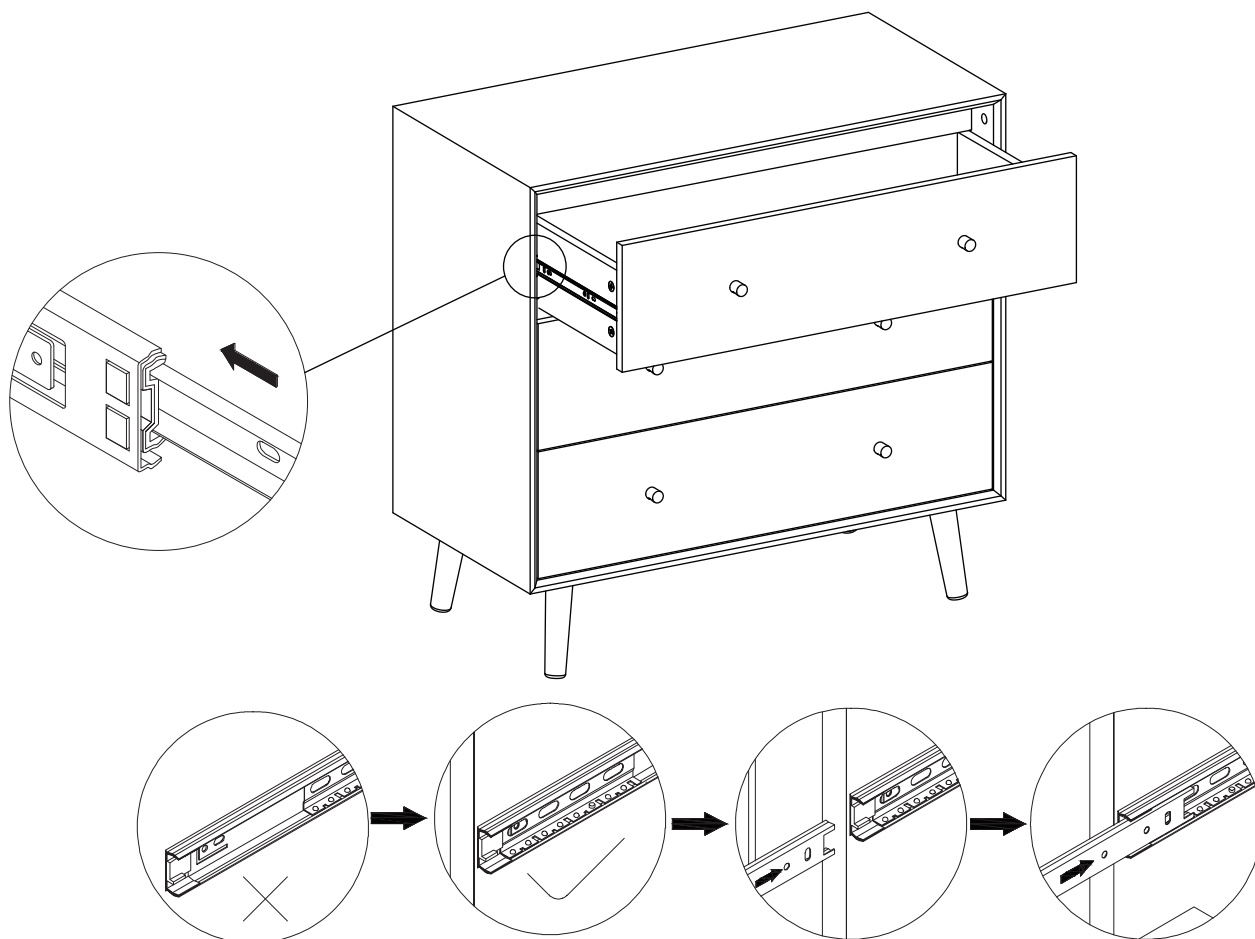

18.Assemble is completed.

