

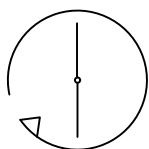


Betty Bedside - Melamine

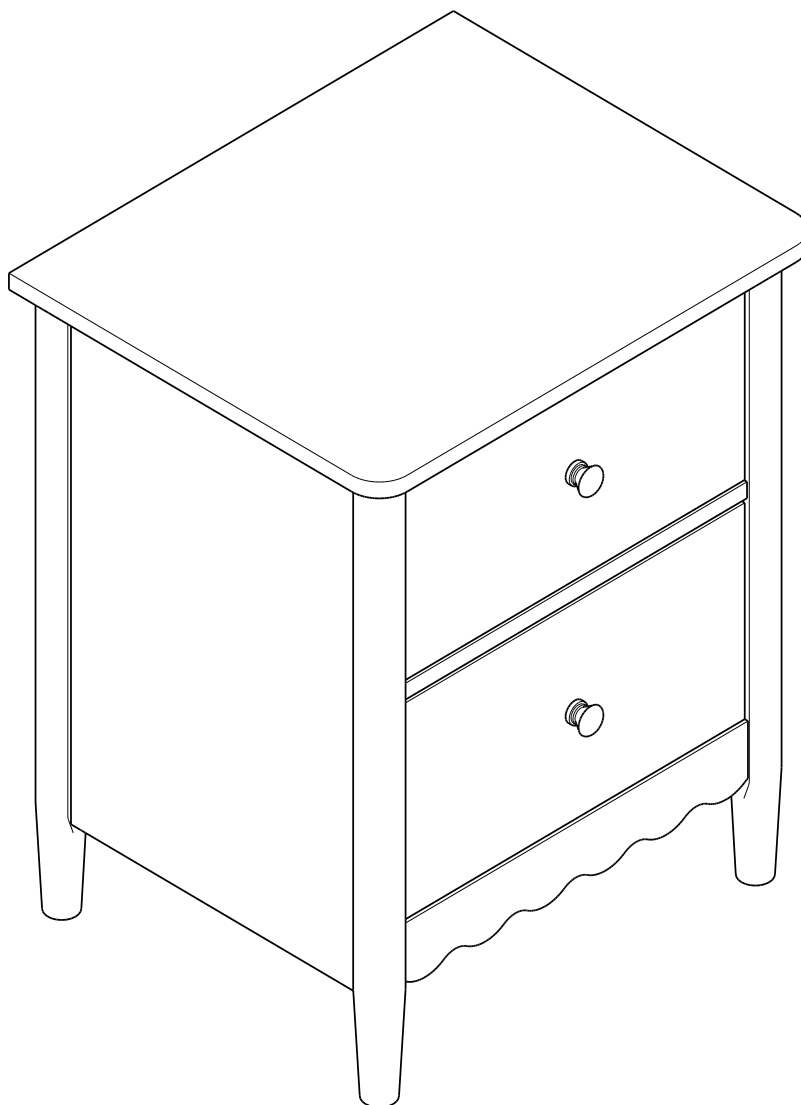

Up to 60 minutes
assembly time

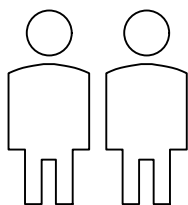

Two person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Betty Bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Betty Bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Betty Bedside when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

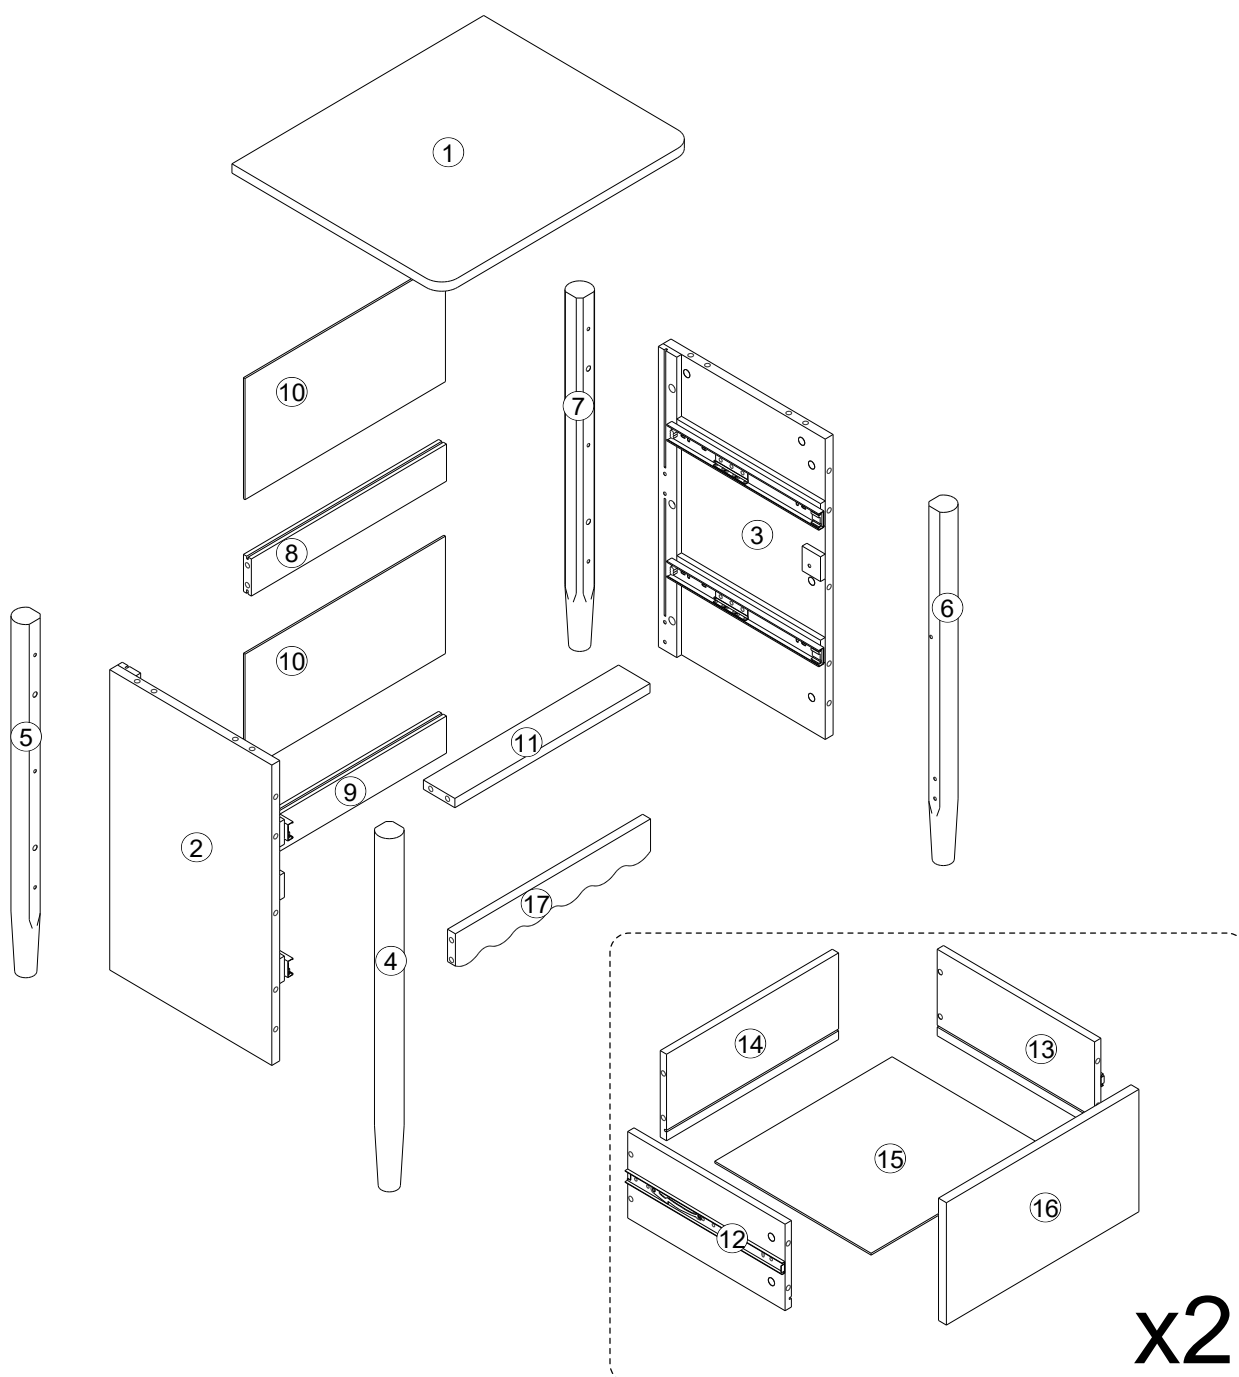

Parts list











Before you begin building you Betty Bedside, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top panel	1 pc	Box 1
③	Right side panel with slide pre-assembled	1 pc	Box 1
⑤	Left back leg	1 pc	Box 1
⑦	Right back leg	1 pc	Box 1
⑨	Lower back support	1 pc	Box 1
⑪	Front support	1 pc	Box 1
⑬	Drawer right panel With slide pre-assembled	2 pcs	Box 1
⑮	Drawer bottom	2 pcs	Box 1
⑰	Scallop bar	1 pc	Box 1




Part Number	Part Description	Quantity	Box No
②	Left side panel with slide pre-assembled	1 pc	Box 1
④	Left front leg	1 pc	Box 1
⑥	Right front leg	1 pc	Box 1
⑧	Upper back support	1 pc	Box 1
⑩	Back panel	2 pcs	Box 1
⑫	Drawer left panel With slide pre-assembled	2 pcs	Box 1
⑭	Drawer back	2 pcs	Box 1
⑯	Drawer front	2 pcs	Box 1

Fittings

Please check you have all the fittings listed below with your product in Box 1.


<div>A</div>  <div>M6x35mm Bolt 40pcs+2pc extra</div>	<div>B</div>  <div>M15x10mm CamLock 40pcs+2pc extra</div>	<div>C</div>  <div>M8x30mm Dowel 12pcs+1pc extra</div>	<div>D</div>  <div>Wooden Handle 2pcs</div>	<div>E</div>  <div>M4x18mm Screw 2pcs</div>
<div>F</div>  <div>Foot pads 4pcs</div>	<div>G</div>  <div>Hole stickers 8pcs+1pc extra</div>	<div>H</div>  <div>M4x35mm Screw 8pcs+1pc extra</div>	<div>I</div>  <div>Back plate buckle 8pcs+1pc extra</div>	<div>J</div>  <div>Metal Handle 2pcs</div>

Pre-assembled Fittings.

<div>U1</div>  <div>Slide Pre-assembled 4pcs</div>	<div>U2</div>  <div>Slide Pre-assembled 4pcs</div>	<div>K</div>  <div>M3*12mm Screw 20pcs</div>
--	--	---

1.

A x12

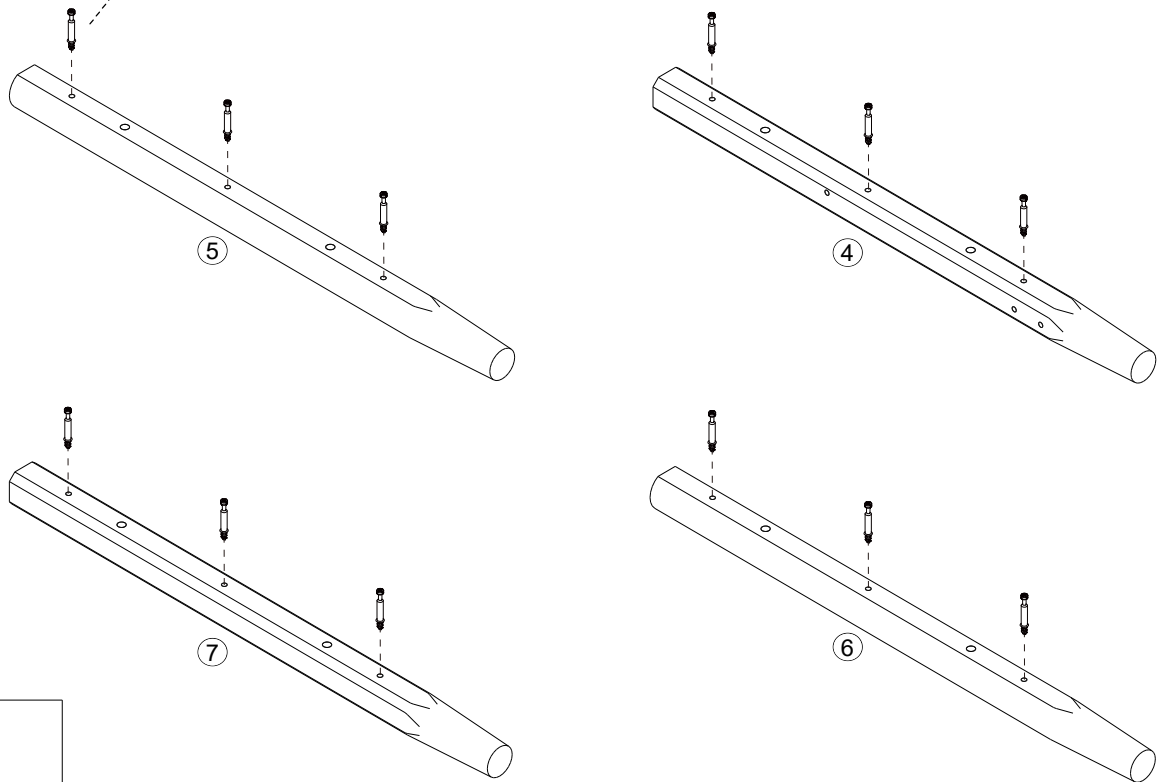

A




M6x35mm Bolt
12pcs

2.

C x 4

B x 6

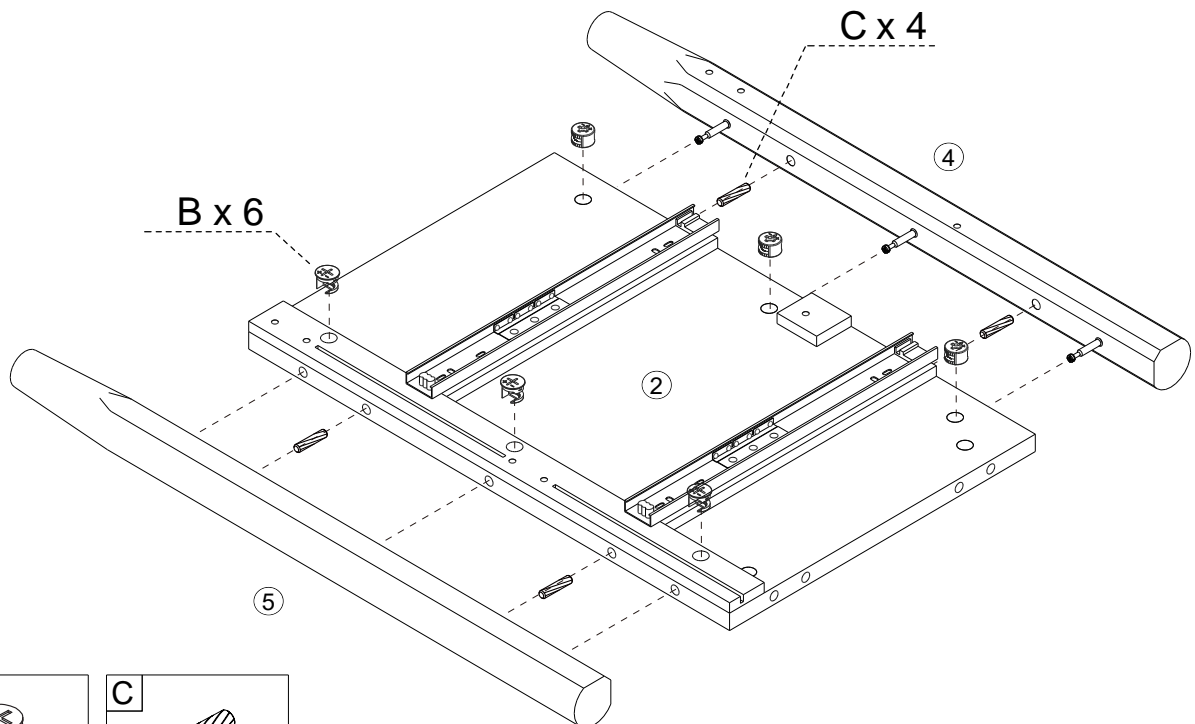

B



M15x10mm CamLock
6pcs



C






M8x30mm
M8x30mm Dowel
4pcs

P-6-14


3.

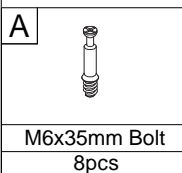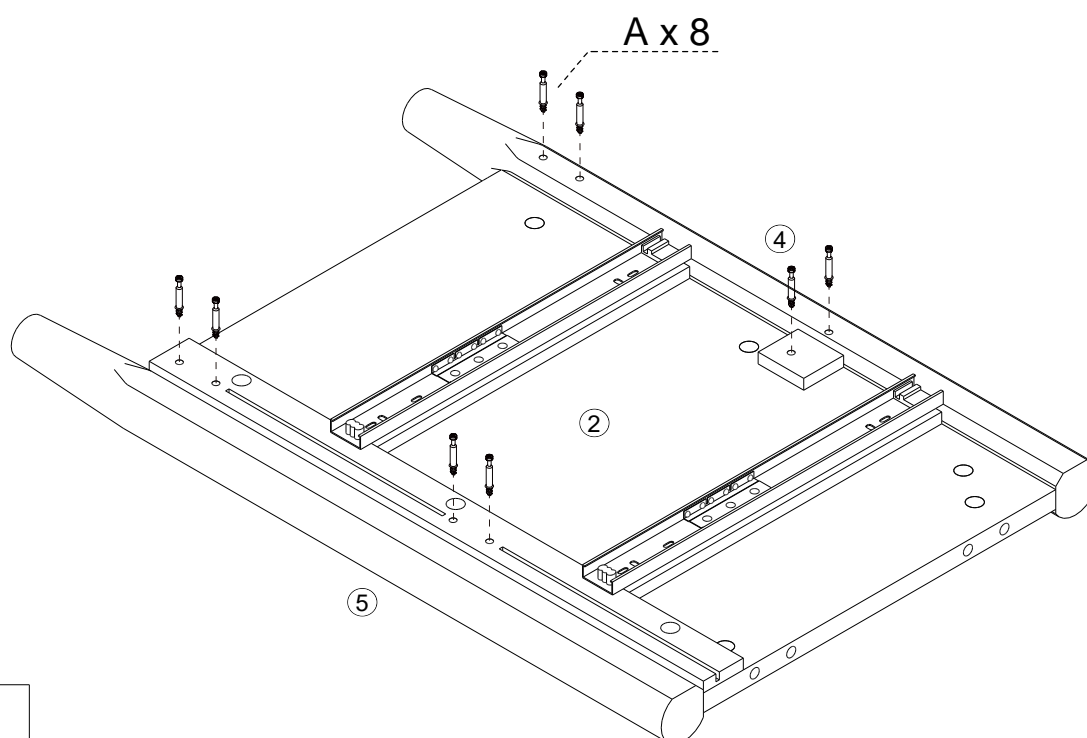

4.

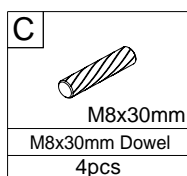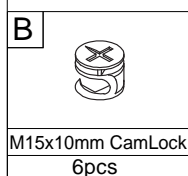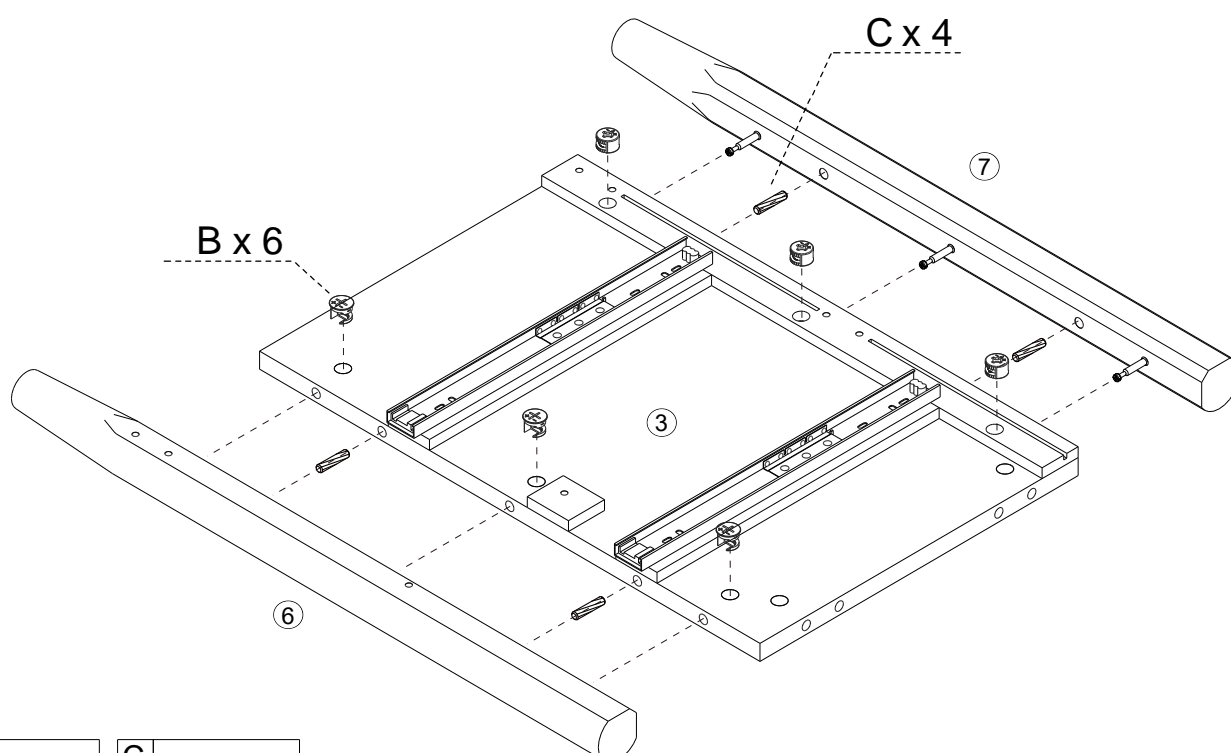


5.

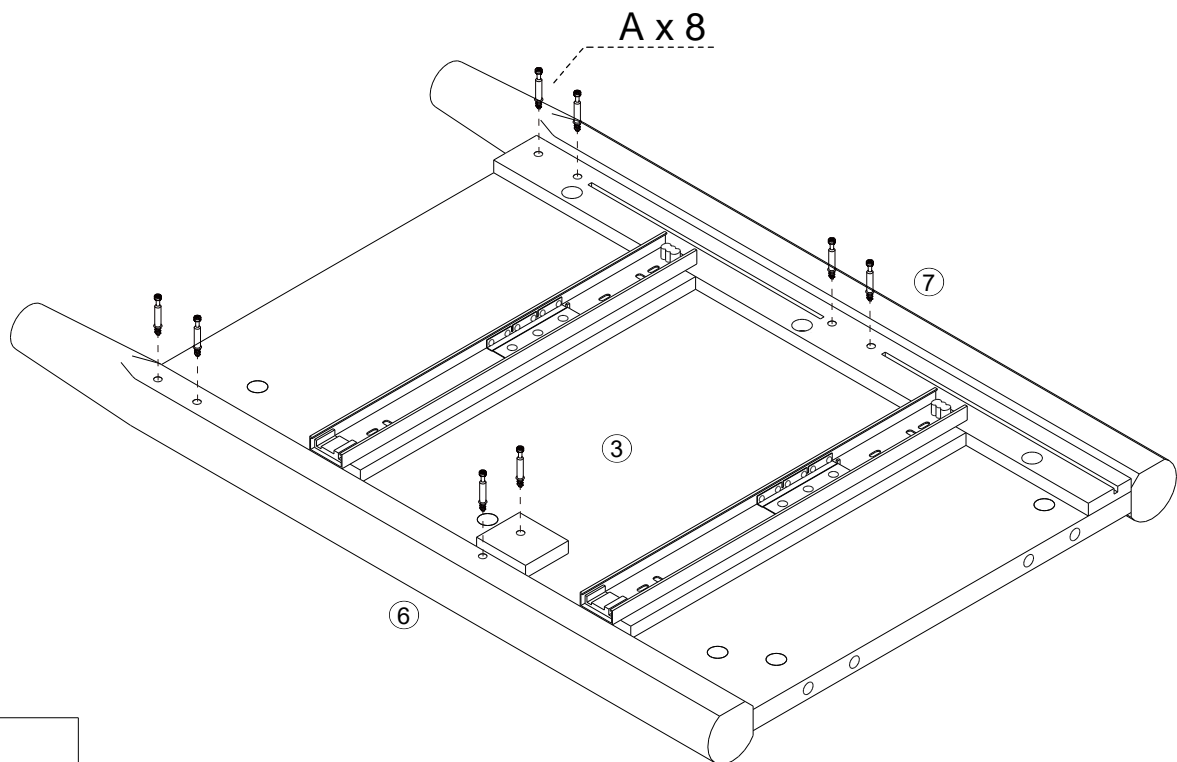


A	
M6x35mm Bolt 8pcs	

6.

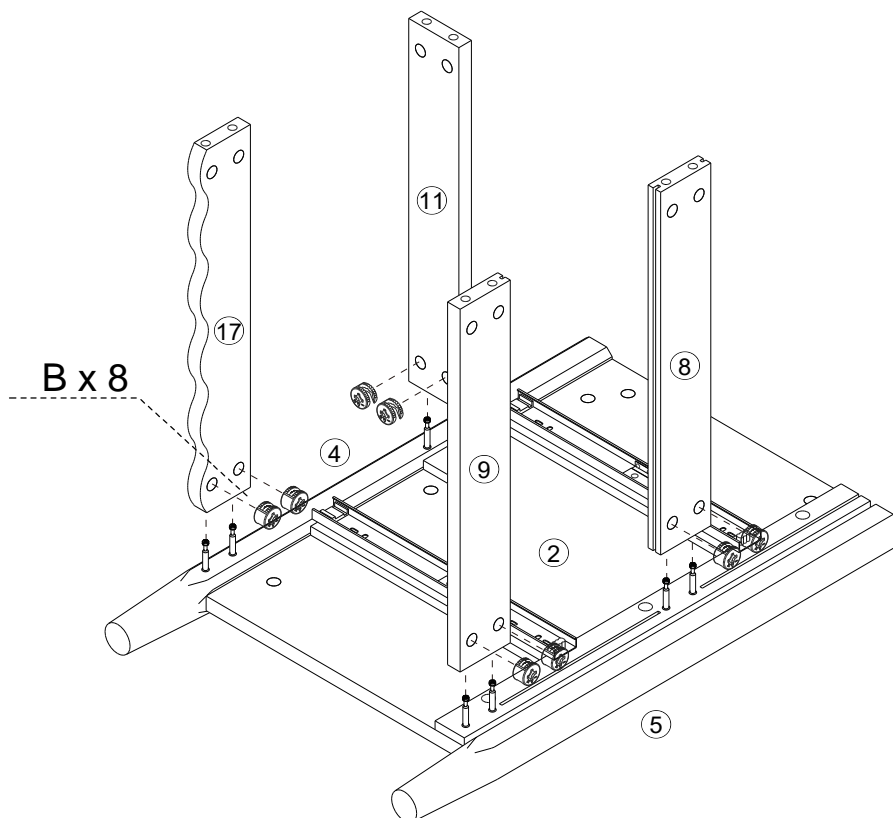


B	
M15x10mm CamLock 8pcs	

7.

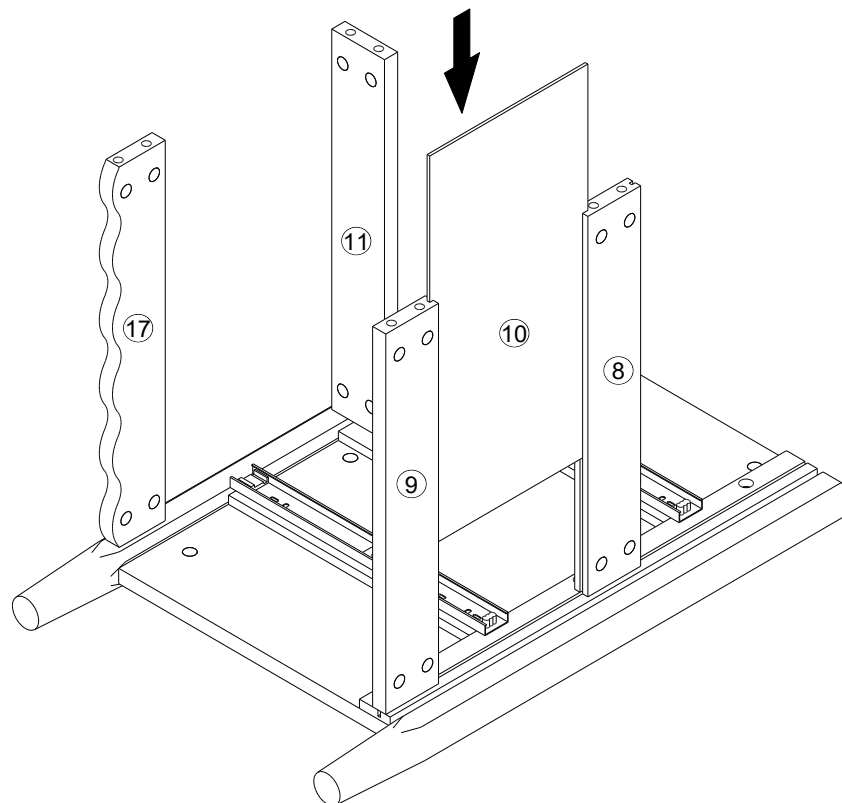


8.

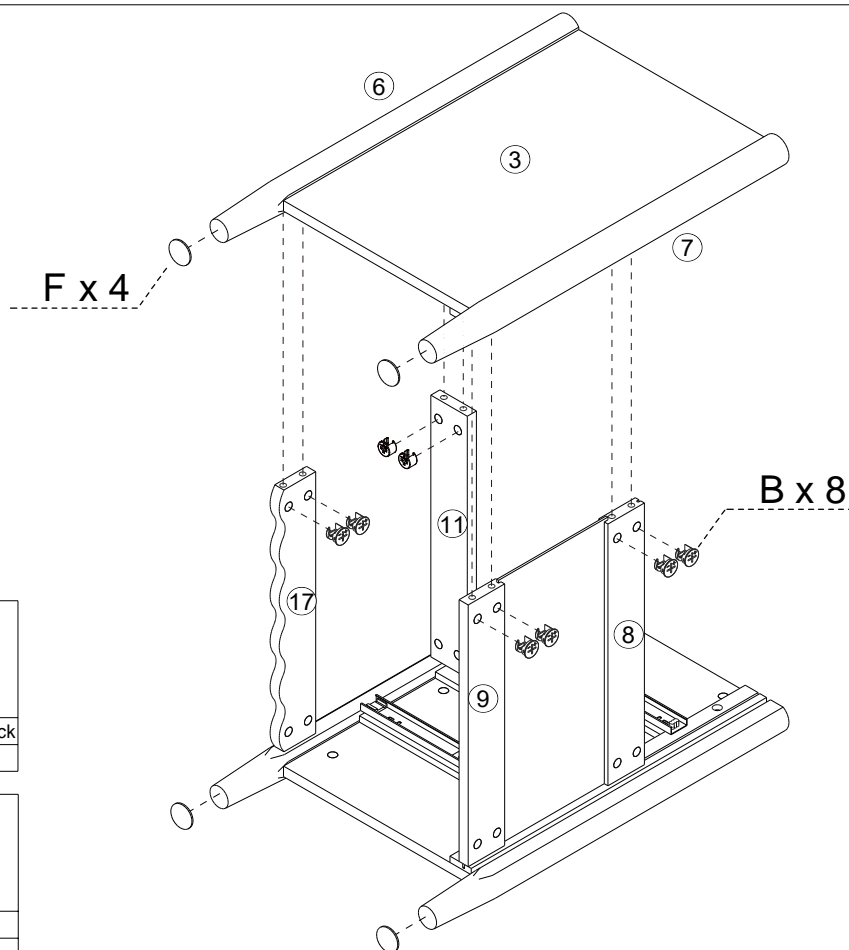



B	
M15x10mm CamLock 8pcs	
F	
Foot pads 4pcs	

9.

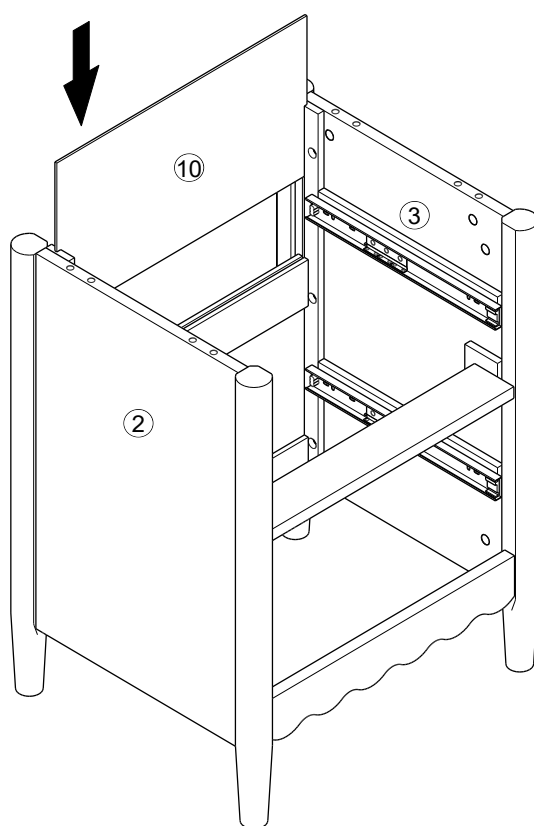


10.

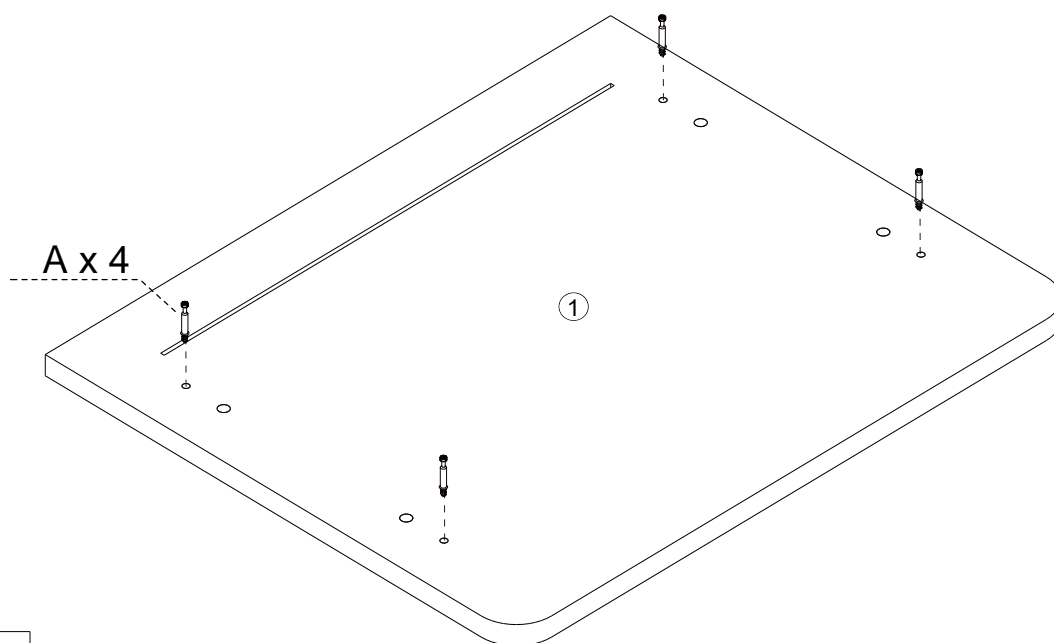



A	
	M6x35mm Bolt 4pcs

P-10-14

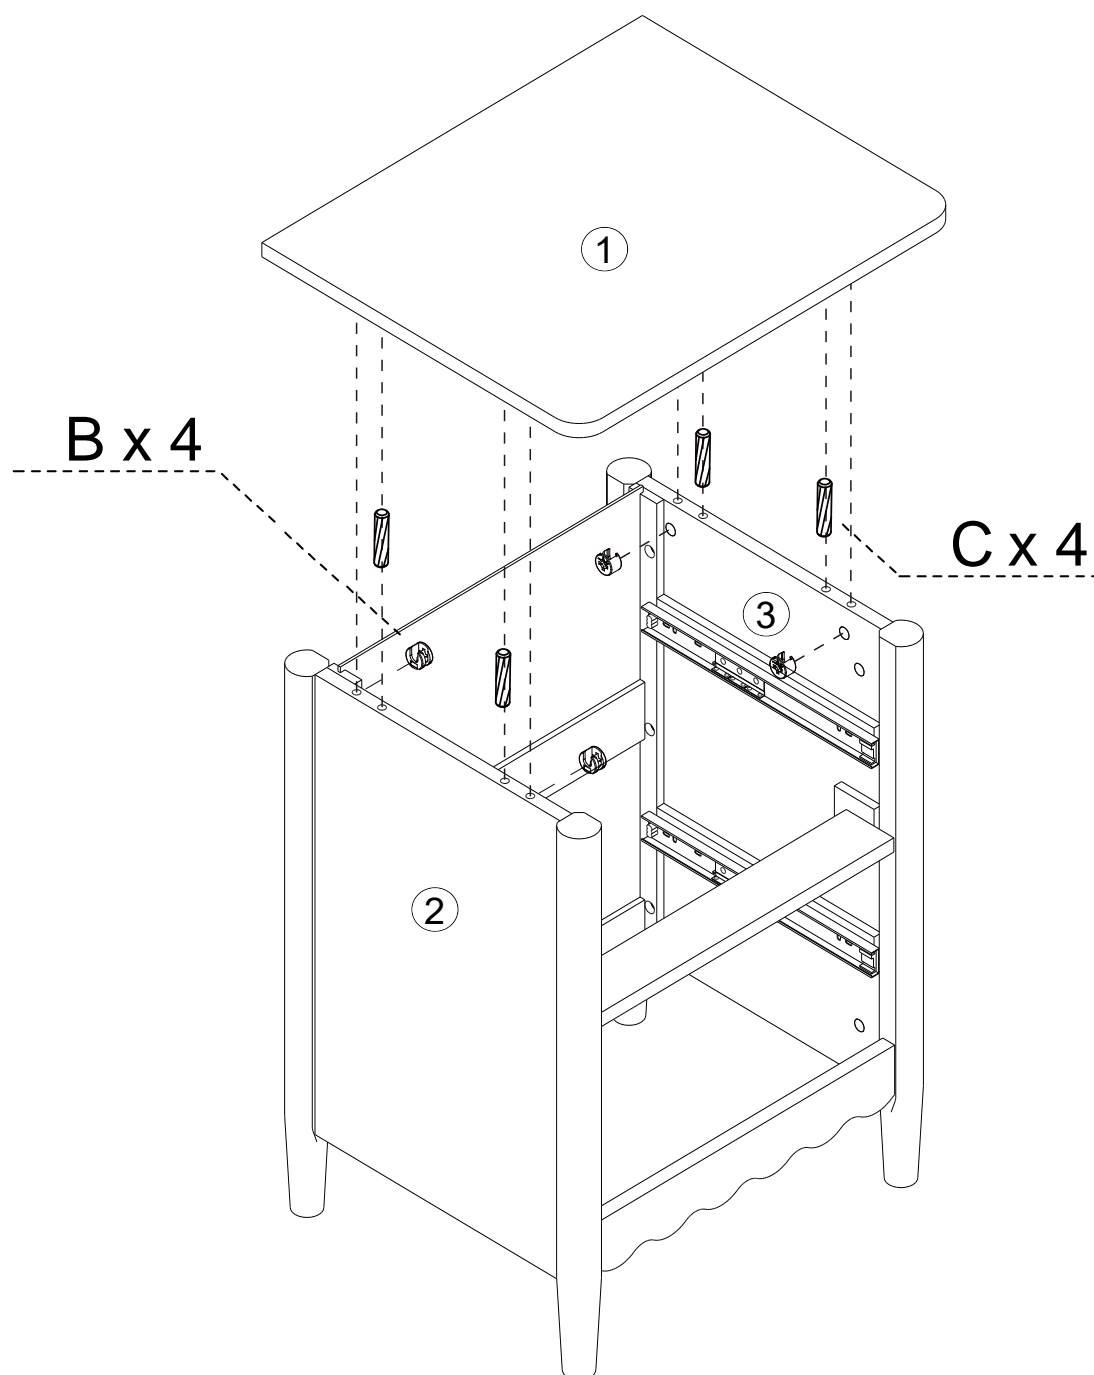11.




B 	C 
M15x10mm CamLock 4pcs	M8x30mm M8x30mm Dowel 4pcs



x2




P-11-14

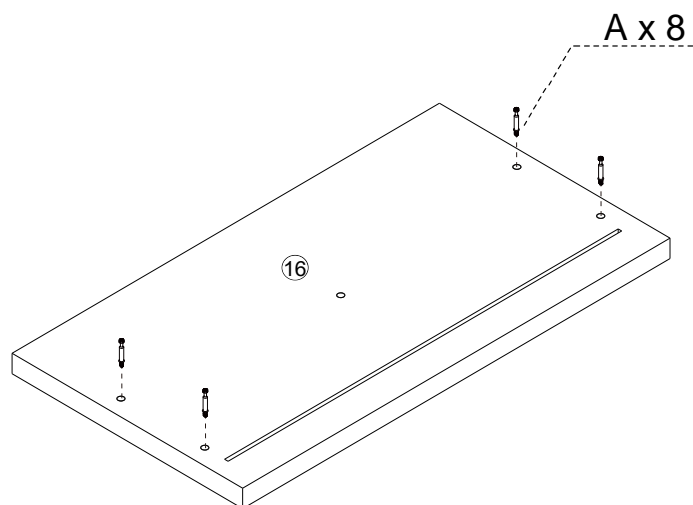12.

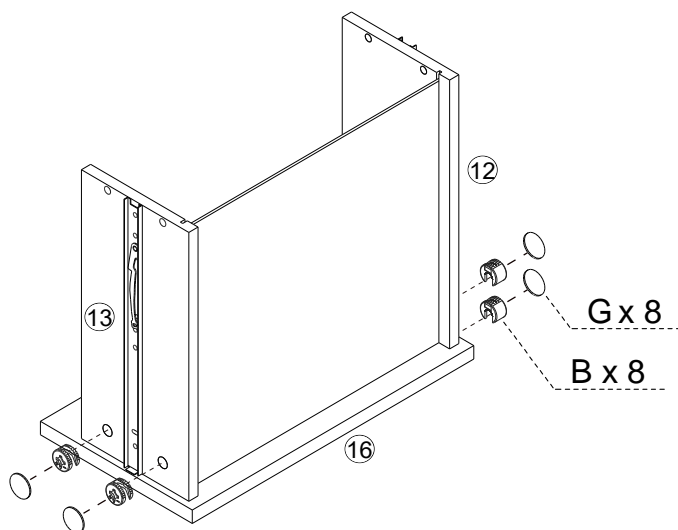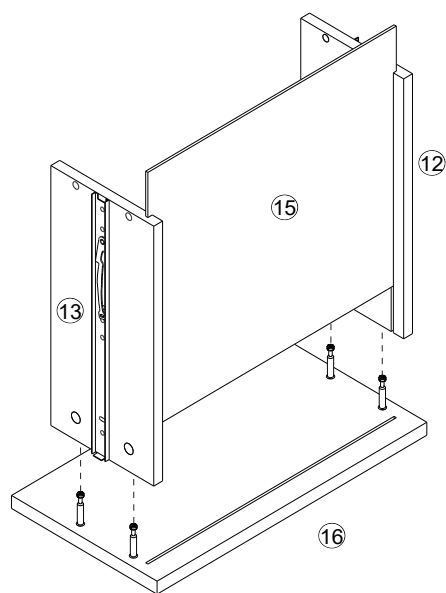

Make sure the drawer bottom panel snaps into the slots before tightening the cam lock





<div data-bbox="113 1897 296 2011"> <div data-bbox="113 1897 150 1935">A</div>  </div> <div data-bbox="113 2011 296 2065"> M6x35mm Bolt 8pcs </div>	<div data-bbox="312 1897 496 2011"> <div data-bbox="312 1897 349 1935">B</div>  </div> <div data-bbox="312 2011 496 2065"> M15x10mm CamLock 8pcs </div>	<div data-bbox="512 1897 695 2011"> <div data-bbox="512 1897 549 1935">G</div>  </div> <div data-bbox="512 2011 695 2065"> Hole stickers 8pcs </div>
--	--	---

x2

P-12-14

13.


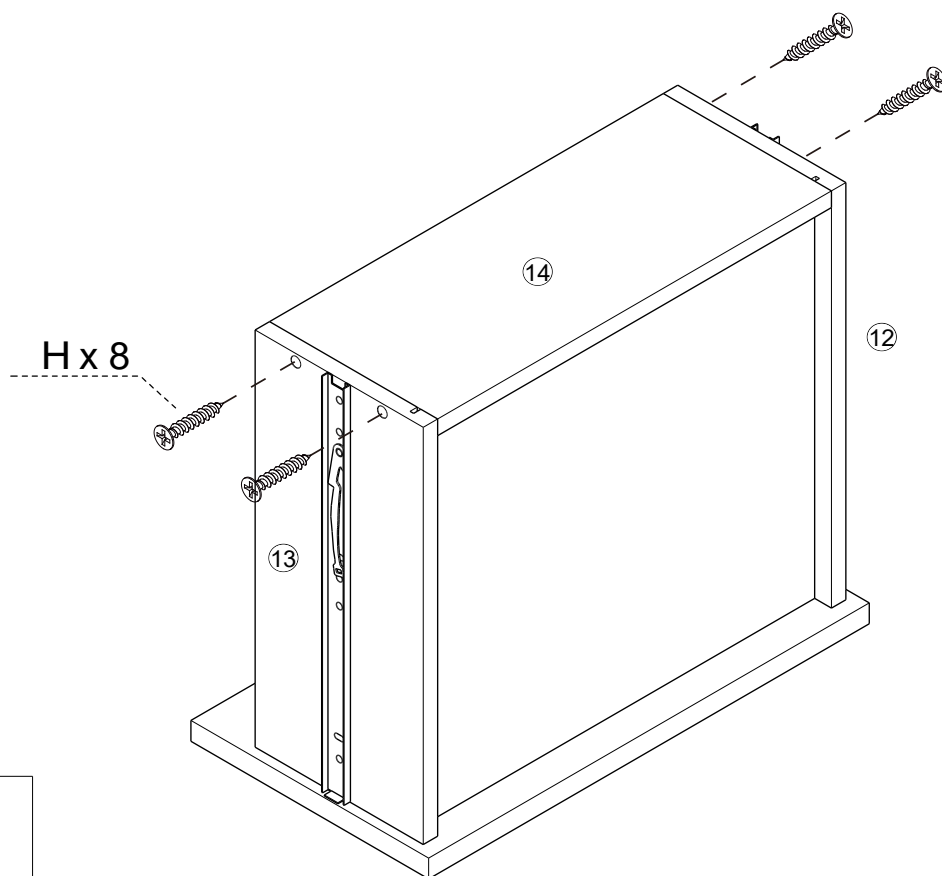


H	
M4x35mm Screw	
8pcs	


x2


14.


Install either Handle D or Handle J according to your preference

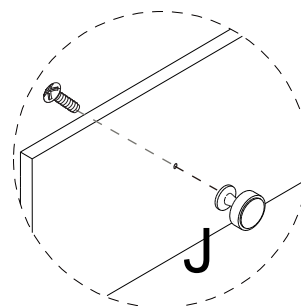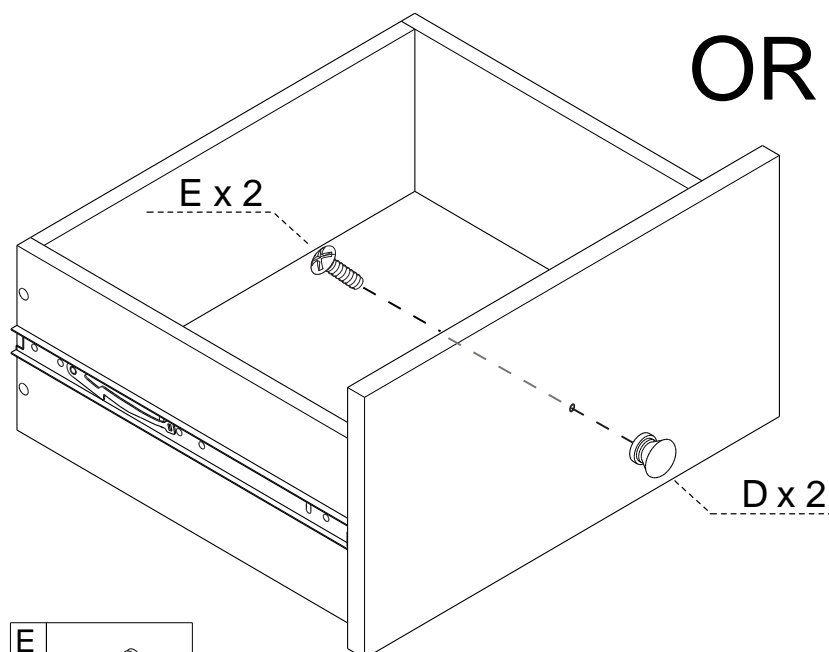

OR


D	
Wooden Handle	
2pcs	

J	
Metal Handle	
2pcs	



E	
M4x18mm Screw	
2pcs	

x2

15.

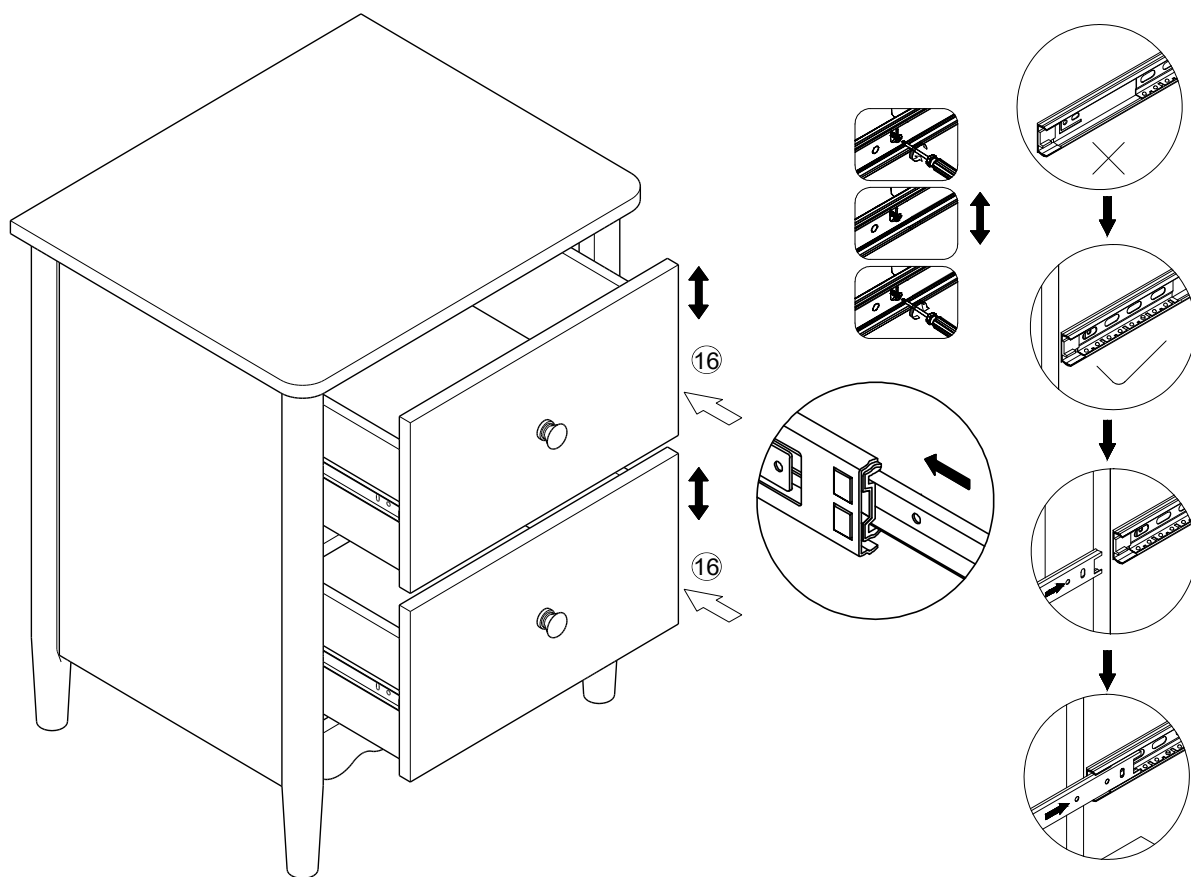

16.

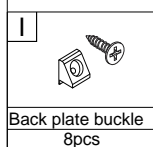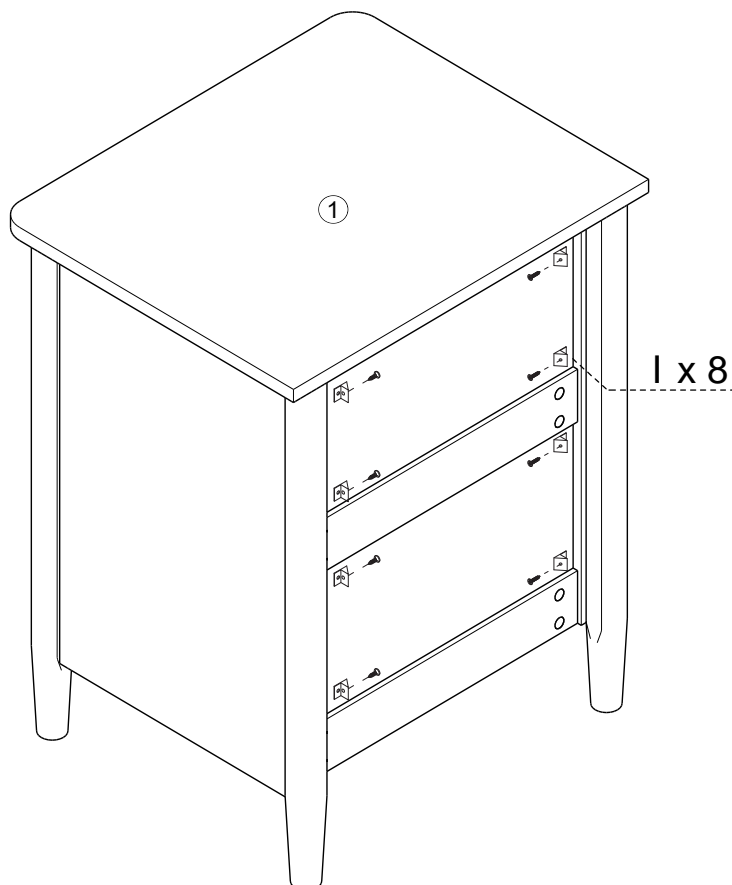

P-14-14