

DUSK.COM



LIVING | BEDROOM | DINING

Range Name : Bonnie


Box1 dimensions : W69.5xD48xH21cm

Product dimension : W45xD40xH59cm

Bonnie Bedside

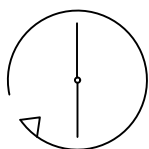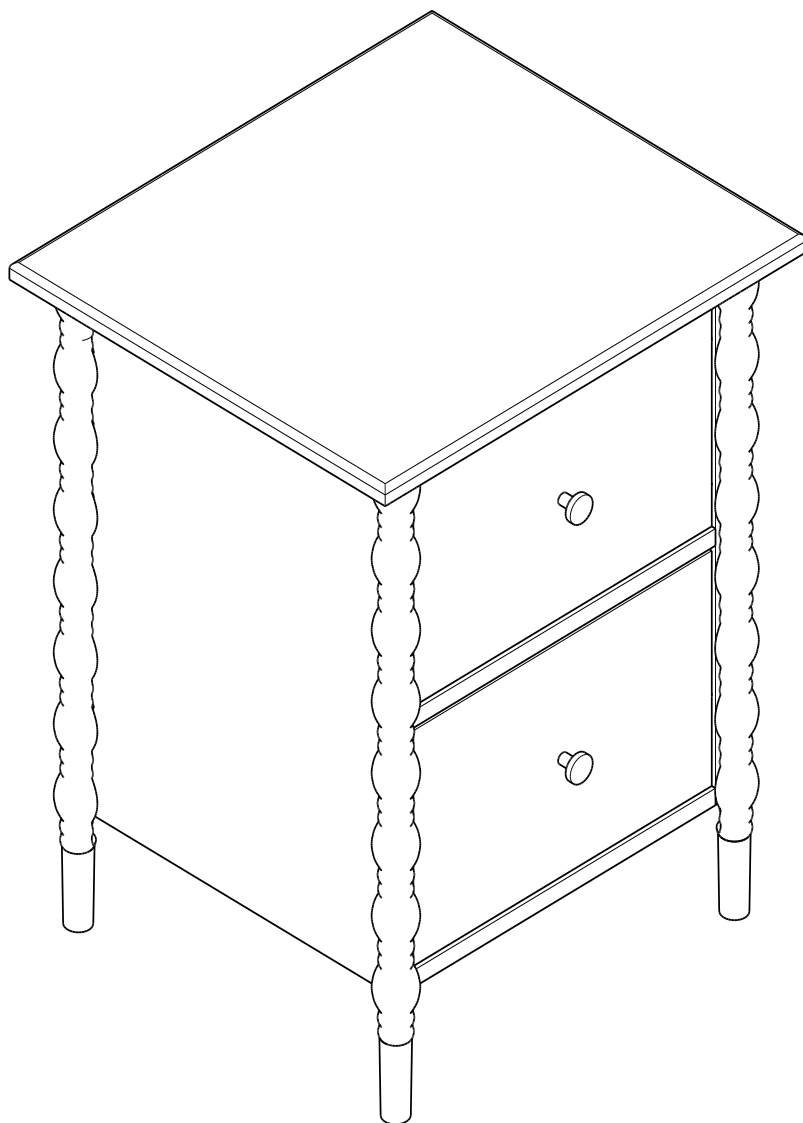

Up to 60 minutes
assembly time

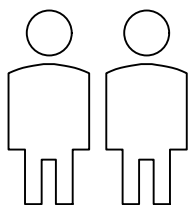

Two person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Bonnie Bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Bonnie Bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Bonnie Bedside when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

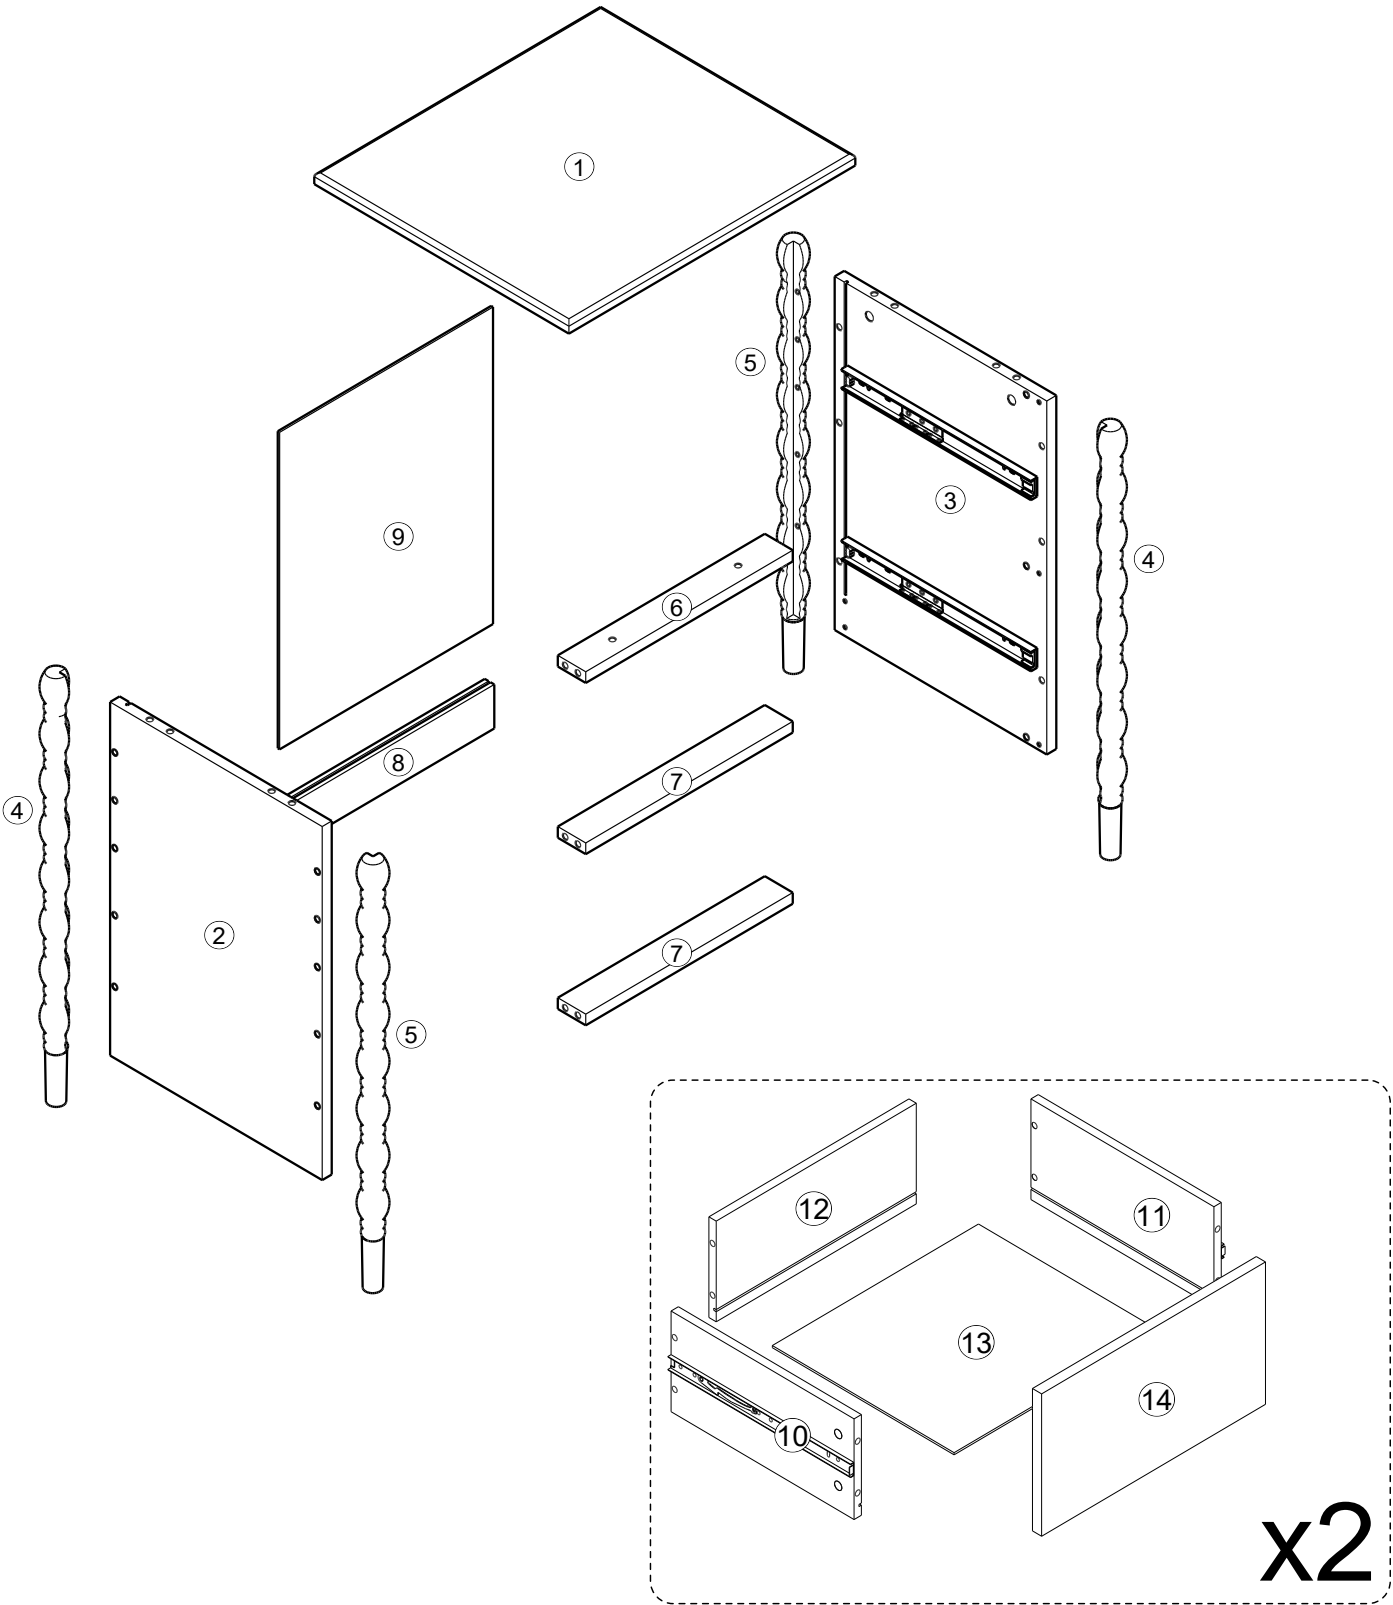

Parts list












Before you begin building your Willow Wardrobe, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top panel	1 pc	Box 1
③	Right side panel with slide pre-assembled	1 pc	Box 1
⑤	Left front/Right back leg	2 pcs	Box 1
⑦	Lower support	2 pcs	Box 1
⑨	Back panel	1 pc	Box 1
⑪	Drawer right panel With slide pre-assembled	2 pcs	Box 1
⑬	Drawer bottom	2 pcs	Box 1




Part Number	Part Description	Quantity	Box No
②	Left side panel with slide pre-assembled	1 pc	Box 1
④	Left back/Right front leg	2 pcs	Box 1
⑥	Upper support	1 pc	Box 1
⑧	Back support	1 pc	Box 1
⑩	Drawer left panel With slide pre-assembled	2 pcs	Box 1
⑫	Drawer back	2 pcs	Box 1
⑭	Drawer front	2 pcs	Box 1


Fittings


Please check you have all the fittings listed below with your product in Box 1.

A  M6x35mm Bolt 22pcs+2pc extra	B  M15x10mm CamLock 22pcs+2pc extra	C  M6x20mm Dowel 8pcs+1pc extra	D  M4x35mm Screw 8pcs+1pc extra	E  M4x25mm Screw 14pcs+1pc extra
F  M6x30mm Dowel 10pcs+1pc extra	G  Hole stickers 8pcs	H  Foot pads 4pcs	I  Back plate buckle 4pcs	J  M4x15mm Screw 2pcs
K  Metal Handle 2pcs				


Pre-assembled Fittings.


U1  Slide Pre-assembled 4pcs	U2  Slide Pre-assembled 4pcs	N  M3.5*12mm Screw 20pcs
---	---	---

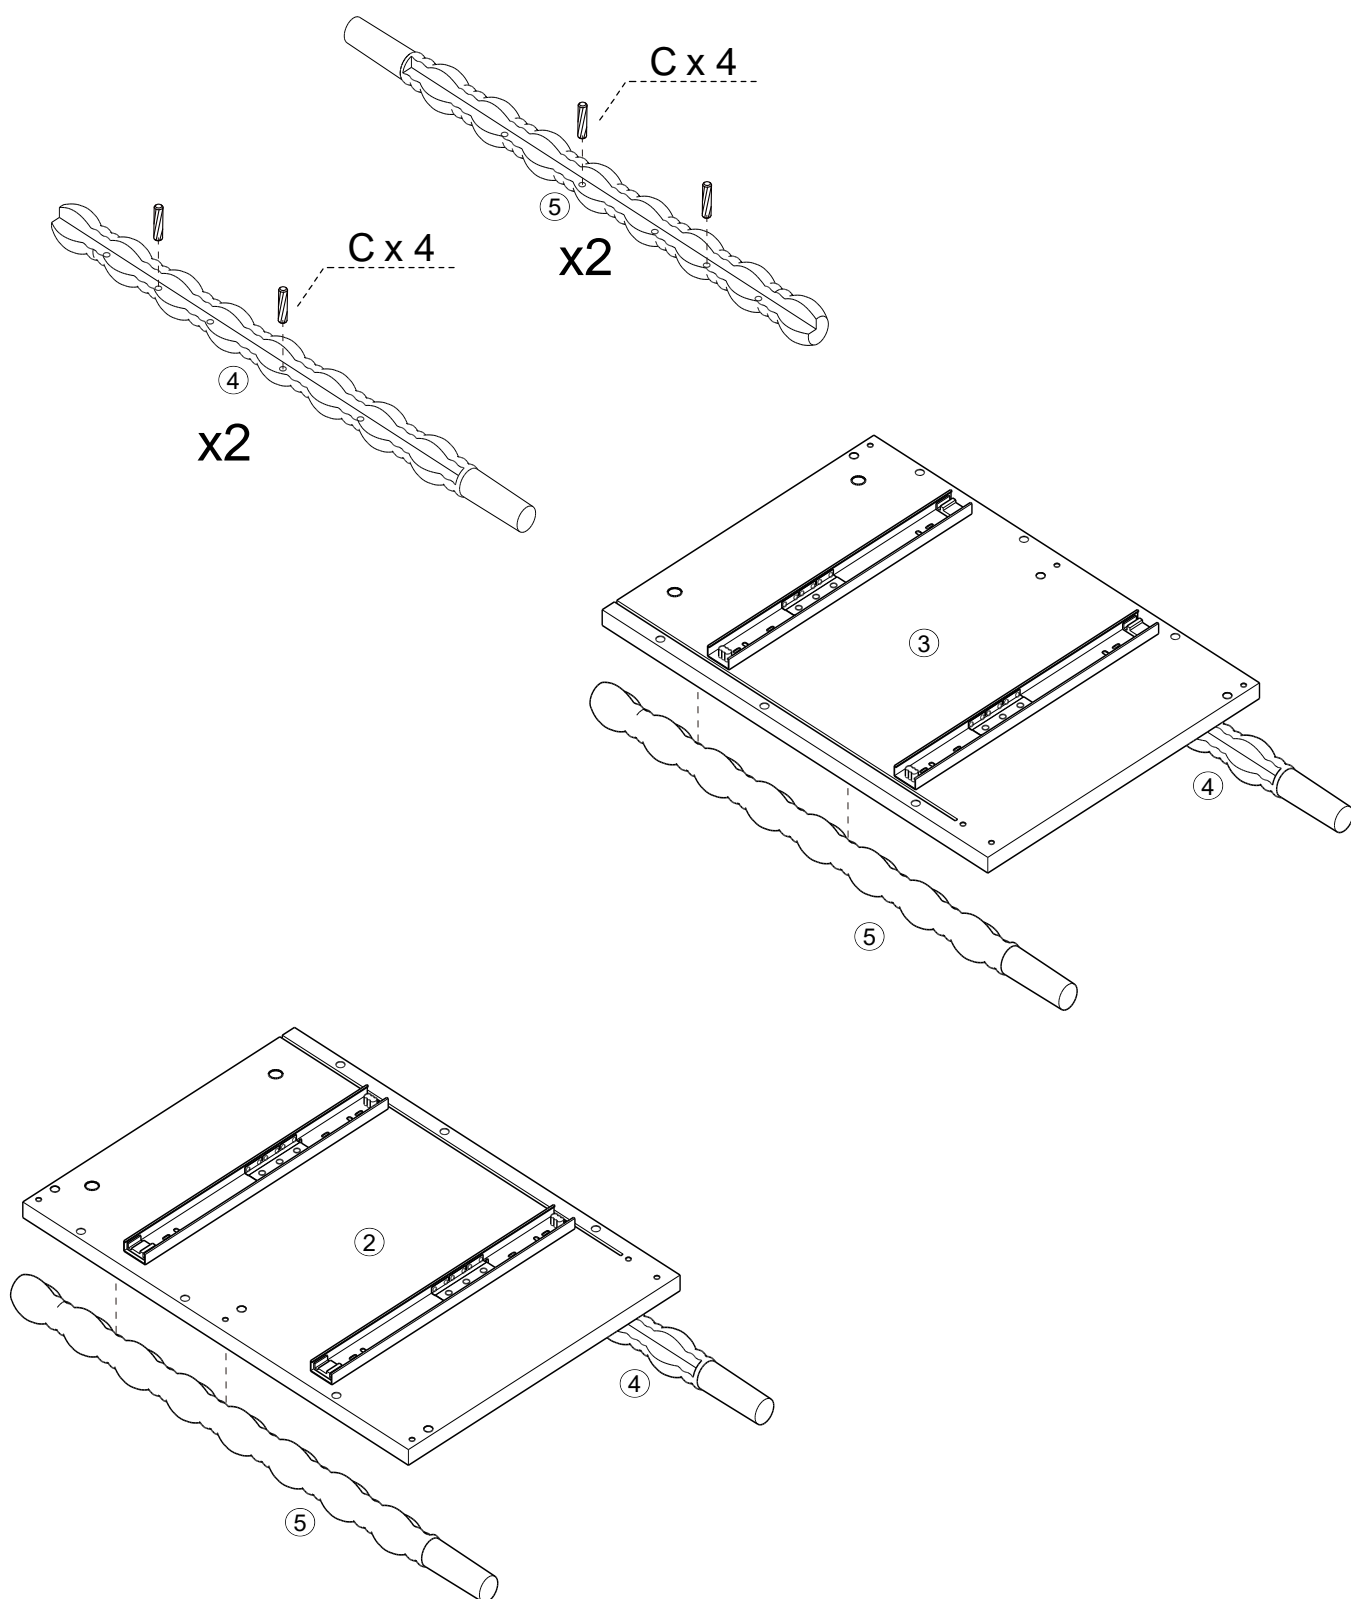


C

M6x20mm Dowel 8pcs

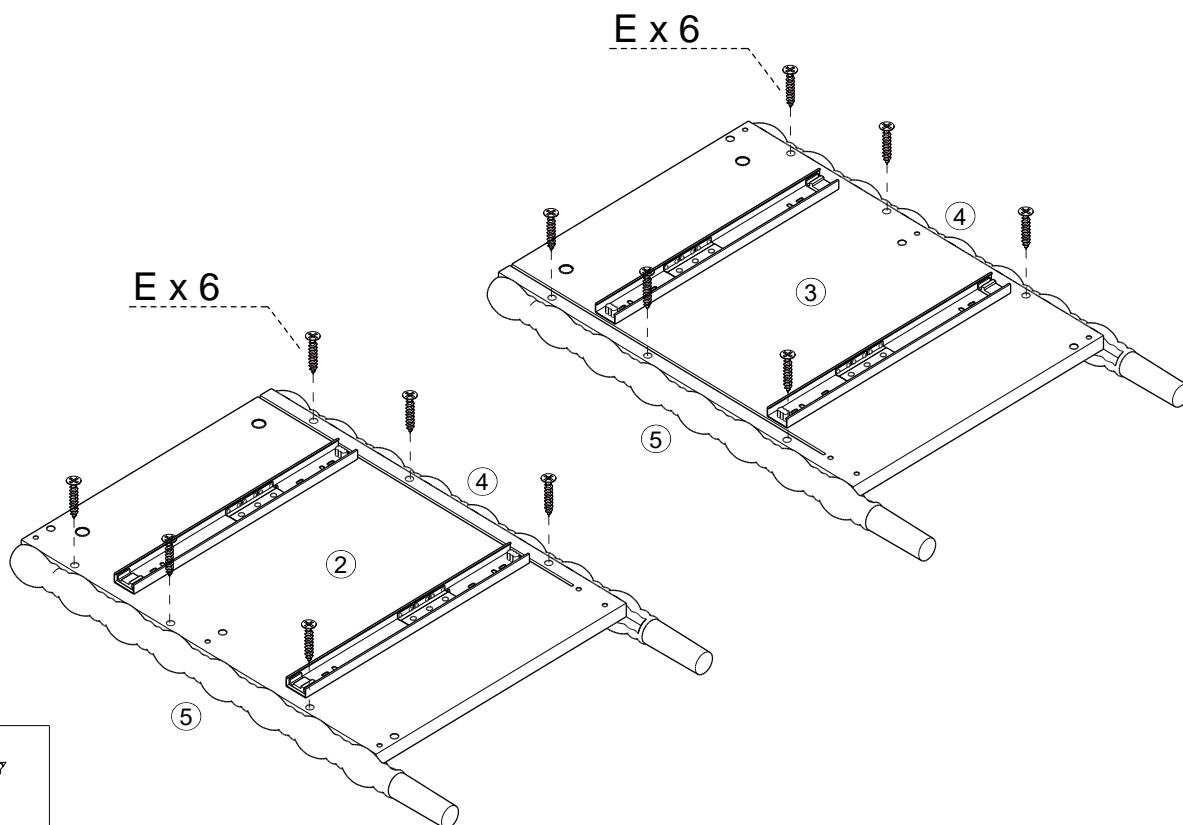
2.




E	
	M4x25mm Screw 12pcs



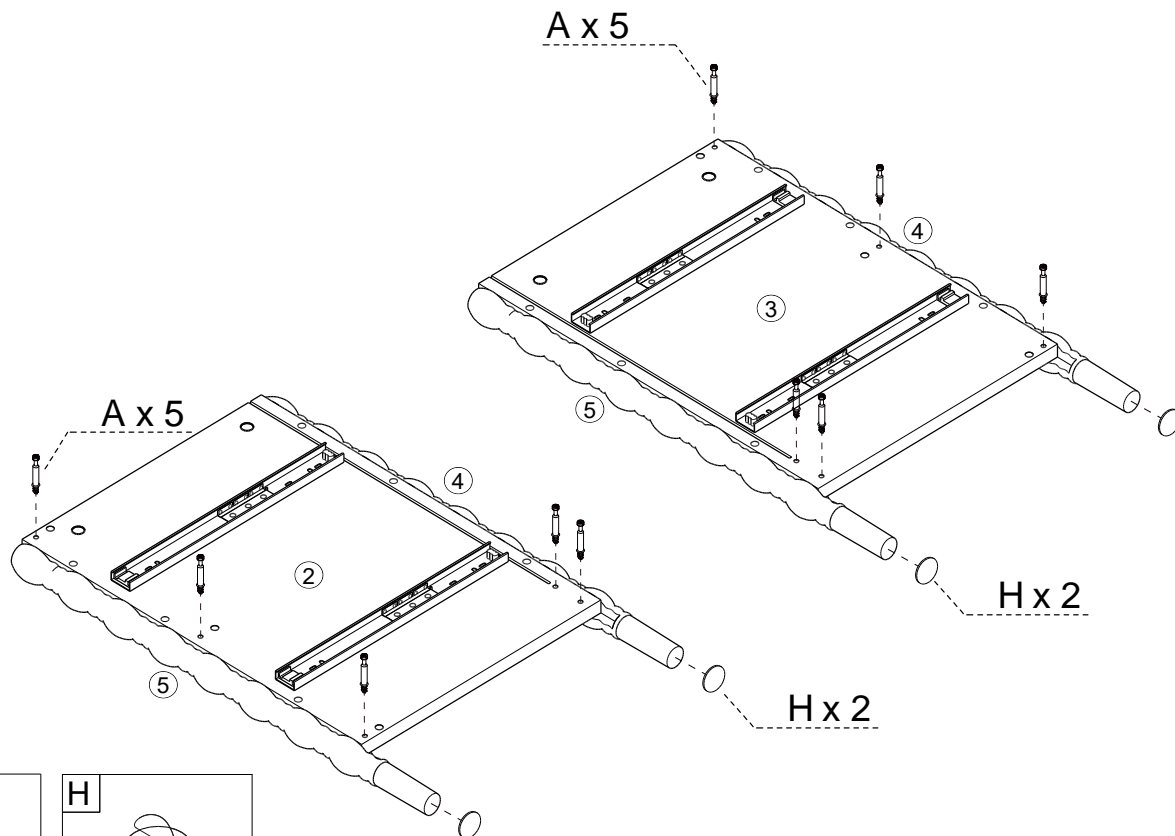
3.






A	
	M6x35mm Bolt 10pcs

H	
	Foot pads 4pcs


4.

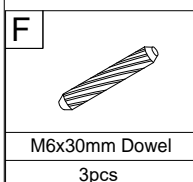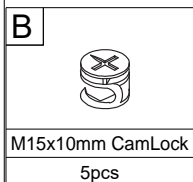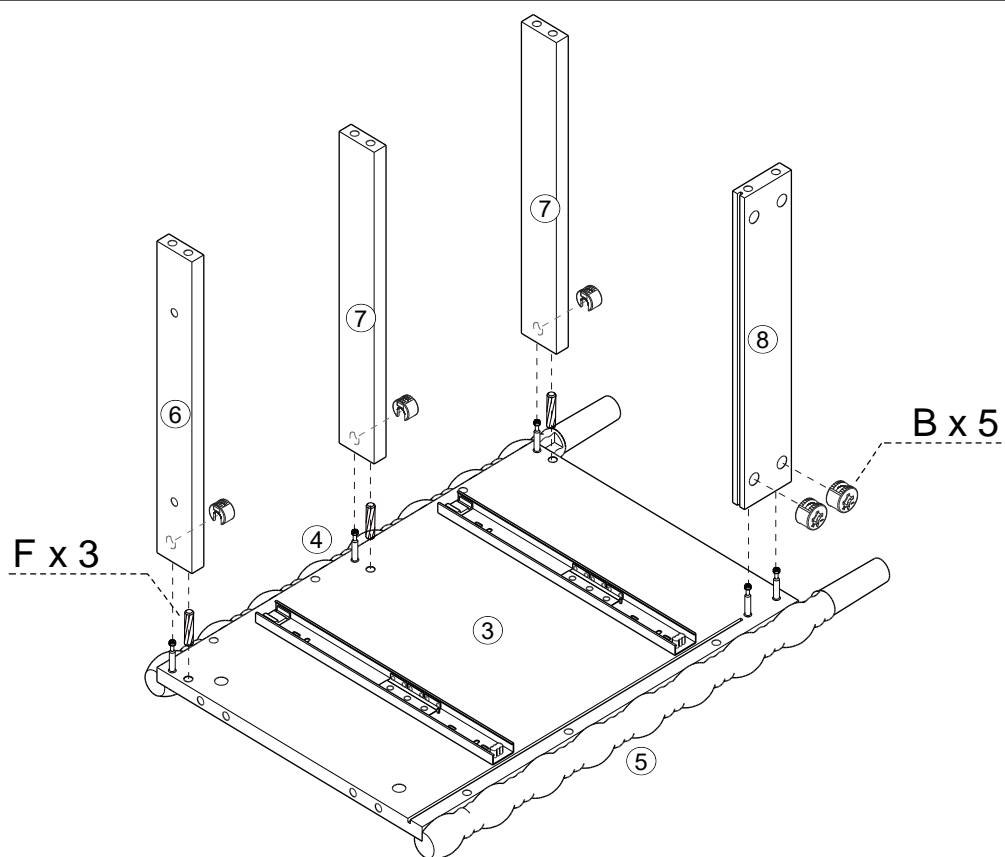


5.

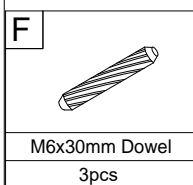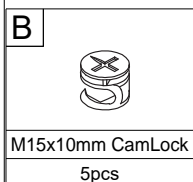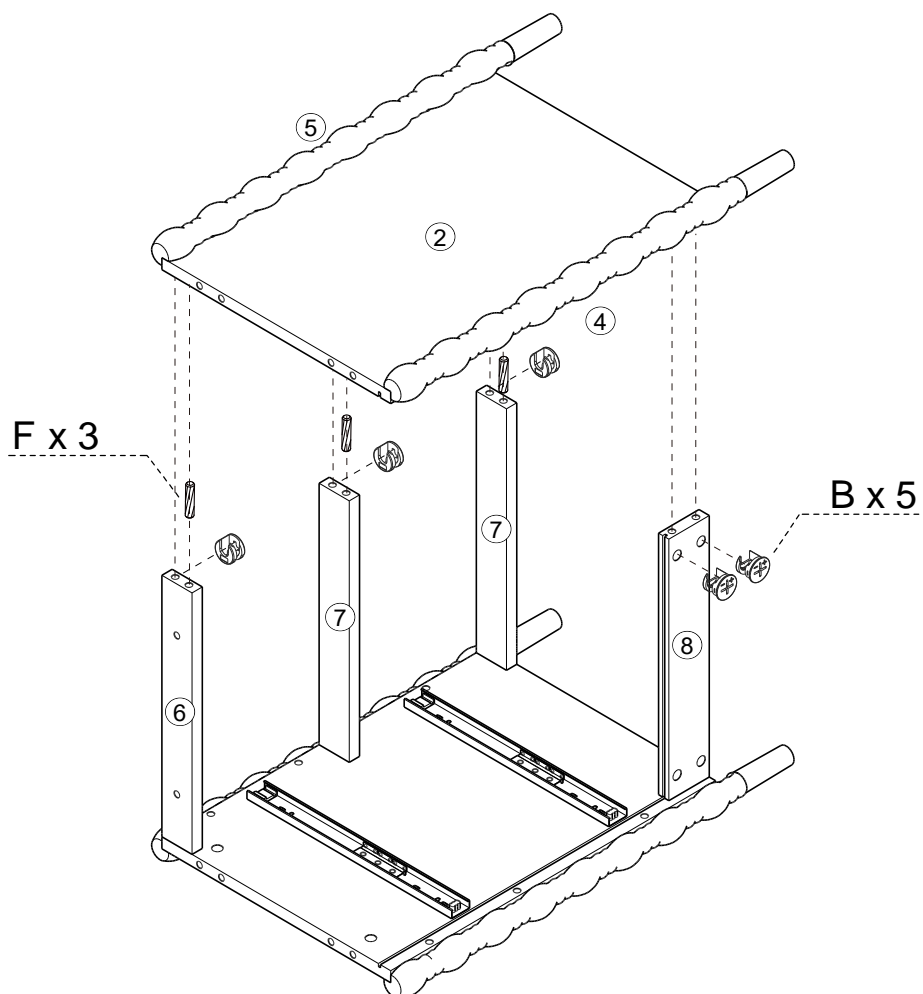

6.

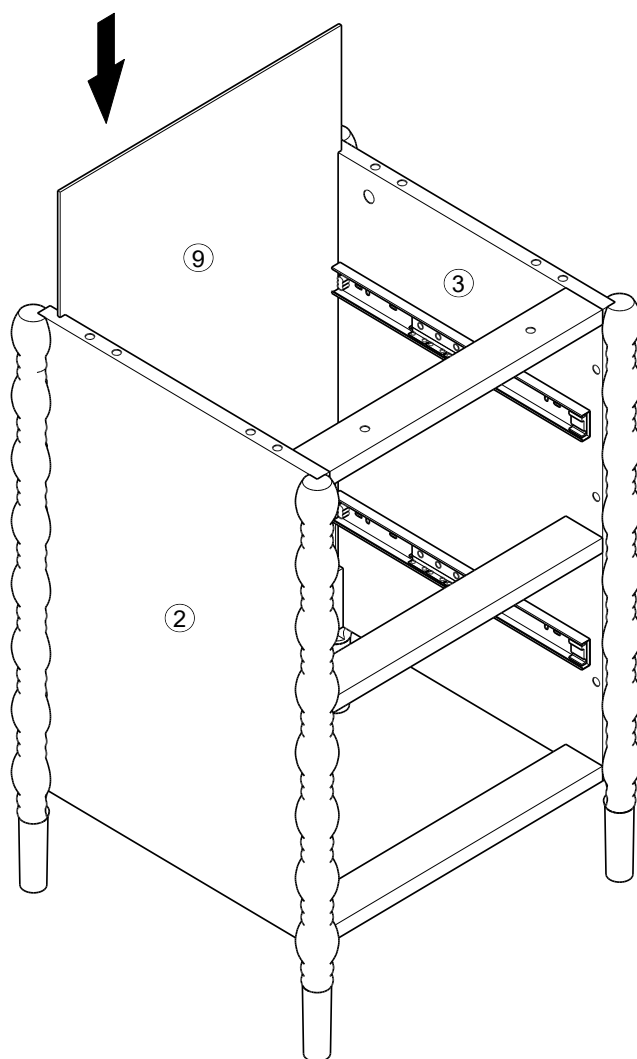


7.

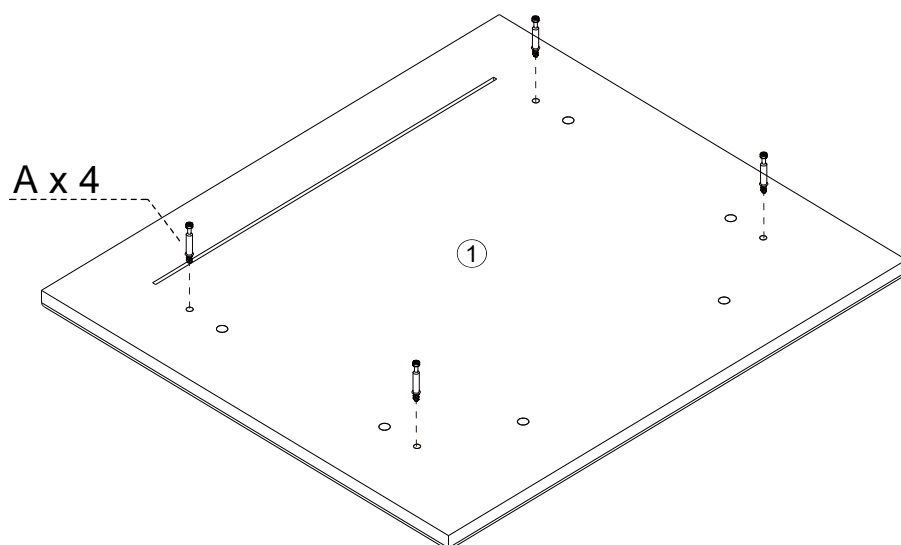


A	
M6x35mm Bolt 4pcs	

P-8-12

8.

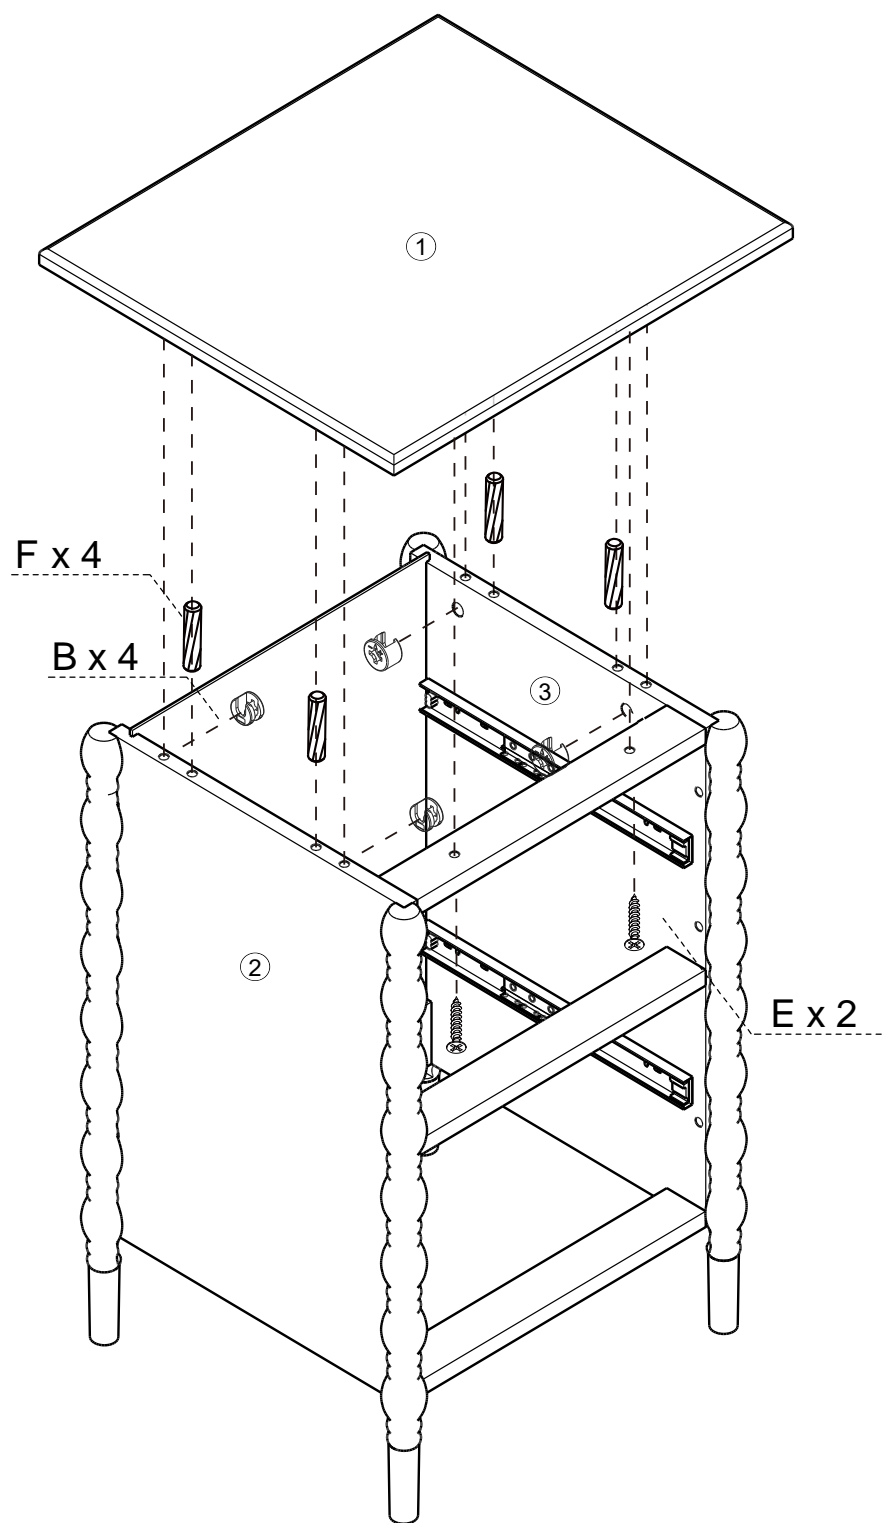


B




M15x10mm CamLock
4pcs

F




M6x30mm Dowel
4pcs

E






M4x25mm Screw
2pcs

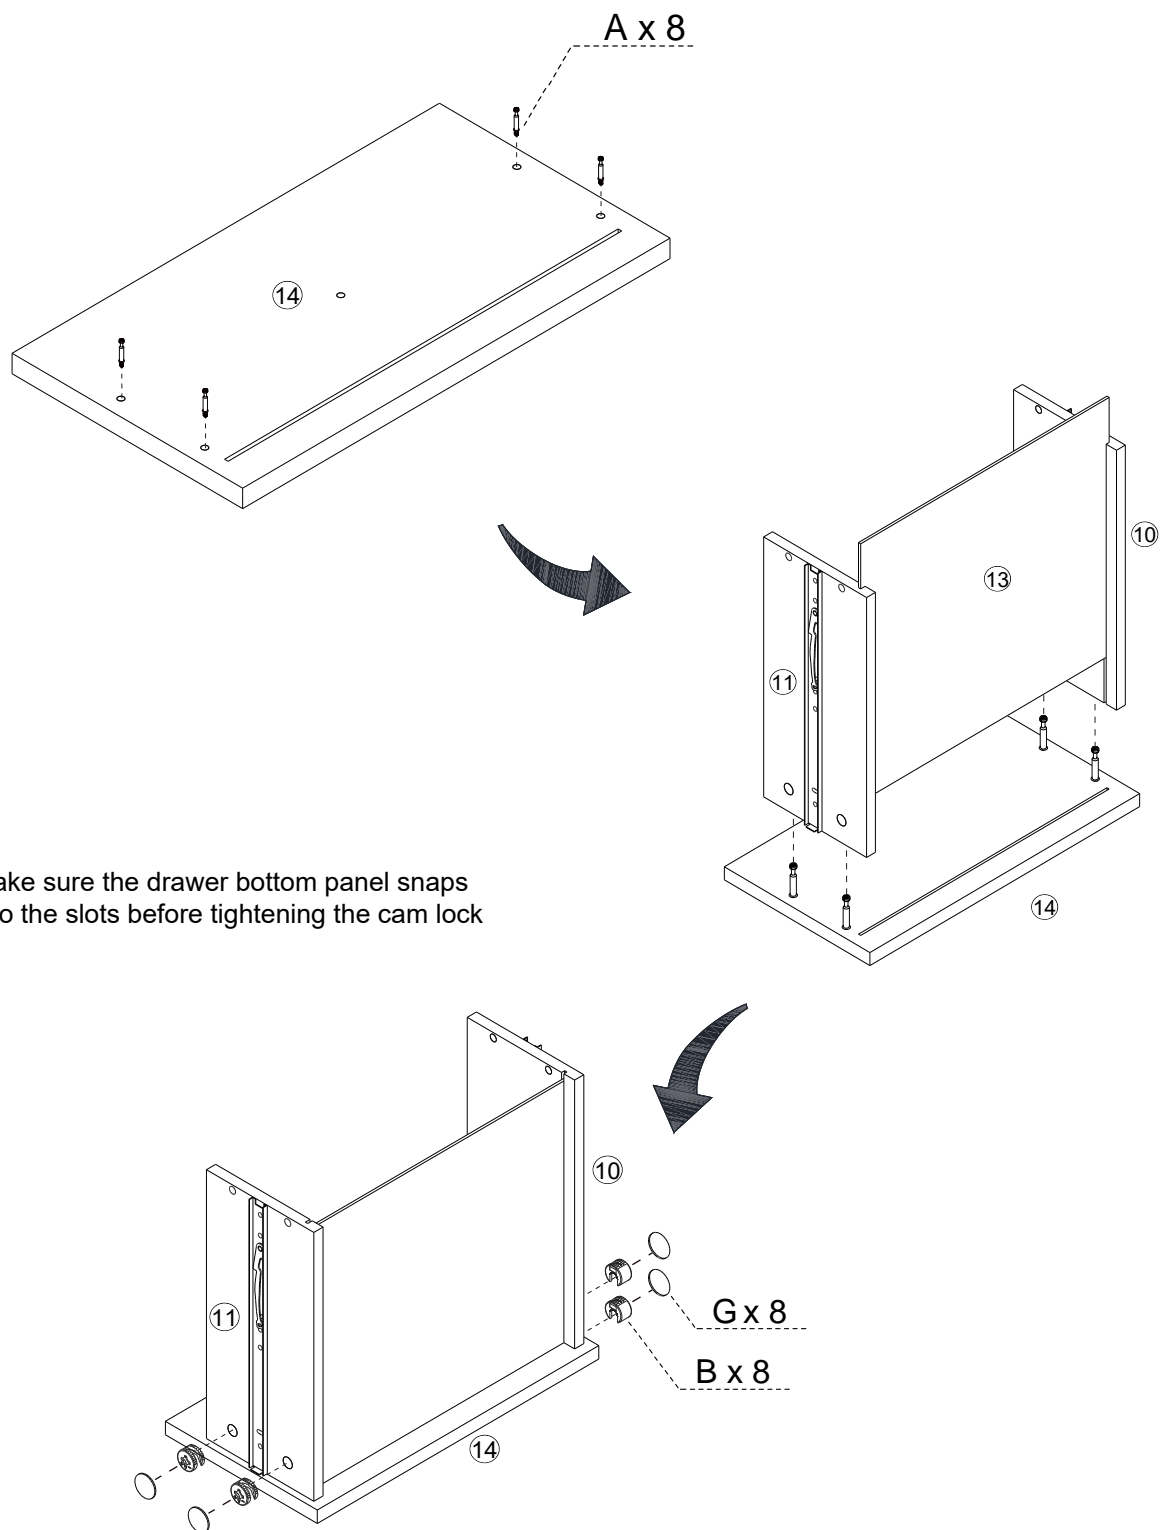12.





Make sure the drawer bottom panel snaps into the slots before tightening the cam lock

<div data-bbox="113 1848 161 1899">A</div>  <div data-bbox="140 1995 325 2063"> M6x35mm Bolt 8pcs </div>	<div data-bbox="368 1848 416 1899">B</div>  <div data-bbox="373 1995 598 2063"> M15x10mm CamLock 8pcs </div>	<div data-bbox="628 1848 676 1899">G</div>  <div data-bbox="671 1995 826 2063"> Hole stickers 8pcs </div>
---	---	--

x2
P-10-12


13.

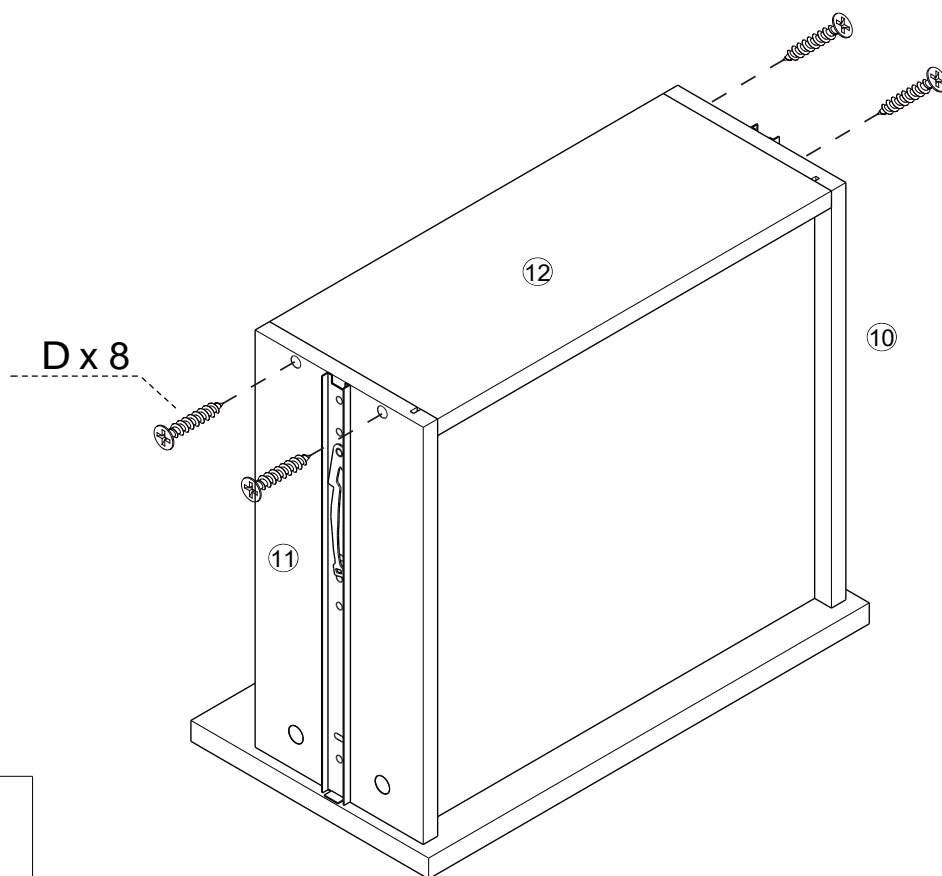



D	
M4x35mm Screw	
8pcs	

x2

14.

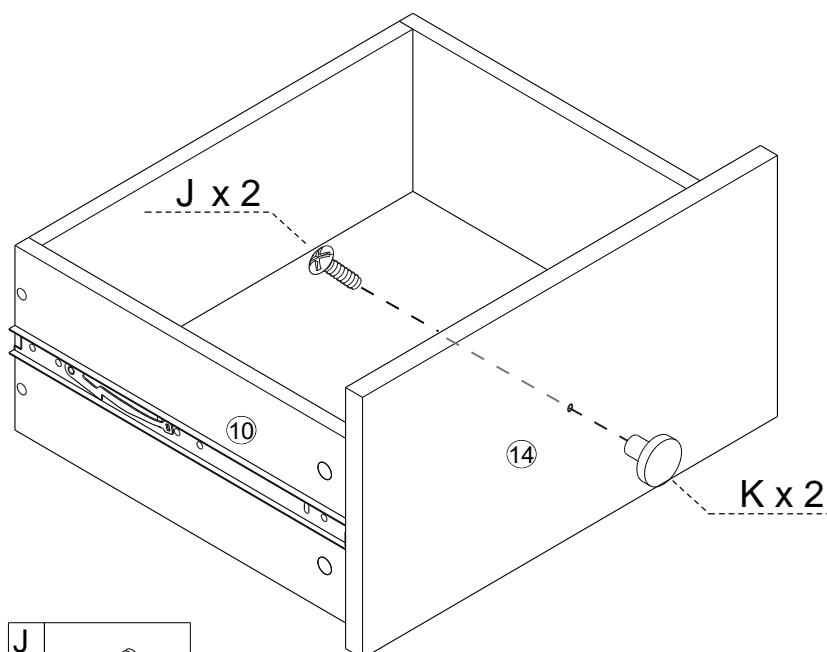



K	
Handle	
2pcs	

J	
M4x18mm Screw	
2pcs	




x2

P-11-12

15.

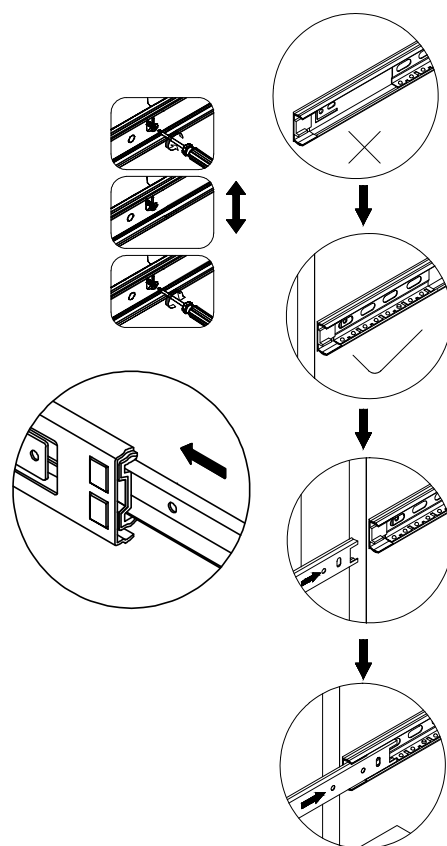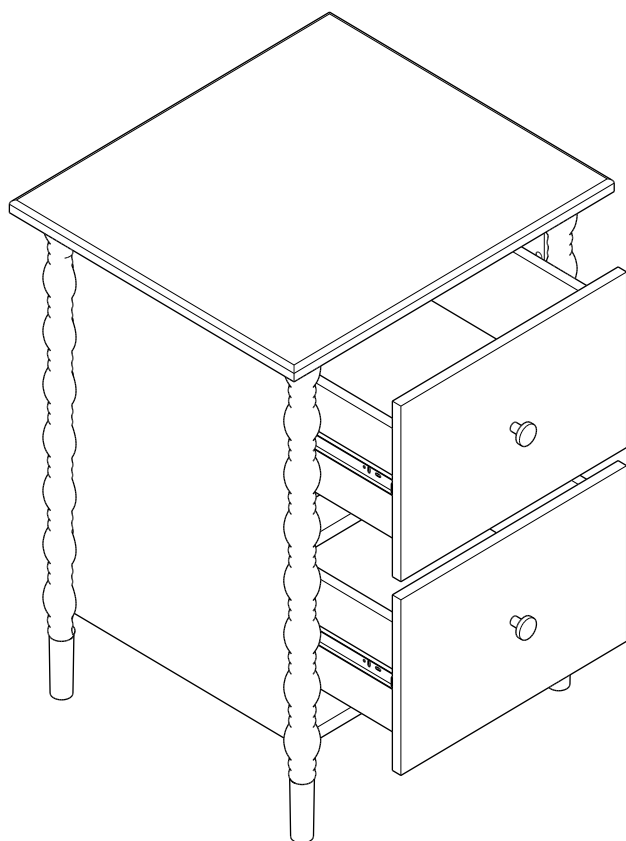

16.

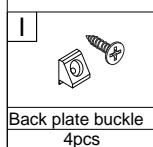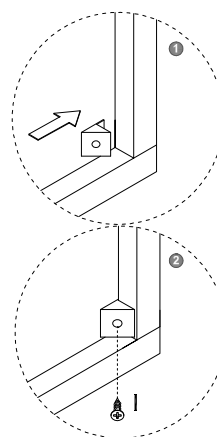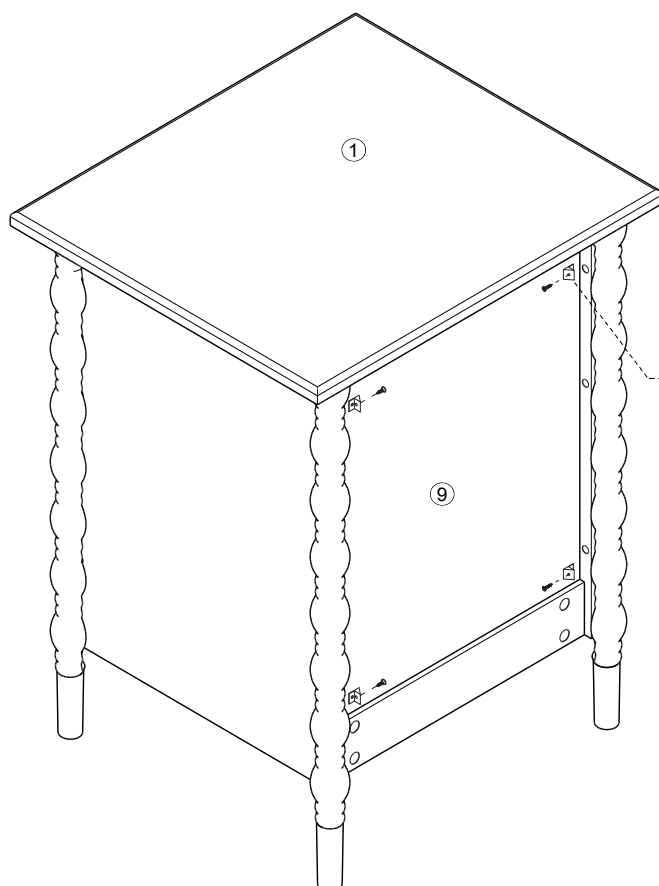

P-12-12