

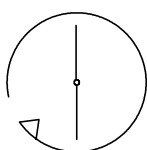


Carmen Nightstand

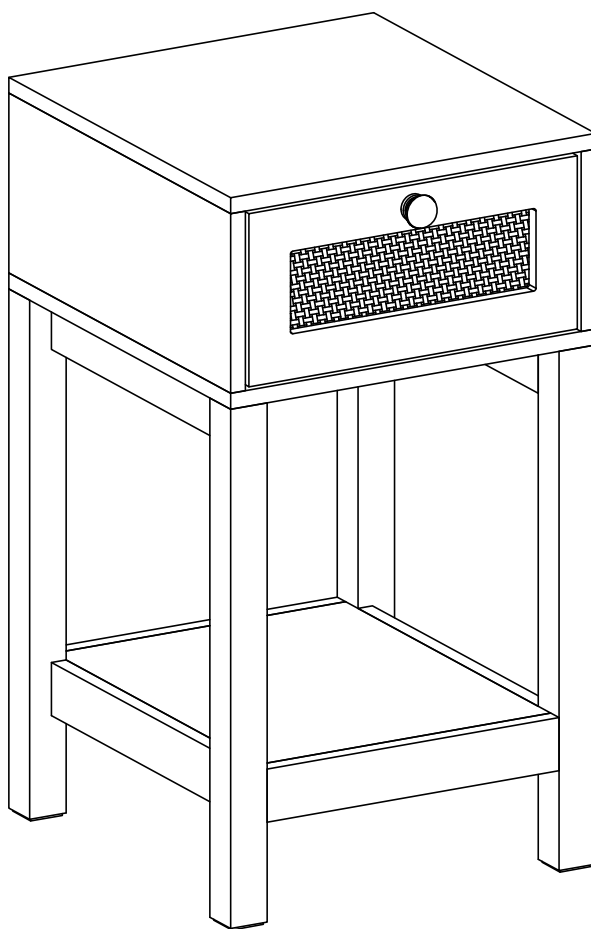

Up to 45 minutes
assembly time

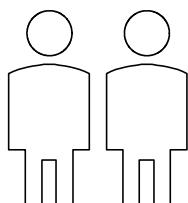

Two person
assembly



Electric screwdriver
prohibited

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Carmen Nightstand frame.

We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Carmen Nightstand in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.


CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Carmen Nightstand when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

Before you begin building your Carmen Nightstand, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top panel	1pc	Box 1
②	Left Side Panel With Slide	1pc	Box 1
③	Right Side Panel With Slide	1pc	Box 1
④	Bottom Panel	1pc	Box 1
⑤	Back Panel	1pc	Box 1
⑥	Leg	2pcs	Box 1
⑦	Centre Support	1pc	Box 1
⑧	Shelf panel	1pc	Box 1
⑨	Centre Support	2pcs	Box 1
⑩	Drawer Front	1pc	Box 1
⑪	Drawer Left Side With Slide	1pc	Box 1
⑫	Drawer Right Side With Slide	1pc	Box 1
⑬	Drawer Back Panel	1pc	Box 1
⑭	Drawer Bottom	1pc	Box 1

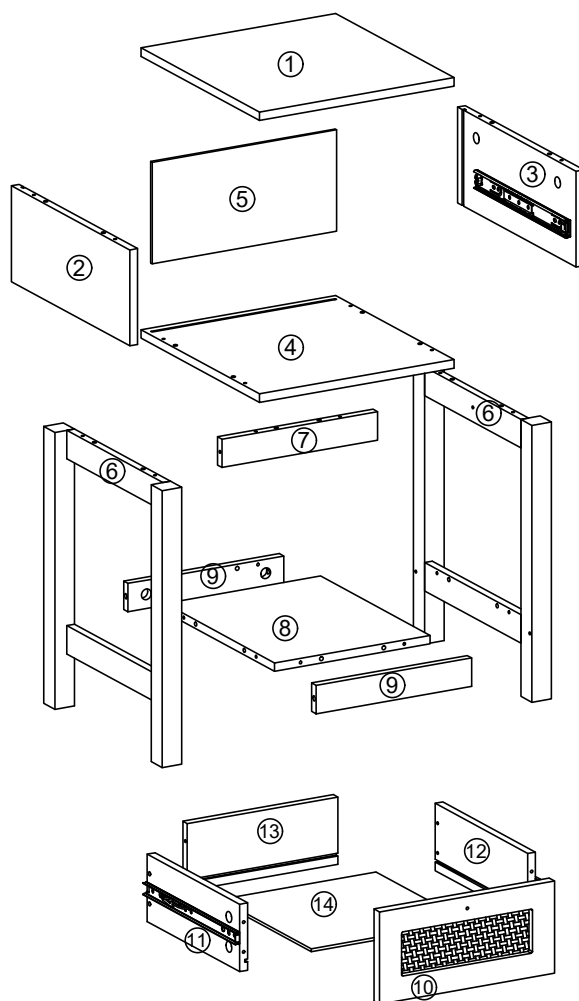

Fittings


Please check you have all the fittings listed below with your product in box 1.

A M6*35mm Bolt 22pcs+2pcs extra	B Ø15x9.5mm Cam Lock 22pcs+2pcs extra	C Ø6x30mm Dowel 22pcs+2pcs extra	D Ø4*40mm Screw 10pcs+1pc extra	E Ø4*35mm Screw 4pcs	F Back panel clip 4pcs	G M3*14mm Bolt 4pcs
H Felt pad 4pcs	I M4*18mm Bolt 1pc	J Handle 1pc	K Cover 4pcs			

Pre-assembled Fittings.

L₁ Slide 2pcs	L₂ Slide 2pcs	M Ø3x12mm Screw 8pcs
---	---	---------------------------------------


1.Attach parts to the top panel and centre support.

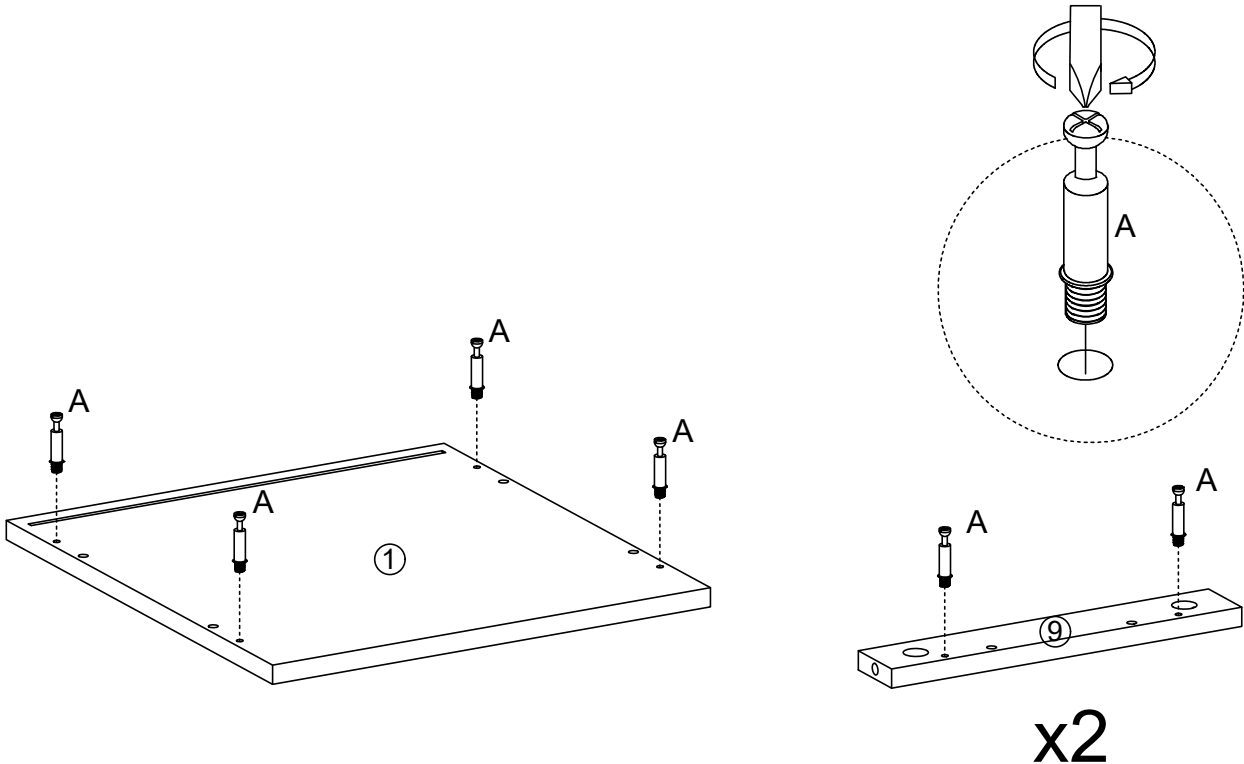

A



M6*35mm Bolt
8pcs

2.Attach centre support to the shelf panel.

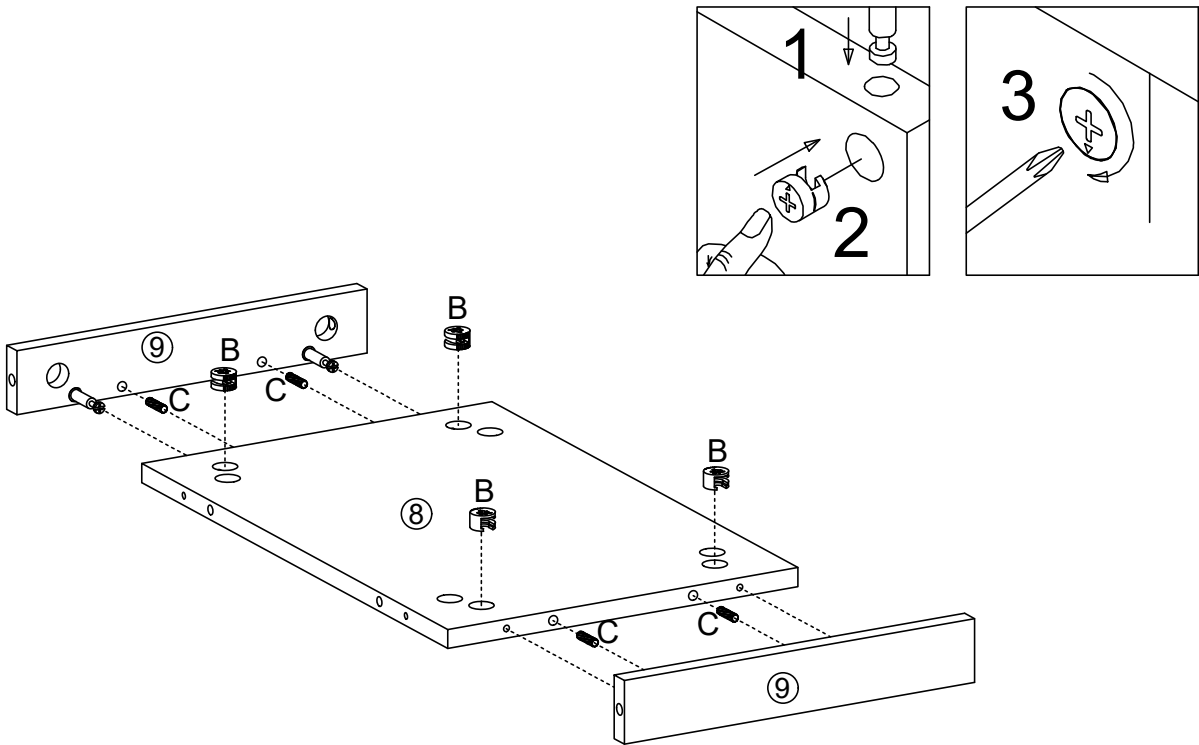


B	C
	
Ø15x9.5mm Cam Lock	Ø6x30mm Dowel
4pcs	4pcs

3. Attach side panel to the top panel.

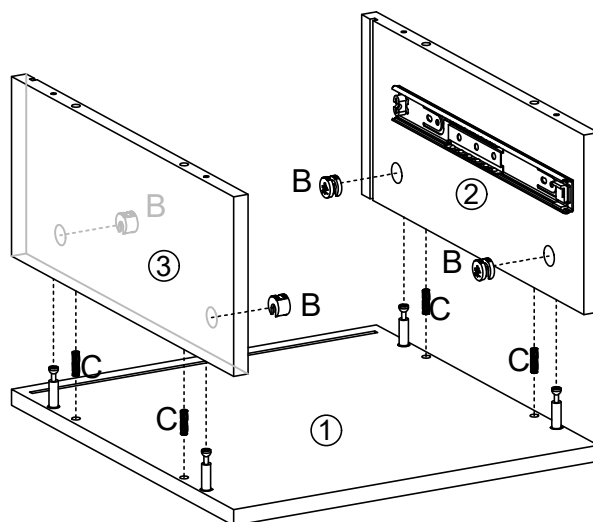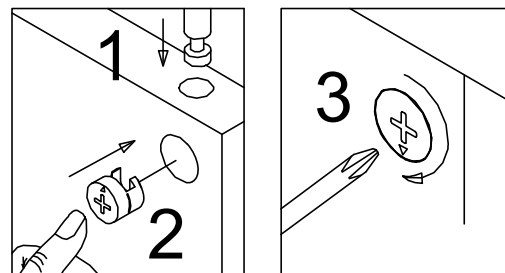


B 	C 
Ø15x9.5mm Cam Lock 4pcs	Ø6x30mm Dowel 4pcs

4. Attach back panel to the side panel.

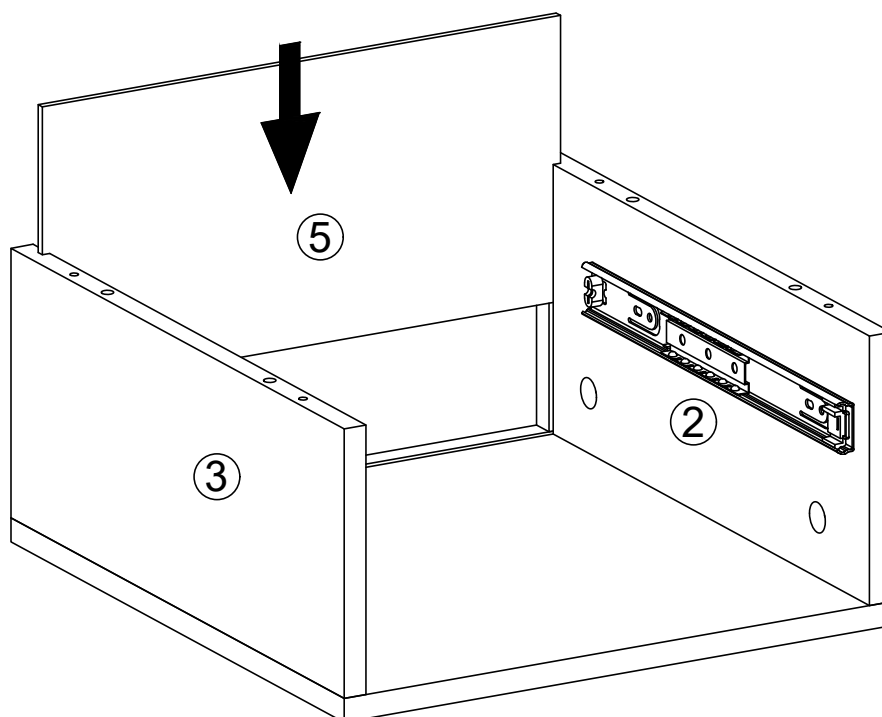


5. Attach bottom panel to the side panel.

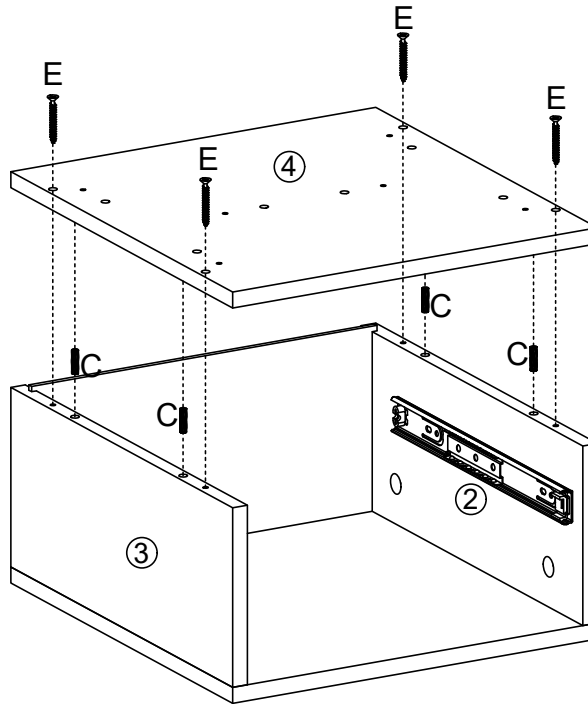


C		E	
Ø6x30mm Dowel		Ø4*40mm Screw	
4pcs		4pcs	

6. Attach parts to the leg.

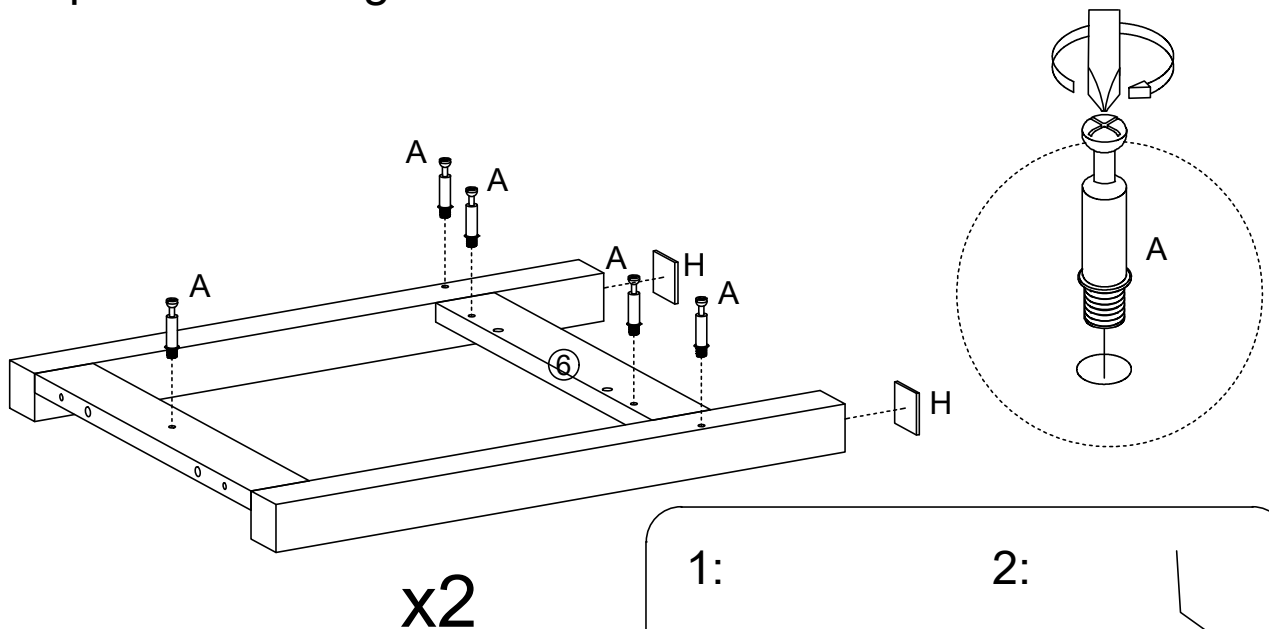


A	
M6*35mm Bolt	Felt pad
10pcs	4pcs

7. Attach shelf panel and centre support to the leg.

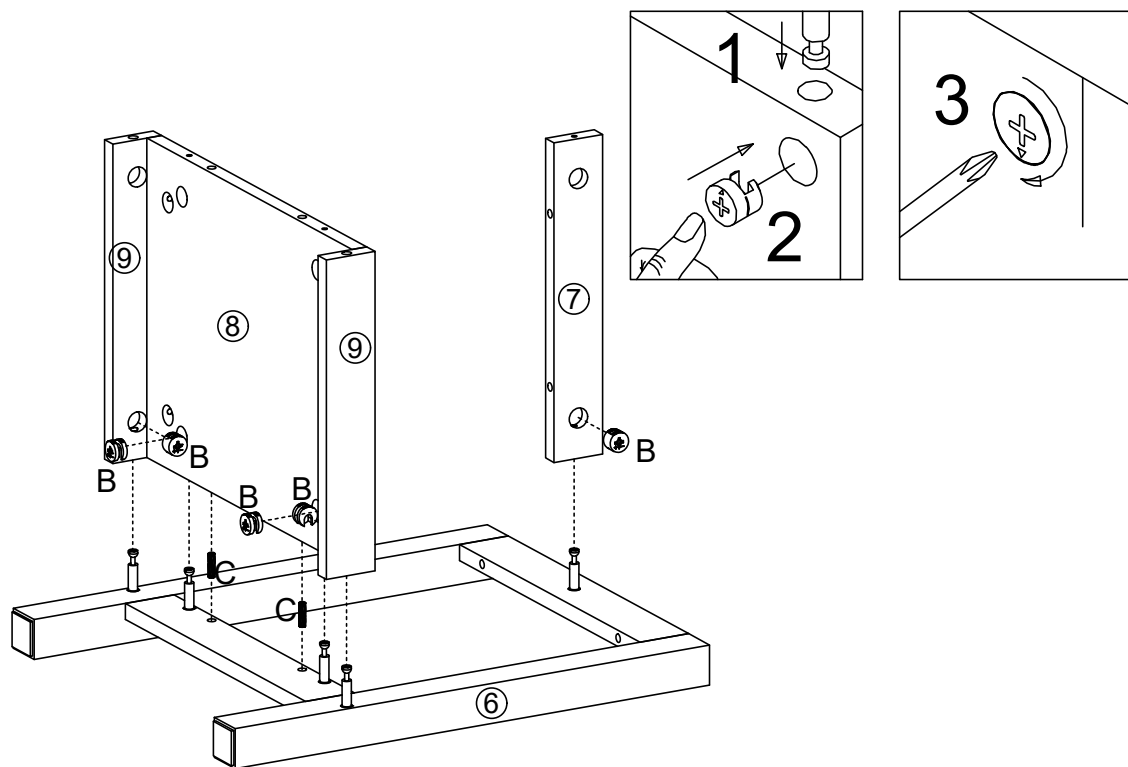


B	C
	
Ø15x9.5mm Cam Lock	Ø6x30mm Dowel
5pcs	2pcs

8. Attach leg to the frame.

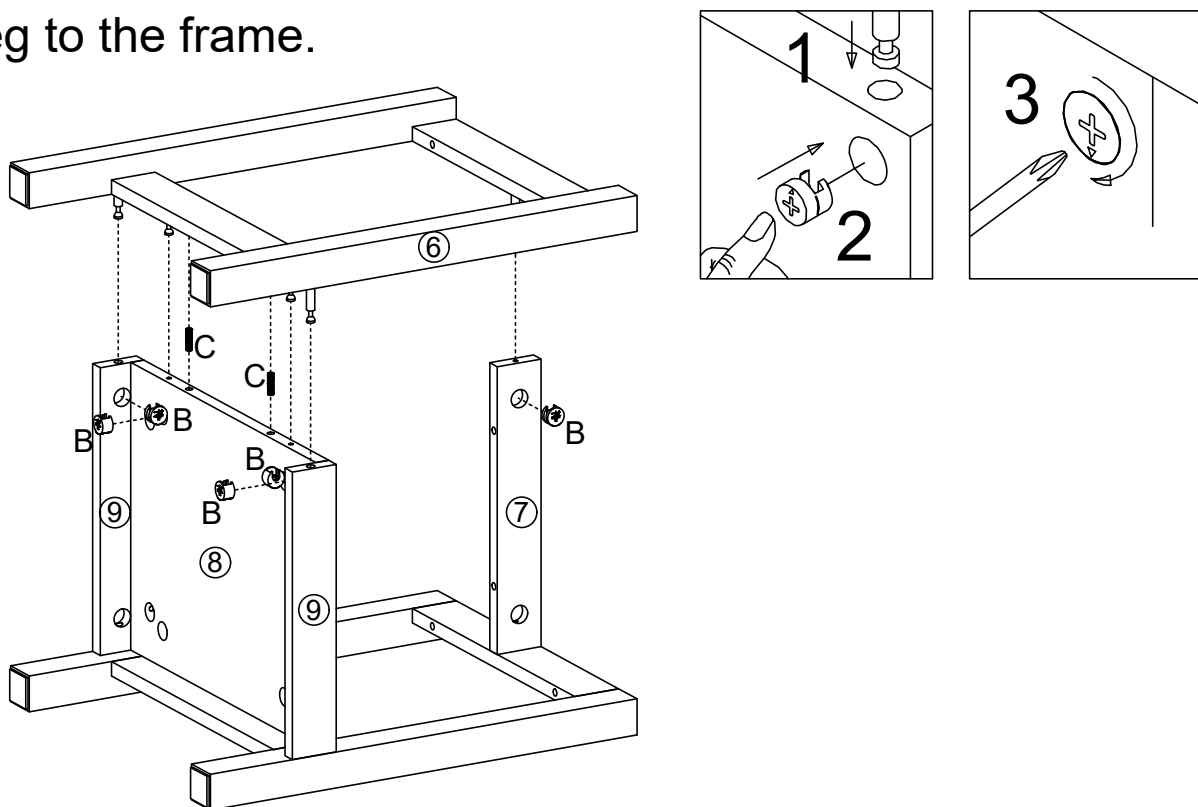


B	C
	
Ø15x9.5mm Cam Lock	Ø6x30mm Dowel
5pcs	2pcs

9.Attach leg to the bottom panel.

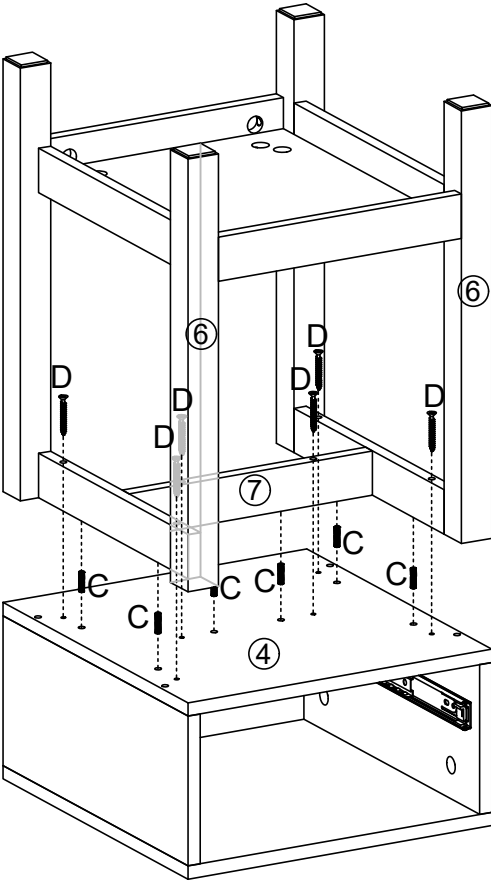

C	D
	
Ø6x30mm Dowel	Ø4*40mm Screw
6pcs	6pcs


10.Attach parts to the back panel.

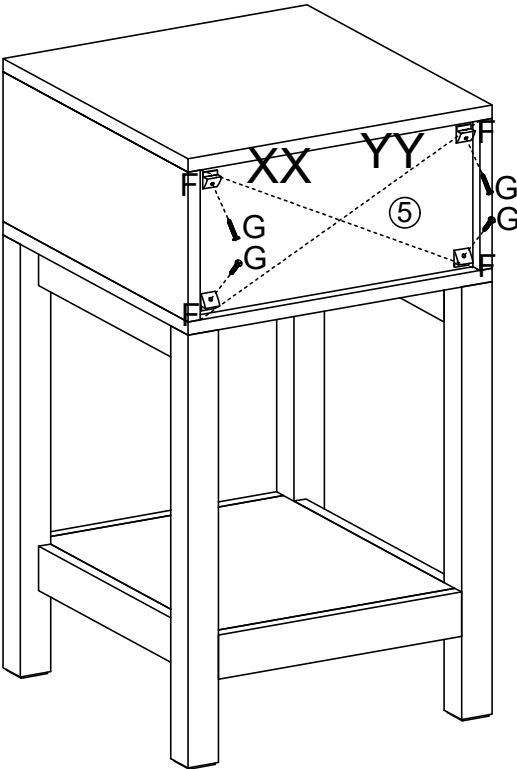


F	G
	
Back panel clip	M3*14mm Bolt
4pcs	4pcs




XX=YY

11.Assembe the drawer.

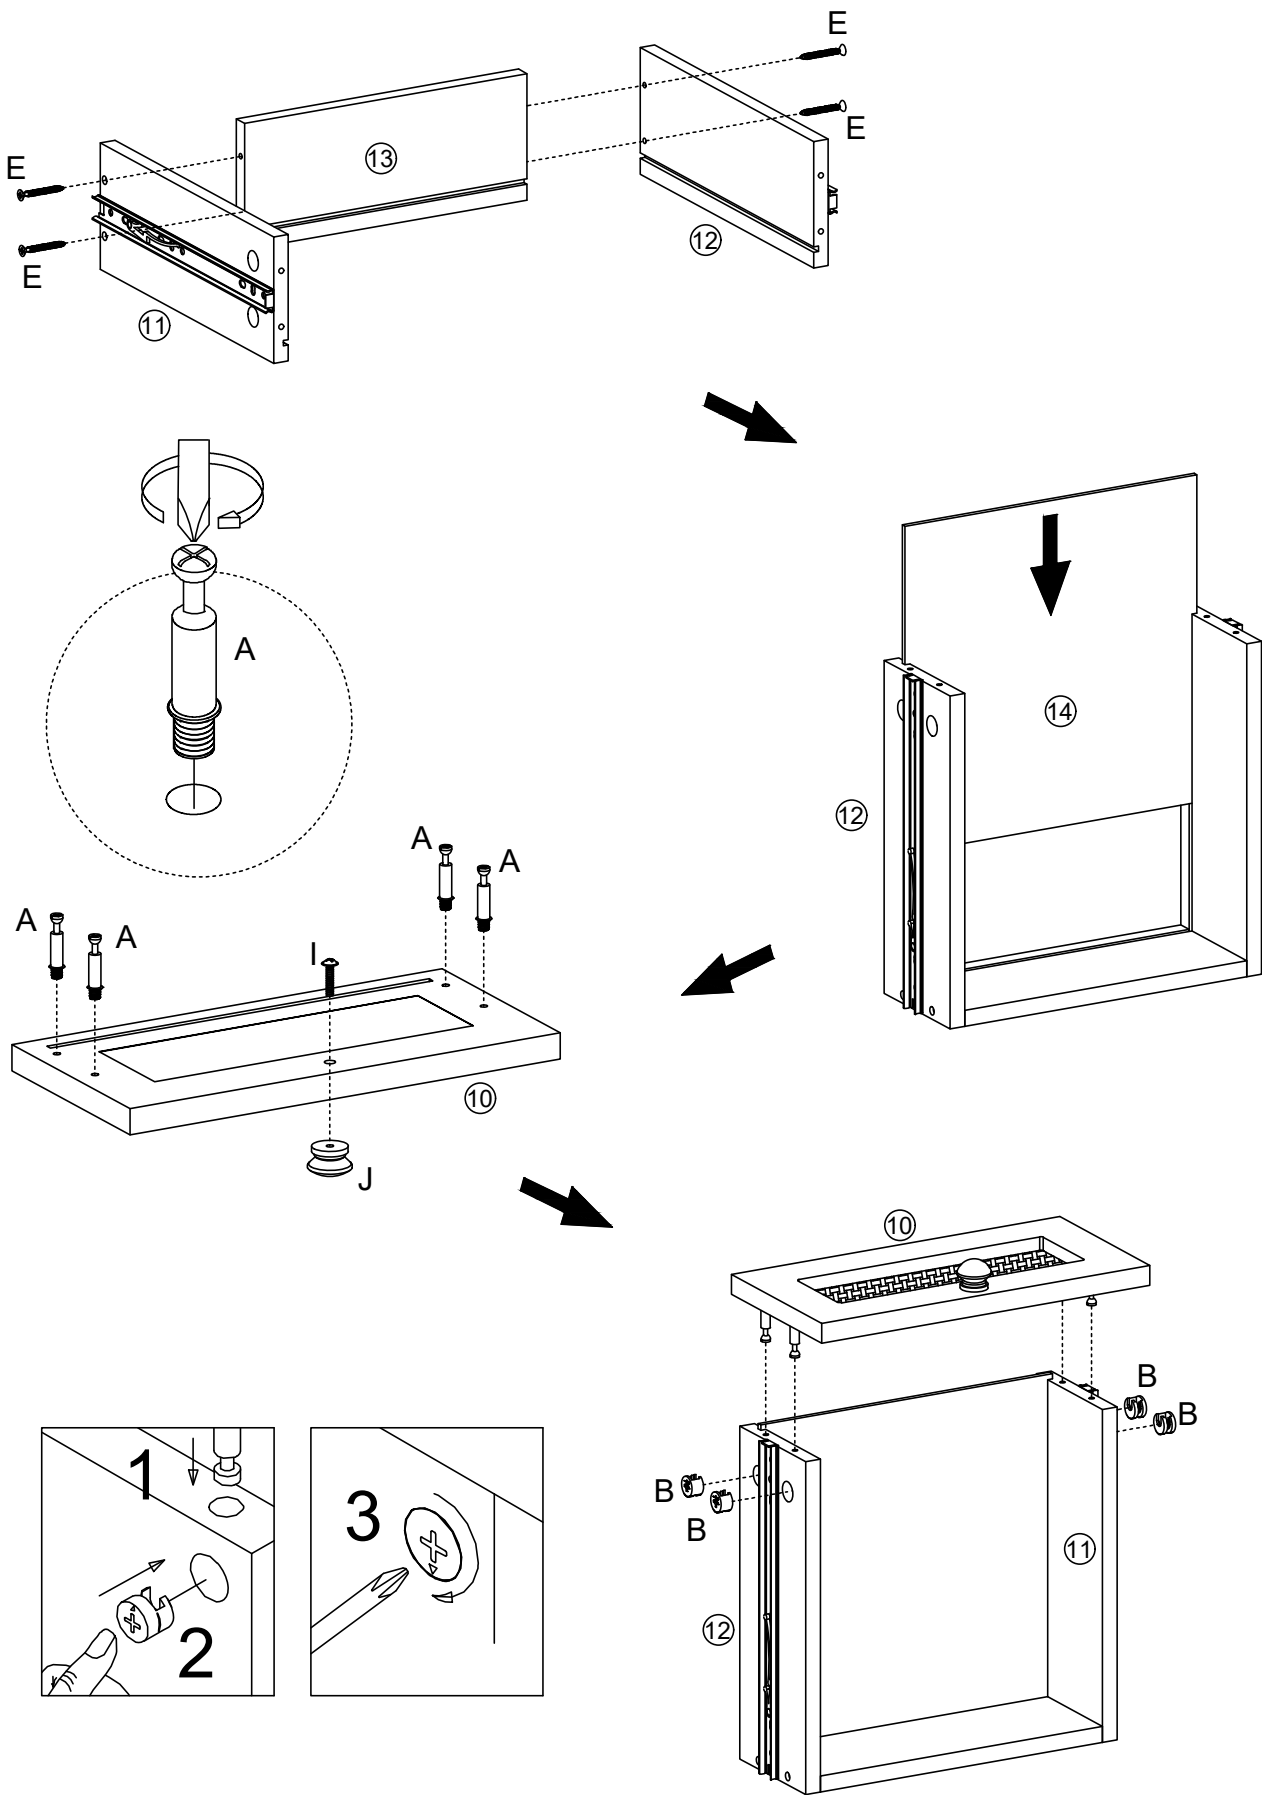


A	B	E	I	J
				
M6*35mm Bolt 4pcs	Ø15x9.5mm Cam Lock 4pcs	Ø4*35mm Screw 4pcs	M4*18mm Bolt 1pc	Handle 1pc

12. Assemble the drawers to the frame.

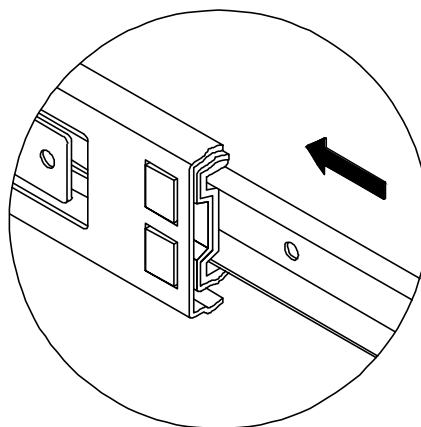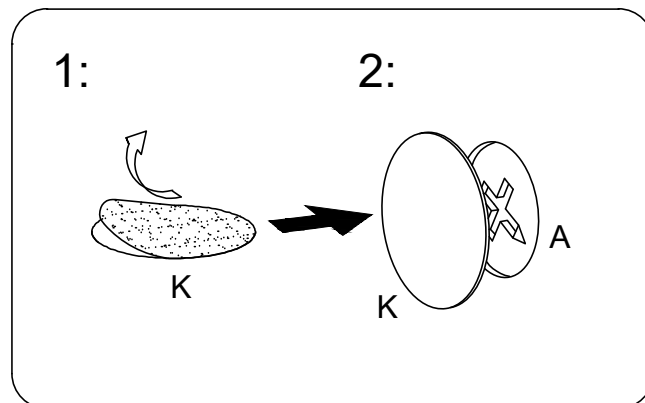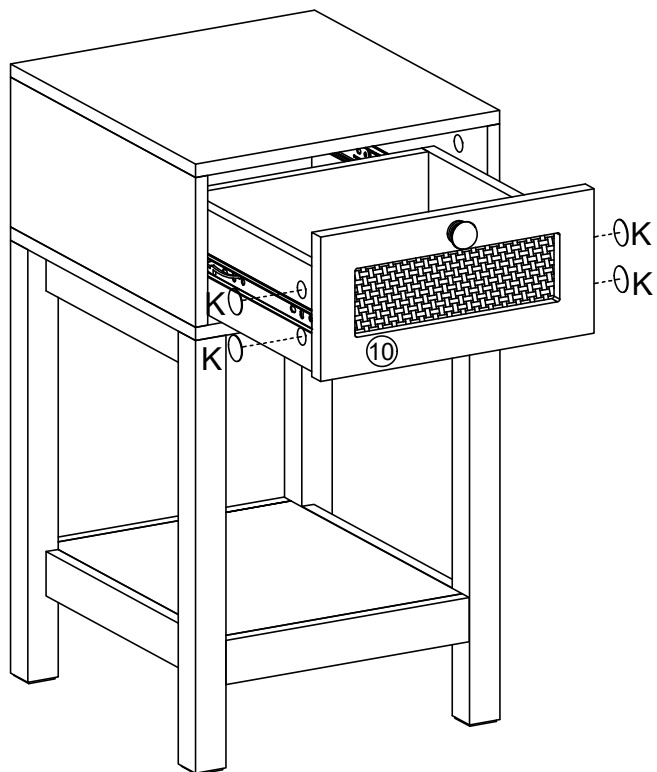

When installing the drawer into the cabinet, align the slide rails properly first, then push it gently — do not force it in.
Make sure to move the metal sheet to the outermost position.

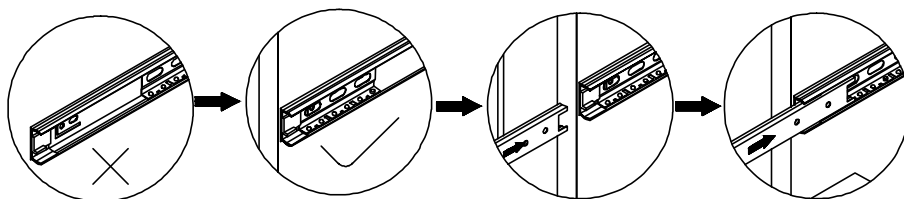

K

Cover
4pcs

How to Remove a Drawer:

1. Pull out the drawer until the plastic tabs on the guide rails are exposed.
2. Push the plastic tabs upward or downward. Pay attention that the tabs on the left and right guide rails move in opposite directions.
3. While pushing the tabs in position, pull the drawer out to separate the guide rails at the same time.

