

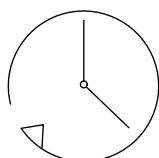


Dorset Metal Bed Frame


King

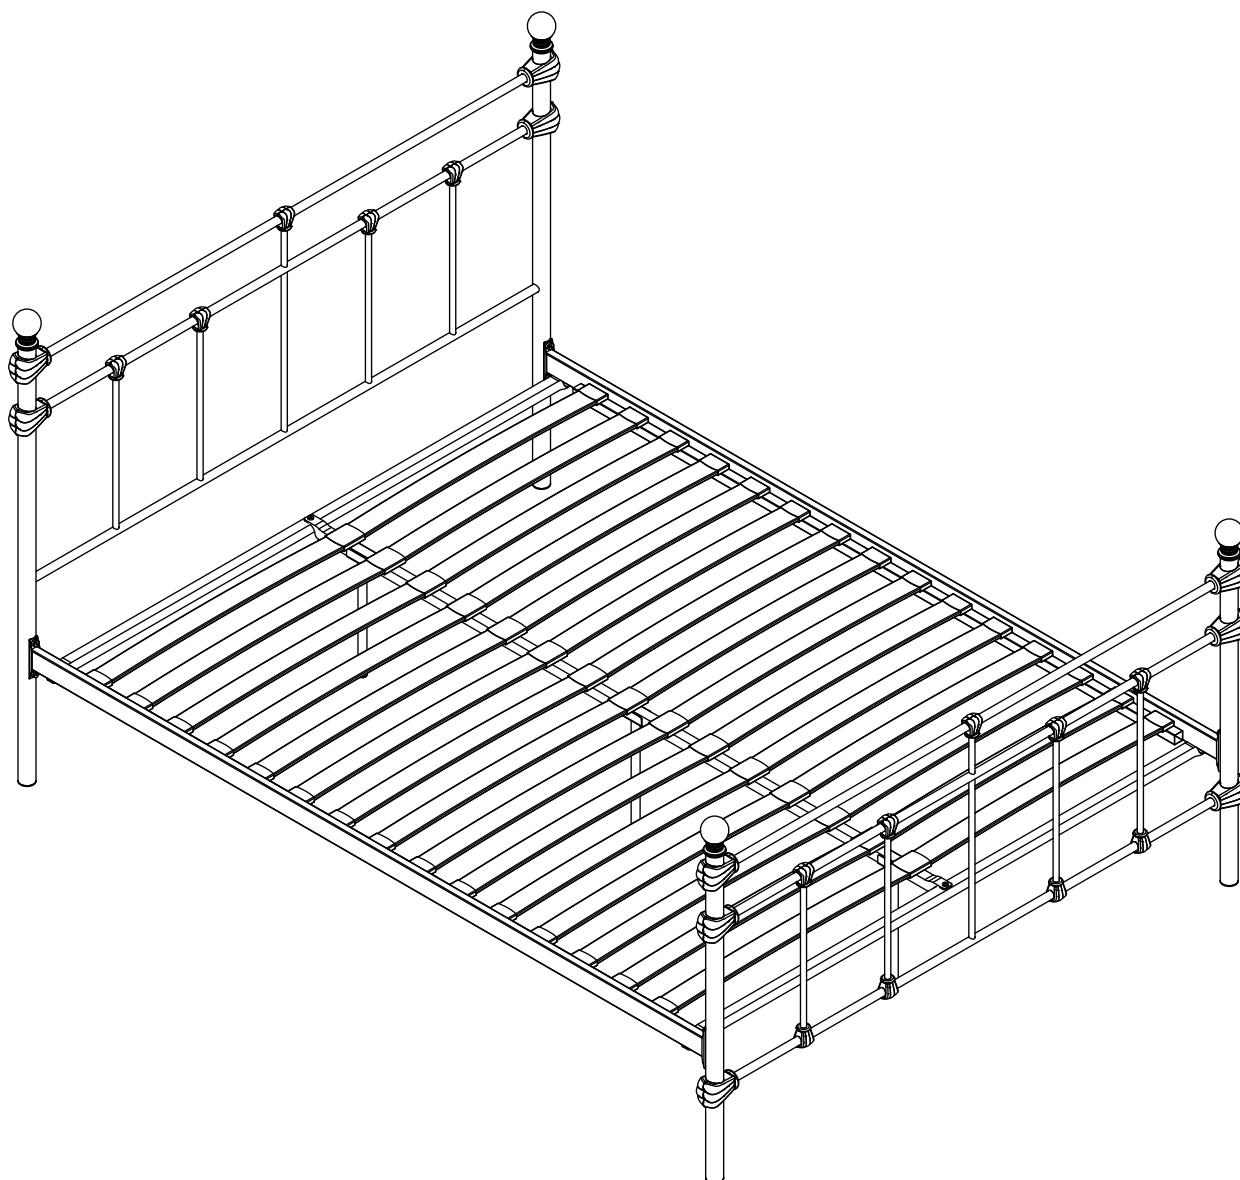

Up to 1 hour assembly time

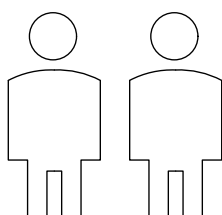

Two person assembly

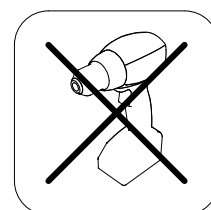

Electric screwdriver prohibited

Important

Assembly Tip

Before you begin, it's best to identify all of the parts and fittings to build your ottoman bed frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

Top Tip

We recommend that you build your new ottoman bed frame in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

Safety and Care

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this bed frame which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

Help and Support

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

Recycling


Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

Daily Maintenance

Clean with damp cloth or a low suction vacuum. Do not use abrasive chemicals.

Parts

Before you begin building your ottoman bed frame, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

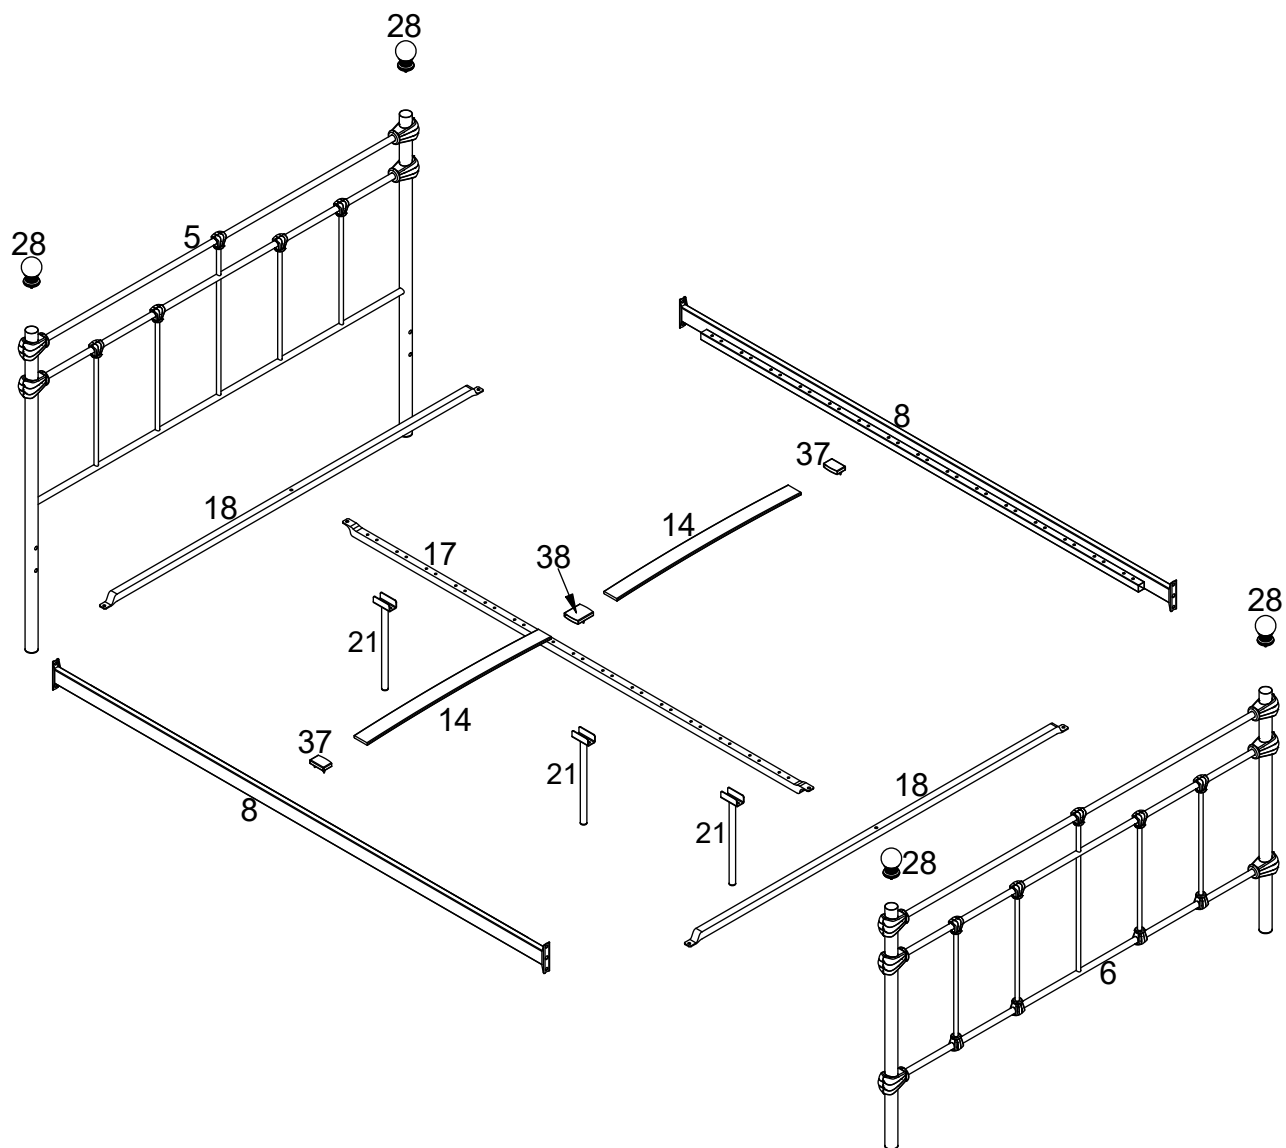









Parts Check List

No.	Parts List	Qty	Box No
5	Headboard	1pc	Box 1
6	Footboard	1pc	Box 1
8	Side Rail	2pcs	Box 2
14	Wooden Slat	30pcs	Box 1
17	Central Brace	1pc	Box 2
18	Brace	2pcs	Box 2


No.	Parts List	Qty	Box No
21	Leg	3pcs	Box 1
28	Ball	4pcs	Box 1
37	Side Slat Cap	30pcs+2pcs	Box 1
38	Centre Slat Cap	15pcs+1pc	Box 1




Fittings (In Box 1)

Please check you have all the fittings listed below with your product .

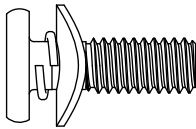		
A M6 38mm Bolt 2pcs+1pc extra	B M8 22mm Bolt 3 in 1 8pcs+1pc extra	C M6 22mm Bolt 4pcs+1pc extra
		
D M6 22mm Bolt 3 in 1 6pcs+1pc extra	E M6 Nut 2pcs+1pc extra	F 4mm Allen key 1pc
		
G 4mm Ratchet Wrench 1pc	H Wrench 1pc	

Step 1 Attach Brace to the Side Rail .




C  4pcs

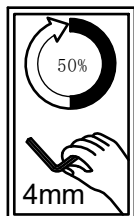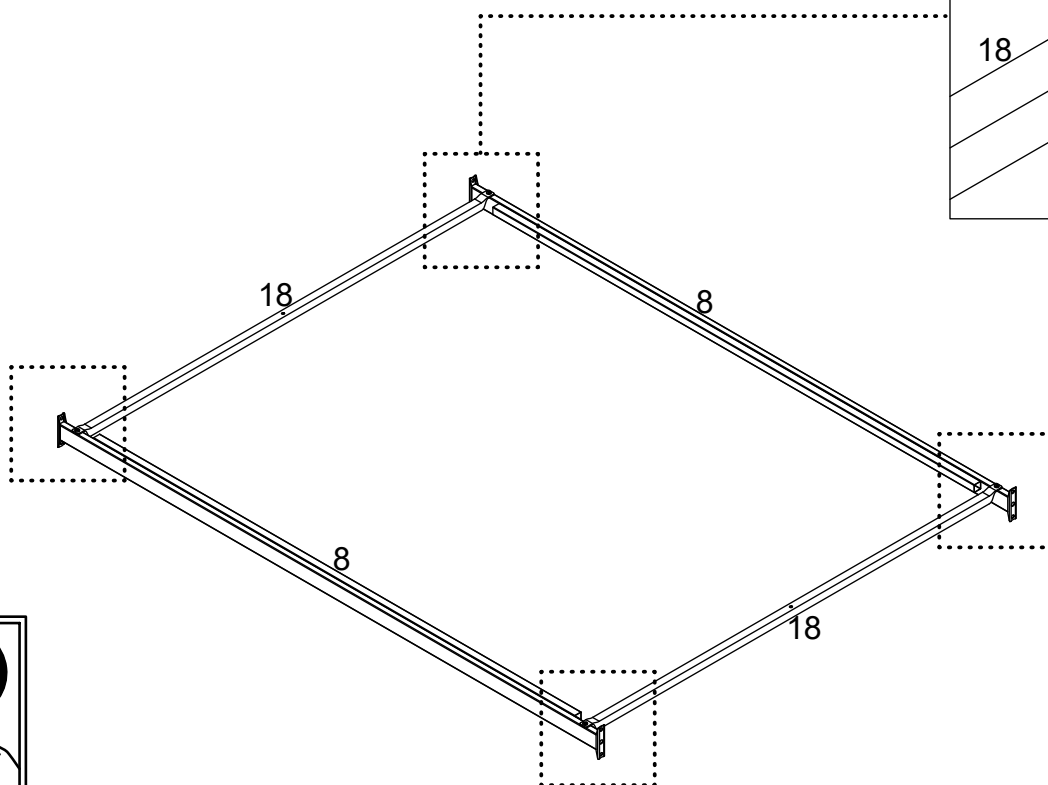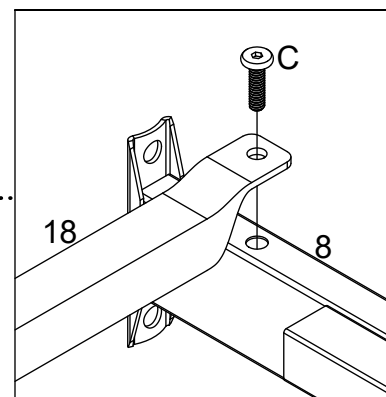


Step 2 Attach the Central Brace to the Brace.




A  2pcs

E  2pcs

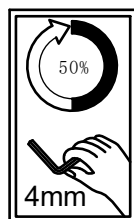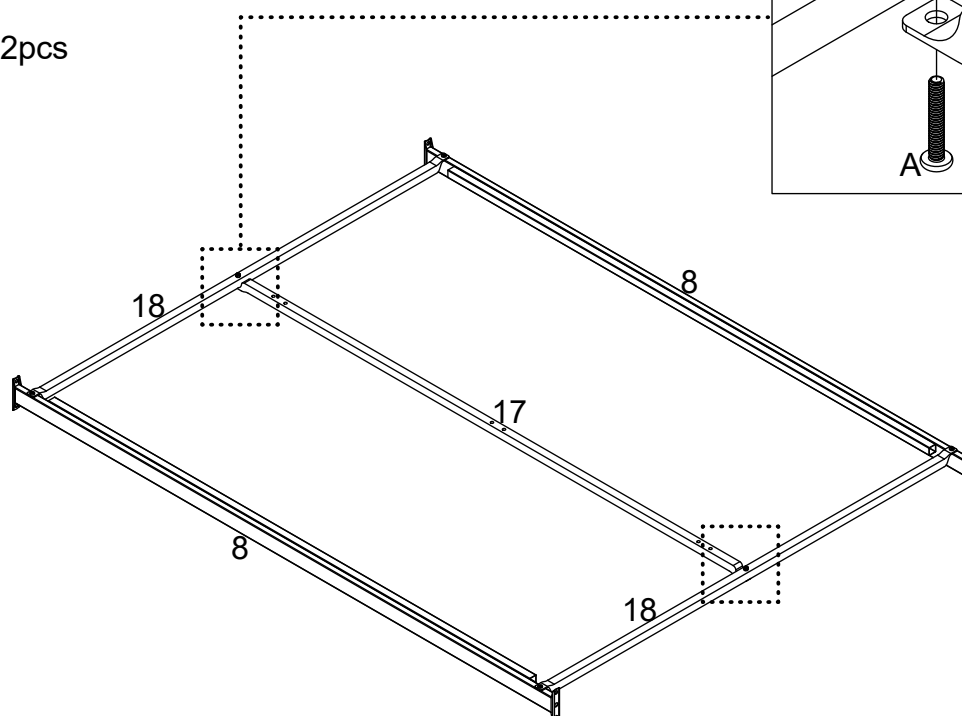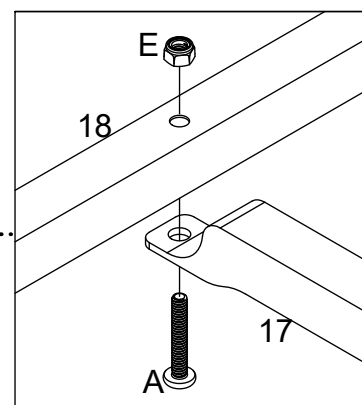




Step 3 Attach the Leg to the Central Brace.

D  6pcs

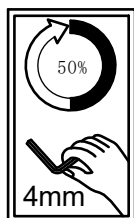
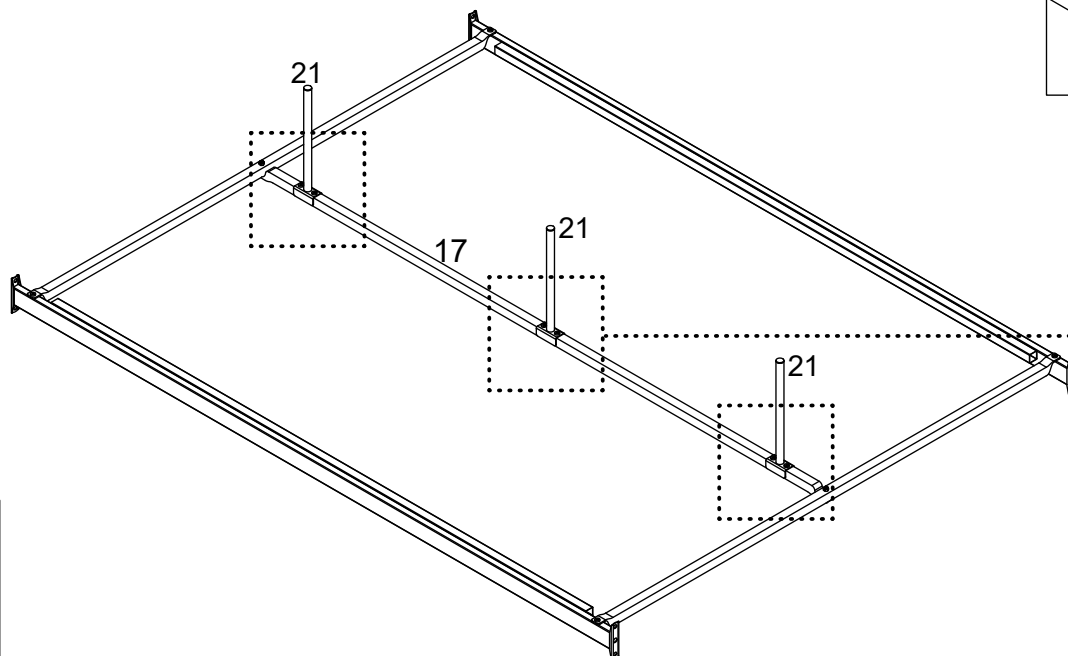
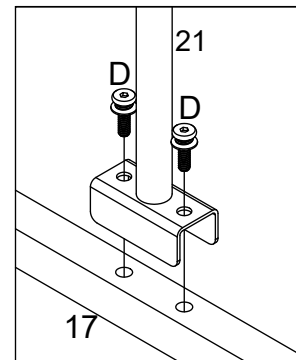


Step 4 Attach Side Rail to the Headboard & Footboard.


B  8pcs

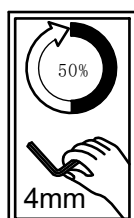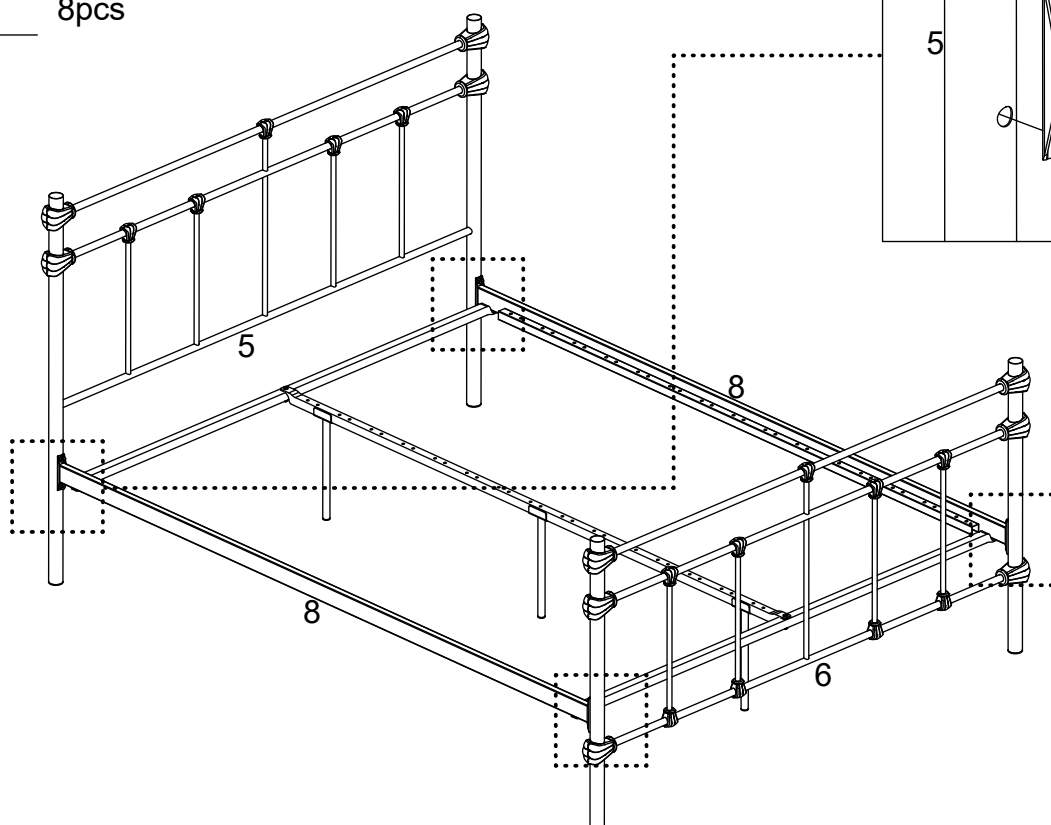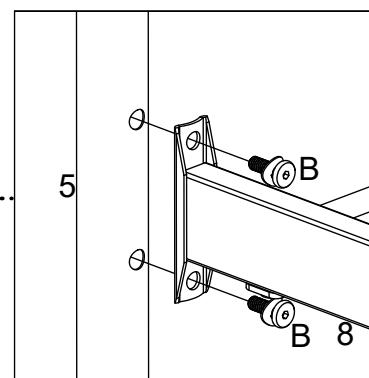

Step 5 Attach the Wooden Slat to the Metal Frame.

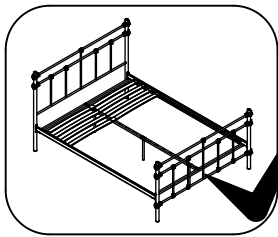
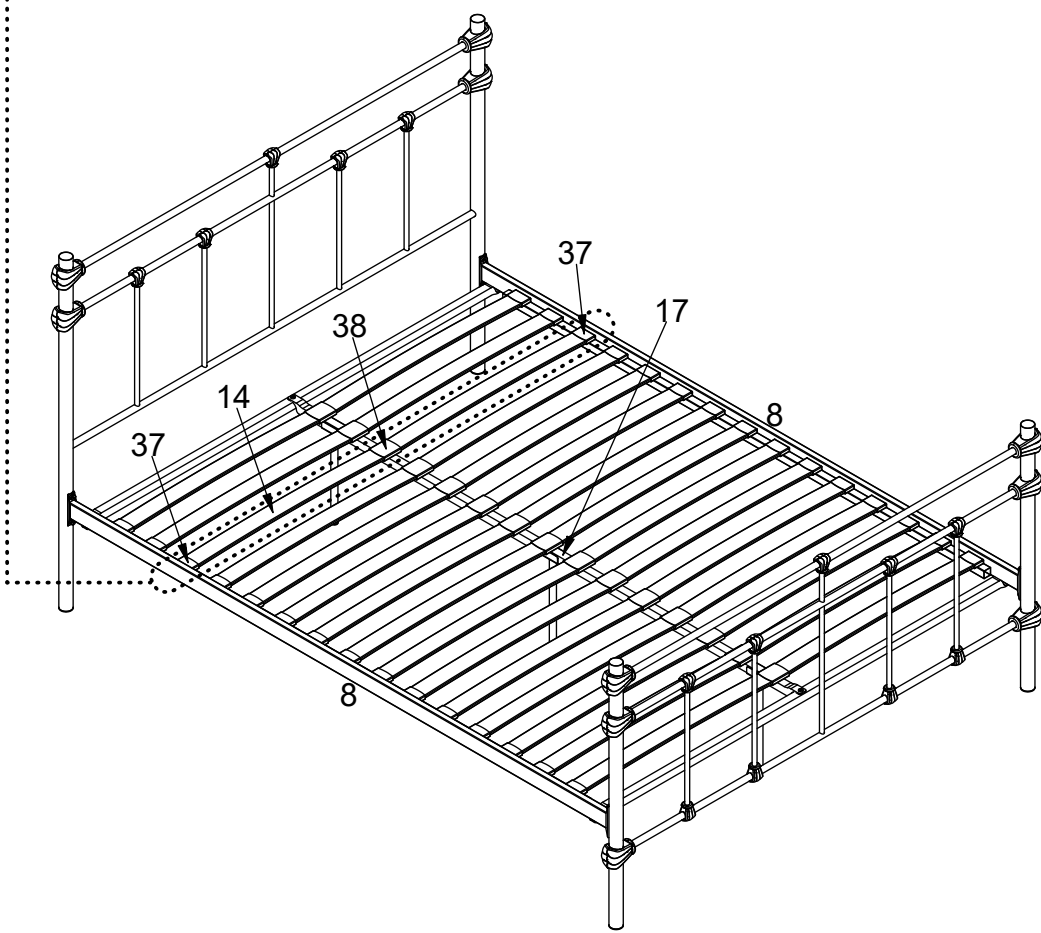
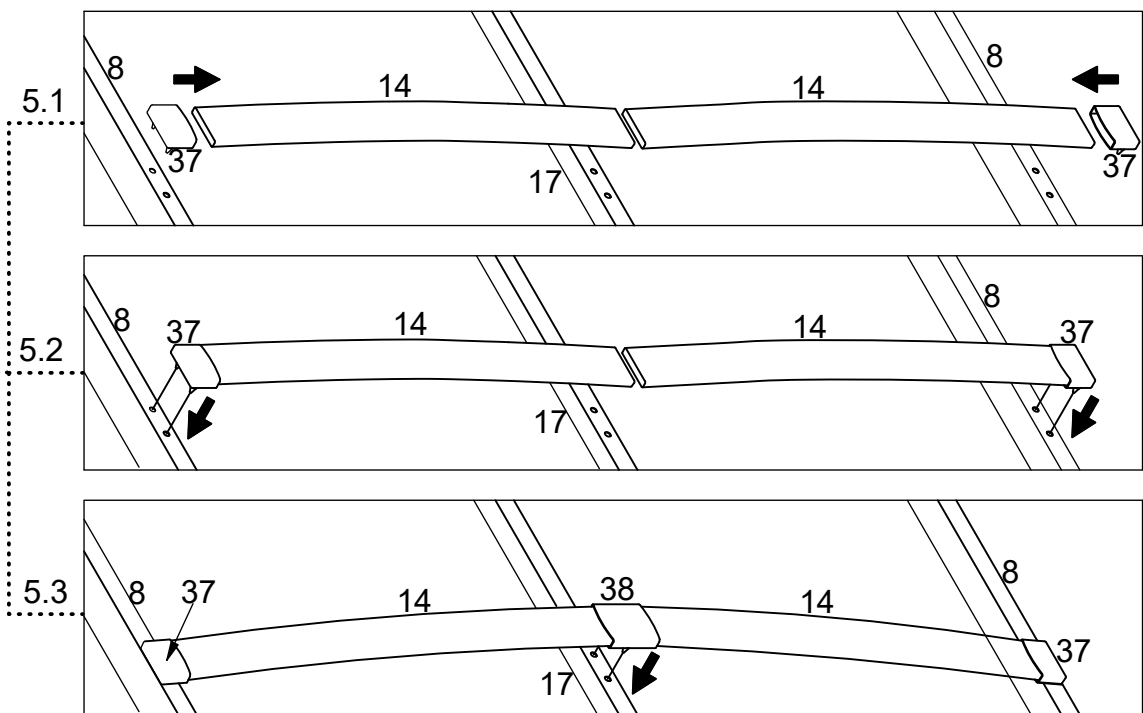


SLAT WARNING

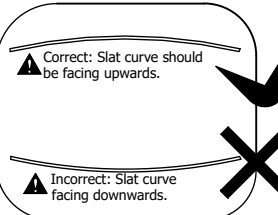


Step 6

Attach the Balls to the Headboard & Footboard .

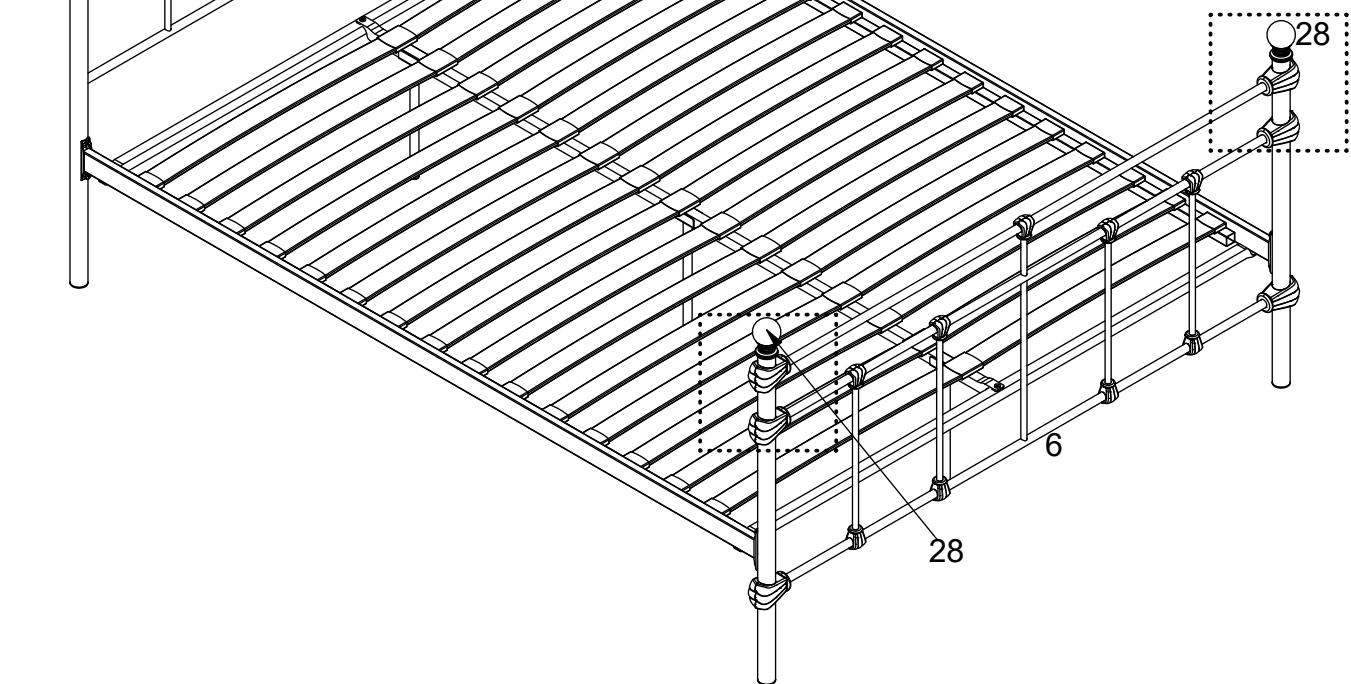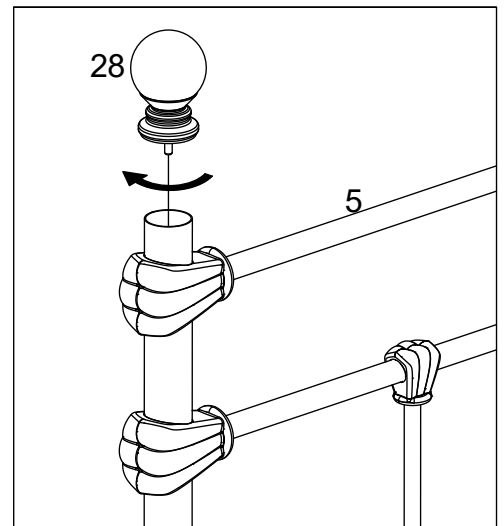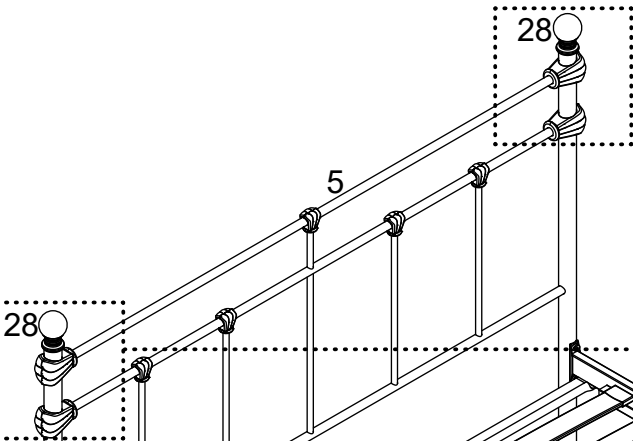

Interior legs intentionally do not touch the ground. This will provide additional support and help protect your bed from damage.

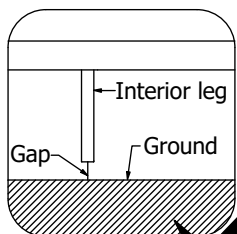

Step 7

Assembly is complete.
Fully tighten all the bolts to finish the assembly.

