
# DUSK.COM LIVING I BEDROOM I DINING

Range Name: EVIE


Box dimensions: 161x58x19cm

## **Evie Sideboard**

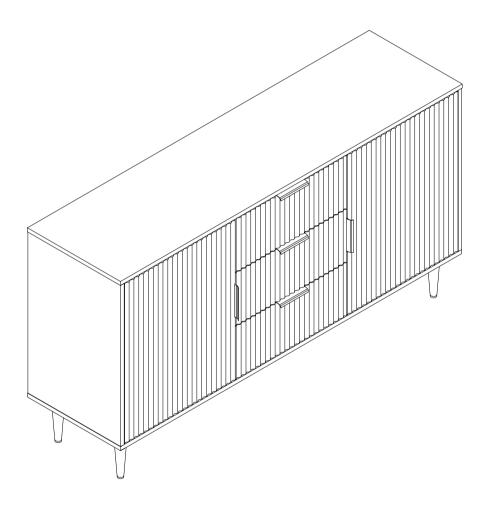



Up to 30 minutes assembly time



Two person assembly

This product is intended for domestic use only,not for commercial purposes.

#### **IMPORTANT**

#### **ASSEMBLY TIP**

Before you begin, it's best to identify all of the parts and fittings to build your Evie Sideboard frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

#### TOP TIP

We recommend that you assemble the Evie Sideboard in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

#### SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

#### HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

#### **RECYCLING**

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

#### CARE AND MAINTENANCE:

- 1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
- 2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
- 3.Do not scrub or rub the surface when cleaning.
- 4. Do not drag the Evie Sideboard when moving, lift it off the floor instead.
- 5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
- 6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
- 7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
- 8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
- 9. Avoid sharp items such as a screwdriver or any pointy tools.
- 10. Dispose of all packaging carefully and responsibly recycle where possible.

#### Parts list

Before you begin building your Evie Sideboard, please take a moment to read through the instructions and make surethat you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity
1	Left Side Panel	1pc
2	Middle Panel	1pc
3	Middle Panel	1pc
4	Right Side Panel	1pc
5	Тор	1pc
6	Leg	4pcs
7	Back Panel	2pcs
8	Back Panel	1pc
9	Centre Support	3pcs
10	Centre Leg	1pc

Part Number	Part Description	Quantity
11	Bottom Panel	1pc
12	Door Panel	2pcs
13	Drawer Front	3pcs
14	Drawer Left Side	3pcs
15	Drawer Right Side	3pcs
16	Drawer Back Side	3pcs
17	Drawer Bottom	3pcs


### **Fittings**

Cover

2pcs


Cover


12pcs+1pc extra

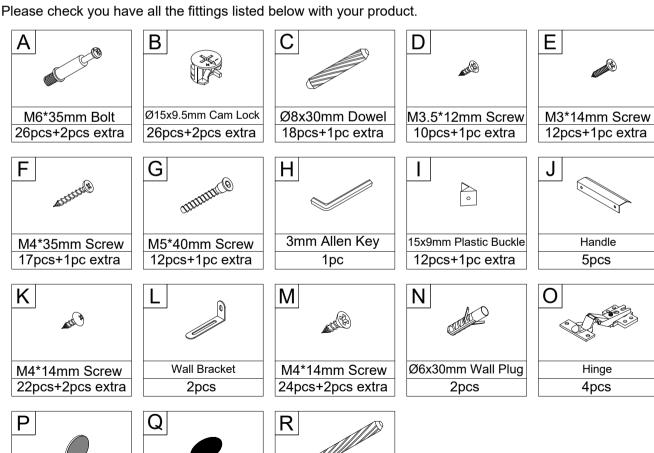


Ø8x50mm Dowel

2pcs

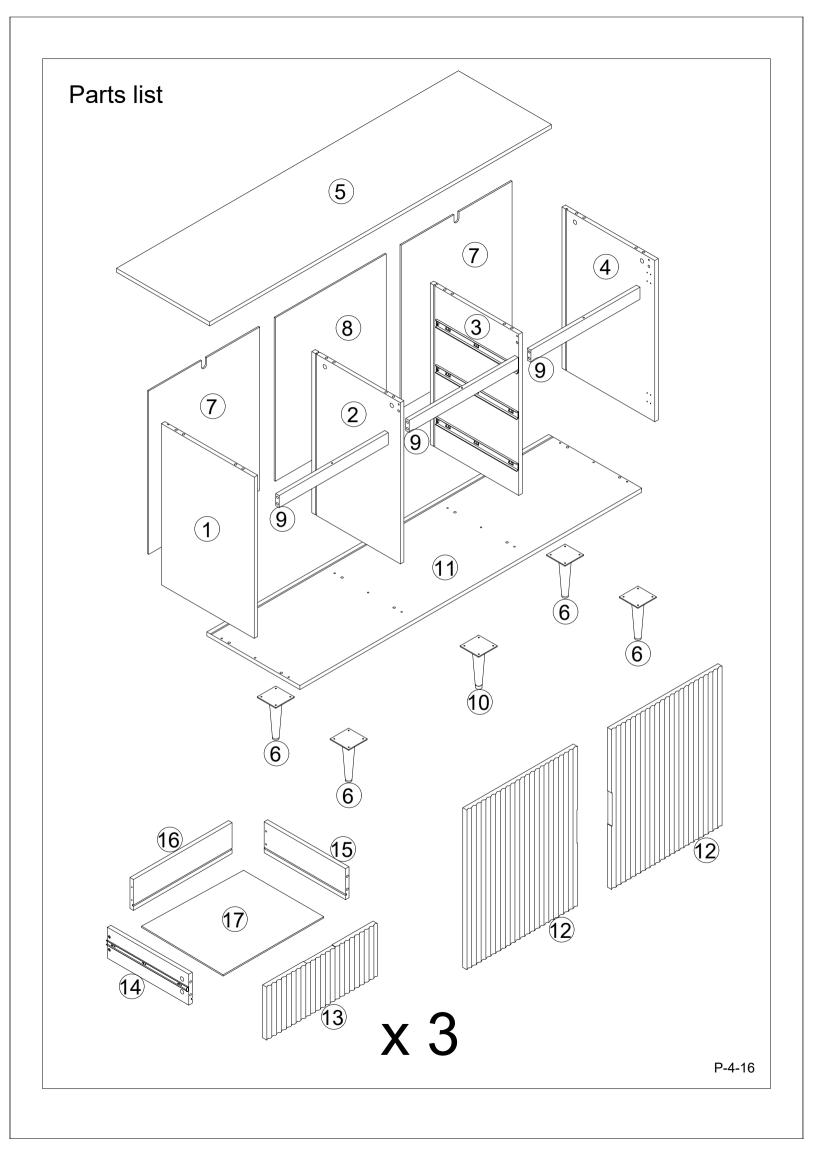


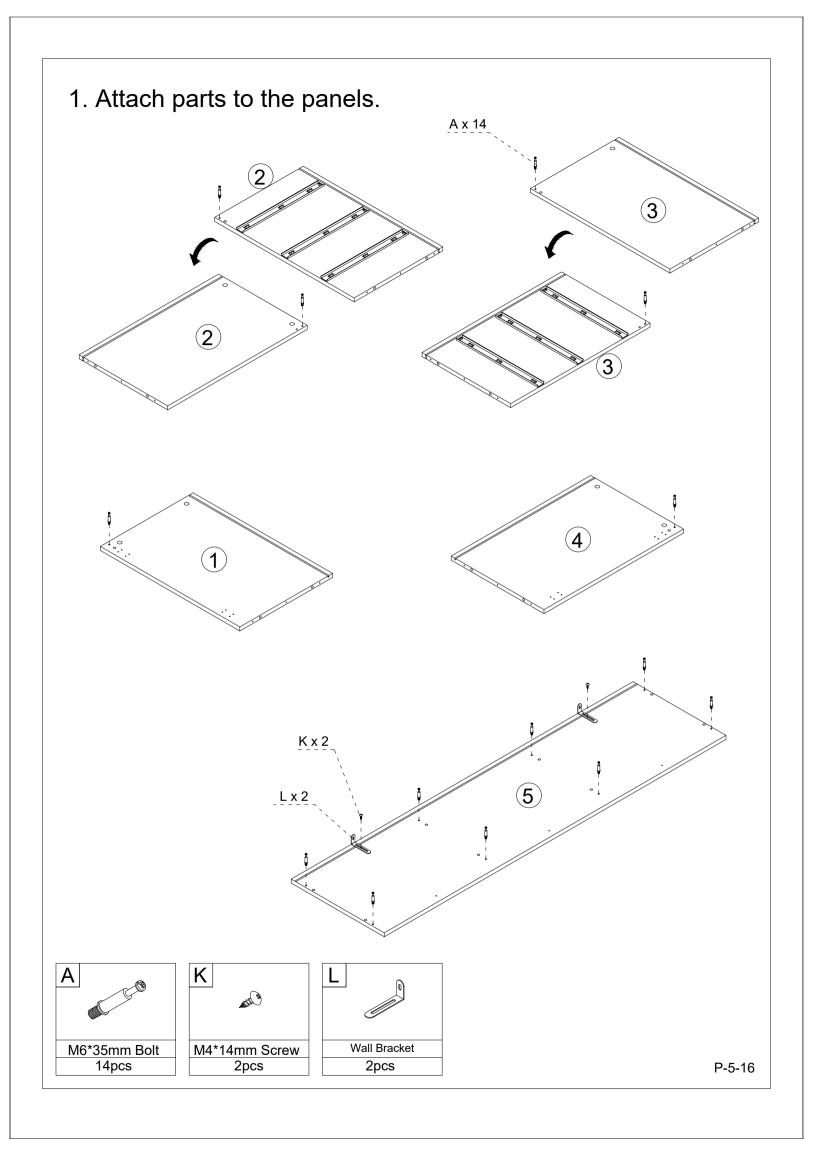



## 2. Attach the centre support to middle panels.

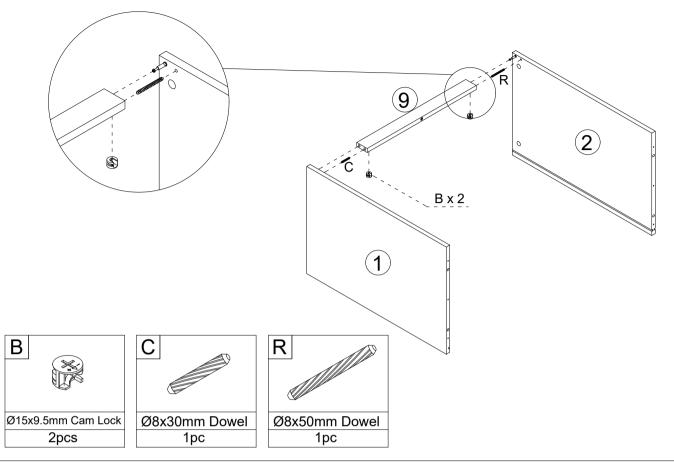

## 3. Attach the centre support to the right side panel.

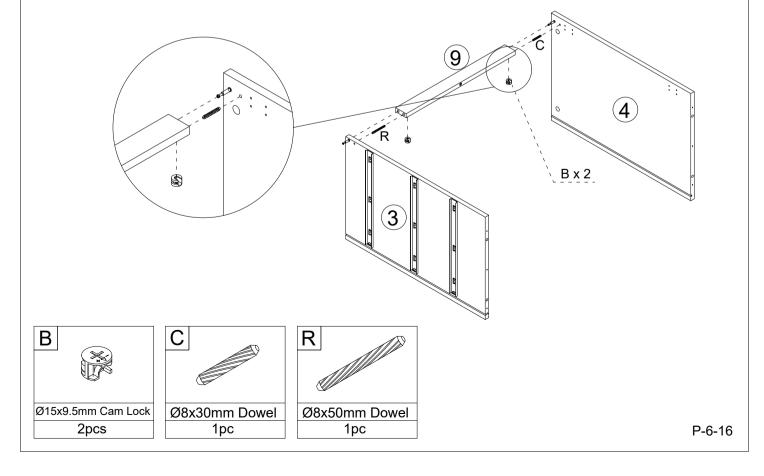


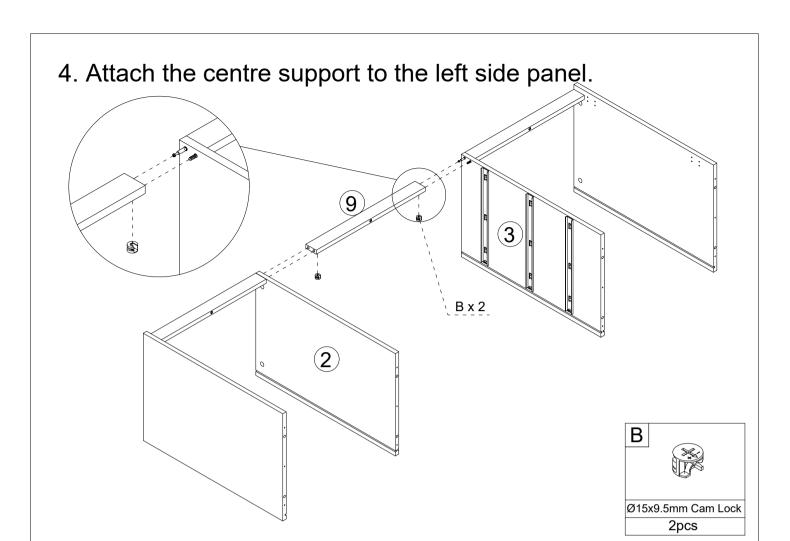

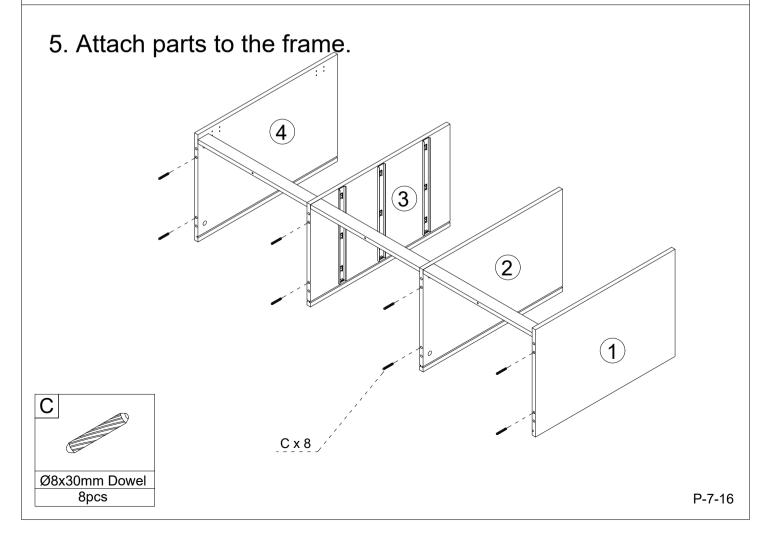


# 6. Attach the frame to the Top. B x 8 Fx3 1 В Ø15x9.5mm Cam Lock M4\*35mm Screw 8pcs 3pcs P-8-16


## 7. Assemble the back panels.

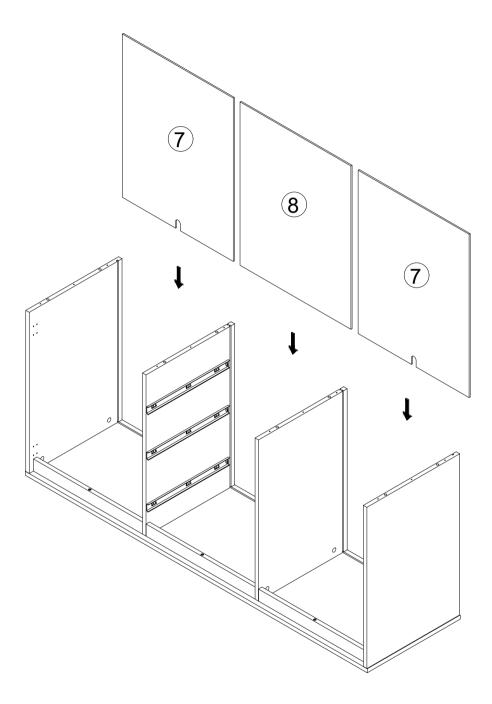


# 8. Attach the bottom panel to the frame. Н (11) G x 12 C x 8 С G Н 3mm Allen Key Ø8x30mm Dowel M5\*40mm Screw 8pcs 12pcs 1рс P-10-16


## 9. Attach the legs to the frame.

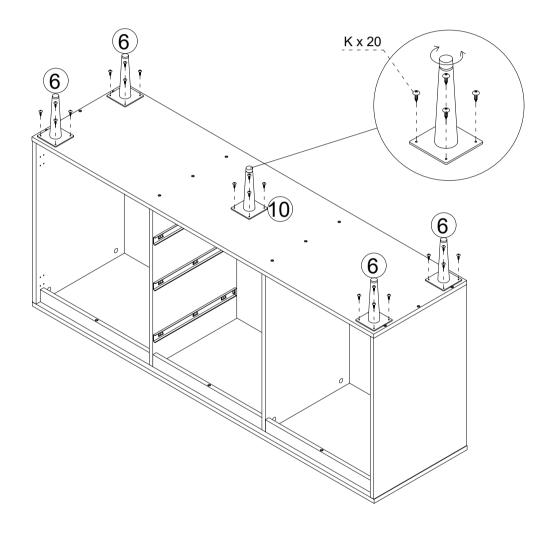


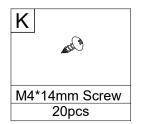

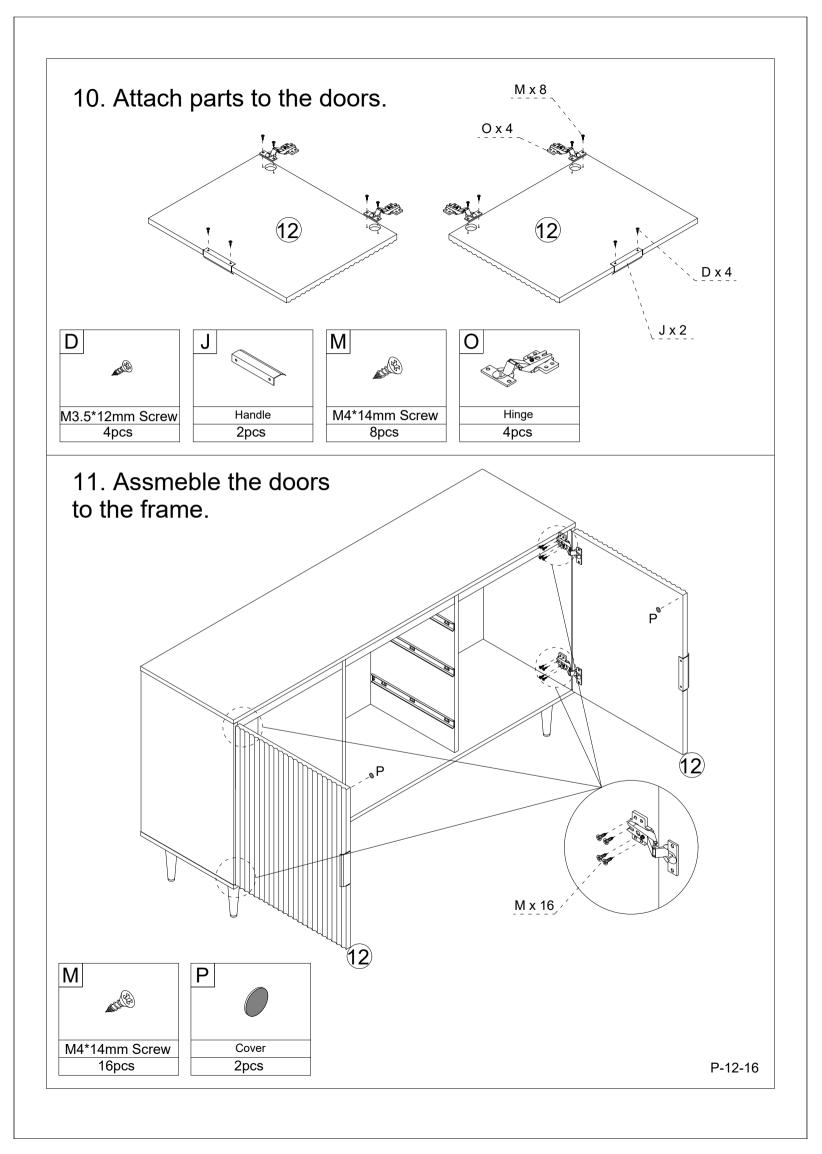



## 12. Assemble the drawers.

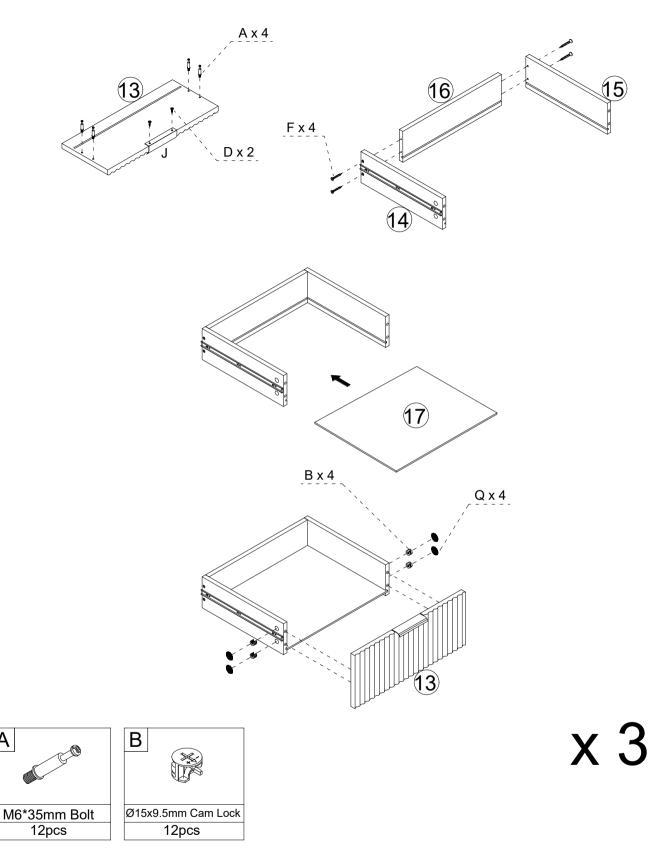




Α

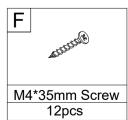







P-13-16

## 13. Assemble the drawers to the sideboard.

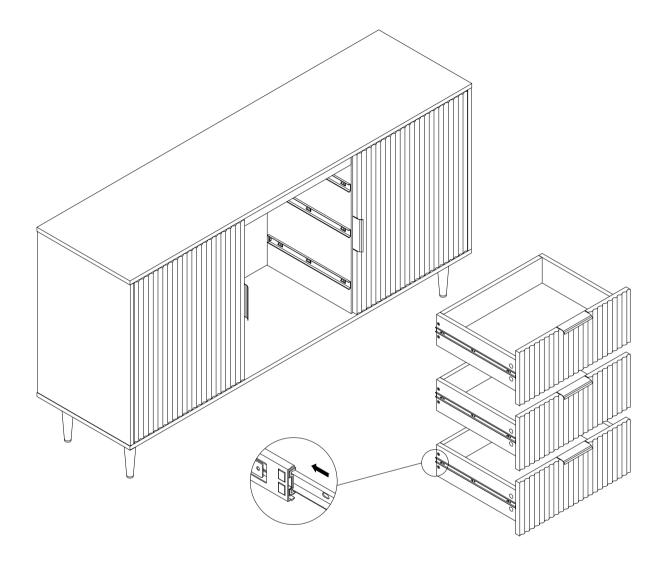

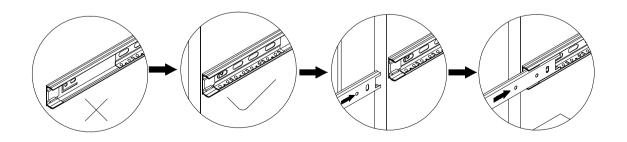

14. Manually adjust the frame slightly to ensure the drawers are in the correct position, even and parallel before attaching the plastic buckles.

