

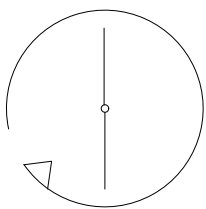


Hattie 3 Door Sideboard

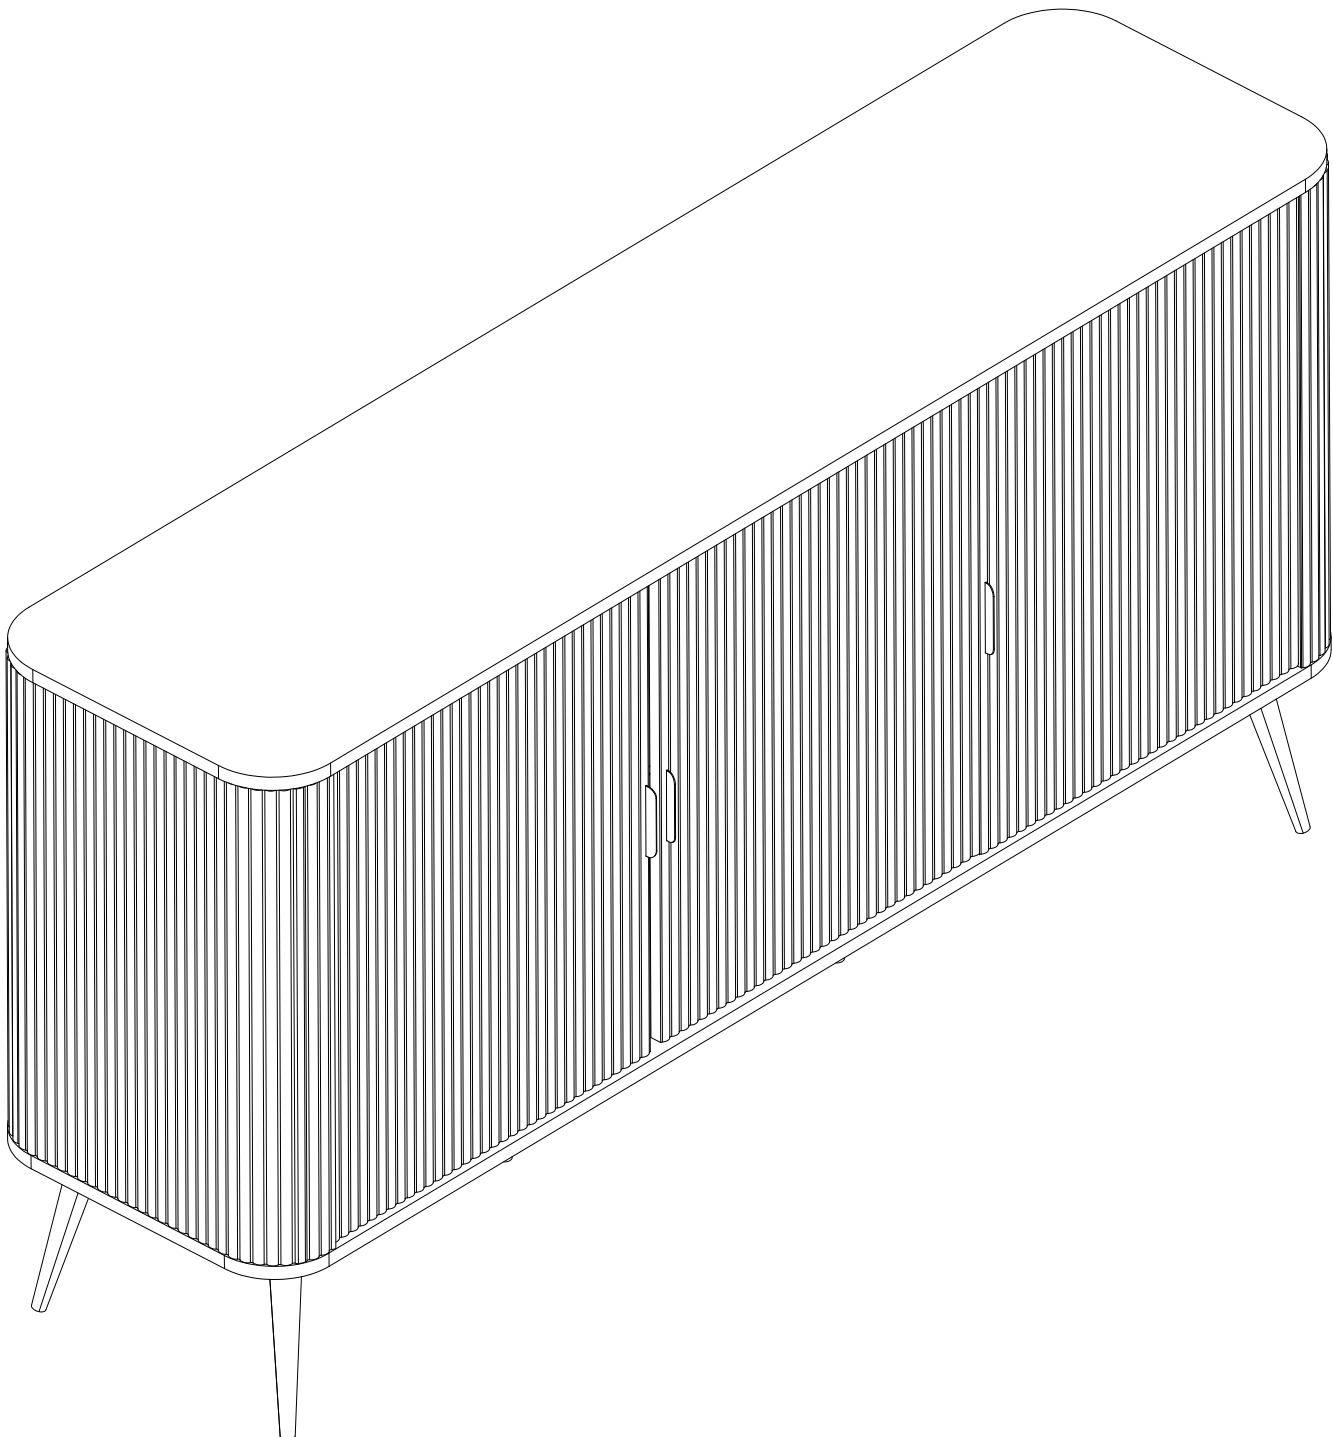

Up to 60 minutes
assembly time

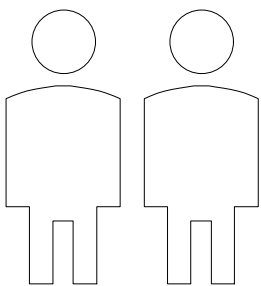

Two person
assembly

This product is intended for domestic use only,not for commercial purposes.

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Willow Wardrobe frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Willow Wardrobe in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Willow Wardrobe when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

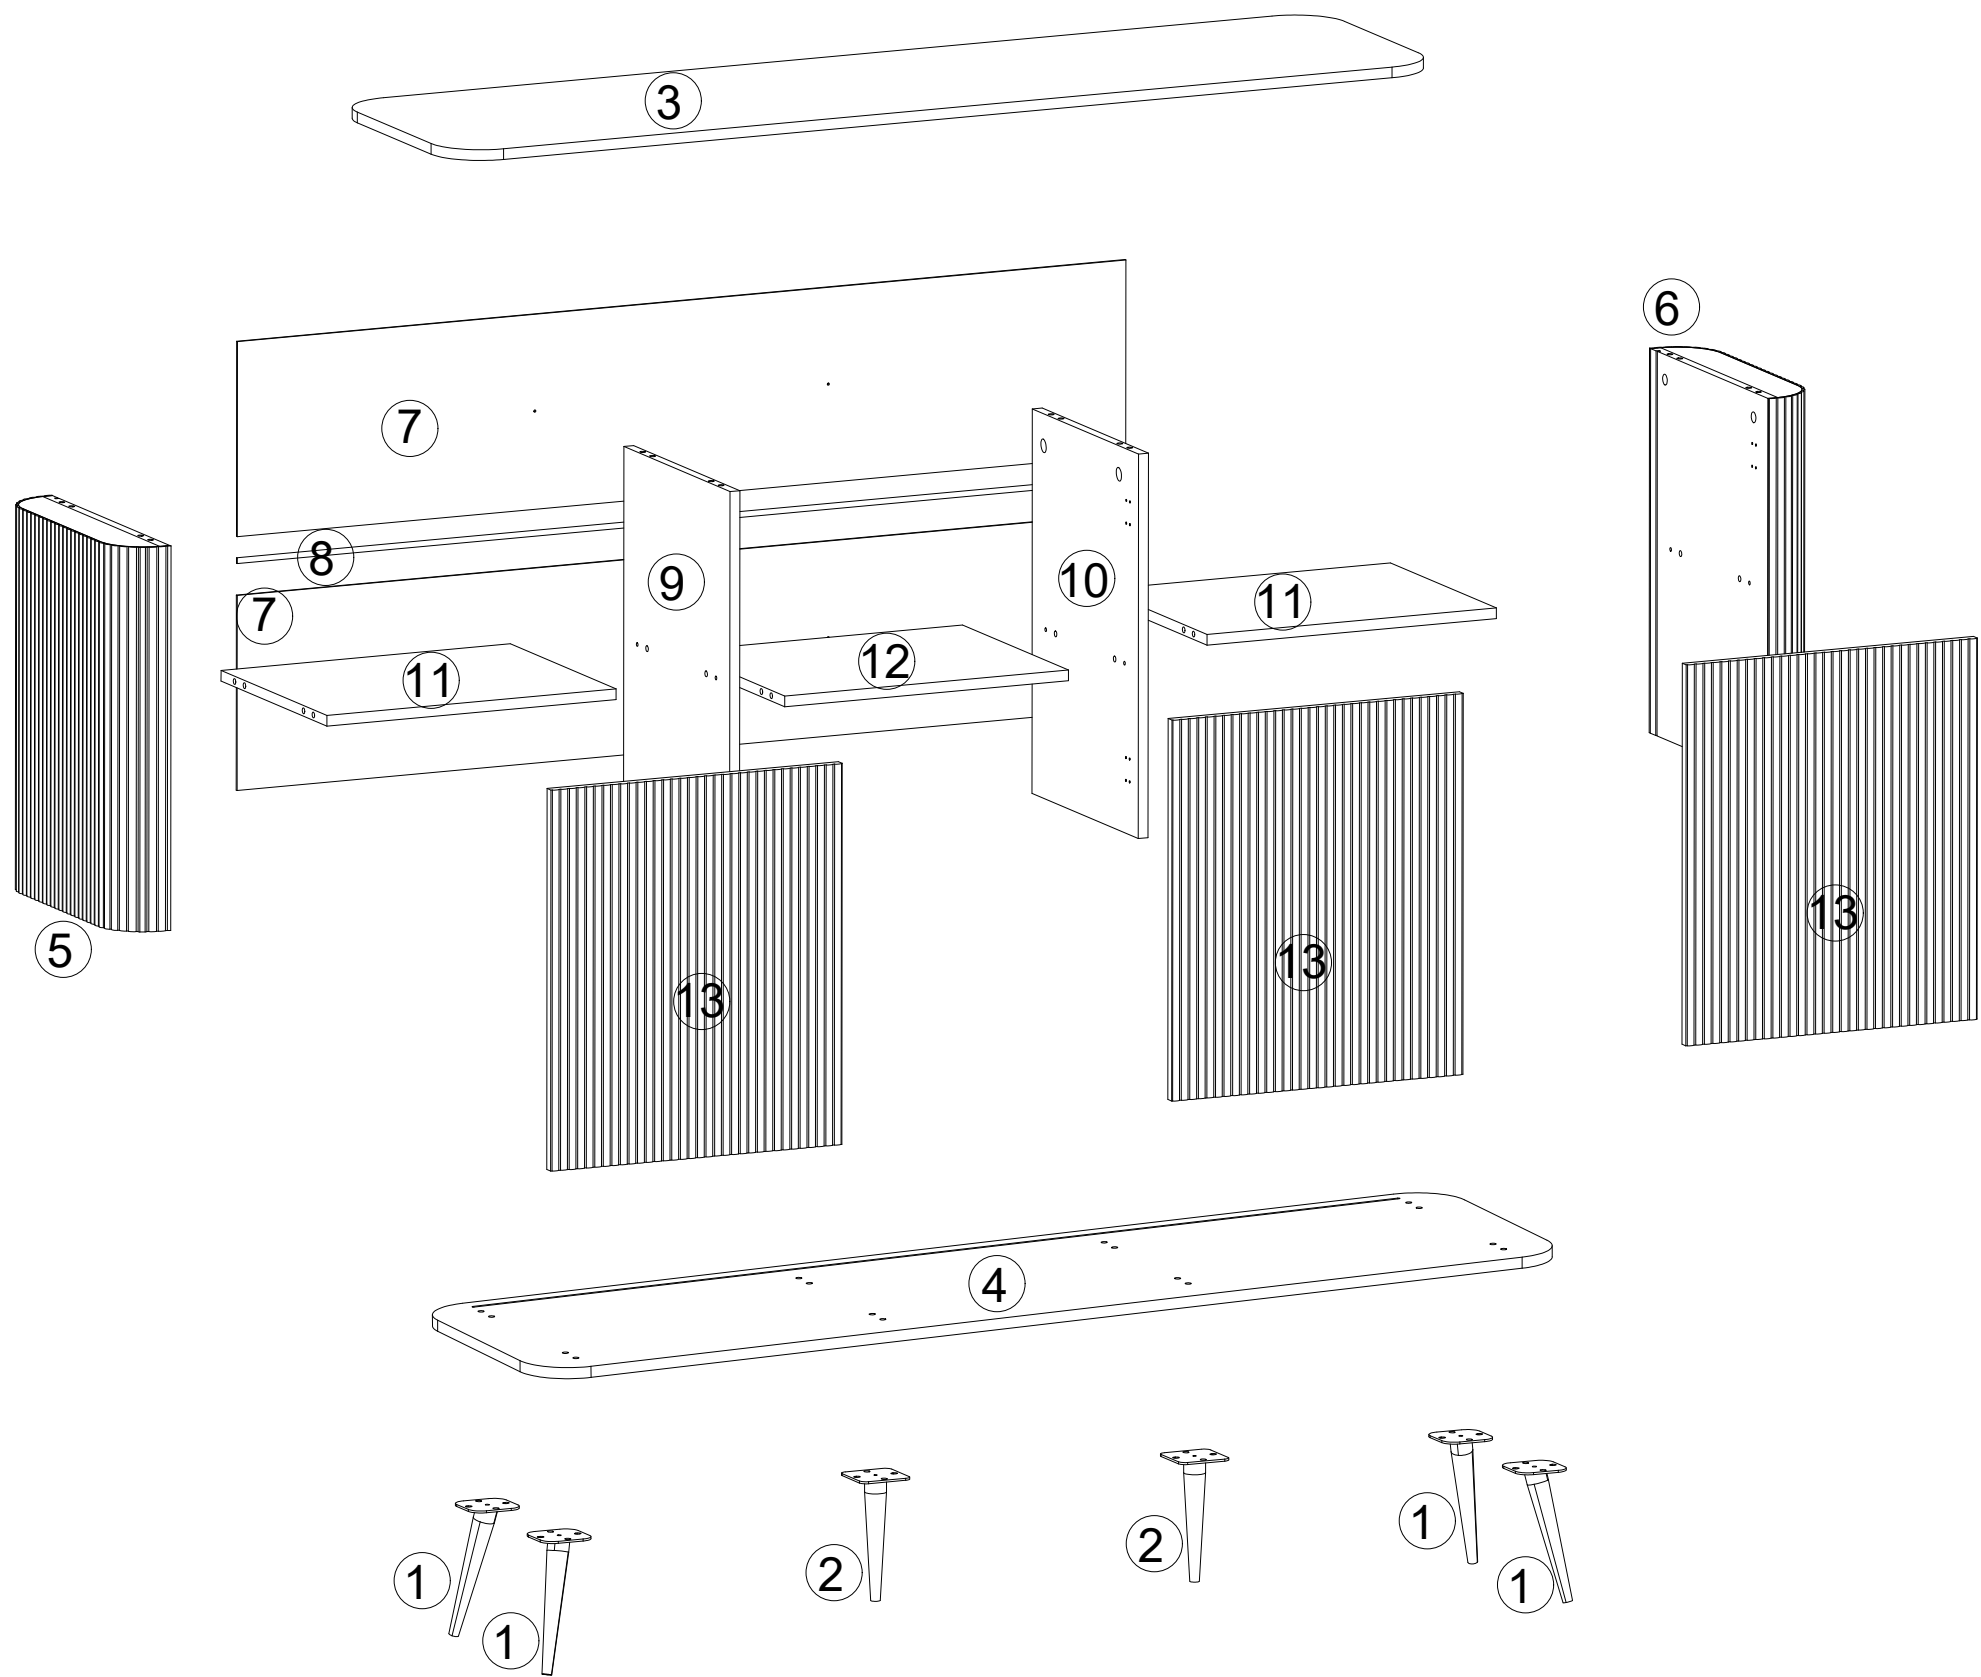

Parts list





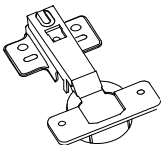
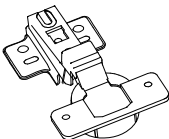
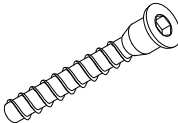











Before you begin building your Hattie 3 Door Sideboard, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity
①	Leg	4pcs
②	Support Leg	2pcs
③	Top Panel	1pc
④	Bottom Panel	1pc
⑤	Left Side Panel	1pc
⑥	Right Side Panel	1pc
⑦	Back Panel	2pcs

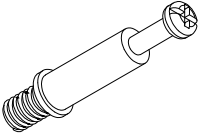

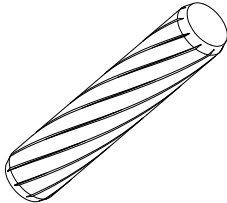
Part Number	Part Description	Quantity
⑧	Plastic Slot	1pc
⑨	Left Middle Panel	1pc
⑩	Right Middle Panel	1pc
⑪	Side Shelf	2pcs
⑫	Middle Shelf	1pc
⑬	Door Panel	3pcs

Fittings


Please check you have all the fittings listed below with your product in box 1.
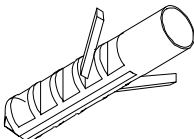
<div>A</div> <div></div> <div>M6.3*45mm Bolt 20pcs+1pc extra</div>	<div>B</div> <div></div> <div>Ø15x12mm Cam Lock 20pcs+1pc extra</div>	<div>C</div> <div></div> <div>Ø8x30mm Dowel 28pcs+1pc extra</div>	<div>D</div> <div></div> <div>M3.5*14mm screw 38pcs+1pc extra</div>
<div>E</div> <div></div> <div>Small Hinge 2pcs</div>	<div>F</div> <div></div> <div>Big Hinge 4pcs</div>	<div>G</div> <div></div> <div>M7*38 screw 8pcs+1pc extra</div>	<div>H</div> <div></div> <div>M3.5*14mm Screw 4pcs</div>
<div>I</div> <div></div> <div>M6*15mm Screw 24pcs+1pc extra</div>	<div>J</div> <div></div> <div>4mm Allen Key 1pc</div>	<div>K</div> <div></div> <div>Handle 3pcs</div>	<div>L</div> <div></div> <div>M3*12mm screw 6pcs</div>
<div>M</div> <div></div> <div>Cover 8pcs+1pc extra</div>	<div>N</div> <div></div> <div>Anti-tipping Belt 2pcs</div>	<div>O</div> <div></div> <div>Washer 4pcs</div>	<div>P</div> <div></div> <div>M5*35mm Screw 2pcs</div>
<div>Q</div> <div></div> <div>8 mm Wall Plug 2pcs</div>	<div>R</div> <div></div> <div>Adjustable Feet 2pcs</div>		

1. Attach parts to the boards.

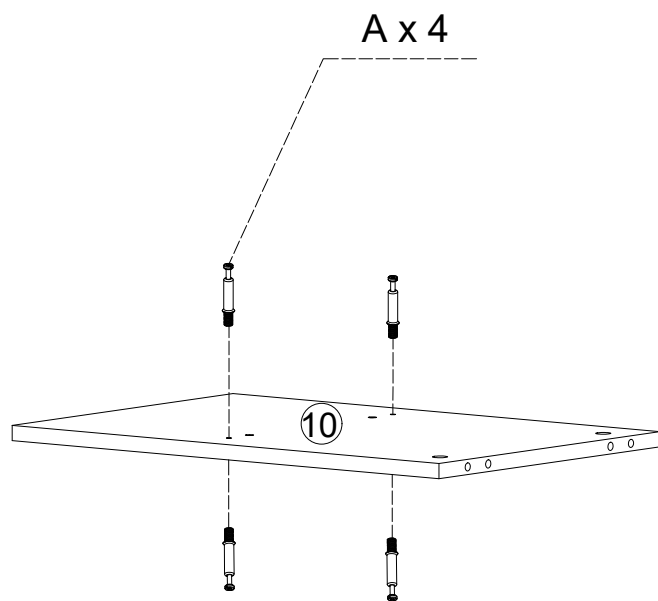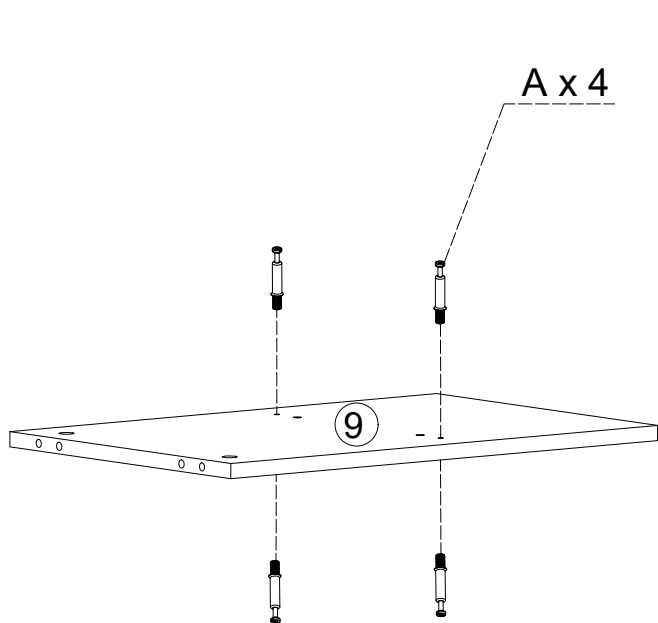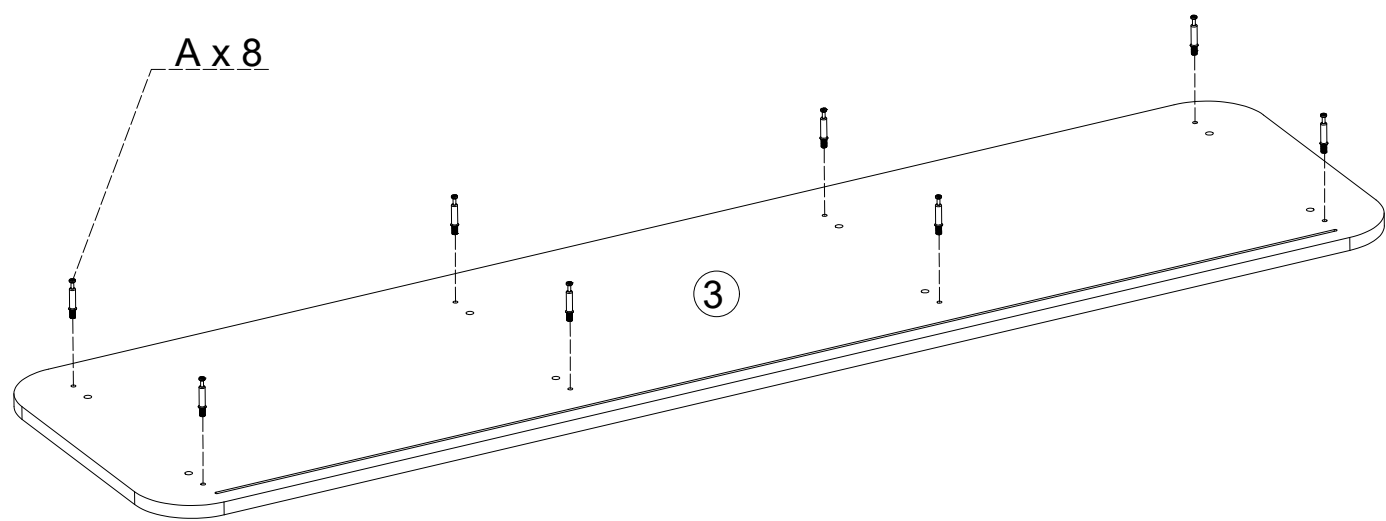



A




M6.3*45mm Bolt

16pcs

2. Attach parts to the boards.

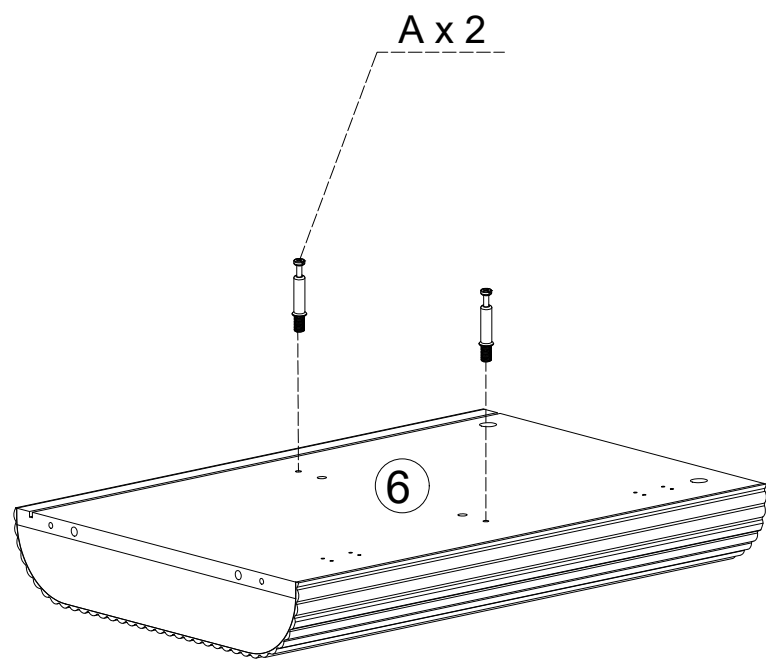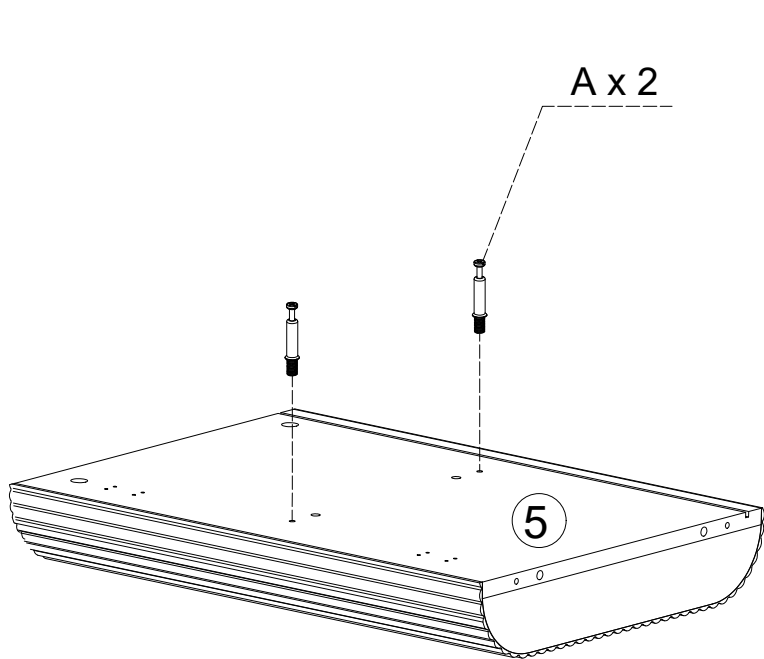


A


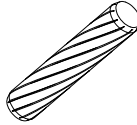


M6.3*45mm Bolt


4pcs


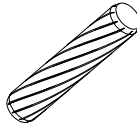
3. Attach parts to the boards.

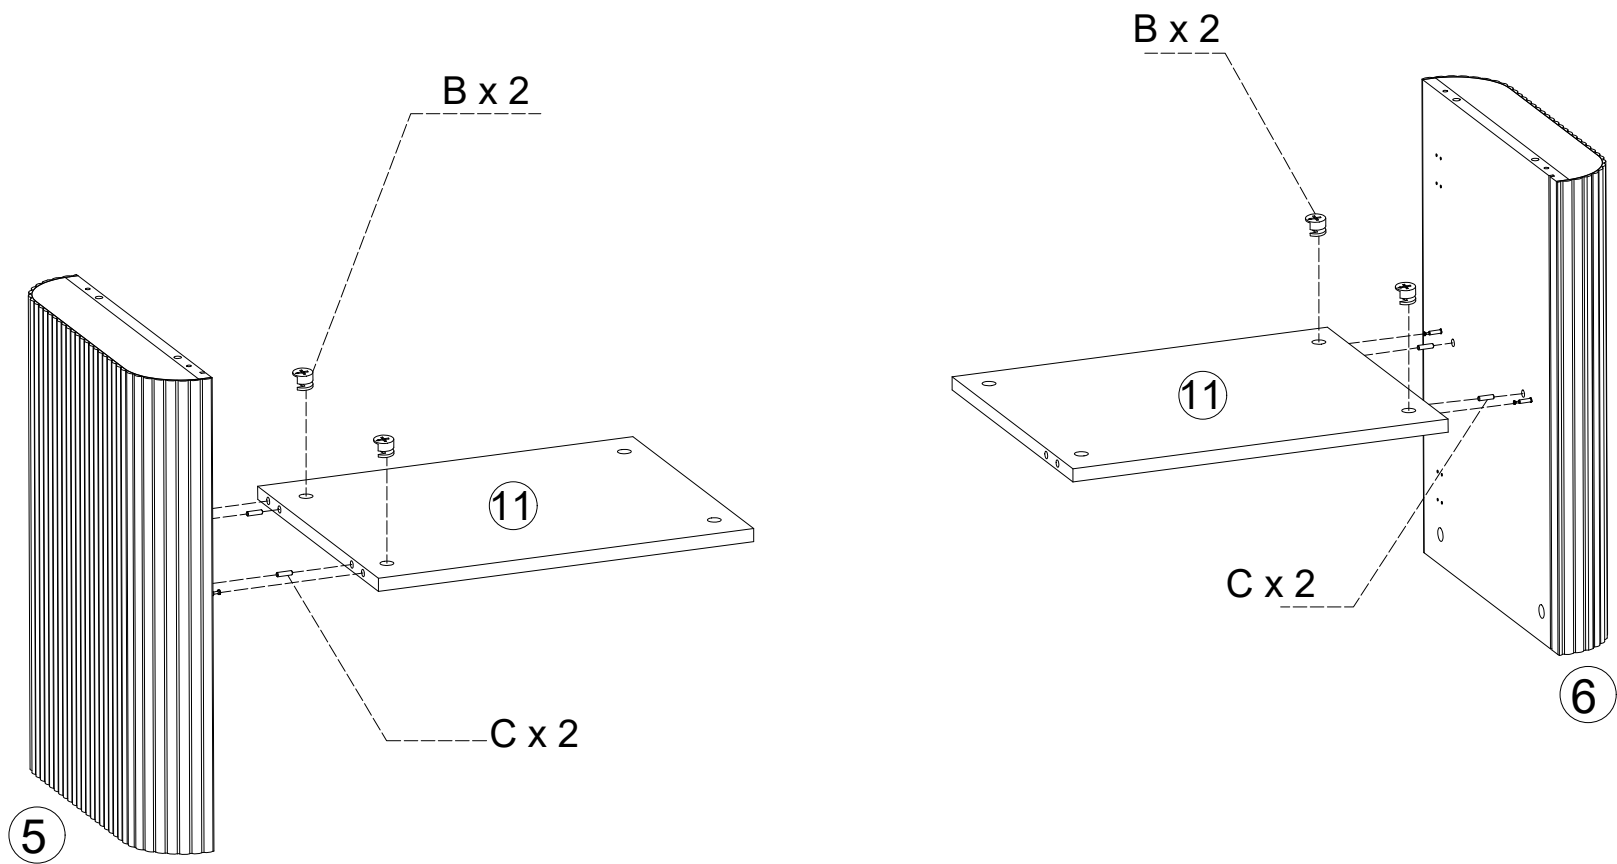


B	C
	
Ø15x12mm Cam Lock	Ø8x30mm Dowel
4pcs	4pcs


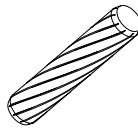
4. Attach parts to the boards.

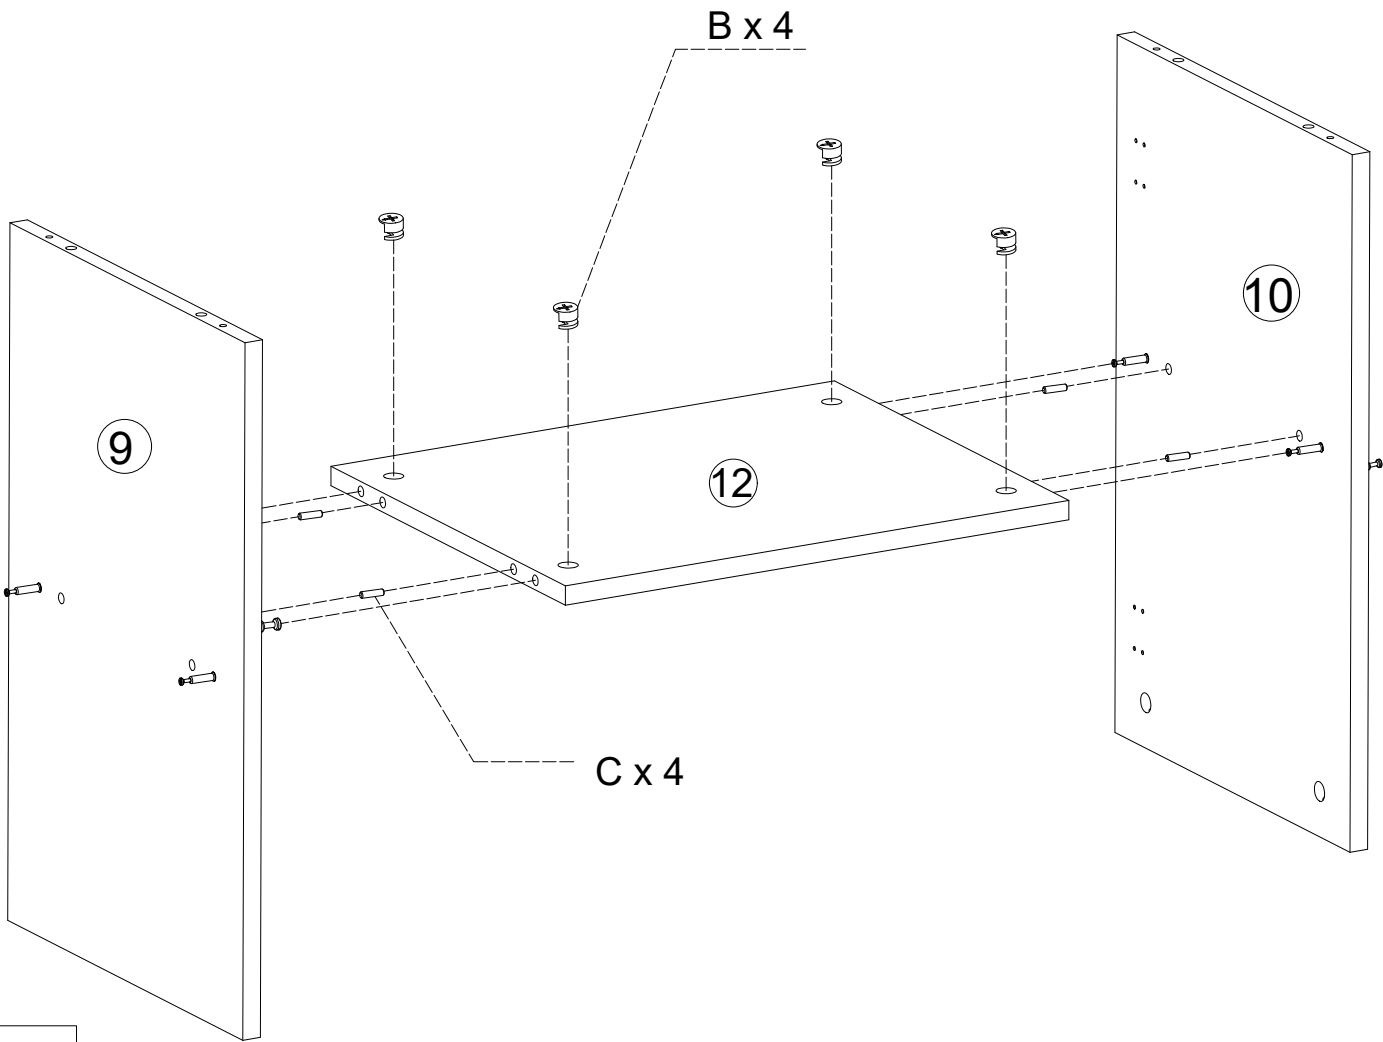


B	C
	
Ø15x12mm Cam Lock	Ø8x30mm Dowel
4pcs	4pcs


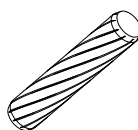
5. Attach parts to the boards.

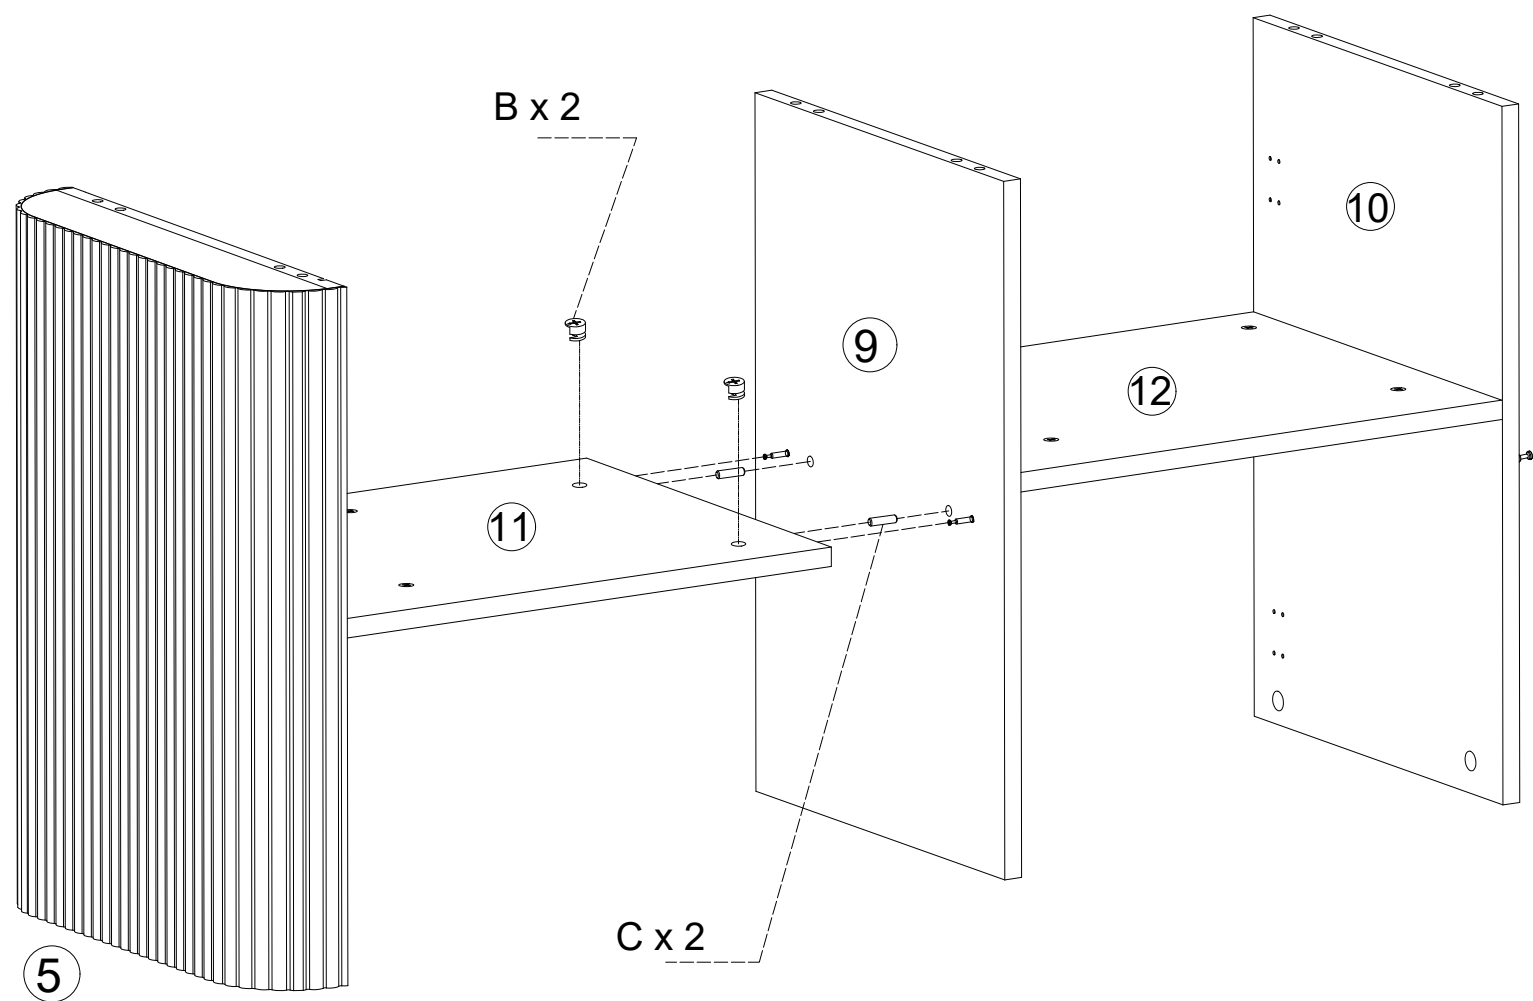


B		C	
Ø15x12mm Cam Lock		Ø8x30mm Dowel	
2pcs		2pcs	


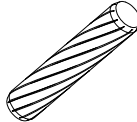

6. Attach parts to the boards.

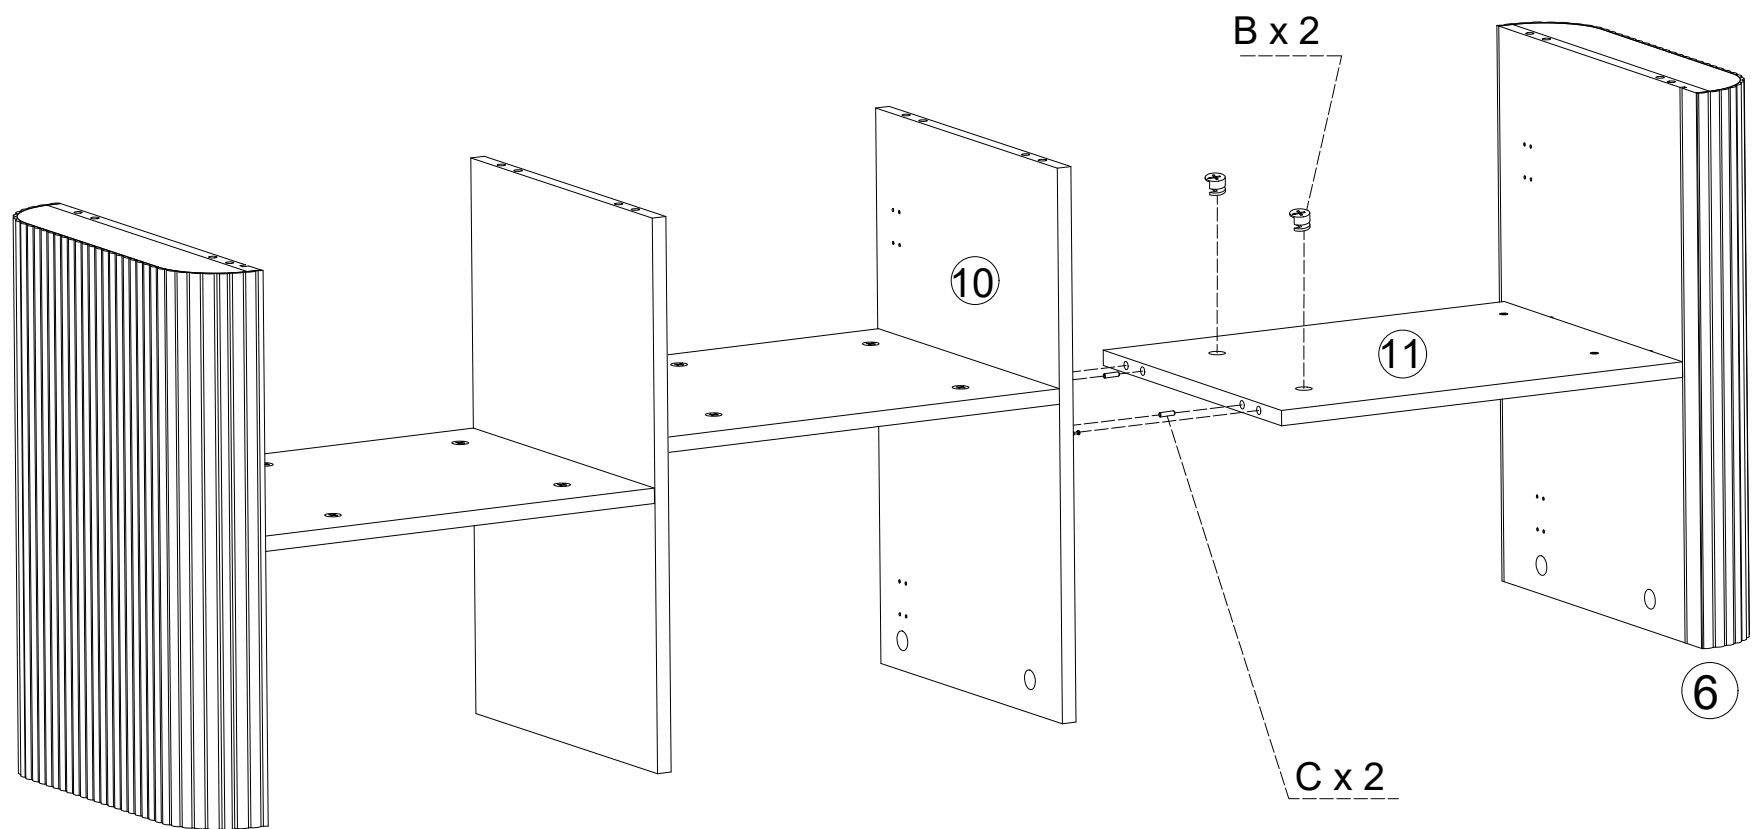


B		C	
Ø15x12mm Cam Lock		Ø8x30mm Dowel	
2pcs		2pcs	

7. Attach parts to the boards.

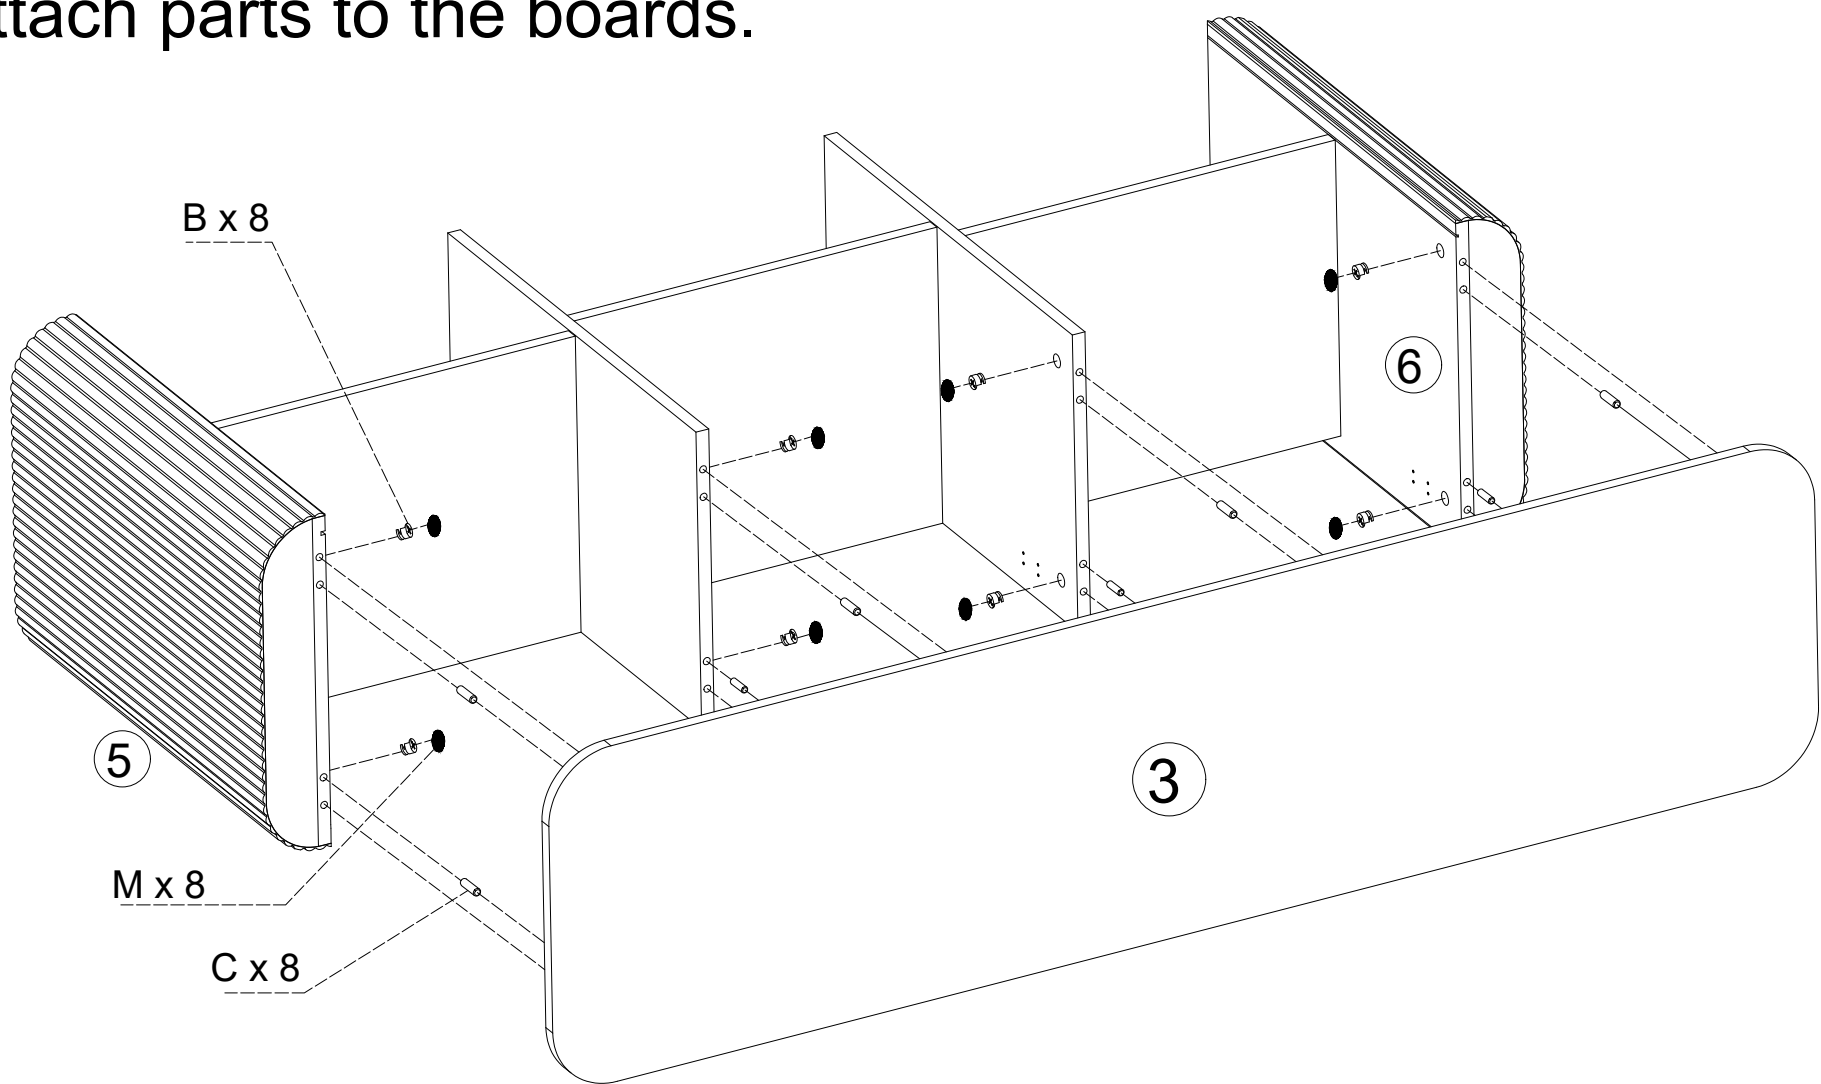






B	C	M
		
Ø15x12mm Cam Lock	Ø8x30mm Dowel	Cover
8pcs	8pcs	8pcs

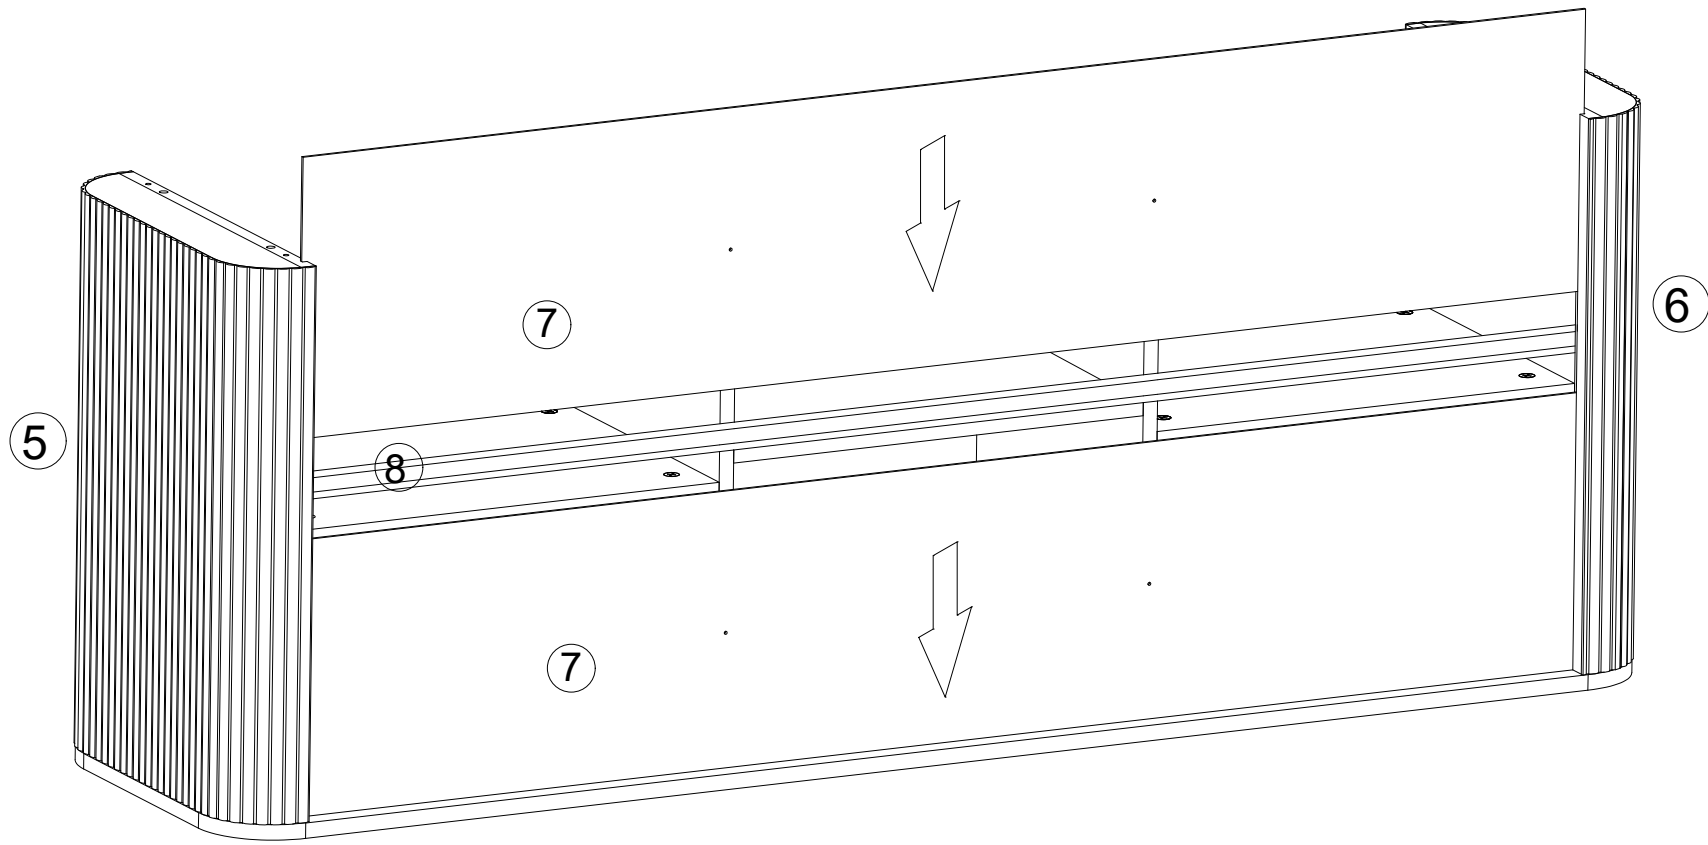8.Assemble boards to the frame.




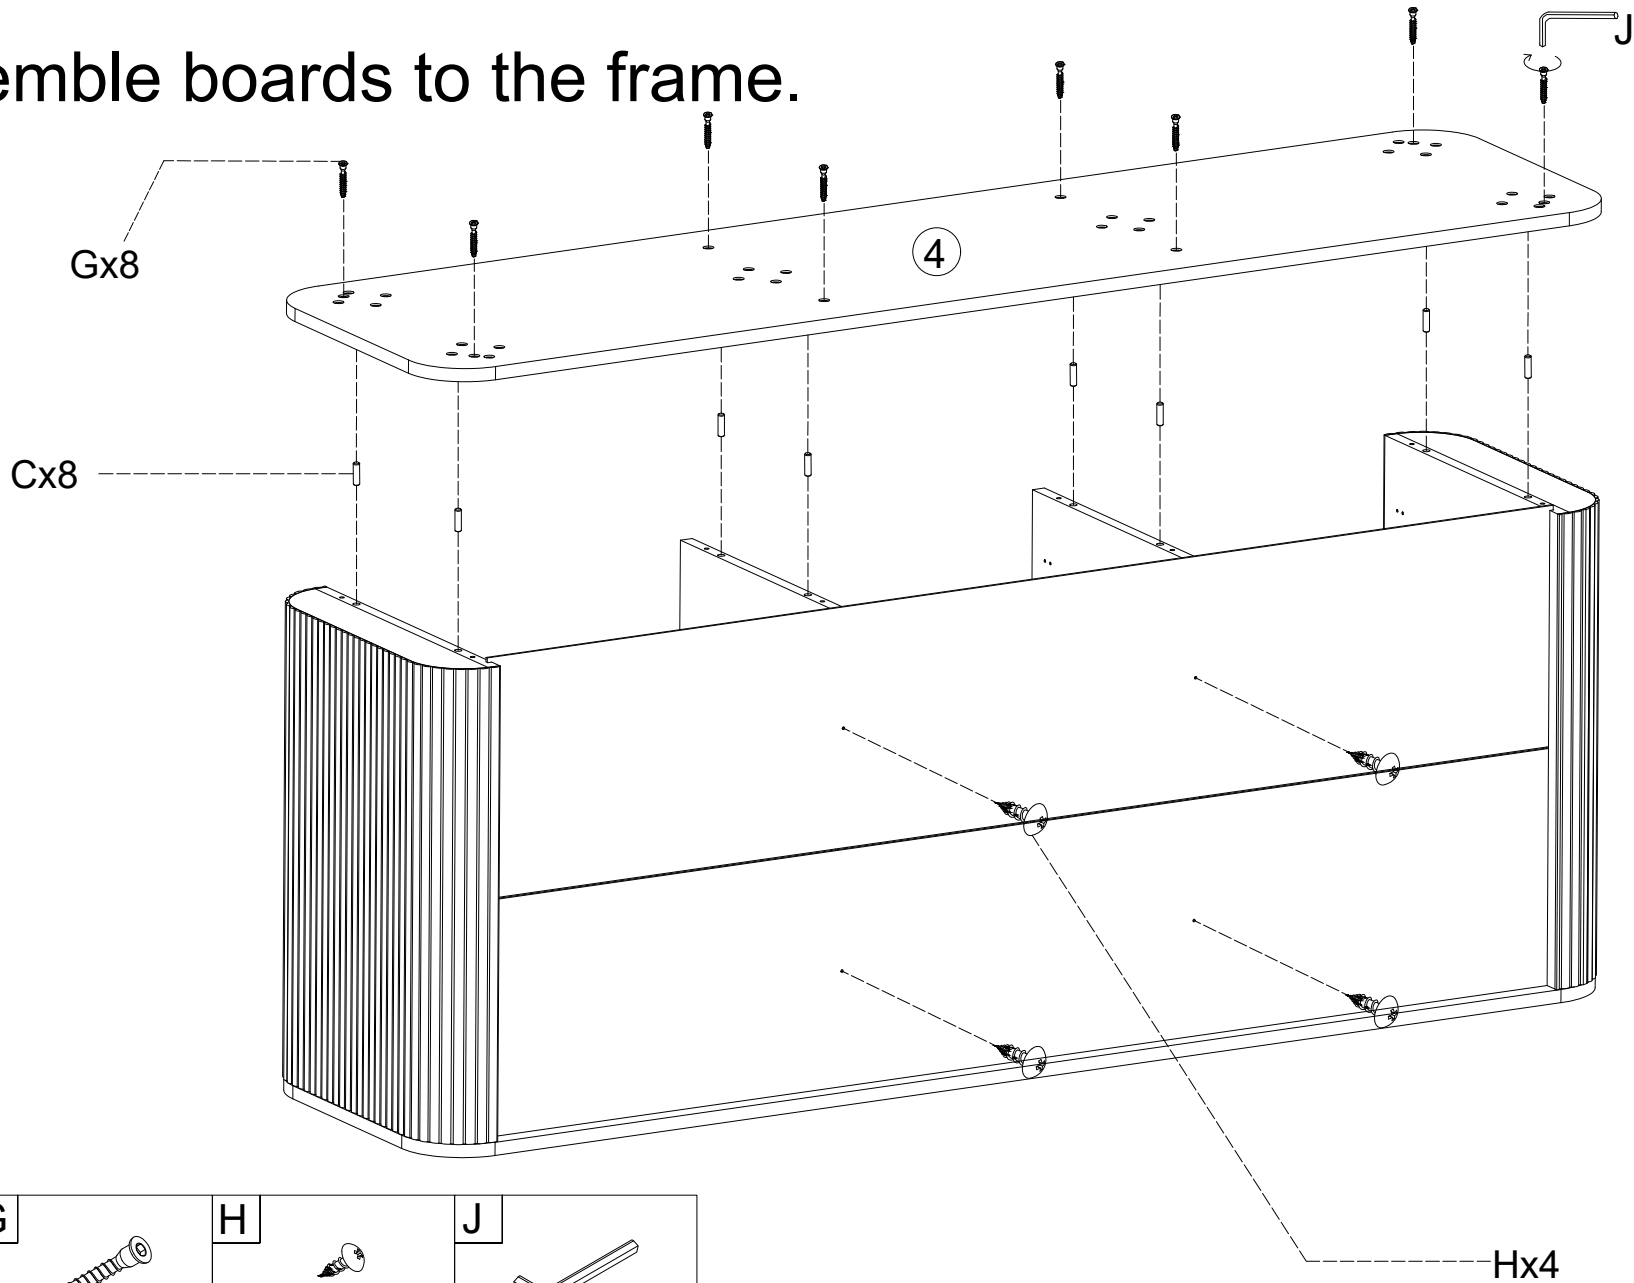

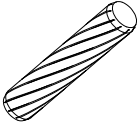
9.Assemble boards to the frame.




C	G	H	J
			
Ø8x30mm Dowel	M7*38 screw	M3.5*14mm Screw	4mm Allen Key
8pcs	8pcs	4pcs	1pc

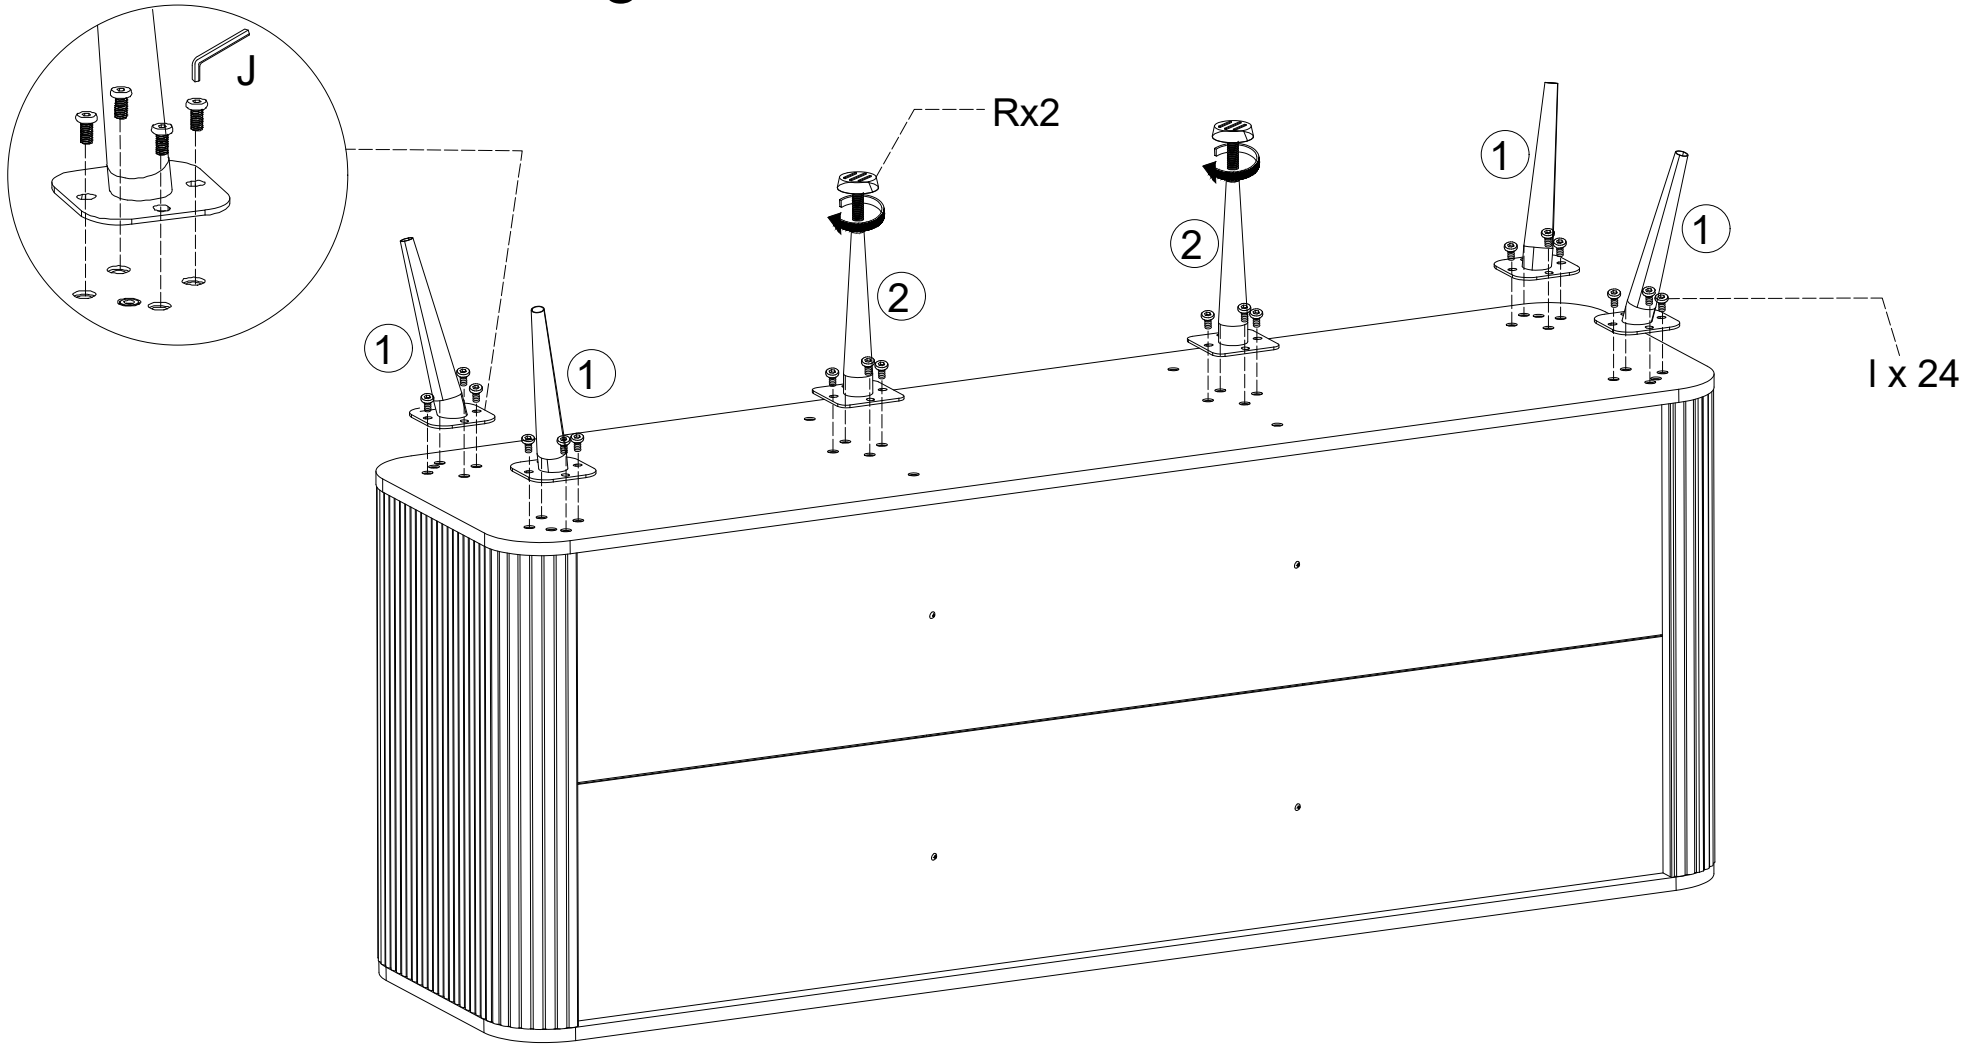



10.Assemble the leg to the frame.




I	R	J
		
M6*15mm Screw	Adjustable Feet	4mm Allen Key
24pcs	2pcs	1pc

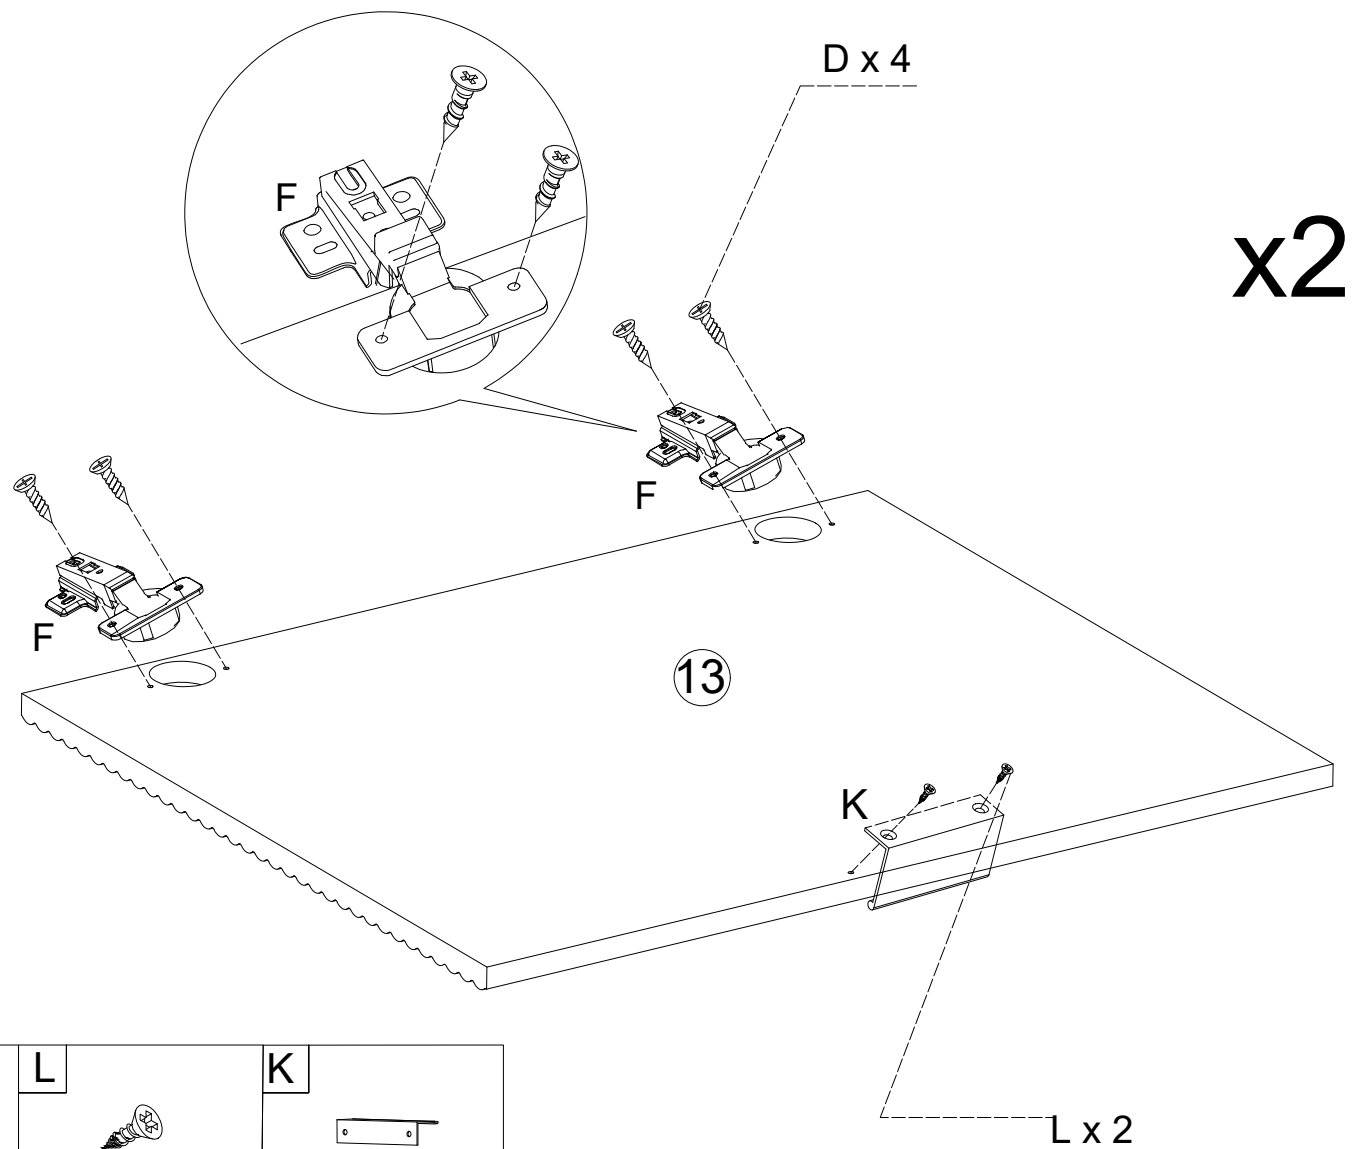



11. Attach parts to the boards.




D	F	L	K
			
M3.5*14mm screw	Big Hinge	M3*12mm screw	Handle
8pcs	4pcs	4pcs	2pcs

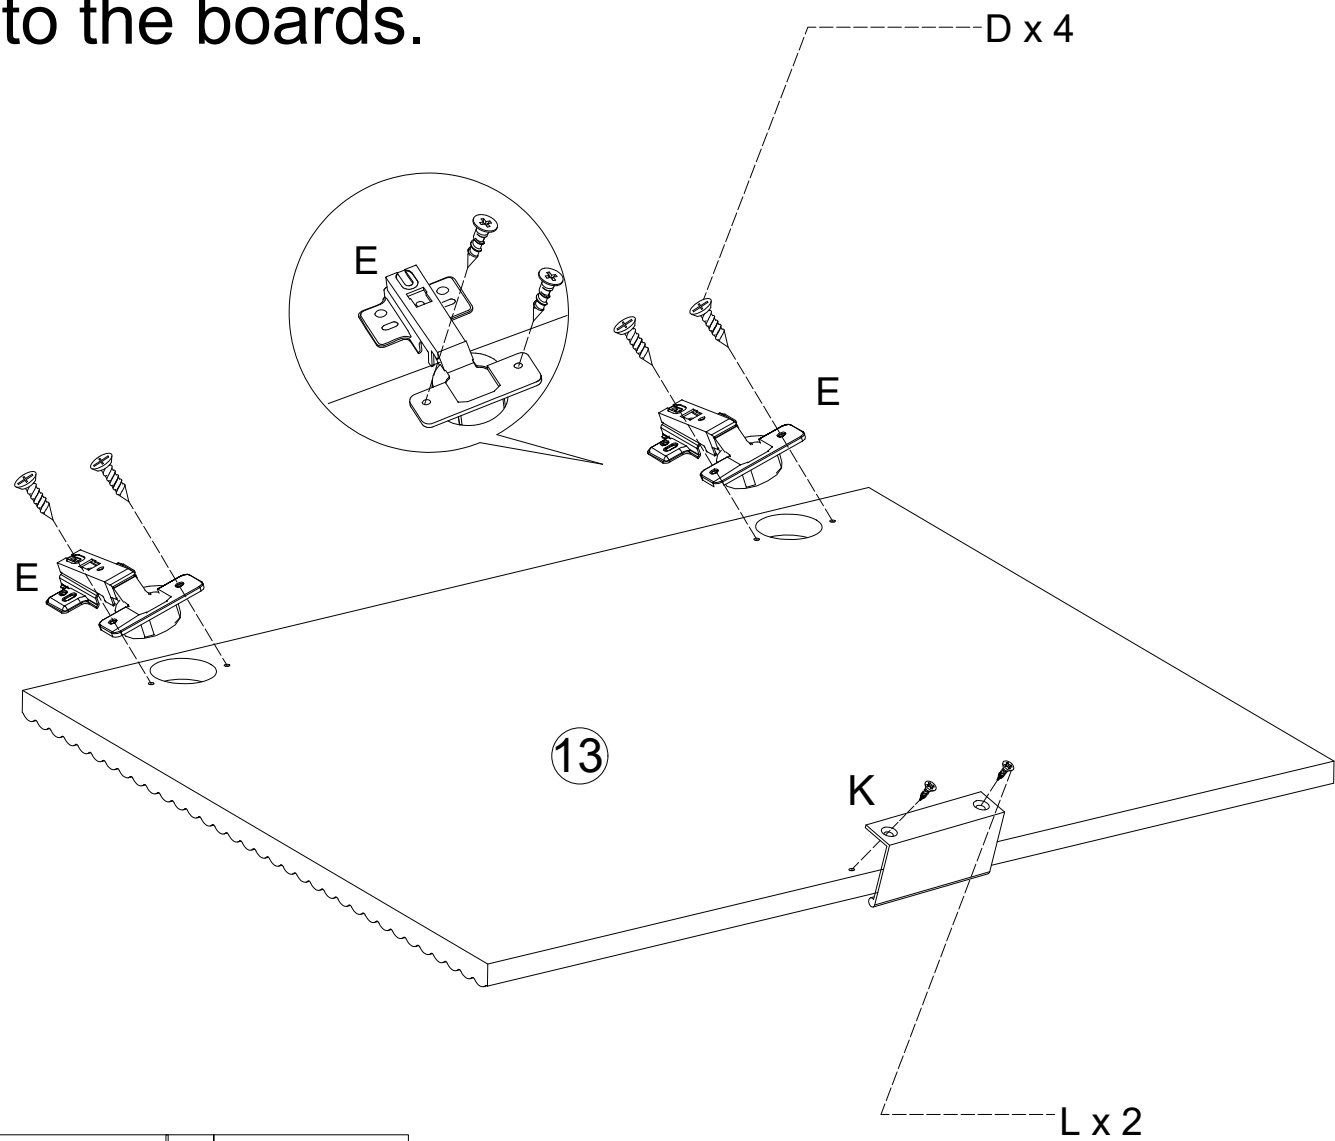
12. Attach parts to the boards.





D	E	L	K
			
M3.5*14mm screw	Small Hinge	M3*12mm screw	Handle
4pcs	2pcs	2pcs	1pc



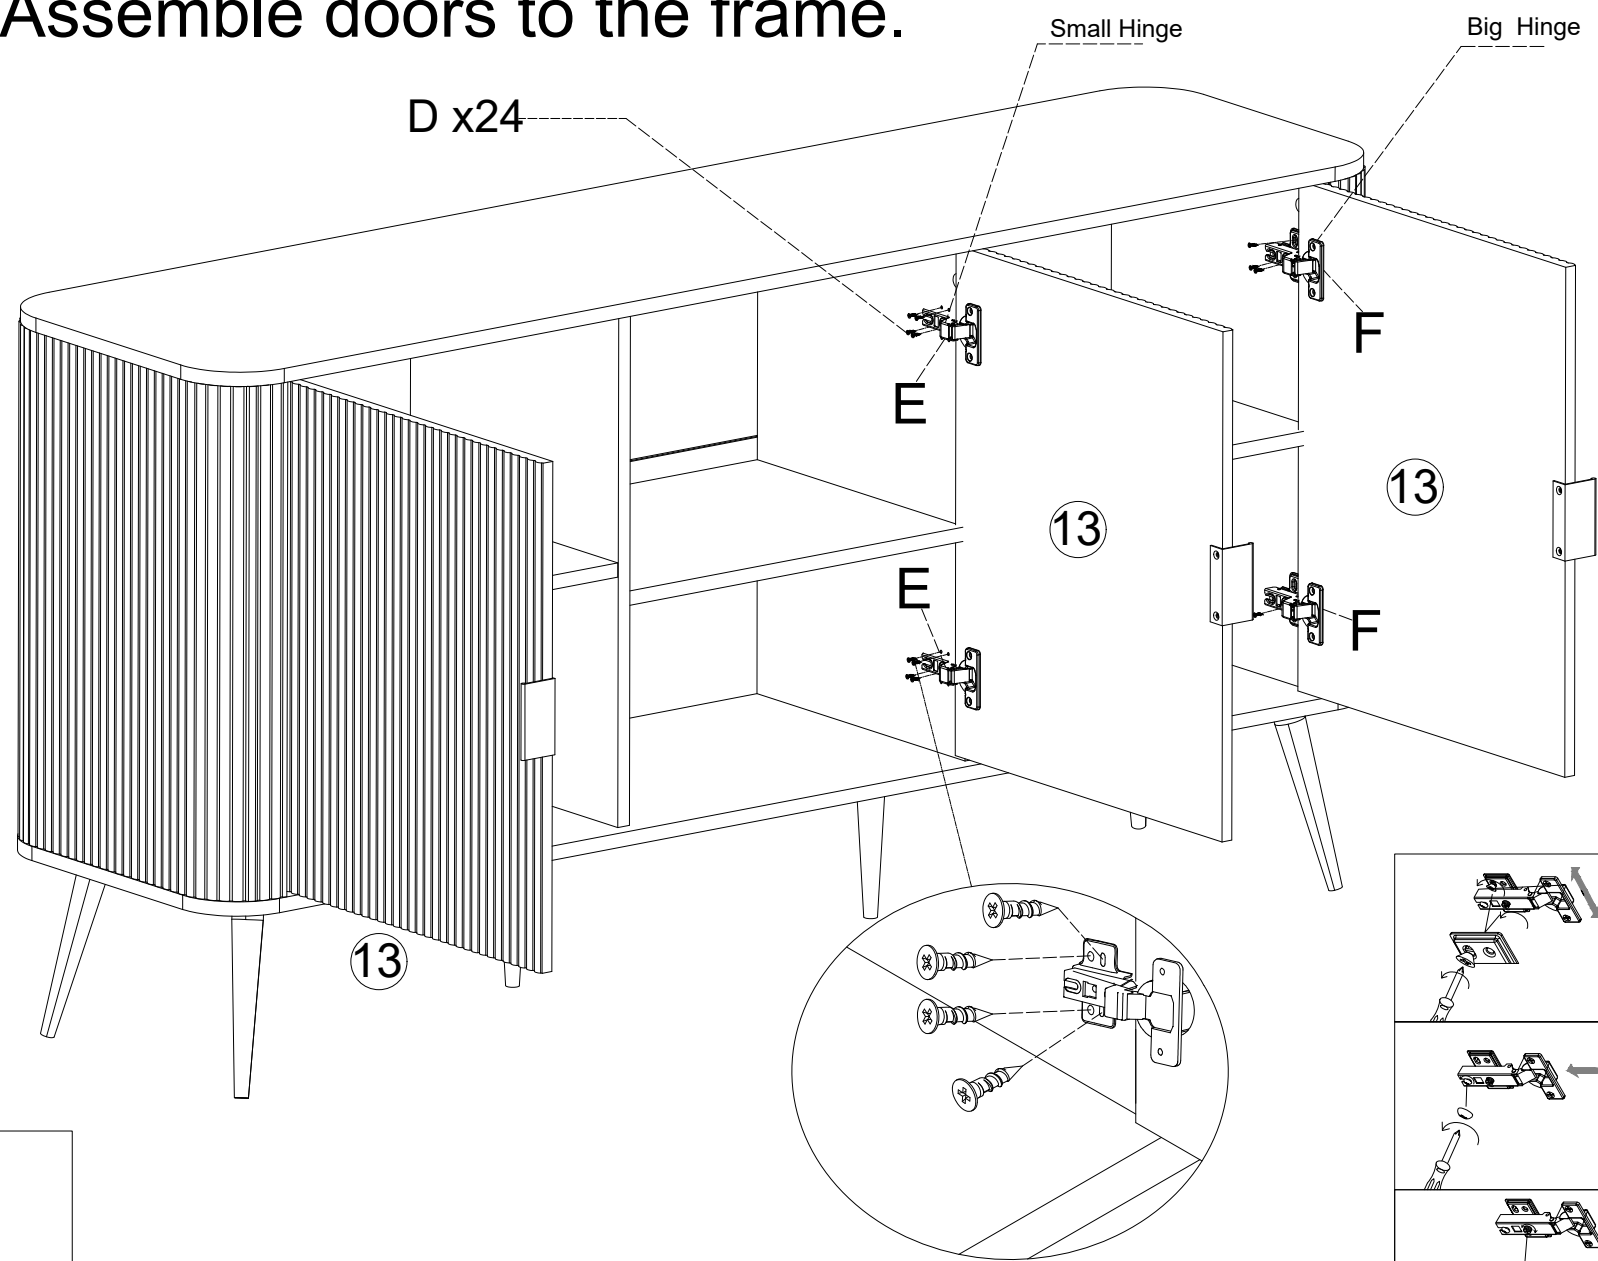


13.Assemble doors to the frame.

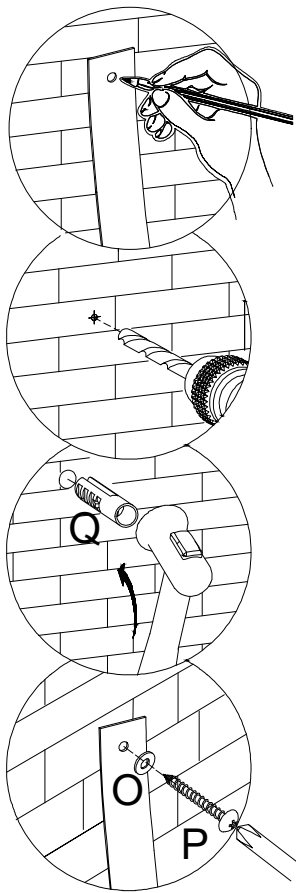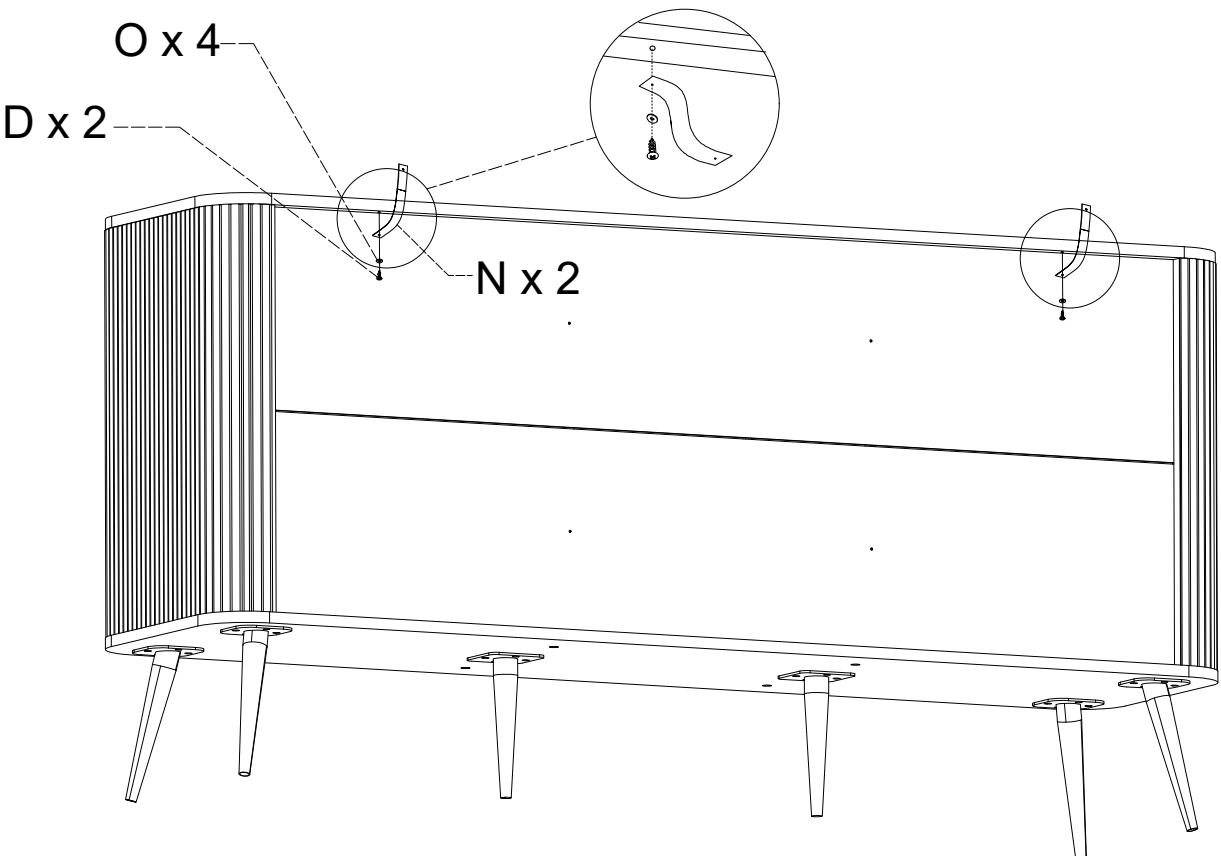

D	
M3.5*14mm screw	
24pcs	

14.Fix the Anti-tipping Belt to the wall



D		N		O		P		Q	
M3.5*14mm screw		Anti-tipping Belt		Washer		M5*35mm Screw		8 mm Wall Plug	
2pcs		2pcs		4pcs		2pcs		2pcs	