

# DUSK.COM


LIVING | BEDROOM | DINING

Range Name: Harlow


Box Dimensions: W97xD48xH33.5 (cm)

Product Dimensions: W80xD40xH75.5 (cm)

## Small Chest

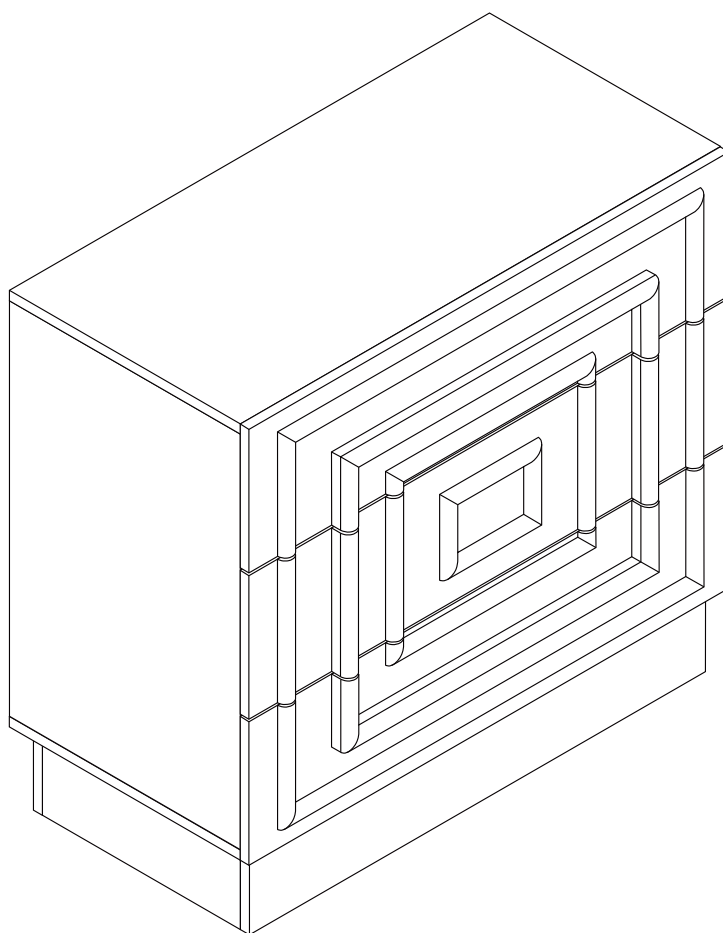

Up to 1 hour  
assembly time

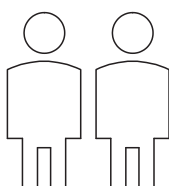

Two person  
assembly



This product is intended for domestic use only, not for commercial purposes.

V-1.0

P-1/12

# IMPORTANT

## ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

## TOP TIP

We recommend that you assemble the bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

## SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. In order to prevent overturning, this product must be used with the wall attachment device provided.
9. Serious or fatal crushing injuries can occur from tipping furniture.

## HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

## RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.


## CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the bedside when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

# Parts list

Before you begin building your bedside, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity
1	Top Panel	1 pc
2	Bottom Panel	1 pc
3	Left Side Panel	1 pc
4	Right Side Panel	1 pc
5	Front Support Bar	2 pcs
6	Top Support Bar	1 pc
7	Back Support Bar	1 pc
8	Back Panel	1 pc
9	Back Panel	1 pc
10	Leg Long Panel	2 pcs
11	Leg Short Panel	2 pcs
12	Drawer Left Side	3 pcs
13	Drawer Right Side	3 pcs
14	Drawer Back Side	3 pcs
15	Drawer Bottom	3 pcs
16	Drawer Bottom Support Bar	3 pcs
17	Drawer Front	1 pc
18	Drawer Front	1 pc
19	Drawer Front	1 pc

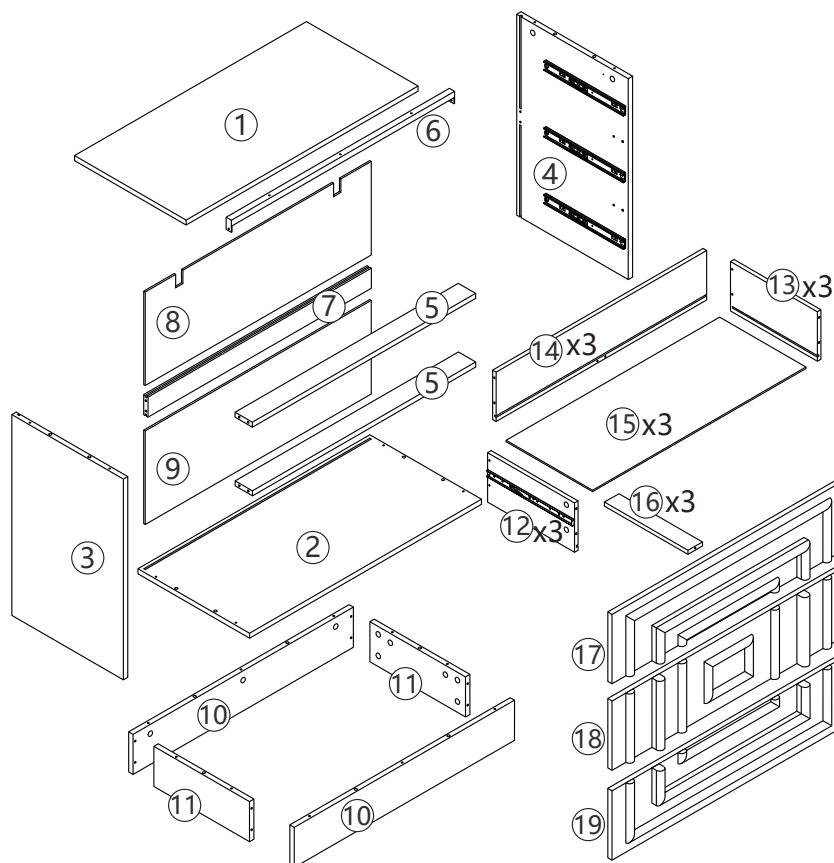


## Fittings


Please check you have all the fittings listed below with your product.

<b>A</b>  M5*35mm Cam Lock Screw 49pcs+6pcs extra	<b>B</b>  Ø15*10mm Cam Lock 49pcs+6pcs extra	<b>C</b>  Ø8*30mm Dowel 14pcs+1pc extra	<b>D</b>  M4*14mm Screw 2pcs	<b>E</b>  M3*12mm Screw 8pcs+1pc extra	<b>F</b>  Plastic Buckle 8pcs+1pc extra
<b>G</b>  M4*40mm Screw 6pcs	<b>H</b>  Cover 12pcs+1pc extra	<b>I</b>  Wall Bracket 2pcs	<b>J</b>  M4*12mm Screw 2pcs	<b>K</b>  M4*30mm Screw 21pcs+2pcs extra	<b>L</b>  Mat 4pcs
<b>M</b>  M8*40mm Wall Anchor 2pcs	<b>Pre- assembled Fitting</b>				
			<b>N</b>  Slide 6pcs	<b>O</b>  Slide 6pcs	<b>P</b>  M3.5*12mm Screw 36pcs



Ensure the cam lock screws are installed correctly, as indicated by the "check mark" below.

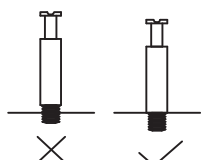



Refer to the illustration below to correctly use the cam lock screws for assembling the panels.

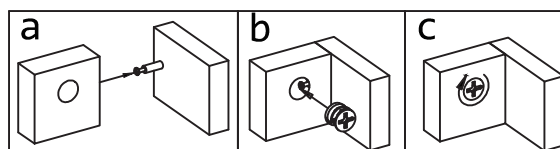


## Step 1. Attach parts to the panel.

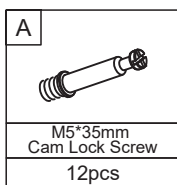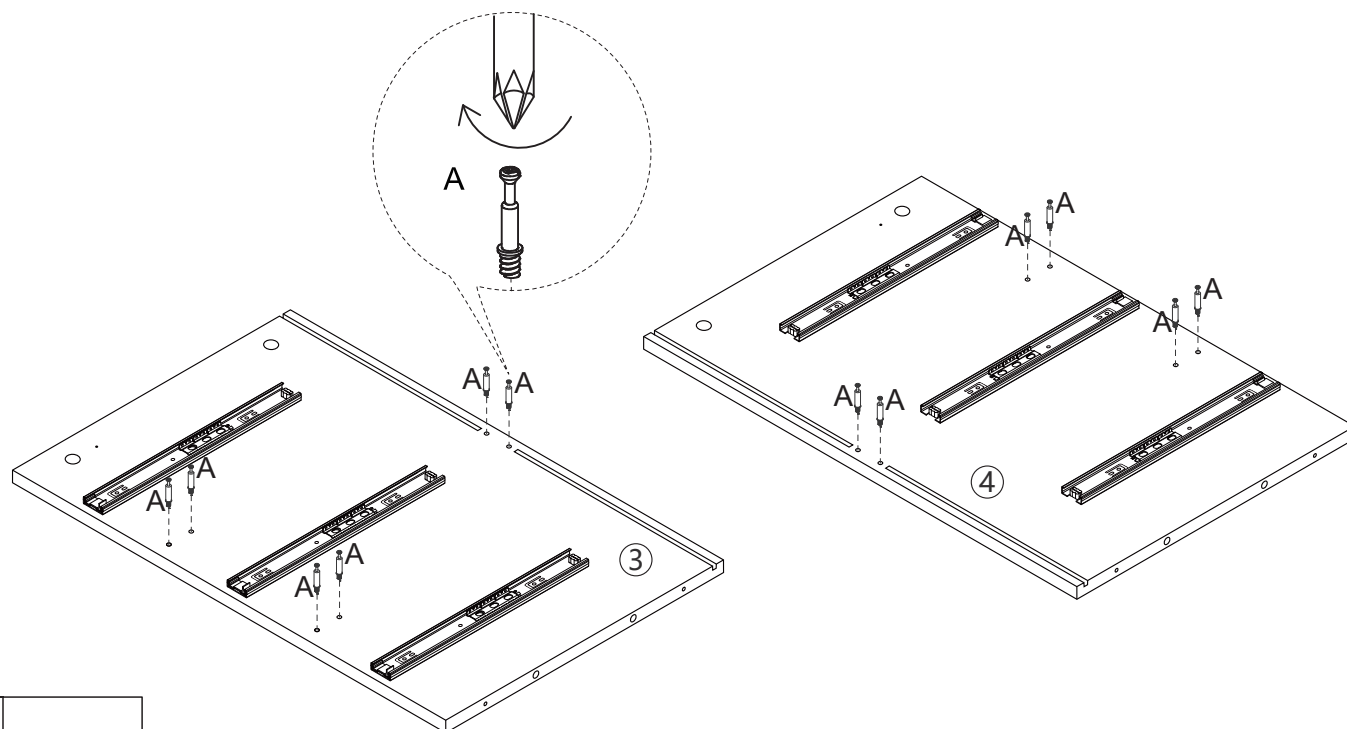



## Step 2. Assemble the left and right side panels with horizontal bars.

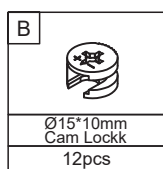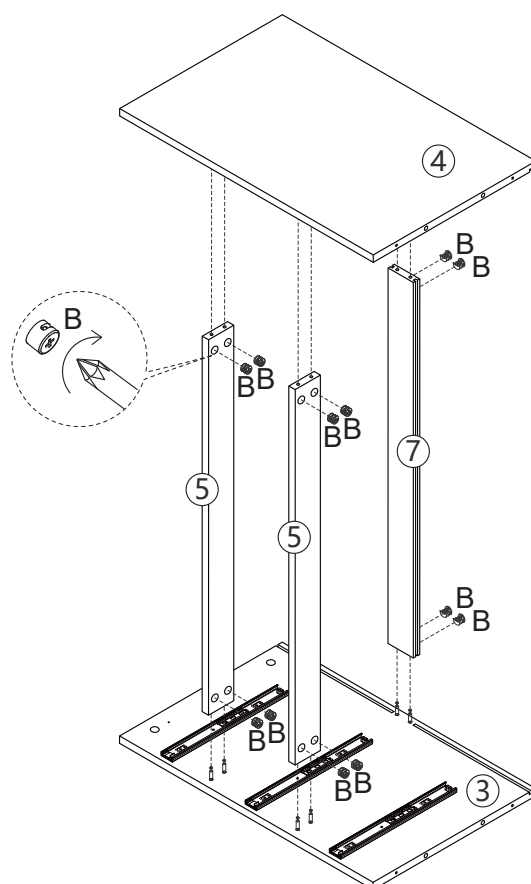


### Step 3. Assemble back pan.

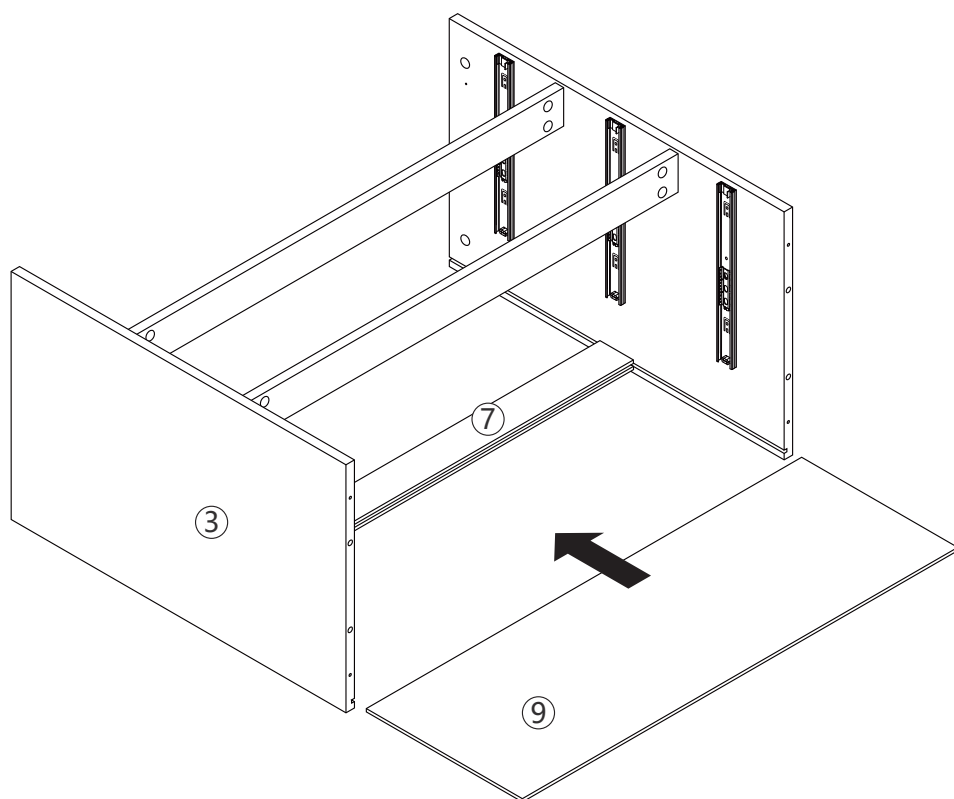

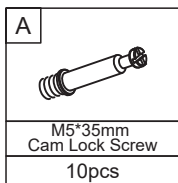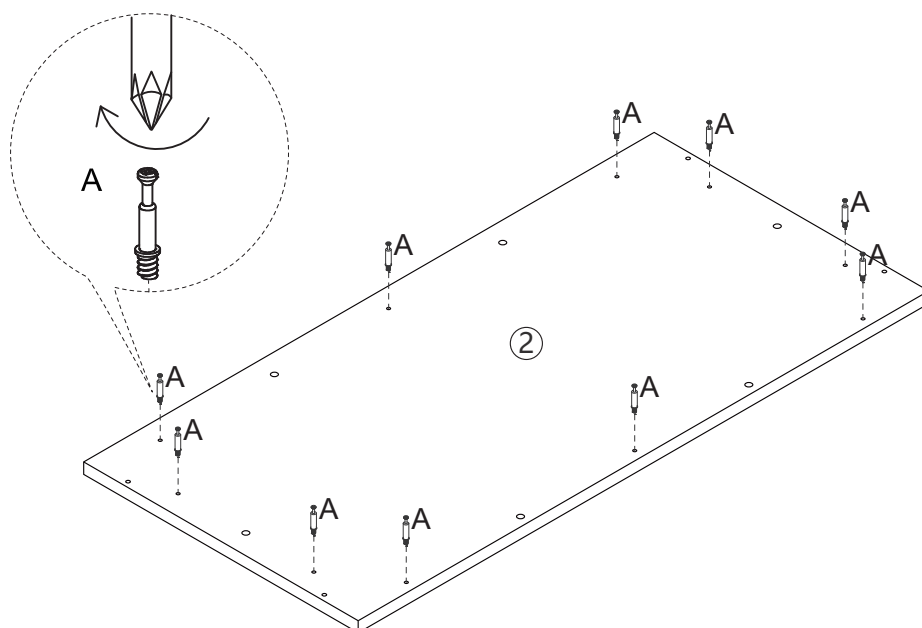

### Step 4. Attach parts to the panel.

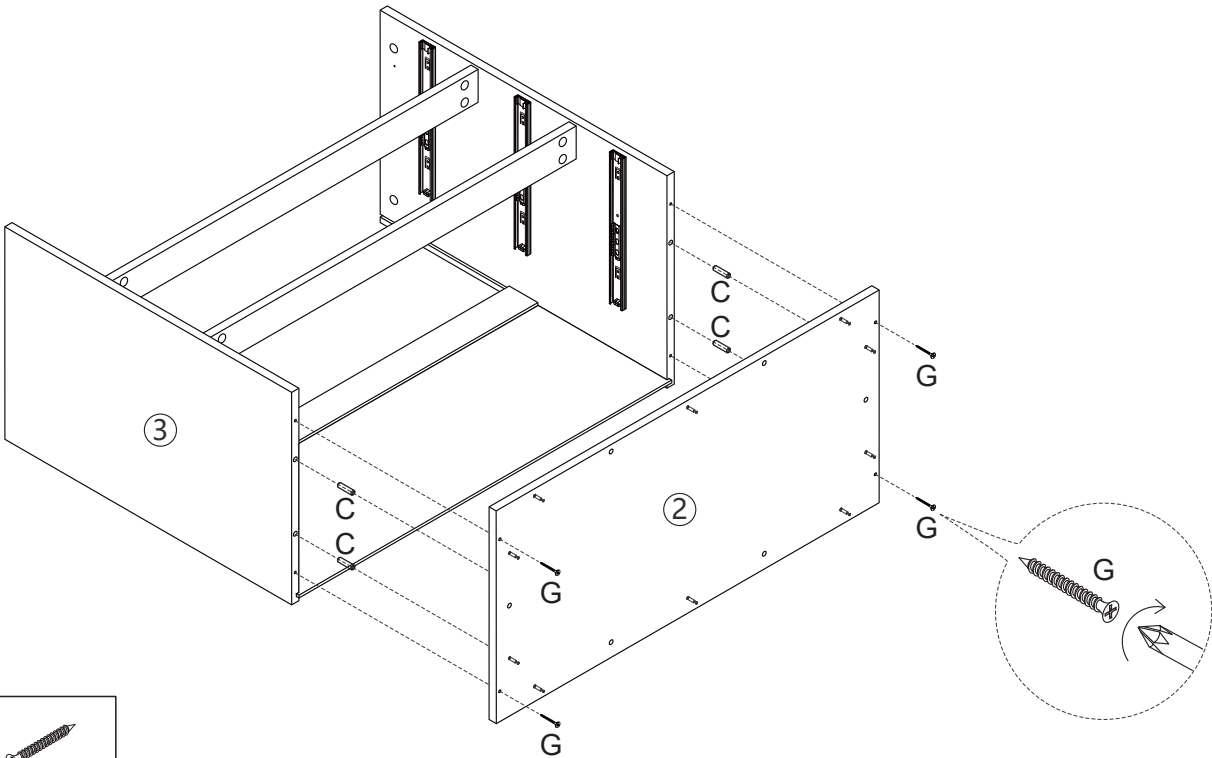



Step 5. Attach panels to the bottom.




C		G	
Ø8*30mm Dowel		M4*40mm Screw	
4pcs		4pcs	

Step 6. Attach parts to the panel.

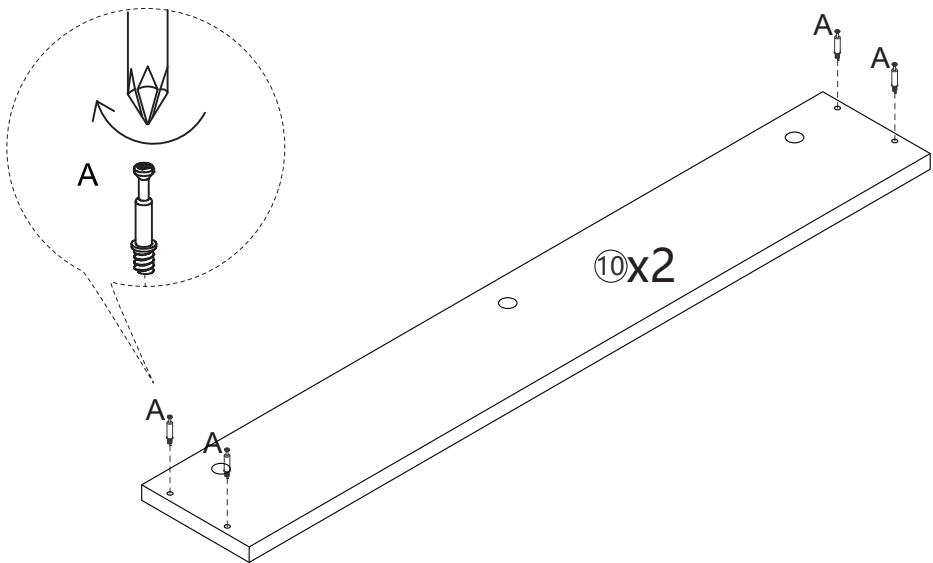


A	
M5*35mm Cam Lock Screw	
8pcs	


Step 7. Assemble the foot panel and attach the foot pad as shown in the picture.

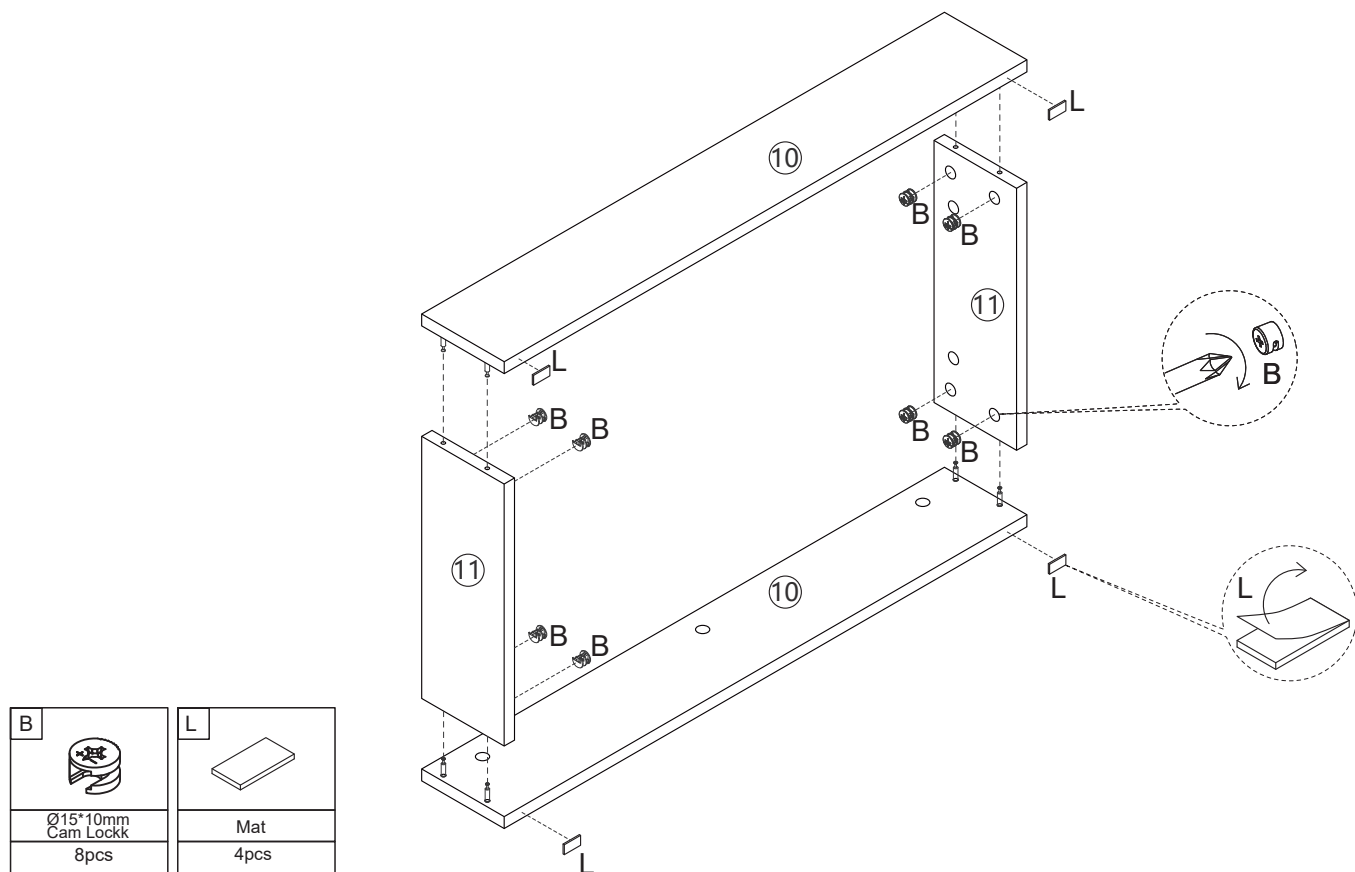


Step 8. Attach Legs to the bottom.

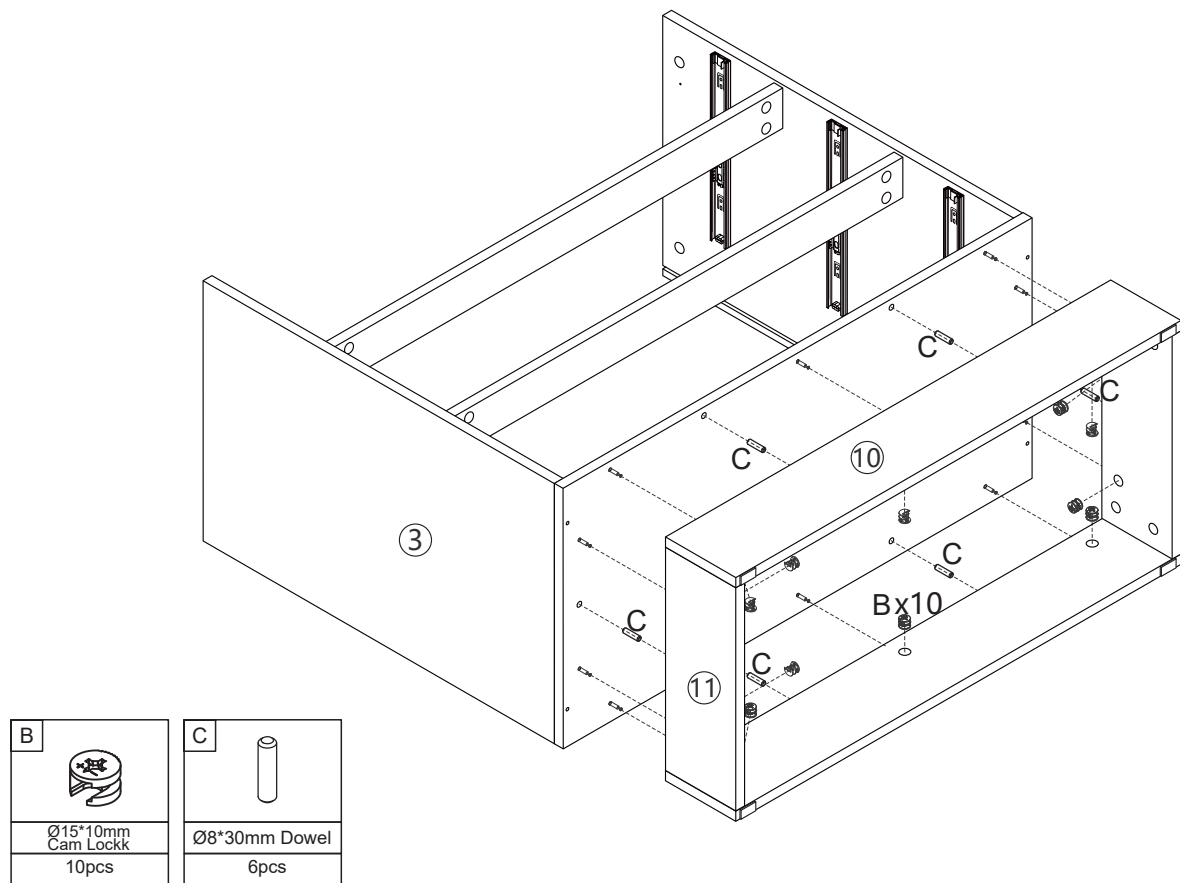

Step 9. Assemble the backboard and crossbar.




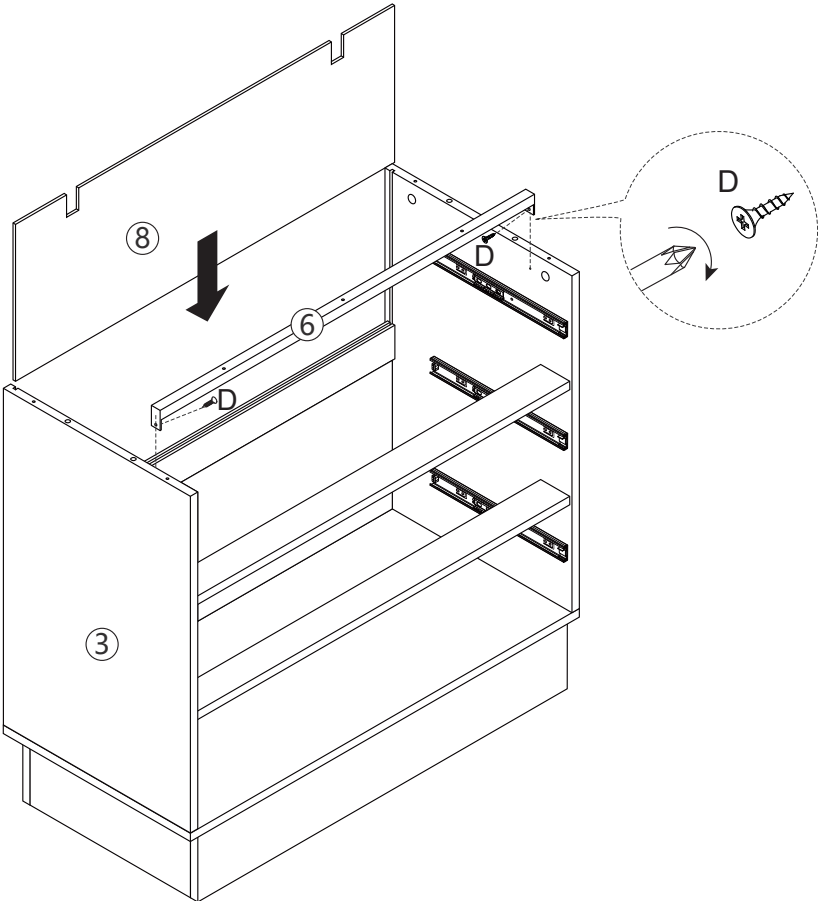


Step 10. Attach parts to the panel.


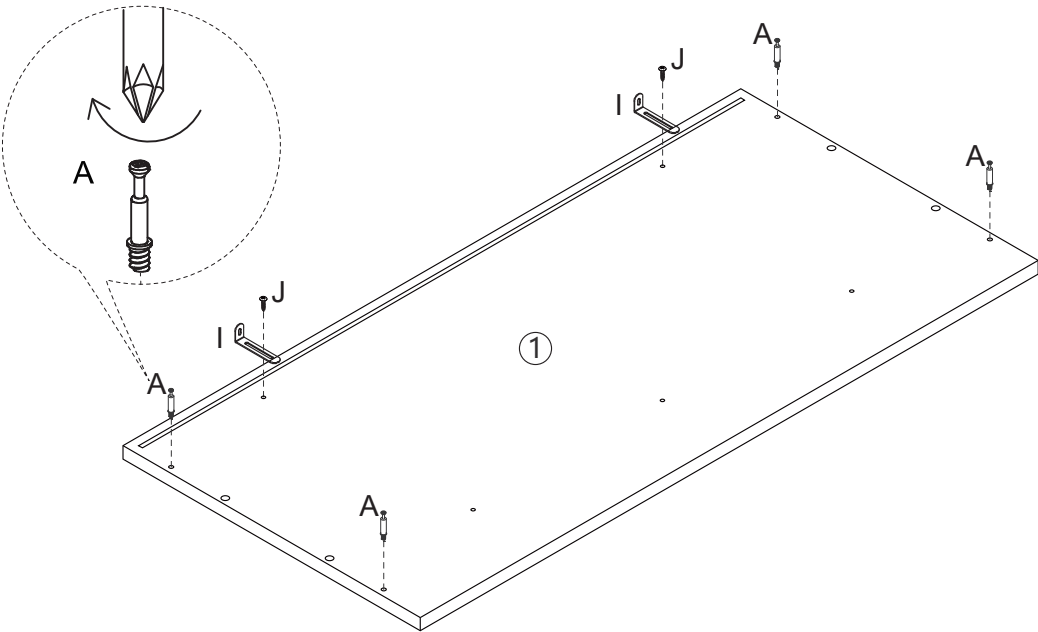





Step 11. Attach the top panel to the frame.

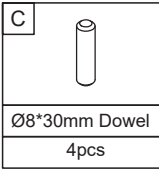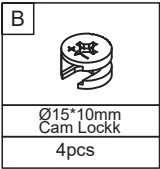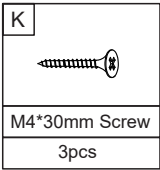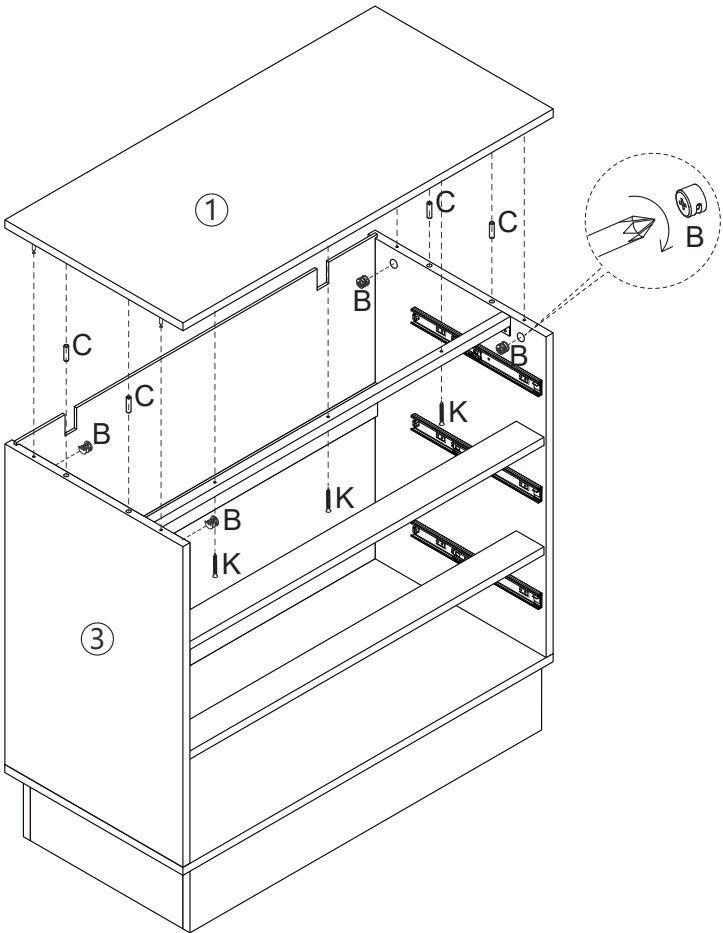


Step 12. Assemble the drawer frame and drawer bottom plate.

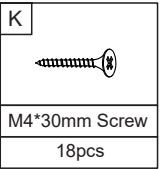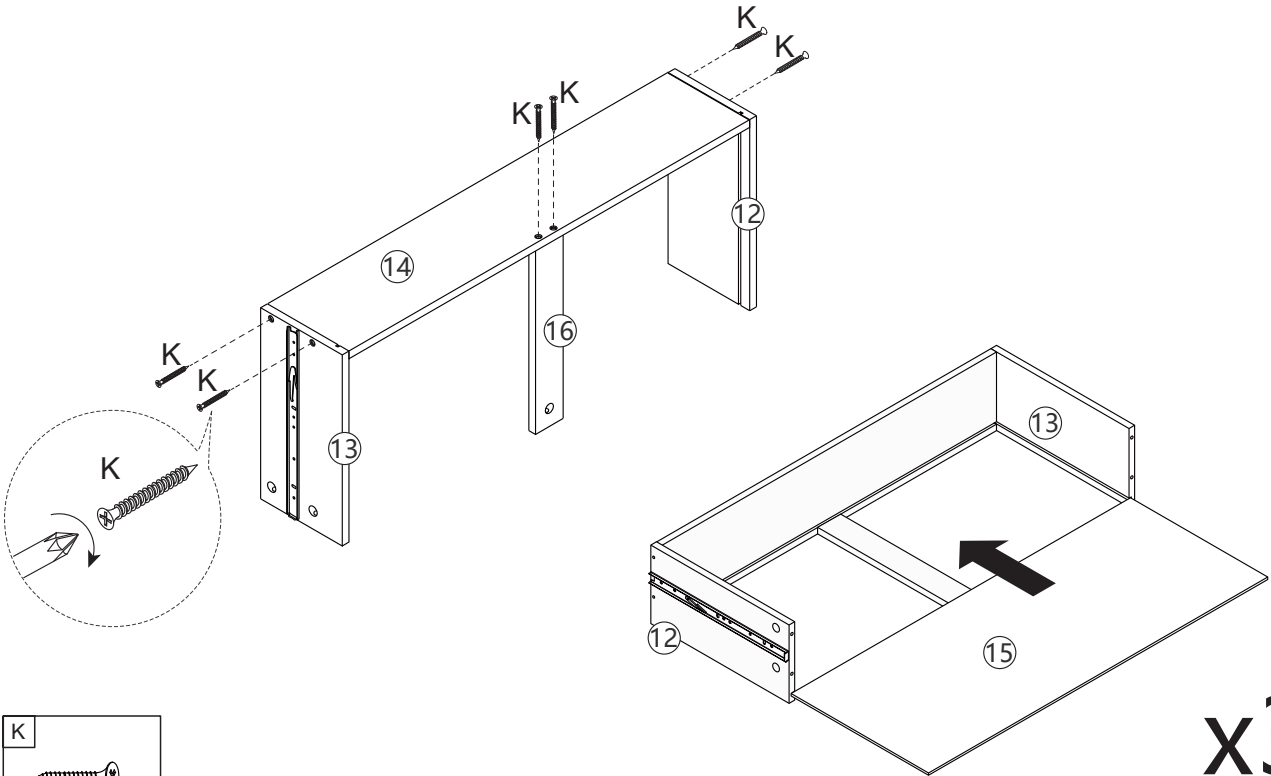


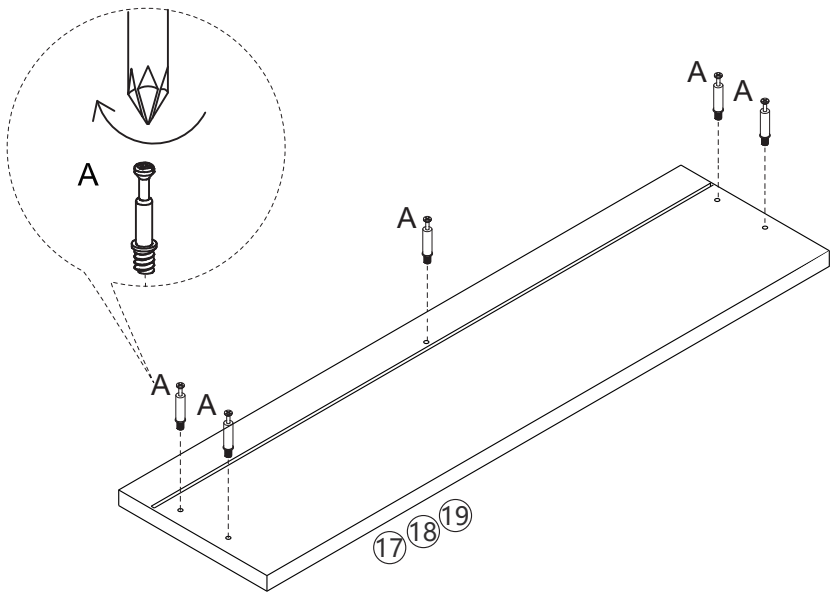

Step 13. Attach parts to the panel.




A

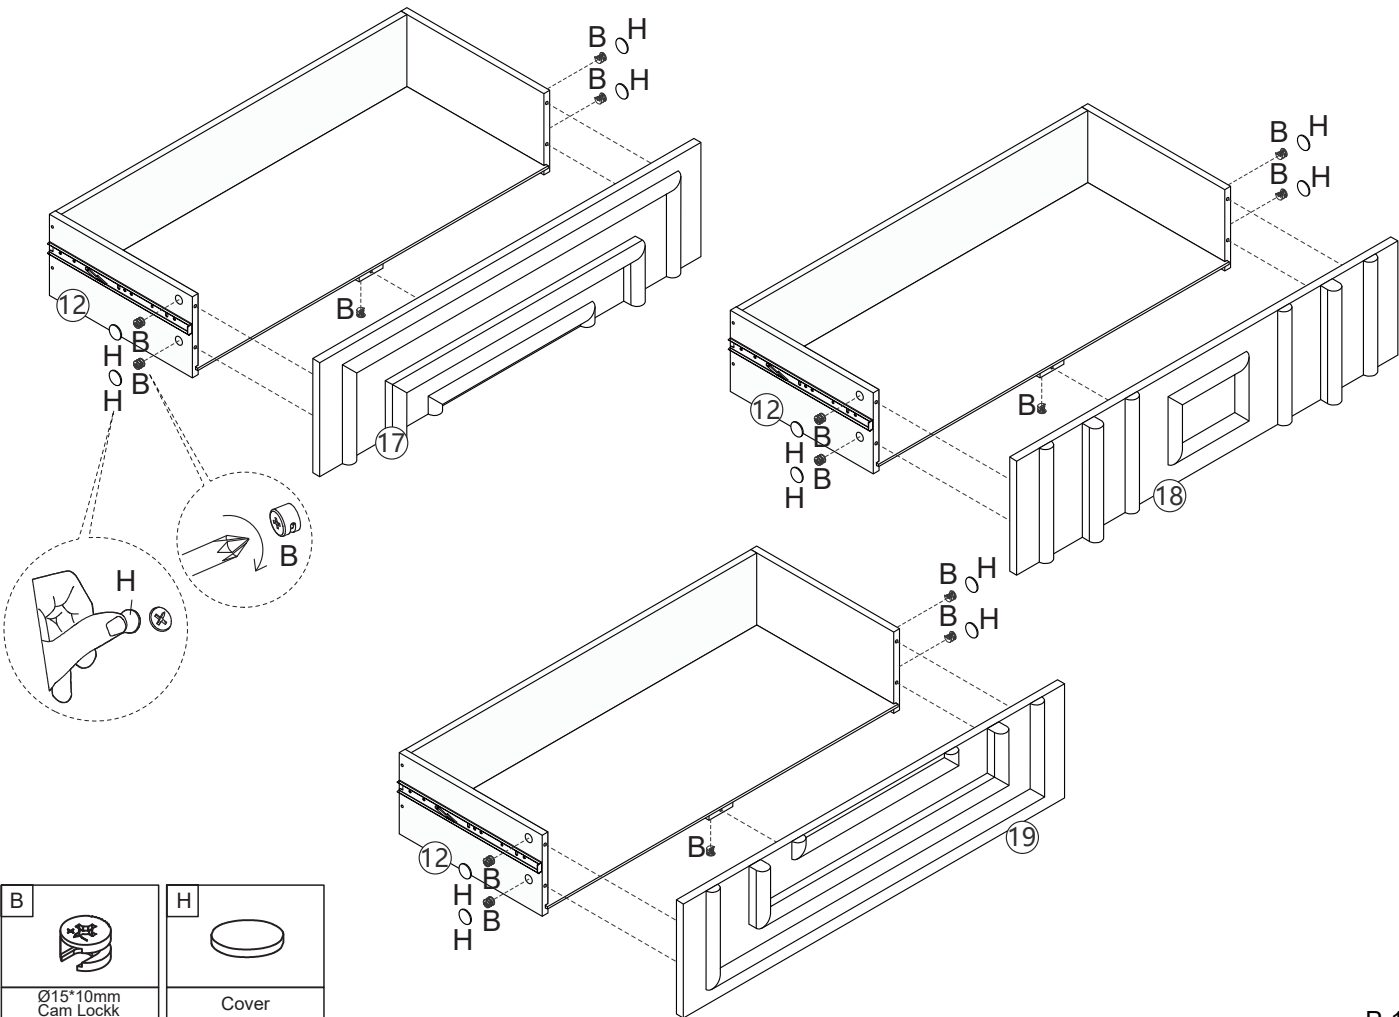M5*35mm Cam Lock Screw
15pcs

Step 14. Assemble drawer panel.




B	H
	
Ø15*10mm Cam Lockk	Cover
15pcs	12pcs

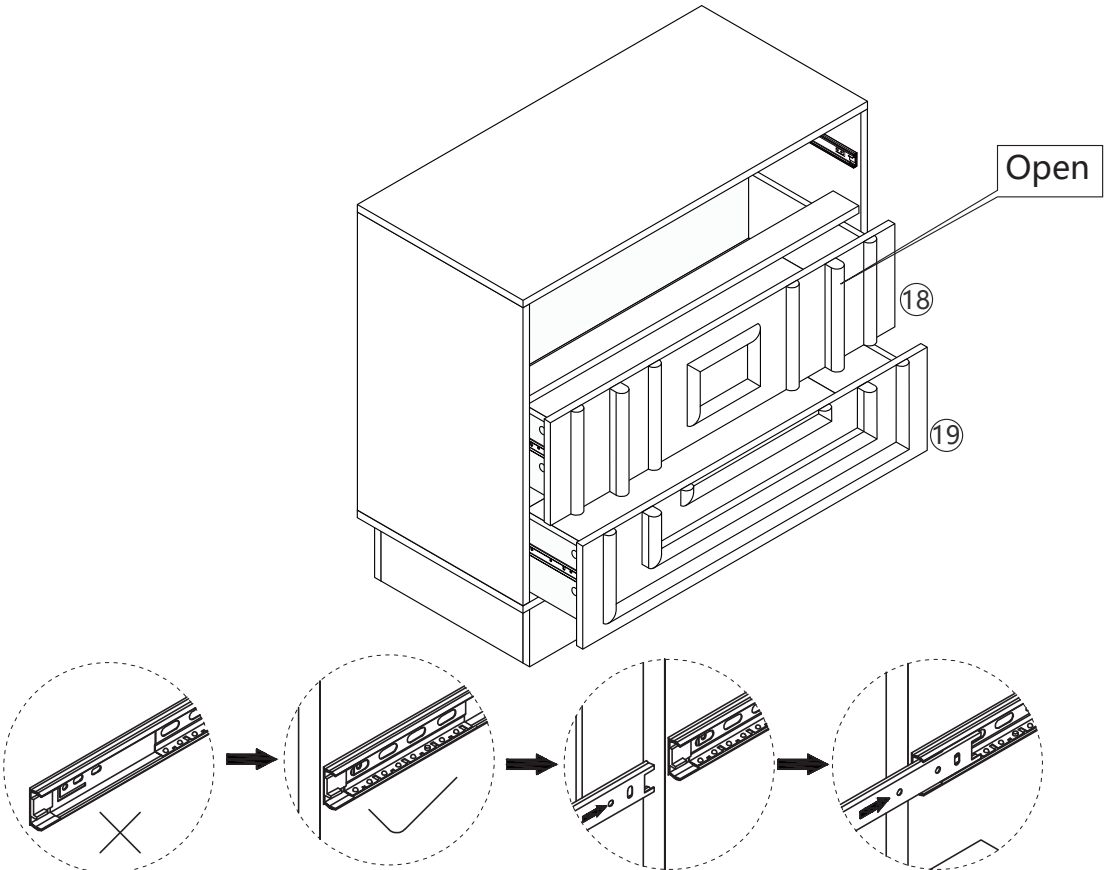
Step 15. Assemble drawer in the cabinet.



Step 16. Attach the plastic buckles and screws.

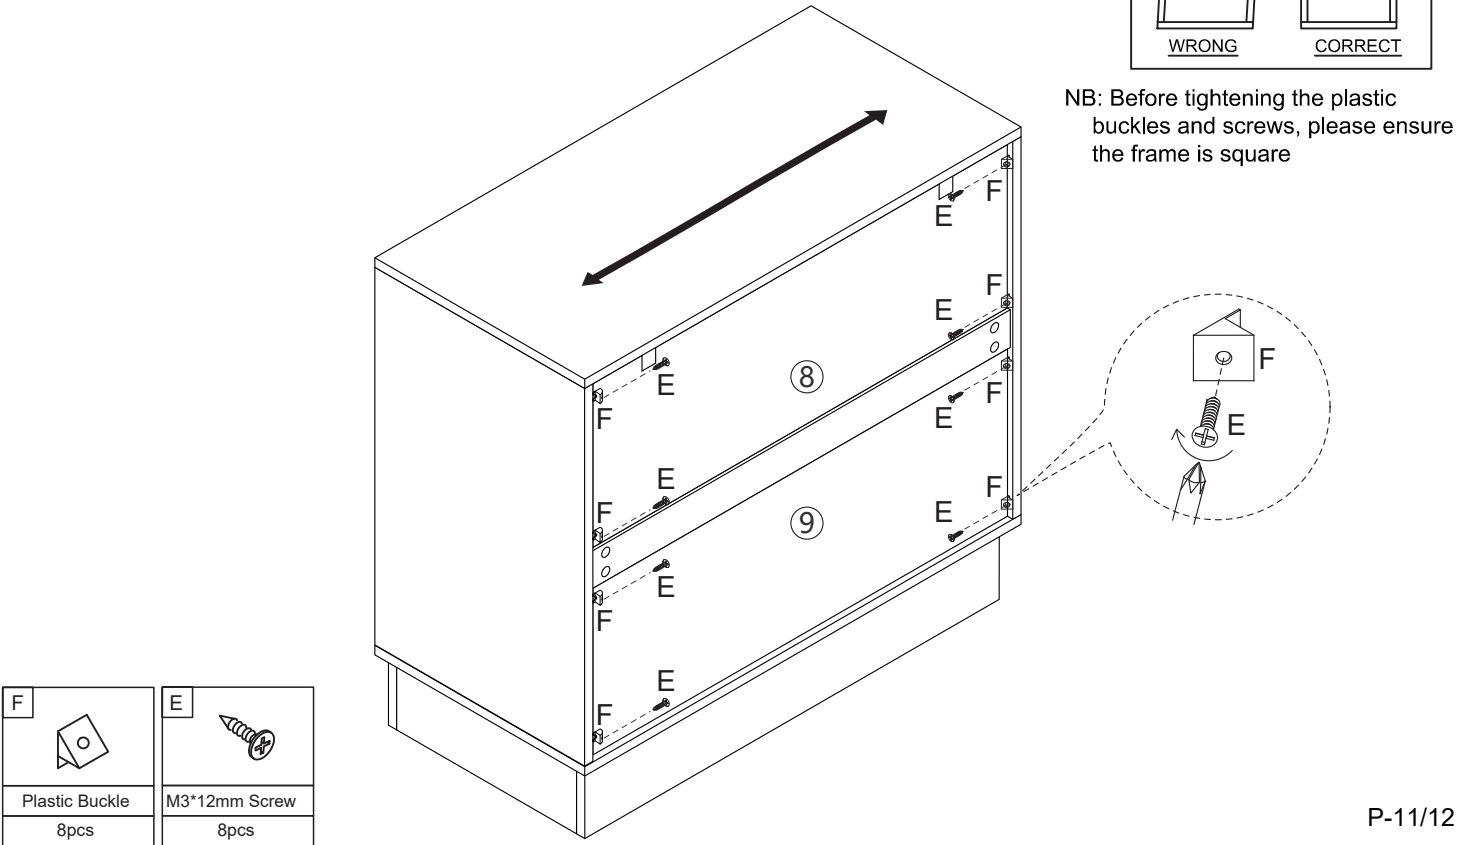

Step 17. Drill holes in the wall, insert expansion bolts, and then fix the furniture to the wall with screws.

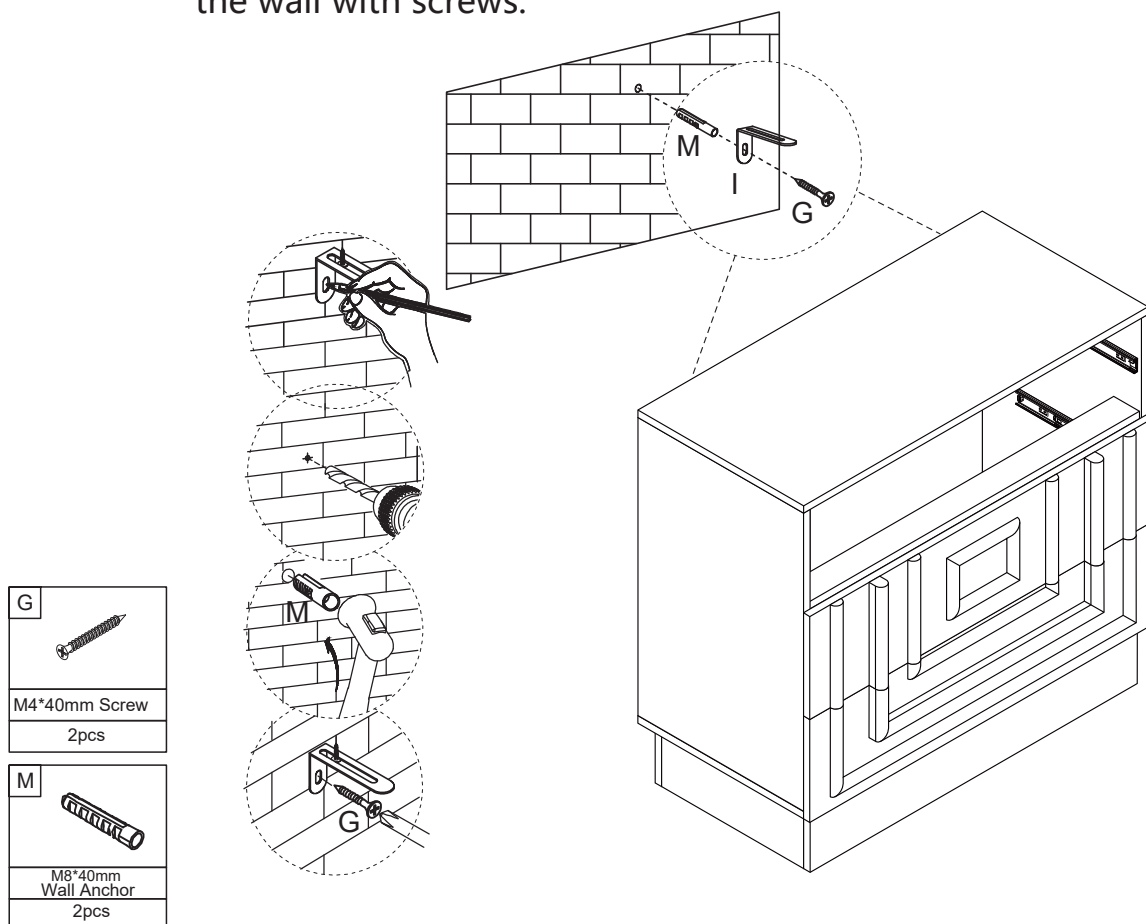

Step 18. Assemble drawer in the cabinet.

