

DUSK.COM

LIVING | BEDROOM | DINING



Range Name : Posy

Box1 Dimension : 107.5x63x13.5cm


Box2 Dimension : 193x68.5x15cm

Product Dimension : W95xD55xH183cm

Posy 2 Door Wardrobe

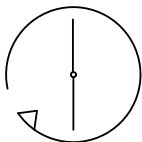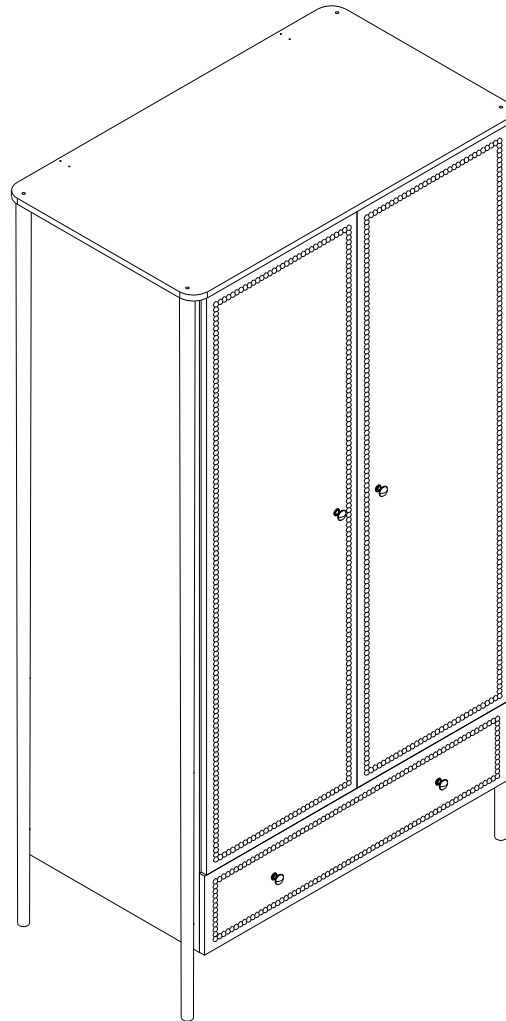

Up to 90 minutes
assembly time

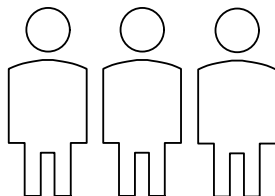

Three person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

P-1-20
v- 3.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Posy 2 Door Wardrobe frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Posy 2 Door Wardrobe in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Posy 2 Door Wardrobe when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

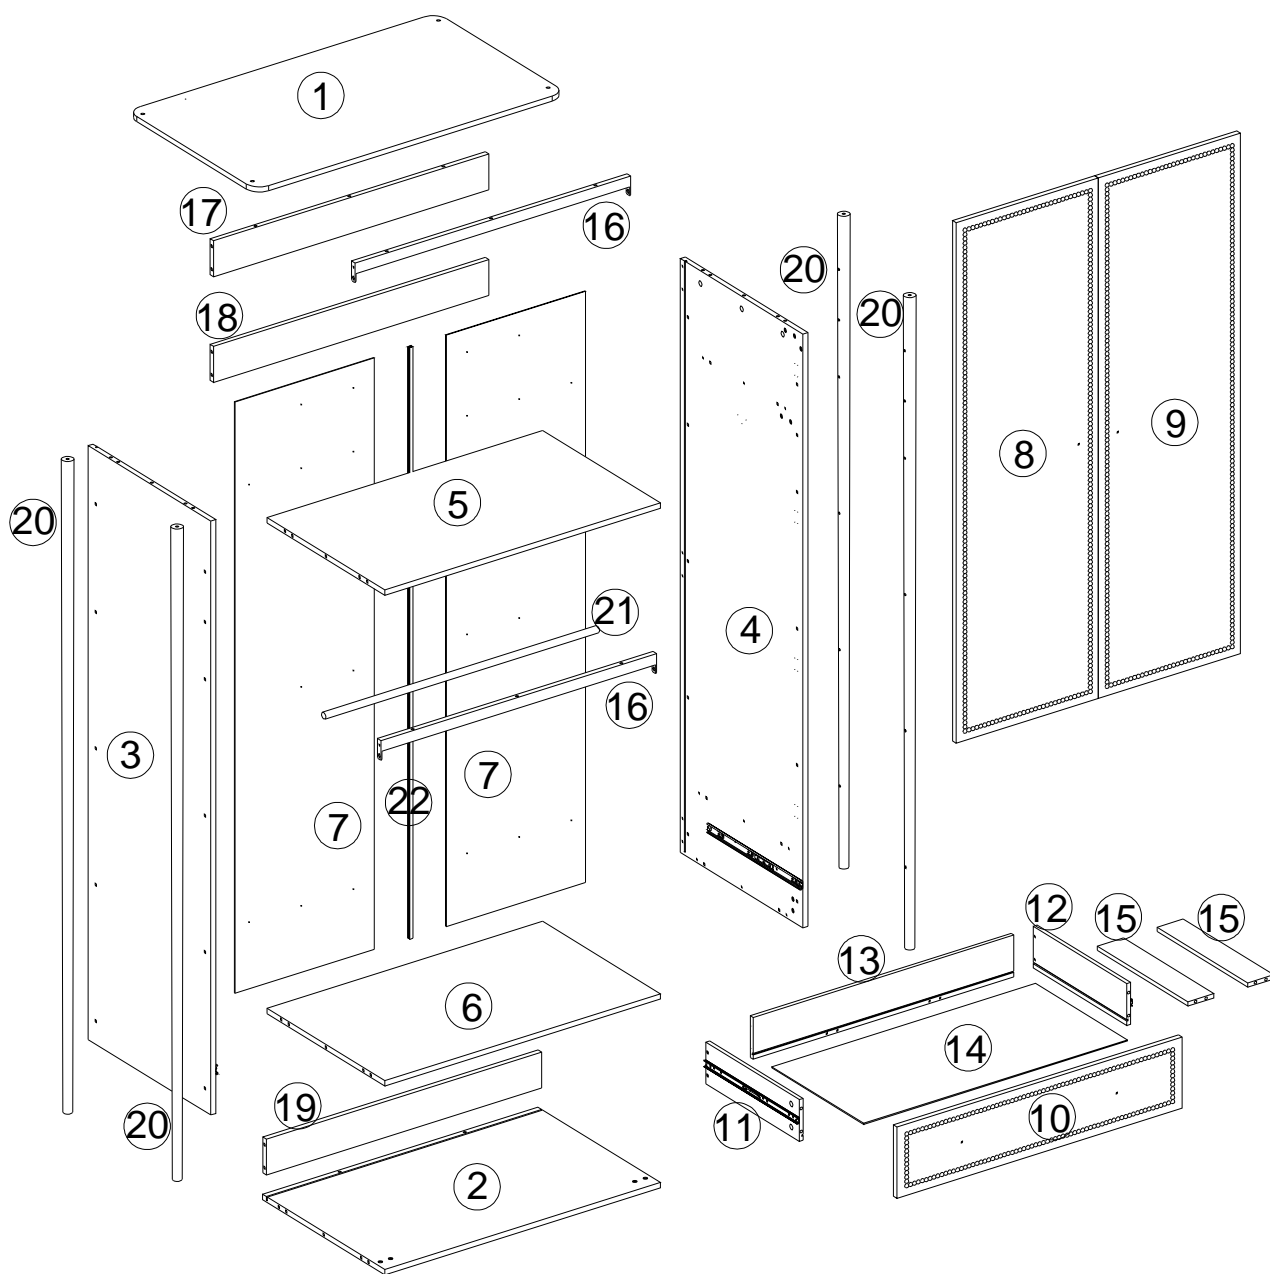

Parts list





























Before you begin building your Posy 2 Door Wardrobe , please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top Panel	1pc	Box 1
②	Bottom Panel	1pc	Box 1
③	Left Side Panel with Slide pre-assembled	1pc	Box 2
④	Right Side Panel with Slide pre-assembled	1pc	Box 2
⑤	Upper Shelf	1pc	Box 1
⑥	Lower Shelf	1 pc	Box 1
⑦	Back Panel	2pcs	Box 2
⑧	left door panel	1 pc	Box 2
⑨	Right door panel	1 pc	Box 2
⑩	Drawer Front	1 pc	Box 1
⑪	Drawer Left with Slide pre-assembled	1 pc	Box 1




Part Number	Part Description	Quantity	Box No
⑫	Drawer Right with Slide pre-assembled	1 pc	Box 1
⑬	Drawer Back	1 pc	Box 1
⑭	Drawer Bottom	1 pc	Box 1
⑮	Drawer Support	2pcs	Box 2
⑯	Connect Bar	2pcs	Box 1
⑰	Upper Support Bar	1 pc	Box 1
⑱	Middle Support Bar	1 pc	Box 1
⑲	Bottom Support Bar	1 pc	Box 1
⑳	Leg	4pcs	Box 2
㉑	Clothes Poles	1 pc	Box 1
㉒	Plastic Slot	1 pc	Box 2

Fittings



Please check you have all the fittings listed below with your product in box 2.

A  M6.3*45mm Bolt 47pcs+5pcs extra	B-1  16mm Washer 24pcs+3pcs extra	B-2  17mm Washer 4pcs	C  Ø8*30mm Dowel 16pcs+2pcs extra	D  Ø15*9mm Cam Lock 47pcs+5pcs extra
E  M4*35mm Screw 8pcs+1pc extra	F  M3.5*14mm Screw 48pcs+6pcs extra	G  M7*38mm Screw 2pcs	H  Handle 4pcs	J  Cover 10pcs+1pcs extra
K  M6*30mm Screw 22pcs+2pcs extra	M  M3*12mm Screw 6pcs	N  Straight Arm Hinge 8pcs	O-1  4mm Allen Key 1pc	O-2  5mm Allen Key 1pc
P-1  M6*12mm Screw 30pcs+4pcs extra	P-2  M6*40mm Screw 6pcs	Q  M5*35mm Screw 2pcs	R  8mm Wall Plug 2pcs	S  Wall Bracket 2pcs
T  M4*14mm Screw 24pcs+3pcs extra	U  M4*18mm Screw 4pcs	V  Clothes Pole Holder 2pcs	W-1  Metal Support Sheet 2pcs	W-2  Metal Support Sheet 4pcs
X  M8*40mm Screw 4pcs	Y Pre-assembled Slide  Slide 1pc	Z Pre-assembled Screw  M3.5*12mm Screw 8pcs		


Pre-assembled Fittings



Y-1  Slide 1pc	Y-2  Slide 1pc	Z  M3.5*12mm Screw 8pcs
---	---	--

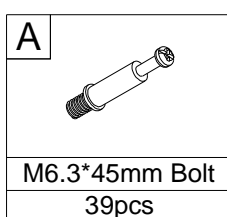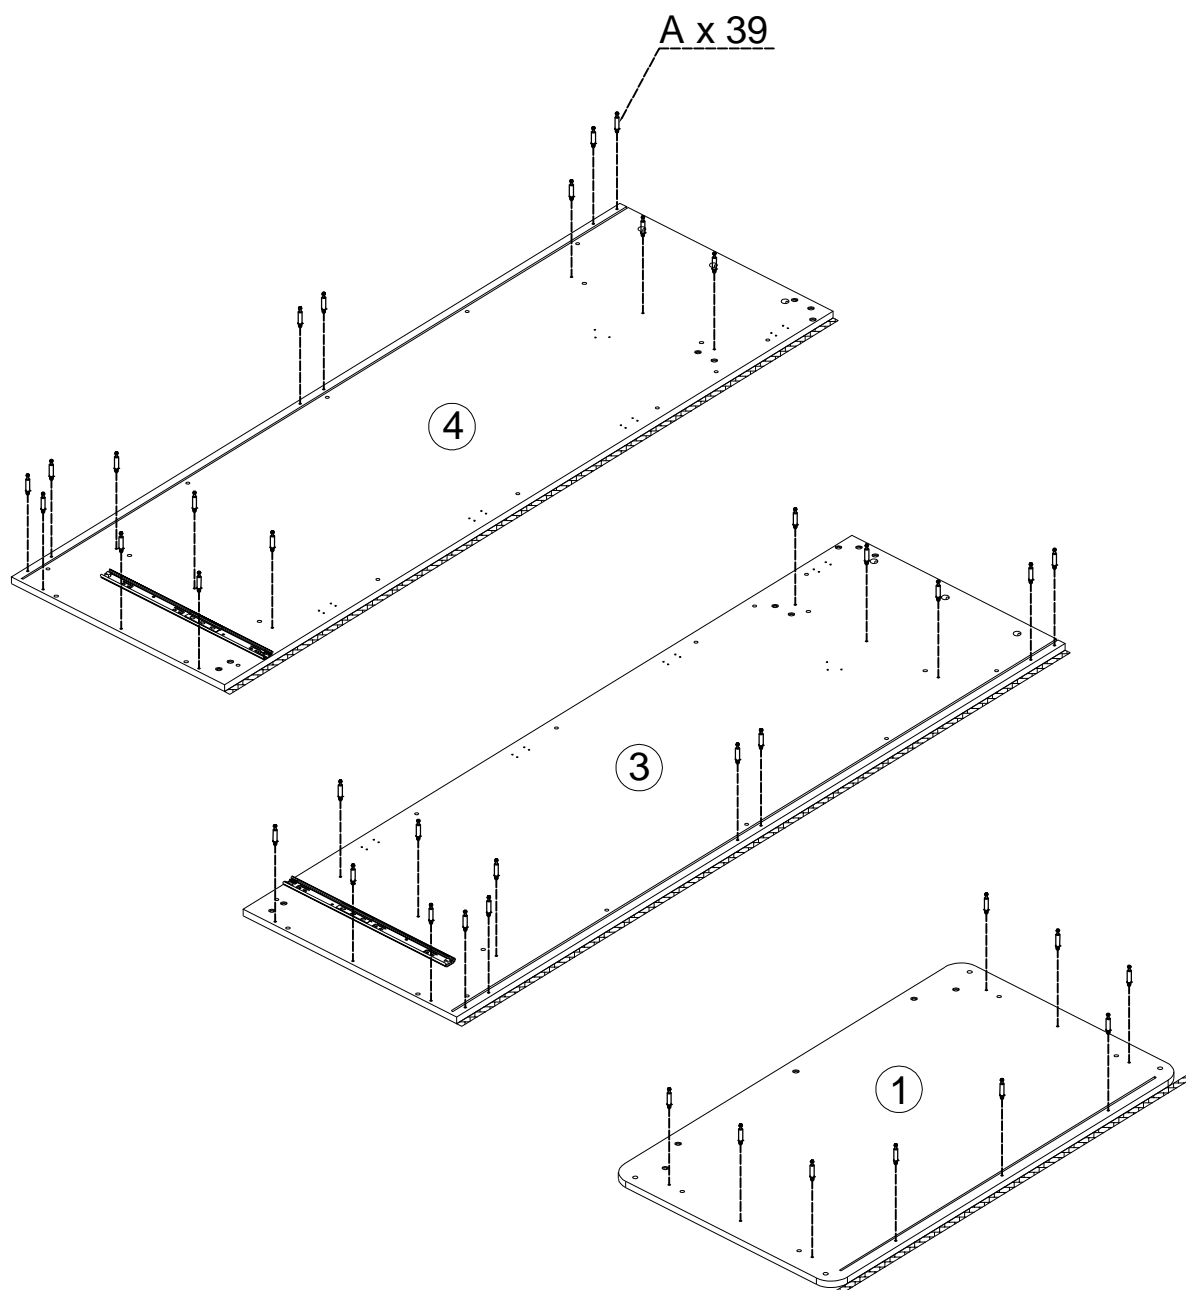1. Assemble all panels on EPS foam or carpet to prevent surface scratches.

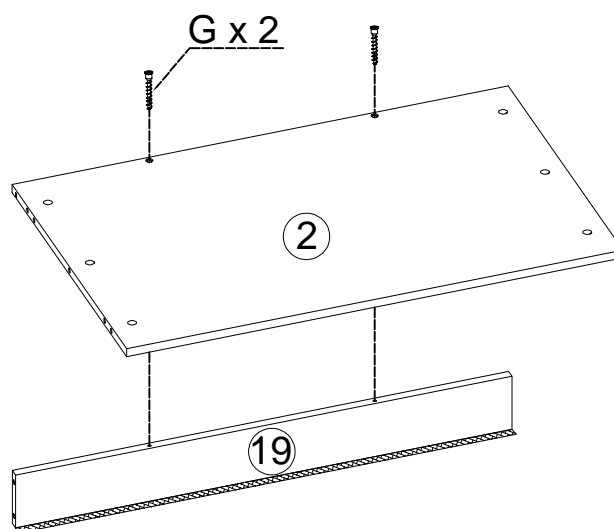




2.




G 	O-1 
M7*38mm Screw 2pcs	4mm Allen Key 1pc



3.

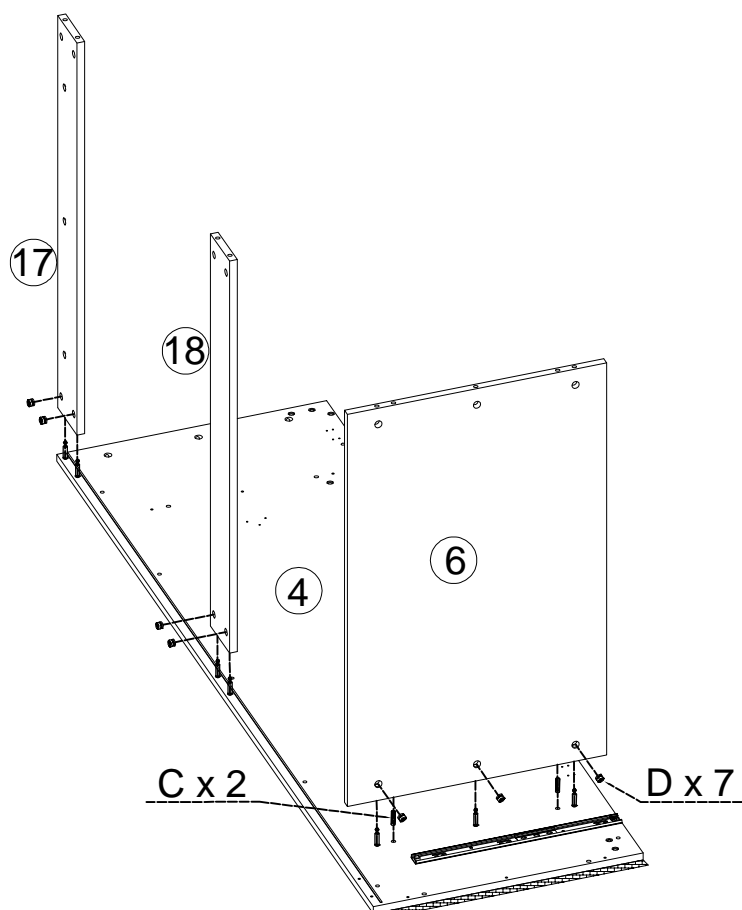


D 	C 
Ø15*9mm Lock 7pcs	Ø8*30mm Dowel 2pcs

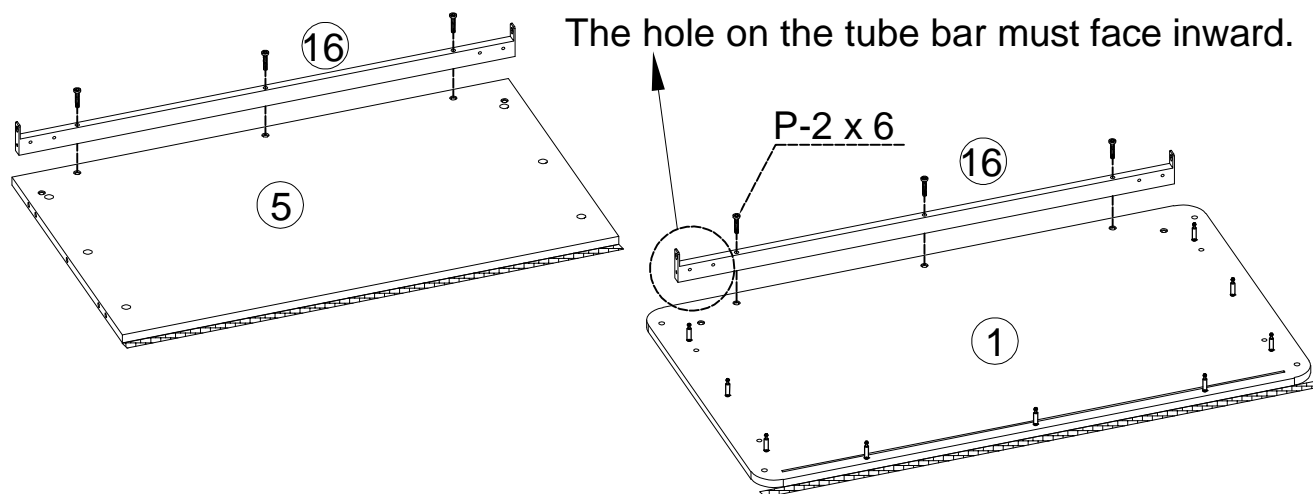

4.



P-2	O-1
	
M6*40mm Screw 6pcs	4mm Allen Key 1pc

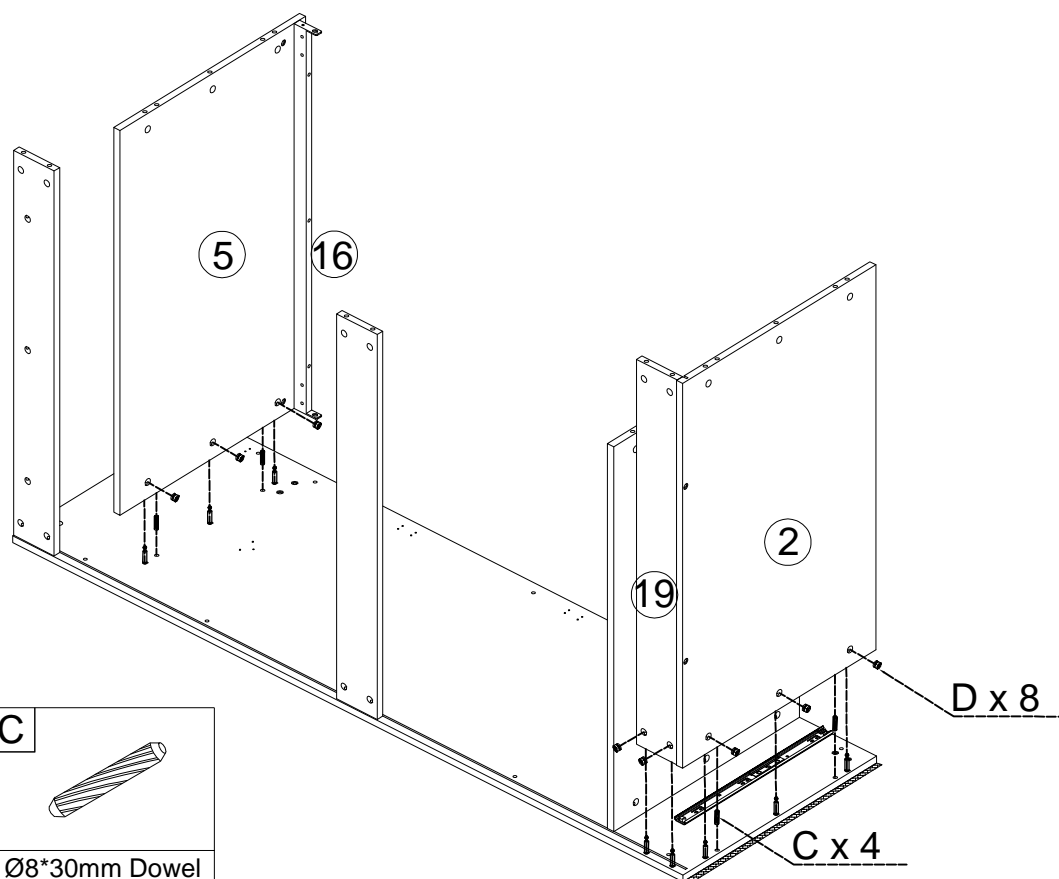
5.





D	C
	
Ø15*9mm Lock 8pcs	Ø8*30mm Dowel 4pcs

P-8-20
v-3.0

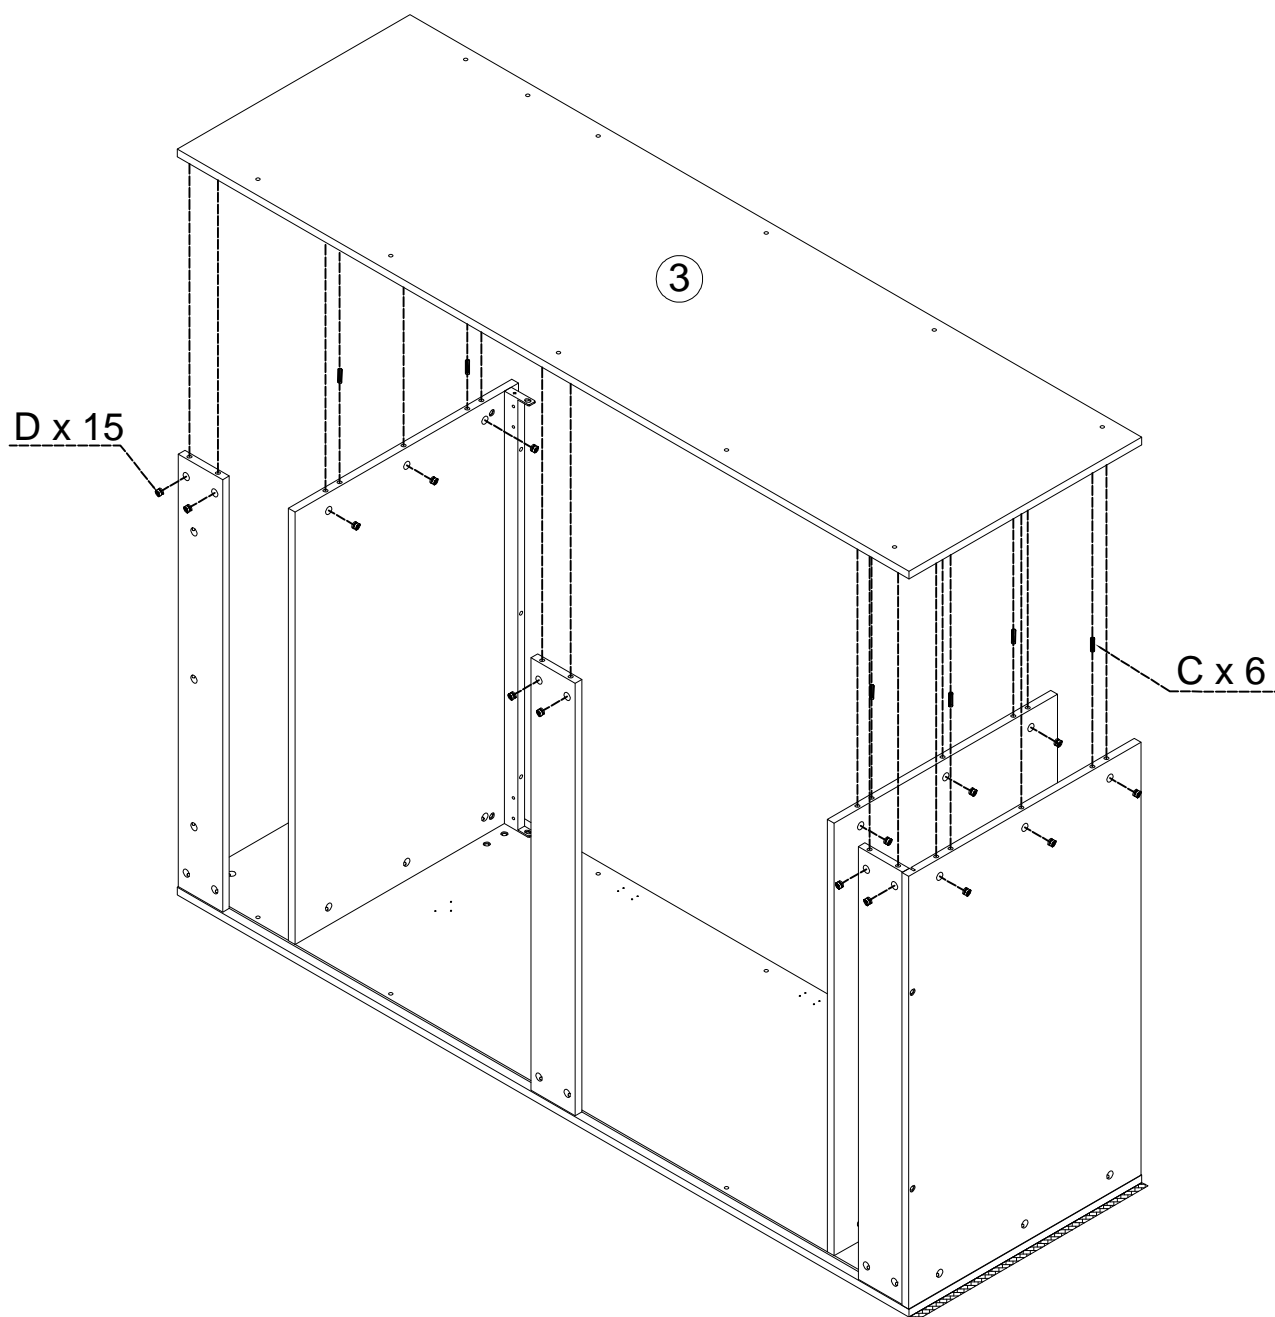
6. Assemble all panels on EPS foam or carpet to prevent surface scratches.






D		C	
Ø15*9mm Lock		Ø8*30mm Dowel	
15pcs		6pcs	


7.

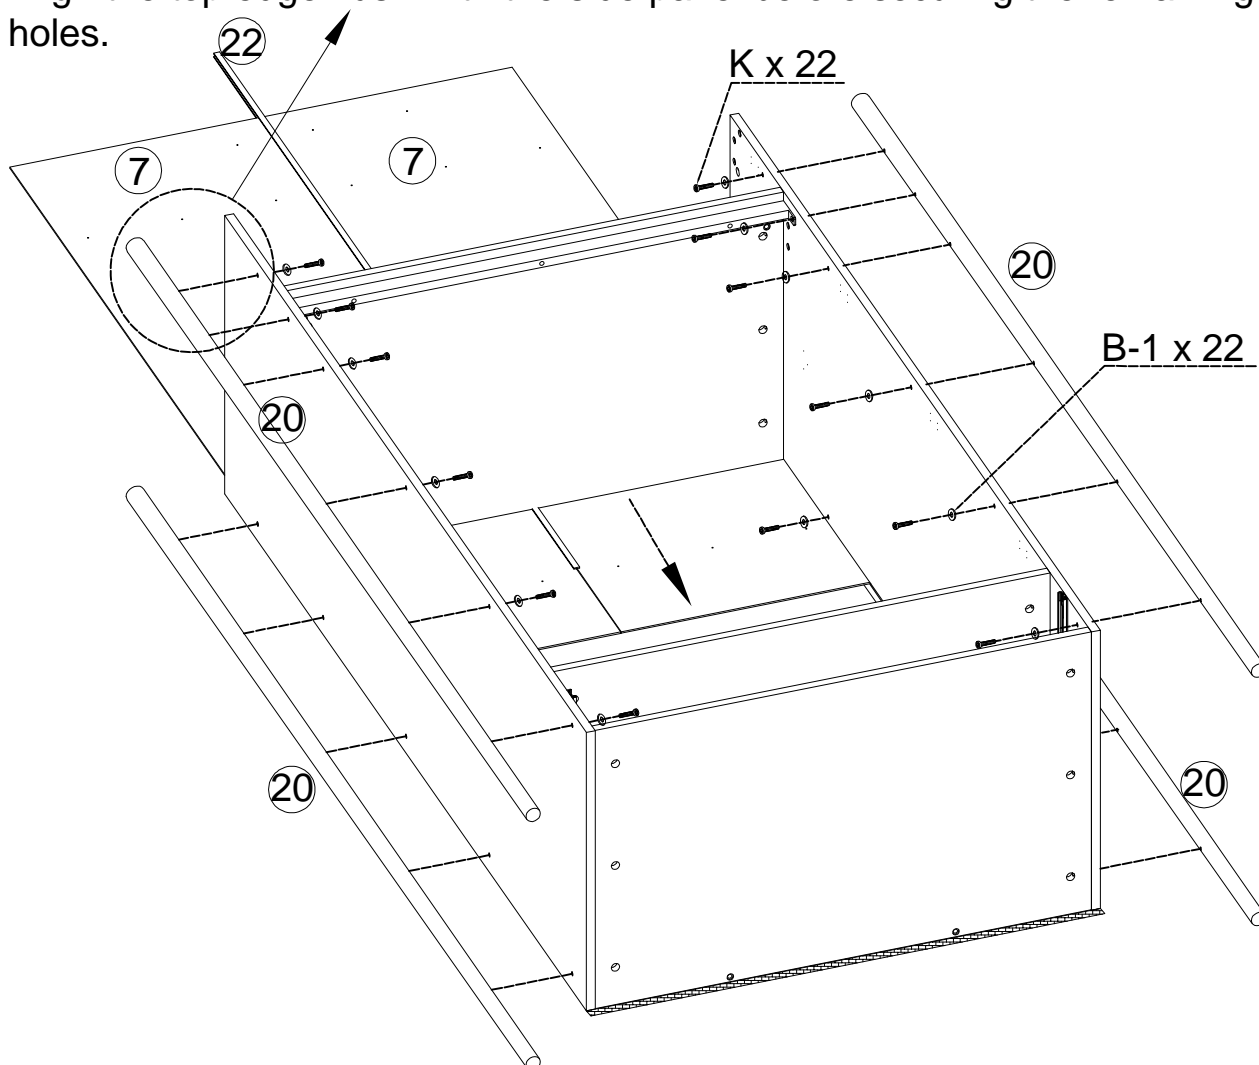
Align the top edge flush with the side panel before securing the remaining holes.








B-1	K	O-1
		
16mm Washer 22pcs	M6*30mm Screw 22pcs	4mm Allen Key 1pc

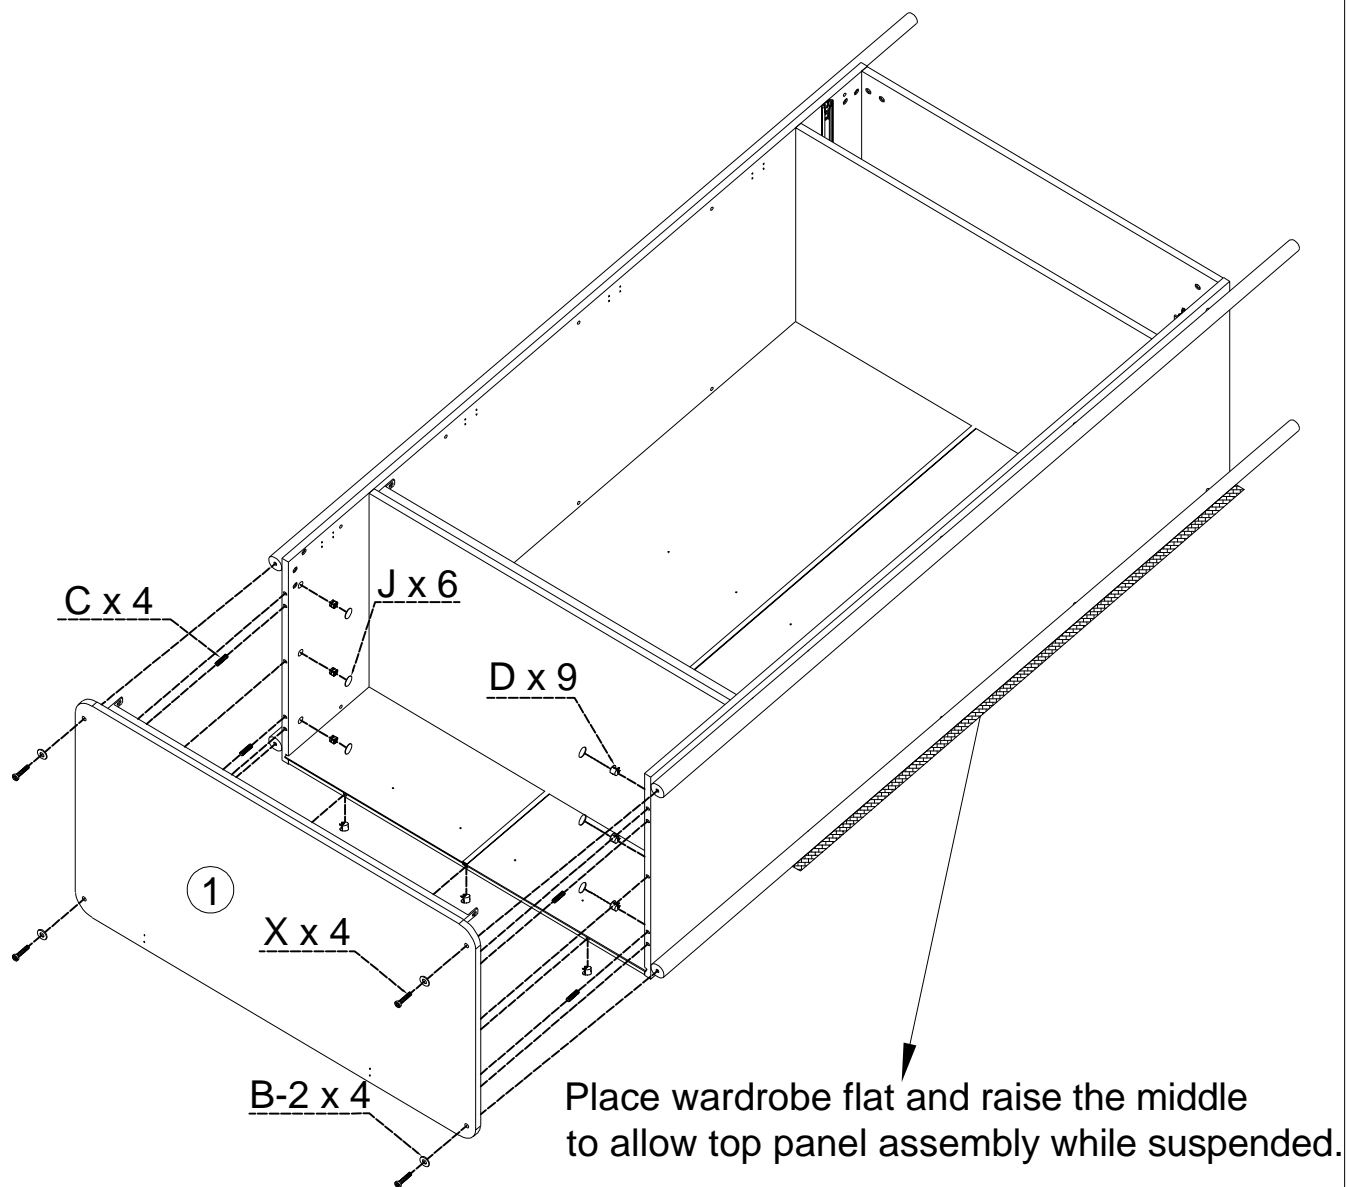
8. Assemble all panels on EPS foam or carpet to prevent surface scratches.








B-2

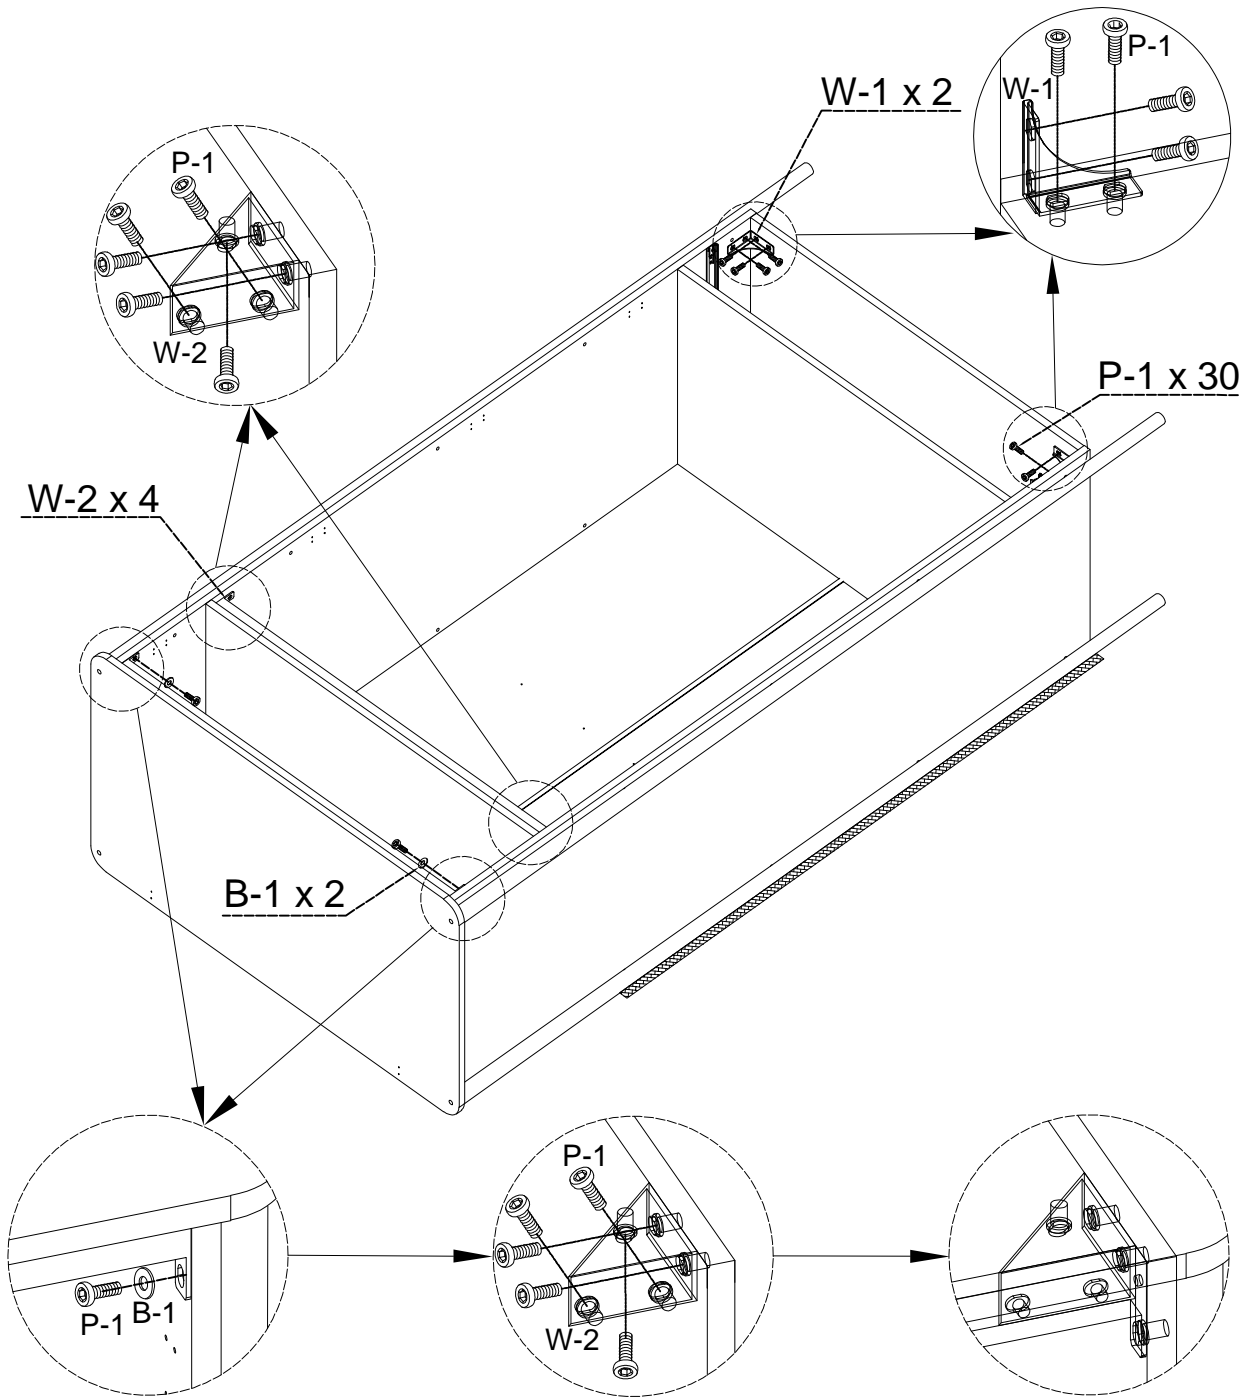17mm Washer 4pcs

C	D	J	X	O-2
				
Ø8*30mm Dowel 4pcs	Ø15*9mm Lock 9pcs	Cover 6pcs	M8*40mm Screw 4pcs	5mm Allen Key 1pc


9.







B-1	P-1	O-1	W-1	W-2
				
16mm Washer	M6*12mm Screw	4mm Allen Key	Metal Support Sheet	Metal Support Sheet
2pcs	30pcs	1pc	2pcs	4pcs

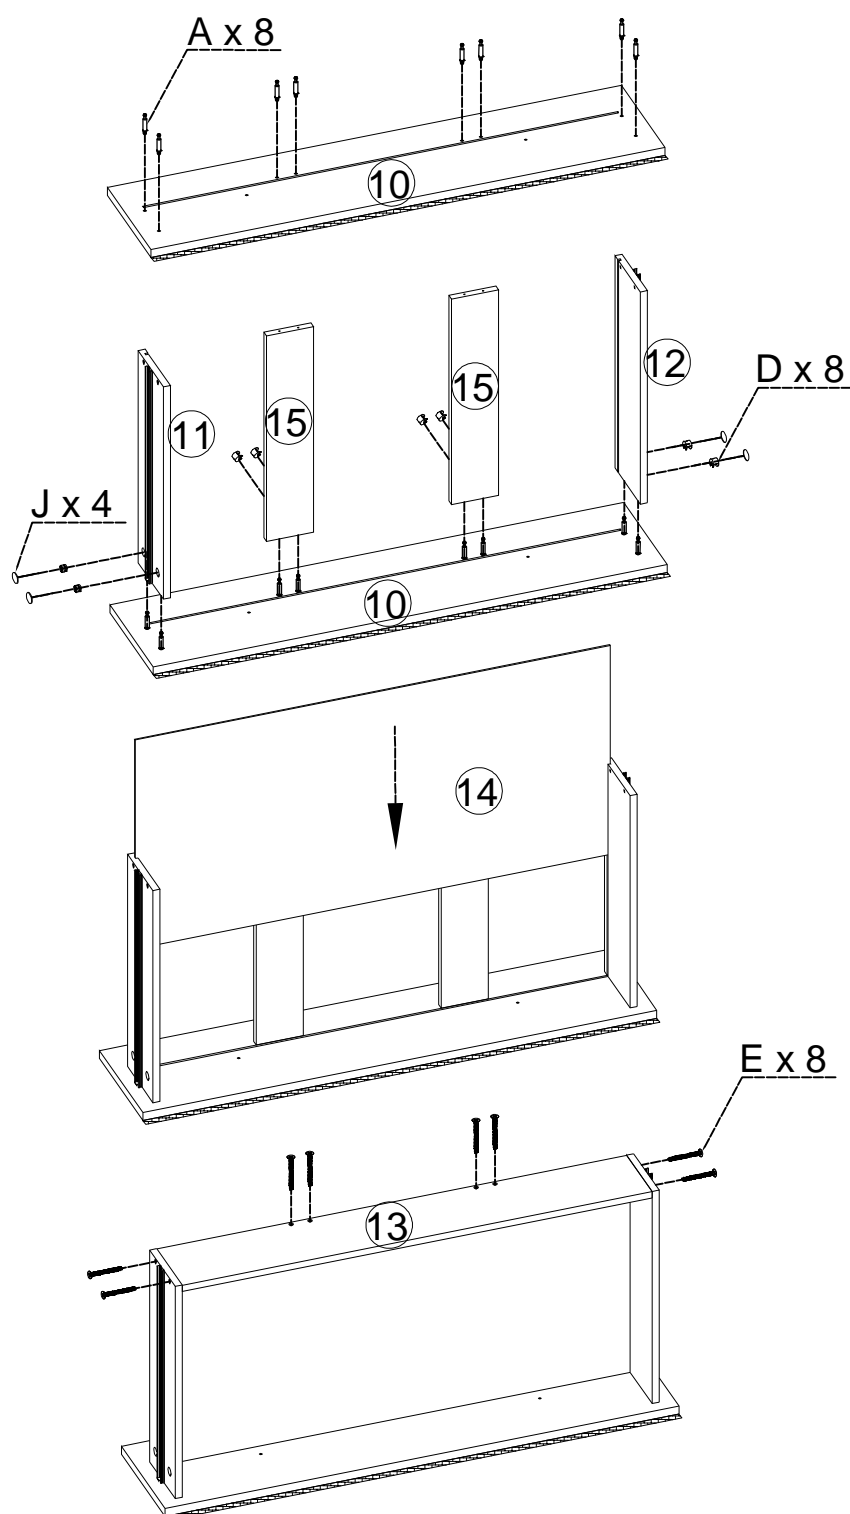

P-12-20
v-3.0


10.






A	D	E	J
			
M6.3*45mm Bolt 8pcs	Ø15*9mm Lock 8pcs	M4*35mm Screw 8pcs	Cover 4pcs

11.


H	U
	
Handle 2pcs	M4*18mm Screw 2pcs

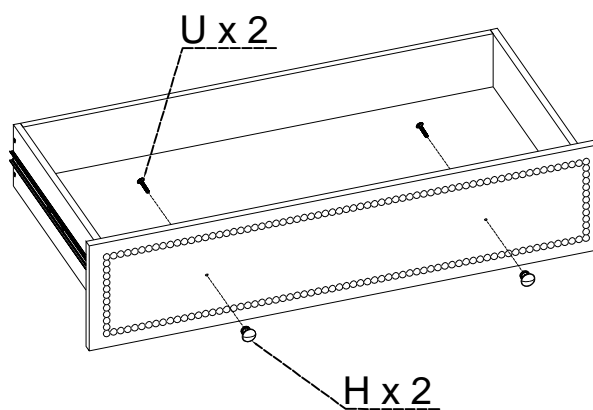


12.

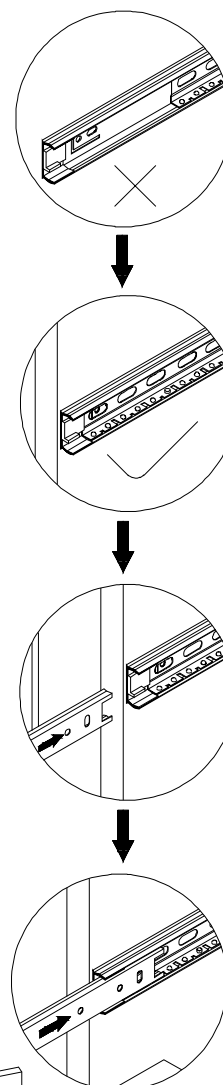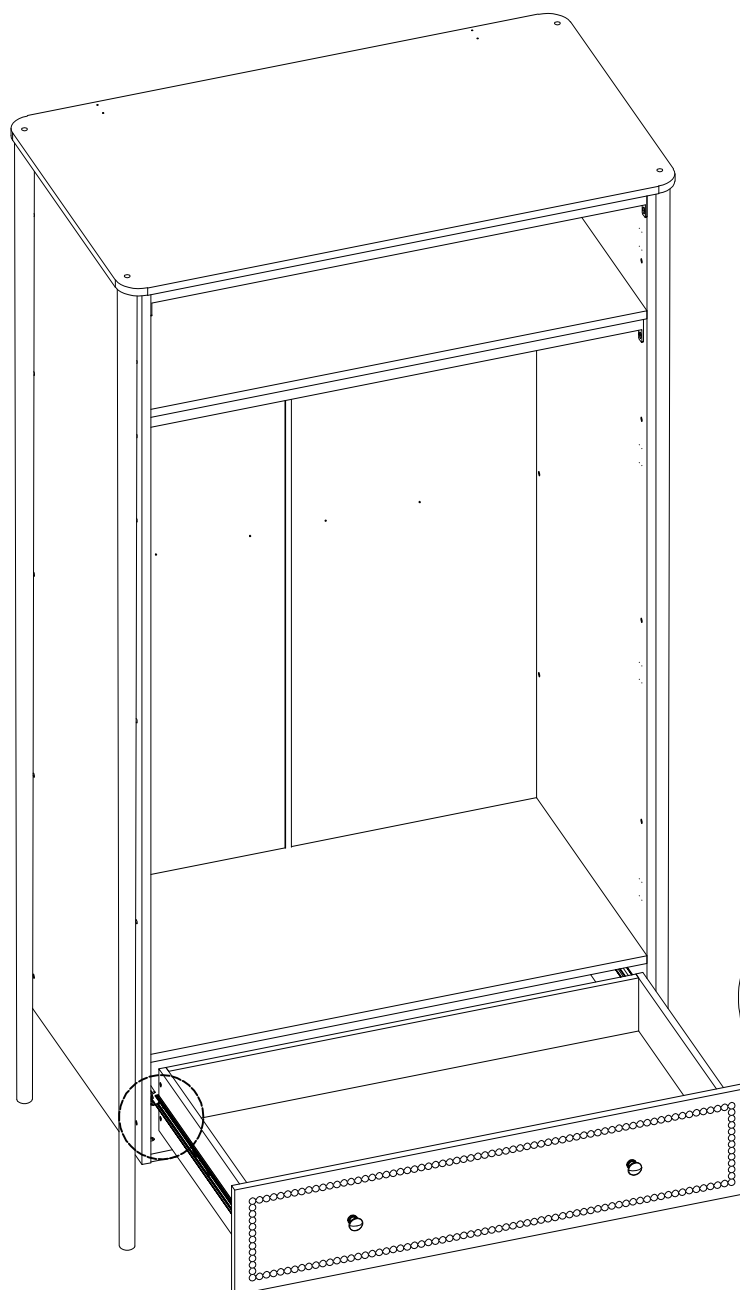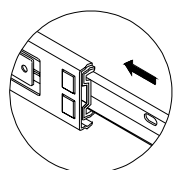



13.

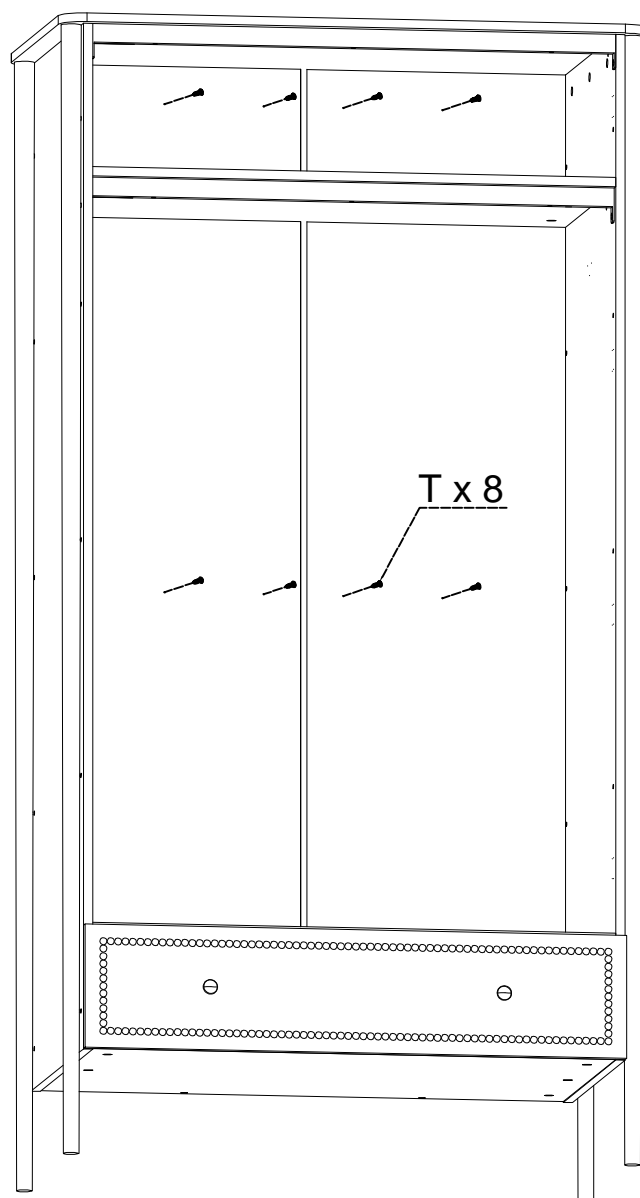



T

M4*14mm Screw
8pcs

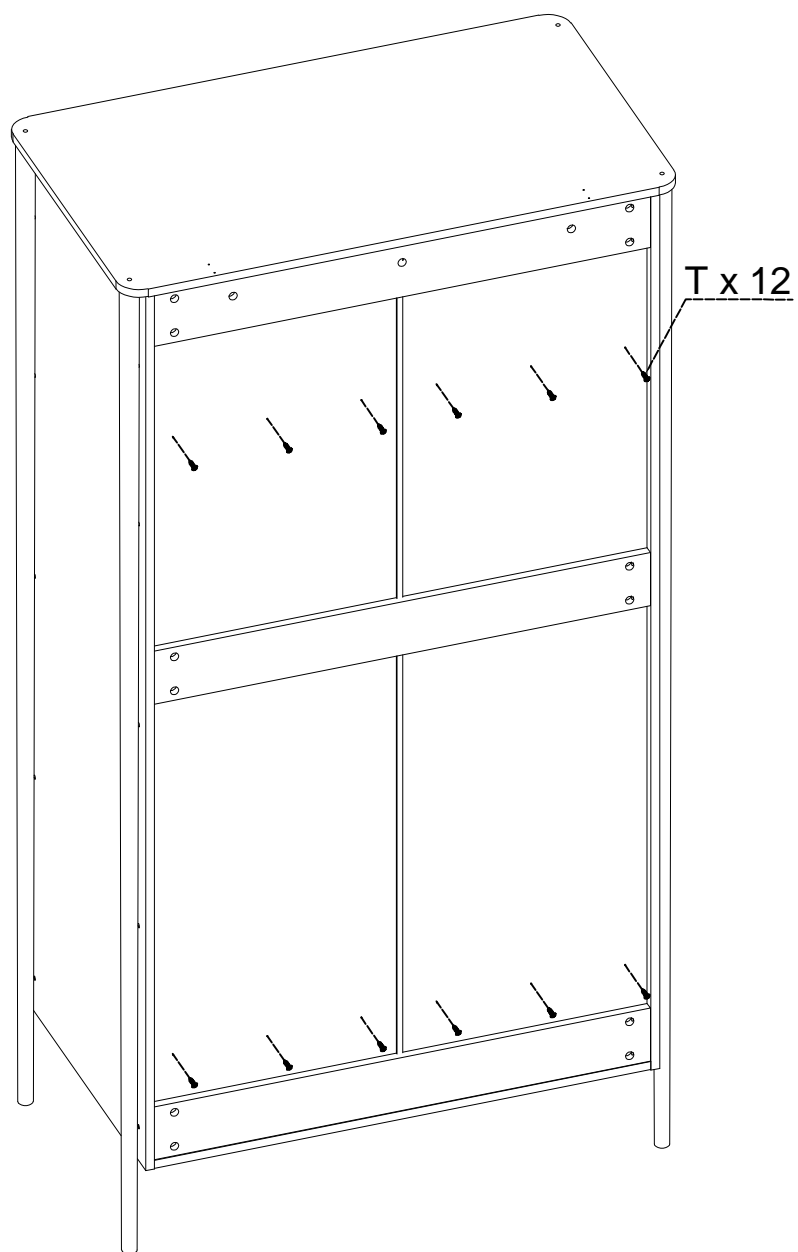
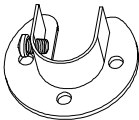
14.




T

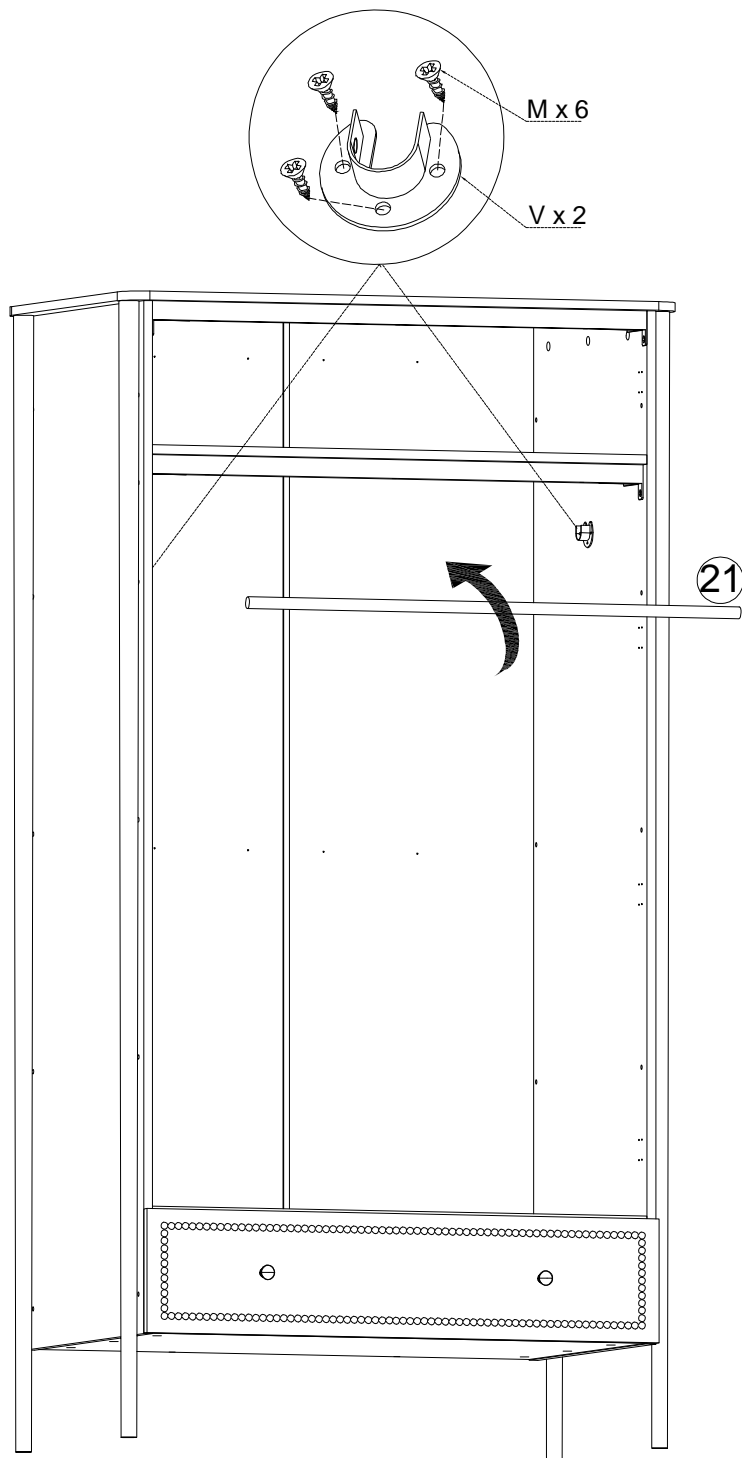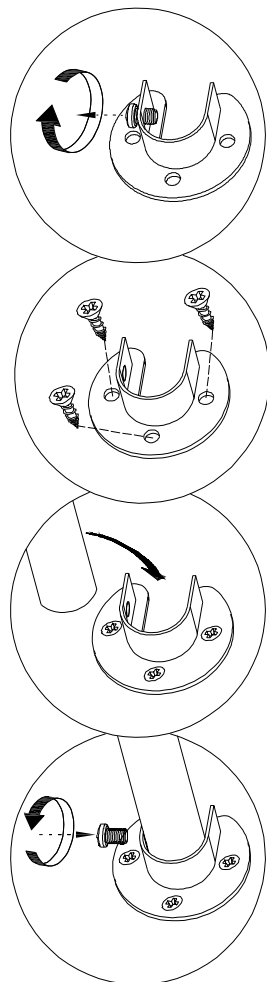M4*14mm Screw
12pcs



15.

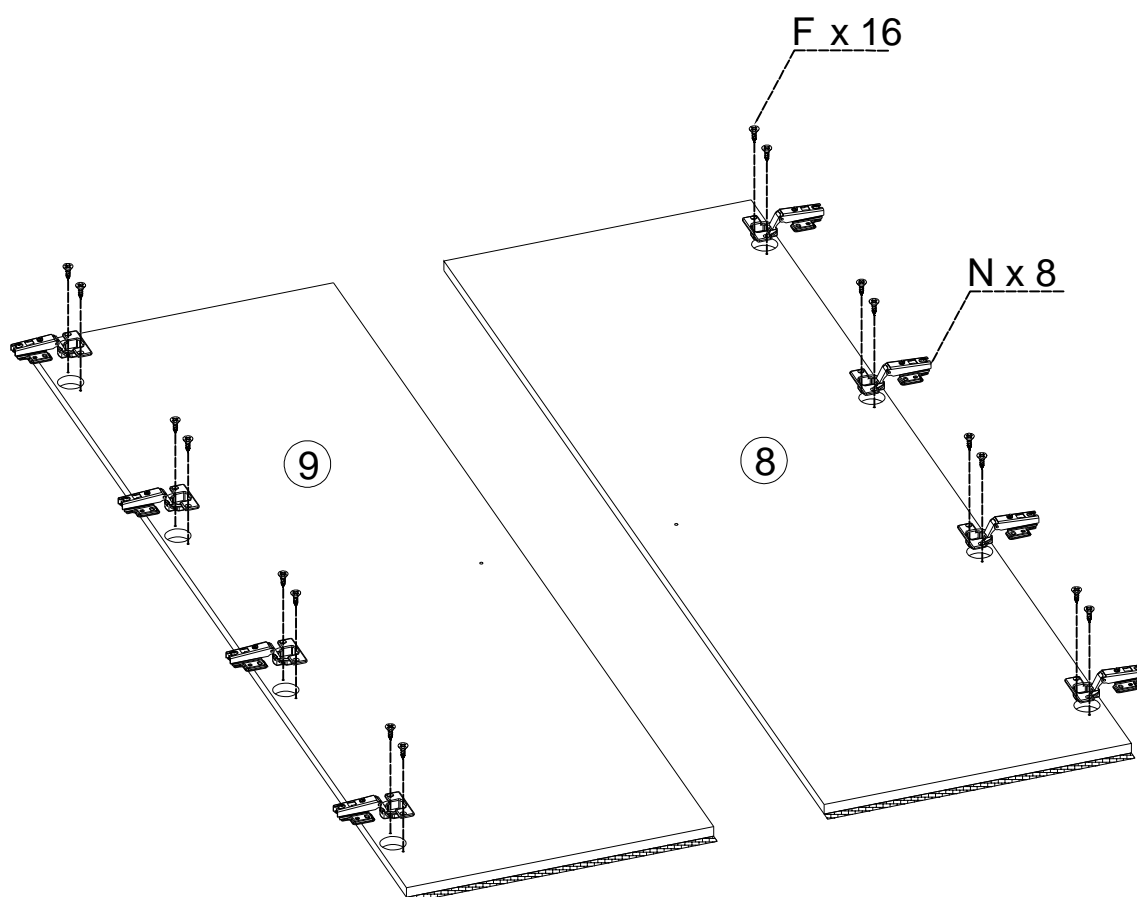



M	V
	
M3.0*12mm Screw	Clothes Pole Holder
6pcs	2pcs




16. Assemble all panels on EPS foam or carpet to prevent surface scratches.





F	N
	
M3.5*14mm Screw 16pcs	Straight Arm Hinge 8pcs

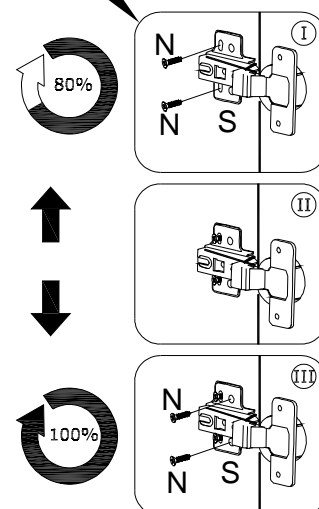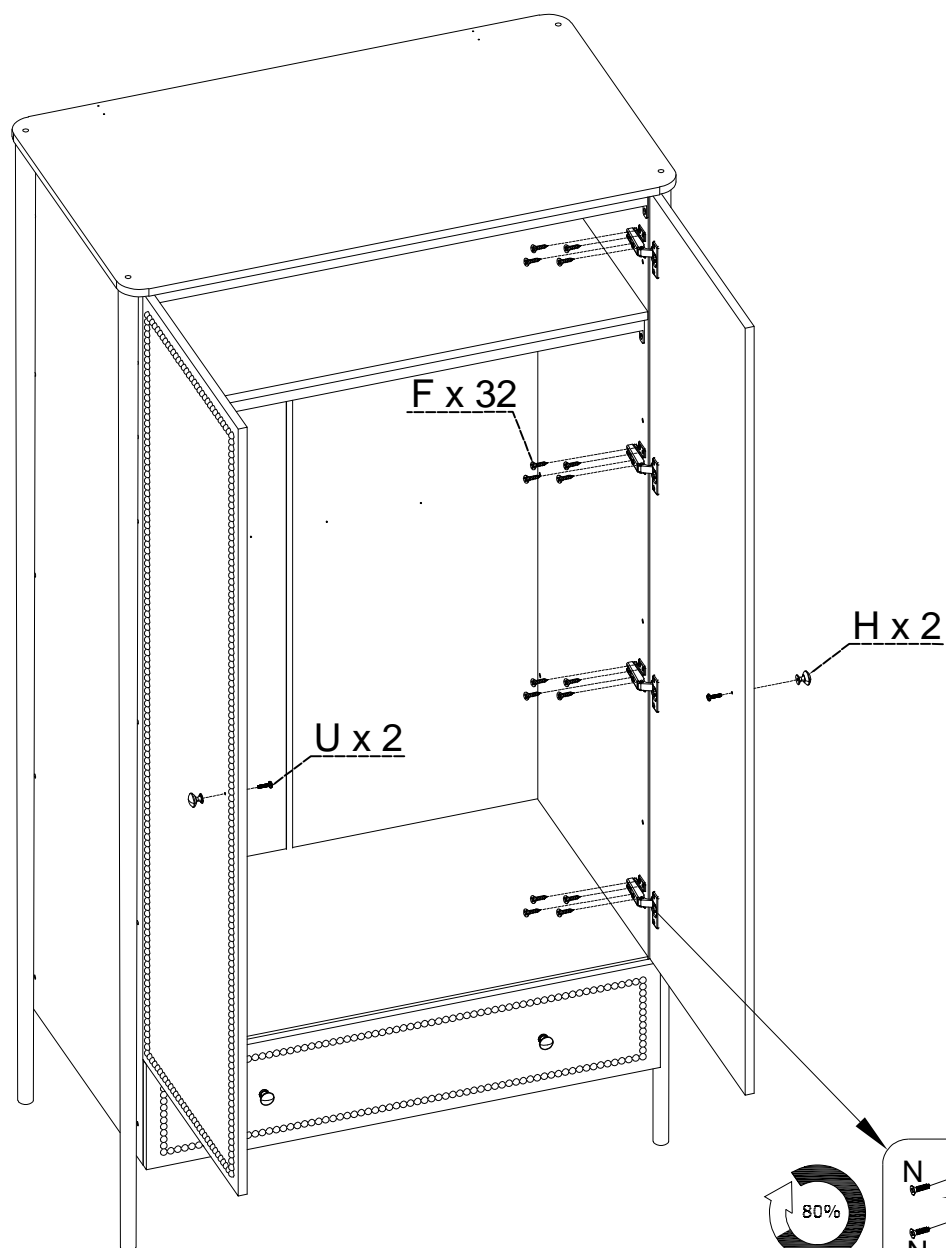



17.



F	H	U
		
M3.5*14mm Screw 32pcs	Handle 2pcs	M4*18mm Screw 2pcs

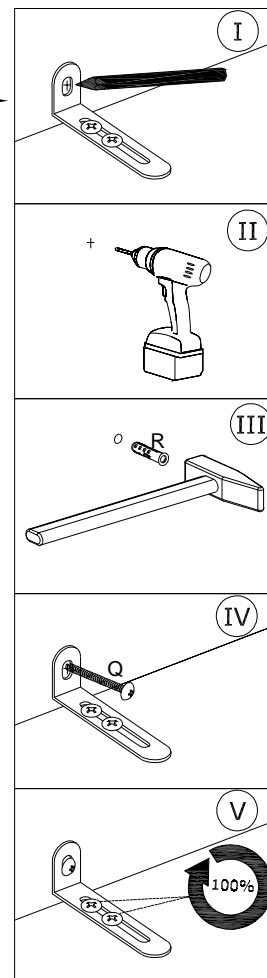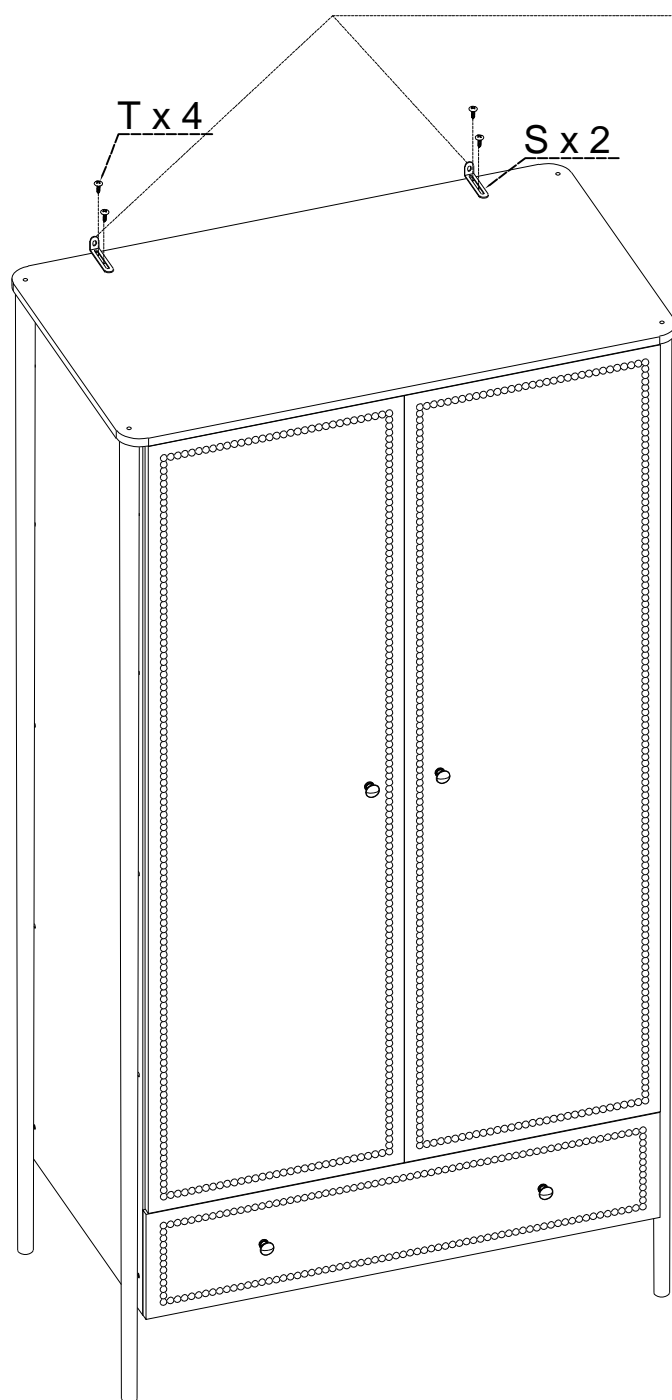18.



T	S	Q	R
			
M4*14mm Screw 4pcs	Wall Bracket 2pcs	M5*35mm Screw 2pcs	8mm Wall Plug 2pcs