

DUSK.COM

LIVING | BEDROOM | DINING



Range Name : Posy

Box 1 Dimensions : W191xD58xH18cm


Box 2 Dimensions : W175xD63xH15cm

Product Dimension : W140xD55xH180cm

Posy Bobbin 3 Door Wardrobe

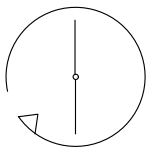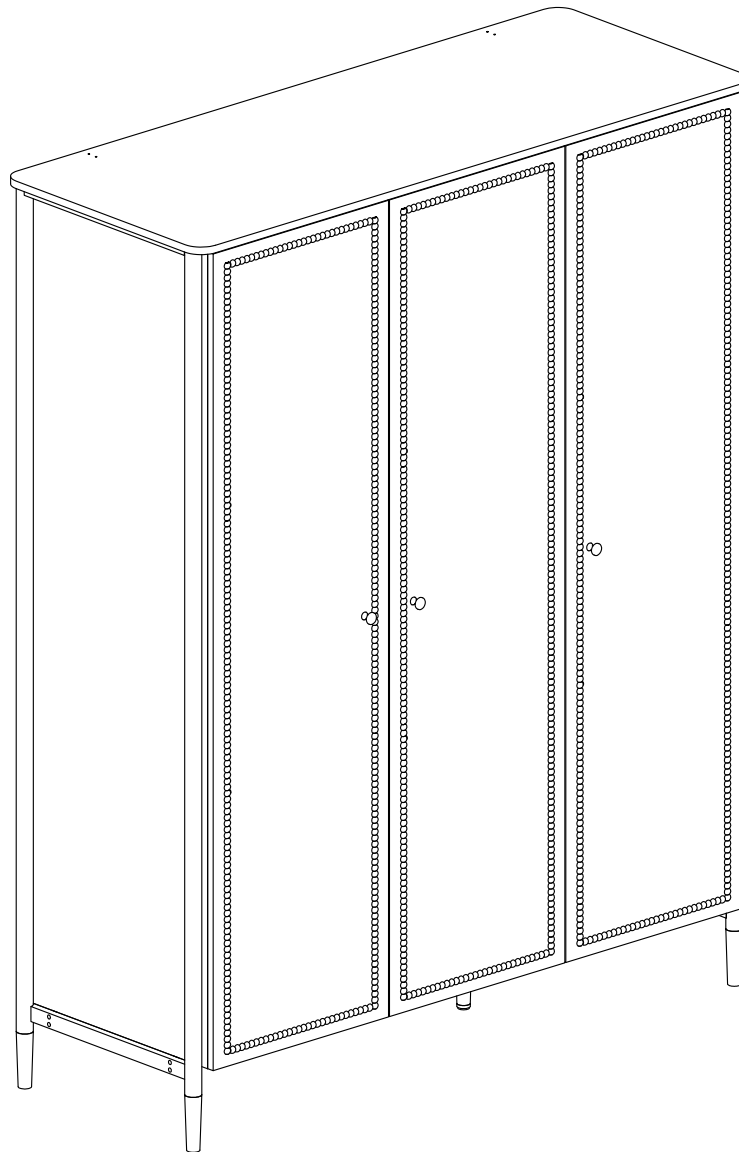

Up to 90 minutes
assembly time

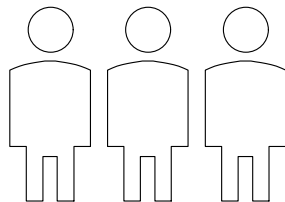

Three person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

P-1-26
V-1.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Posy Bobbin 3 Door Wardrobe frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Posy Bobbin 3 Door Wardrobe in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Posy Bobbin 3 Door Wardrobe when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

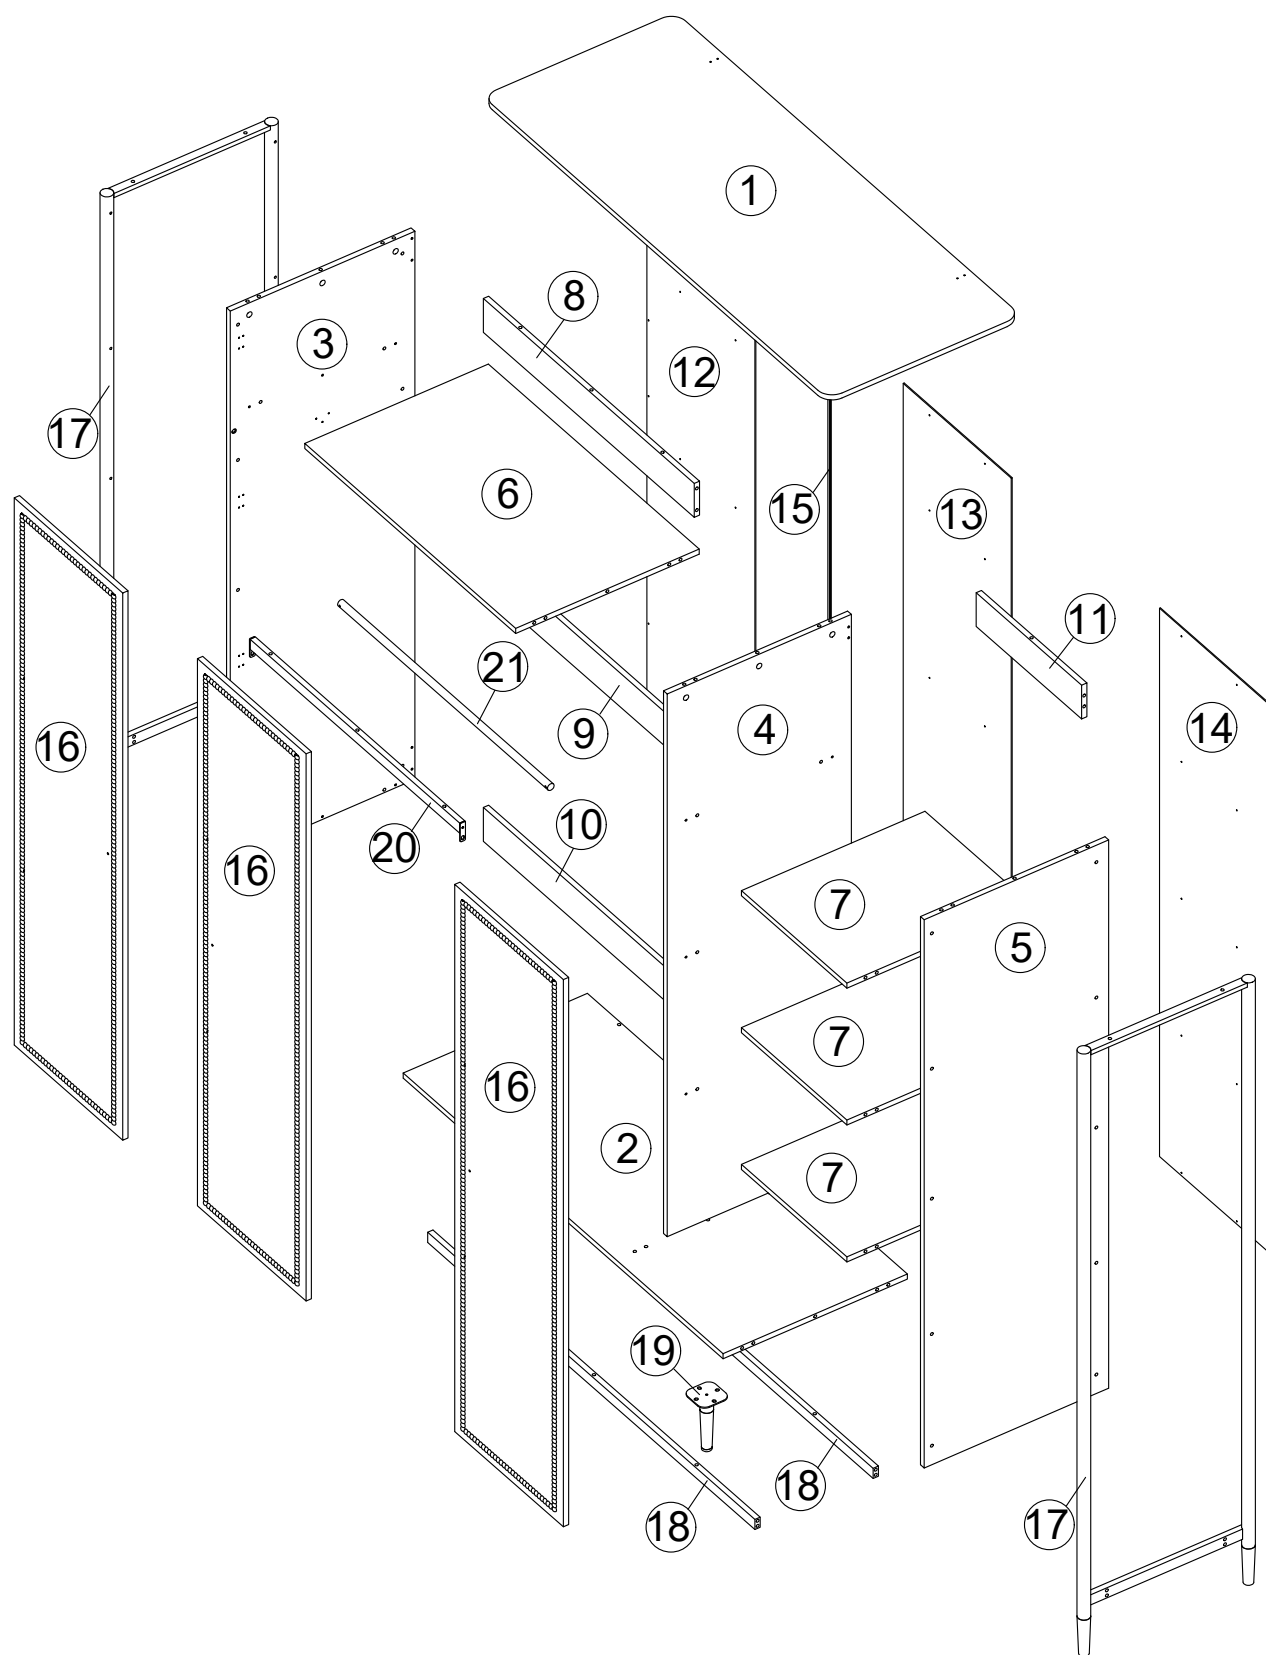

Parts list


Before you begin building your Posy Bobbin 3 Door Wardrobe , please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top Panel	1pc	Box 2
②	Bottom Panel	1pc	Box 2
③	Left Side Panel	1pc	Box 2
④	Middle Panel	1pc	Box 2
⑤	Right Side Panel	1pc	Box 2
⑥	Shelf	1pc	Box 2
⑦	Shelf	3pcs	Box 2
⑧	Upper Support Bar	1pc	Box 1
⑨	Centre Support Bar	1pc	Box 1
⑩	Bottom Support Bar	1pc	Box 1
⑪	Upper Support Bar	1pc	Box 1

Part Number	Part Description	Quantity	Box No
⑫	Back Panel	1pc	Box 1
⑬	Back Panel	1pc	Box 1
⑭	Back Panel	1pc	Box 1
⑮	Plastic Slot	1pc	Box 1
⑯	Door Panel	3pcs	Box 1
⑰	Leg	2pcs	Box 1
⑱	Centre Support	2pcs	Box 1
⑲	Middle Leg	1pc	Box 1
⑳	Connect Bar	1pc	Box 1
㉑	Clothes Poles	1pc	Box 1

Fittings

Please check you have all the fittings listed below with your product in box 1.

A

M6.3*45mm Bolt
53pcs+6pcs extra

B

Ø15*9mm Cam Lock
53pcs+6pcs extra

C

Ø8x30mm Dowel
28pcs+3pcs extra

D

M7*48mm Screw
6pcs

E

M6*12mm Screw
6pcs

F

M6*22mm Screw
4pcs

G

M6*30mm Screw
20pcs+2pcs extra

H

M6*40mm Screw
17pcs+2pcs extra

I

Adjustable Feet
1pc

J

M4*18mm Screw
3pcs

K

M3.0*12mm Screw
6pcs

L

M3.5*14mm Screw
72pcs+9pcs extra

M

M4*14mm Screw
57pcs+7pcs extra

N

Ø16 Washer
20pcs+2pcs extra

O

M8*35mm Wall Plug
2pcs

P

M5*35mm Screw
2pcs

Q

4mm Allen Key
1pc

R

Cover
9pcs+1pc extra

S


Handle
3pcs

T

Wall Bracket
2pcs


U


Clothes Pole Holder
2pcs

V

Bend Hinge
12pcs

1. Assemble all panels on EPS foam or carpet to prevent surface scratches.

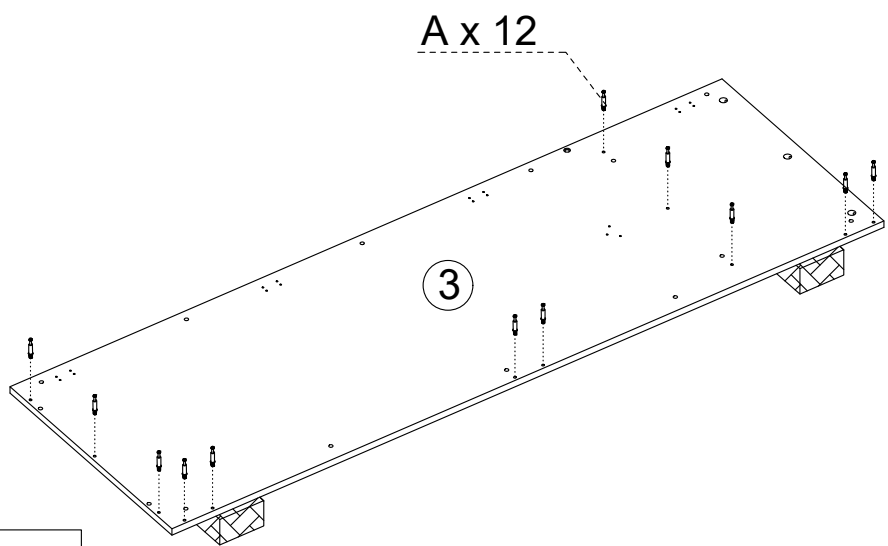


A	
M6.3*45mm Bolt	
12pcs	

Use the long EPS foam spacer plate No.3 from box 2 for leveling until the cabinet assembly is completed.






2.

H	
M6*40mm Screw	
3pcs	



Q	
4mm Allen Key	
1pc	

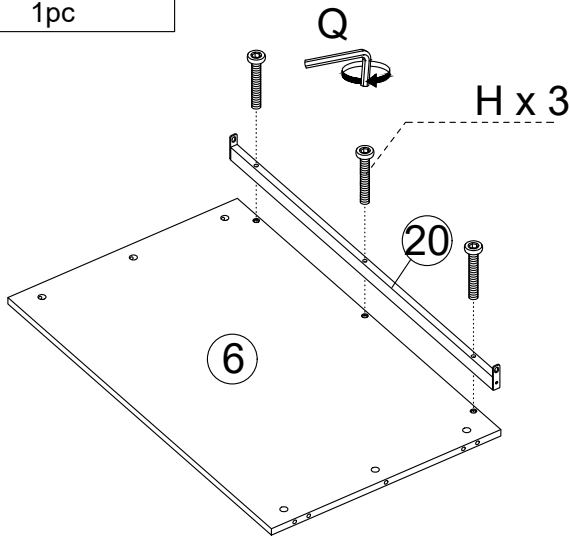





3.

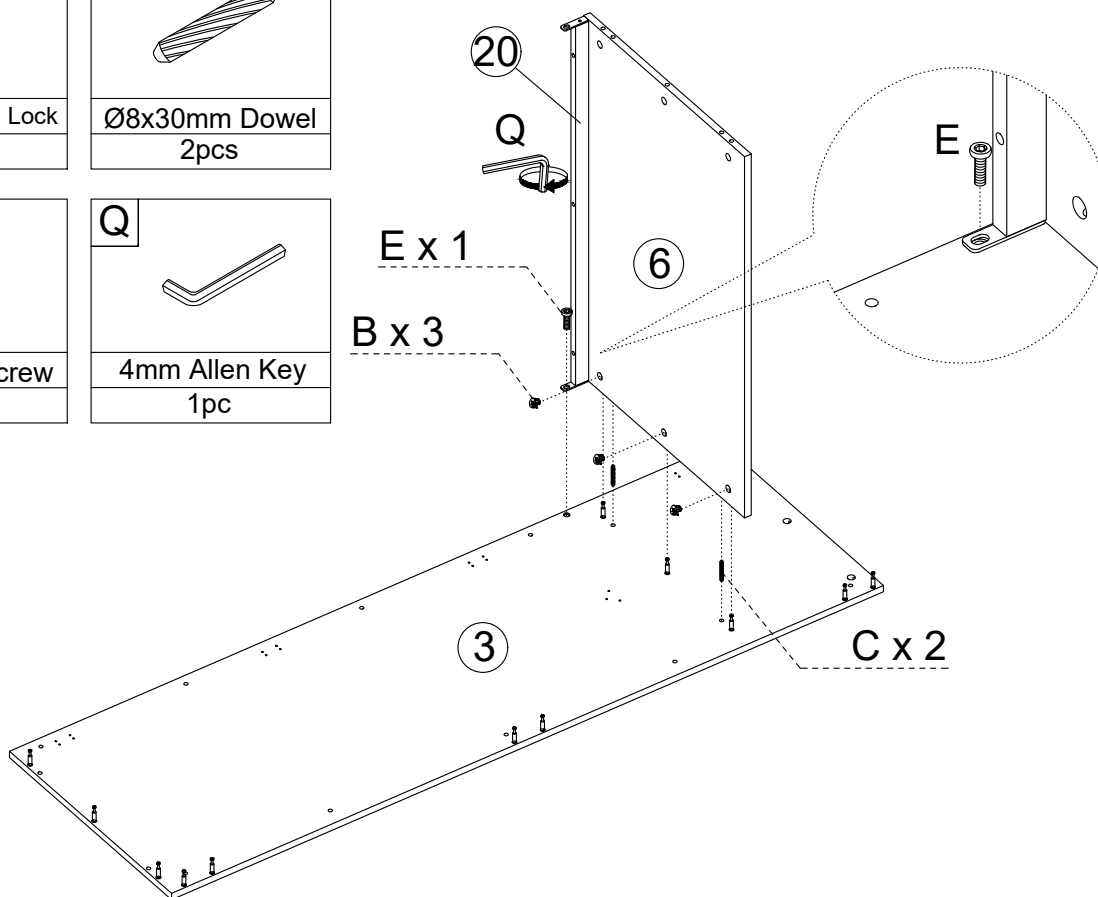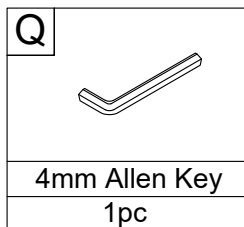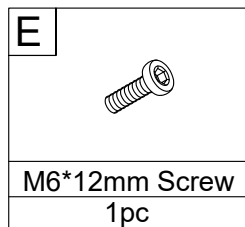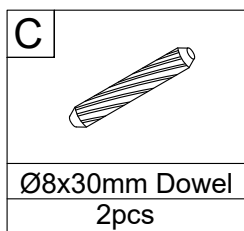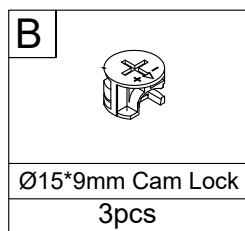


4.

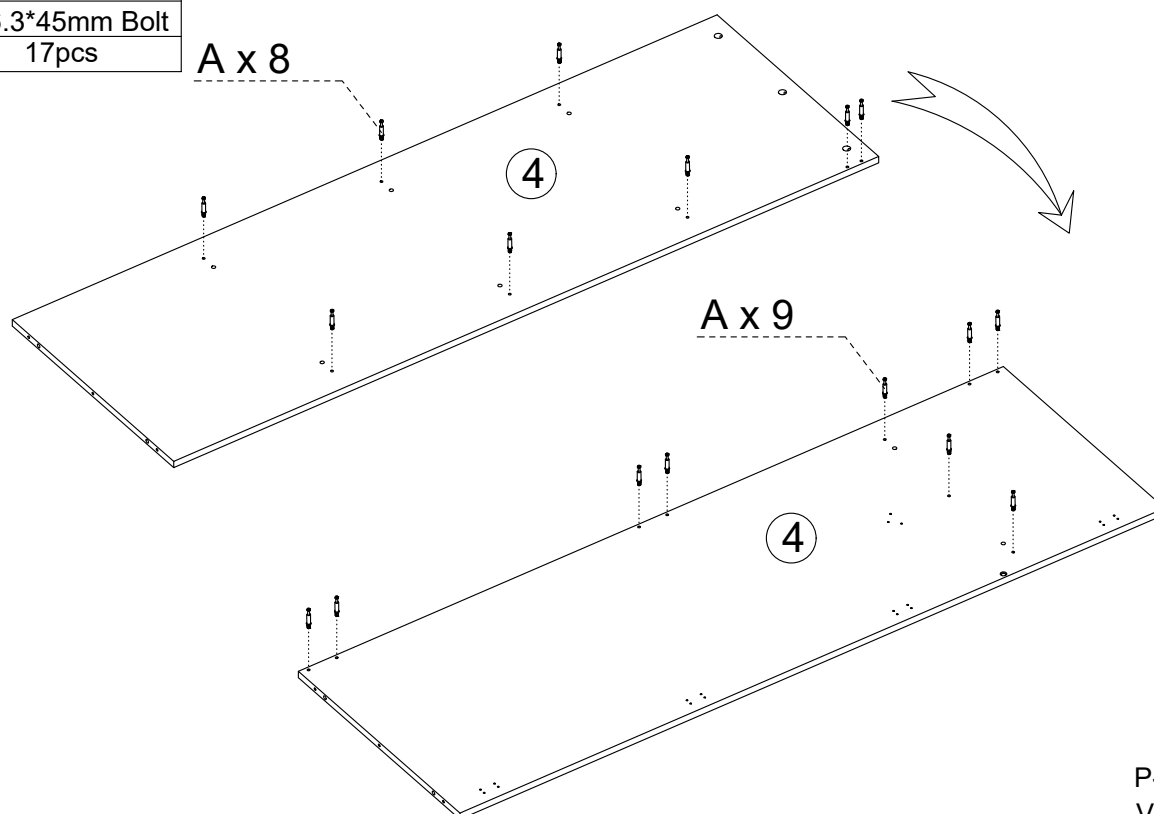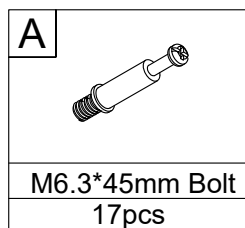


5.

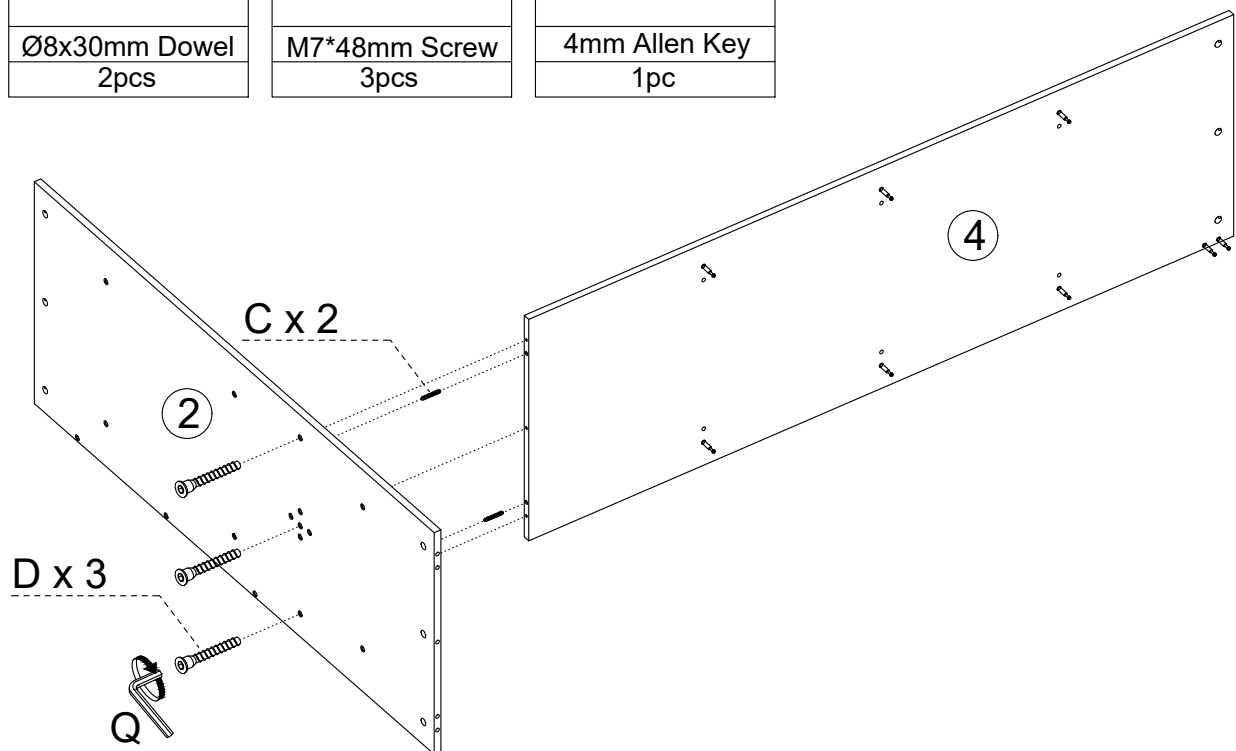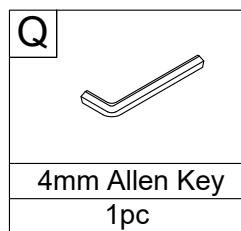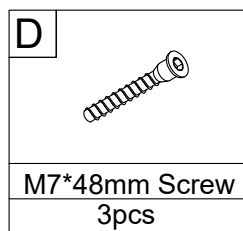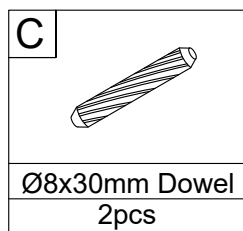





6.

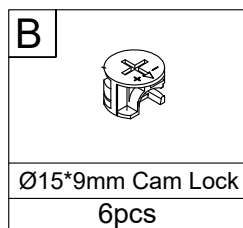

The edge-banded side down

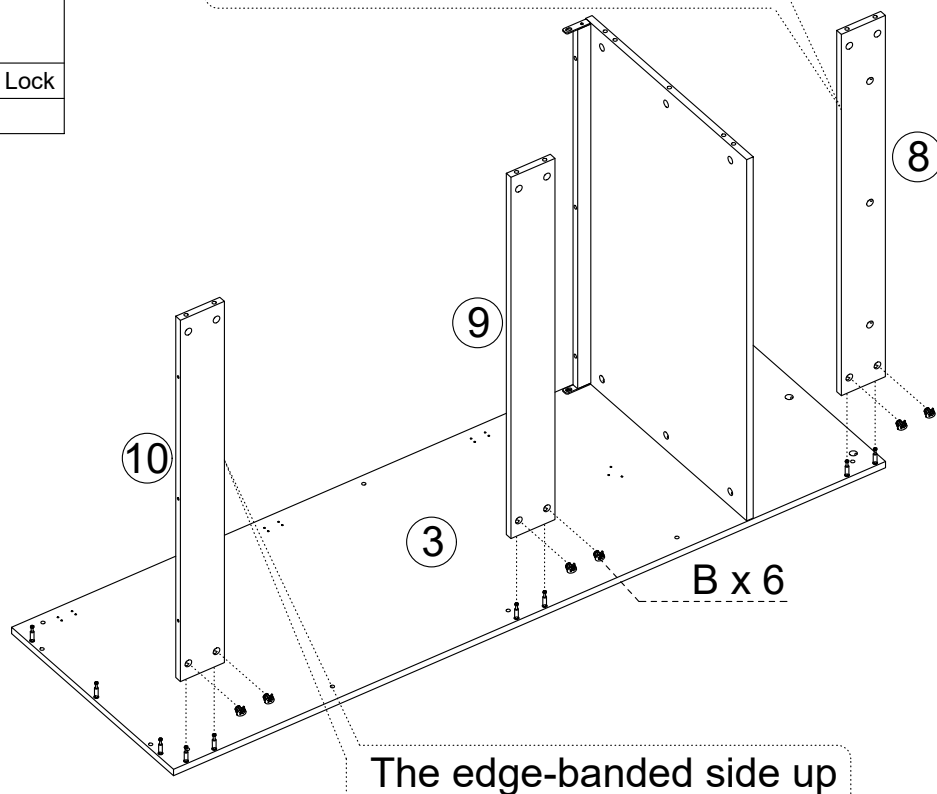


7.

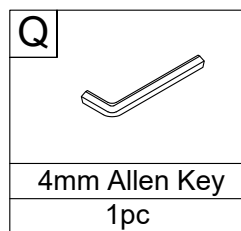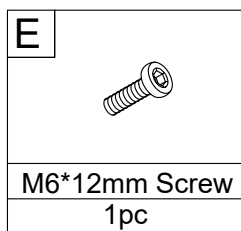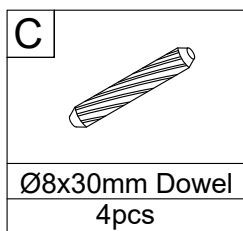
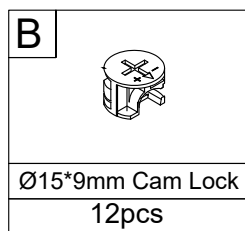


Note:




Two people moving components 2 and 4, while the third person aligns the holes

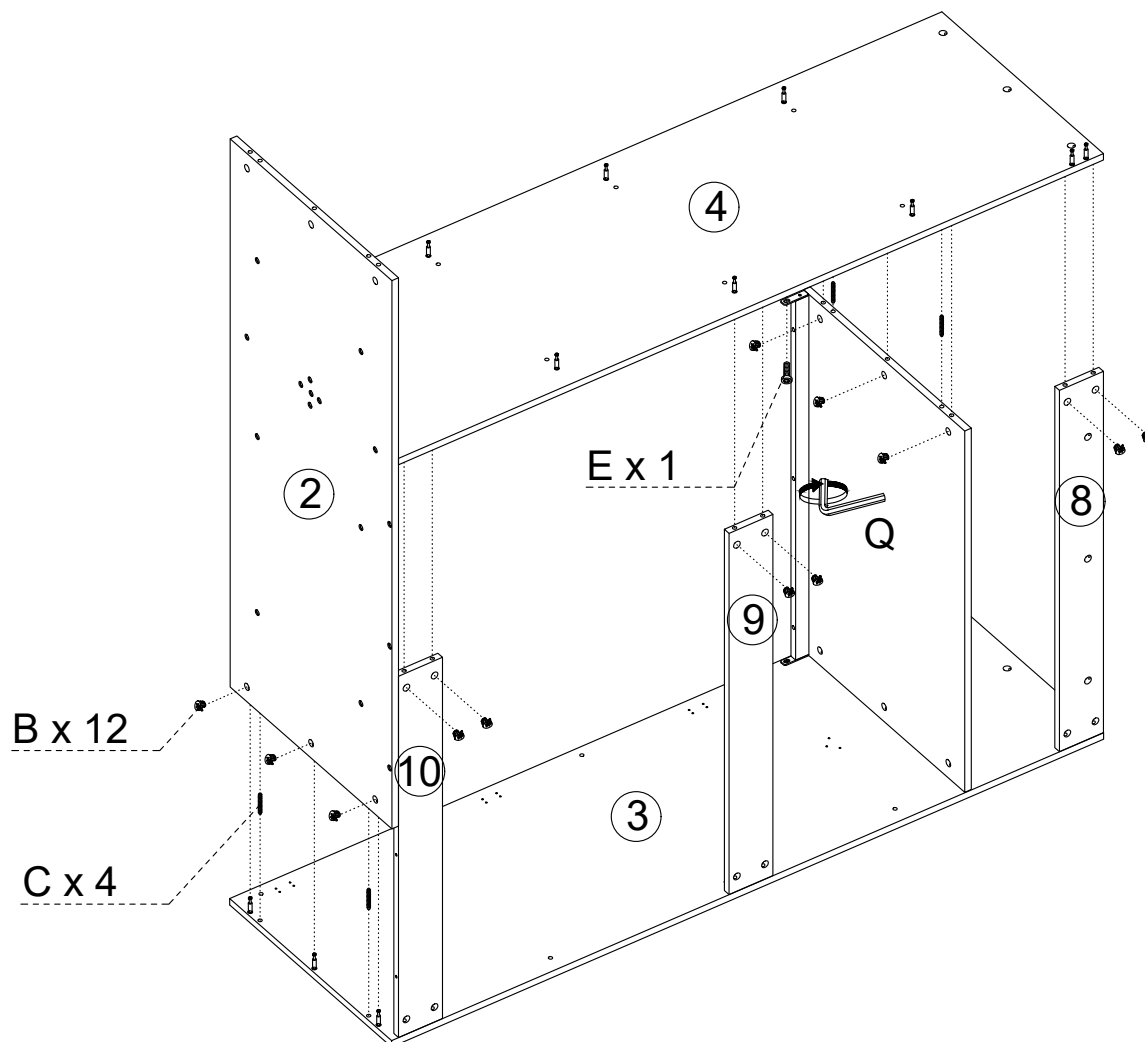



8.

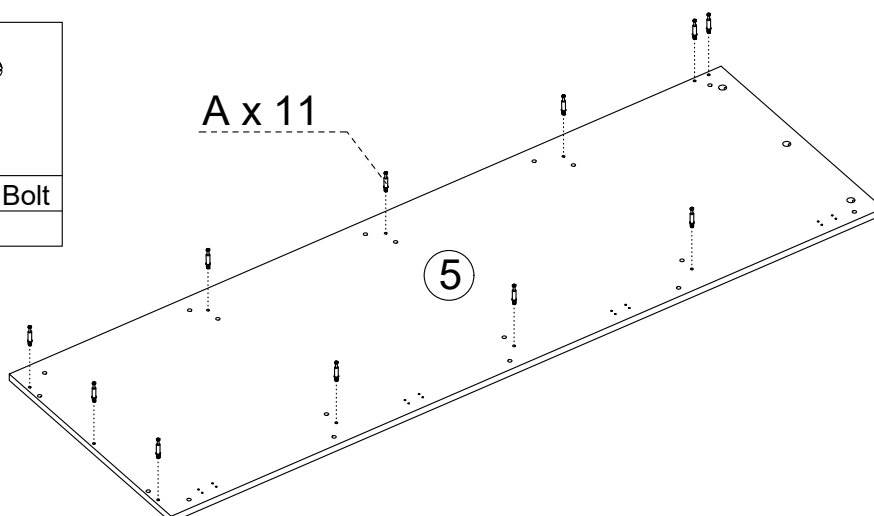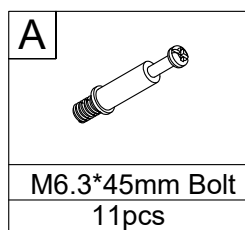


9.

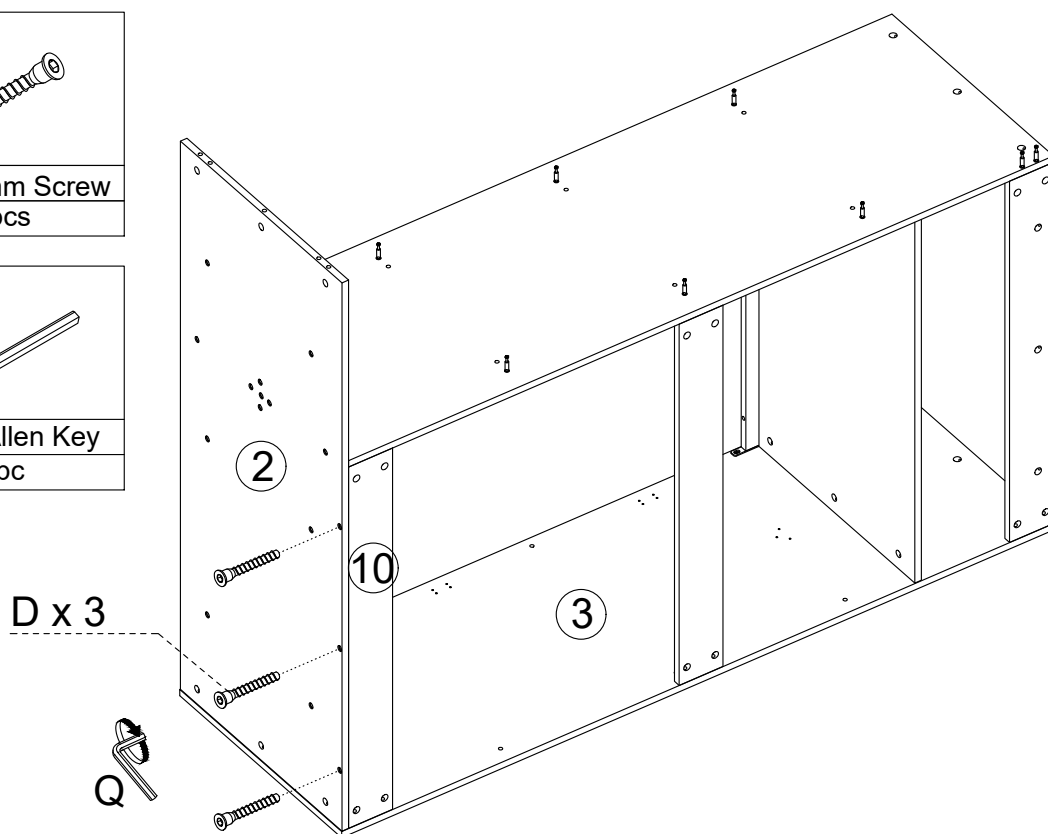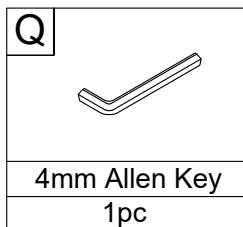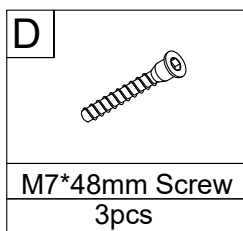




10.

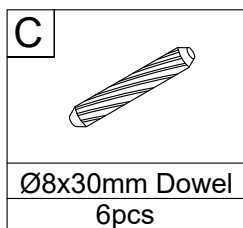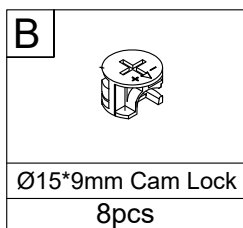





The edge-banded side down

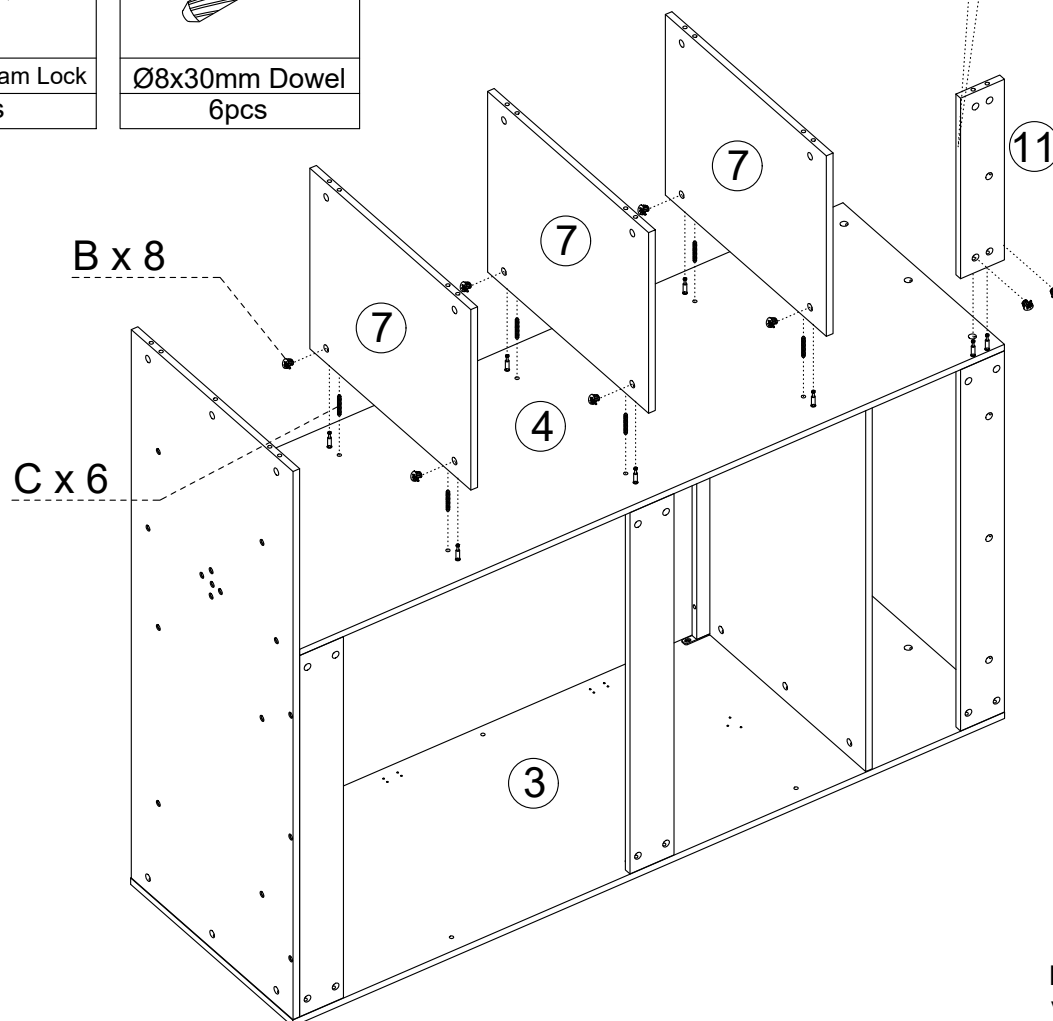




11.

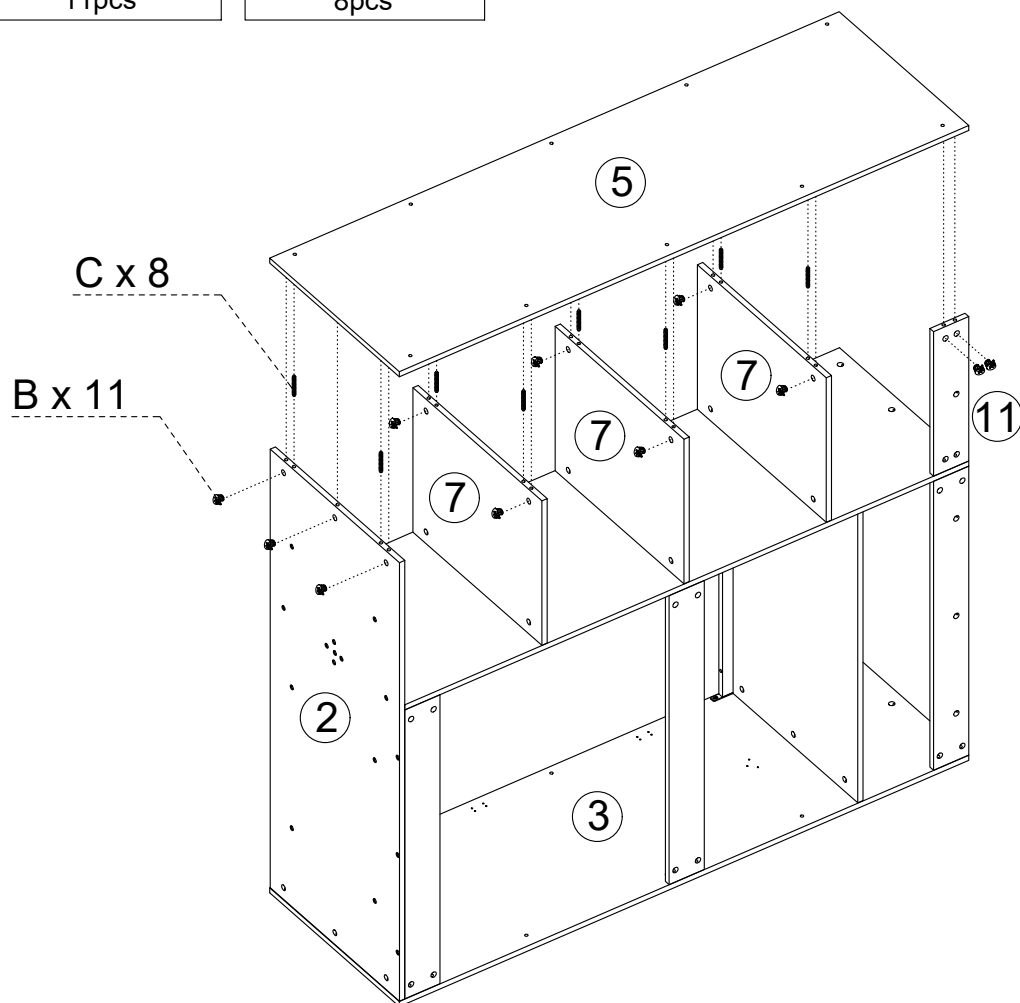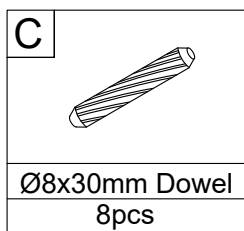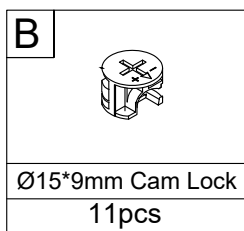





12.

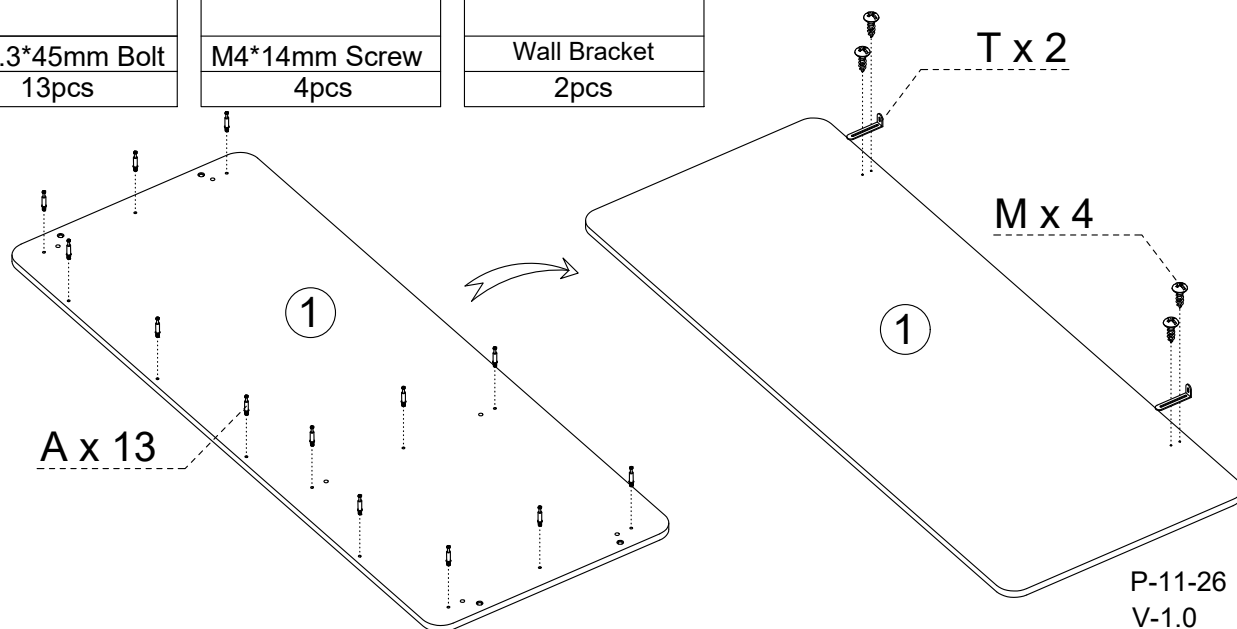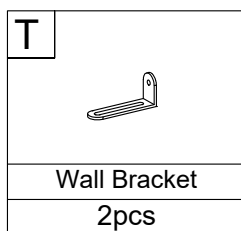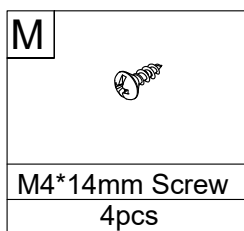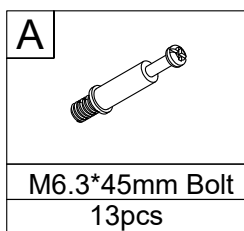





13.

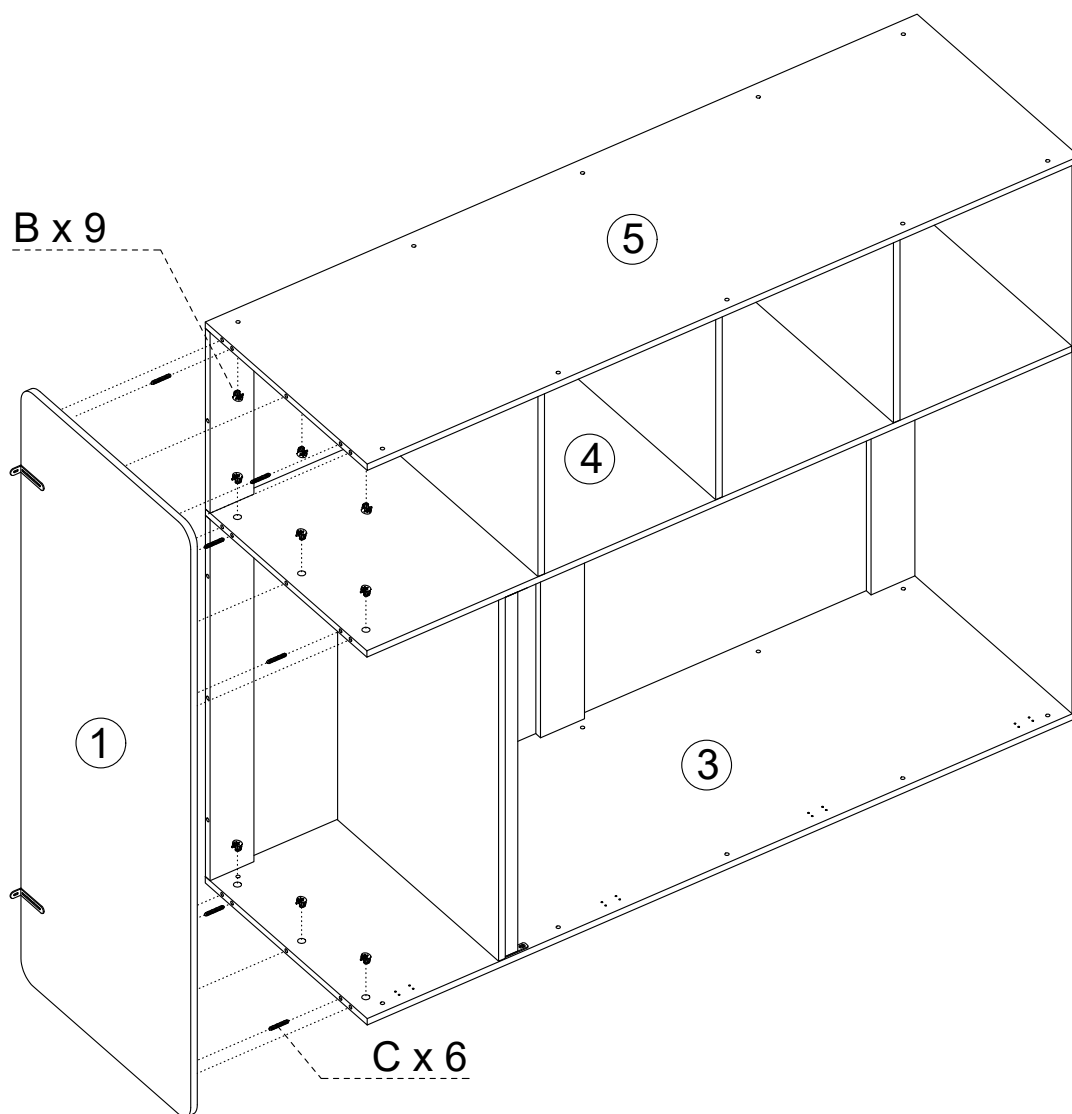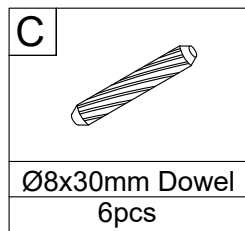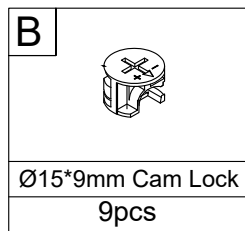



14.

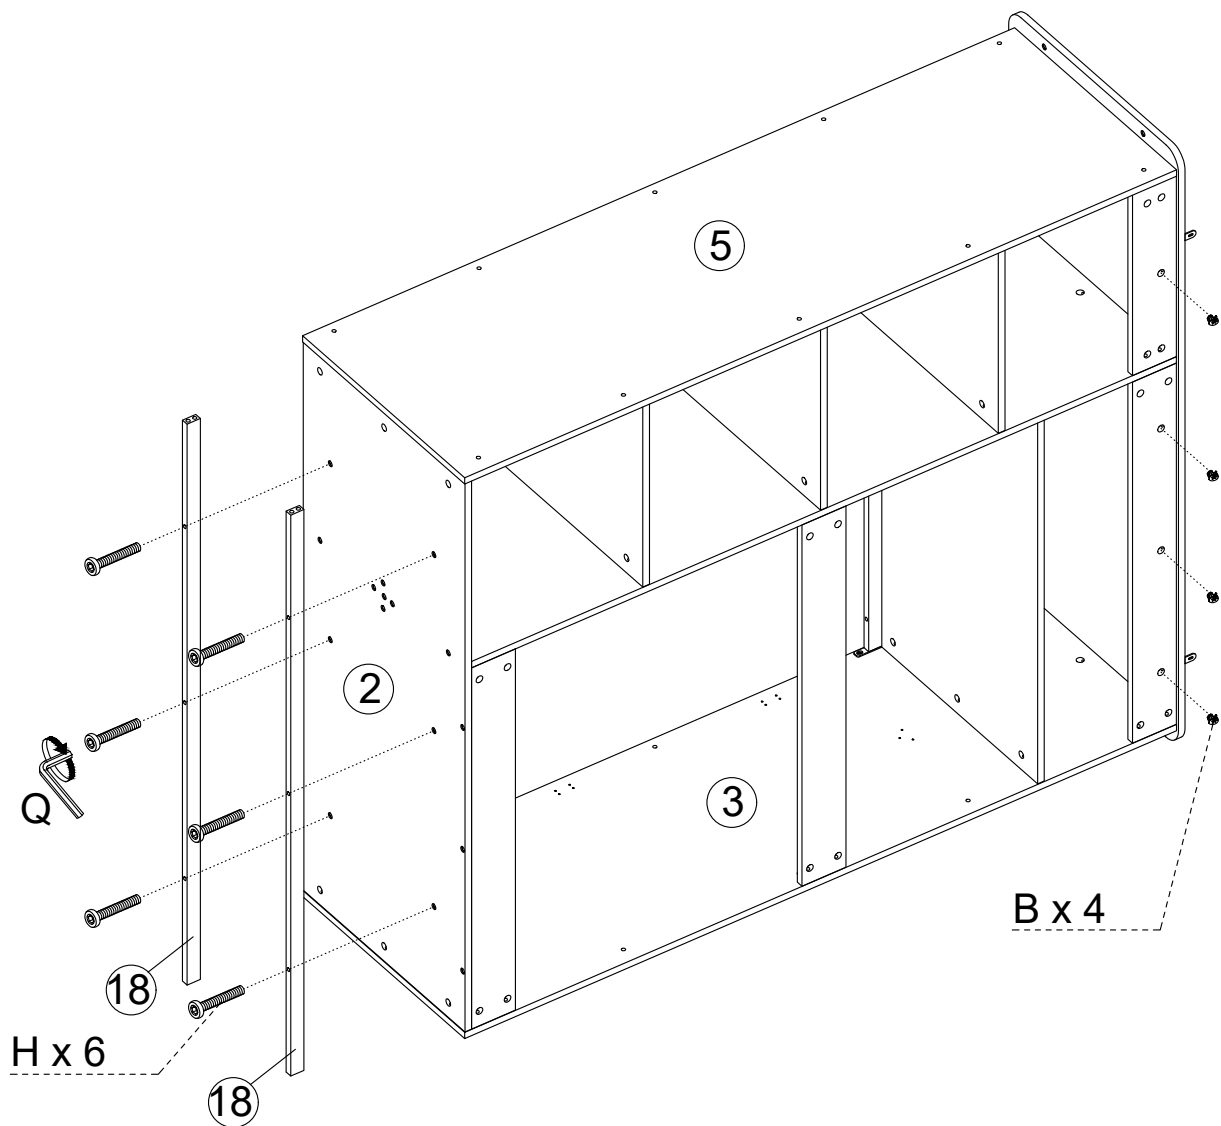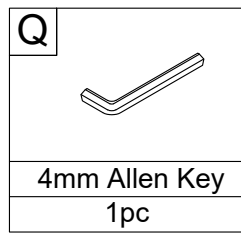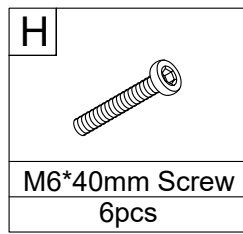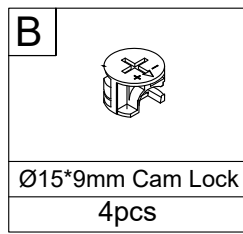







15.

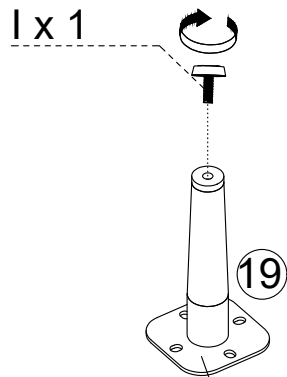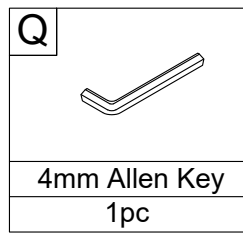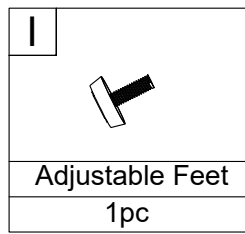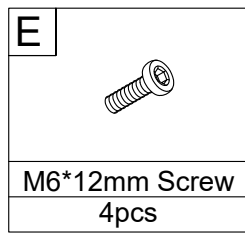









E x 4

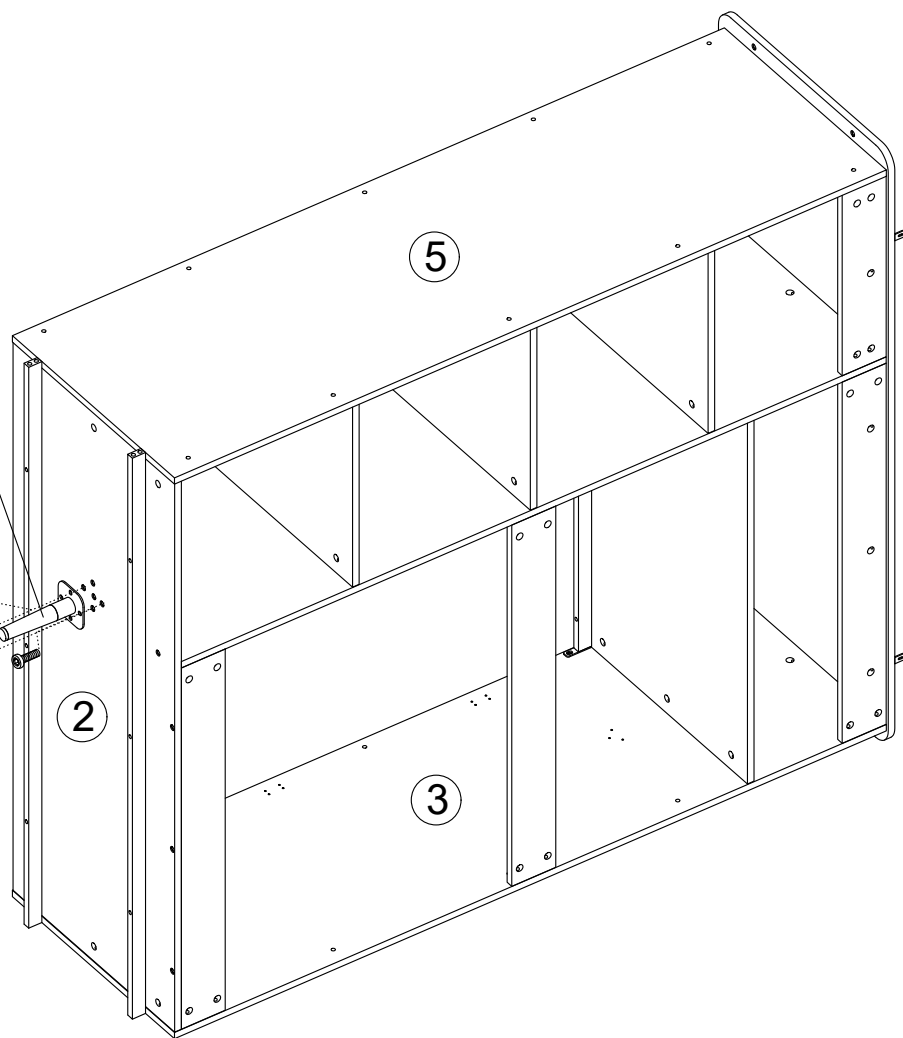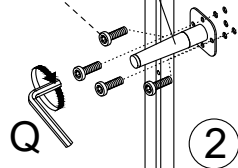

16.

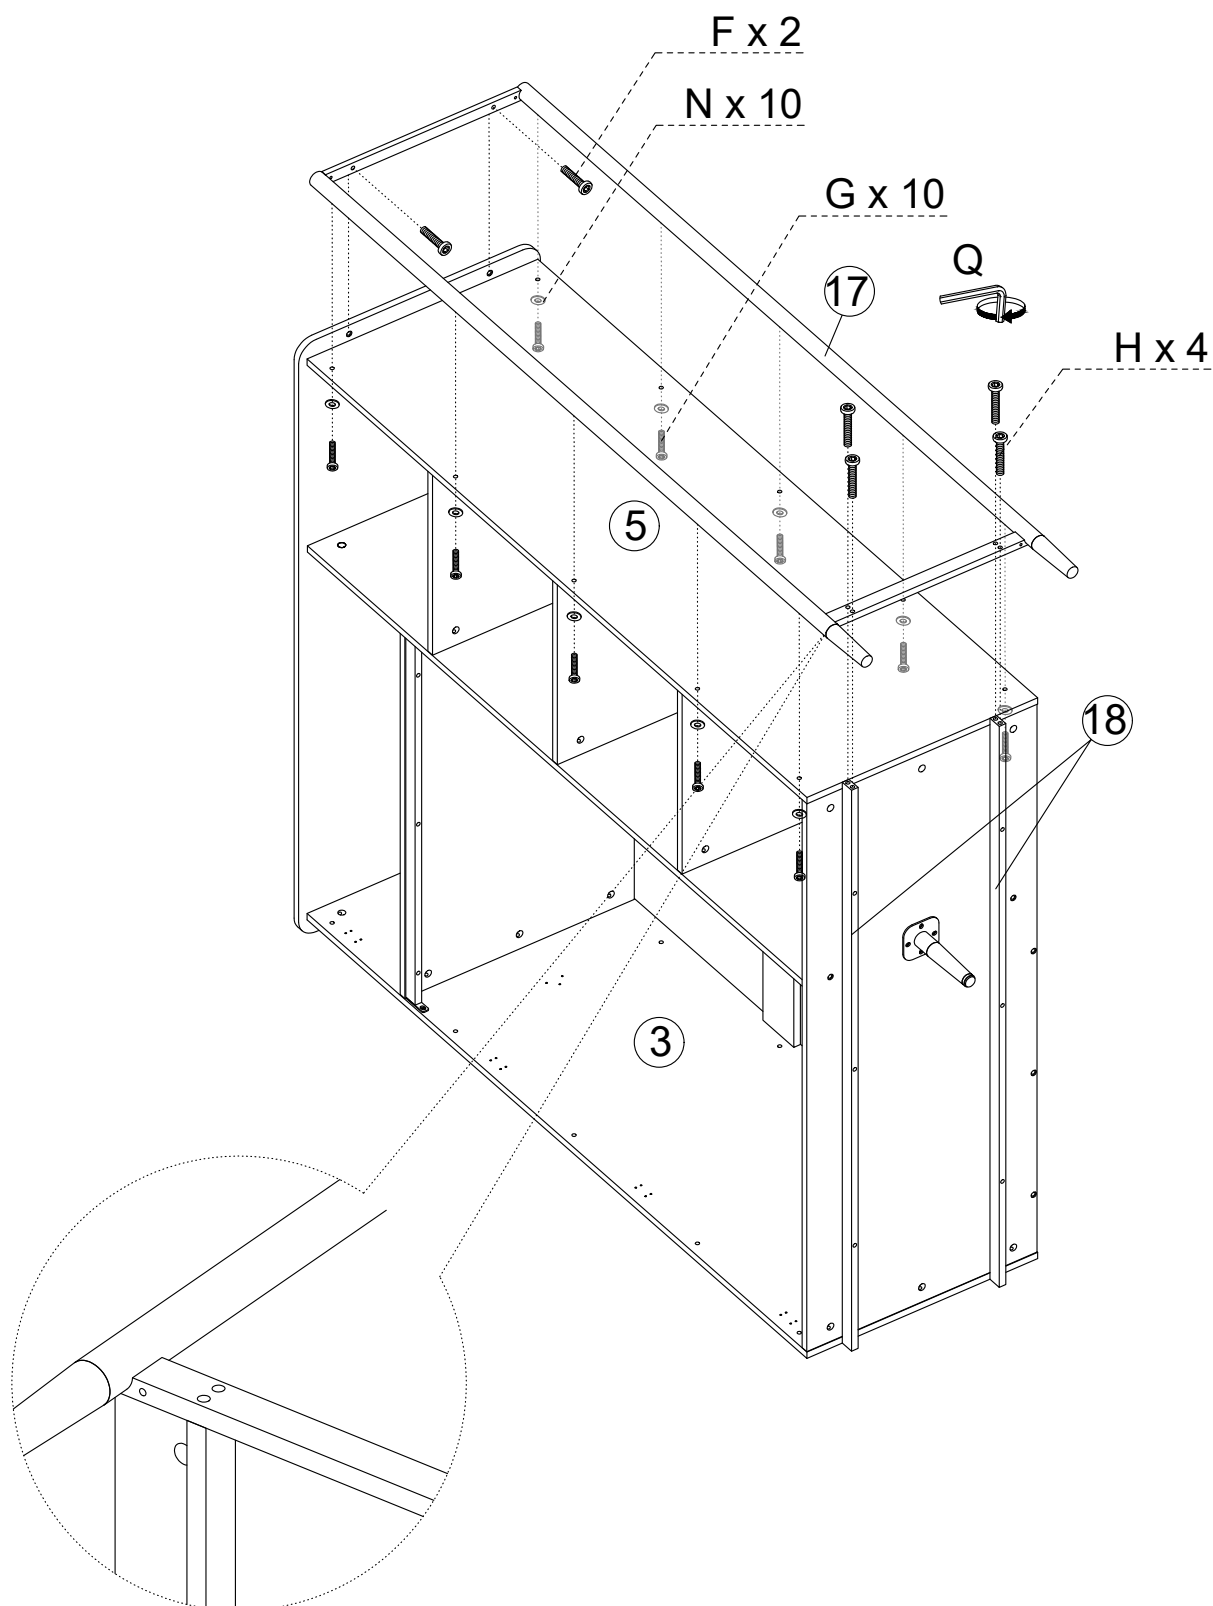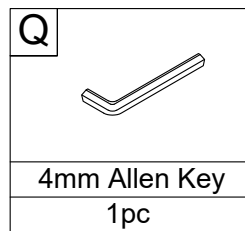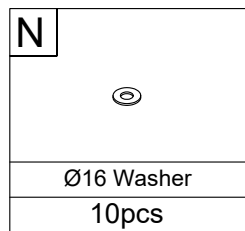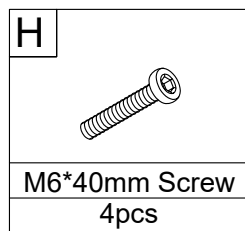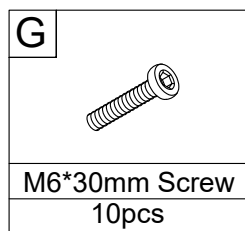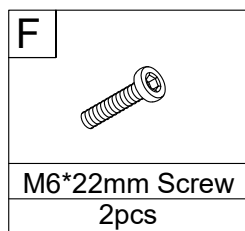


17.

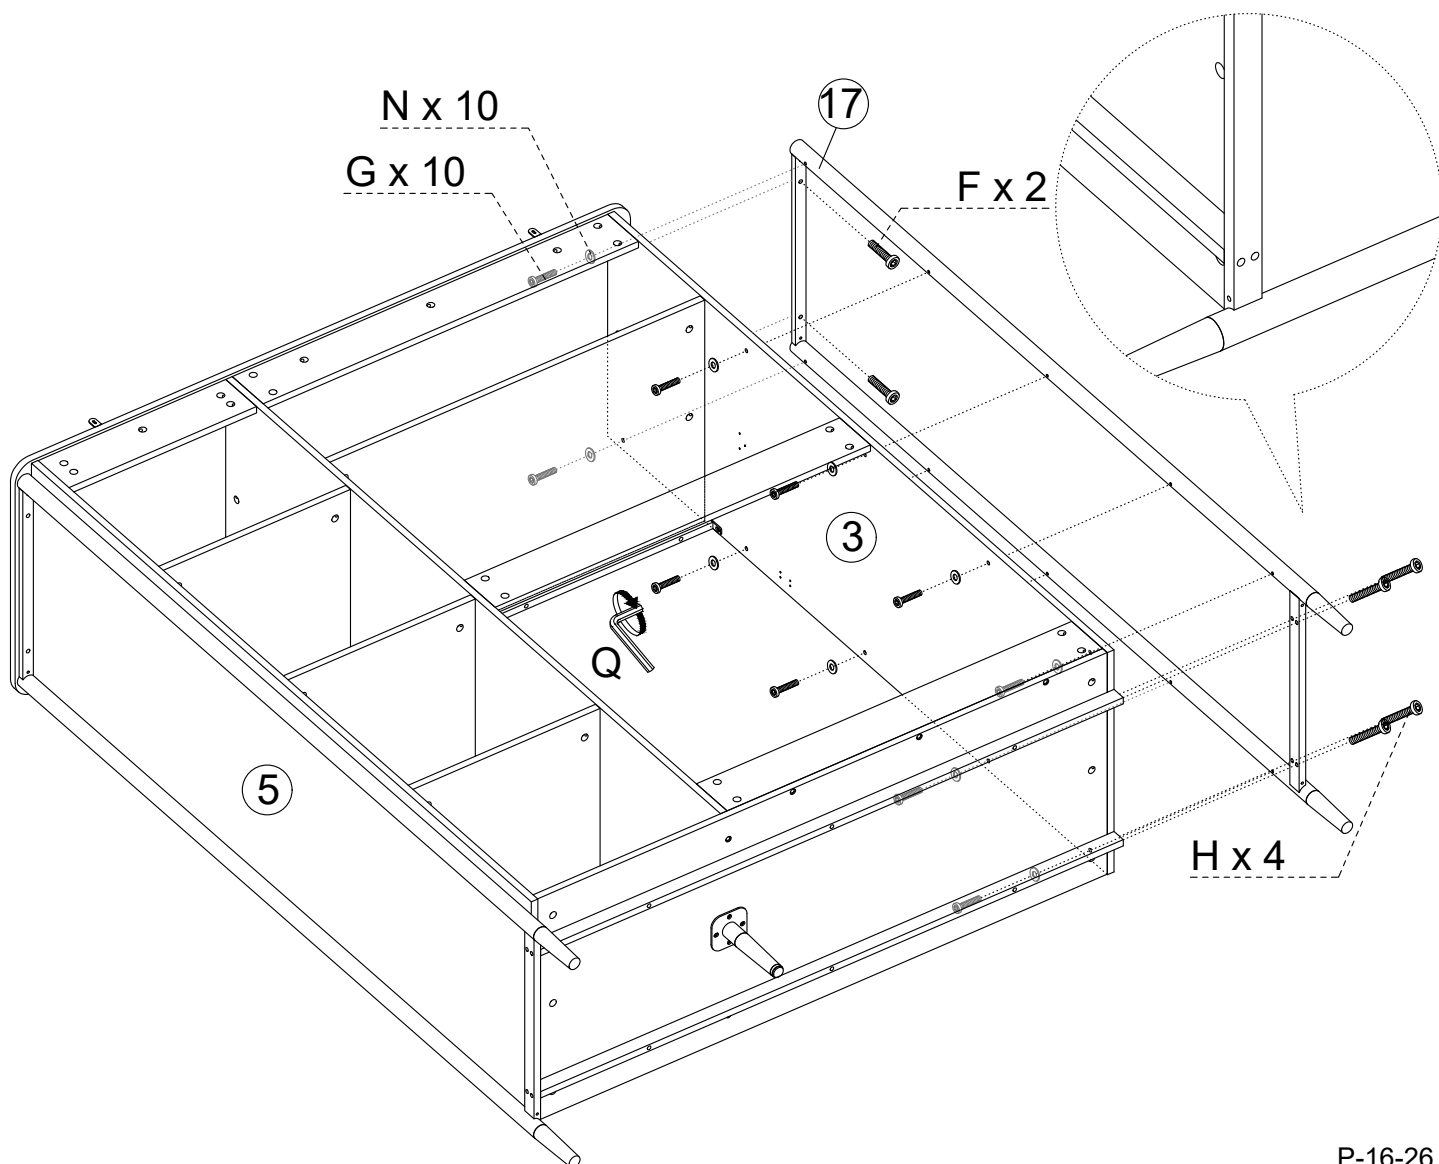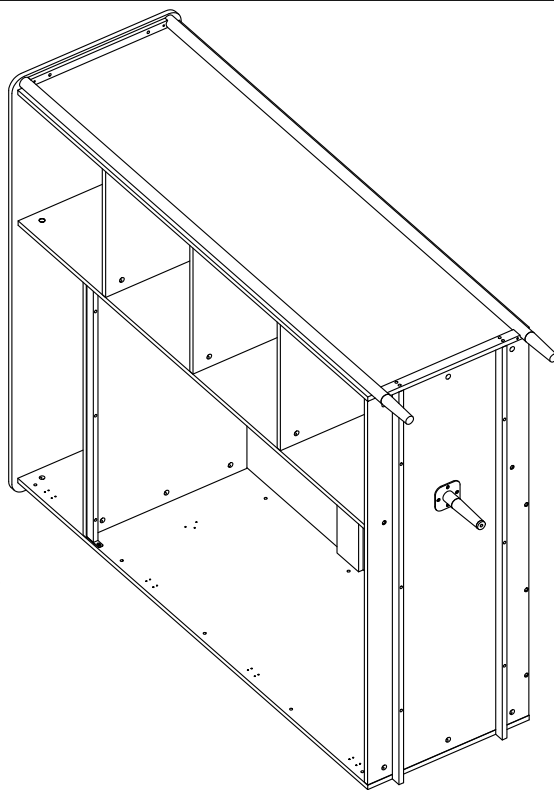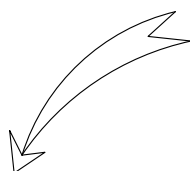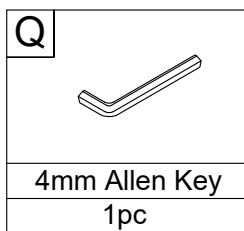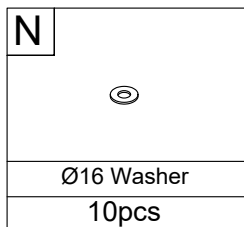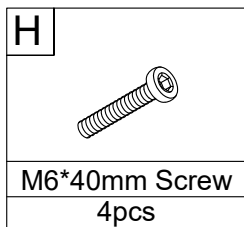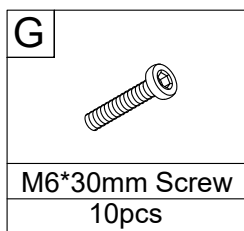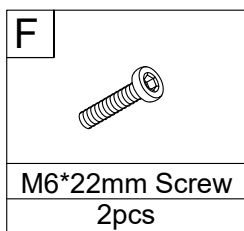

18.

Note:


1. Pay attention to the part number.
2. The bottom edge of the back panel shall be flush with the bottom panel.
3. The side edge of the back panel shall be indented 0.5mm relative to the side panel.

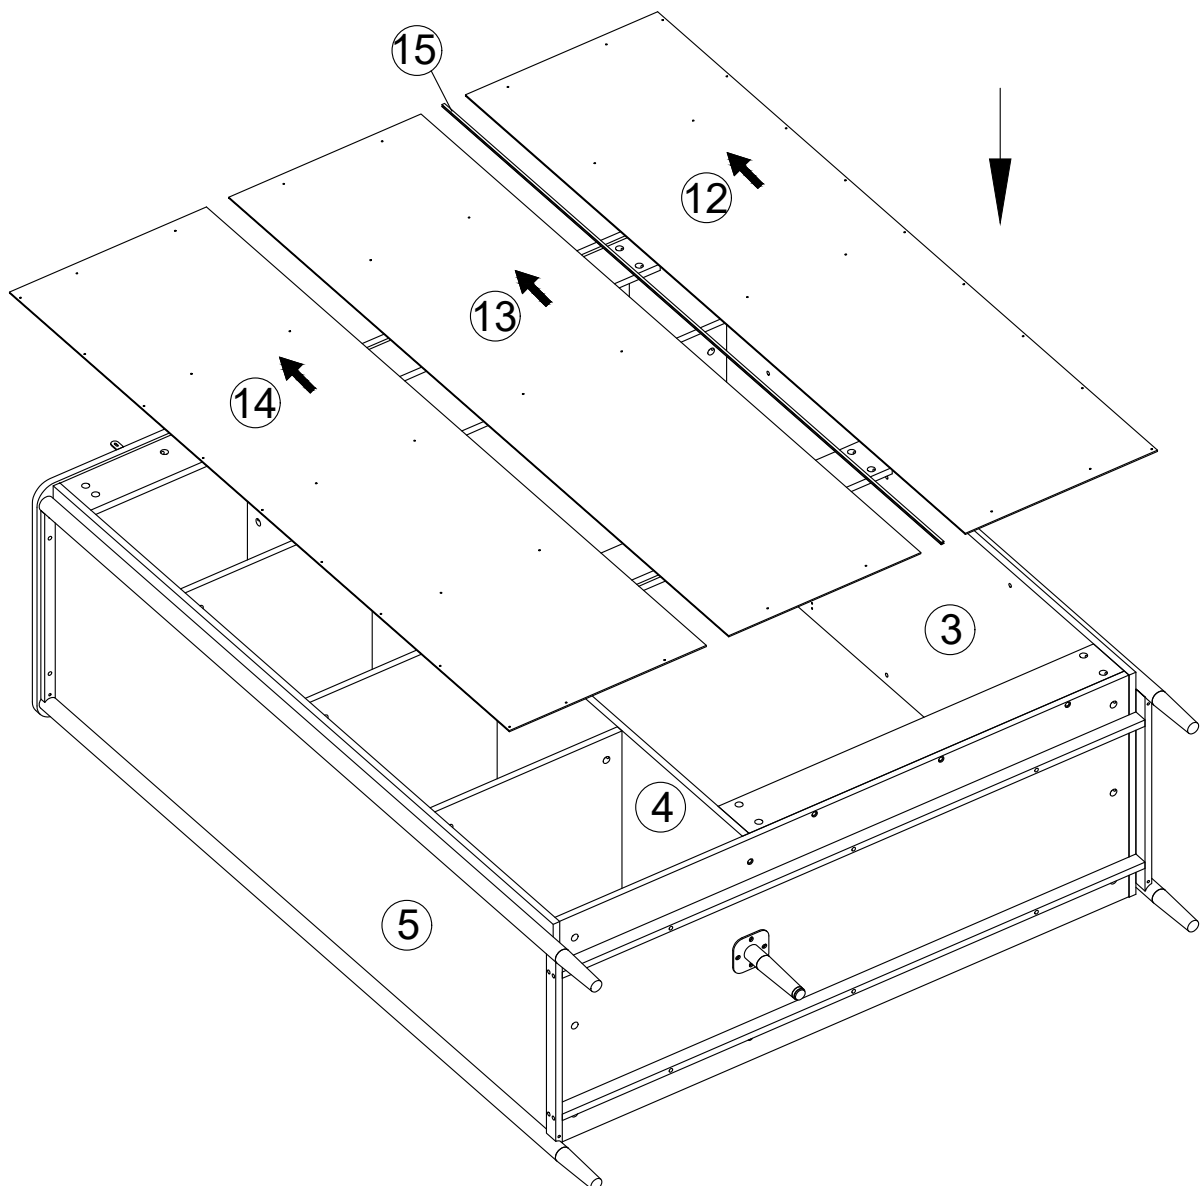

19.

M


M4*14mm Screw
12pcs

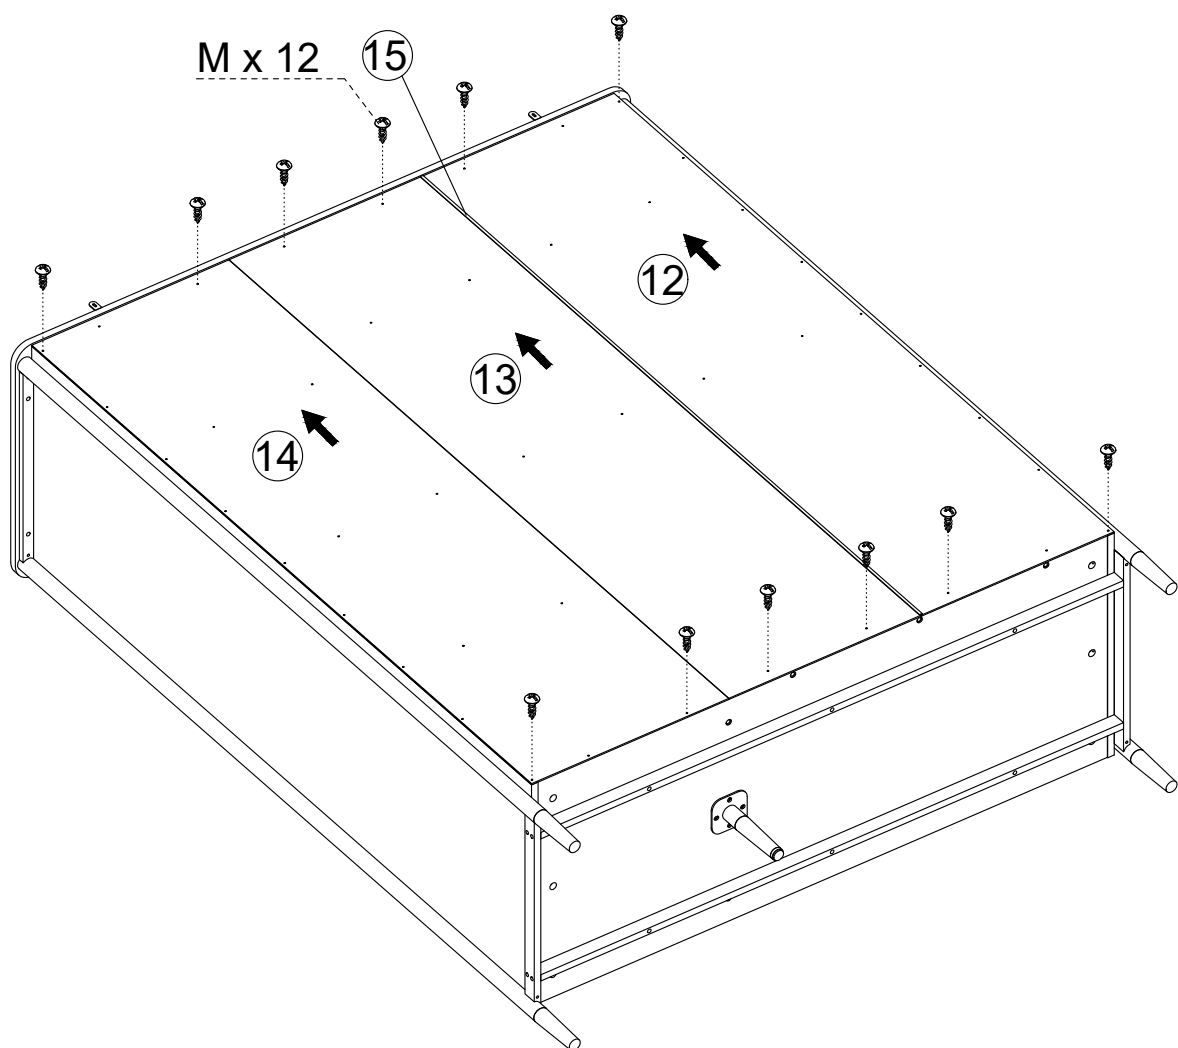


20.

M

M4*14mm Screw
32pcs

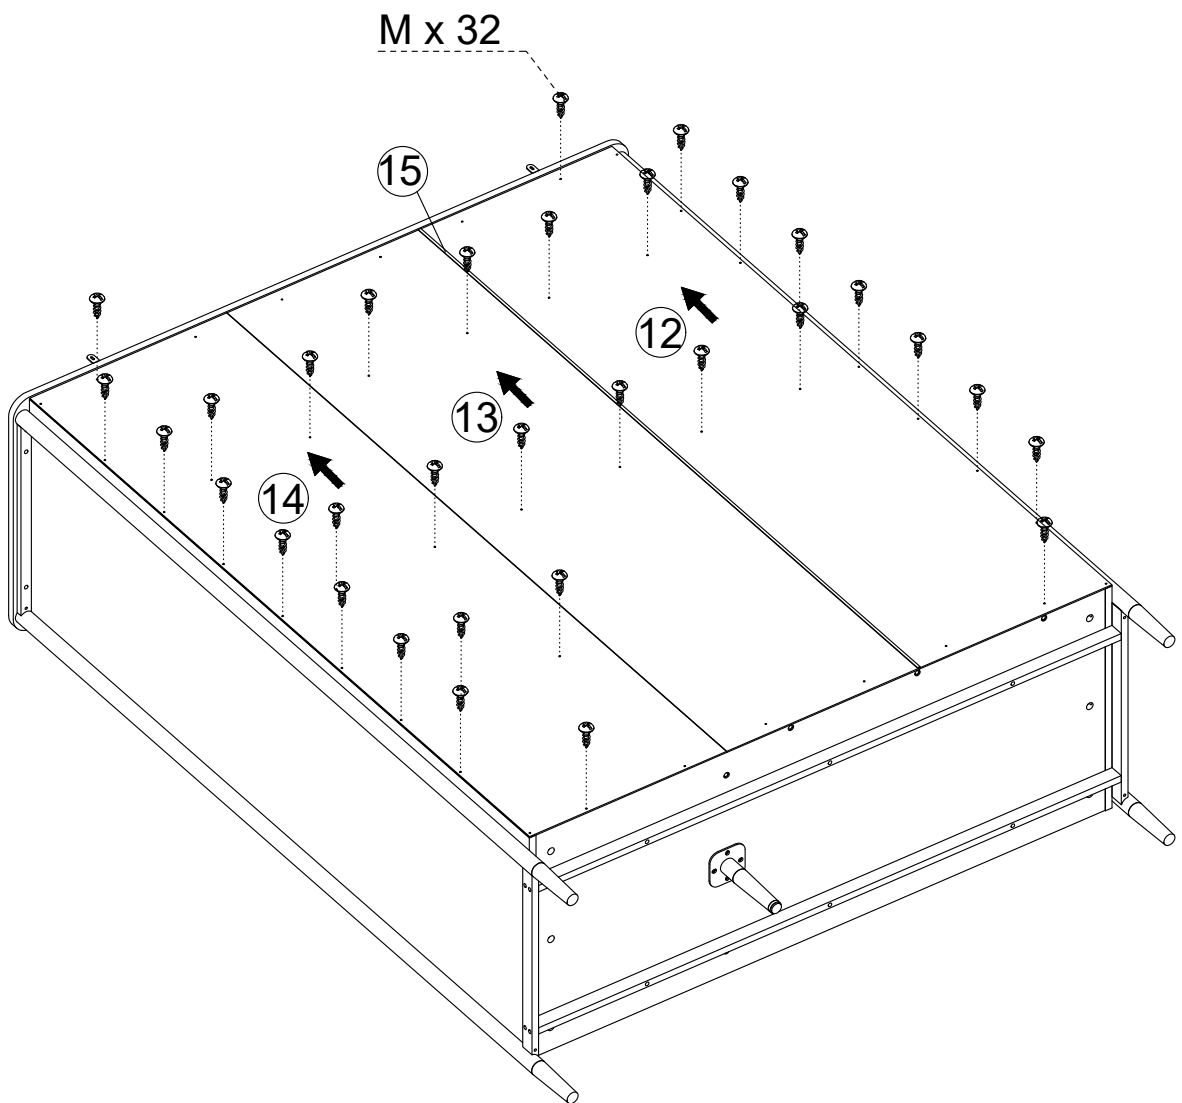


21.

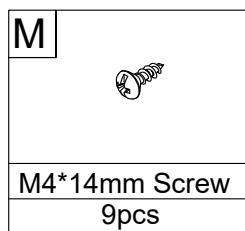

Note:

Install one screw at an interval of approximately 200mm in the gap between the two back panels, and visually align it parallel to the left side

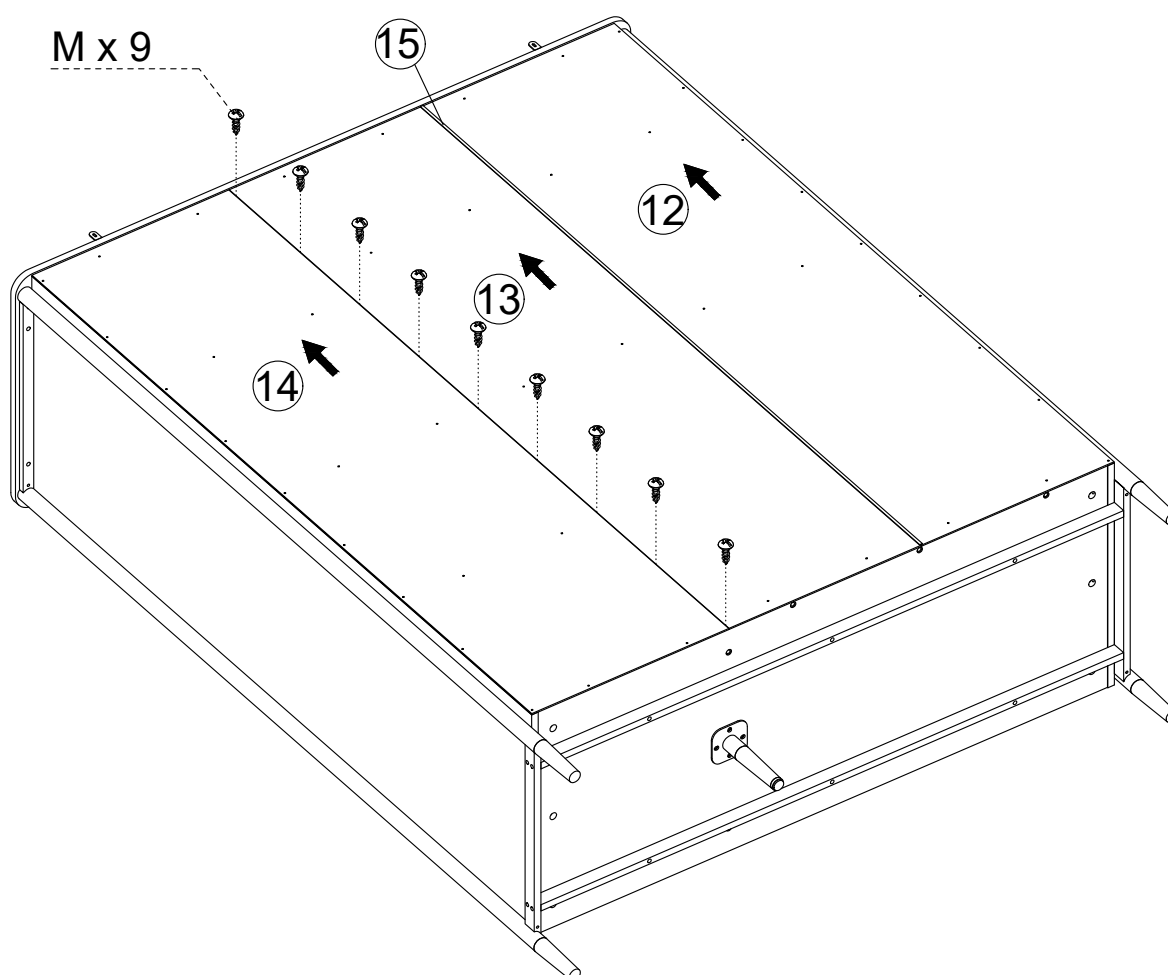

22.

O




M8*35mm Wall Plug
2pcs

P




M5*35mm Screw
2pcs


I

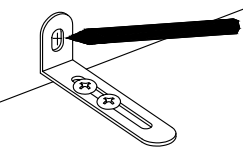


II

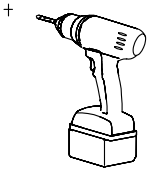


III

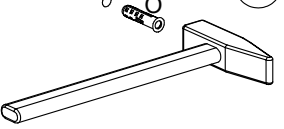


IV

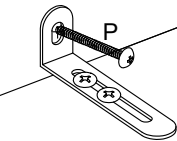

V

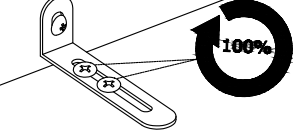

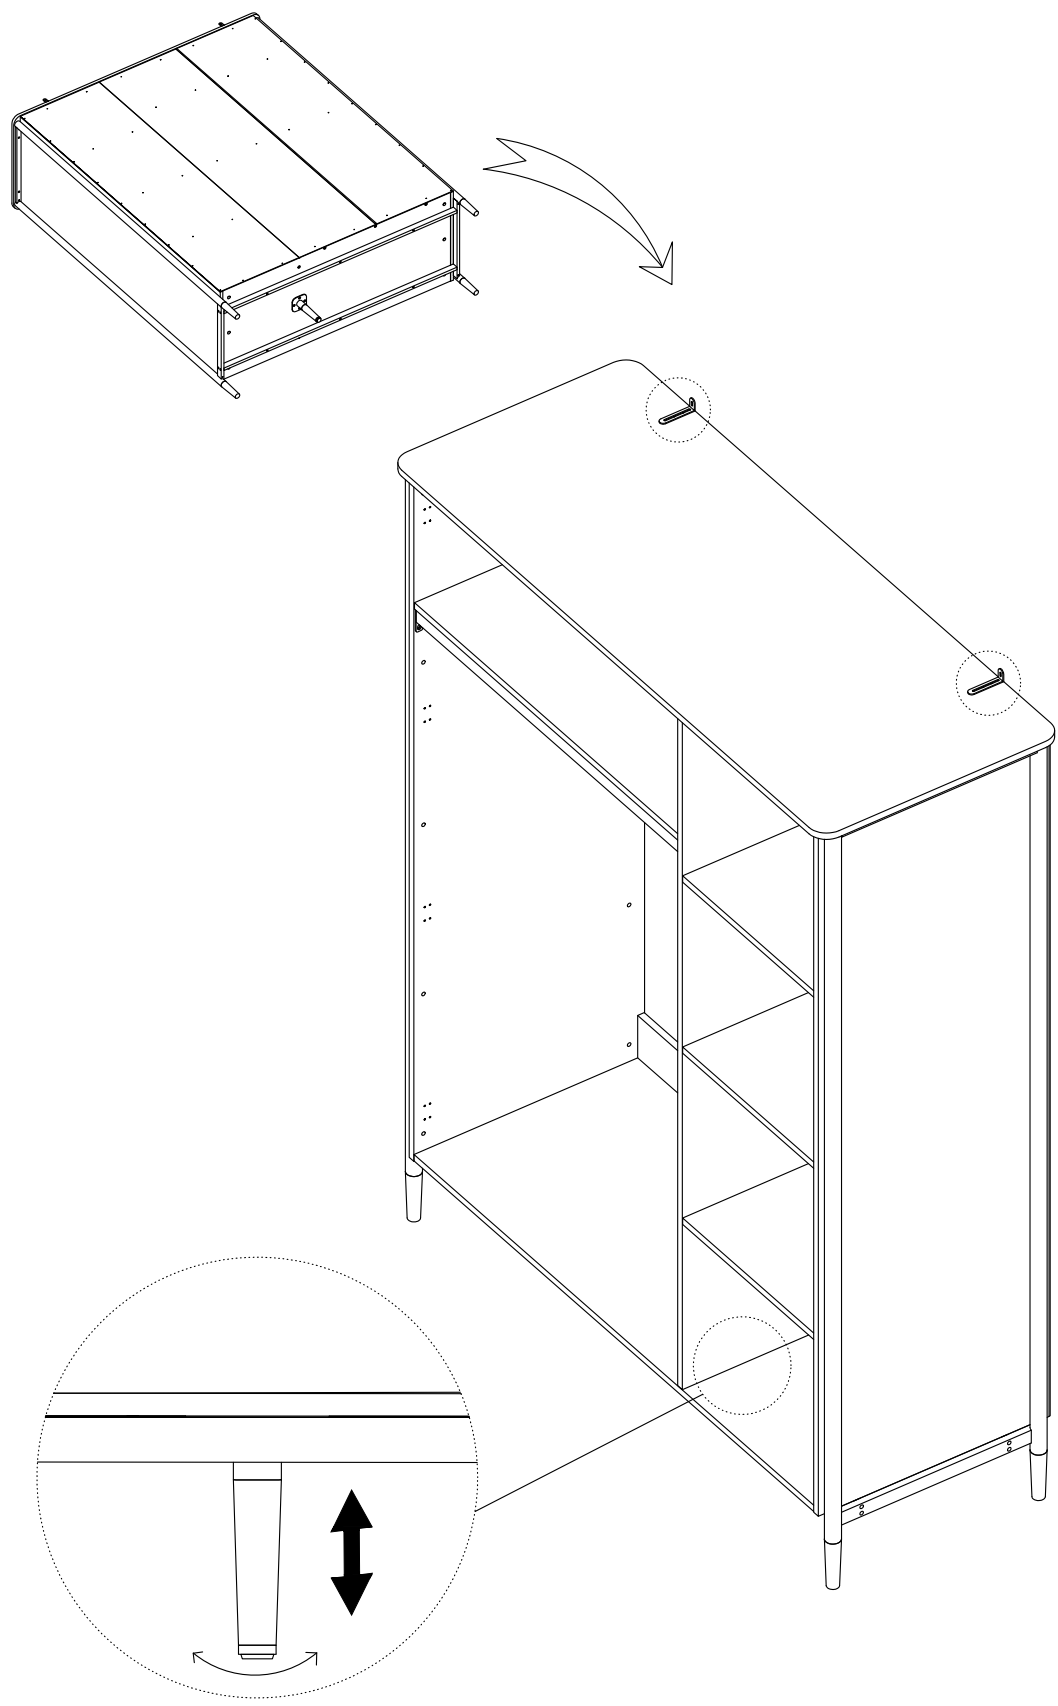

23.

K






M3.0*12mm Screw
6pcs

U



Clothes Pole Holder
2pcs

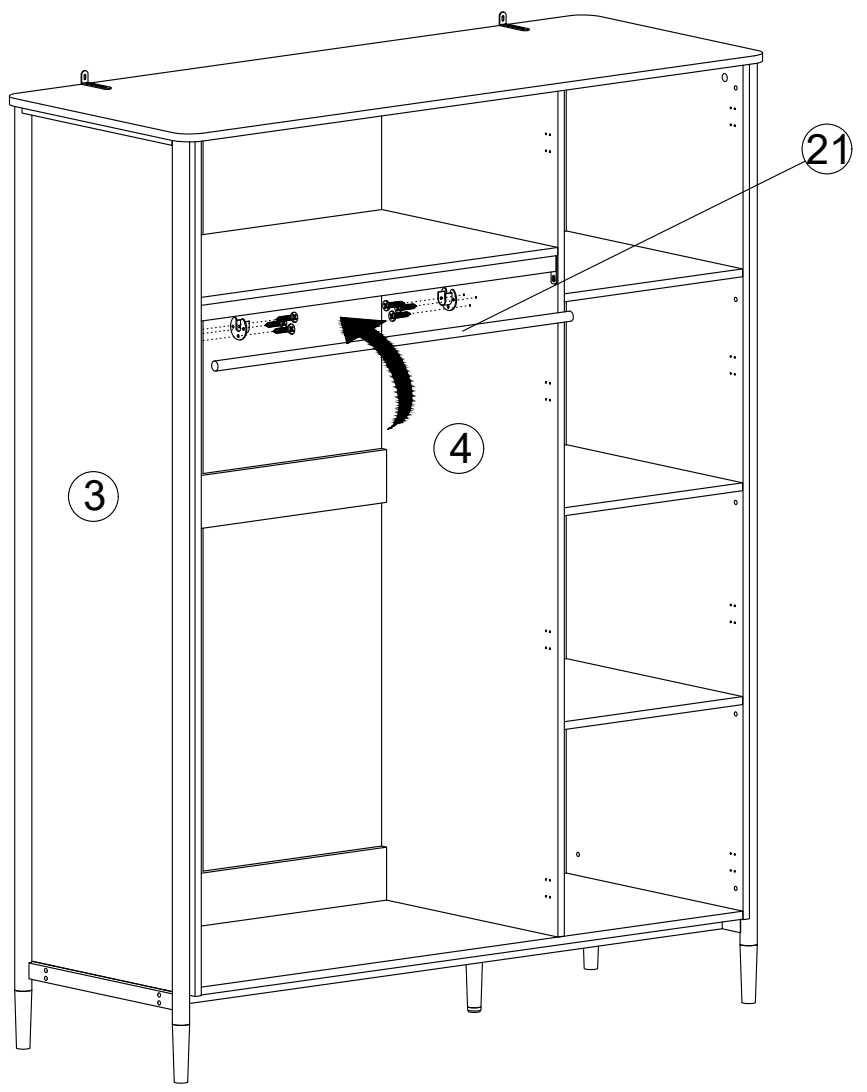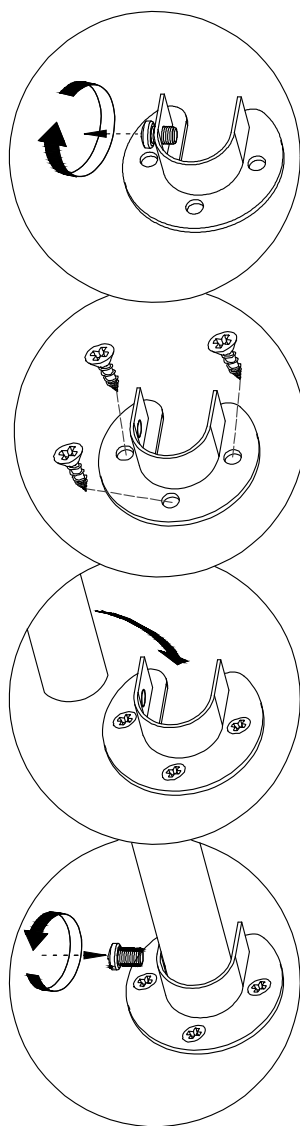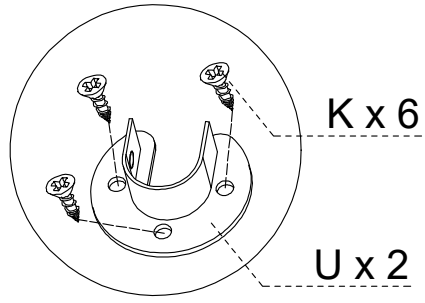


24.

L




M3.5*14mm Screw
24pcs




V





Bend Hinge
12pcs

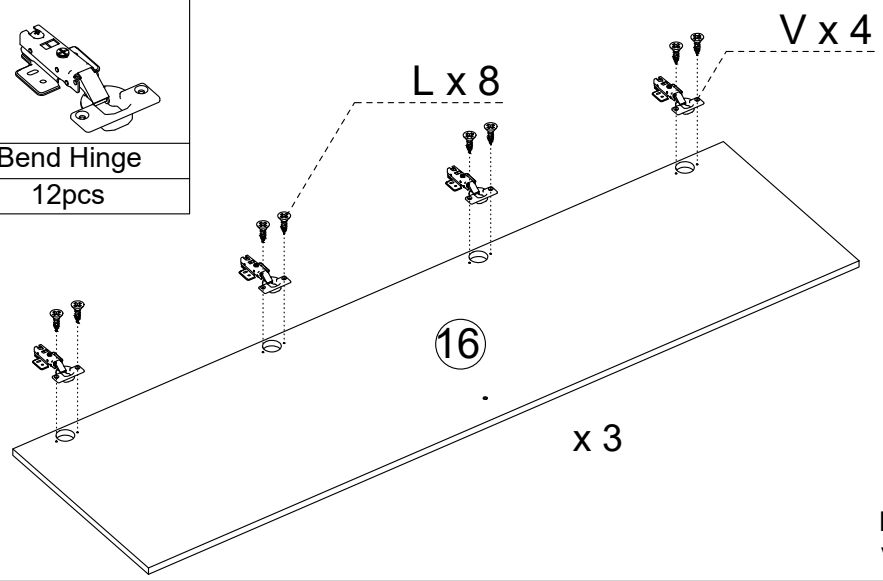


25.

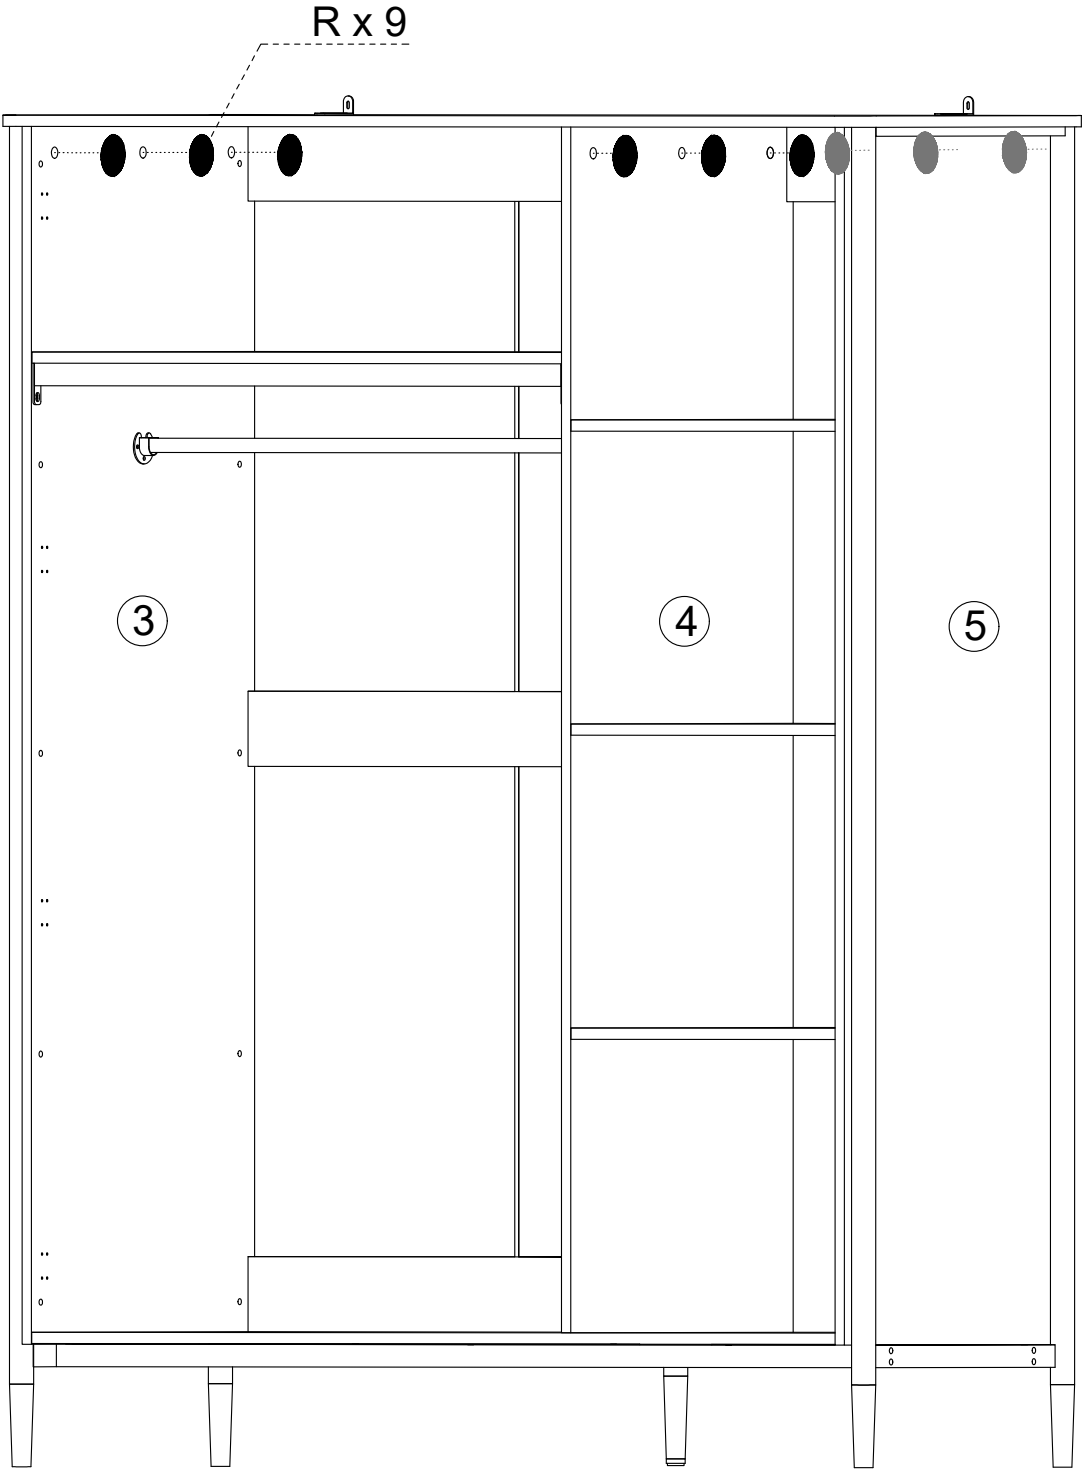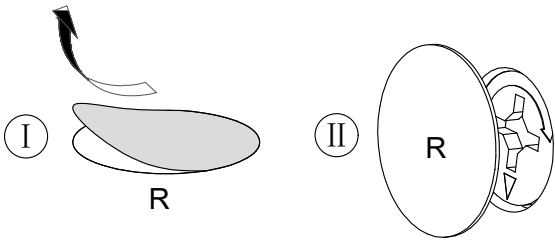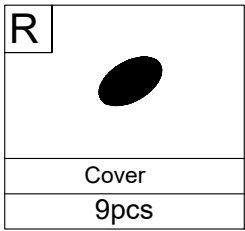

26.

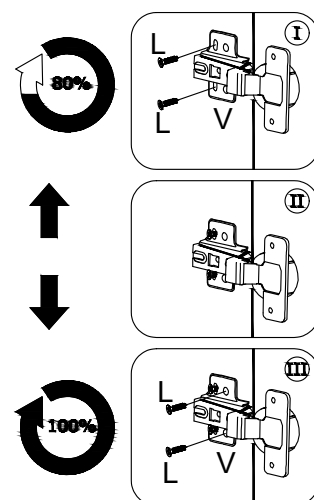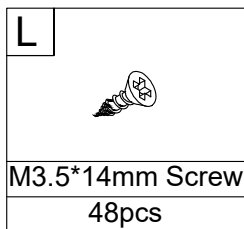

X3

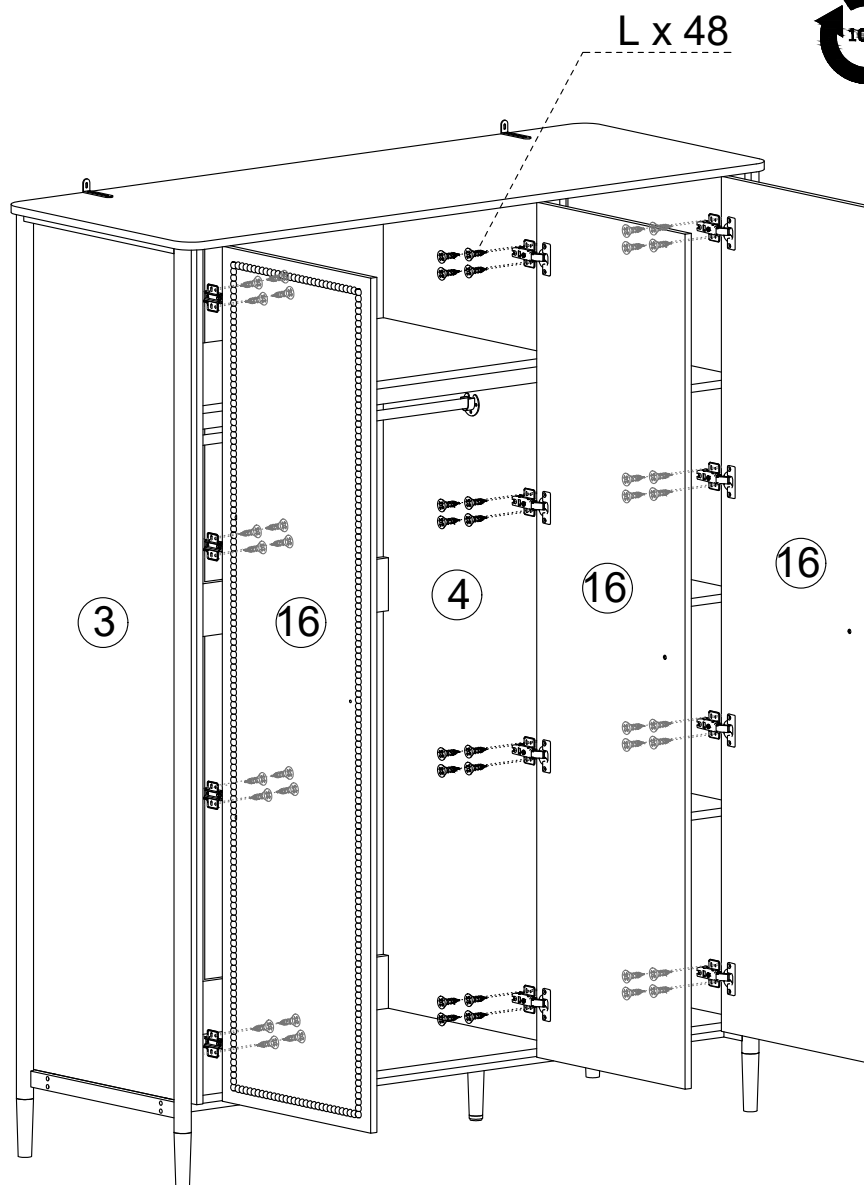


27.

J


M4*18mm Screw
3pcs

S


Handle
3pcs

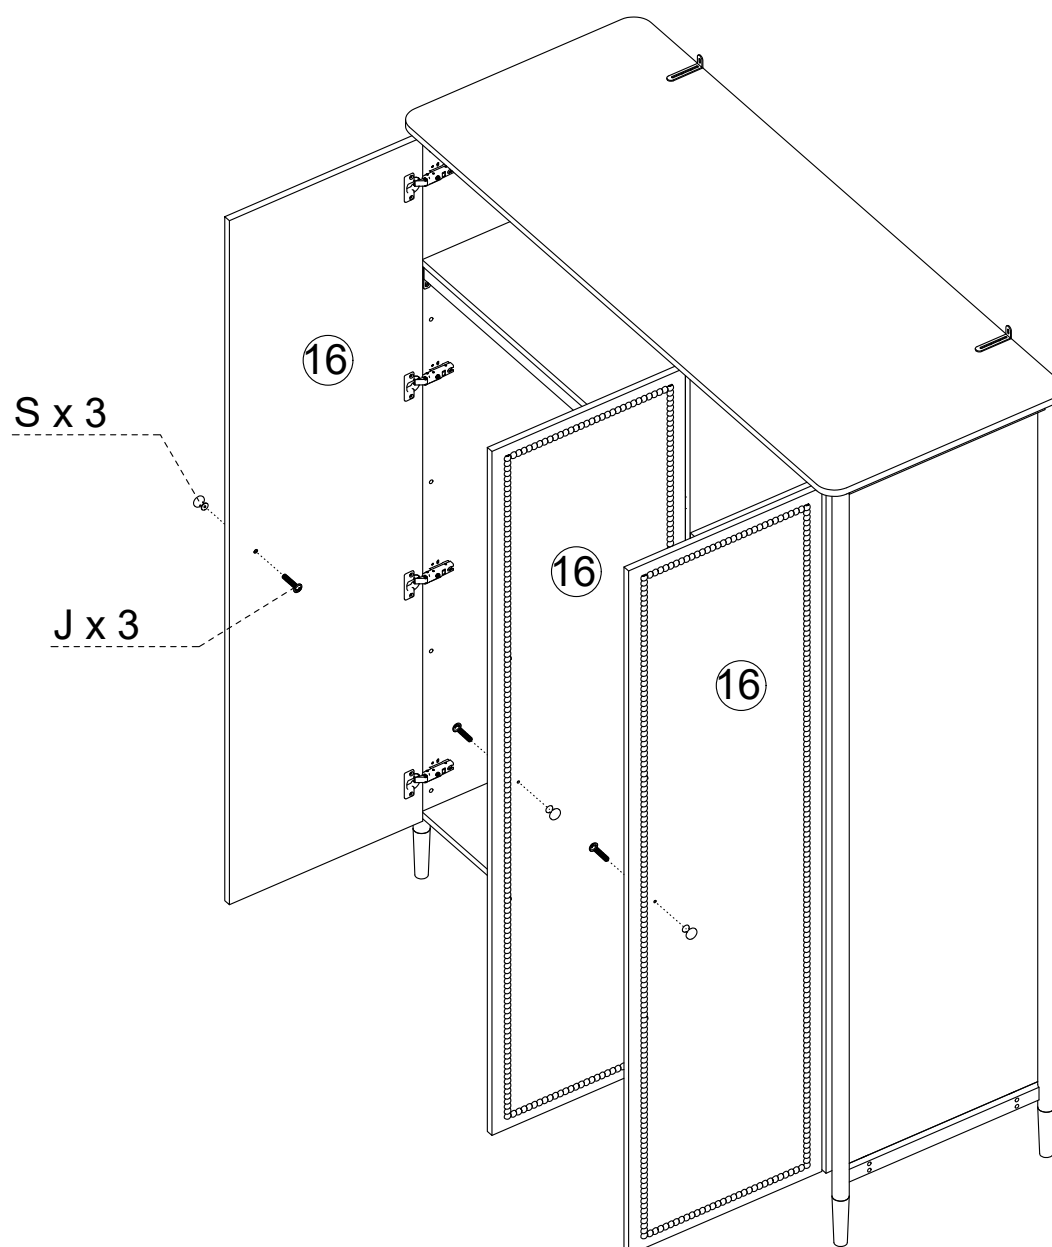


28.

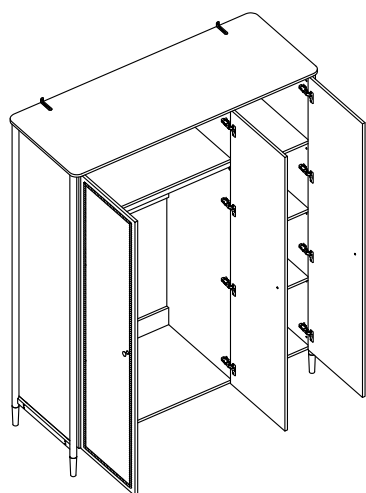



1.

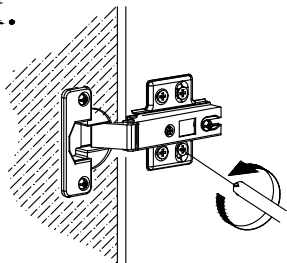


2.

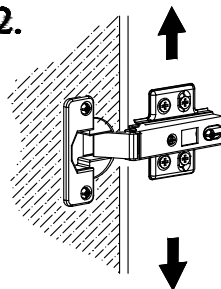


3.

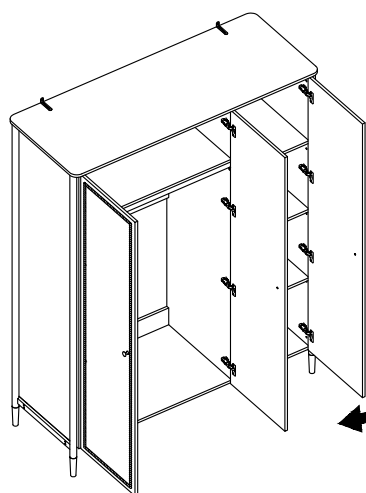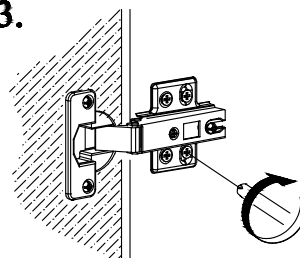



1.

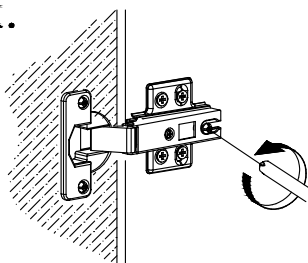


2.

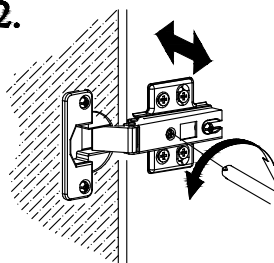


3.

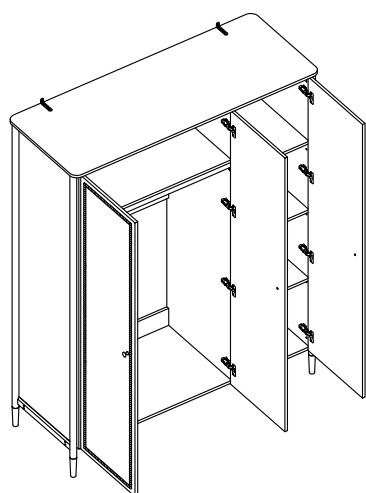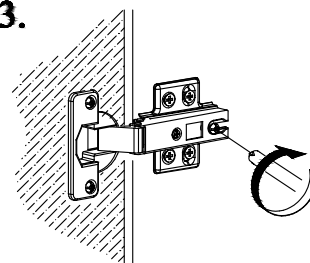

1.

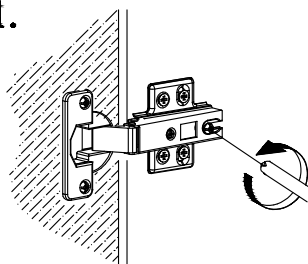

2.

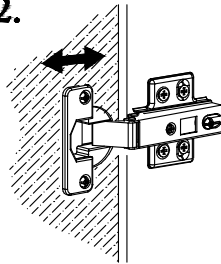

3.

