

DUSK.COM


LIVING | BEDROOM | DINING

Range Name: New Ruby

Box2 Dimensions: W194.5xD64.5xH18.5 (cm)

Product Dimensions: W275xD55xH180 (cm)

6 Door Wardrobe Box2 2/3

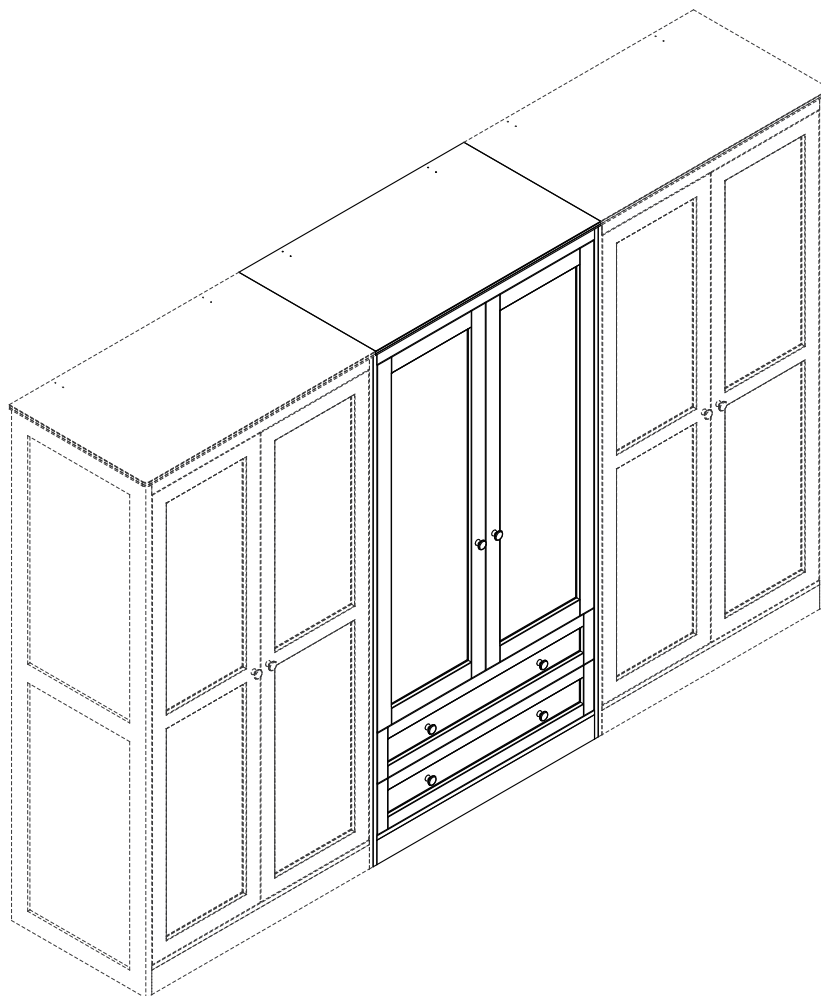

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Up to 90 minutes
assembly time



Three person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

V-1.0
P-1/16

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your 6 Door Wardrobe frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the product in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. In order to prevent overturning, this product must be used with the wall attachment device provided.
9. Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the 6 Door Wardrobe when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

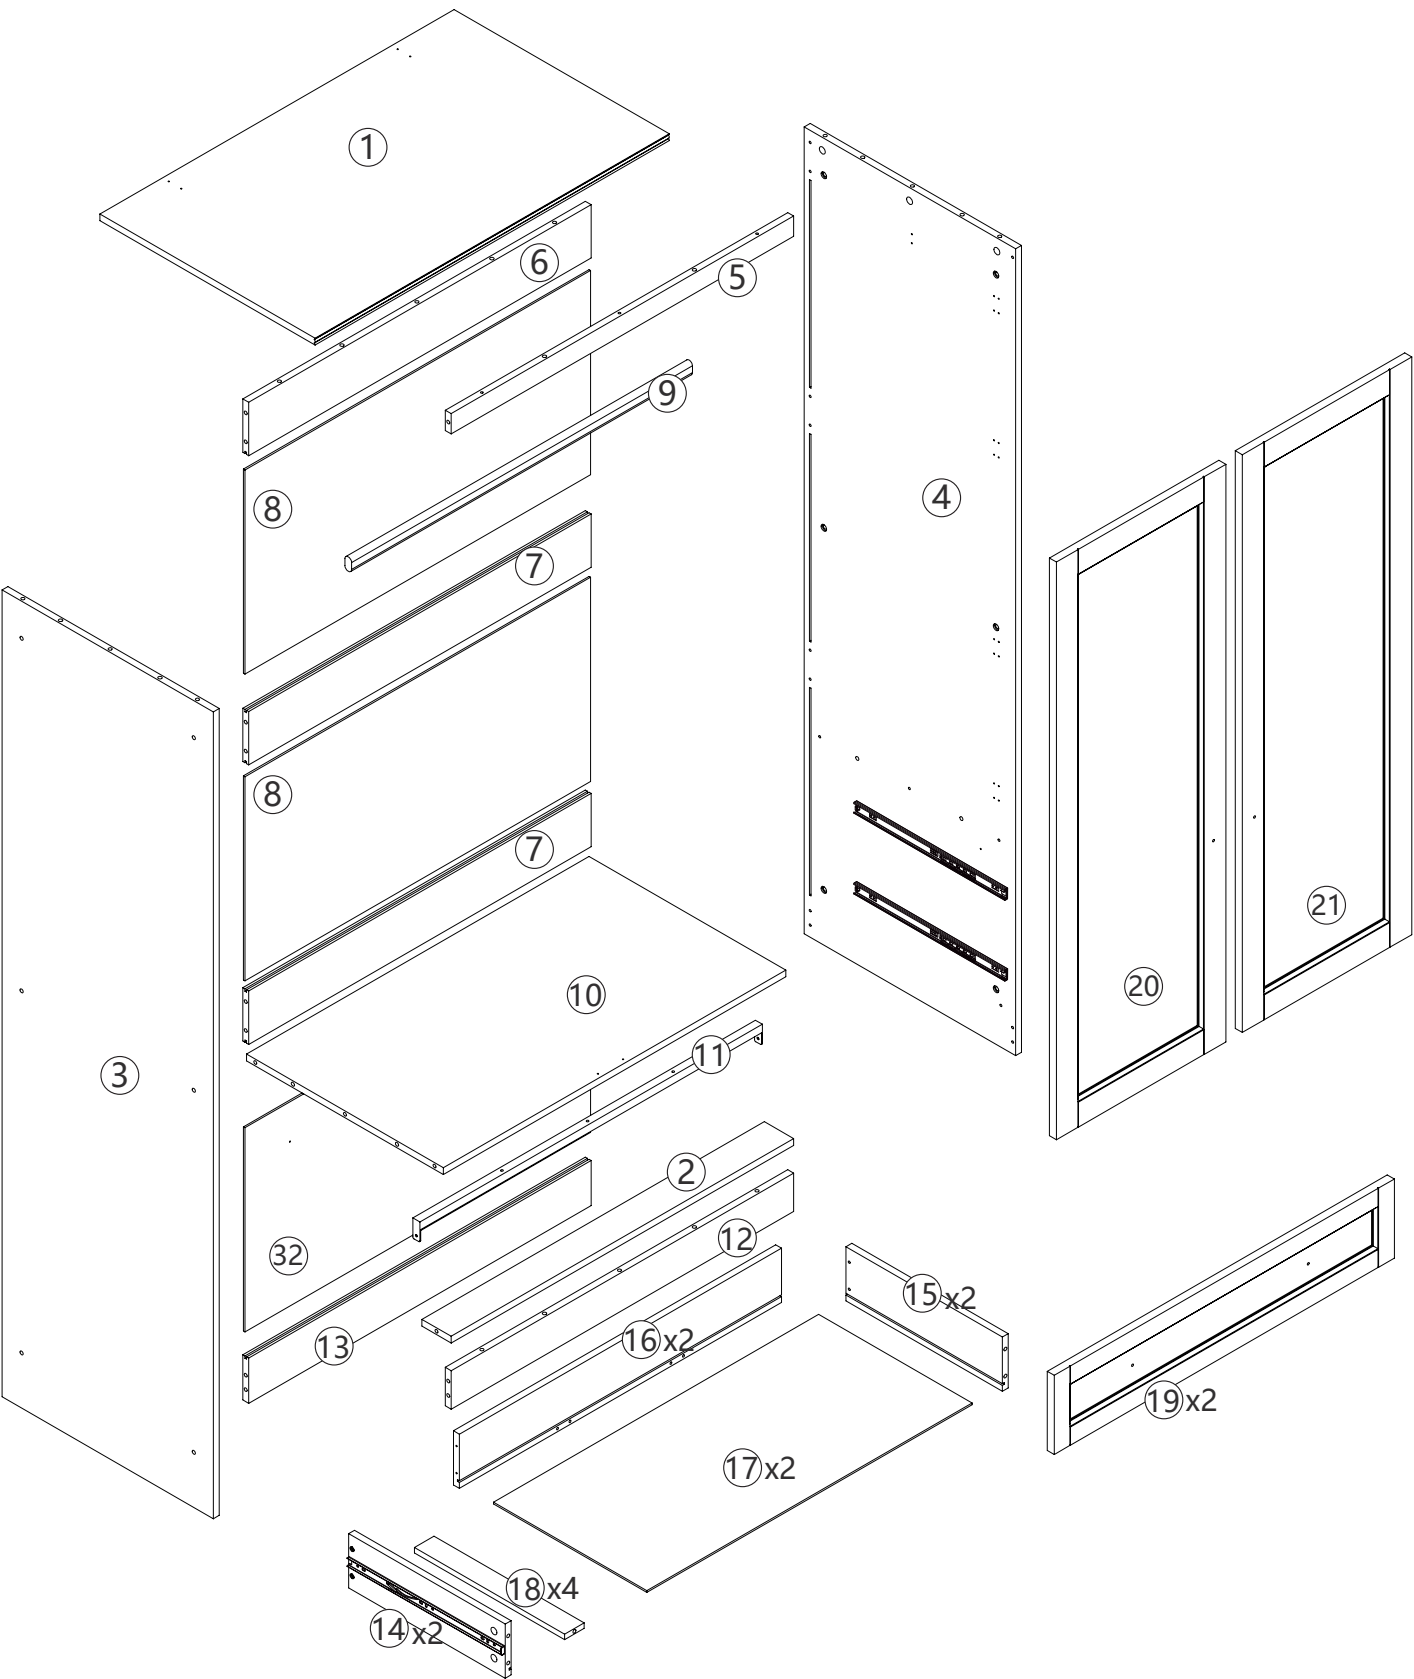






Parts list

Before you begin building your 6 Door Wardrobe, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
1	Top Panel	1 pc	Box2
2	Bottom Panel	1 pc	Box2
3	Left Side Panel With Slide Pre-assembled	1 pc	Box2
4	Right Side Panel With Slide Pre-assembled	1 pc	Box2
5	Front Support Bar	1 pc	Box2
6	Back Support Bar	1 pc	Box2
7	Back Support Bar	2 pcs	Box2
8	Back Panel	2 pcs	Box2
9	Hanging Bar	1 pc	Box2
10	Shelf Centre Panel	1 pc	Box2
11	Bottom Support Bar	1 pc	Box2
12	Leg Long Panel	1 pc	Box2
13	Leg Long Panel	1 pc	Box2
14	Drawer Left Side With Slide Pre-assembled	2 pcs	Box2
15	Drawer Right Side With Slide Pre-assembled	2 pcs	Box2
16	Drawer Back Side	2 pcs	Box2
17	Drawer Bottom	2 pcs	Box2
18	Drawer Bottom Support Bar	4 pcs	Box2
19	Drawer Front	2 pcs	Box2
20	Left Door Panel	1 pc	Box2
21	Right Door Panel	1 pc	Box2
32	Back Panel	1 pc	Box2

Fittings


Please check you have all the fittings listed below with your product in Box2.

A  M5*35mm Cam Lock Screw 54pcs+4pcs extra	B  Ø15*10mm Cam Lock 54pcs+4pcs extra	C  Ø8*30mm Dowel 14pcs+1pc extra	D  M4*35mm Screw 16pcs+2pcs extra	E  Cover 26pcs+3pcs extra	F  Plastic Buckle 24pcs+3pcs extra	G  M3*12mm Screw 28 pcs+3pcs extra
H  Handle 6pcs	I  M4*20mm Bolt 2pcs	J  Wooden Block 1pc	K  M4*40mm Screw 9pcs+1pc extra	L  M4*14mm Screw 54pcs+4pcs extra	M  Wall Bracket 2pcs	N  M4*12mm Screw 7pcs
O  M8*40mm Wall Anchor 6pcs	P  Tube Bracket 2pcs	Q  Door Catch 2pcs	R  M3*16mm Screw 4pcs	S  M4*30mm Screw 5pcs	T  Hinge 8pcs	U  M4*10mm Bolt 4pcs
V  Mat 6pcs	W  Confirmat Screw 12pcs					


Pre- assembled Fitting

Y1  Slide 4pcs	Y2  Slide 4pcs	Z  M3.5*12mm Screw 24pcs
---	---	---


Ensure the cam lock screws are installed correctly, as indicated by the "check mark" below.

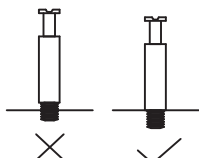


Refer to the illustration below to correctly use the cam lock screws for assembling the panels.

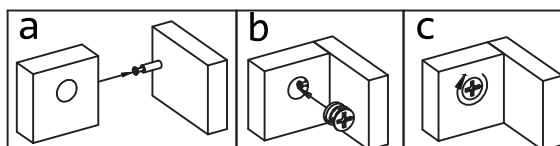


1. Attach parts to the side panel.

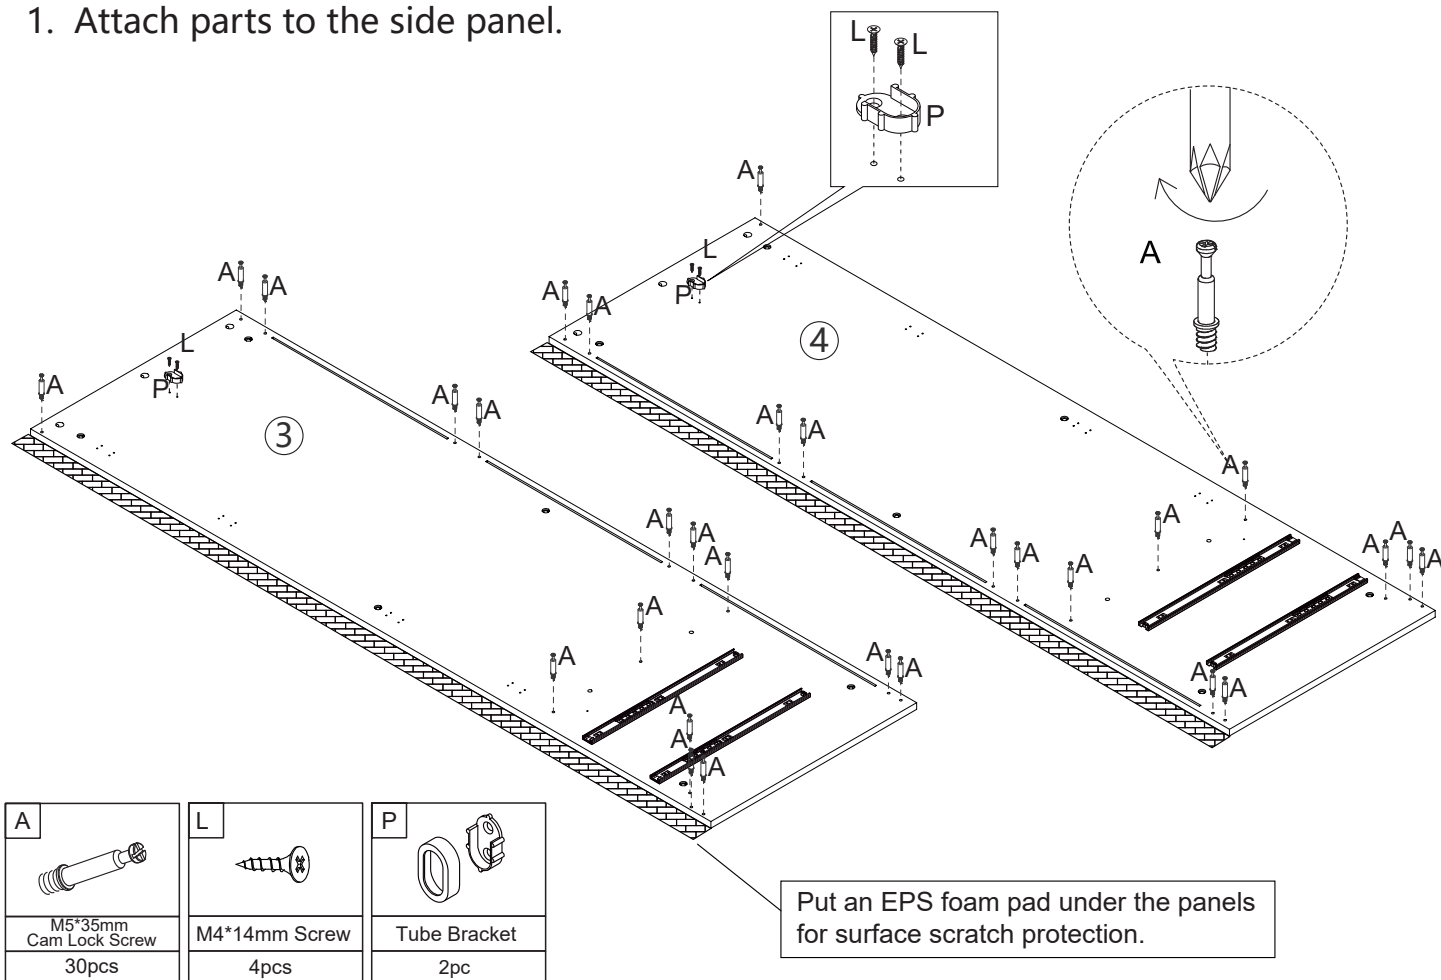

2. Assemble the panels of each part together according to the diagram.

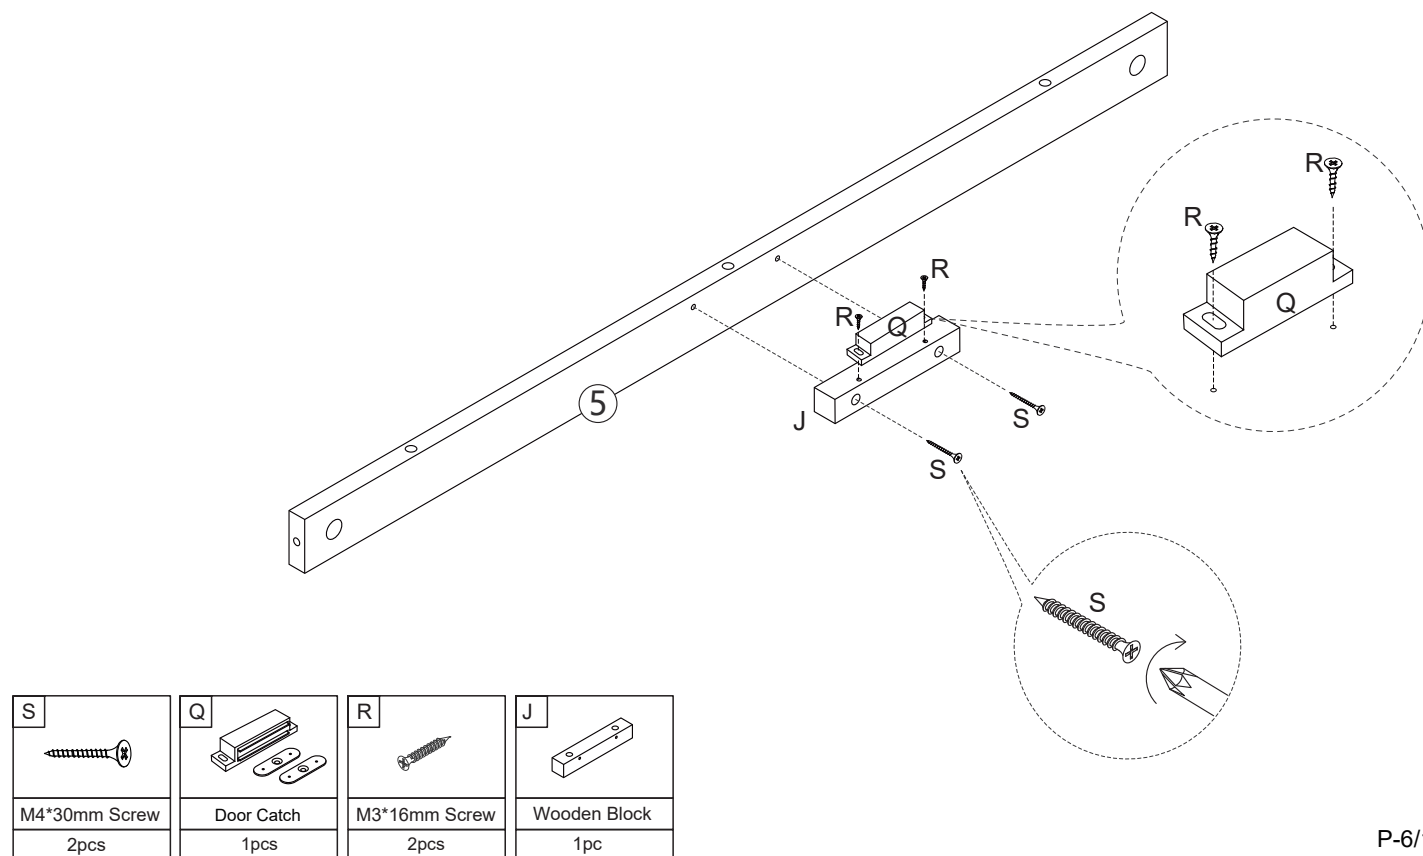


3. Assemble the panels of each part together according to the diagram.

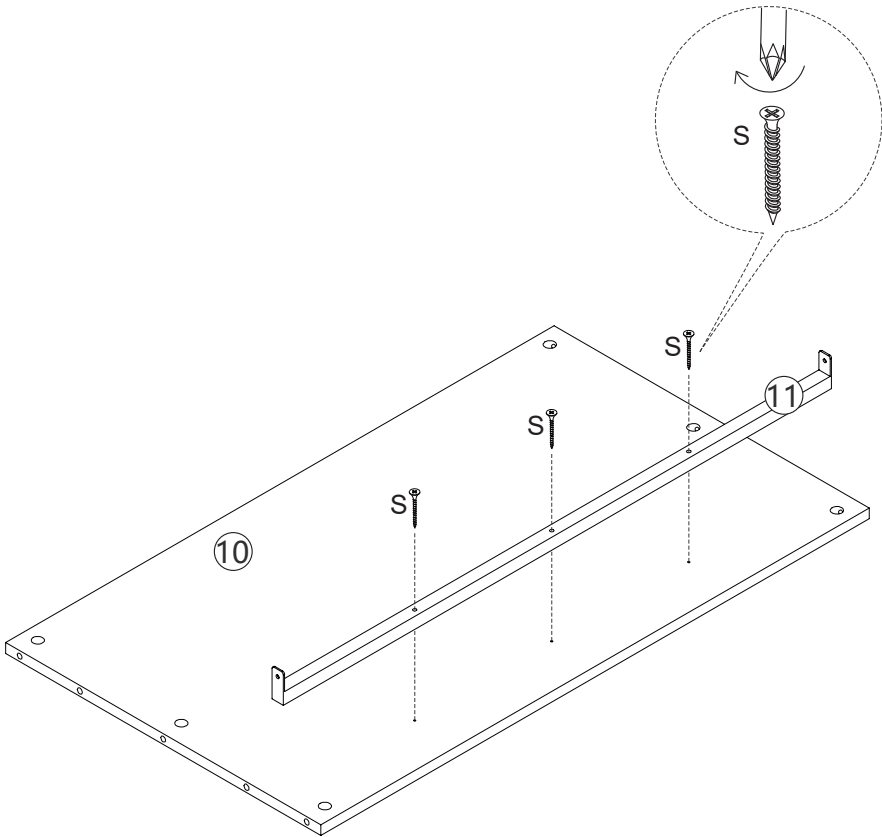


S


M4*30mm Screw
3pcs

4. Assemble the panels of each part together according to the diagram.

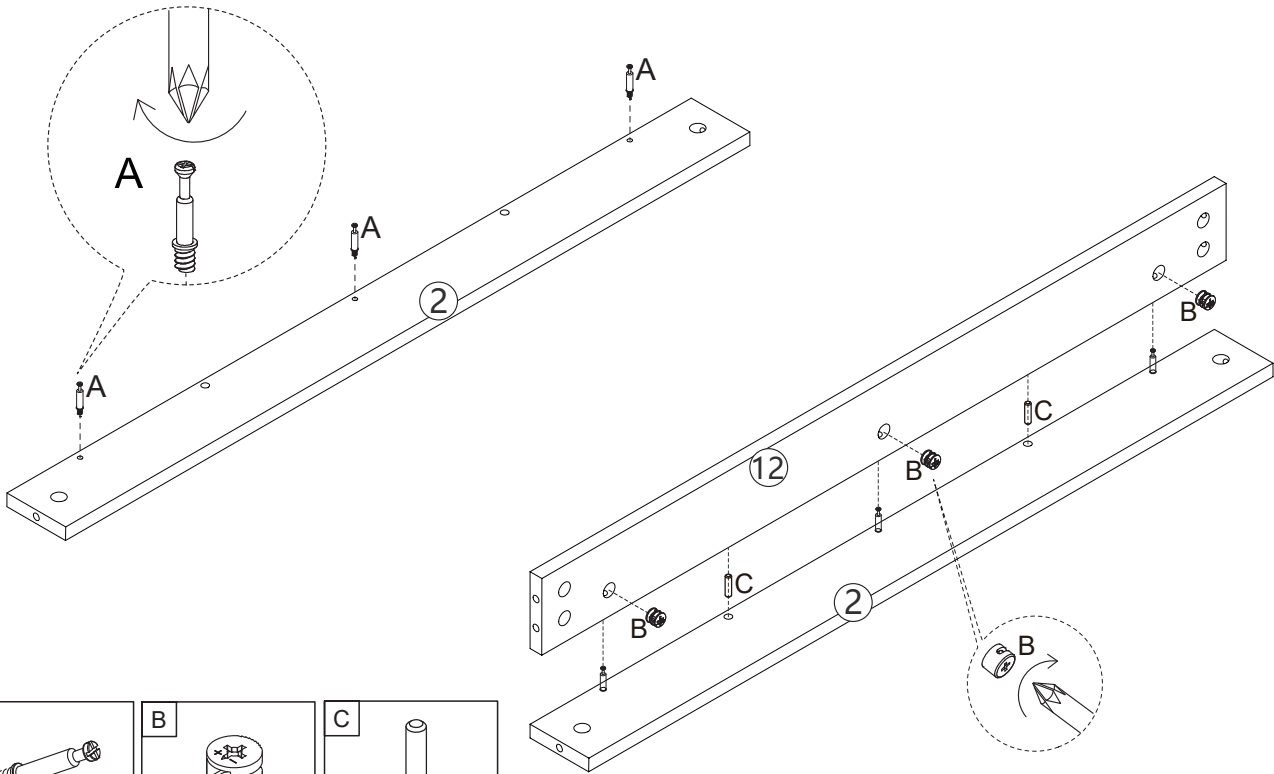


A	B	C
		
M5*35mm Cam Lock Screw	Ø15*10mm Cam Lockk	Ø8*30mm Dowel
3pcs	3pcs	2pcs


5. Assemble the panels of each part together according to the diagram.

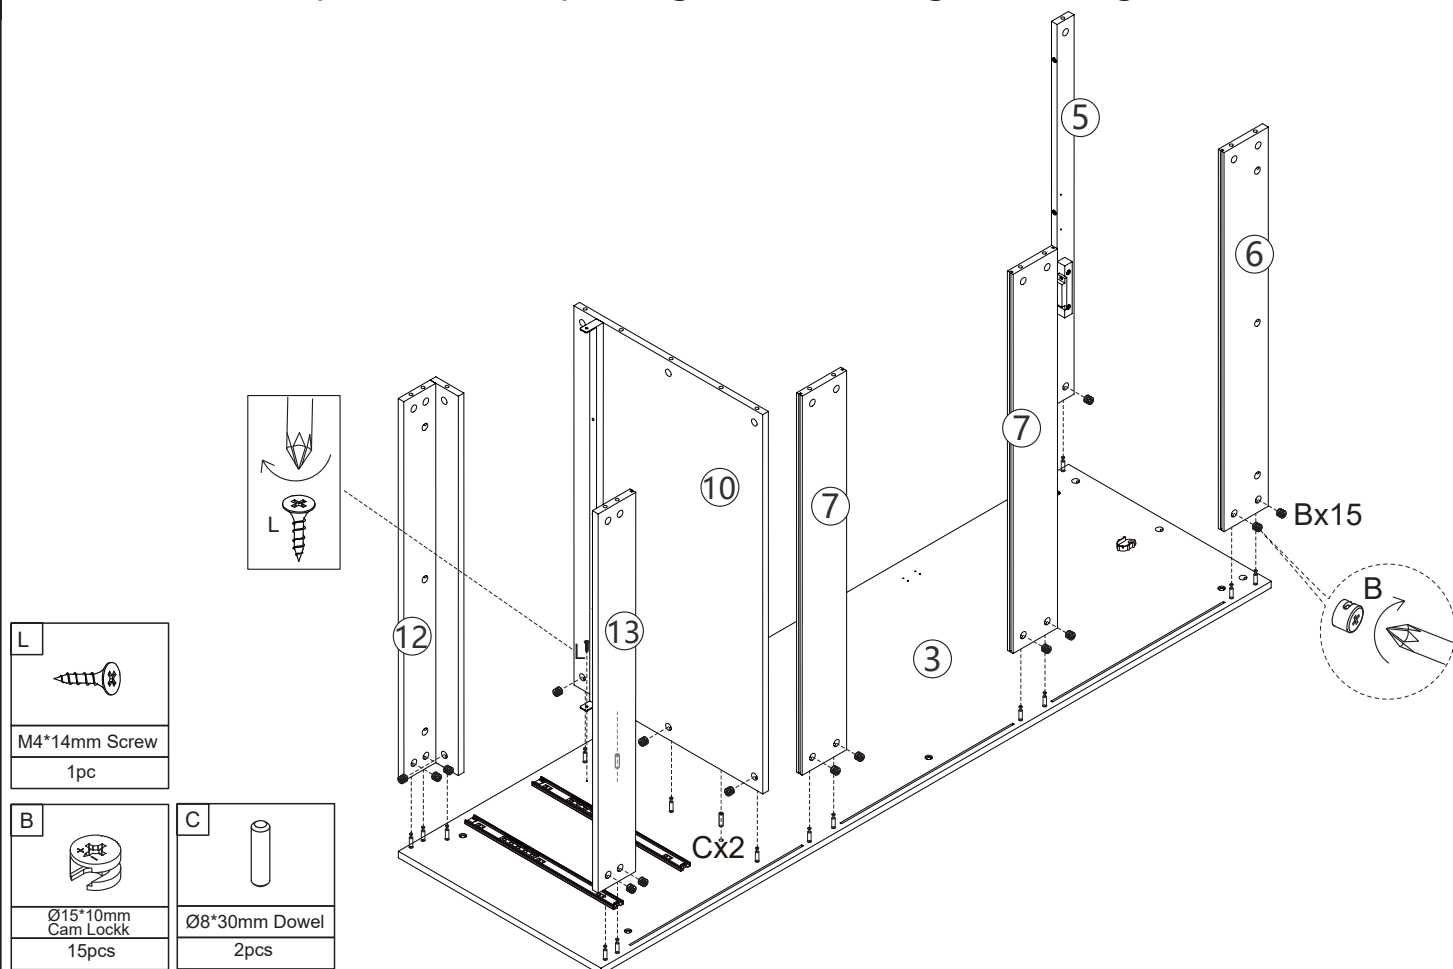


6. Assemble back panel.

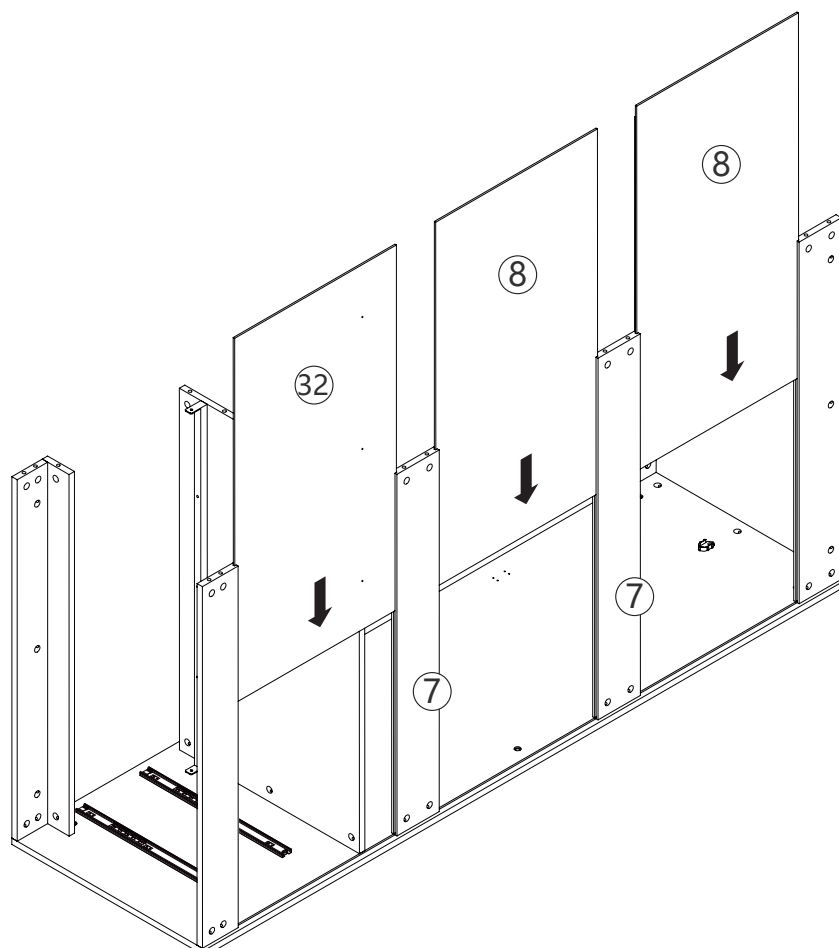


7. Assemble the panels of each part together according to the diagram.

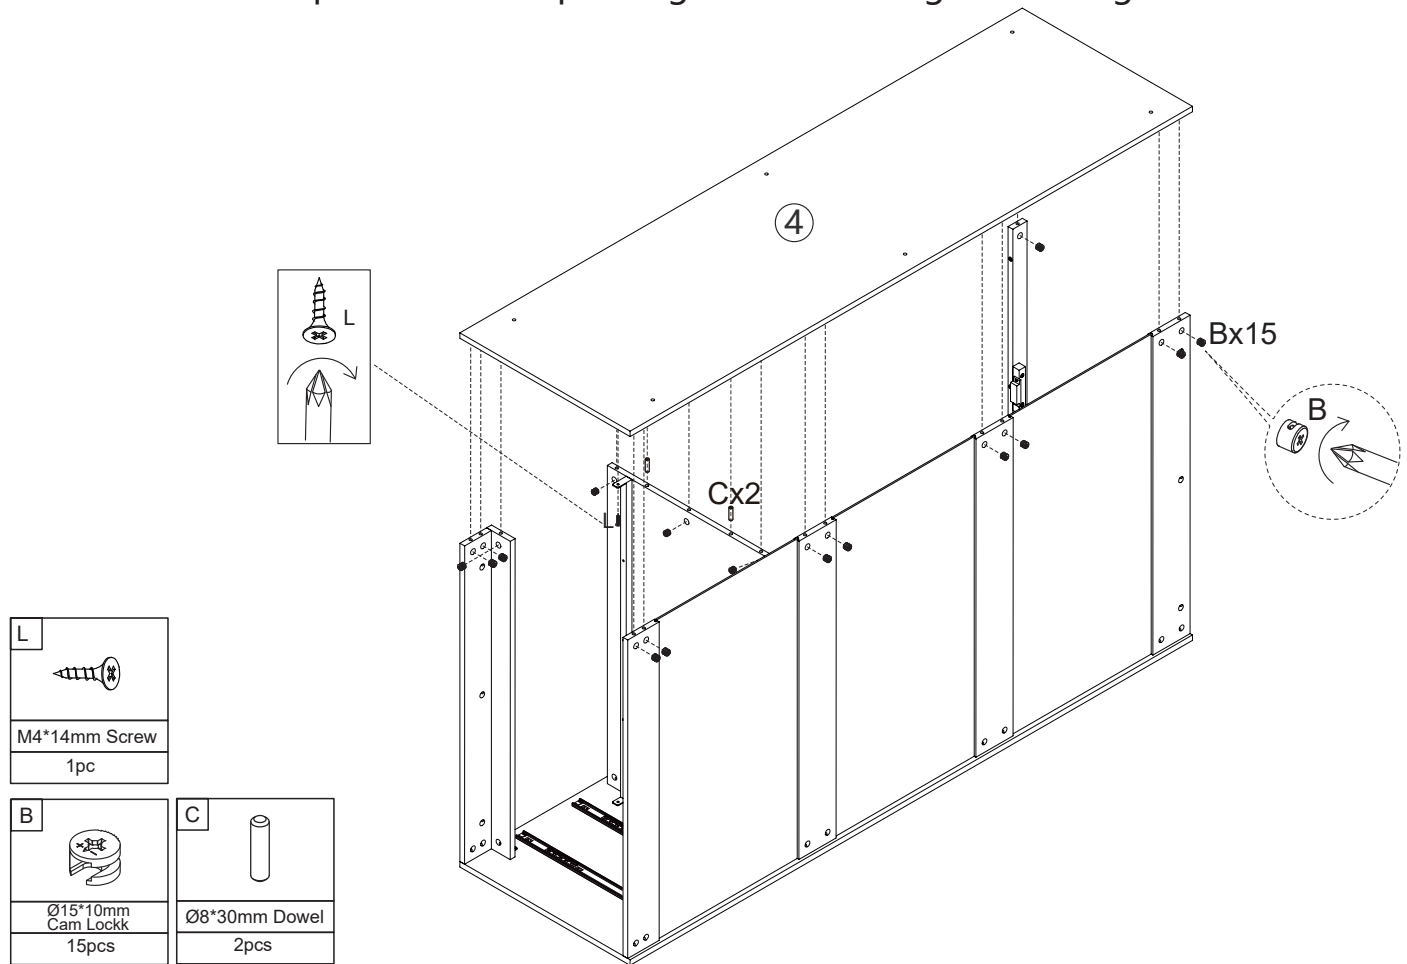


8. Attach parts to the panel.

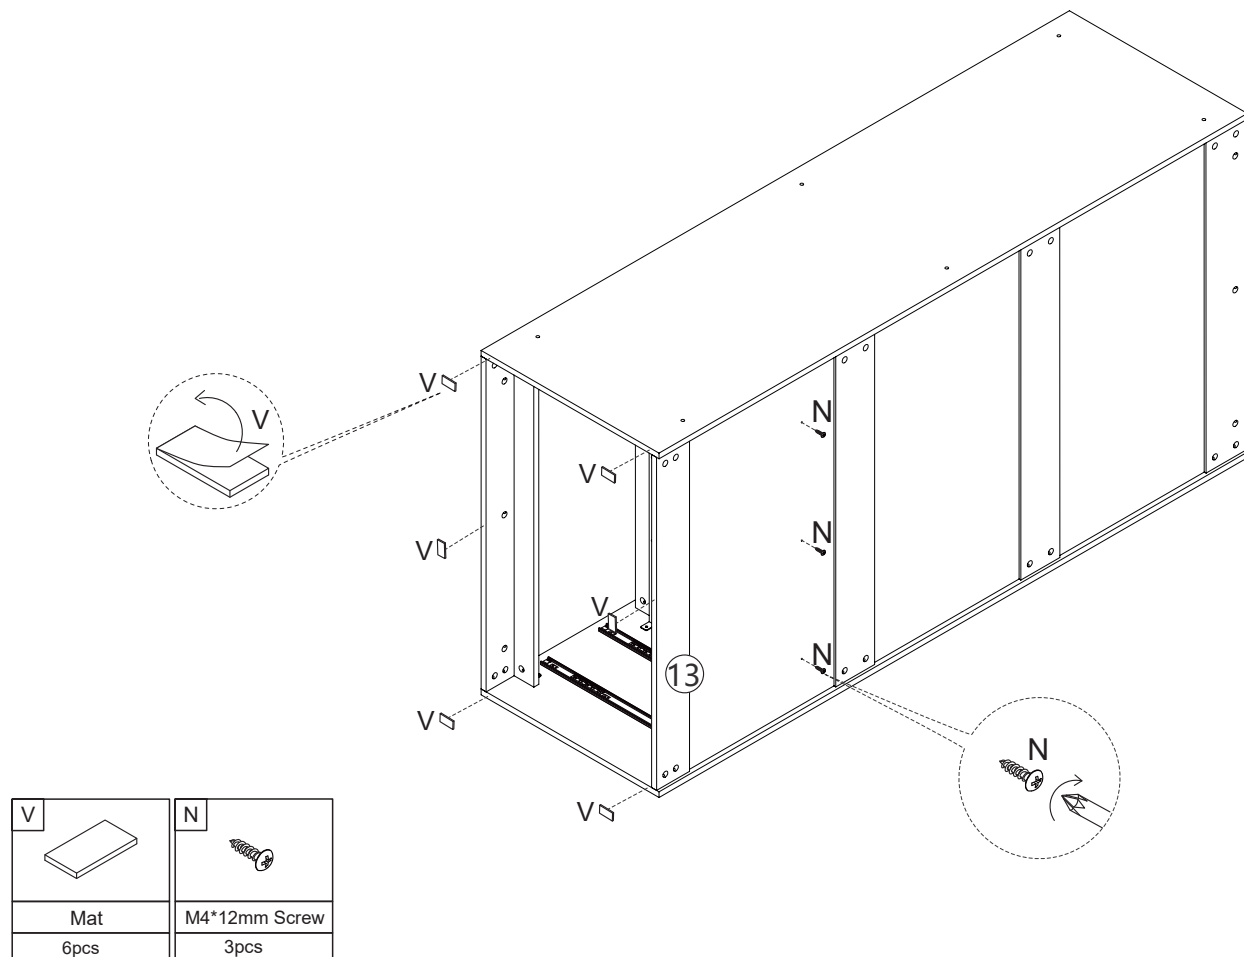




9. Attach parts to the top panel.

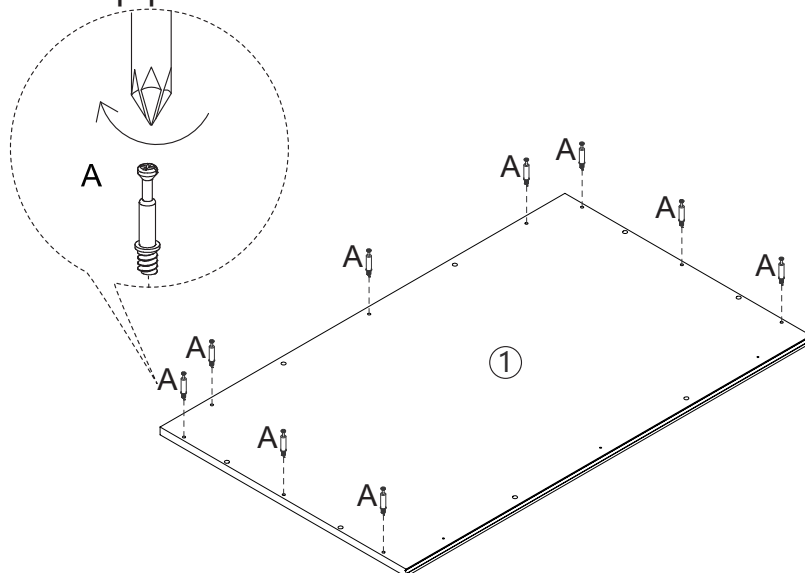


A

M5*35mm Cam Lock Screw
9pcs

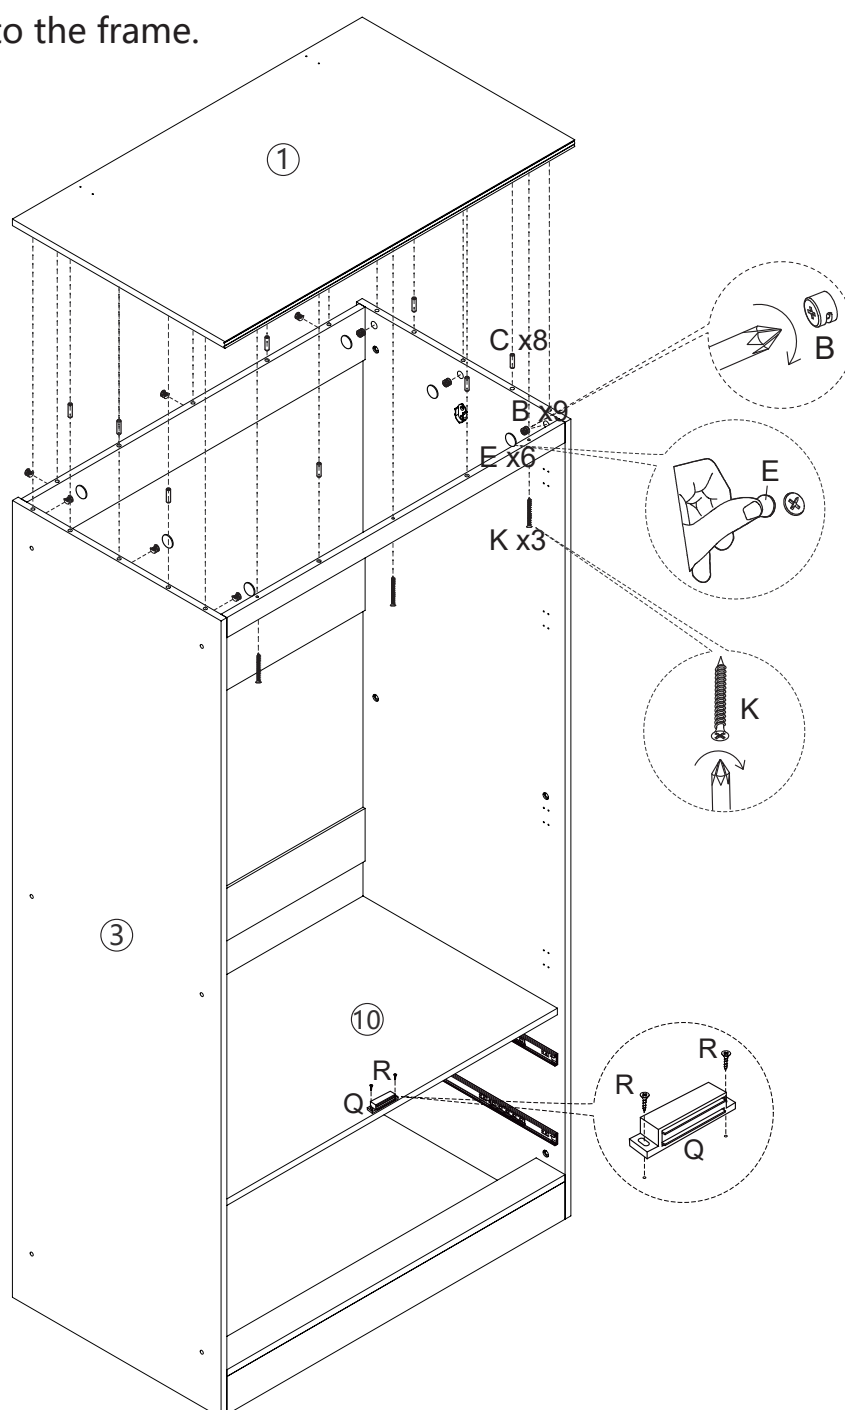10. Attach the top panel to the frame.




Q 	R 
Door Catch 1pc	M3*16mm Screw 2pcs
K 	E 
M4*40mm Screw 3pcs	Cover 6pcs
B 	C 
Ø15*10mm Cam Lock 9pcs	Ø8*30mm Dowel 8pcs

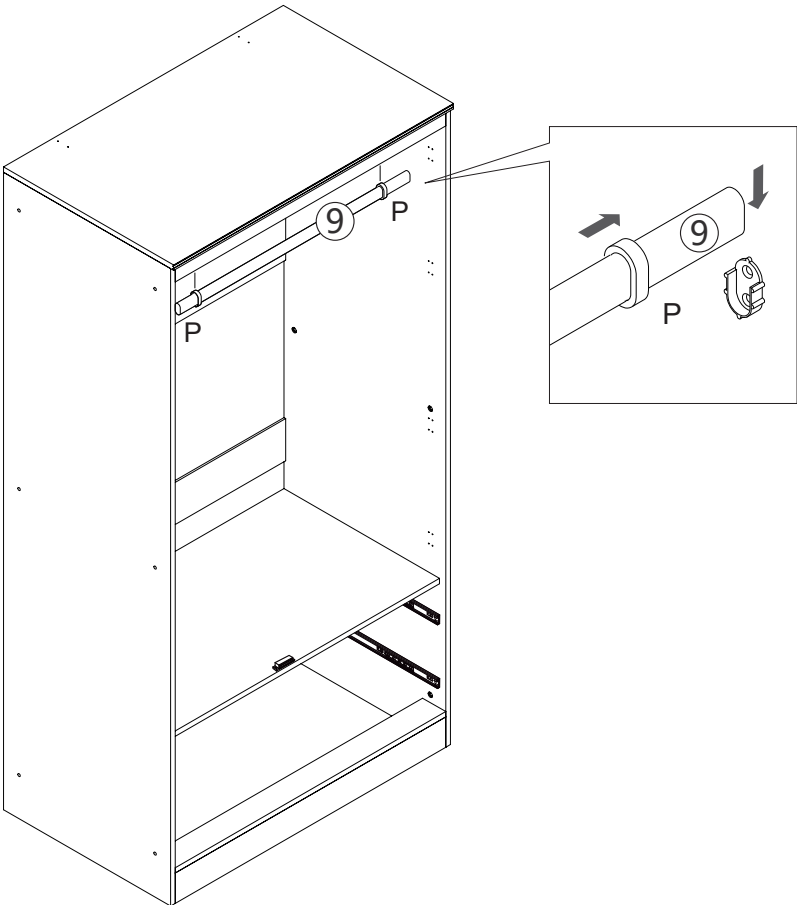11. Attach parts to the side panels.






P	
Tube Bracket	
2pcs	

12. Attach parts to the door panel.

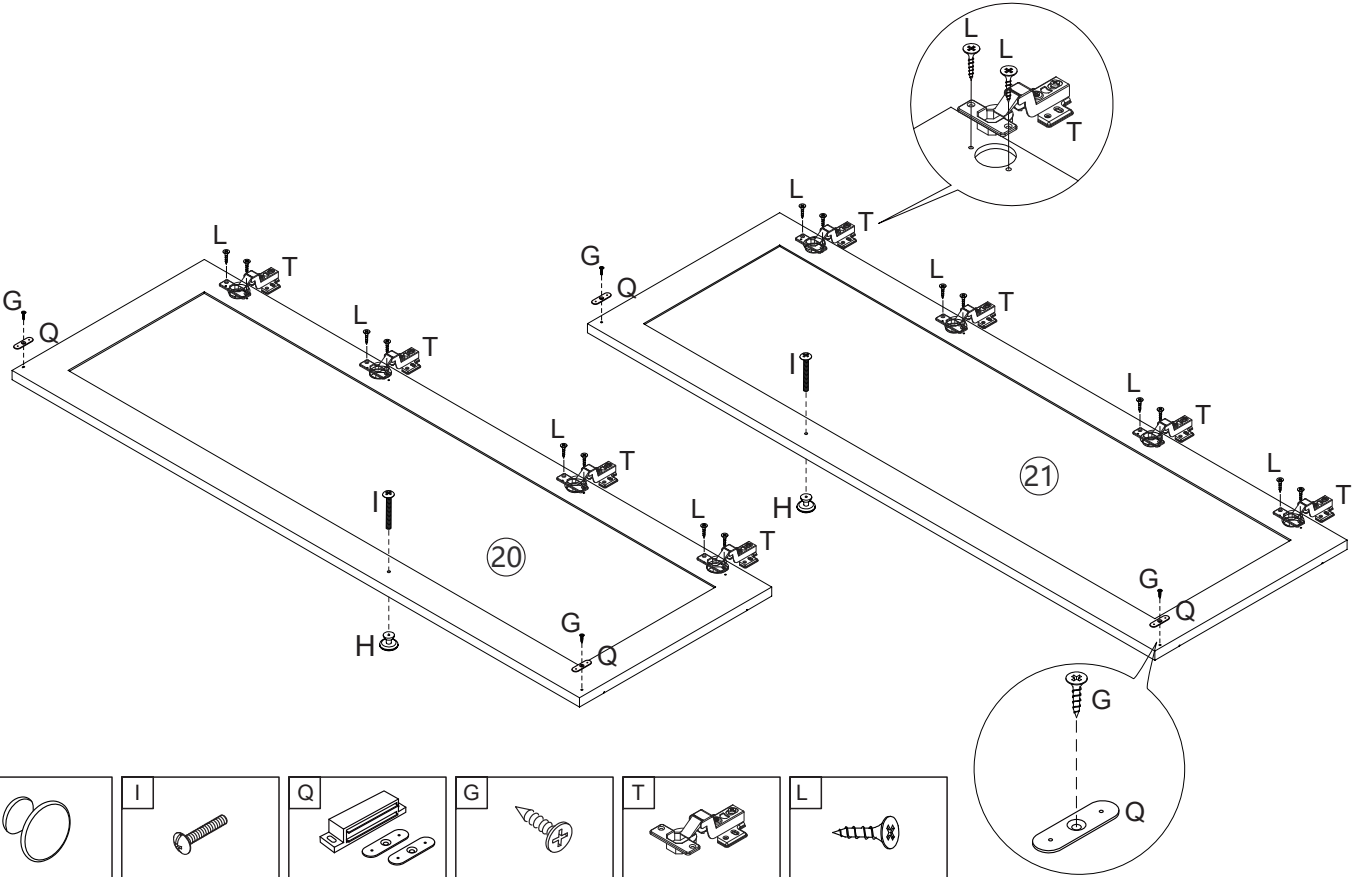



H		I		Q		G		T		L	
Handle		M4*20mm Bolt		Door Catch		M3*12mm Screw		Hinge		M4*14mm Screw	
2pcs		2pcs		2pcs		4pcs		8pcs		16pcs	

13. Assemble the door panel onto the cabinet and adjust it as shown in the picture, Make the door gap even and smooth.

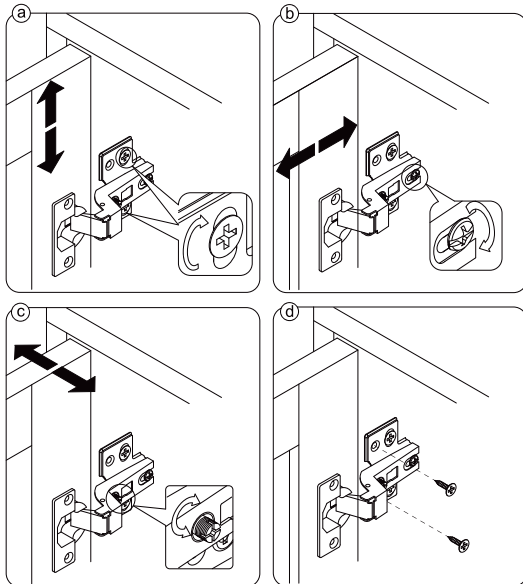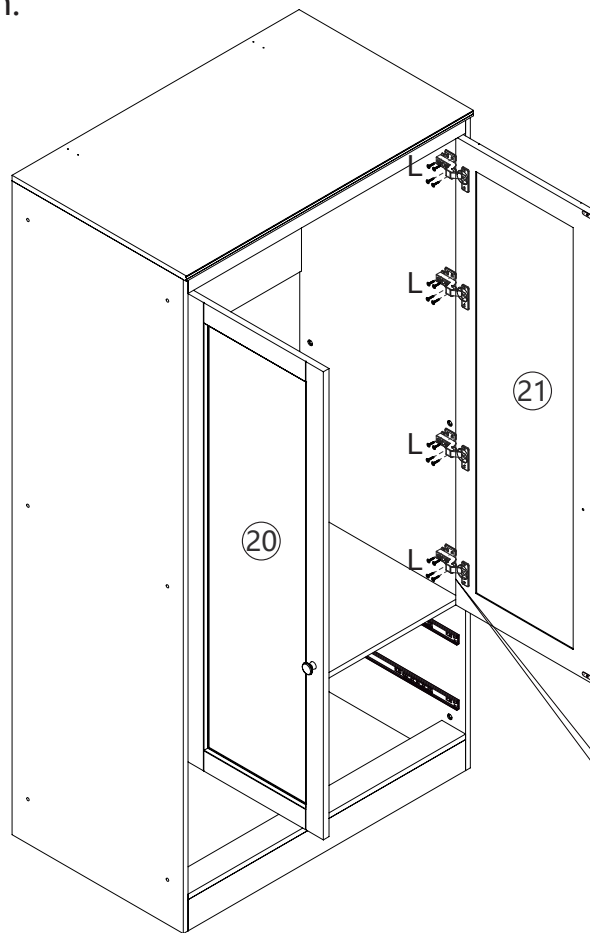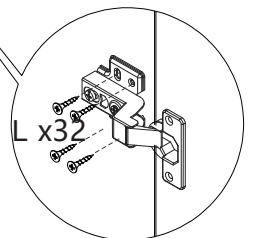


L	
M4*14mm Screw	
32pcs	

14. Attach the plastic buckles and screws etc.

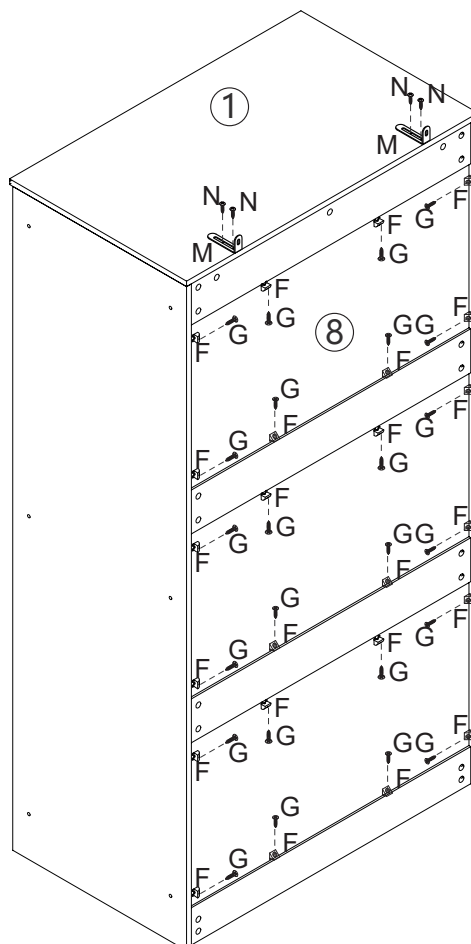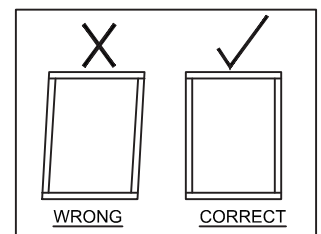


NB: Before tightening the plastic buckles and screws, please ensure the frame is square

F		G	
Plastic Buckle		M3*12mm Screw	
24pcs		24pcs	
M		N	
Wall Bracket		M4*12mm Screw	
2pcs		4pcs	

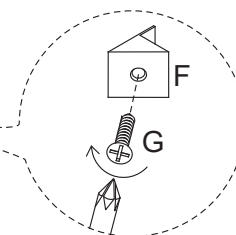


15. Assemble the drawer by following the steps shown in the illustration below.

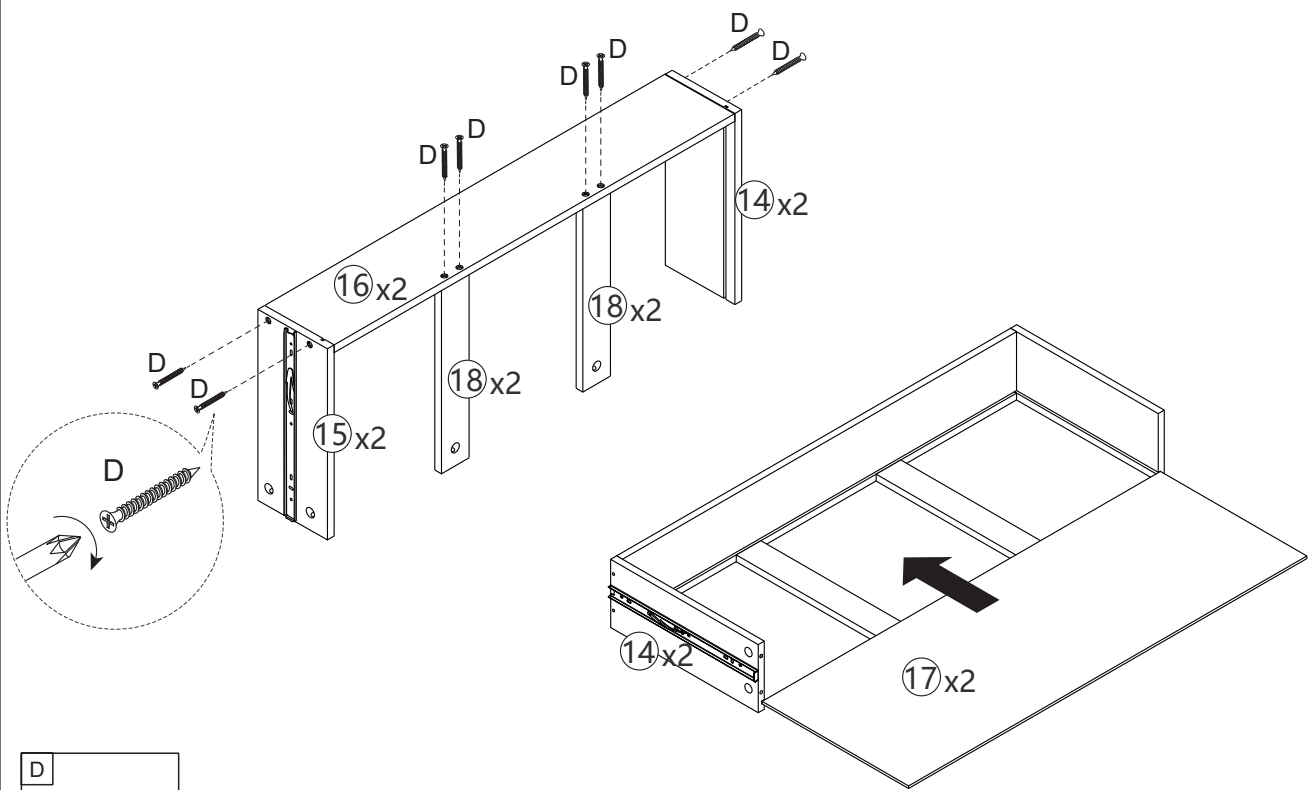


D


M4*35mm Screw
16pcs

16. Attach parts to the drawer front panel.

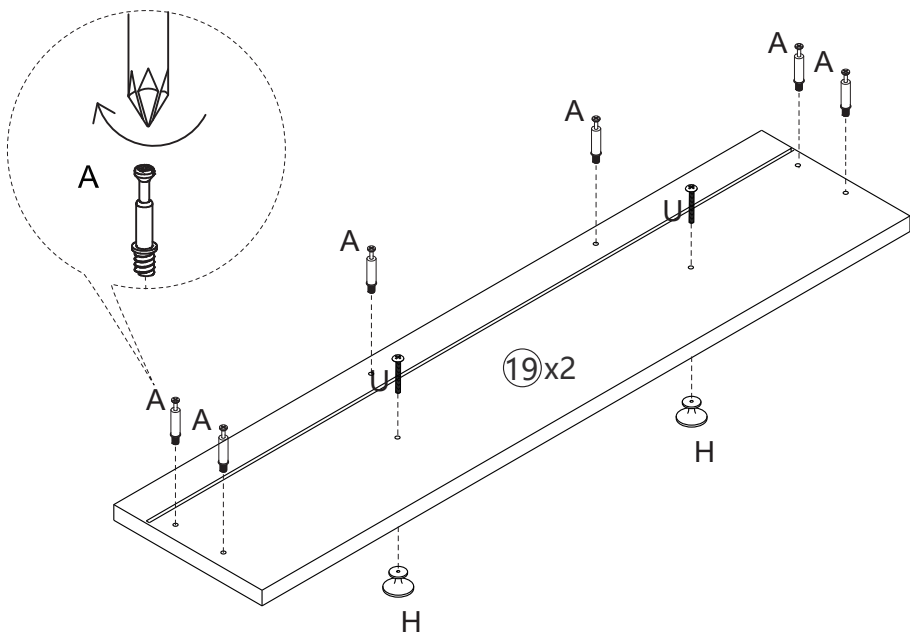


A	H	U
		
M5*35mm Cam Lock Screw	Handle	M4*10mm Bolt
12pcs	4pcs	4pcs



17. Assemble the drawer by following the steps shown in the illustration below.

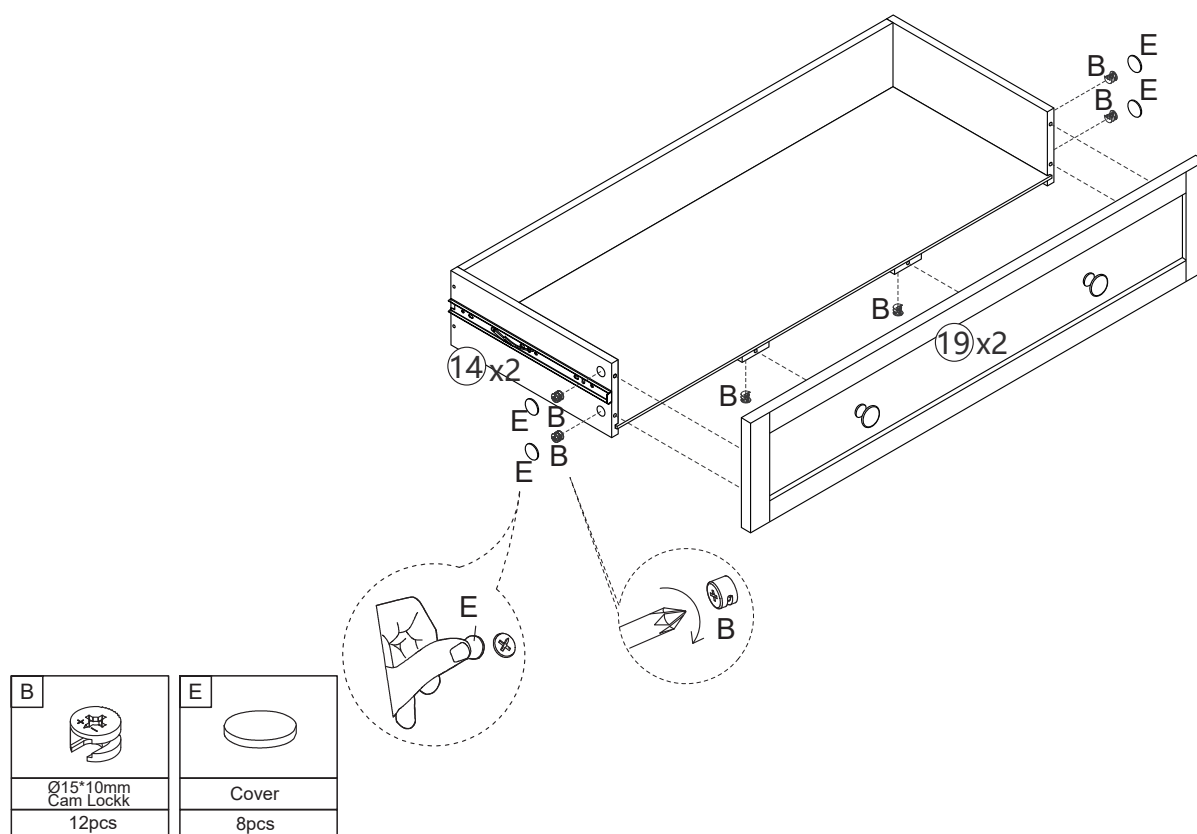

18. After assembling the cabinets from boxes 1, 2 and 3, connect the cabinets together as shown in the diagram. Ensure the floor is level before connecting the cabinets.


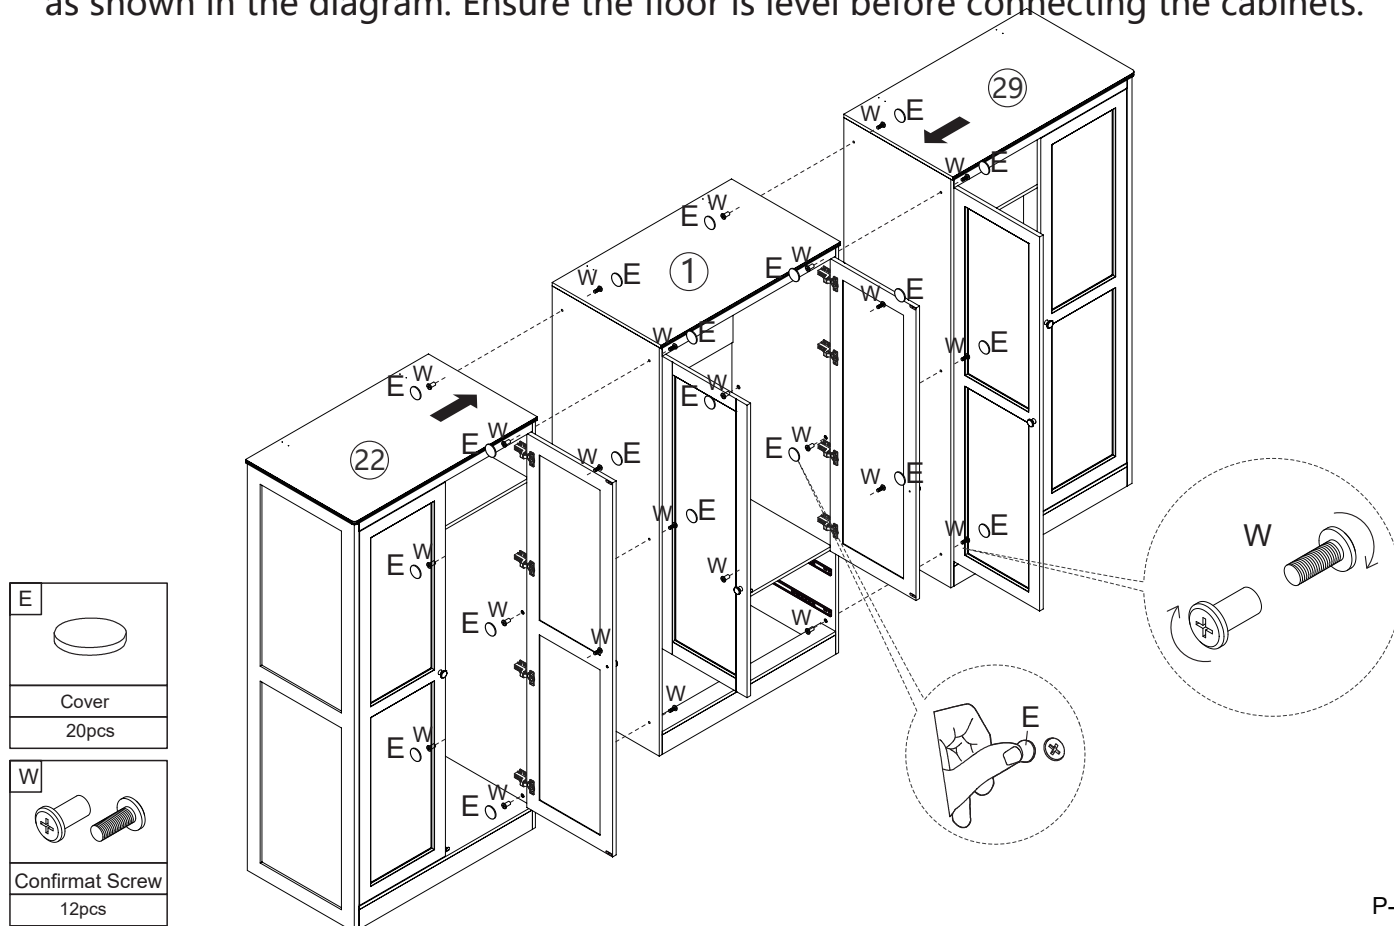


19. Assemble drawer in the cabinet. Install the drawers only after the three cabinets have been connected.

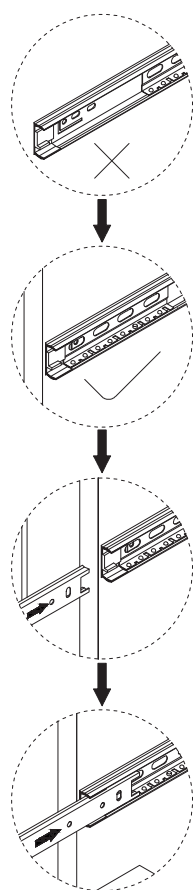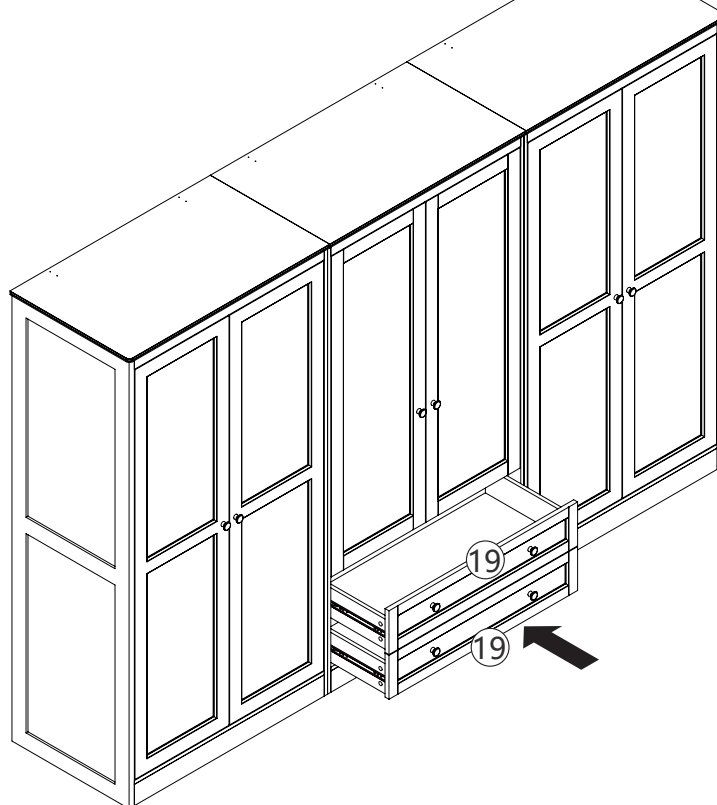

When installing the drawer into the cabinet, align the slide rails properly first, then push it gently — do not force it in.
Make sure to move the metal sheet to the outermost position.

20. Drill holes in the wall, insert expansion bolts, and then fix the furniture to the wall with screws.

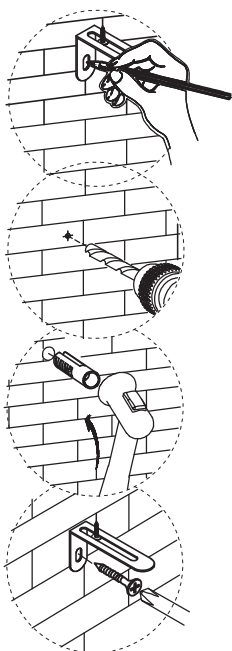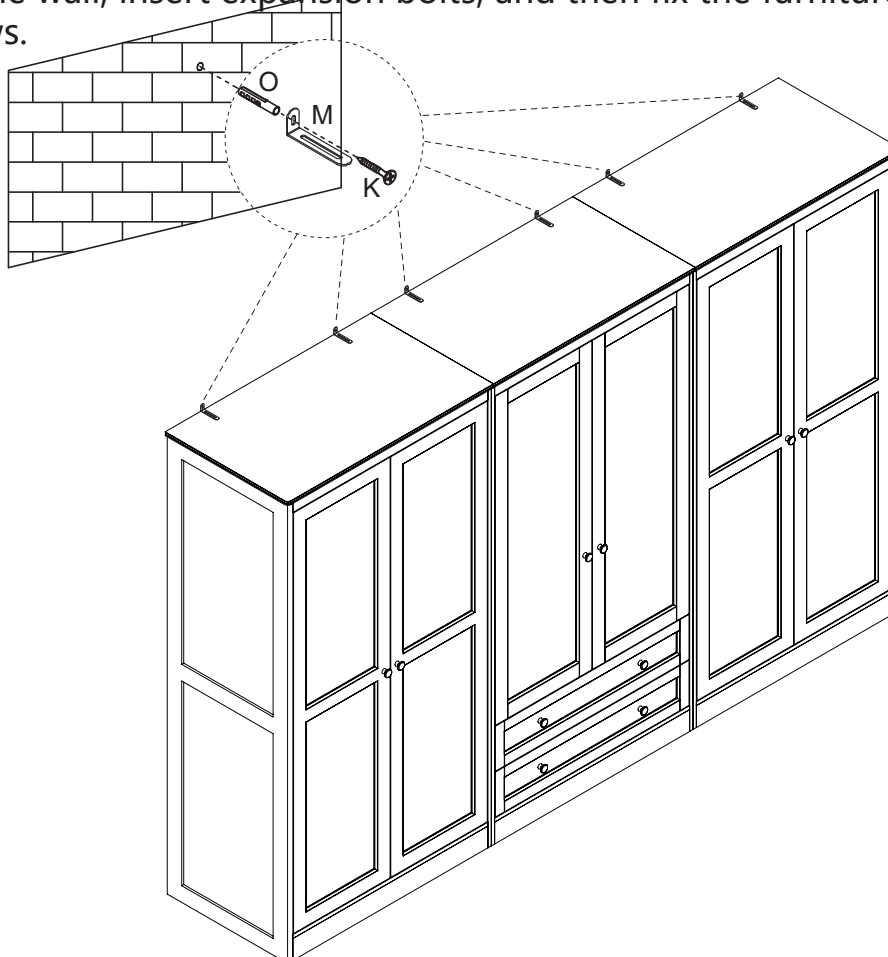

<div data-bbox="65 1951 217 2040"> </div> <div data-bbox="65 2040 217 2110"> M8*40mm Wall Anchor 6pcs </div>	<div data-bbox="233 1951 384 2040"> </div> <div data-bbox="233 2040 384 2110"> M4*40mm Screw 6pcs </div>
--	--

21 How to take apart a drawer

1. Pull out the drawer until the plastic clips on the rail are visible.
2. Push the plastic clip up on the left side and down on the right side.
Note that the clips on the left and right rails face opposite directions at the same time.
3. While pressing the clips at the same time, pull out the drawer to separate the rails.

