

DUSK.COM


LIVING | BEDROOM | DINING

Range Name: New Ruby

Box3 Dimensions: W193xD64xH20.5 (cm)

Product Dimensions: W275xD55xH180 (cm)

6 Door Wardrobe Box3 3/3

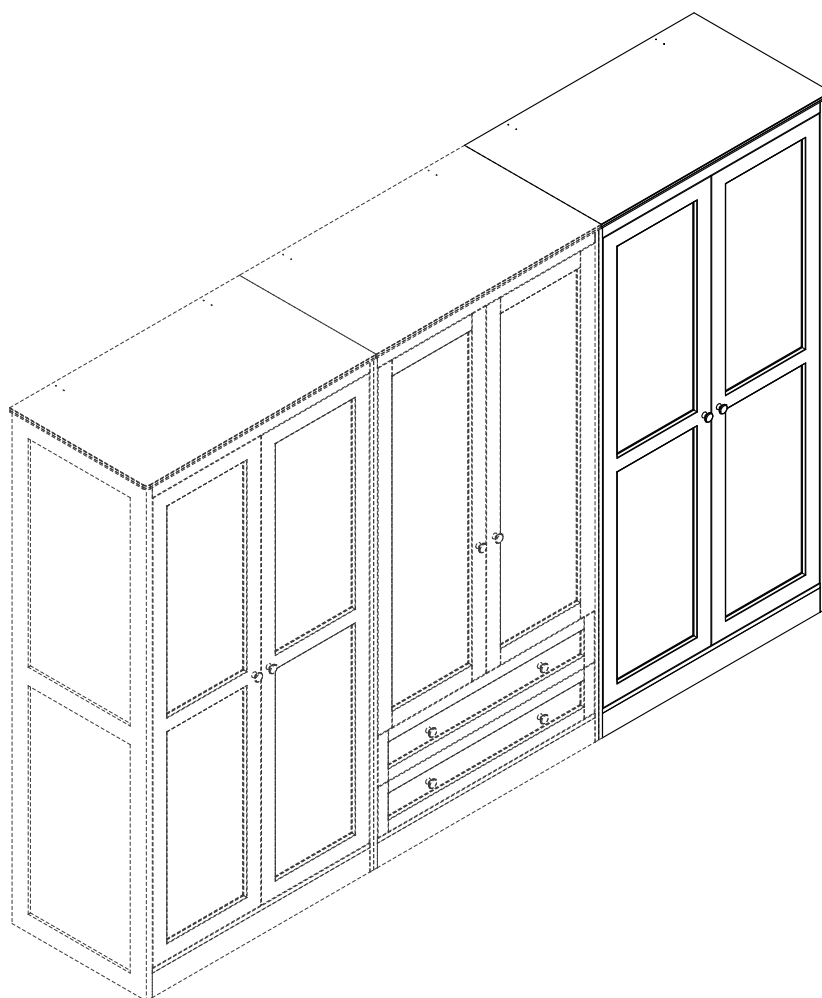

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Up to 90 minutes
assembly time



Three person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

V-1.0
P-1/13

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your 6 Door Wardrobe frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the product in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. In order to prevent overturning, this product must be used with the wall attachment device provided.
9. Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the 6 Door Wardrobe when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

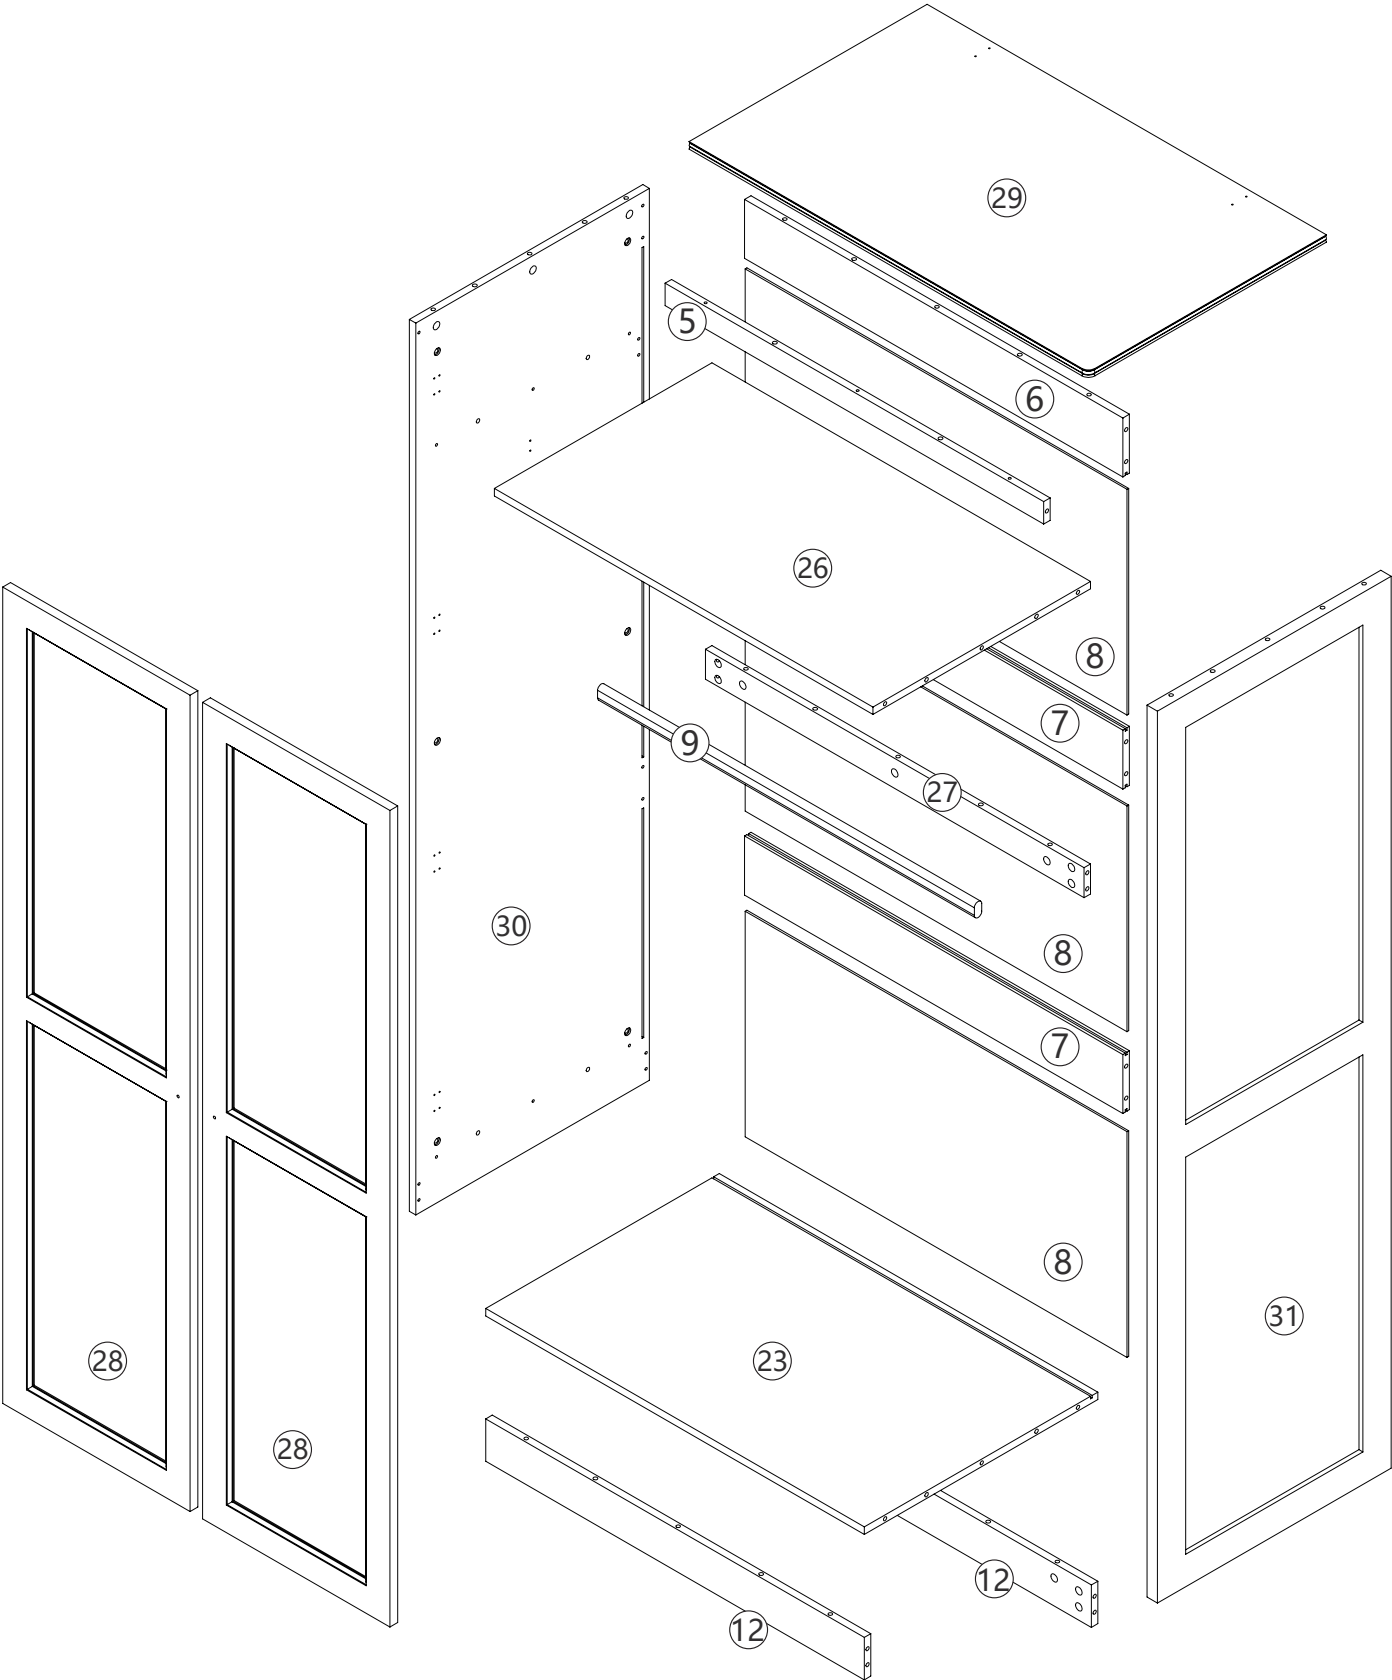








Parts list

Before you begin building your 6 Door Wardrobe, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.


Part Number	Part Description	Quantity	Box No
5	Front Support Bar	1 pc	Box3
6	Back Support Bar	1 pc	Box3
7	Back Support Bar	2 pcs	Box3
8	Back Panel	3 pcs	Box3
9	Hanging Bar	1 pc	Box3
12	Leg Long Panel	2 pcs	Box3
29	Top Panel	1 pc	Box3
23	Bottom Panel	1 pc	Box3
30	Left Side Panel	1 pc	Box3
31	Right Side Panel	1 pc	Box3
26	Shelf Centre Panel	1 pc	Box3
27	Back Support Bar	1 pc	Box3
28	Door Panel	2 pcs	Box3

Fittings


Please check you have all the fittings listed below with your product in Box3.

<div>A</div> <div></div> <div>M5*35mm Cam Lock Screw</div> <div>56pcs+4pcs extra</div>	<div>B</div> <div></div> <div>Ø15*10mm Cam Lock</div> <div>56pcs+4pcs extra</div>	<div>C</div> <div></div> <div>Ø8*30mm Dowel</div> <div>22pcs+2pcs extra</div>	<div>E</div> <div></div> <div>Cover</div> <div>13pcs+1pc extra</div>	<div>F</div> <div></div> <div>Plastic Buckle</div> <div>24pcs+3pcs extra</div>	<div>G</div> <div></div> <div>M3*12mm Screw</div> <div>28 pcs+3pcs extra</div>	<div>H</div> <div></div> <div>Handle</div> <div>2pcs</div>
<div>I</div> <div></div> <div>M4*20mm Bolt</div> <div>2pcs</div>	<div>J</div> <div></div> <div>Wooden Block</div> <div>1pc</div>	<div>K</div> <div></div> <div>M4*40mm Screw</div> <div>3pcs</div>	<div>L</div> <div></div> <div>M4*14mm Screw</div> <div>52pcs+4pcs extra</div>	<div>M</div> <div></div> <div>Wall Bracket</div> <div>2pcs</div>	<div>N</div> <div></div> <div>M4*12mm Screw</div> <div>4pcs</div>	<div>P</div> <div></div> <div>Tube Bracket</div> <div>2pcs</div>
<div>Q</div> <div></div> <div>Door Catch</div> <div>2pcs</div>	<div>R</div> <div></div> <div>M3*16mm Screw</div> <div>4pcs</div>	<div>S</div> <div></div> <div>M4*30mm Screw</div> <div>2pcs</div>	<div>T</div> <div></div> <div>Hinge</div> <div>8pcs</div>	<div>V</div> <div></div> <div>Mat</div> <div>6pcs</div>		


Ensure the cam lock screws are installed correctly, as indicated by the "check mark" below.

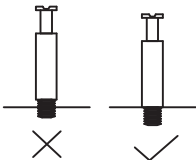


Refer to the illustration below to correctly use the cam lock screws for assembling the panels.

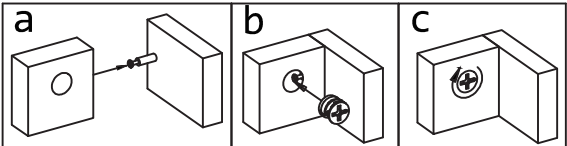


1. Attach parts to the side panel.

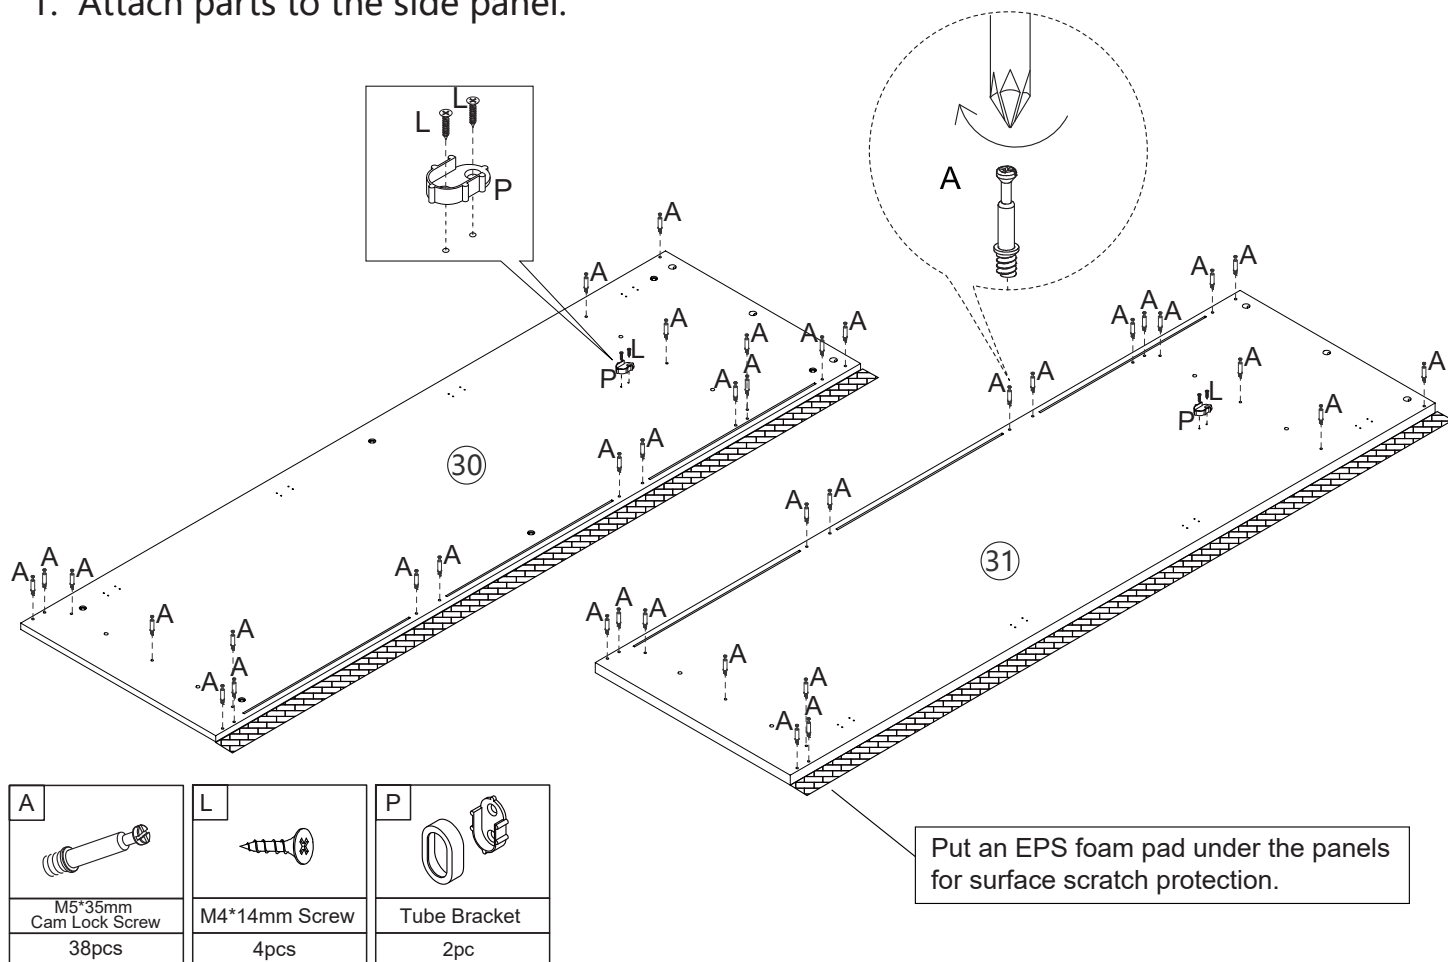


2. Assemble the panels of each part together according to the diagram.

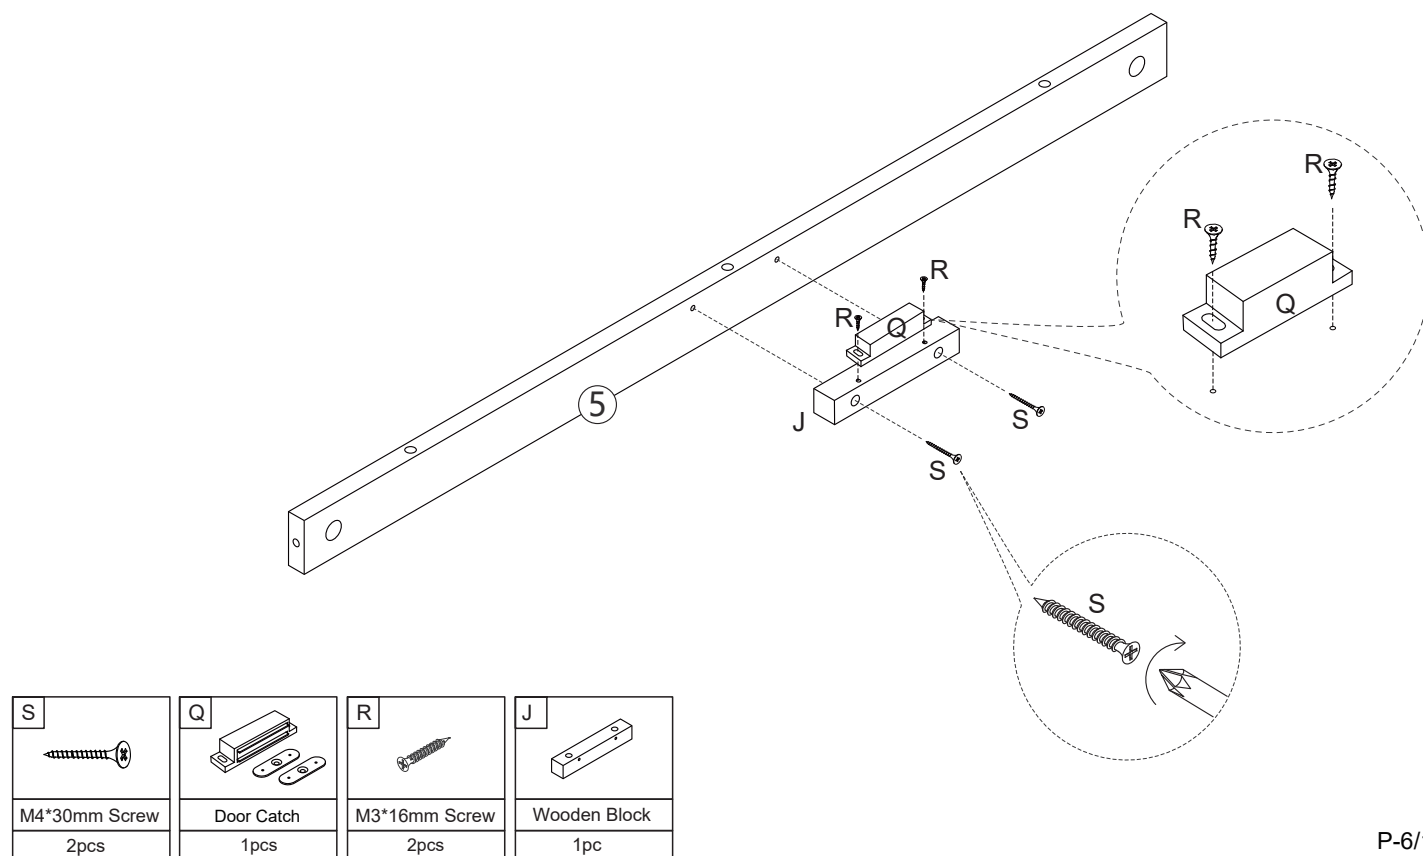



3. Assemble the panels of each part together according to the diagram.

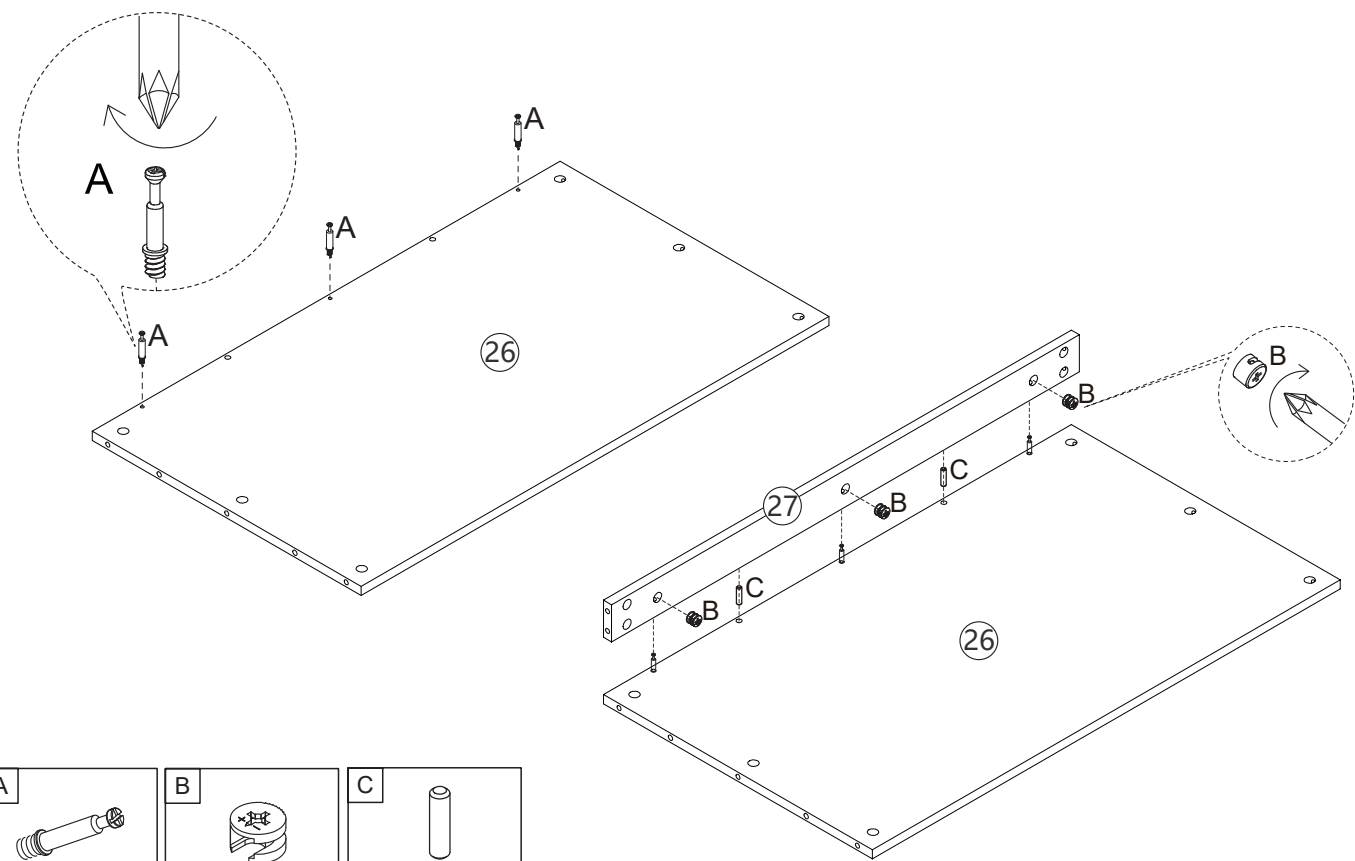


A 	B 	C 
M5*35mm Cam Lock Screw 3pcs	Ø15*10mm Cam Lockk 3pcs	Ø8*30mm Dowel 2pcs

4. Assemble the panels of each part together according to the diagram.

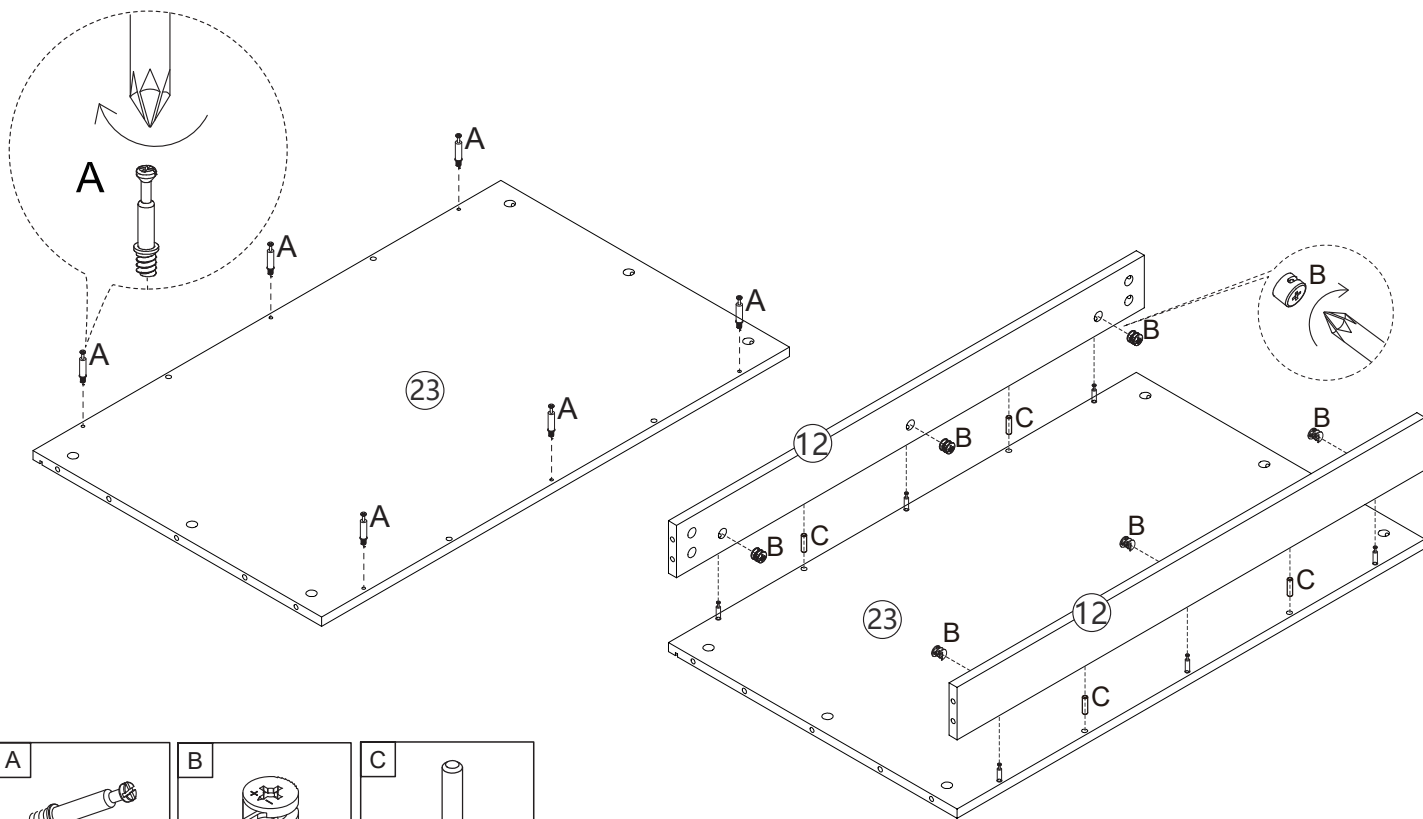


A 	B 	C 
M5*35mm Cam Lock Screw 6pcs	Ø15*10mm Cam Lockk 6pcs	Ø8*30mm Dowel 4pcs


5. Assemble the panels of each part together according to the diagram.

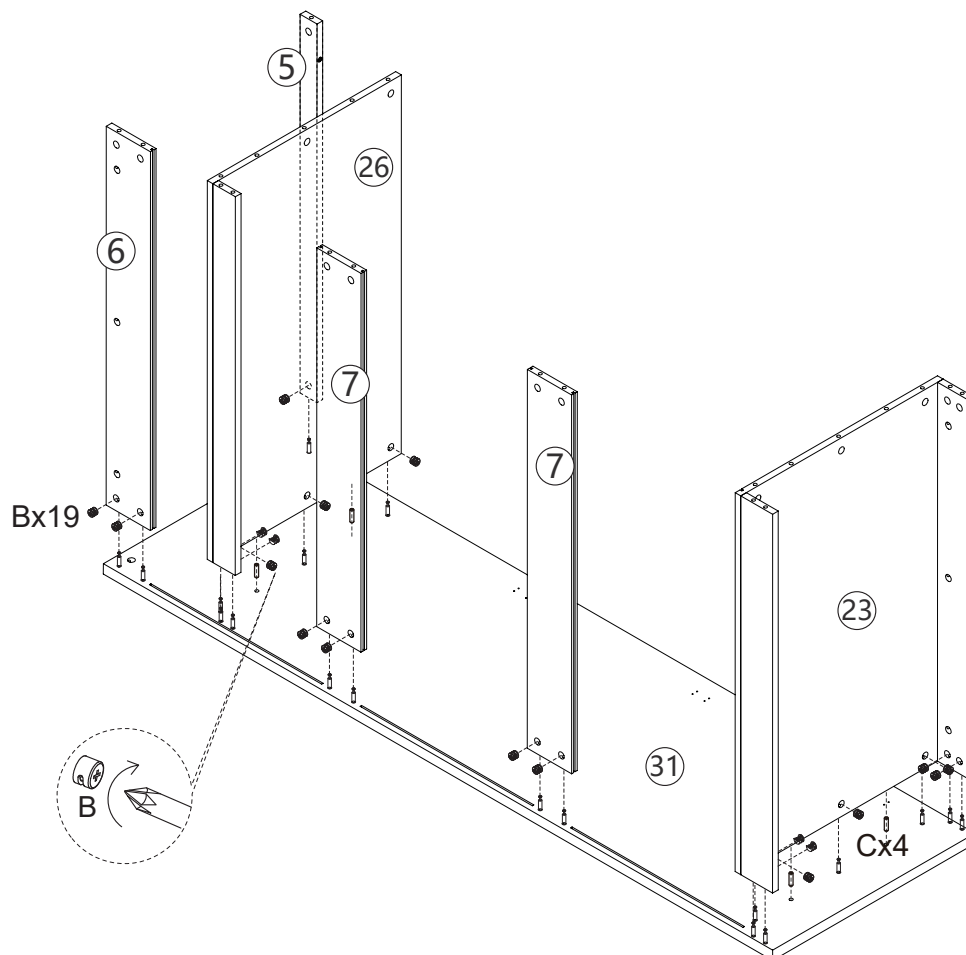


6. Assemble back panel.

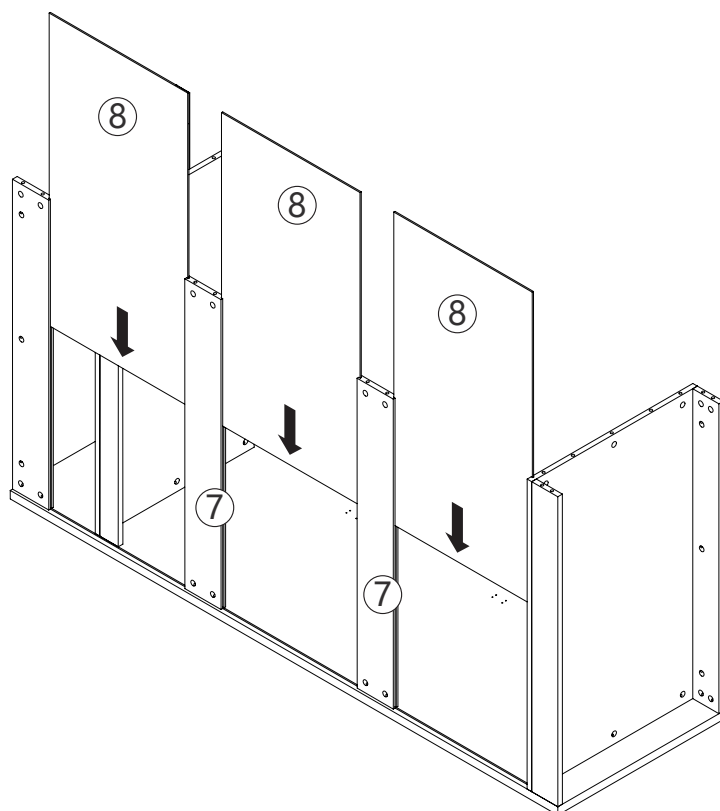

Warning label is placed on the left top corner.

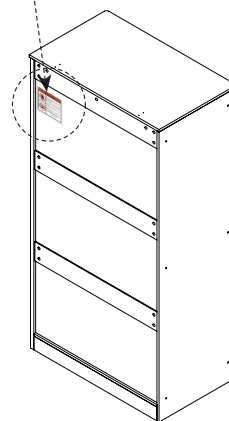


7. Assemble the panels of each part together according to the diagram.

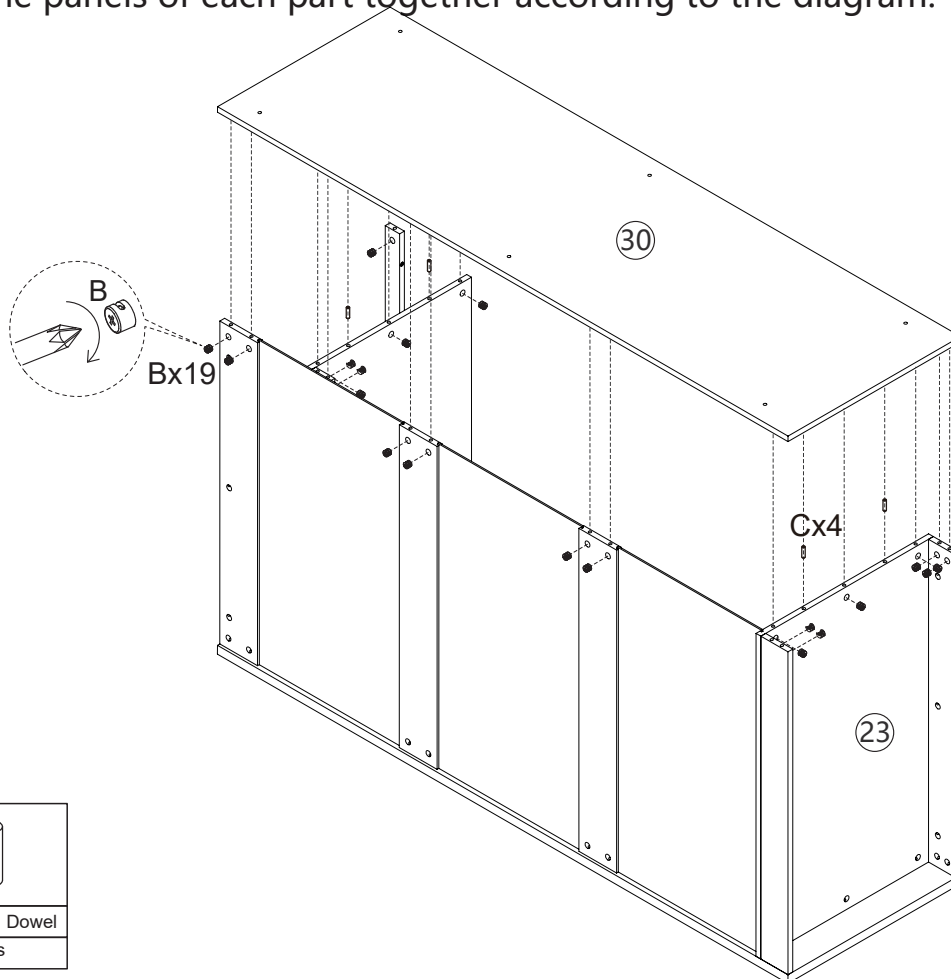


B 	C 
Ø15*10mm Cam Lockk 19pcs	Ø8*30mm Dowel 4pcs


8. Attach parts to the panel.

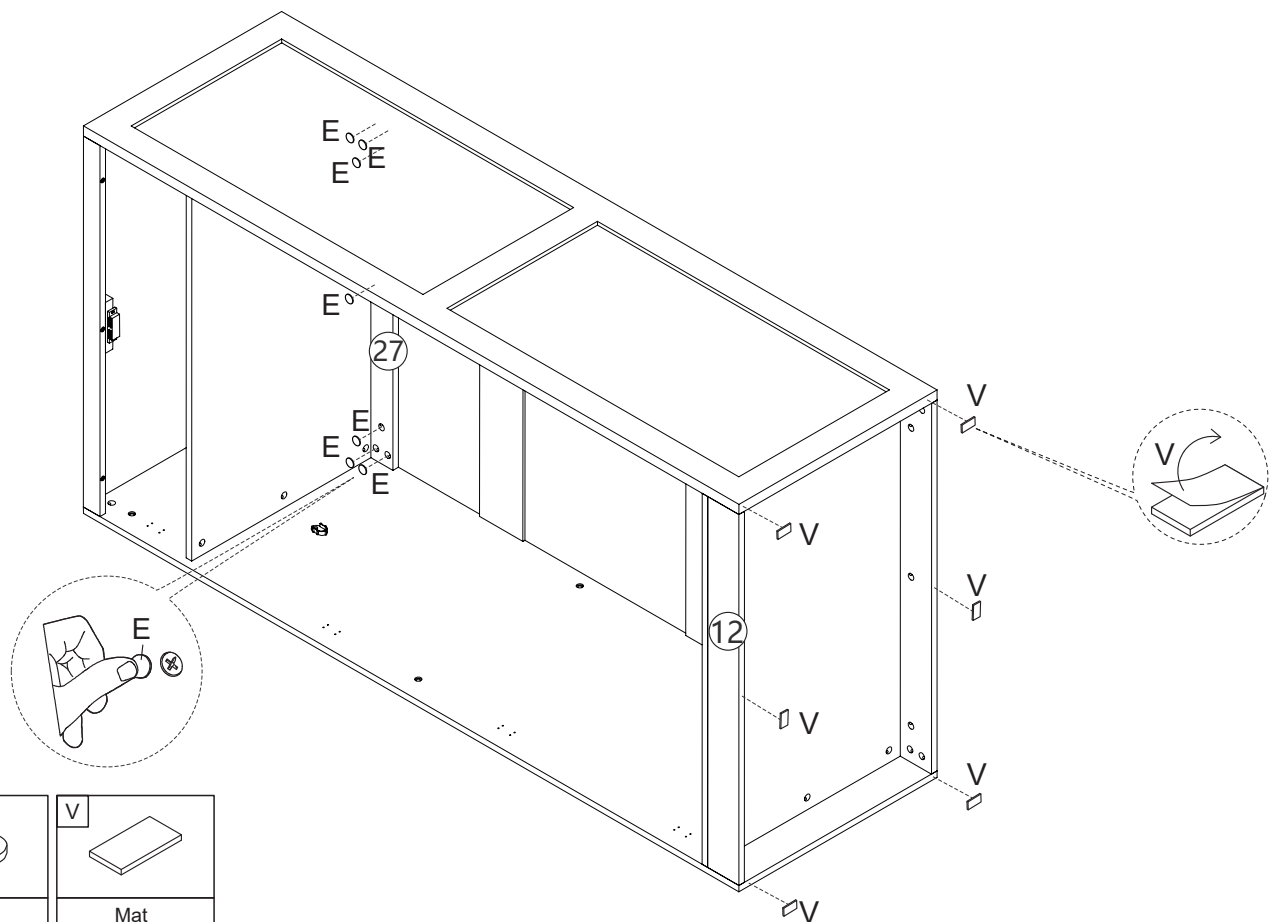


E 	V 
Cover 7pcs	Mat 6pcs


9. Attach parts to the top panel.

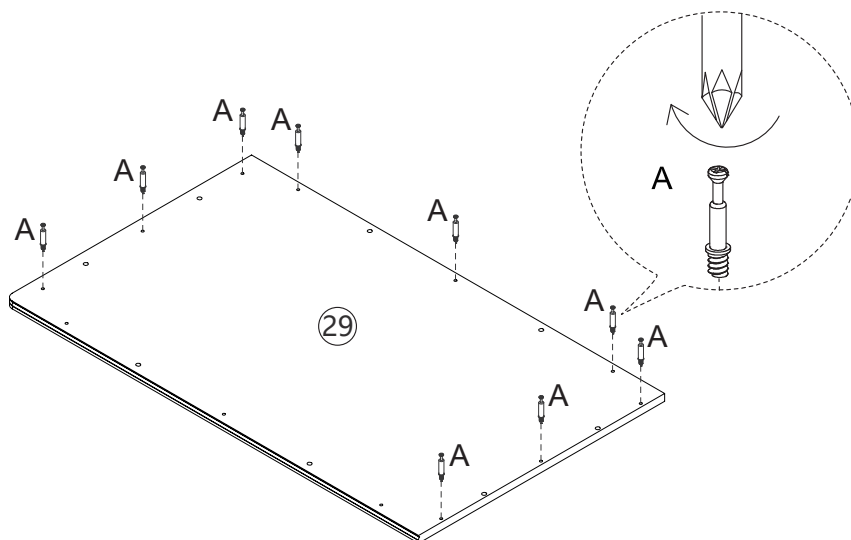


A
 M5*35mm Cam Lock Screw 9pcs

10. Attach the top panel to the frame.

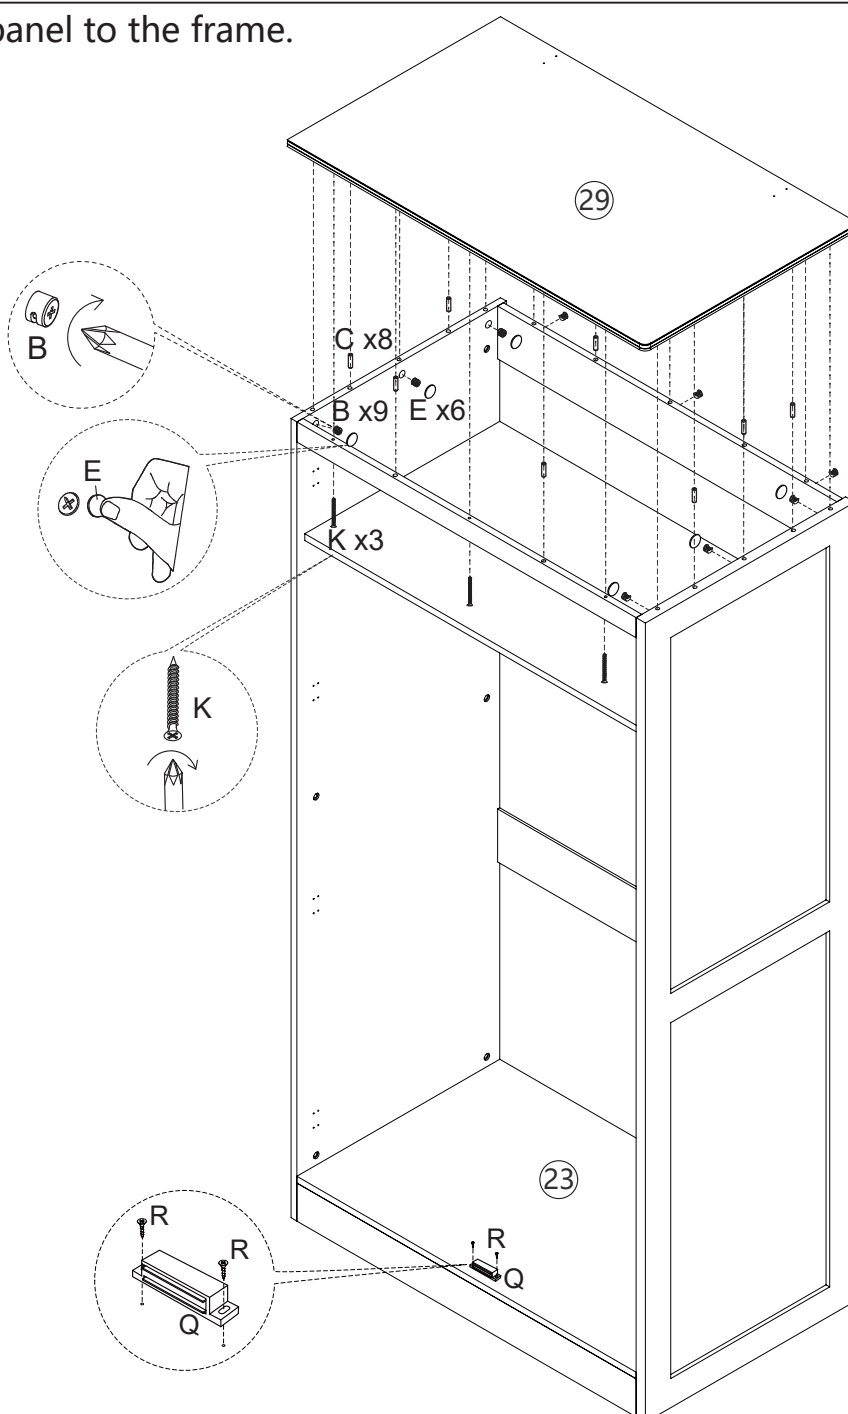


Q  Door Catch 1pc	R  M3*16mm Screw 2pcs
K  M4*40mm Screw 3pcs	E  Cover 6pcs
B  Ø15*10mm Cam Lock 9pcs	C  Ø8*30mm Dowel 8pcs

11. Attach parts to the side panels.

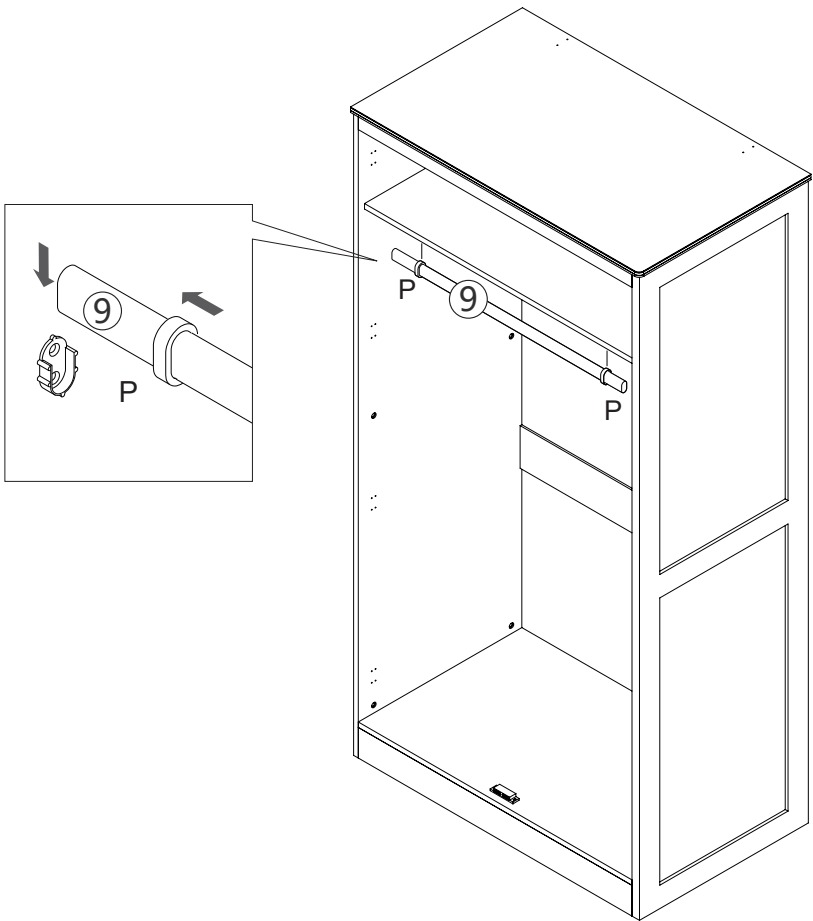



P	
Tube Bracket	
2pcs	

12. Attach parts to the door panel.

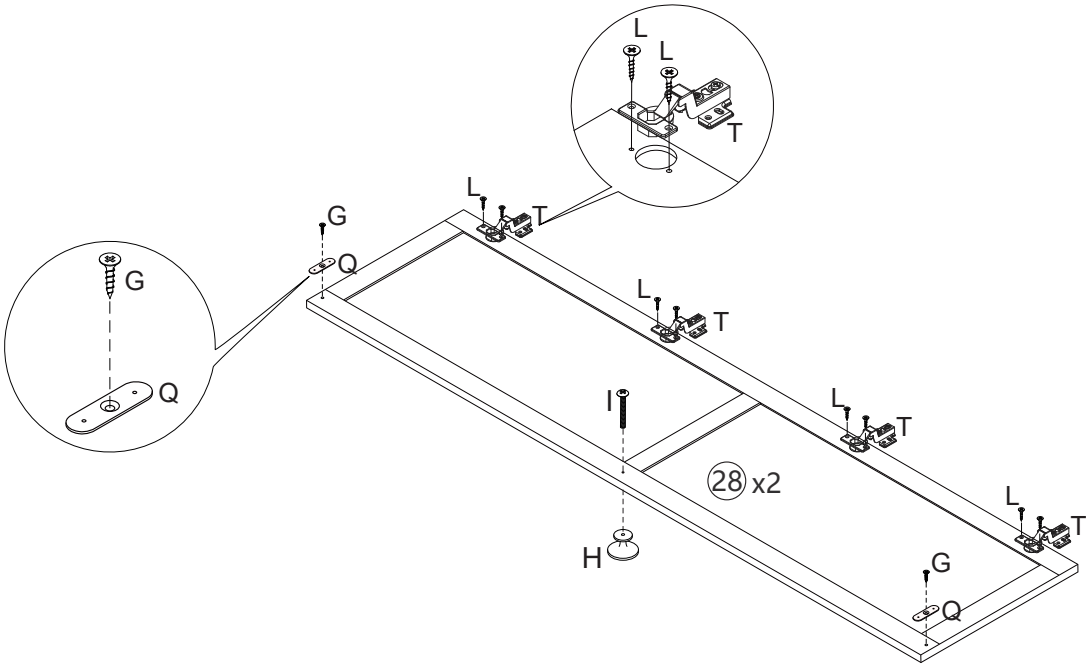




H		I		Q		G		T		L	
Handle		M4*20mm Bolt		Door Catch		M3*12mm Screw		Hinge		M4*14mm Screw	
2pcs		2pcs		2pcs		4pcs		8pcs		16pcs	

13. Assemble the door panel onto the cabinet and adjust it as shown in the picture, Make the door gap even and smooth.

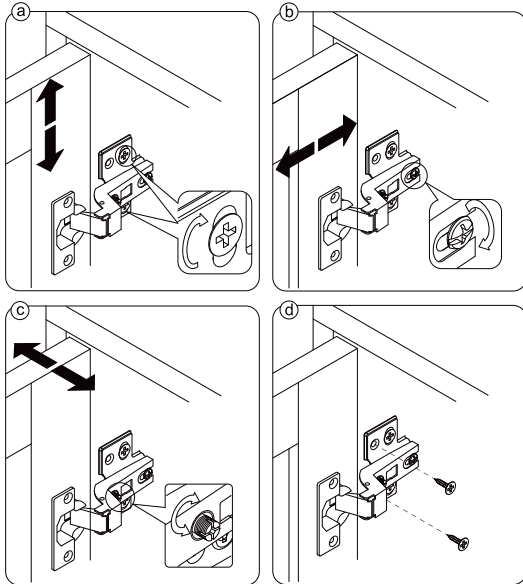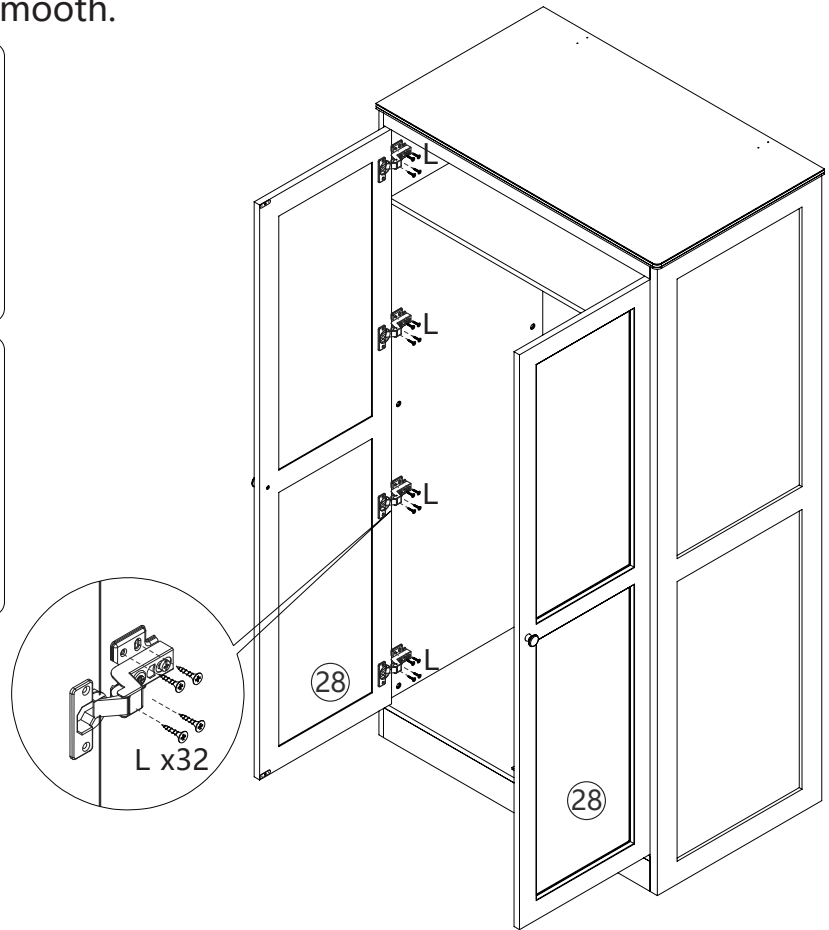

L	
M4*14mm Screw	
32pcs	

14. Attach the plastic buckles and screws etc.

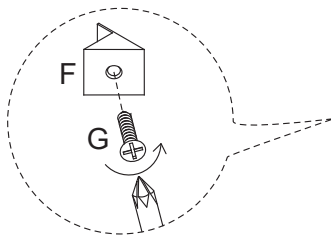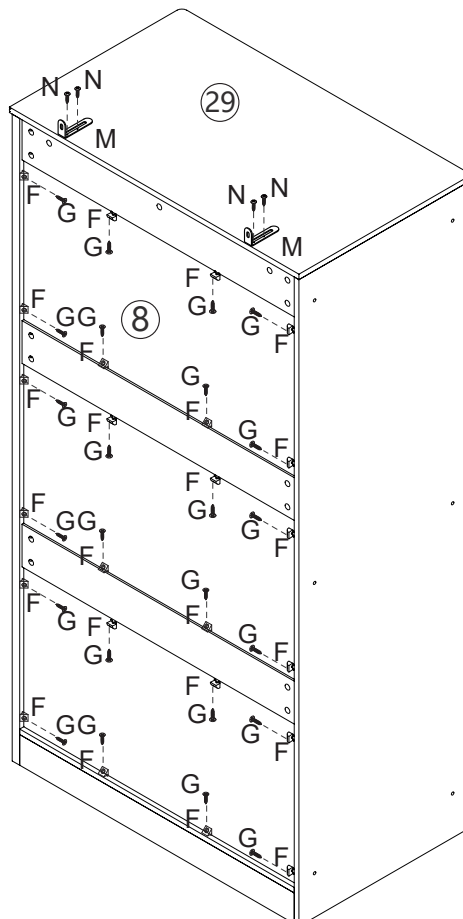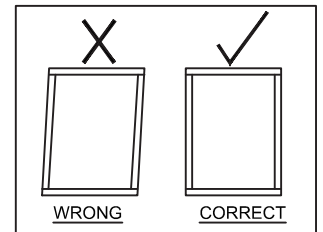



NB: Before tightening the plastic buckles and screws, please ensure the frame is square

F		G	
Plastic Buckle		M3*12mm Screw	
24pcs		24pcs	
M		N	
Wall Bracket		M4*12mm Screw	
2pcs		4pcs	

15. After cabinets for boxes 1, 2 and 3 are assembled, connect the cabinets together following the diagram in Step 18 of the middle-cabinet(Box 2) instruction manual.

Connecting accessories are in Box 2.

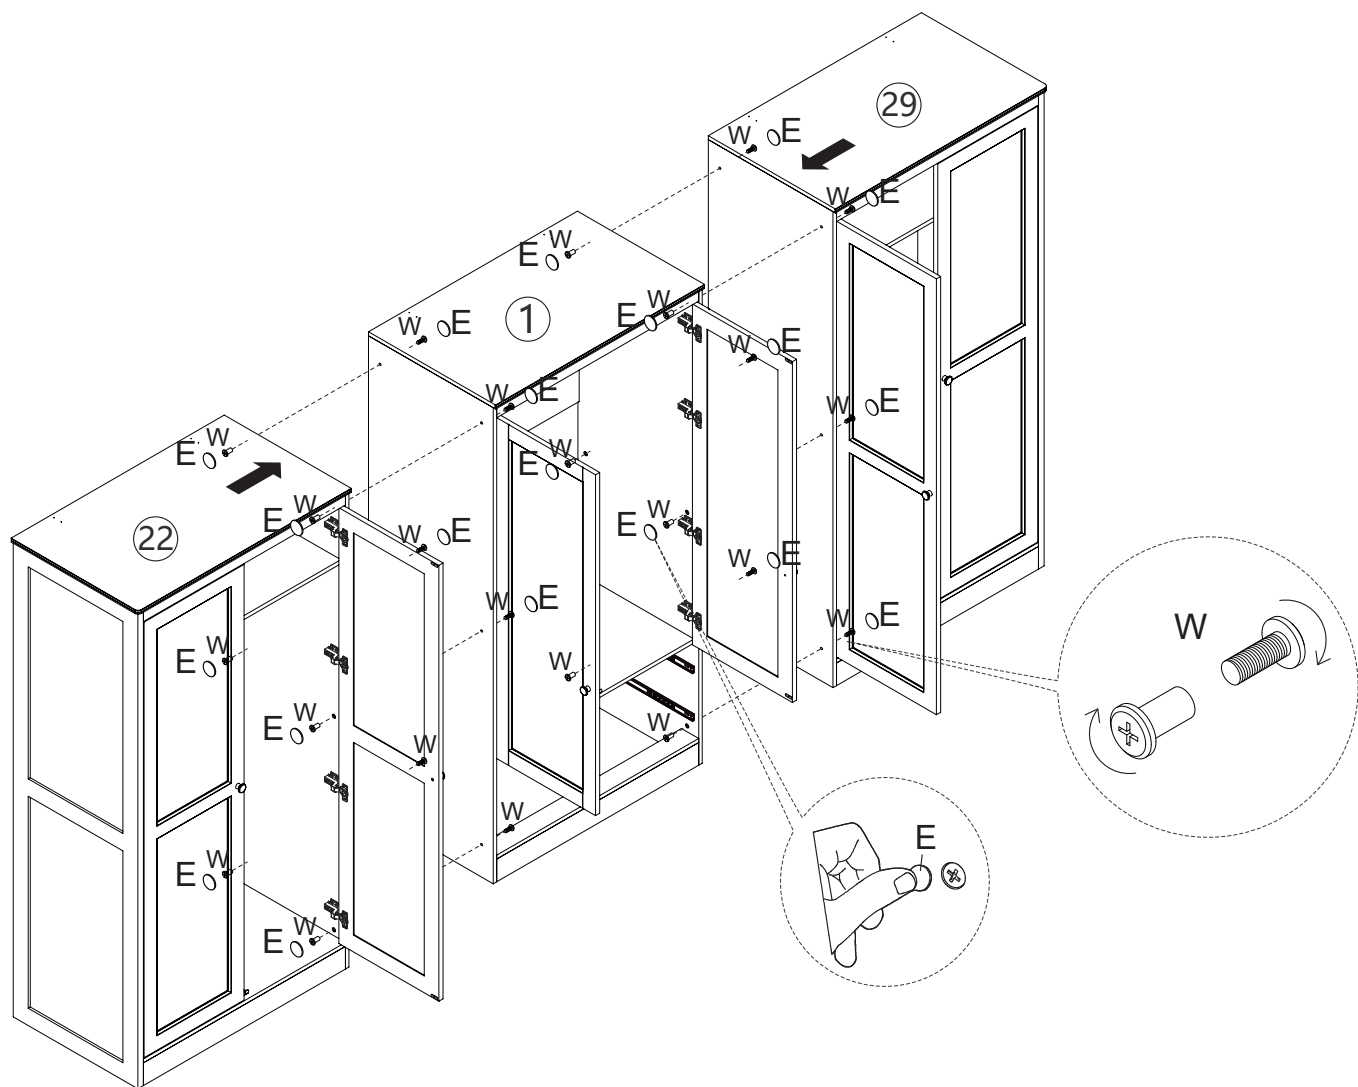

E	
Cover	
20pcs	
W	
Confirmat Screw	
12pcs	