

DUSK.COM



LIVING | BEDROOM | DINING

Range Name : Romilly


Box1 dimensions : W56xD47.5xH20.5cm

Product Dimension:W47xD40xH45cm

Romilly 2 Drawer Bedside

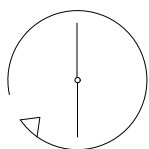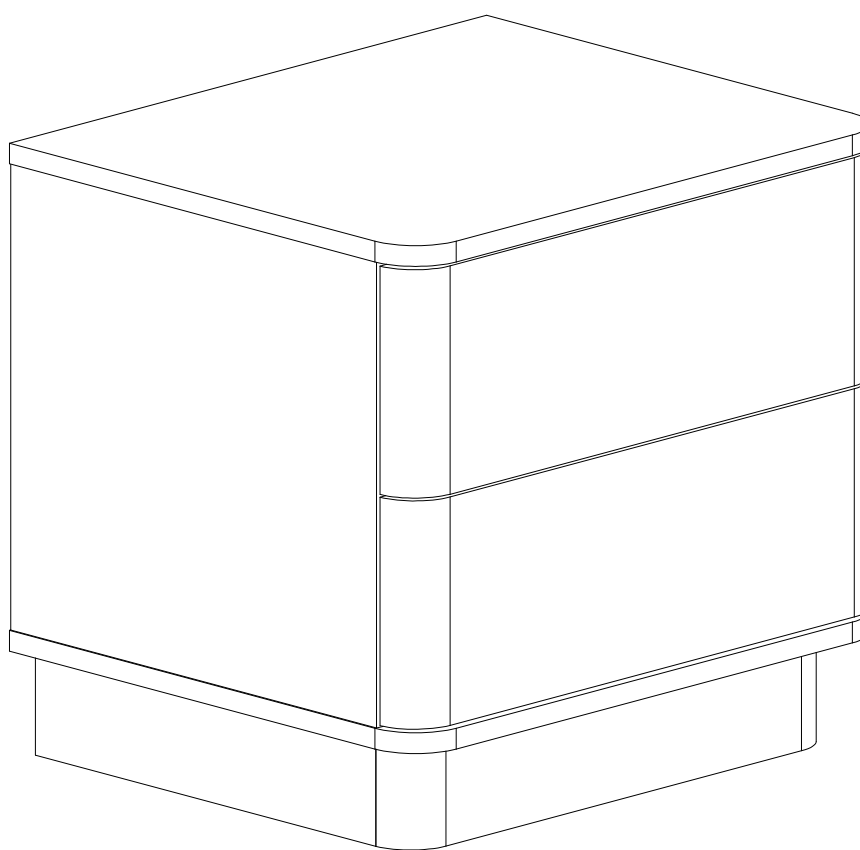

Up to 60 minutes
assembly time

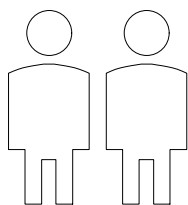

Two person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

P-1-18
V-1.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Romilly 2 Drawer Bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble Romilly 2 Drawer Bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag Romilly 2 Drawer Bedside when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

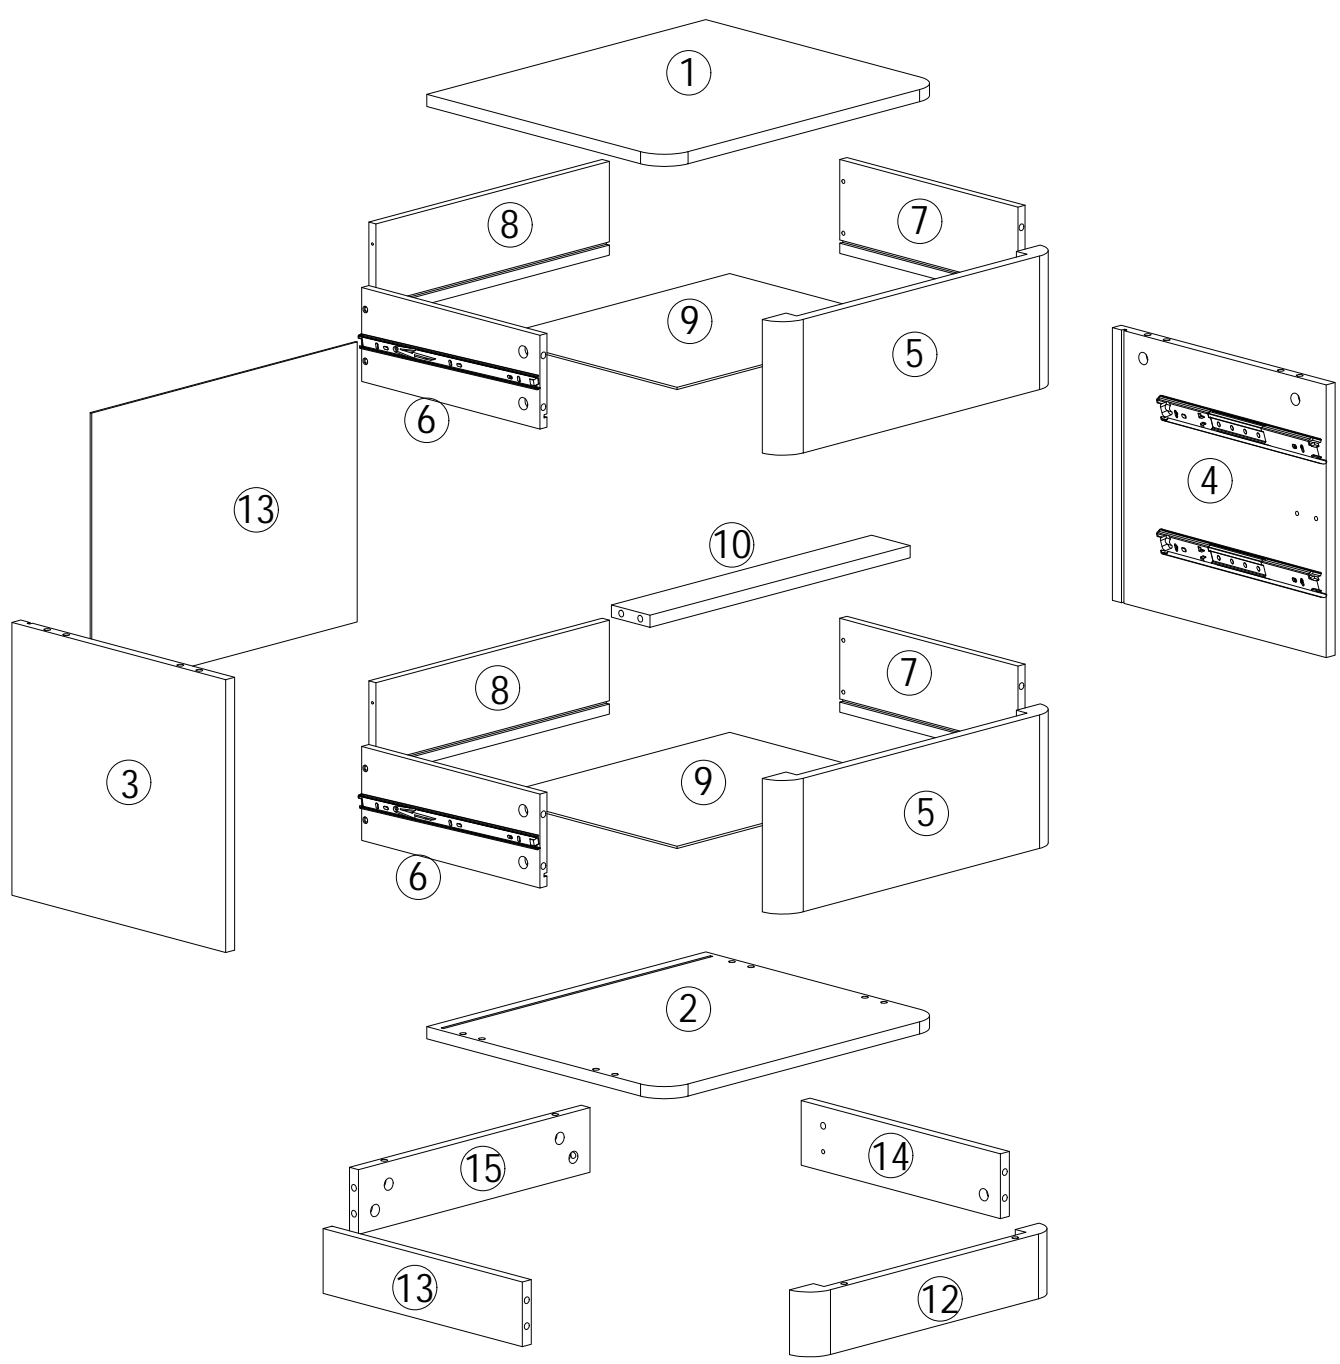

Parts list
















Before you begin building your Romilly 2 Drawer Bedside, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top Panel	1pc	Box 1
②	Bottom Panel	1pc	Box 1
③	Left Side Panel with Slide pre-assembled	1pc	Box 1
④	Right Side Panel with Slide pre-assembled	1pc	Box 1
⑤	Drawer Front	2pcs	Box 1
⑥	Drawer Left with Slide pre-assembled	2pcs	Box 1
⑦	Drawer Right with Slide pre-assembled	2pcs	Box 1
⑧	Drawer Back	2pcs	Box 1




Part Number	Part Description	Quantity	Box No
⑨	Drawer Bottom	2pcs	Box 1
⑩	Connect Bar	1 pc	Box 1
⑪	Back Panel	4pcs	Box 1
⑫	Front Kick Plate	1 pc	Box 1
⑬	Left Kick Plate	1 pc	Box 1
⑭	Right Kick Plate	1 pc	Box 1
⑮	Rear Kick Plate	1 pc	Box 1

Fittings








Please check you have all the fittings listed below with your product in box1.

<div>A</div> <div>M6.3*35mm Bolt 24pcs+3pcs extra</div>	<div>B</div> <div>Ø15*9mm Cam Lock 24pcs+3pcs extra</div>	<div>C</div> <div>Ø8*30mm Dowel 12pcs+1pc extra</div>	<div>D</div> <div>M4*35mm Screw 8pcs+1pc extra</div>	<div>E</div> <div>M3.5*14mm Screw 8pcs+1pc extra</div>
<div>F</div> <div>M7*38mm Screw 4pcs extra</div>	<div>G</div> <div>Damper set 2pcs extra</div>	<div>H</div> <div>Cover 8pcs+1pc</div>	<div>J</div> <div>Magneti Catch 2pcs</div>	<div>K</div> <div>M3*12mm Screw 2pcs</div>
<div>M</div> <div>Corner Brace 4pcs</div>	<div>N</div> <div>4mm Allen Key 1pc</div>	<div>O</div> <div>Felt Pads 5pcs</div>	<div>P</div> <div>Pre-assembled Slide Slide 4pcs</div>	<div>Q</div> <div>Pre-assembled Screw M3.5*12mm Screw 16pcs</div>


Pre-assembled Fittings

<div>P-1</div> <div>Slide 4pcs</div>	<div>P-2</div> <div>Slide 4pcs</div>	<div>Q</div> <div>M3.5*12mm Screw 16pcs</div>
---	---	--


1.Assemble all panels on EPS foam or carpet to prevent surface scratches.

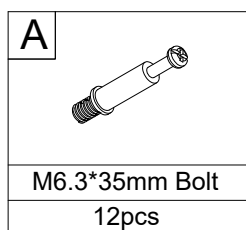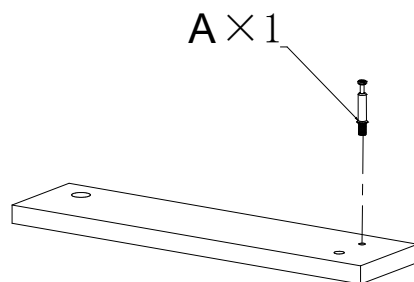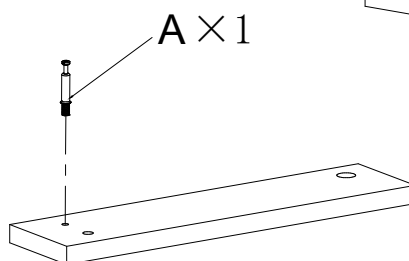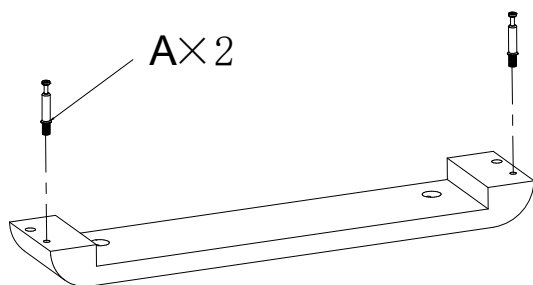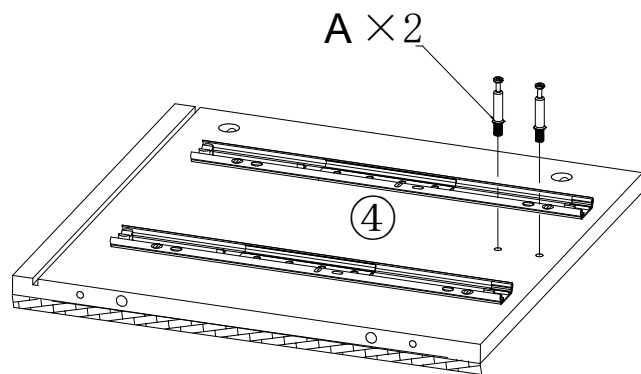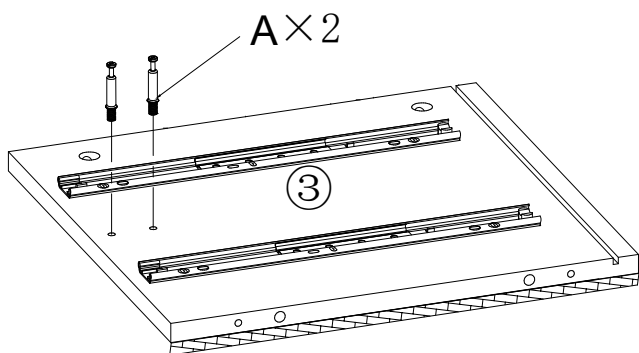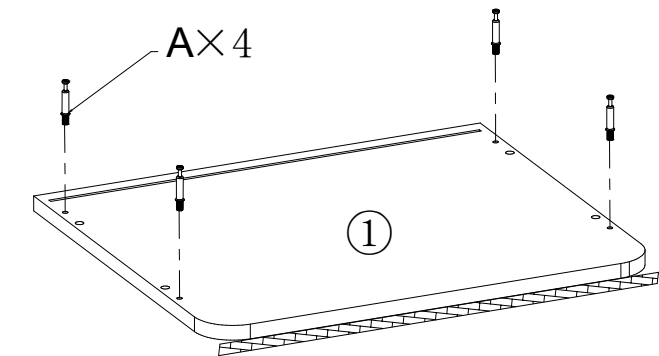


2.

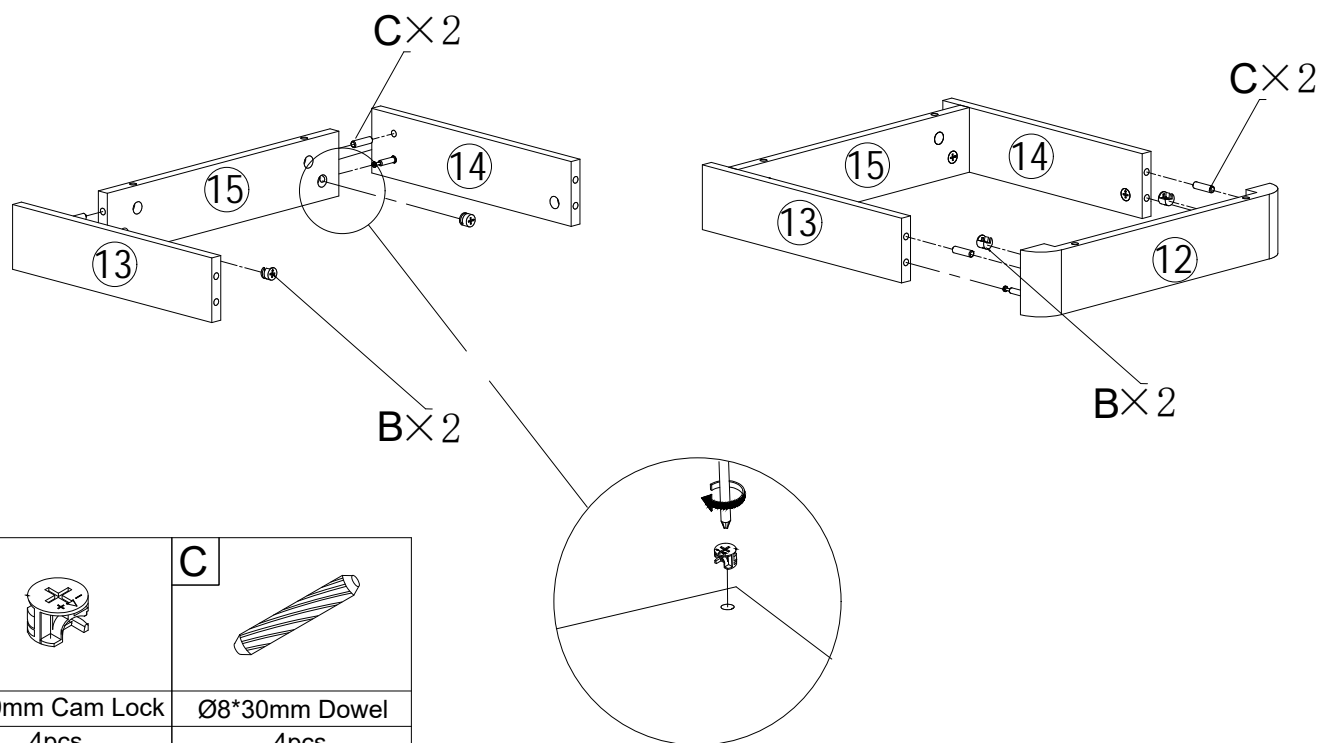


3.

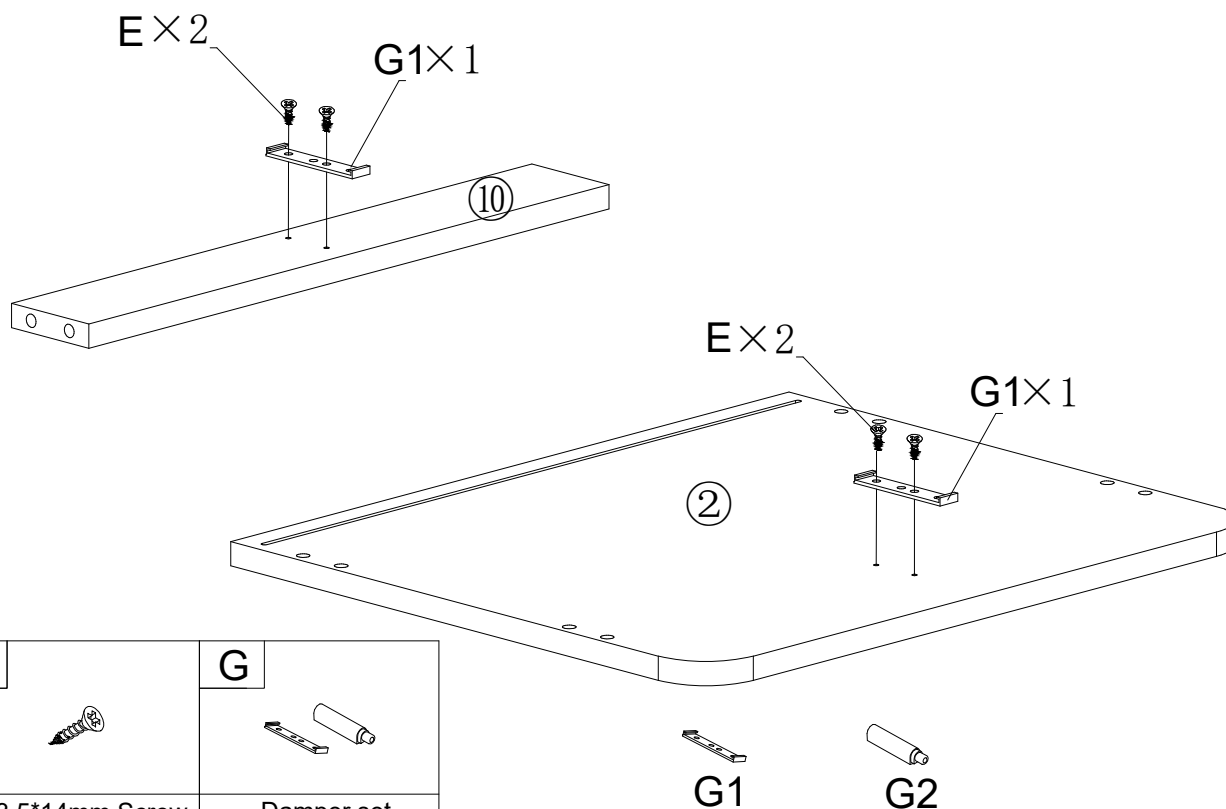


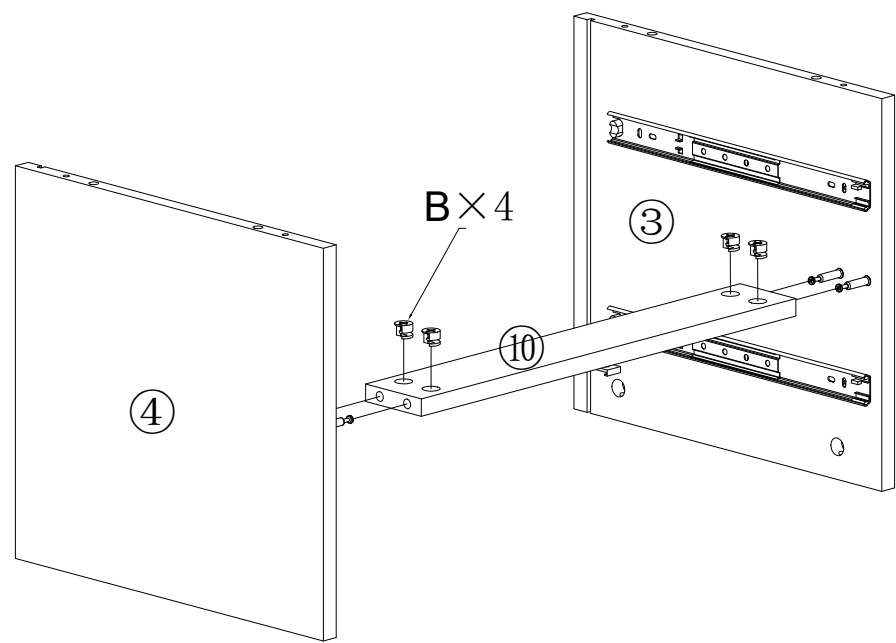


4.




B	
Ø15*9mm Cam Lock	
4pcs	

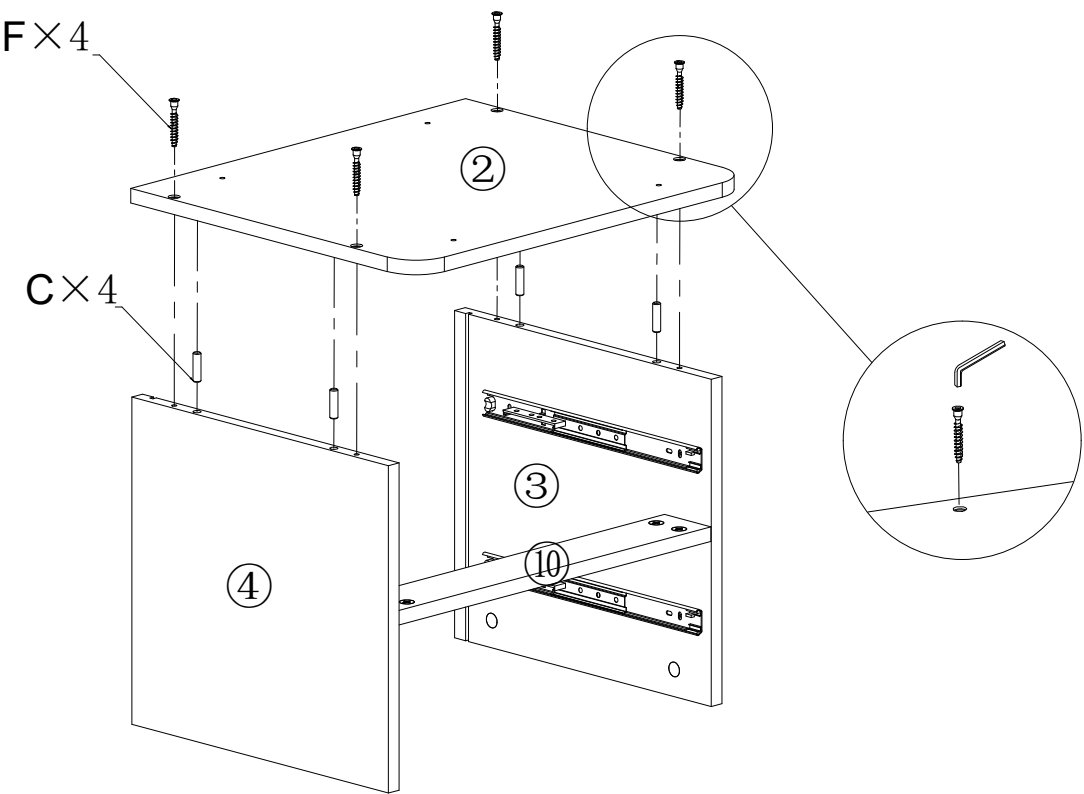5.




C		F		N	
Ø8*30mm Dowel		M7*38mm Screw		4mm Allen Key	
4pcs		4pcs		1pc	

6.

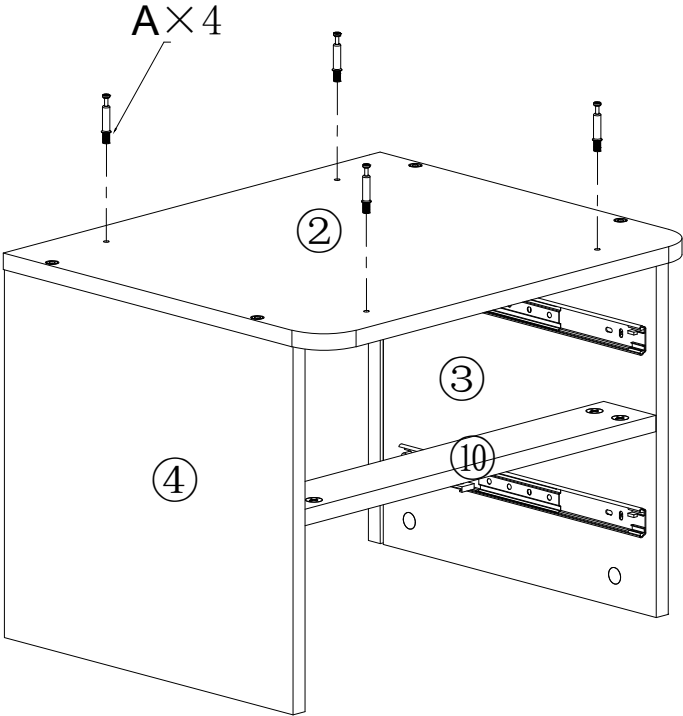


A




M6.3*35mm Bolt

4pcs

7.

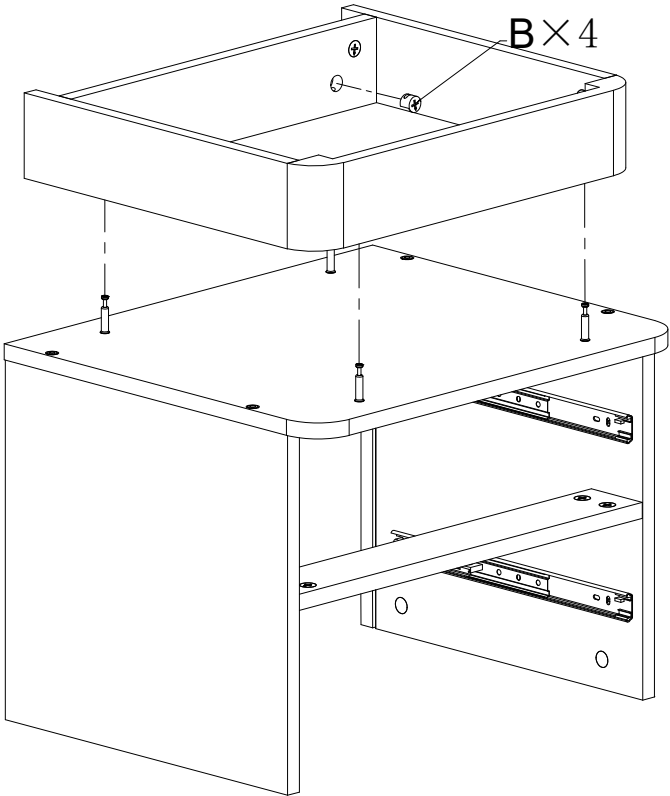


B




Ø15*9mm Cam Lock


4pcs

8.

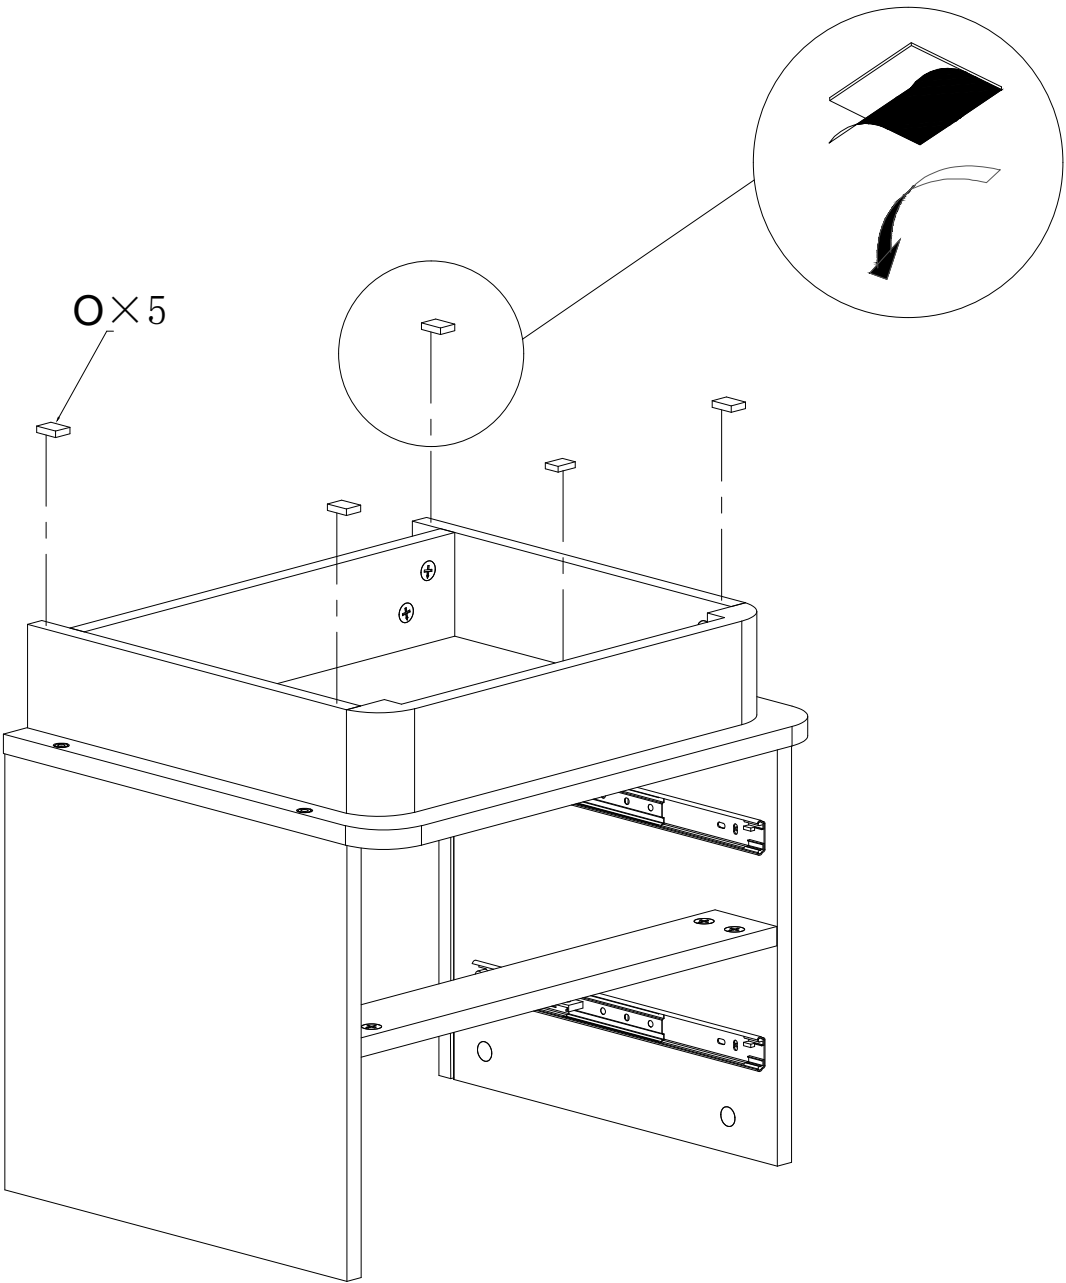




O	
	
Felt Pads	
5pcs	

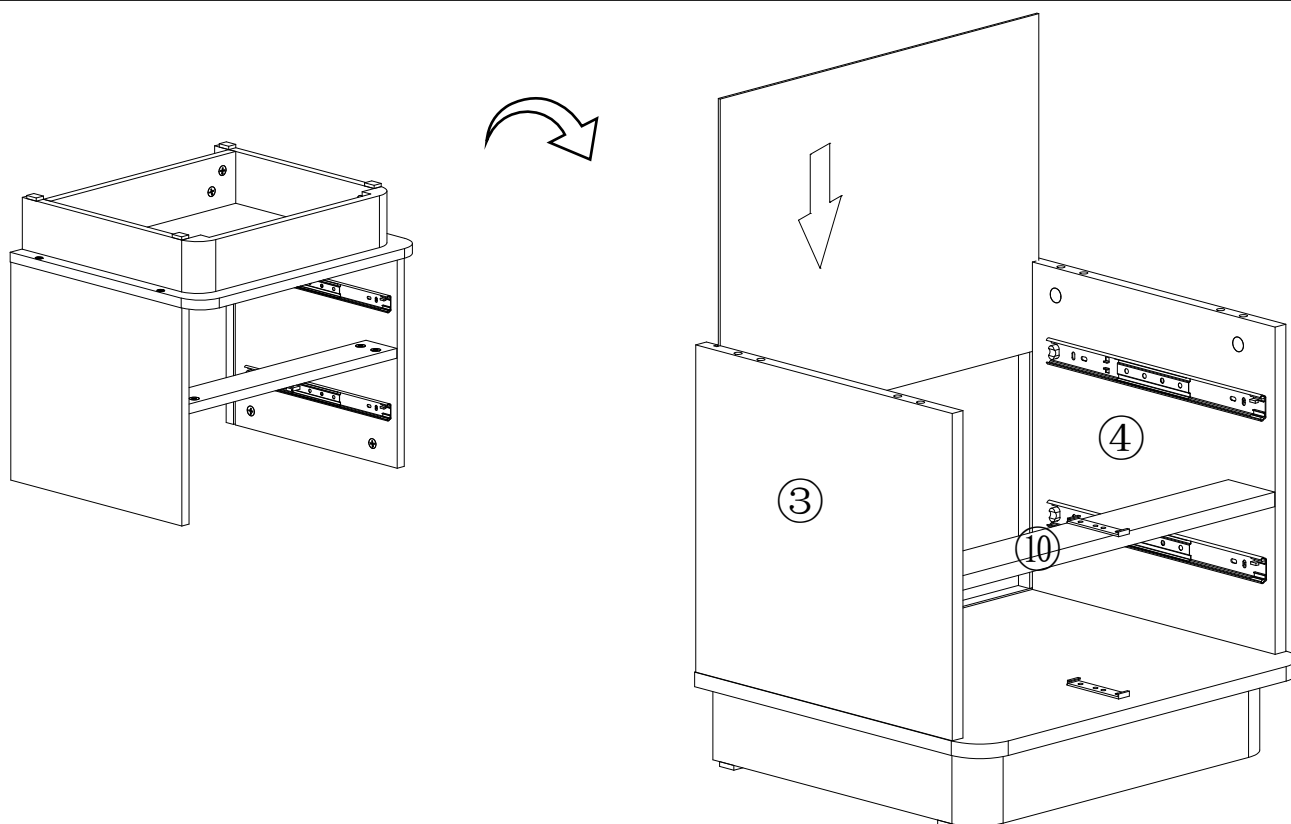9.


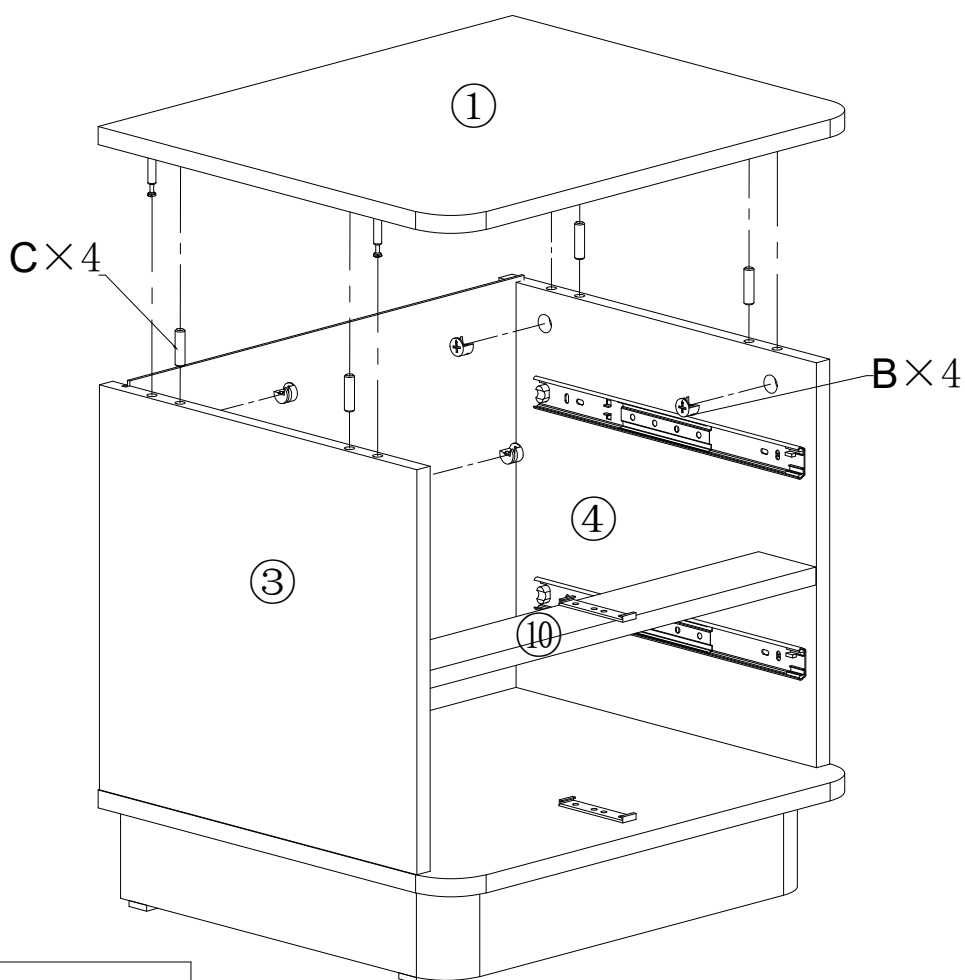


10.



B		C	
Ø15*9mm Cam Lock 4pcs		Ø8*30mm Dowel 4pcs	

11.

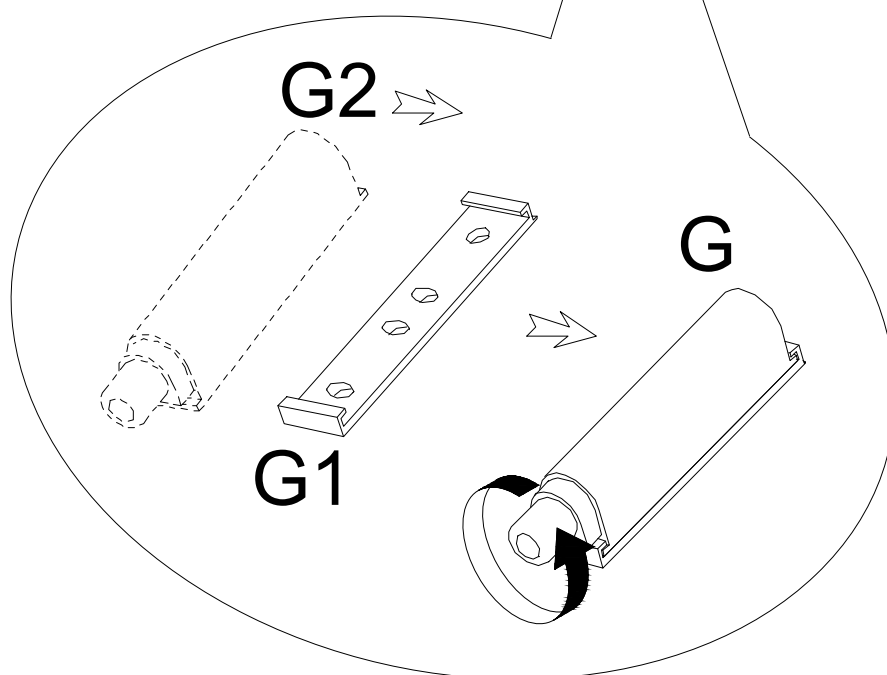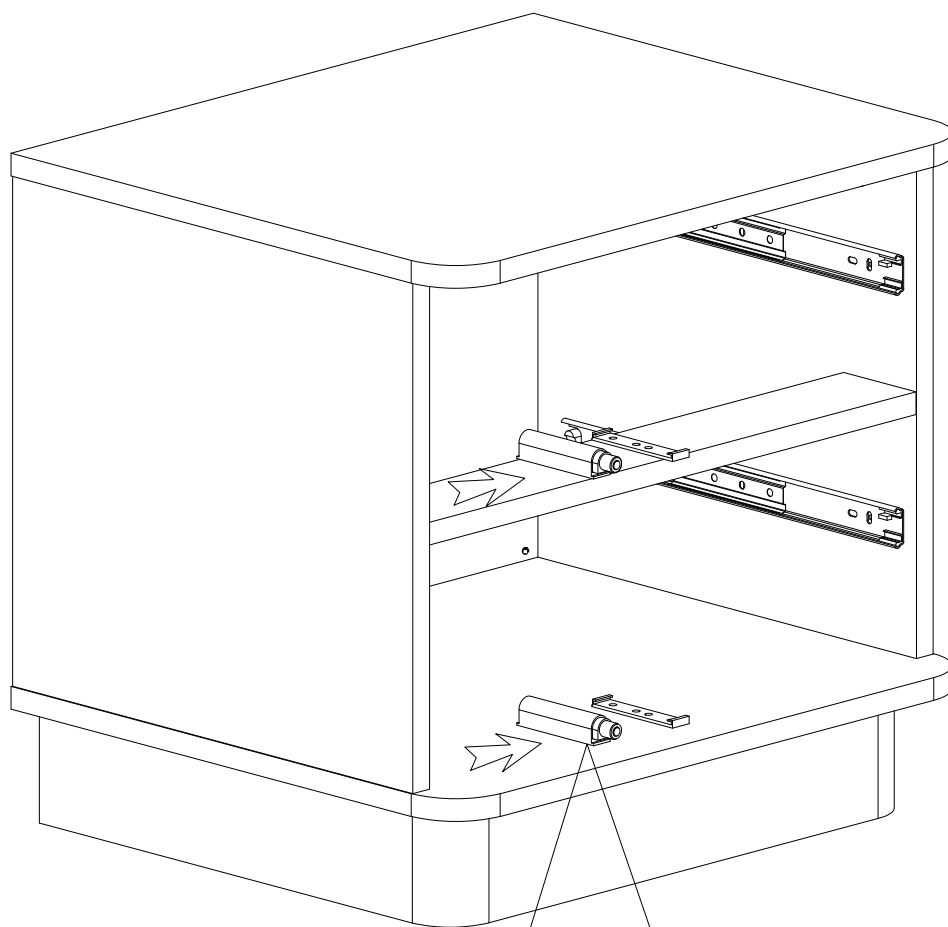


After assembling G1 and G2 into G, rotate the front of G counterclockwise by 3mm.







G	
Damper set	
2pcs	

G1


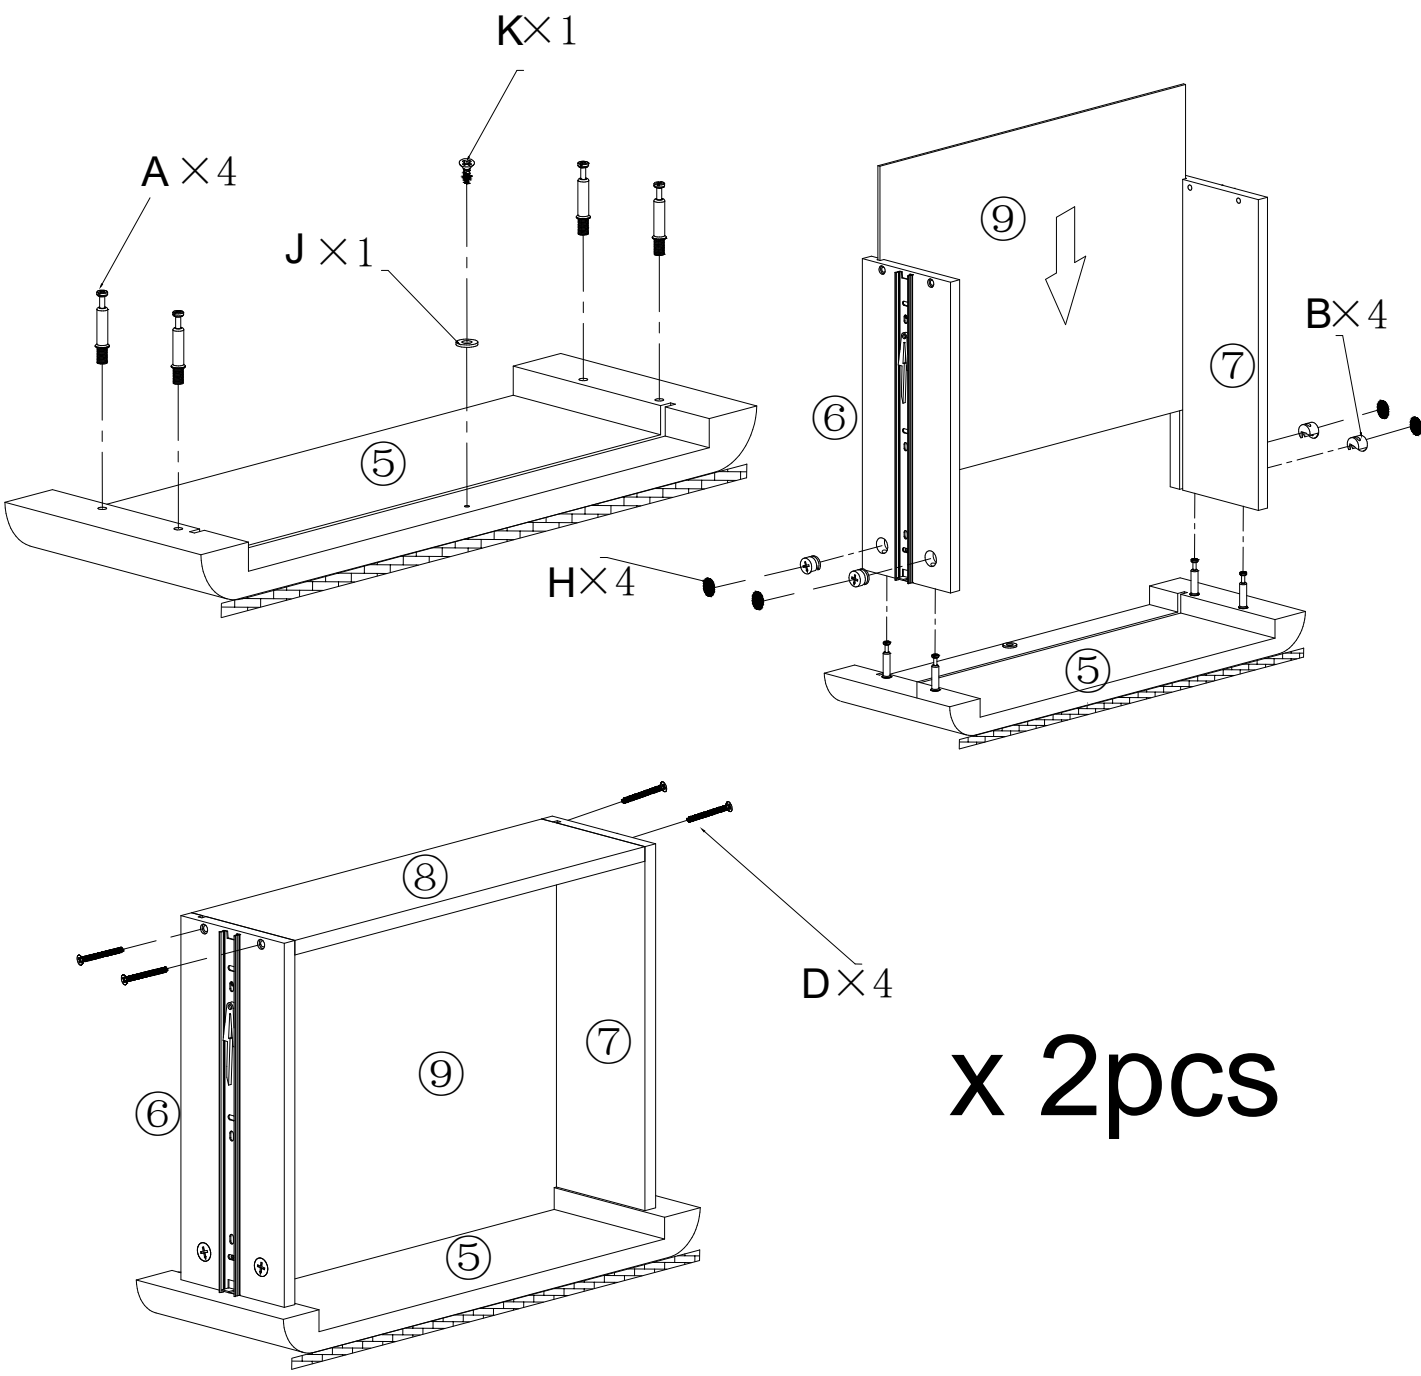
G2

12. Assemble all panels on EPS foam or carpet to prevent surface scratches.




A	B	D
		
M6.3*35mm Bolt 8pcs	Ø15*9mm Cam Lock 8pcs	M4*35mm Screw 8pcs
H	J	K
		
Cover 8pcs	Magnet Catch 2pcs	M3*12mm Screw 2pcs


13.

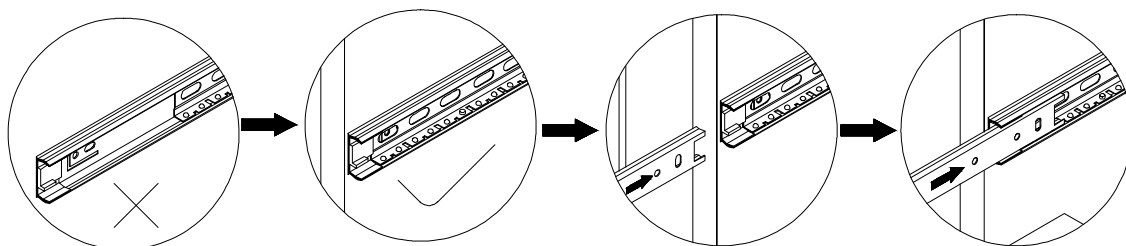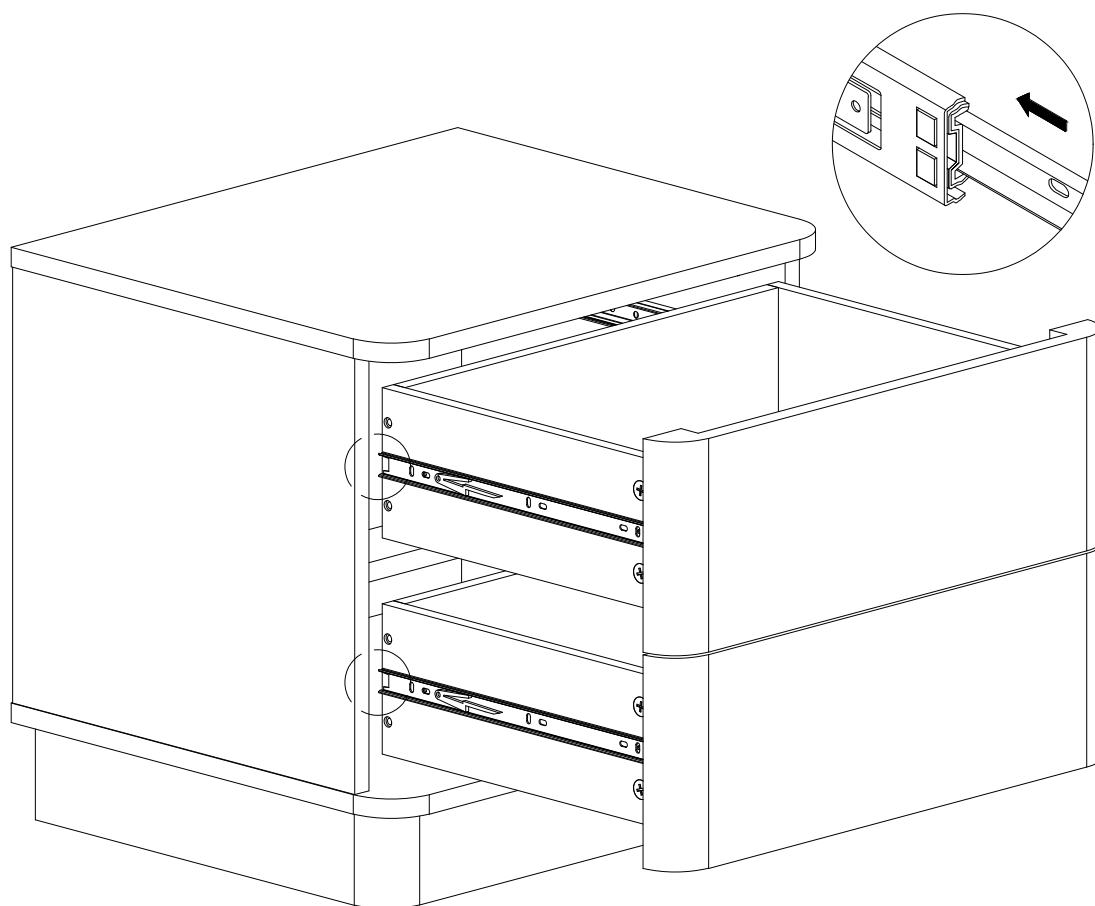



14.

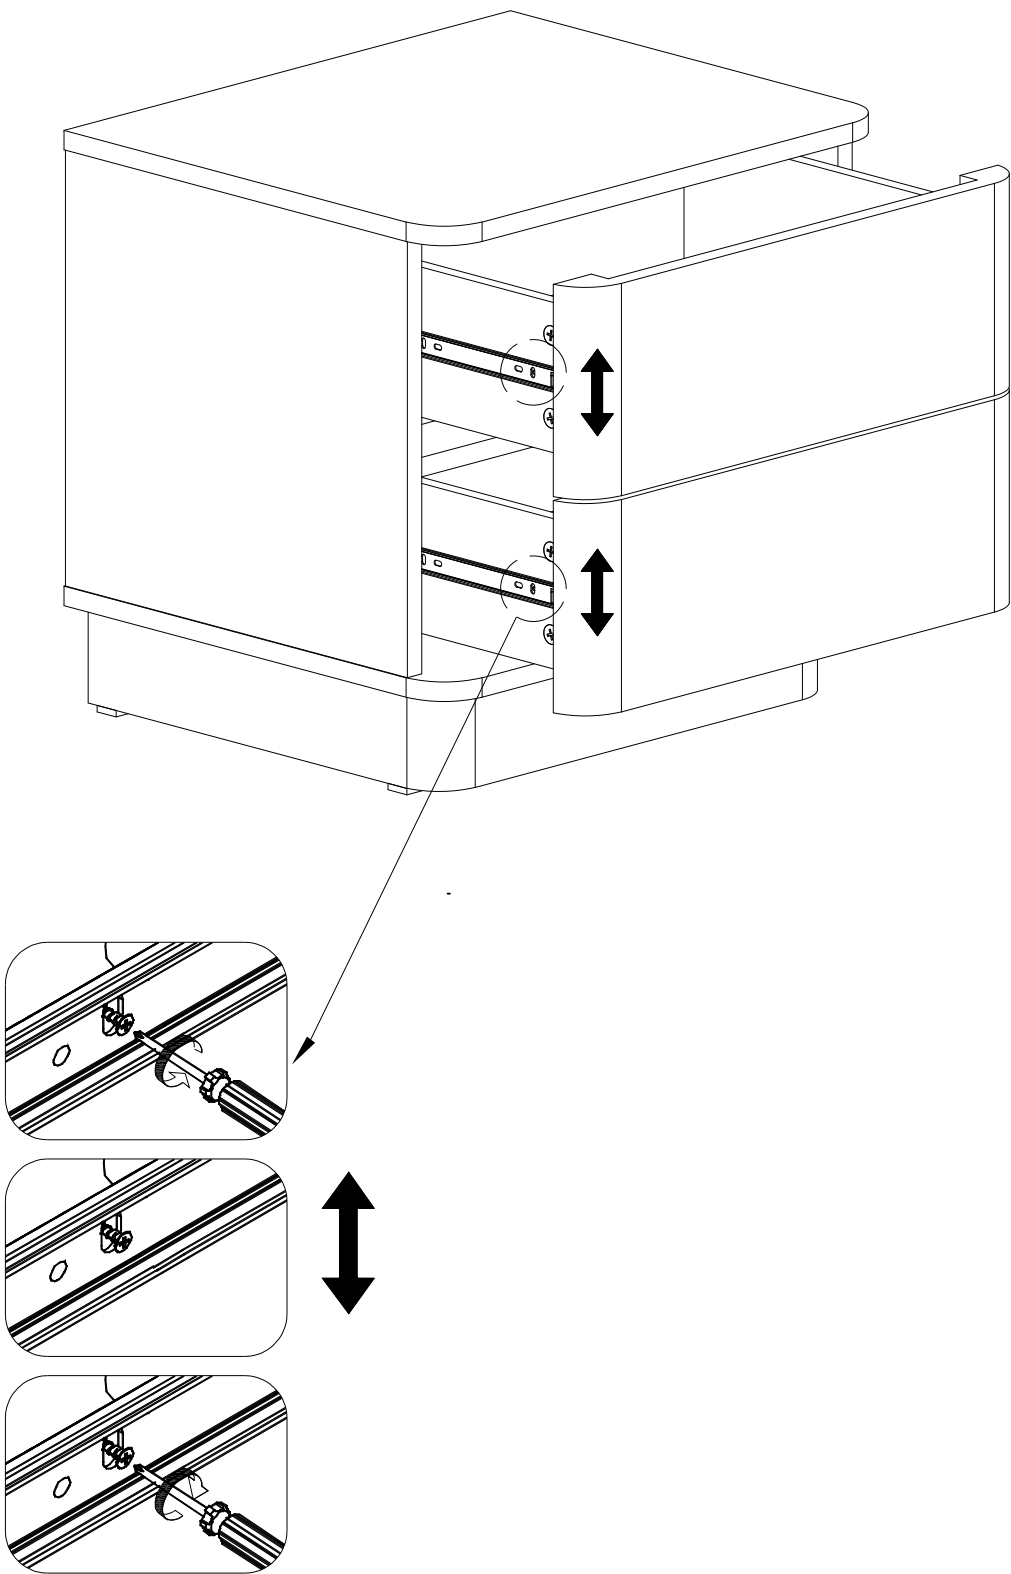


15.

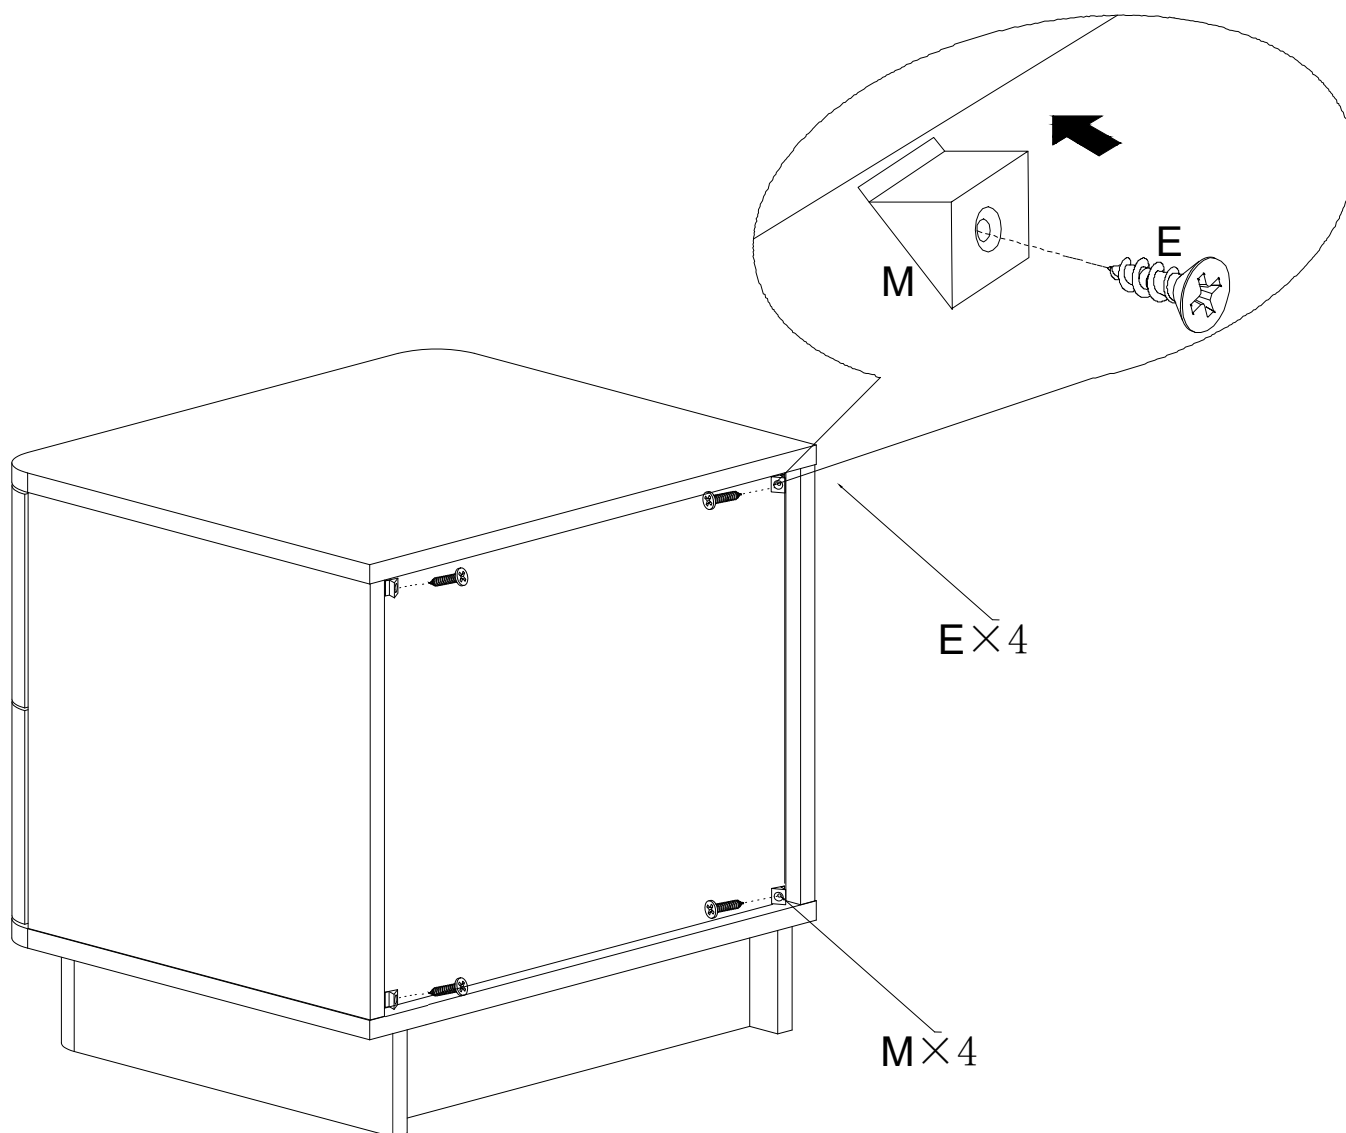

M 	E 
Corner Brace 4pcs	M3.5*14mm Screw 4pcs


16.

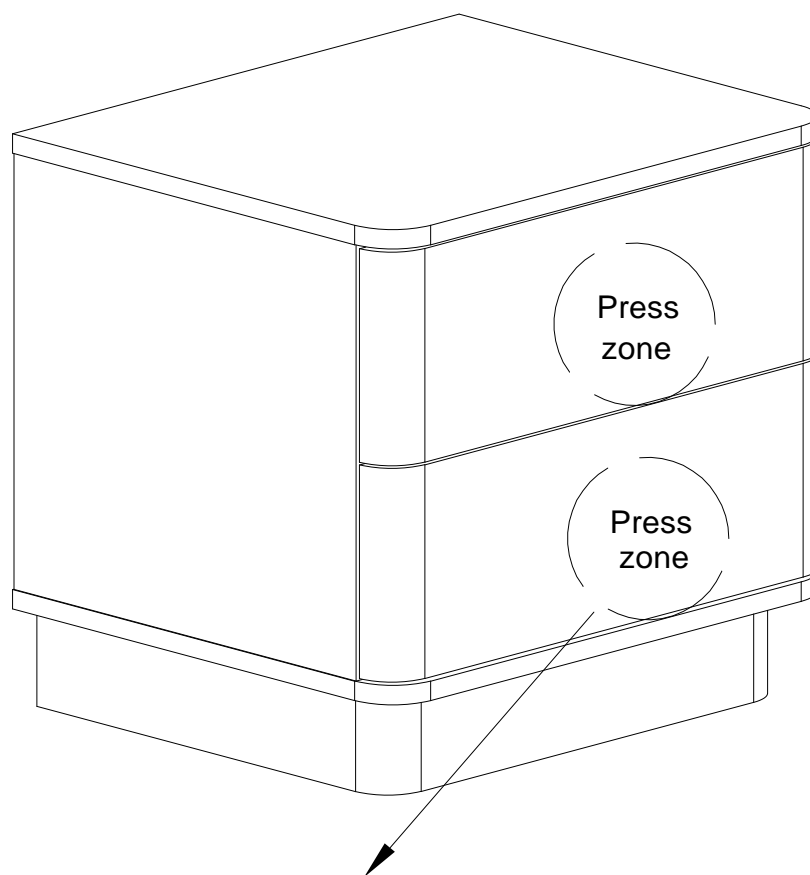

To open drawer :

- Press firmly on the marked area until the drawer releases.
- Do not press on edges.

17.

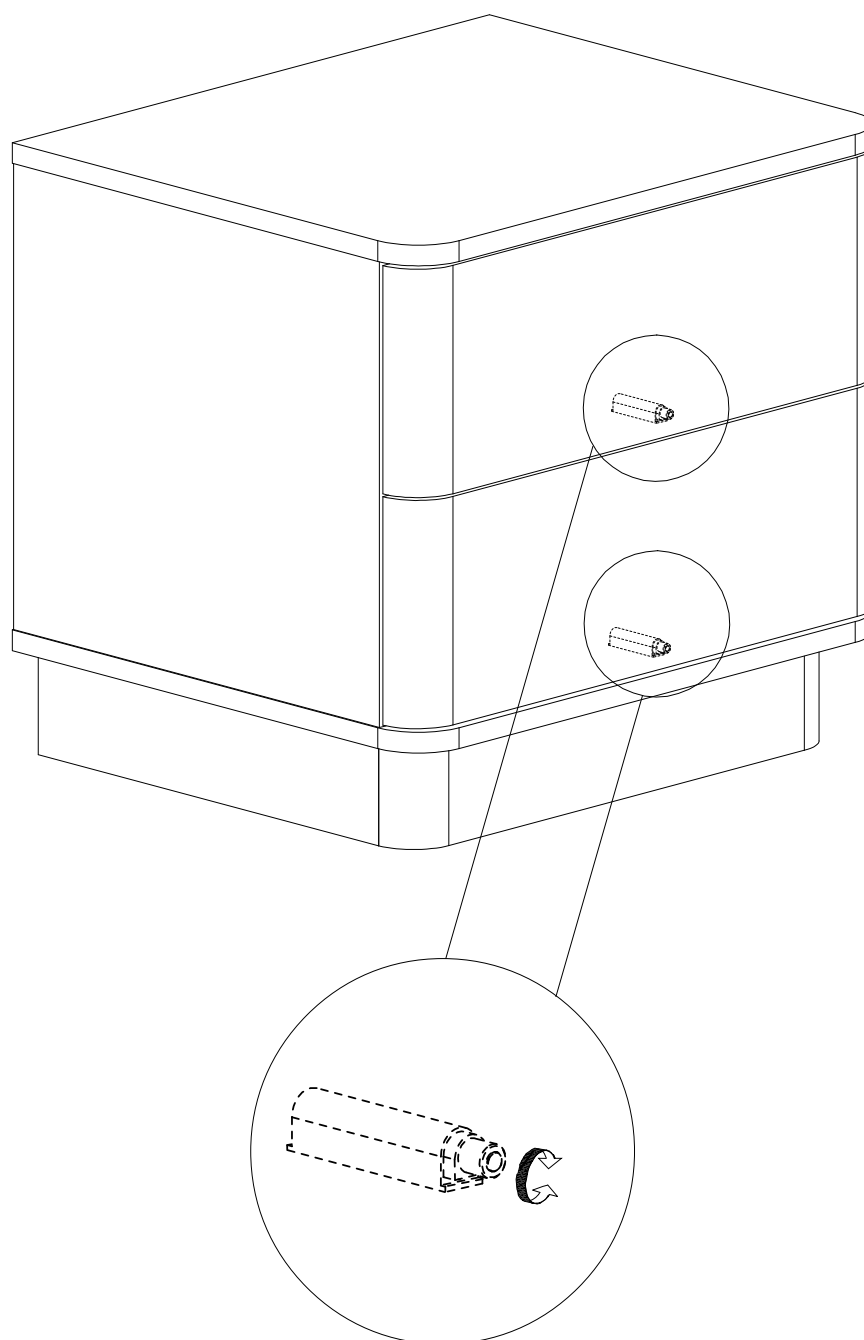

Adjust the damper to achieve optimal cushioning range for smooth closing.