

# DUSK.COM



LIVING | BEDROOM | DINING

Range Name : Isabella


Box 1 Dimensions : W131.5×D52×H22cm

Product Dimensions: W111.8×D40×H76cm

## Isabella Textured 6 Drawer Chest

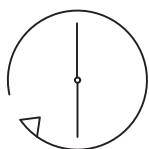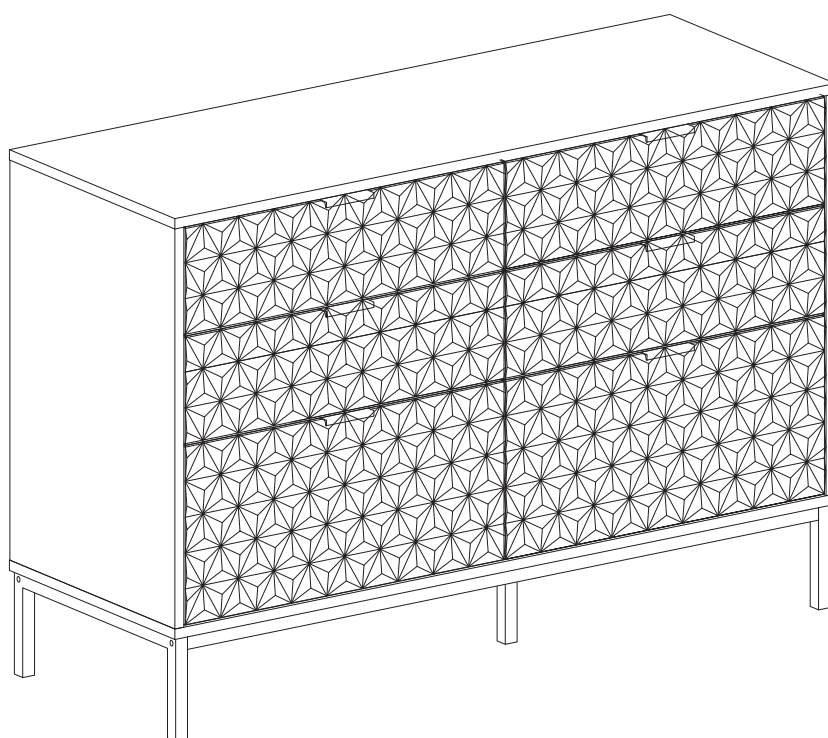

Up to 50 minutes  
assembly time

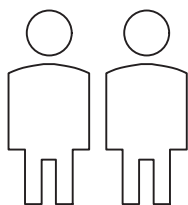

Two person  
assembly

This product is intended for domestic use only, not for commercial purposes.

P-1-10  
V-2.0

## IMPORTANT

### ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Isabella Textured 6 Drawer Chest frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

### TOP TIP

We recommend that you assemble the Isabella Textured 6 Drawer Chest in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

### SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

### HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


### RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

### CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Isabella Textured 6 Drawer Chest when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

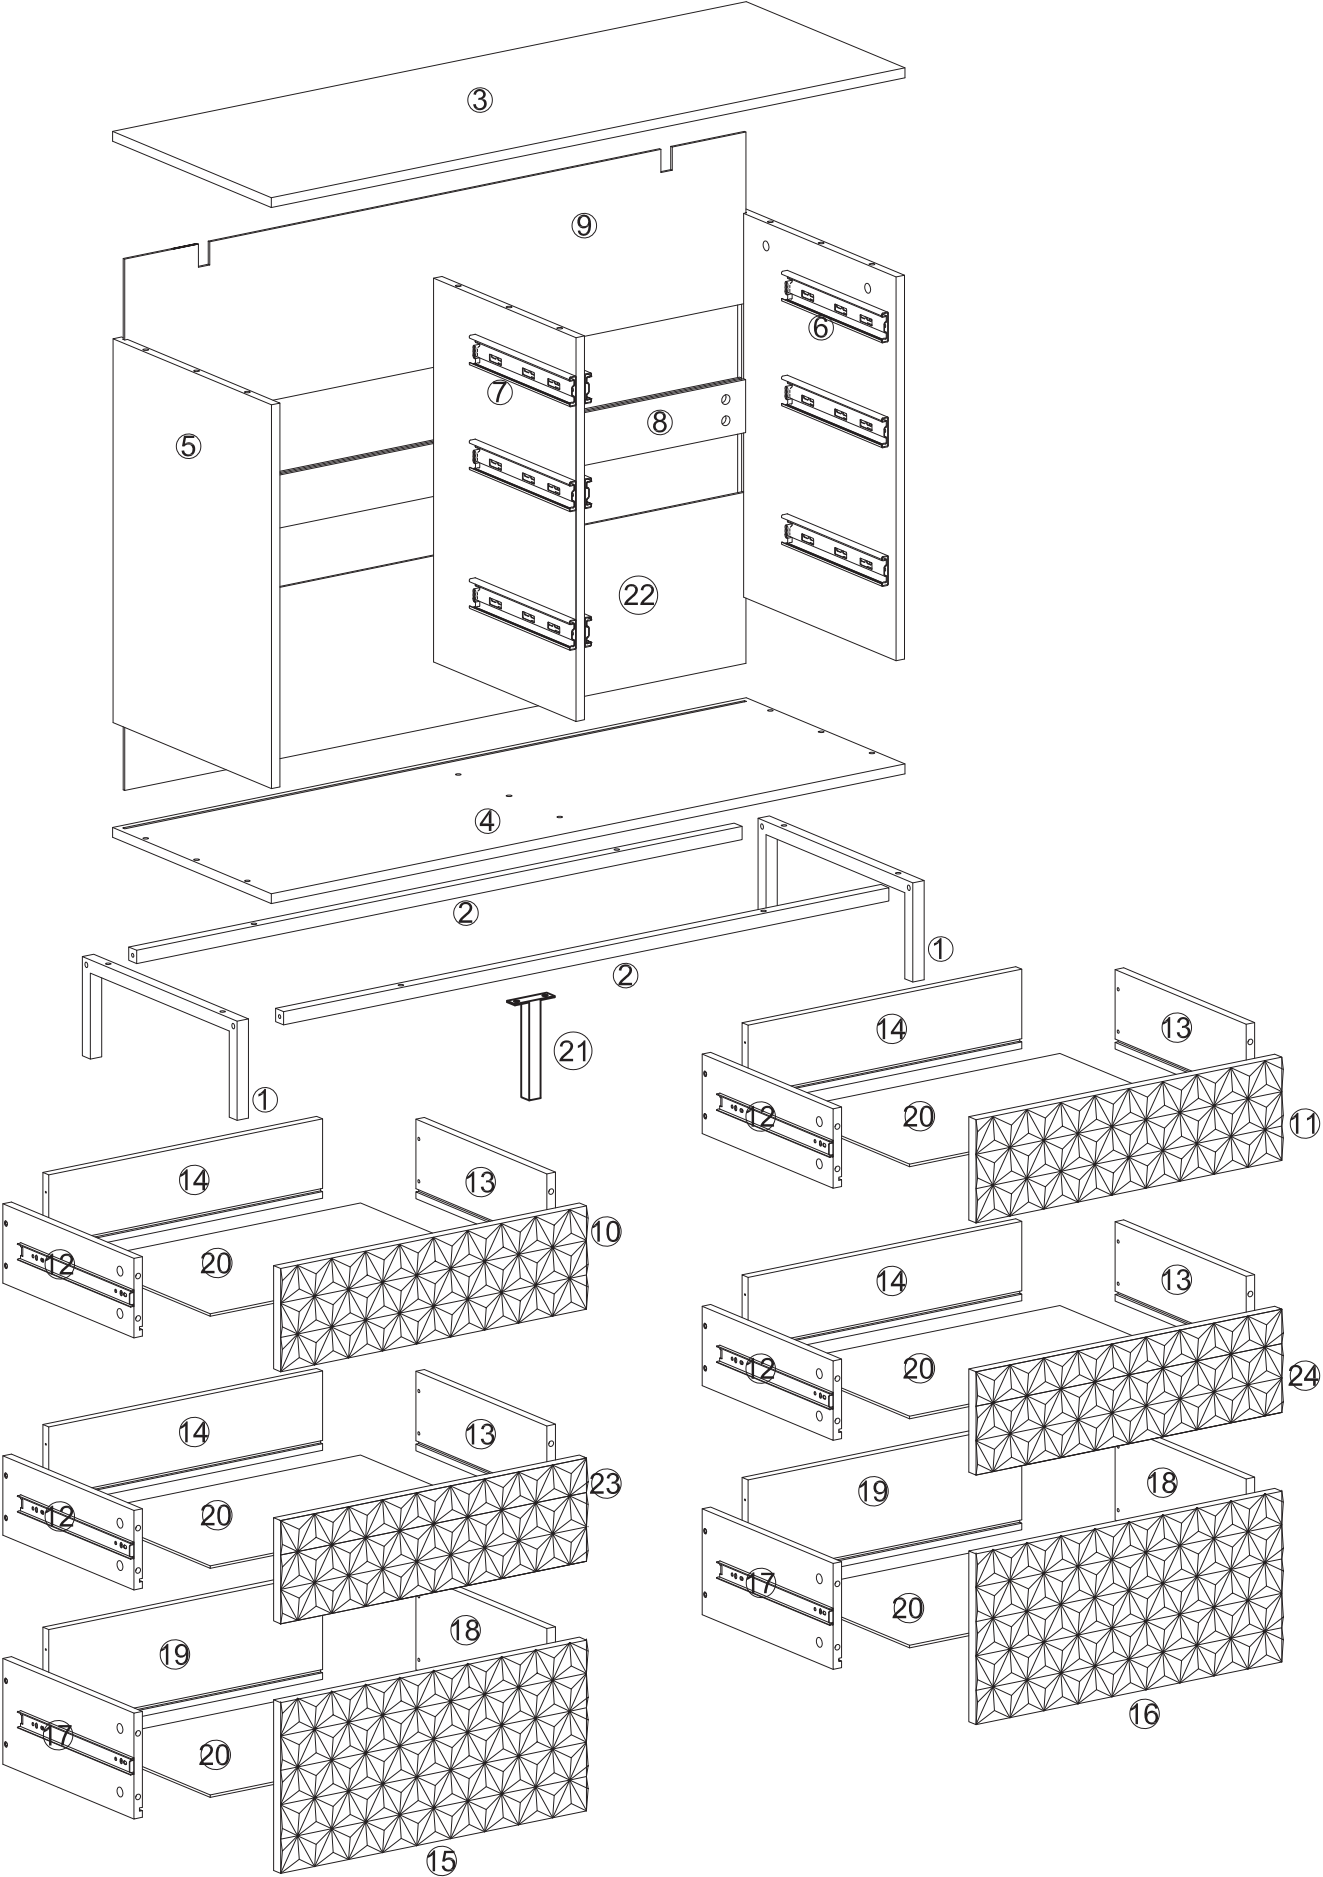

## Parts list




















Before you begin building your Isabella Textured 6 Drawer Chest, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Side Leg	2pcs	Box 1
②	Connection Tube	2pcs	Box 1
③	Top	1pc	Box 1
④	Bottom Panel	1pc	Box 1
⑤	Left Side Panel With Slides	1pc	Box 1
⑥	Right Side Panel With Slides	1pc	Box 1
⑦	Middle Panel With Slides	1pc	Box 1
⑧	Back Slat	1pc	Box 1
⑨	Upper Back Panel	1pc	Box 1
⑩	Upper Drawer left front	1pc	Box 1
⑪	Upper Drawer Right Front	1pc	Box 1
⑫	Upper Drawer Left Side With Slides	4pcs	Box 1




Part Number	Part Description	Quantity	Box No
⑬	Upper Drawer Right Side With Slides	4pcs	Box 1
⑭	Upper Drawer Back	4pcs	Box 1
⑮	Lower Drawer Left Front	1pc	Box 1
⑯	Lower Drawer Right Front	1pc	Box 1
⑰	Lower Drawer Left Side With Slides	2pcs	Box 1
⑱	Lower Drawer Right Side With Slides	2pcs	Box 1
⑲	Lower Drawer Back	2pcs	Box 1
⑳	Drawer Bottom Panel	6pcs	Box 1
㉑	Centre Tube	1pc	Box 1
㉒	Lower Back Panel	1pc	Box 1
㉓	Middle Drawer Left Front	1pc	Box 1
㉔	Middle Drawer Right Front	1pc	Box 1

## Fittings


Please check you have all the fittings listed below with your product in box 1.


<b>A</b>  M6*45mm Bolt 34pcs+4pcs extra	<b>B</b>  Ø15x12mm Cam Lock 34pcs+4pcs extra	<b>C</b>  Ø8x30mm Wood Dowel 6pcs	<b>D</b>  M7*40mm Screw 6pcs	<b>E</b>  M3.5*14mm Screw 12pcs+1pc extra	<b>F</b>  M6*30mm Screw 8pcs	<b>G</b>  M6*35mm Screw 4pcs
<b>H</b>  M4x38mm Screw 26pcs+3pcs extra	<b>J</b>  M4*14mm Screw 2pcs	<b>K</b>  Plastic Buckle 8pcs	<b>L</b>  M3*12mm Screw 8pcs	<b>M</b>  Wall Plug 2pcs	<b>N</b>  Handle 6pcs	<b>O</b>  Wall Bracket 2pcs
<b>P</b>  Allen Key 1pc	<b>Q</b>  M6*12mm Screw 2pcs	<b>R</b>  Centre Leg 1pc	<b>S</b>  Cover 34pcs+4pcs extra	<b>T</b>  Slide pre assembled 24sets		

Pre-assembled Fittings.


<b>T<sub>1</sub></b>  Slide 12pcs	<b>T<sub>2</sub></b>  Slide 12pcs	<b>E</b>  M3.5*14mm Screw 48pcs
---	---	---

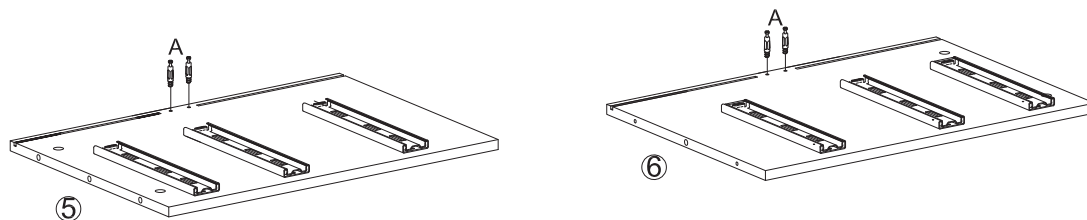


1. Attach parts to left and right side panel.




A

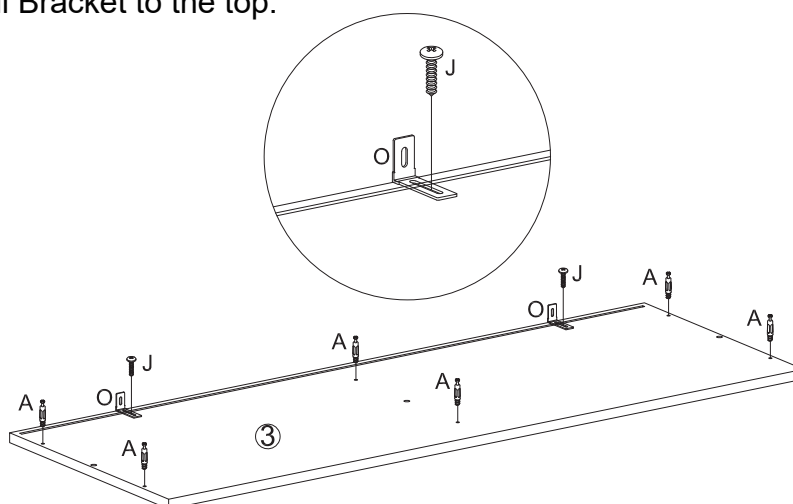M6*45mm Bolt 4pcs


2. Attach Bolt and Wall Bracket to the top.




A	J	O
		
M6*45mm Bolt 6pcs	M4*14mm Screw 2pcs	Wall Bracket 2pcs

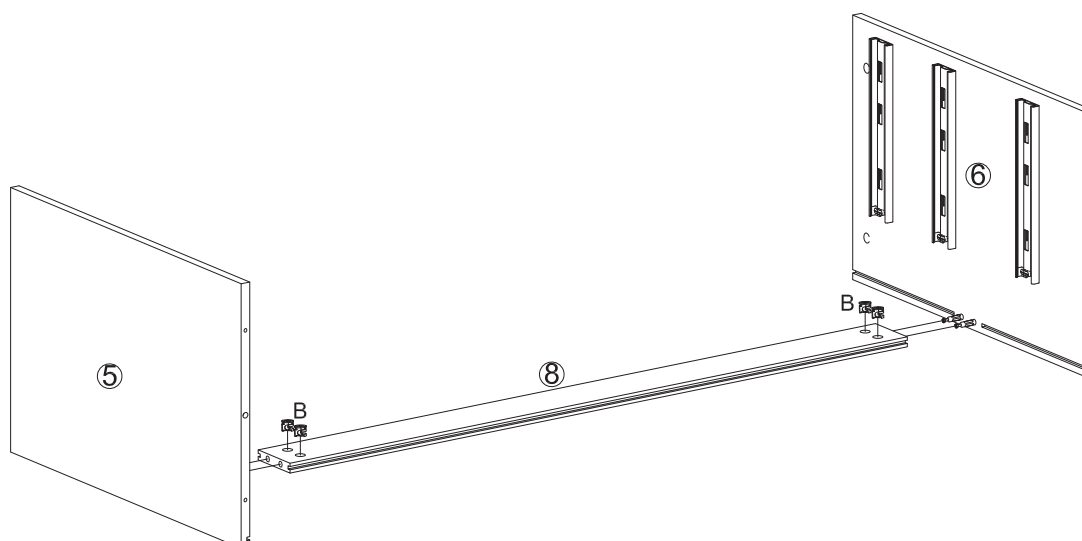3. Attach left and right side panel to the back slat and fix with cam lock.





B

Ø15x12mm Cam Lock 4pcs

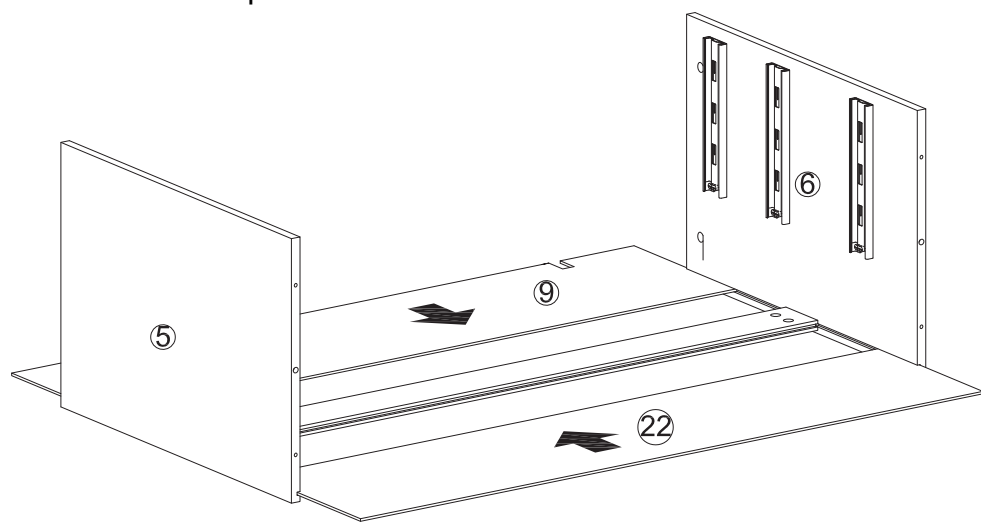
4. Attach upper and lower back panel to the frame.

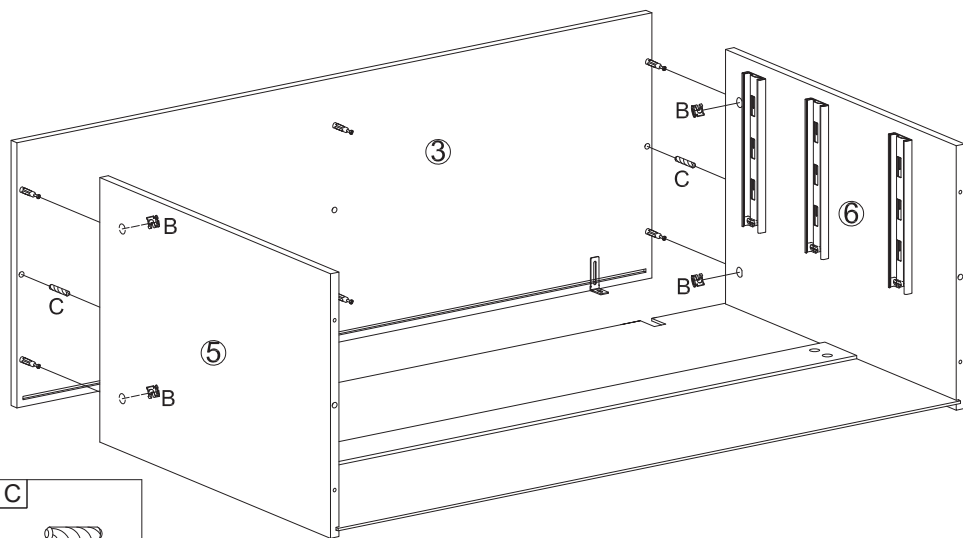


5. Attach top to the frame.





B

Ø15x12mm Cam Lock 4pcs

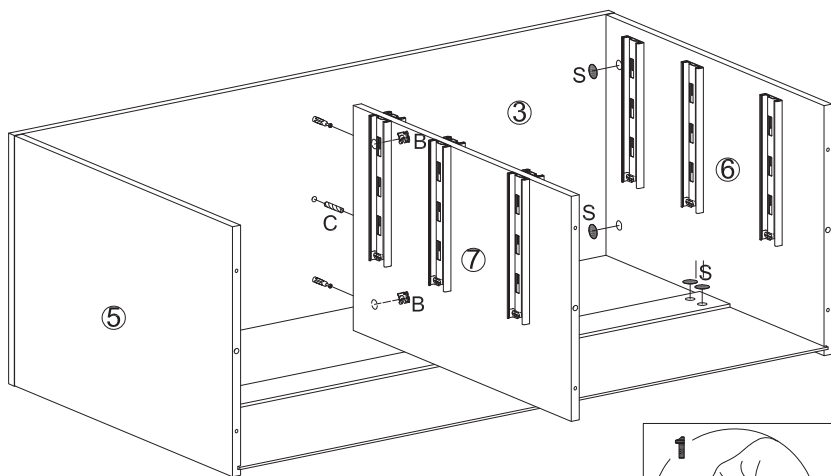
C

Ø8x30mm Wood Dowel 2pcs


6. Attach middle panel to the top, fix with cam lock and cover with covers.




B

Ø15x12mm Cam Lock 2pcs


C

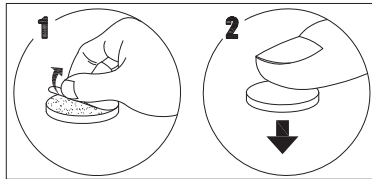Ø8x30mm Wood Dowel 1pc


S

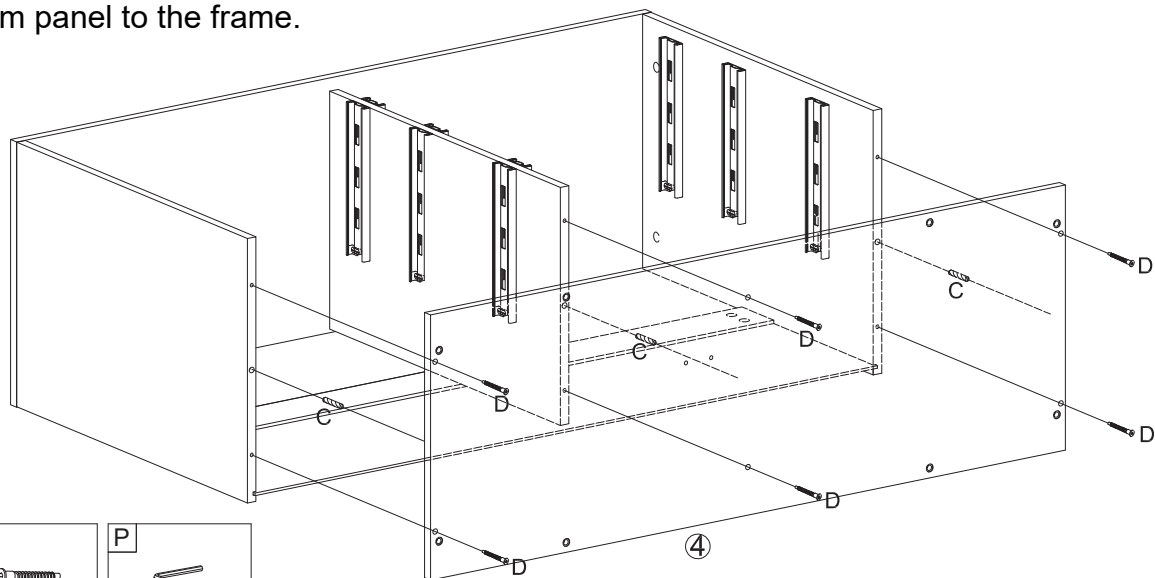Cover 10pcs




7. Attach bottom panel to the frame.





C

Ø8x30mm Wood Dowel
3pcs


D

M7*40mm Screw
6pcs

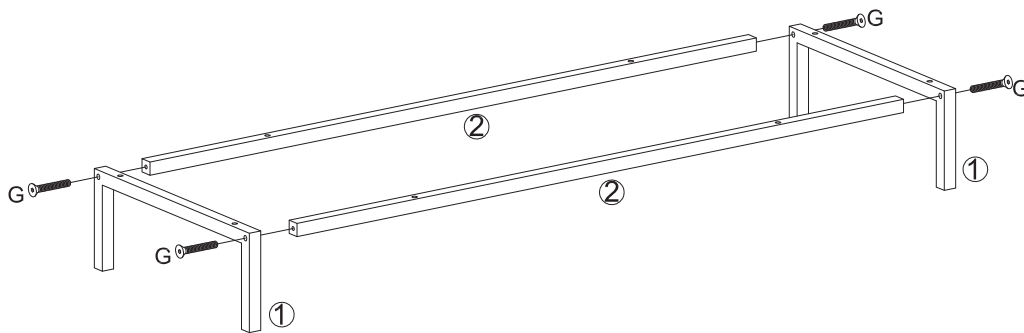P

Allen Key
1pc


8. Attach connection tubes to side legs and tighten screws to only 70%.





G

M6*35mm Screw
4pcs

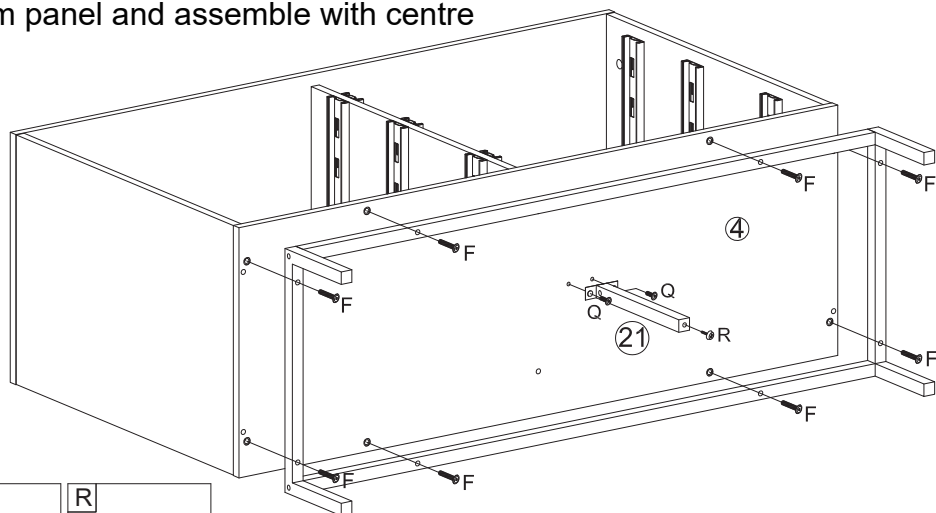
P

Allen Key
1pc


9. Attach legs to the bottom panel and tighten screws to 100%.  
Fix the centre tube to bottom panel and assemble with centre leg.



F

M6*30mm Screw
8pcs


P

Allen Key
1pc



Q

M6*12mm Screw
2pcs

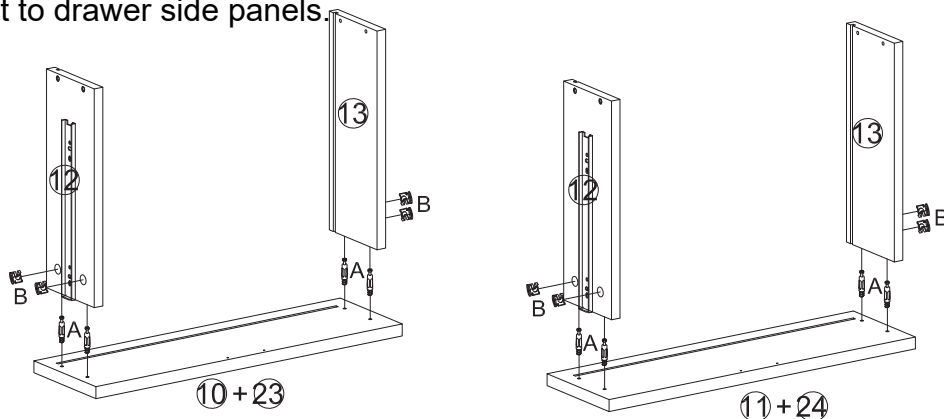R

Centre Leg
1pc

10. Attach drawer front to drawer side panels.


**x2**



<b>A</b>	<b>B</b>
	
M6*45mm Bolt 16pcs	Ø15x12mm Cam Lock 16pcs


11. Attach drawer bottom panel to frame.

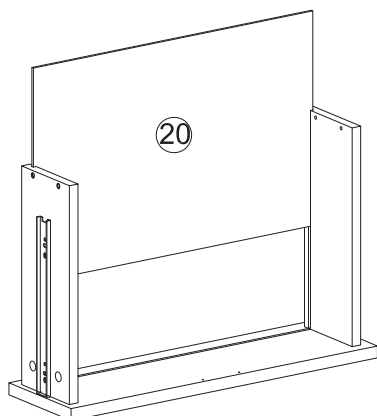

**x4**



12. Attach drawer back panel to the frame and cover with covers.

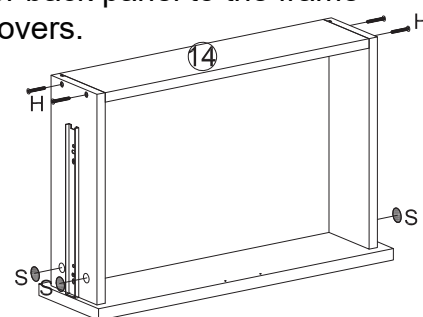
**x4**





<b>H</b>	<b>S</b>
	
M4x38mm Screw 16pcs	Cover 16pcs


13. Assemble the handle.

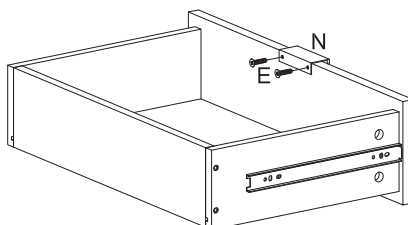

**x4**



<b>E</b>	<b>N</b>
	
M3.5*14mm Screw 8pcs	Handle 4pcs

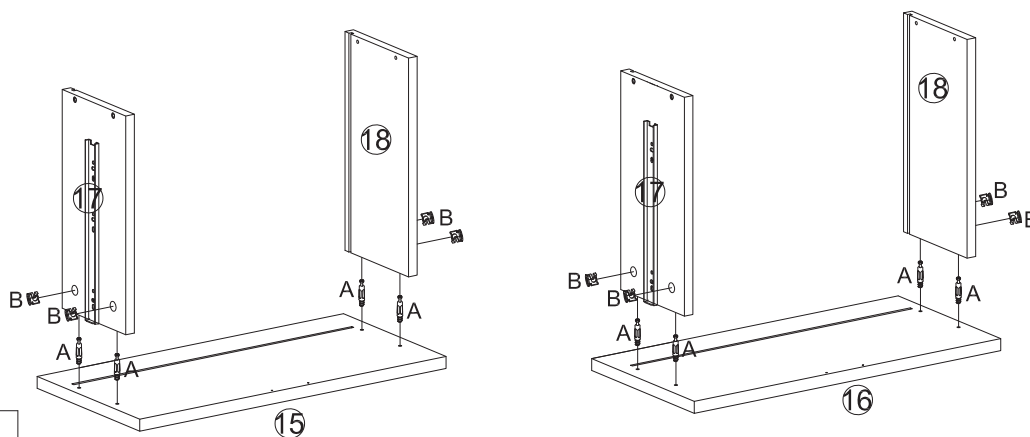14. Attach drawer front to drawer side panels.




<b>A</b>	<b>B</b>
	
M6*45mm Bolt 8pcs	Ø15x12mm Cam Lock 8pcs




15. Attach drawer bottom panel to the frame.

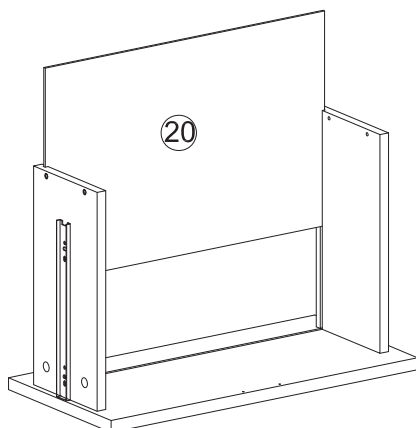

**x2**



16. Attach drawer back panel to the frame and cover with covers.

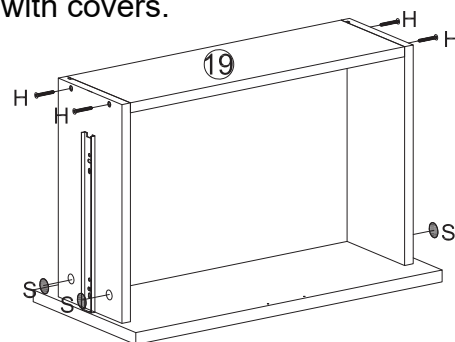
**x2**





<b>H</b>	<b>S</b>
	
M4x38mm Screw	Cover
8pcs	8pcs


17. Assemble the handle.

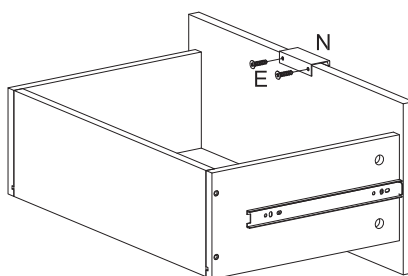

**x2**





<b>E</b>	<b>N</b>
	
M3.5*14mm Screw	Handle
4pcs	2pcs

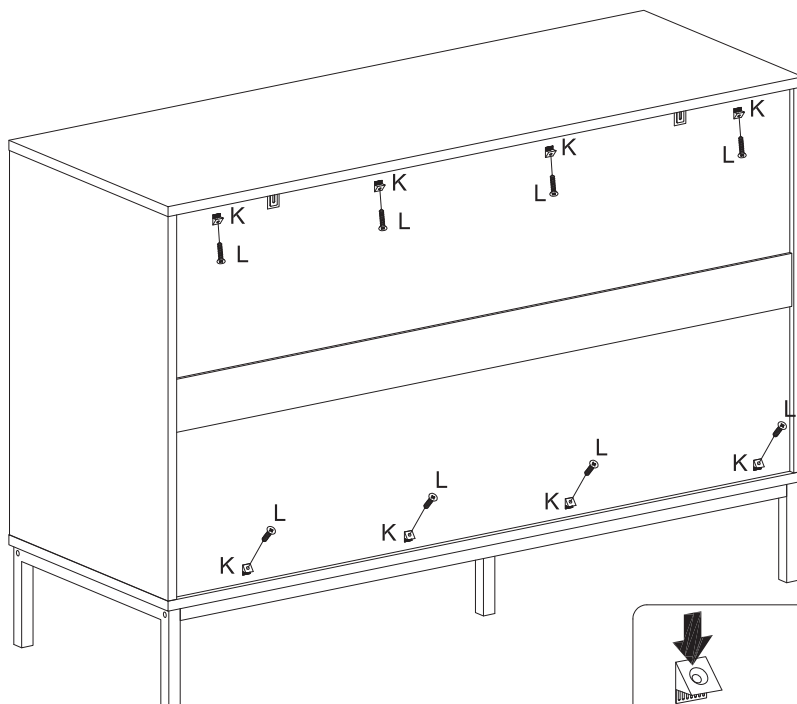18. Attach plastic buckles.




<b>K</b>	<b>L</b>
	
Plastic Buckle	M3*12mm Screw
8pcs	8pcs

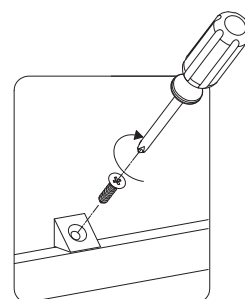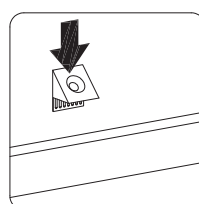

P-9-10  
V-2.0

19. Fix the wall bracket to the wall.

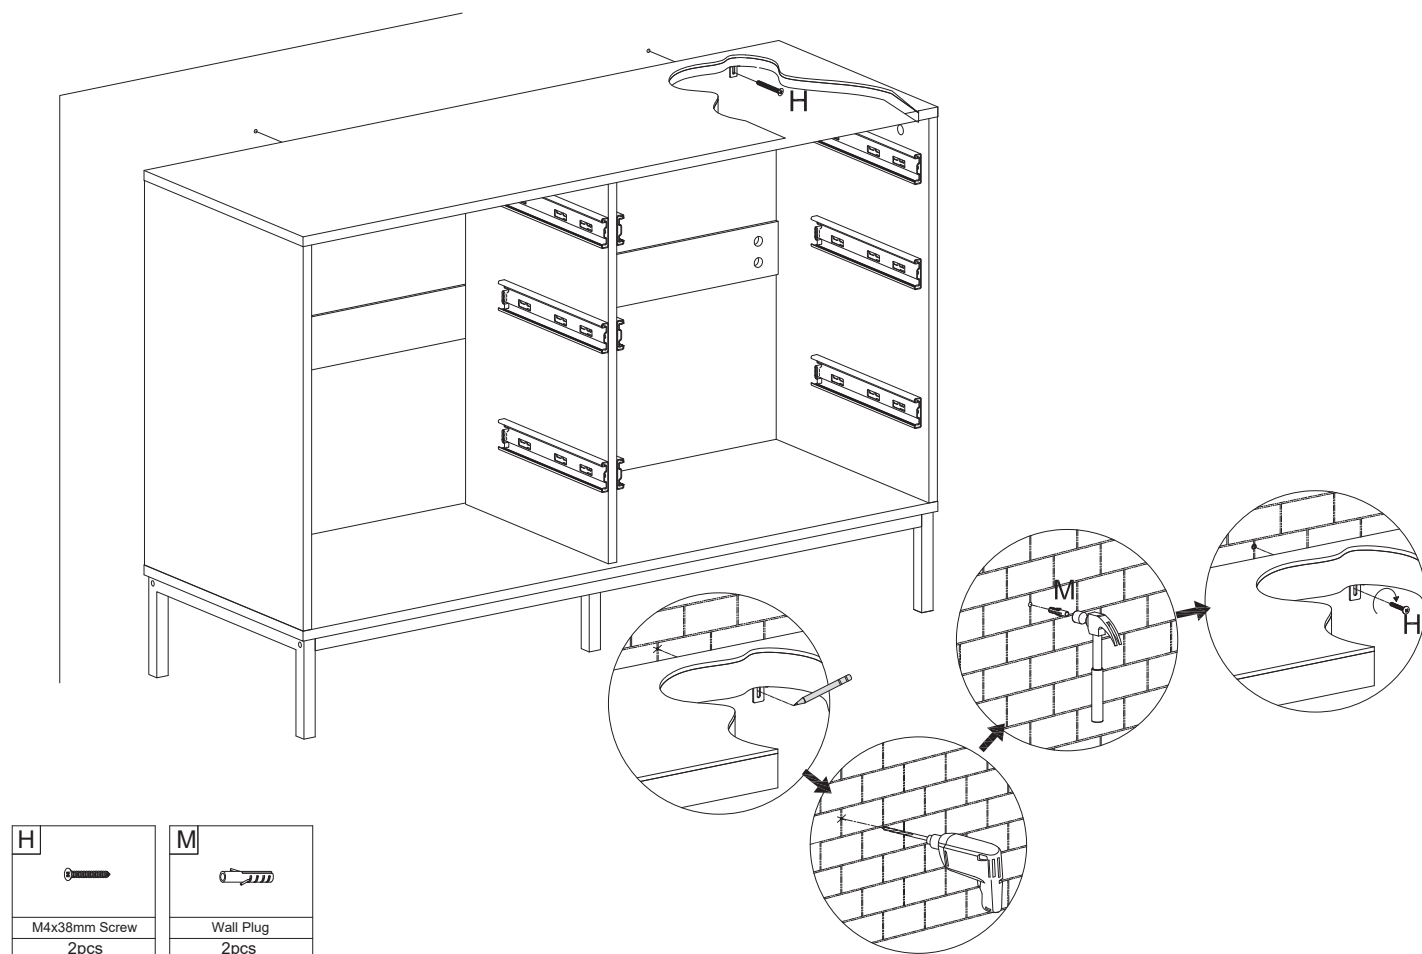

20. The sliding module in the cabinet must be at the front end before assembly. Then attach drawers to the cabinet.

