

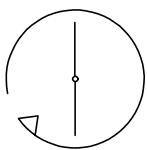


Nell 3 Door Wardrobe

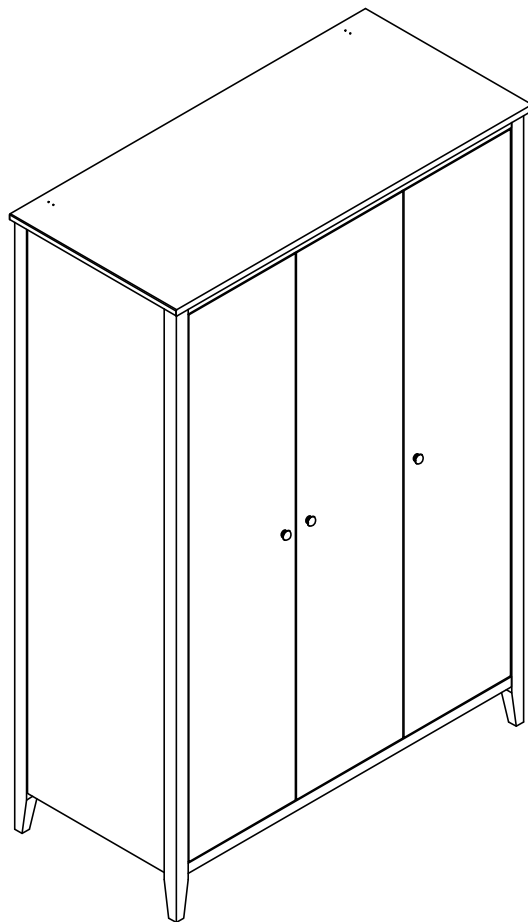

Up to 90 minutes
assembly time

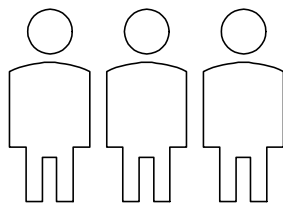

Three person
assembly



Electric screwdriver
prohibited

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Nell 3 Door Wardrobe frame.

We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Nell 3 Door Wardrobe in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Nell 3 Door Wardrobe when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

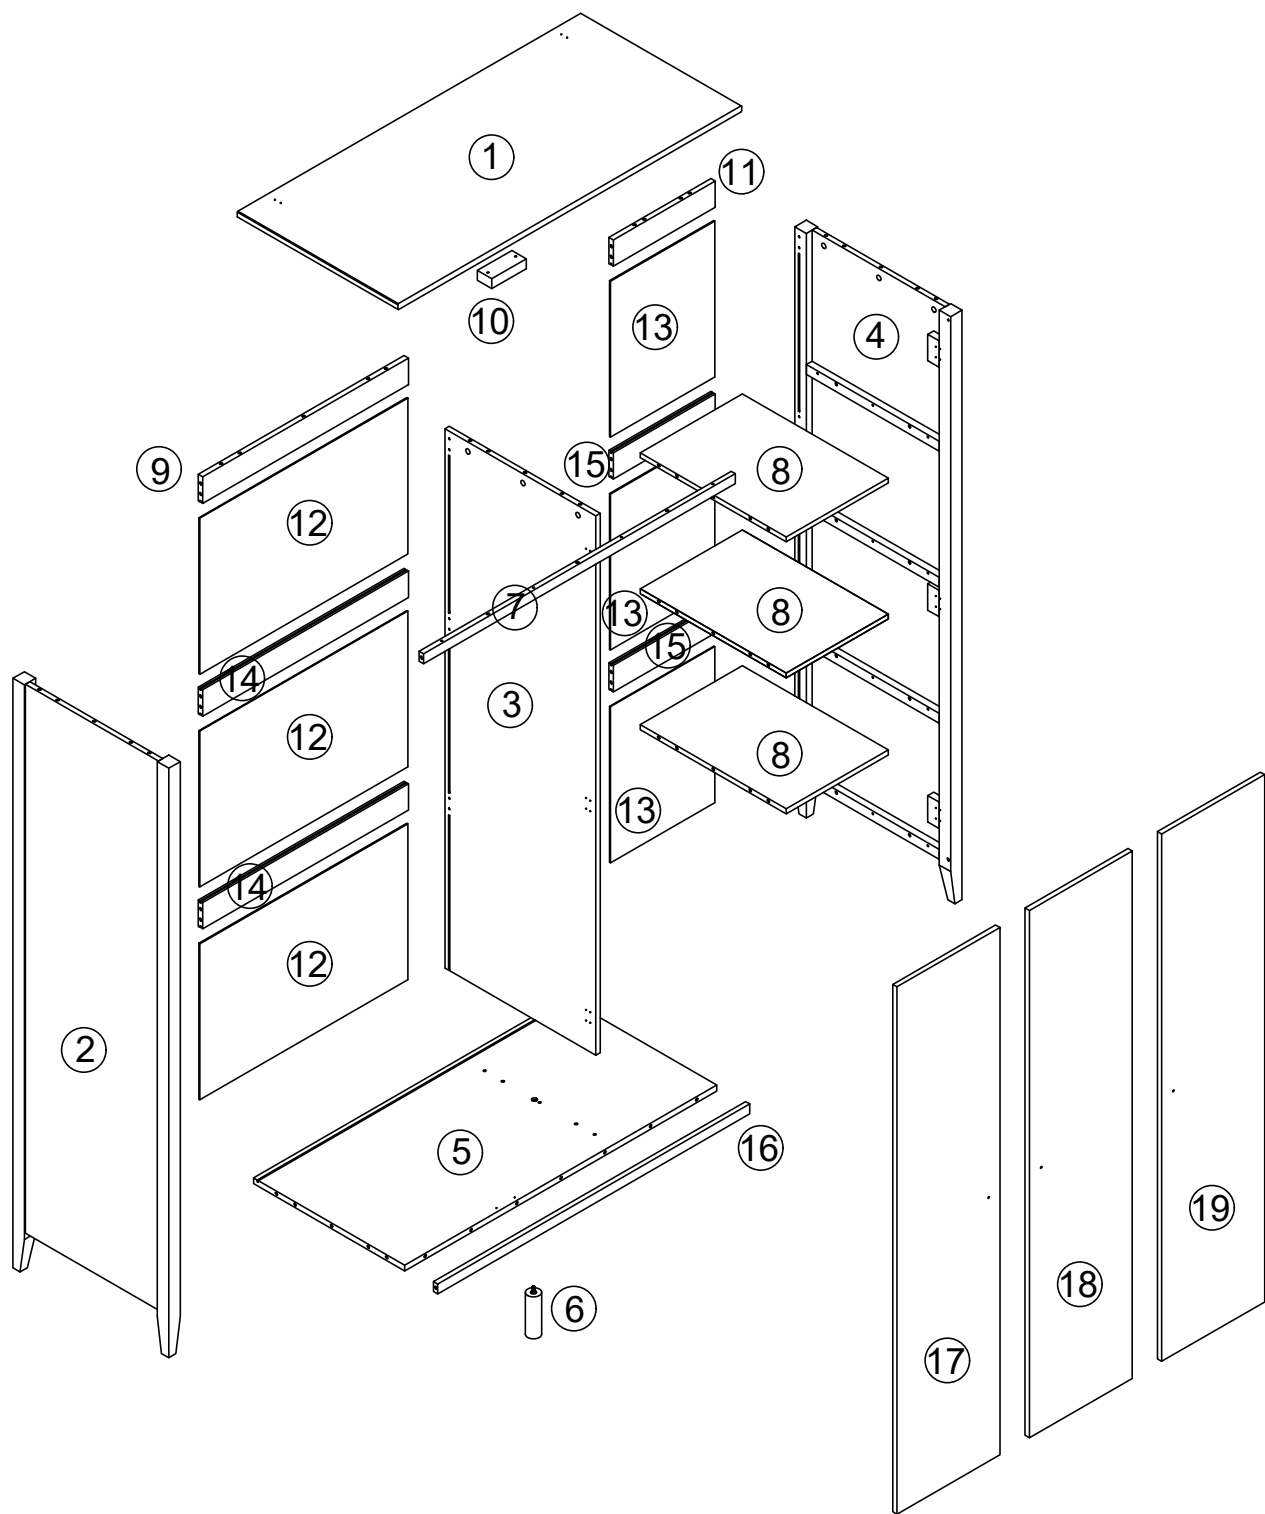

Parts list





















Before you begin building your Nell 3 Door Wardrobe, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top	1pc	Box 2
②	Left Side Panel	1pc	Box 1
③	Middle panel	1pc	Box 1
④	Right Side Panel	2pcs	Box 1
⑤	Bottom Panel	1pc	Box 2
⑥	Centre Leg	1pc	Box 2
⑦	Centre Support	1pc	Box 2
⑧	Shelf Panel	3pcs	Box 2
⑨	Centre Support	1pc	Box 2
⑩	wooden block	1pc	Box 1


Part Number	Part Description	Quantity	Box No
⑪	Centre Support	1pc	Box 2
⑫	Left Back Panel	3pcs	Box 2
⑬	Right Back Panel	3pcs	Box 2
⑭	Centre Support	2pcs	Box 2
⑮	Centre Support	2pcs	Box 2
⑯	Centre Support	1pc	Box 1
⑰	Door Panel	1pc	Box 1
⑱	Door Panel	1pc	Box 1
⑲	Door Panel	1pc	Box 1

Fittings

Please check you have all the fittings listed below with your product box 1.

 M6*35mm Bolt 67pcs+3pcs extra	 Ø15x9.5mm Cam Lock 67pcs+3pcs extra	 Ø8x30mm Dowel 35pcs+3pcs extra	 magnetic pad 4pcs	 magnetic catch 2pcs	 Ø4*14mm Screw 62+3pcs extra	 Tube Bracket 2pcs	 Clothes rail 1pc
 Felt pad 4pcs	 Steel L bracket 2pcs	 Ø4*14mm Screw 4pcs	 Ø4*35mm Screw 11pcs+1pc extra	 Back panel clip 30pcs+3pcs extra	 Ø3*16mm Screw 30pcs+3pcs extra	 Ø3*12mm Screw 6pcs	 Hinge 6pcs
 M4*18mm Bolt 3pcs	 Handle 3pcs	 Wall Plug 2pcs	 Adjustable foot pads 1pc	 Cover 9pcs+1pc extra	 Hinge 3pcs		

Bolt Length Ruler:





Tool required




Crosshead Screwdriver (not provided)


1. Attach parts to the side panel.

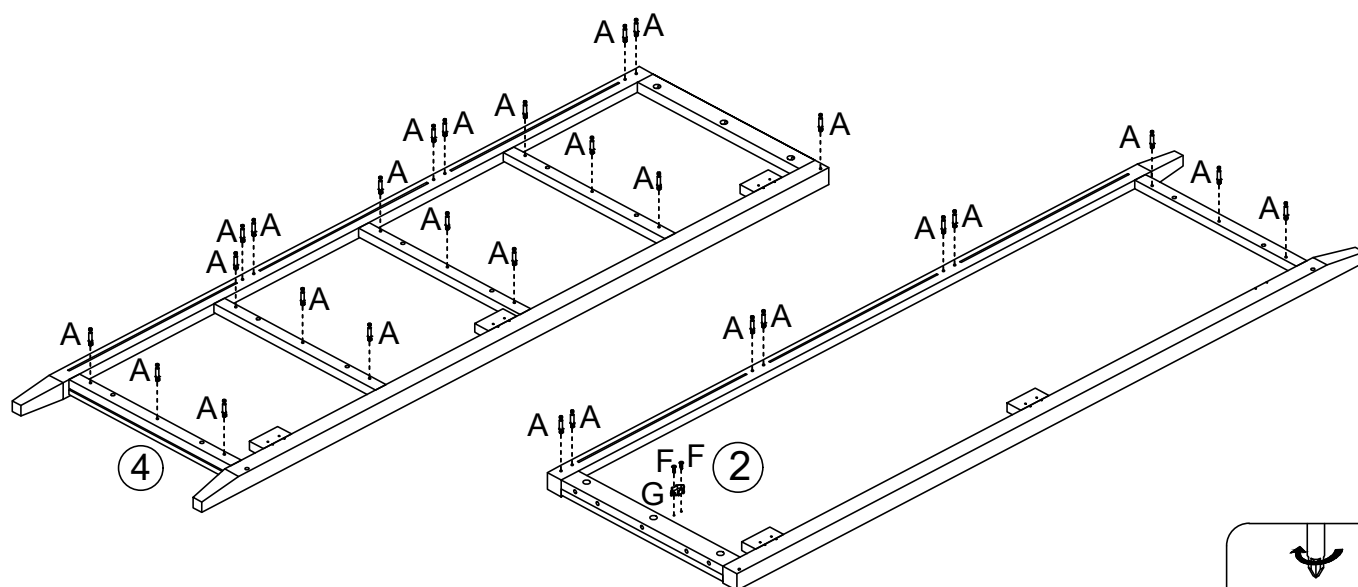



A	F	G
		
M6*35mm Bolt	Ø4*14mm Screw	Tube Bracket
28pcs	2pcs	1pc

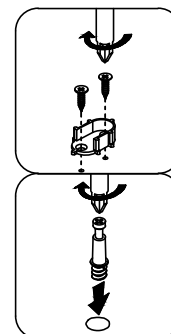




2. Attach the shelf panel to the right side panel.

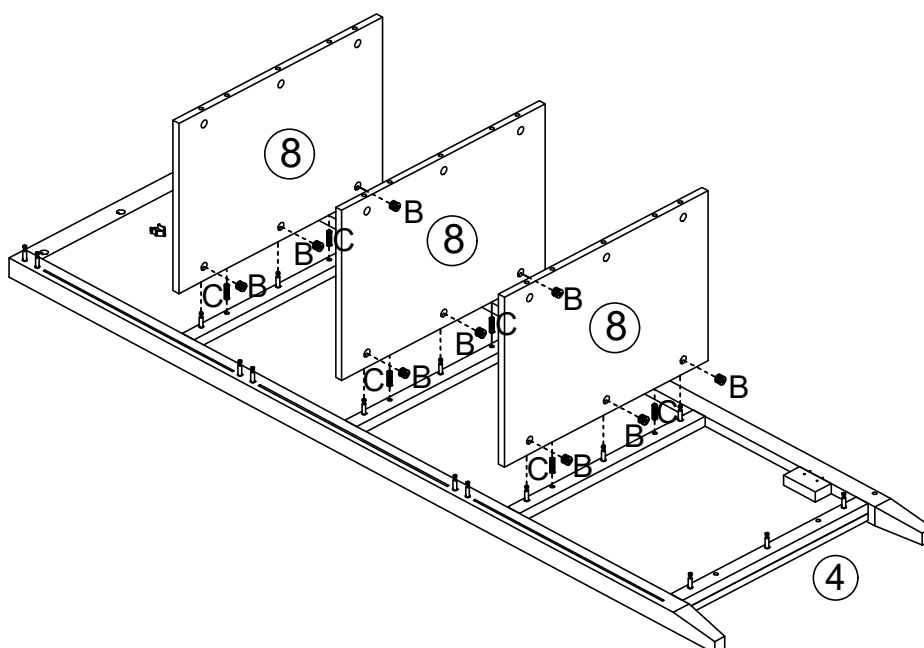


B	C
	
Ø15x9.5mm Cam Lock	Ø8*30mm Dowel
9pcs	6pcs

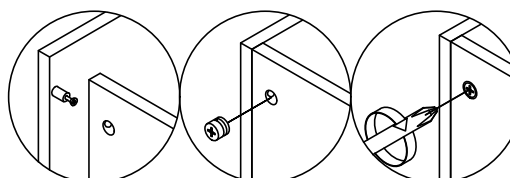



3. Attach the centre support to the right side panel.

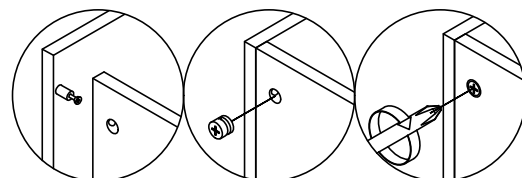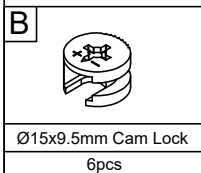
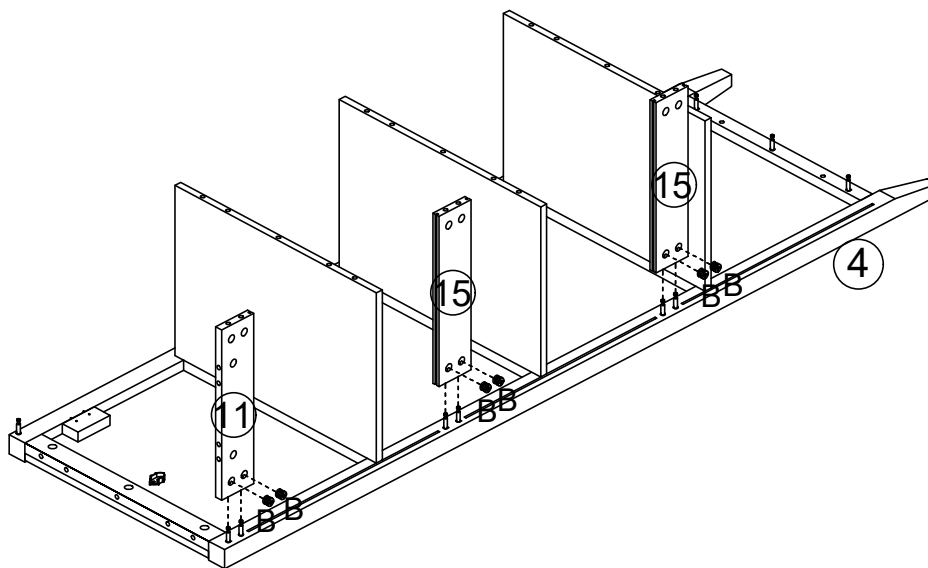


4. Attach the back panel to the right side panel.

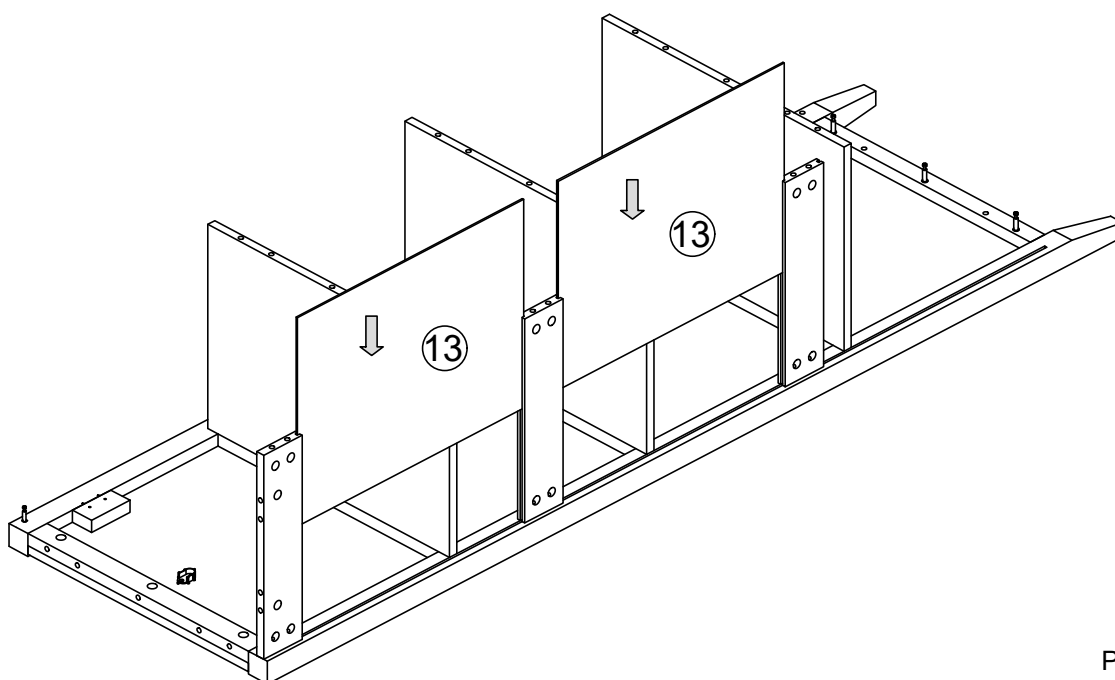



5.Attach parts to the middle panel.

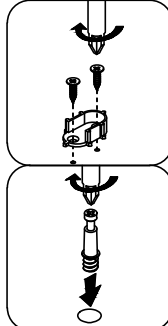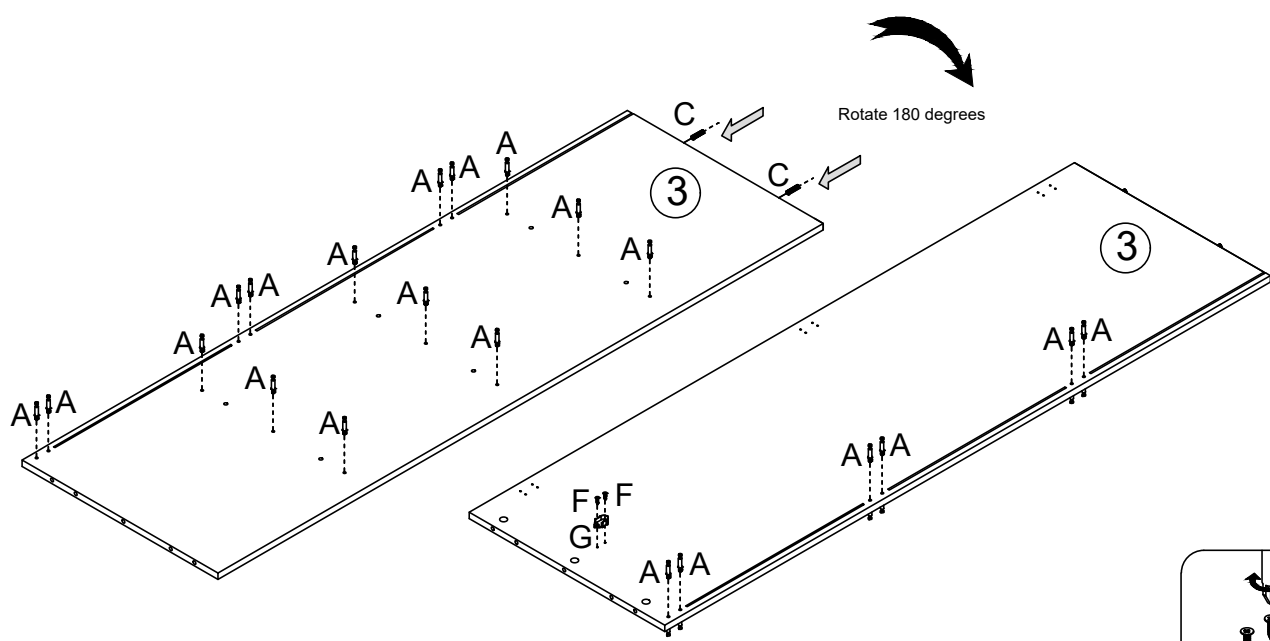


A	C	F	G
			
M6*35mm Bolt	Ø8*30mm Dowel	Ø4*14mm Screw	Tube Bracket
21pcs	2pcs	2pcs	1pc


6.Attach the middle panel to the frame.

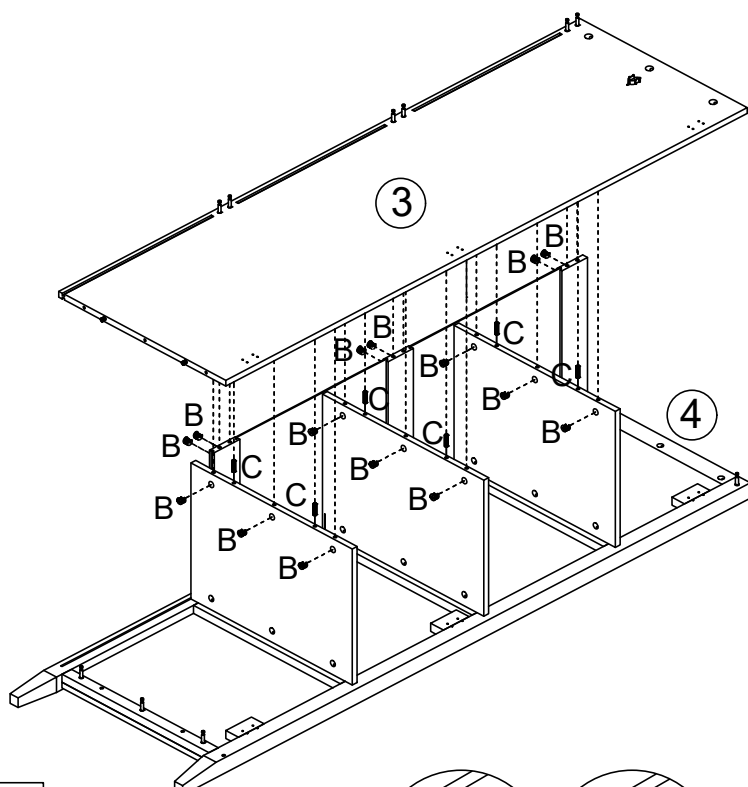


B	C
	
Ø15x9.5mm Cam Lock	Ø8*30mm Dowel
15pcs	6pcs

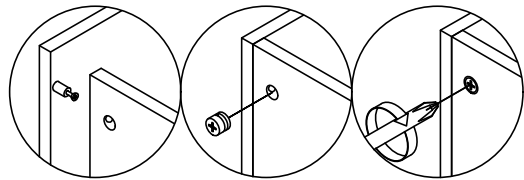


7. Attach the back panel to the frame.

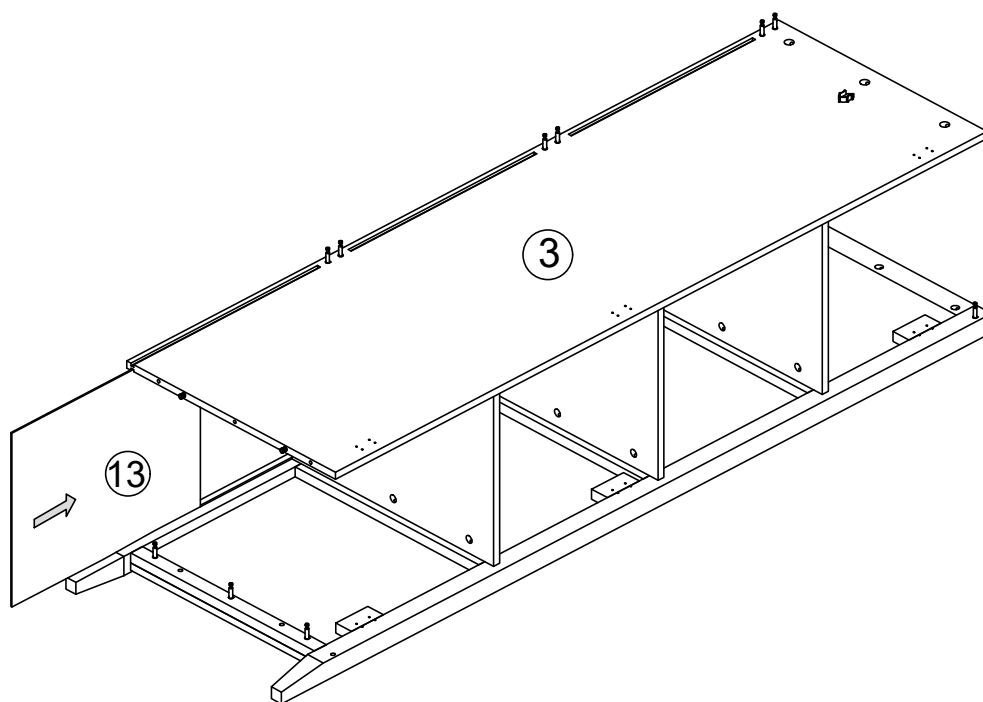




8. Attach parts to the bottom panel.

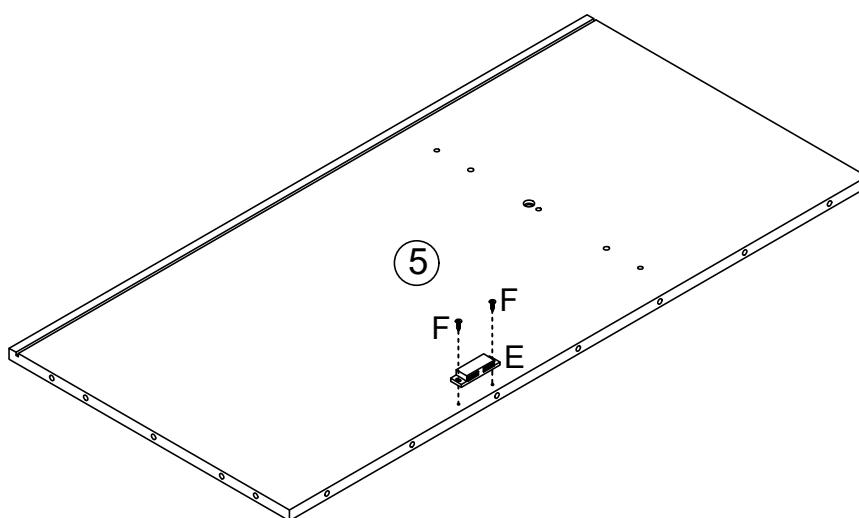


F 	E 
Ø4*14mm Screw 2pcs	magnetic catch 1pc


9. Attach the centre support to the bottom panel.

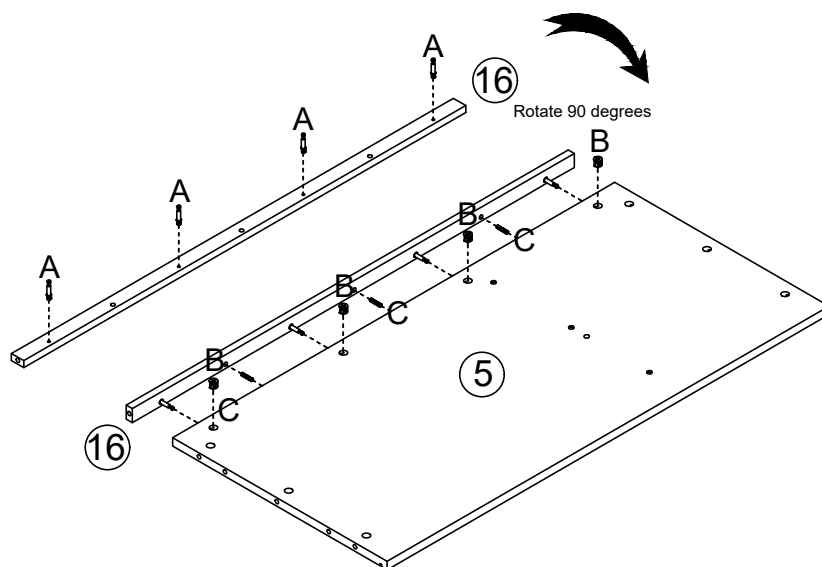



A	B	C
		
M6*35mm Bolt 4pcs	Ø15x9.5mm Cam Lock 4pcs	Ø8*30mm Dowel 3pcs

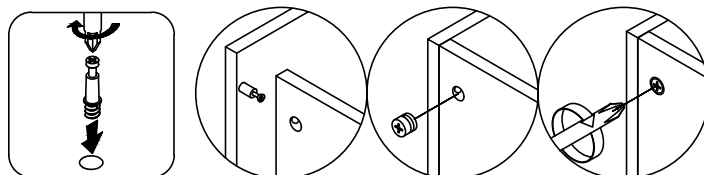


10. Attach the bottom panel to the frame.

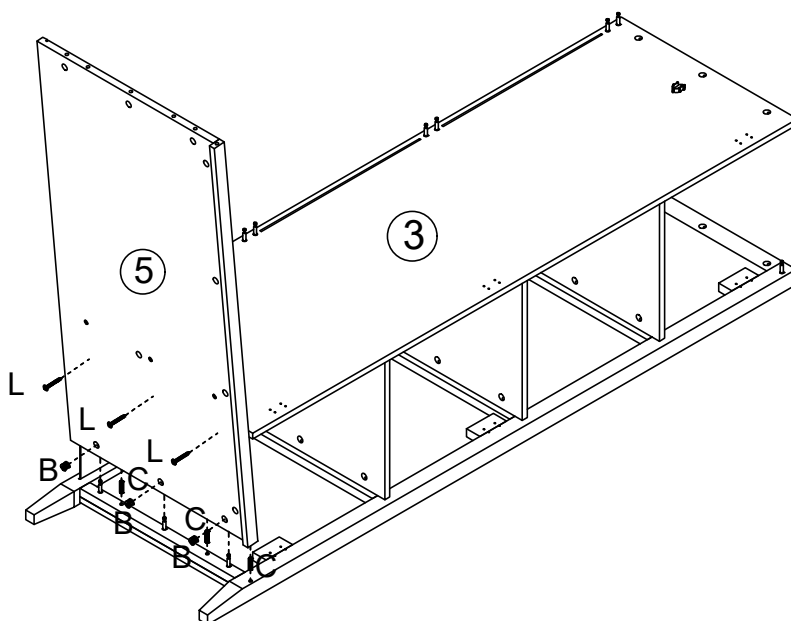

L	B	C
		
Ø4*35mm Screw 3pcs	Ø15x9.5mm Cam Lock 3pcs	Ø8*30mm Dowel 3pcs

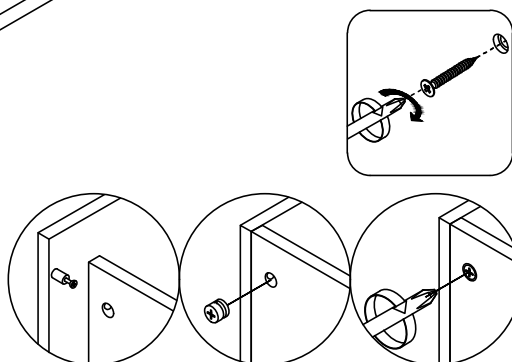

11. Attach the centre support to the frame.

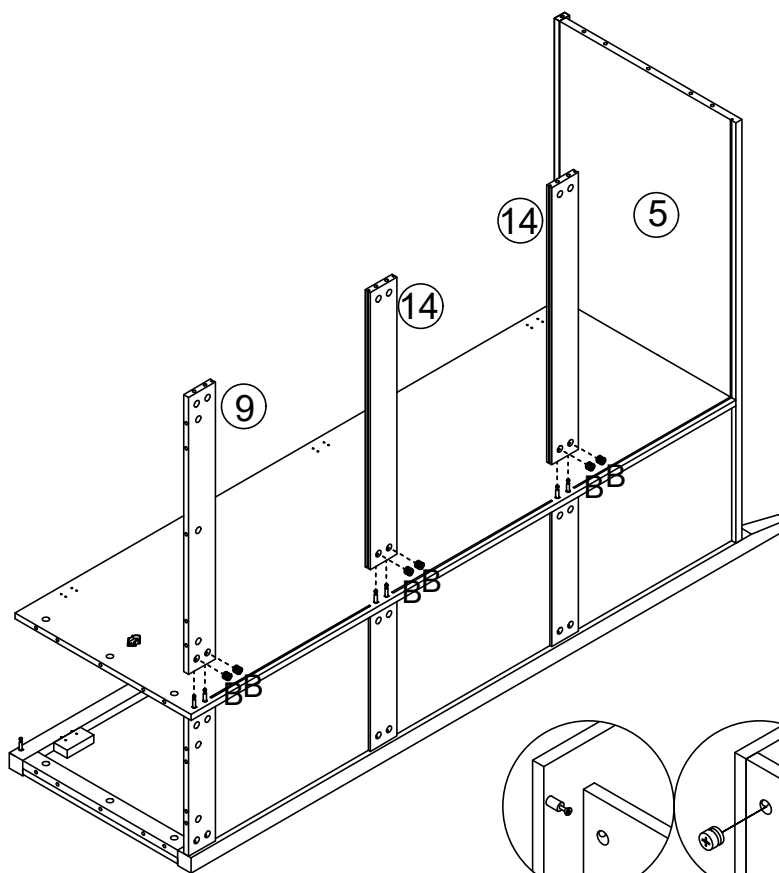


B



Ø15x9.5mm Cam Lock

6pcs

12. Attach the centre support and the back panel to the frame.

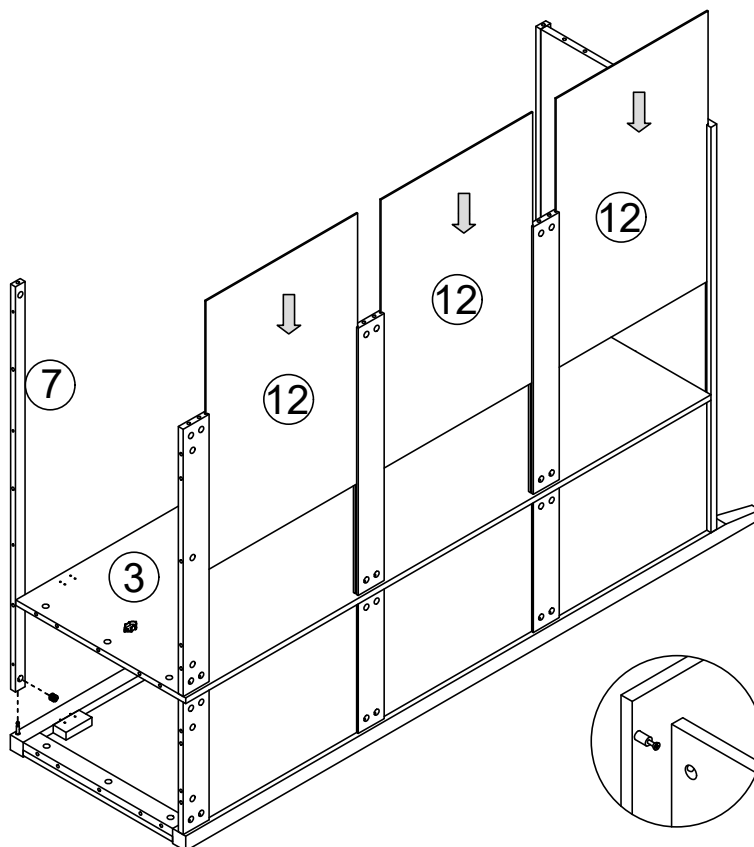


B




Ø15x9.5mm Cam Lock

1pcs


13. Attach the left side panel to the frame.

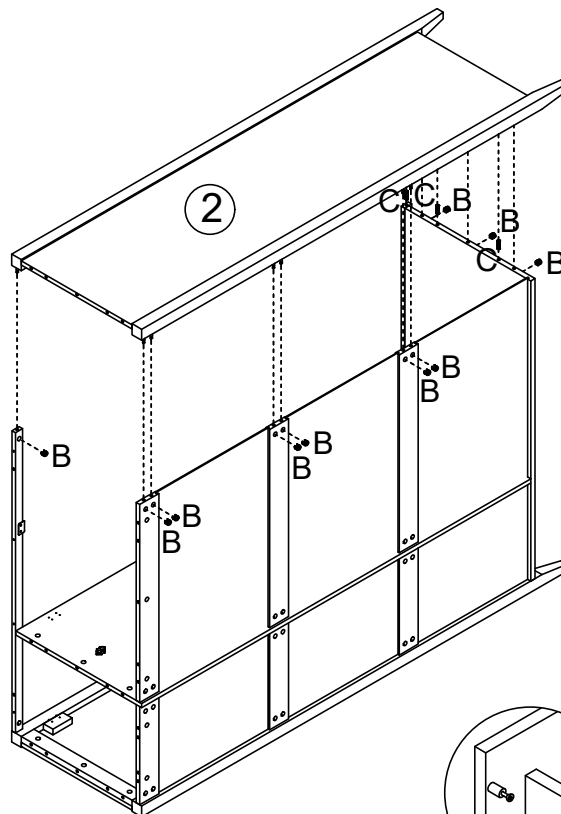

B 	C 
Ø15x9.5mm Cam Lock 10pcs	Ø8*30mm Dowel 3pcs

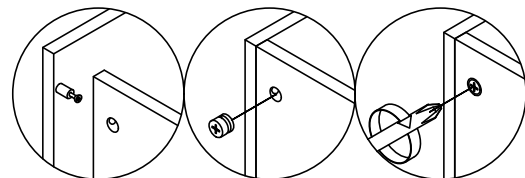


14. Attach the centre leg to the bottom panel, Attach felt pads to legs.

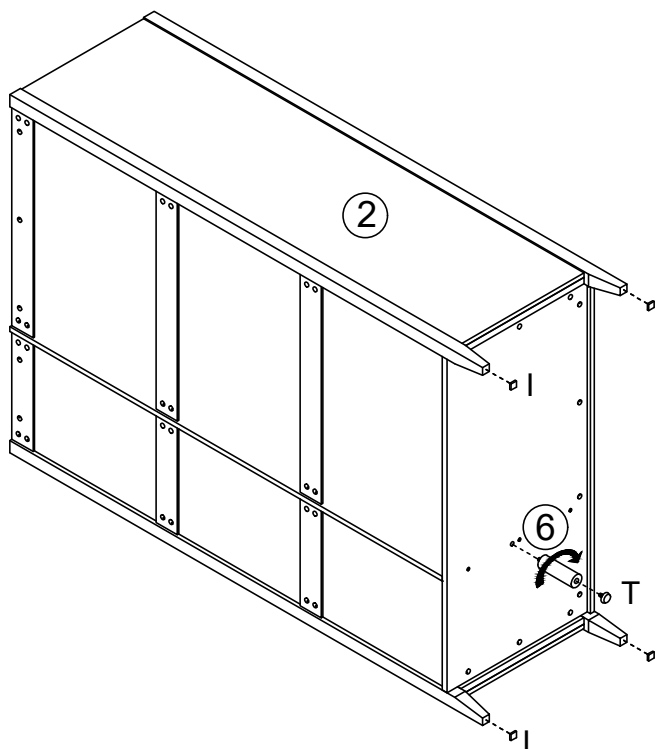


I 	T 
Felt pad 4pcs	Adjustable foot pads 1pc


15..Attach parts to the top panel.

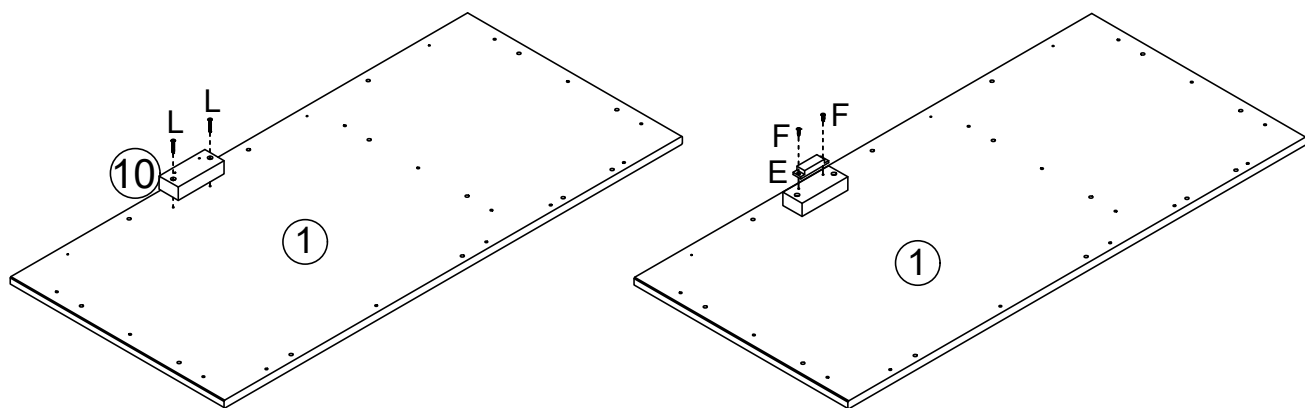


F	E	L
		
Ø4*14mm Screw	magnetic catch	Ø4*35mm Screw
2pcs	1pc	2pcs

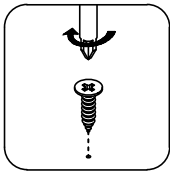

16..Attach parts to the top panel.


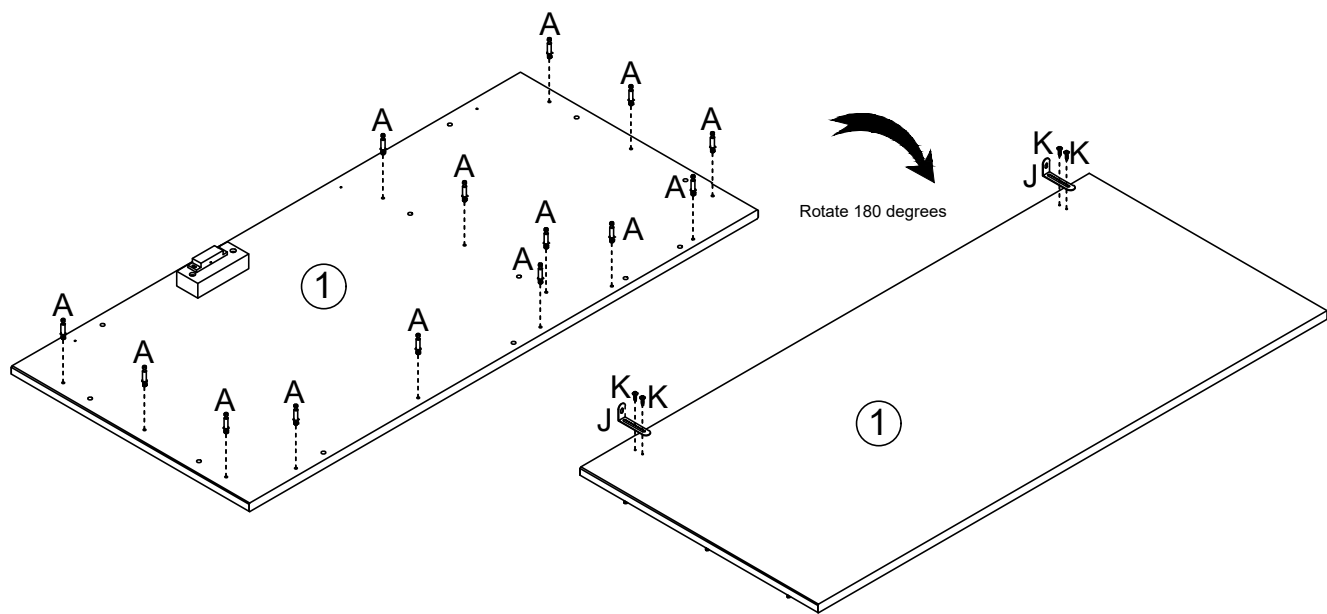


A	K	J
		
M6*35mm Bolt	Ø4*14mm Screw	Steel L bracket
14pcs	4pcs	2pcs

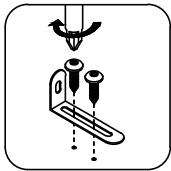


17. Attach the top panel to the frame.


B		C		U	
Ø15x9.5mm Cam Lock		Ø8*30mm Dowel		Cover	
14pcs		12pcs		9pcs	

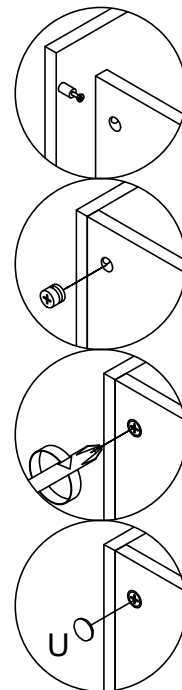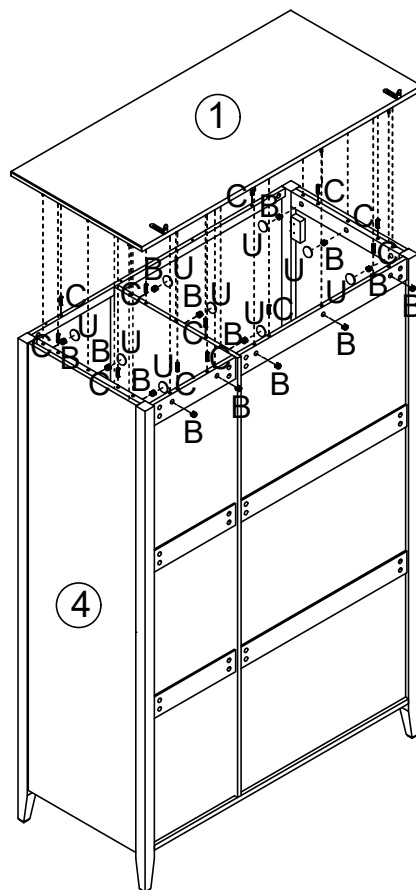


18. Attach parts to the top panel.

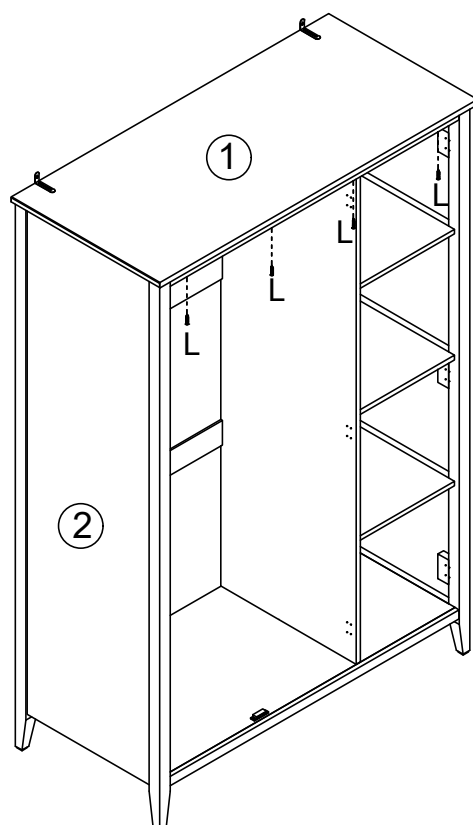


L	
Ø4*35mm Screw	
4pcs	

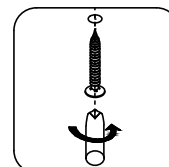


19. Attach parts to the back panel.

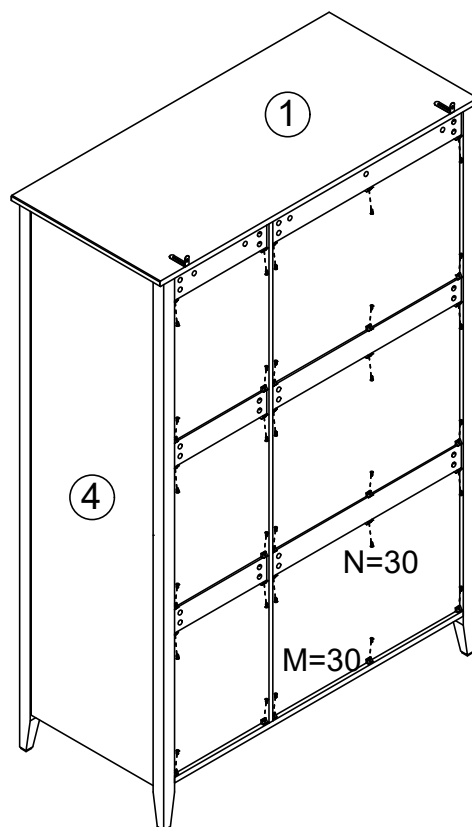

M	N
	
Back panel clip	Ø3*16mm Screw
30pcs	30pcs

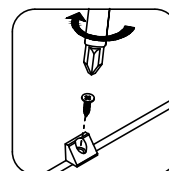


20. Attach the clothes rail to the frame.

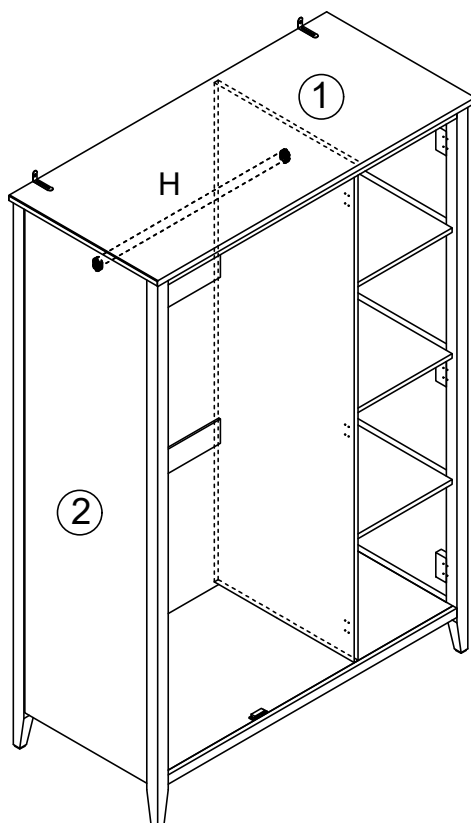


H

Clothes rail
1pc


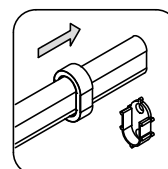


21. Attach parts to door panels.

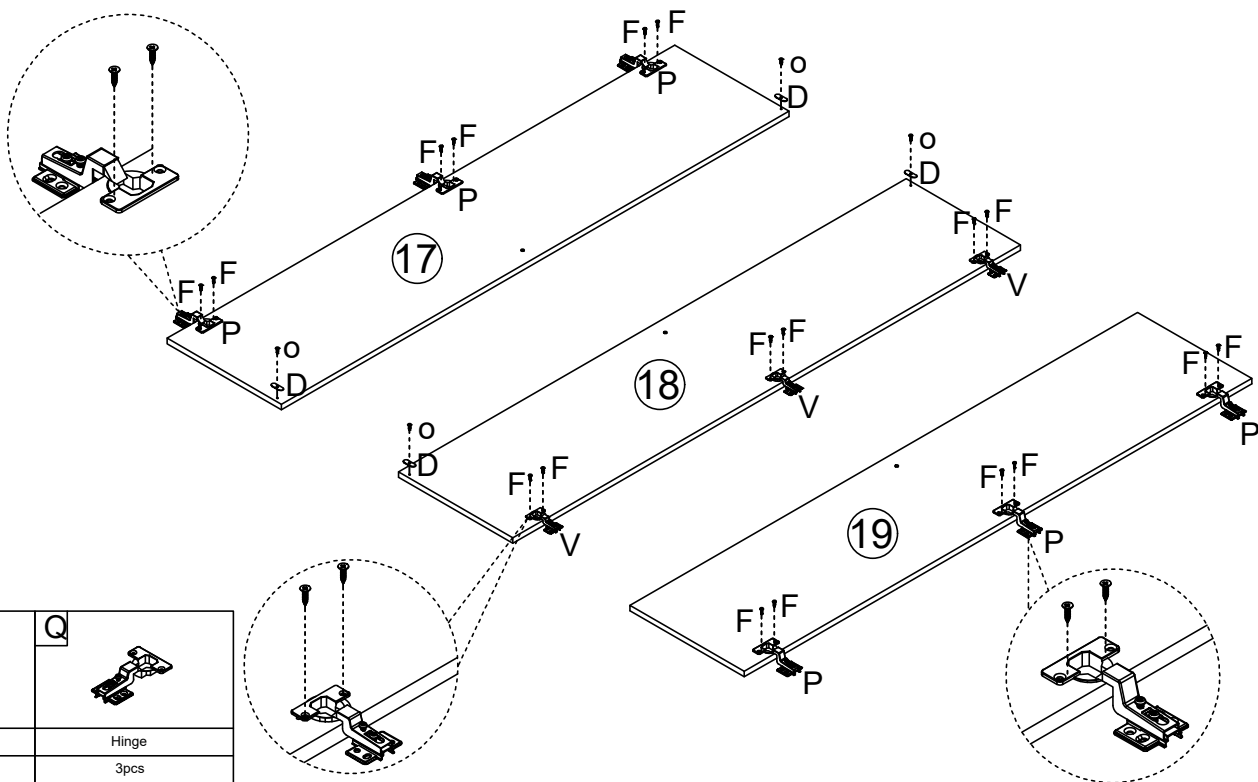




P Hinge 6pcs	Q Hinge 3pcs	
F Ø4*14mm Screw 18pcs	O Ø3*12mm Screw 4pcs	D magnetic pad 4pcs

22. Attach the right door panel to the frame.

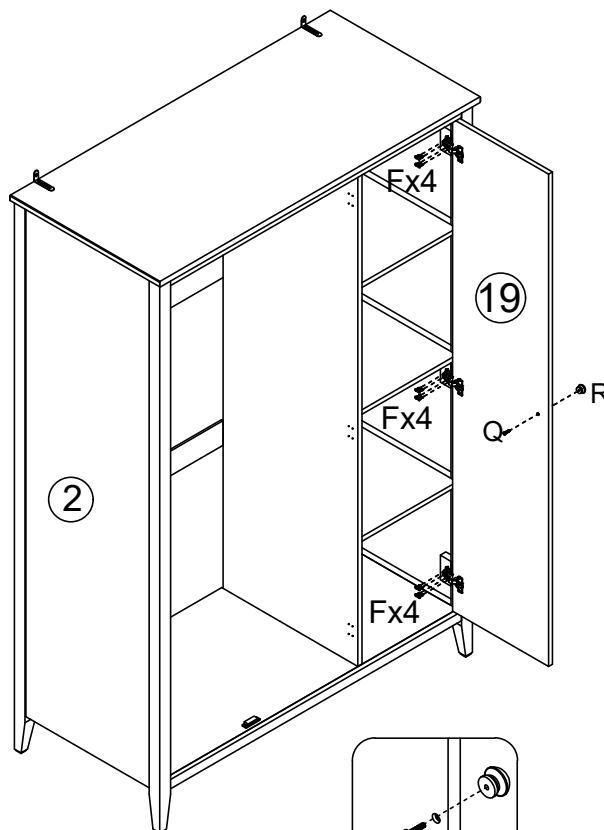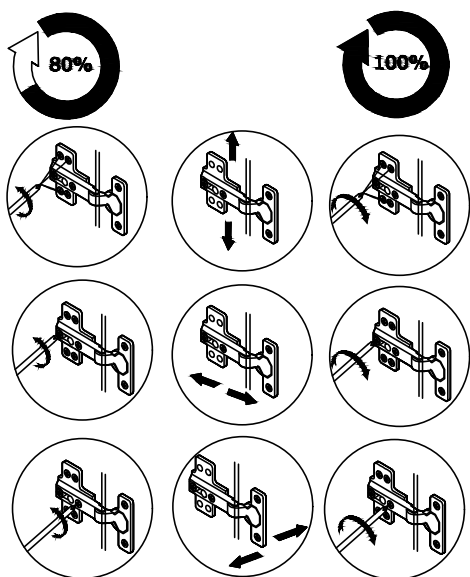




Q M4*18mm Bolt 1pc	R Handle 1pc	F Ø4*14mm Screw 12pcs
-------------------------------------	-------------------------------	--

23. Attach the middle door panel to the frame.

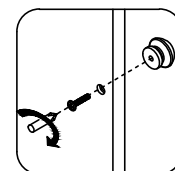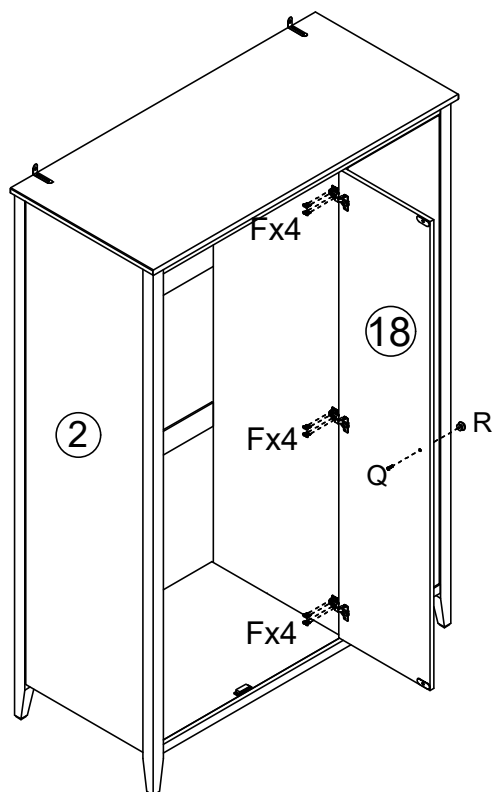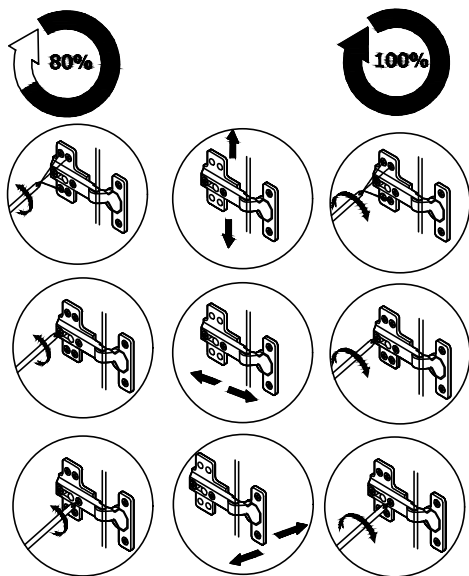


Q	R	F
		
M4*18mm Bolt	Handle	Ø4*14mm Screw
1pc	1pc	12pcs

24. Attach the left door panel to the frame.

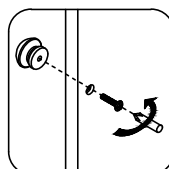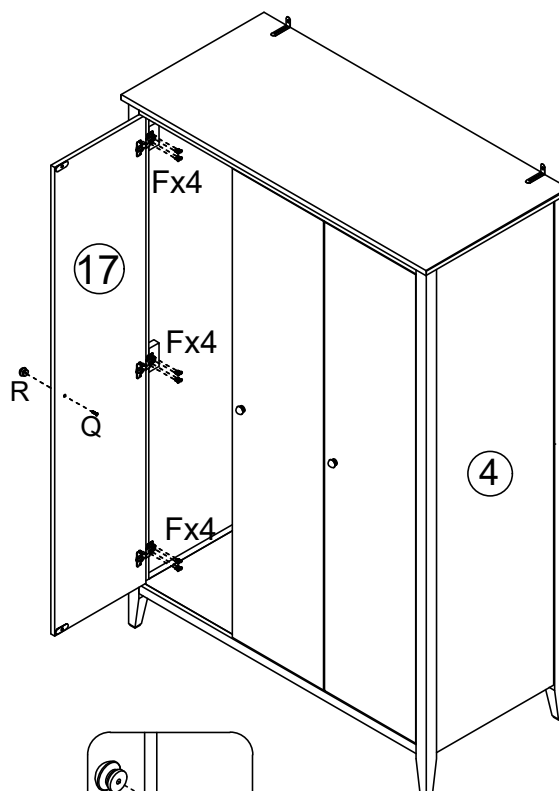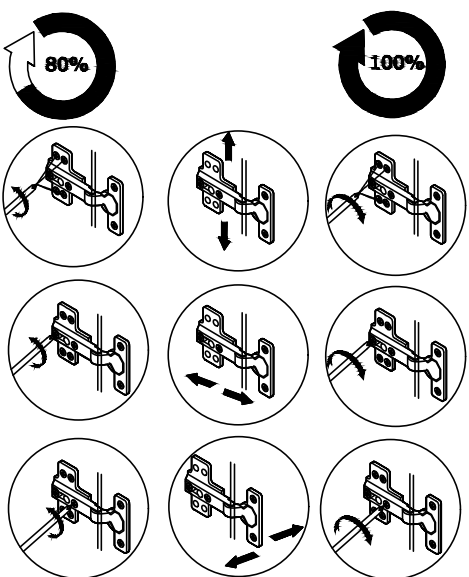


Q	R	F
		
M4*18mm Bolt	Handle	Ø4*14mm Screw
1pc	1pc	12pcs

25. Fix the steel L bracket to the wall.

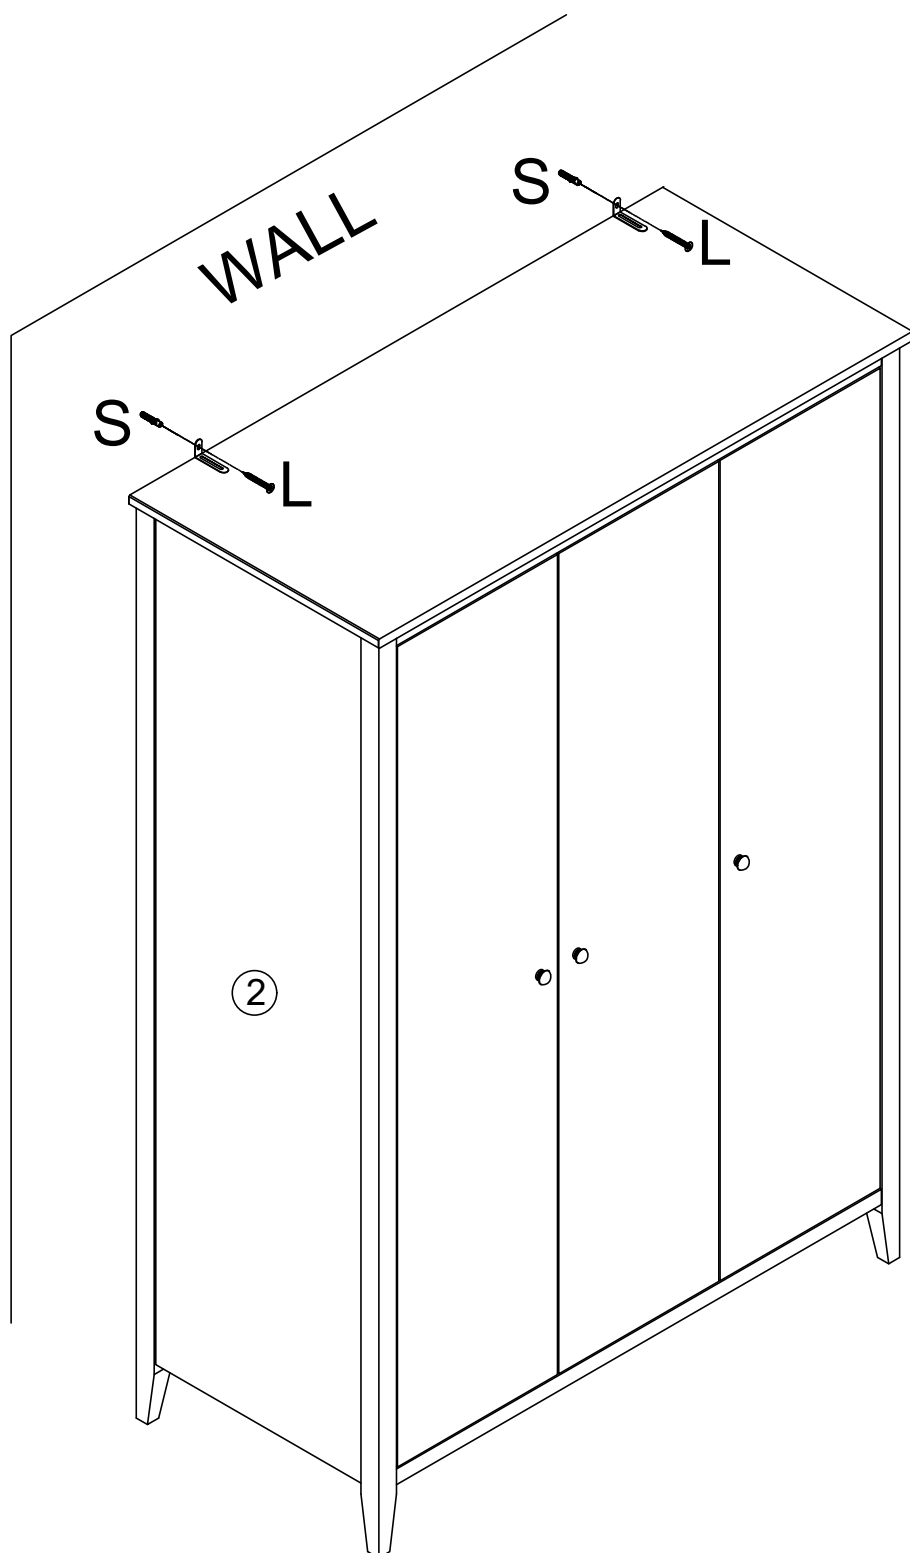

Pre-drilled hole at wall

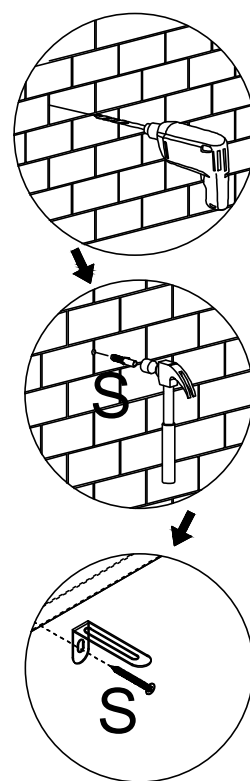

L	S
	
Ø4*35mm Screw	Wall Plug
2pcs	2pcs