
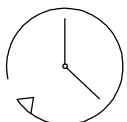


Range Name:NOVA


Box1 Dimensions:W65xD49xH19(cm)

Product Dimension:W37xD37xH66(cm)

Nova bedside

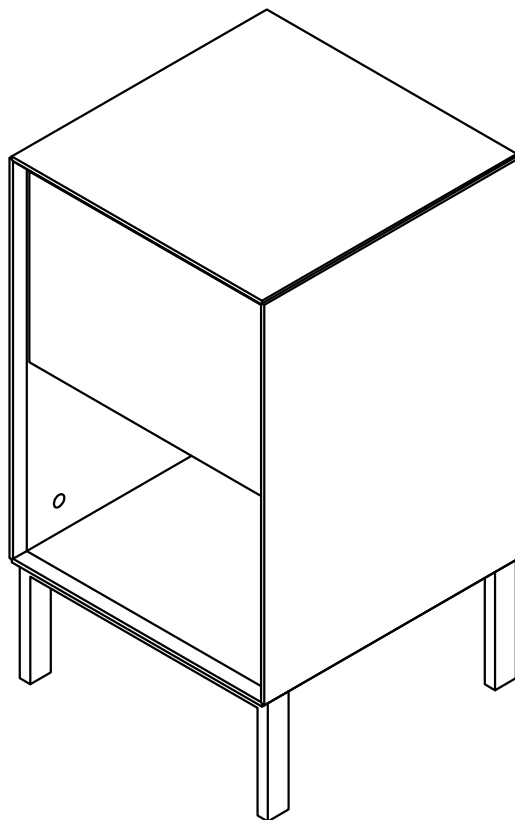

**Up to 30 minutes
assembly time**

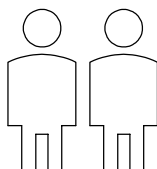

**Two person
assembly**

This product is intended for domestic use only, not commercial purposes.

P-1/12
V-2.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your bedside frame. We advise laying these out on the clean and flat floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. Do not stand on your product. Pregnant women should take additional care when using this product. Do not leave the child unattended. Children should always be under direct adult supervision whilst using this product. Always use on firm level ground, ensuring all legs remain in contact with the ground.
2. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT


Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only use clean , colourless sponge or cloth to avoid any colour transfer or smearing , do not use bleach or abrasive cleaners as they may damage the bedside top over time.
2. Do not use a very wet cloth or allow any liquid to contact with the bedside for a long period of time. Wipe any spillage immediately.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the bedside when moving , lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e . g . hot drinks and dishes) on the bedside surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight.
7. Regularly check all fixings to ensure none have come loose. Re - tighten if necessary.
8. Avoid sharp items such as a screwdriver or any pointy tools.
9. Dispose of all packaging carefully and responsibly - recycle where possible.
10. Due to the delicate nature of this product, please gently place hard items onto the bedside top to avoid damaging the surface.

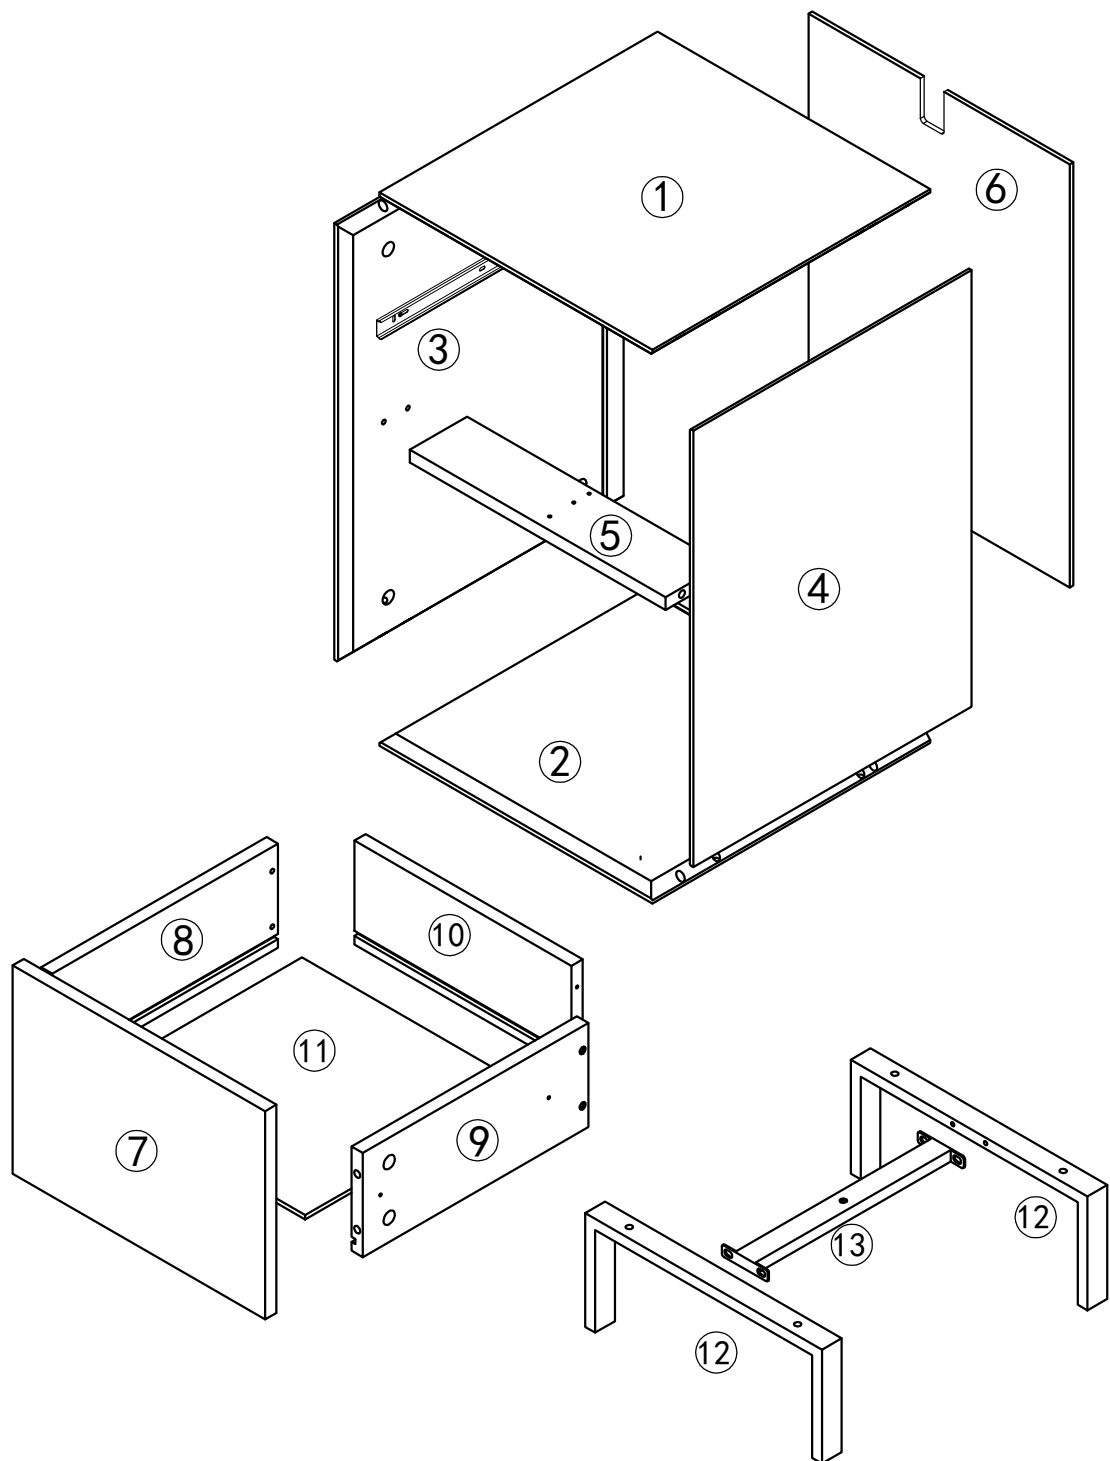



















Parts List

Before you begin building your Nova bedside, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.




| Part Number | Part Description | Quantity | Box No |
|-------------|-------------------------------|----------|--------|
| ① | Bedside top | 1 pc | Box 1 |
| ② | Bottom panel | 1 pc | Box 1 |
| ③ | Left side panel with silde | 1 pc | Box 1 |
| ④ | Right side panel with silde | 1 pc | Box 1 |
| ⑤ | Centre Support | 1 pc | Box 1 |
| ⑥ | Back panel | 1 pc | Box 1 |
| ⑦ | Drawer front | 1 pc | Box 1 |
| ⑧ | Drawer left panel with silde | 1 pc | Box 1 |
| ⑨ | Drawer right panel with silde | 1 pc | Box 1 |
| ⑩ | Drawer back panel | 1 pc | Box 1 |
| ⑪ | Drawer base | 1 pc | Box 1 |
| ⑫ | Legs | 2 pcs | Box 1 |
| ⑬ | Legs Support | 1 pc | Box 1 |

Fittings


Please check you have all the fittings listed below with your product in box 1.





| | | | | | | | |
|--|---|---|---|--|--|--|---|
| A  M6x84 CAM Lock Screw 8pcs+1pc extra | B  M6x44 CAM Lock Screw 8pcs+1pc extra | C  Φ15x11mm CAM Lock 24pcs +2pcs extra | D  M3.5x14mm Screw 7pcs+1pc extra | E  Φ6x25mm Wooden Dowel 8pcs +1pc extra | F  83x14x19mm Pusher 1pc | G  Ø16mm Screw and Washer 1pc | H  Φ8mm Expansion Tube 1pc |
| I  Φ20mm Cover 8pcs+1pc extra | J  M6x12mm Bolt 4pcs | K  M6x25mm Bolt 5pcs | L  15x9mm Plastic Buckle 4pcs | M  4mm Allen Key 1pc | N  M3.5x35mm Screw 4pcs | O  76x32mm L-shaped Bracket 1pc | P  M4x12mm Screw 1pc |
| Q  M4x40mm Screw 1pc | R  Slide pre assembled 2pcs | | | | | | |

Pre-assembled Fittings.


| | | |
|---|--|---|
| R1  slide 2pcs | R2  slide 2pcs | D  M3.5x14mm Screw 8pcs |
|---|--|---|

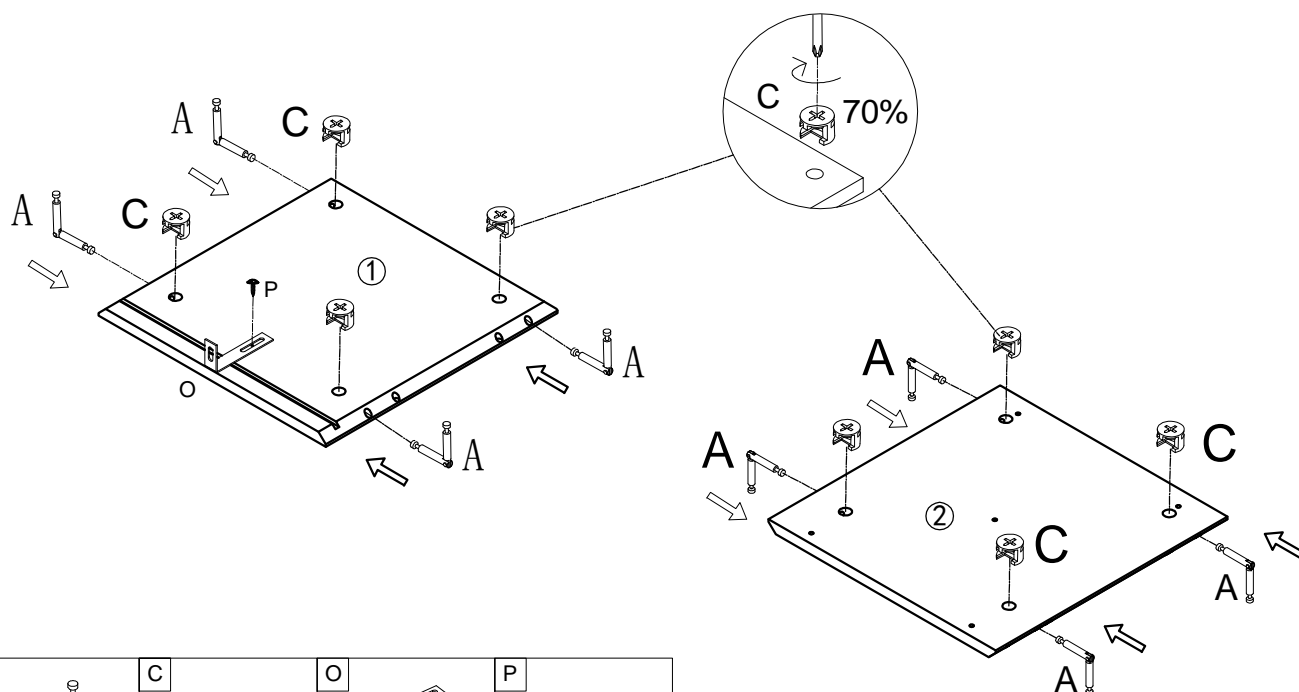
1. Attach parts to the Top and Bottom Panel.




| | | | |
|--|--|--|---|
| A | C | O | P |
|  |  |  |  |
| M6x84 CAM Lock Screw 8pcs | Φ15x11mm CAM Lock 8pcs | 76x32mm L-shaped Bracket 1pc | M4x12mm Screw 1pc |



2. Attach parts to the side panels.

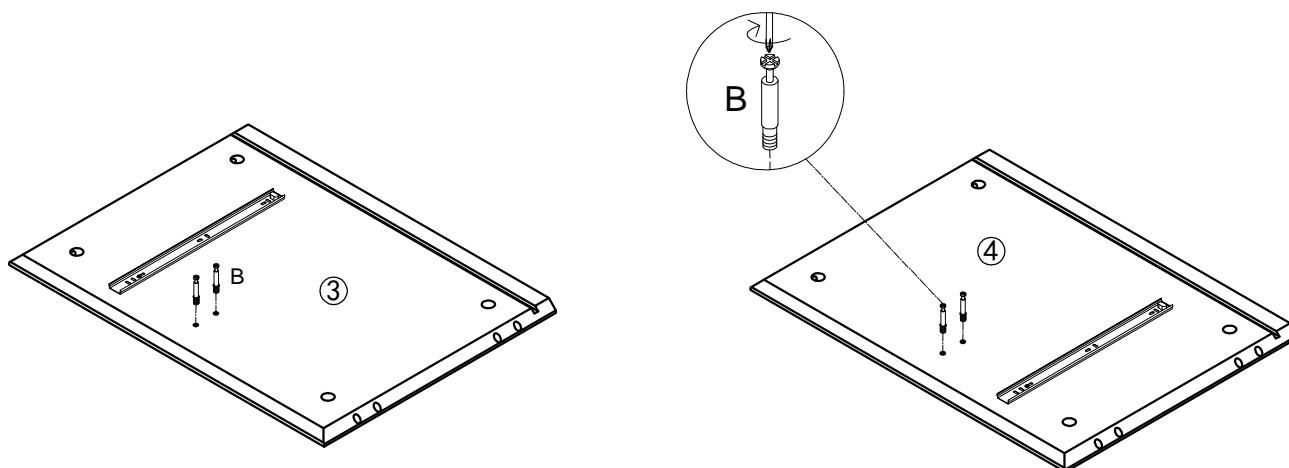


| |
|---|
| B |
|  |
| M6x44 CAM Lock Screw 4pcs |


3. Attach parts to the Centre Support.

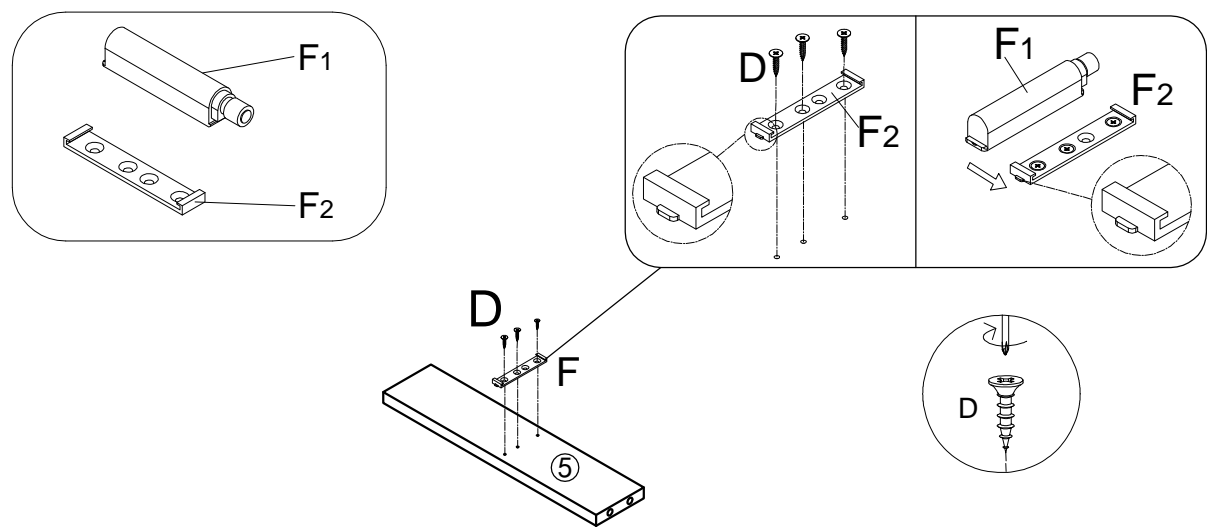




| D | F |
|---|---|
|  |  |
| M3.5x14mm Screw | 83x14x19mm Pusher |
| 3pcs | 1pc |



4. Attach the Side Panels to the Centre Support.

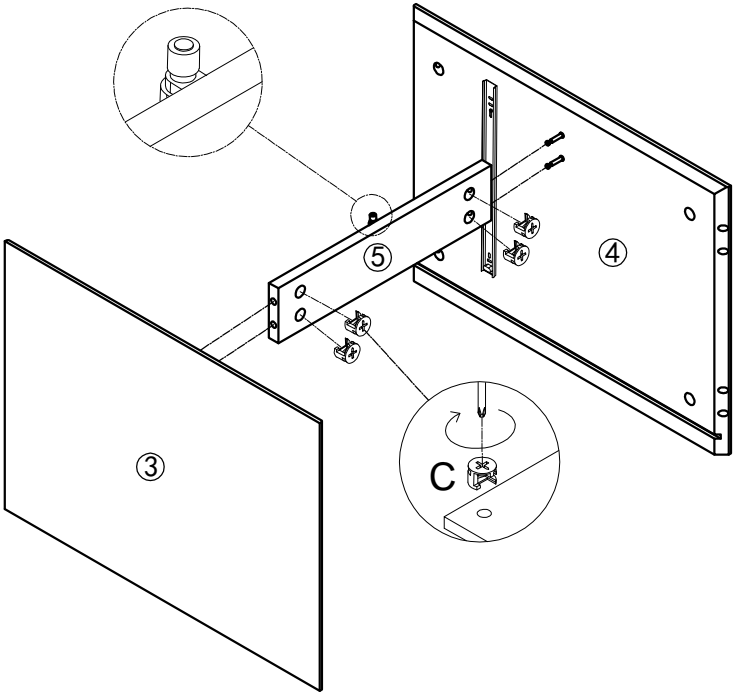


| C |
|---|
|  |
| Φ15x11mm CAM Lock |
| 4pcs |

5. Attach the Bedside Top to the Frame.

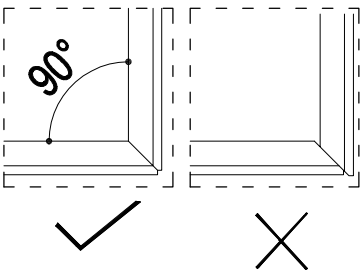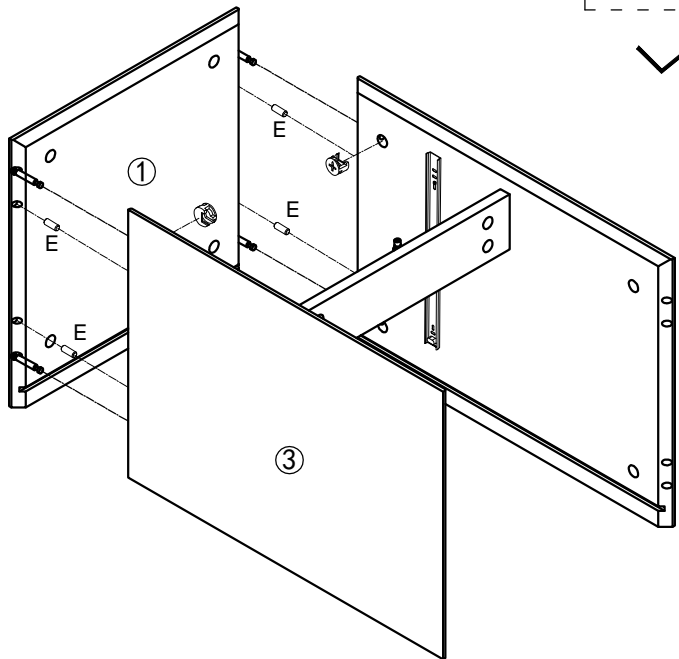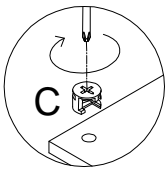





| C | E |
|--|---|
|  |  |
| Φ15x11mm CAM Lock 4pcs | Φ6x25mm Wooden Dowel 4pcs |

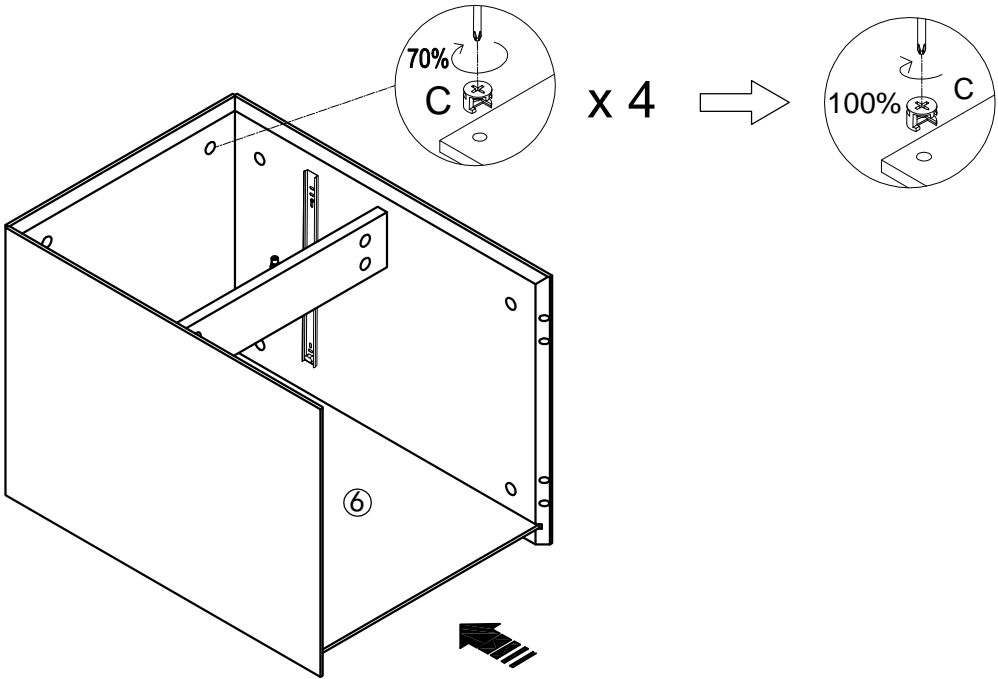6. Lock the CAM Locks tightly, slide the Back Panel into the Frame.

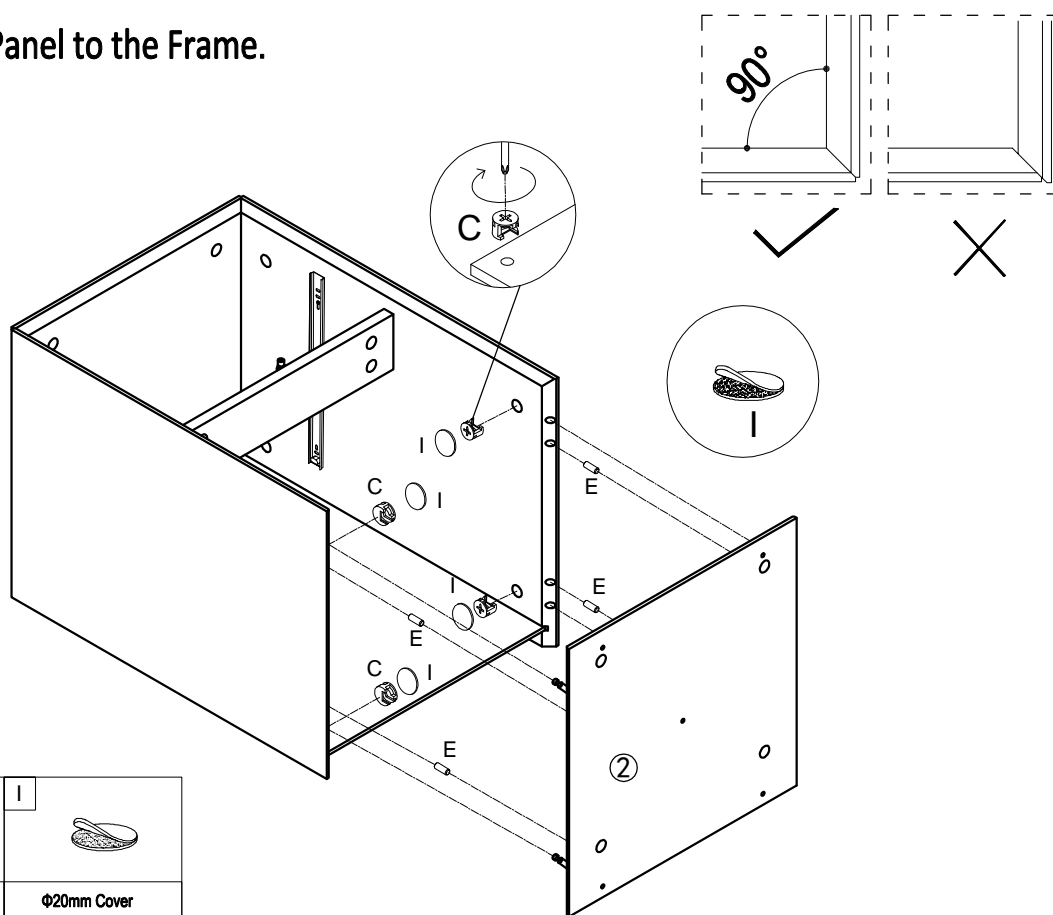


7. Attach the Bottom Panel to the Frame.






| C | E | I |
|--|---|--|
|  |  |  |
| Φ15x11mm CAM Lock | Φ6x25mm Wooden Dowel | Φ20mm Cover |
| 4pcs | 4pcs | 4pcs |

8. Lock the CAM Locks tightly.

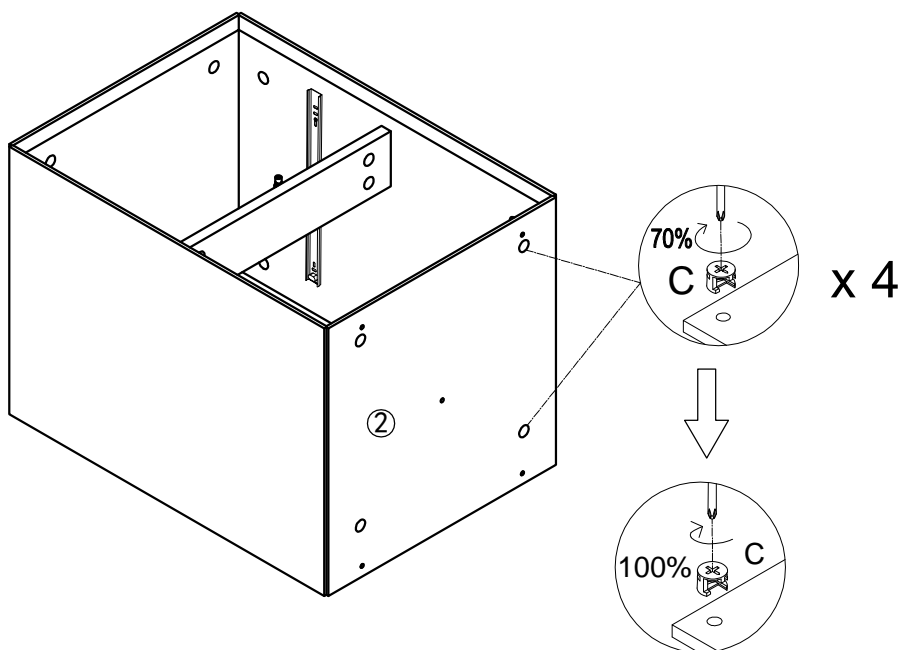




9. Attach the Legs to the Leg Support.

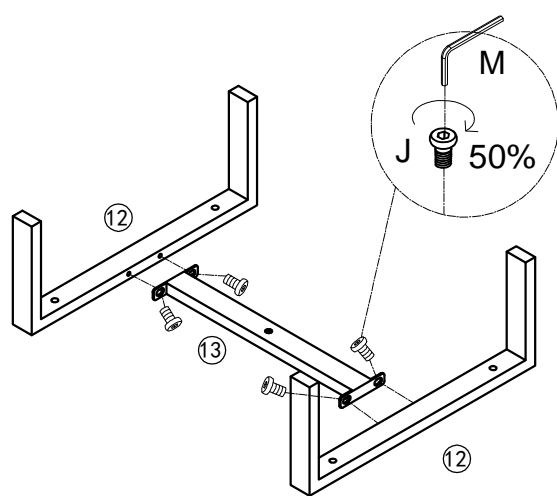


| | |
|---|--|
| J | M |
|  |  |
| M6x12mm Bolt | 4mm Allen Key |
| 4pcs | 1pc |

10. Attach the Legs to the Frame.

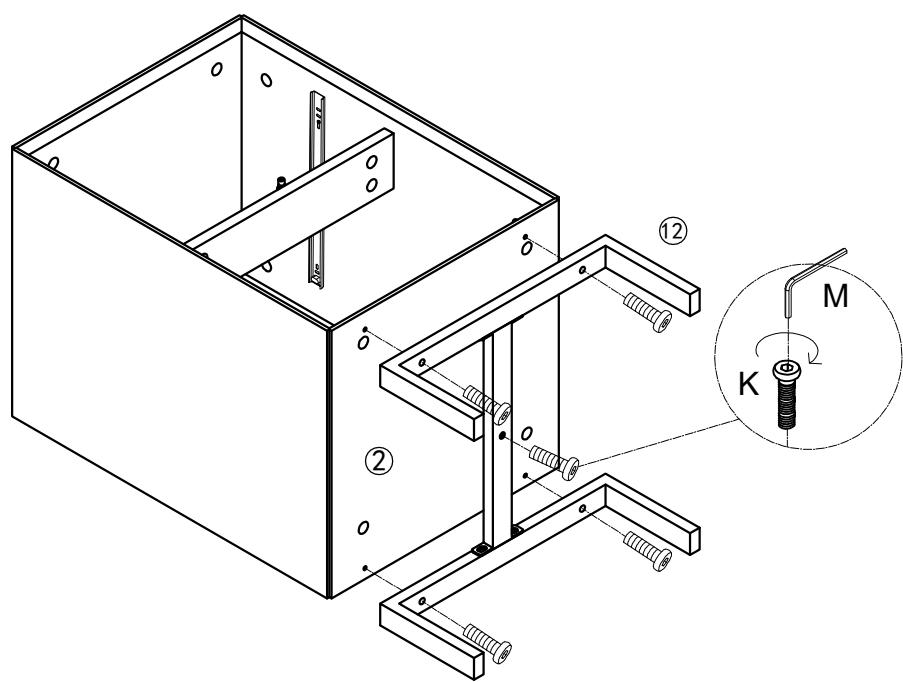




| | |
|---|---|
| K | M |
|  |  |
| M6x25mm Bolt | 4mm Allen Key |
| 5pcs | 1pc |

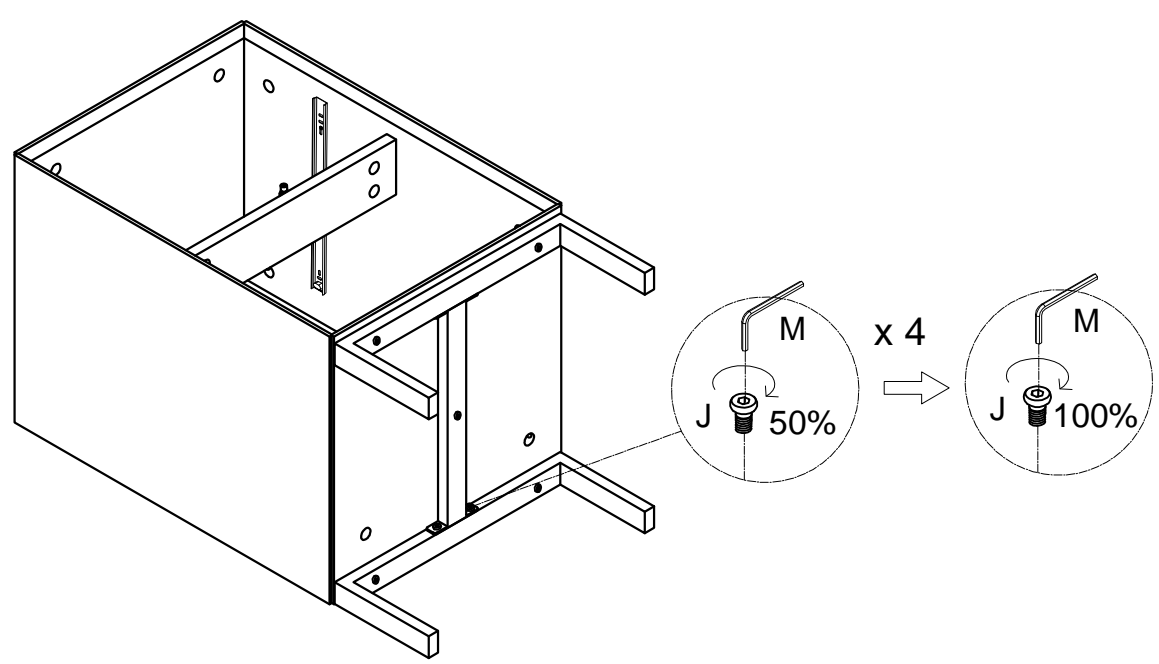11. Lock the Bolts tightly.

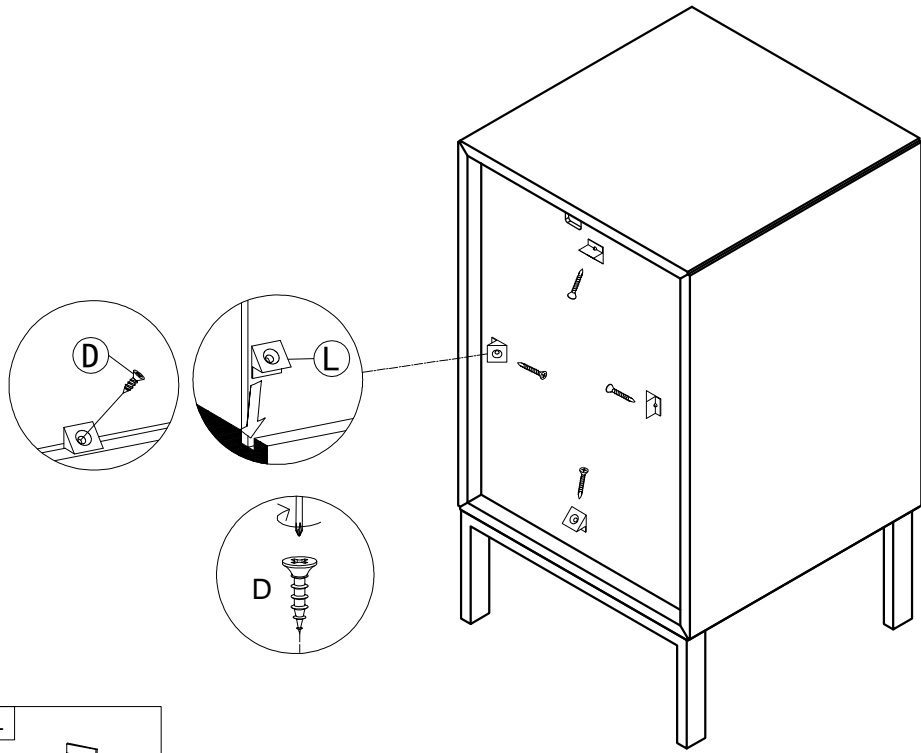





12. Attach the Plastic Buckles.




| D | L |
|---|---|
|  |  |
| M3.5x14mm Screw | 15x9mm Plastic Buckle |
| 4pcs | 4pcs |

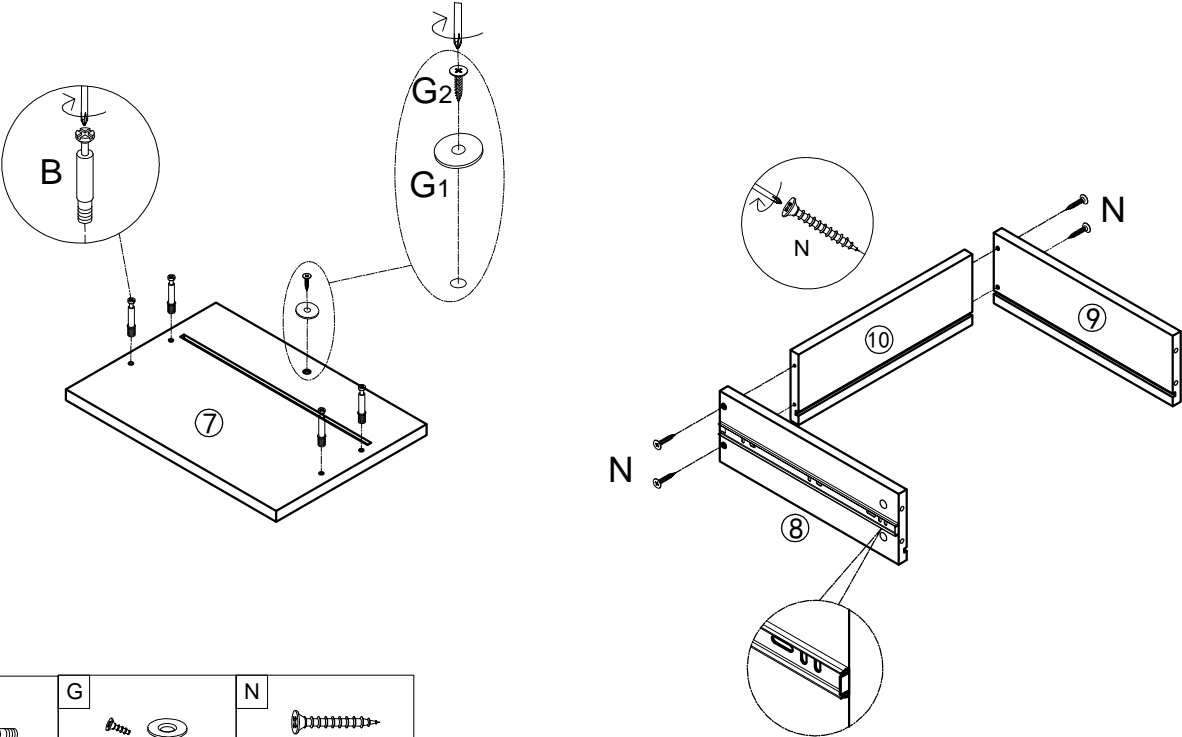

13. Assemble the drawer.




| B | G | N |
|---|---|---|
|  |  |  |
| M6x44 CAM Lock Screw 4pcs | Ø16mm Screw and Washer 1pc | M3.5x35mm Screw 4pcs |

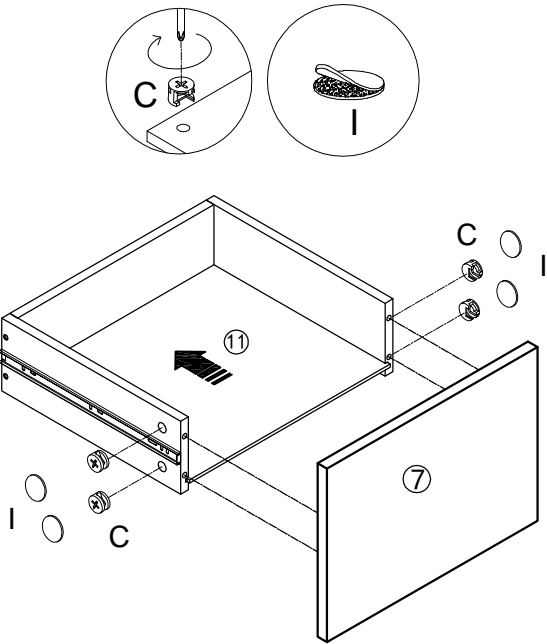14. Slide in the Drawer Base, and attach the Drawer Front by locking the CAM Locks tightly.






| C | I |
|---|---|
|  |  |
| Φ15x11mm CAM Lock 4pcs | Φ20mm Cover 4pcs |

15. Assemble the drawer in the Bedside.

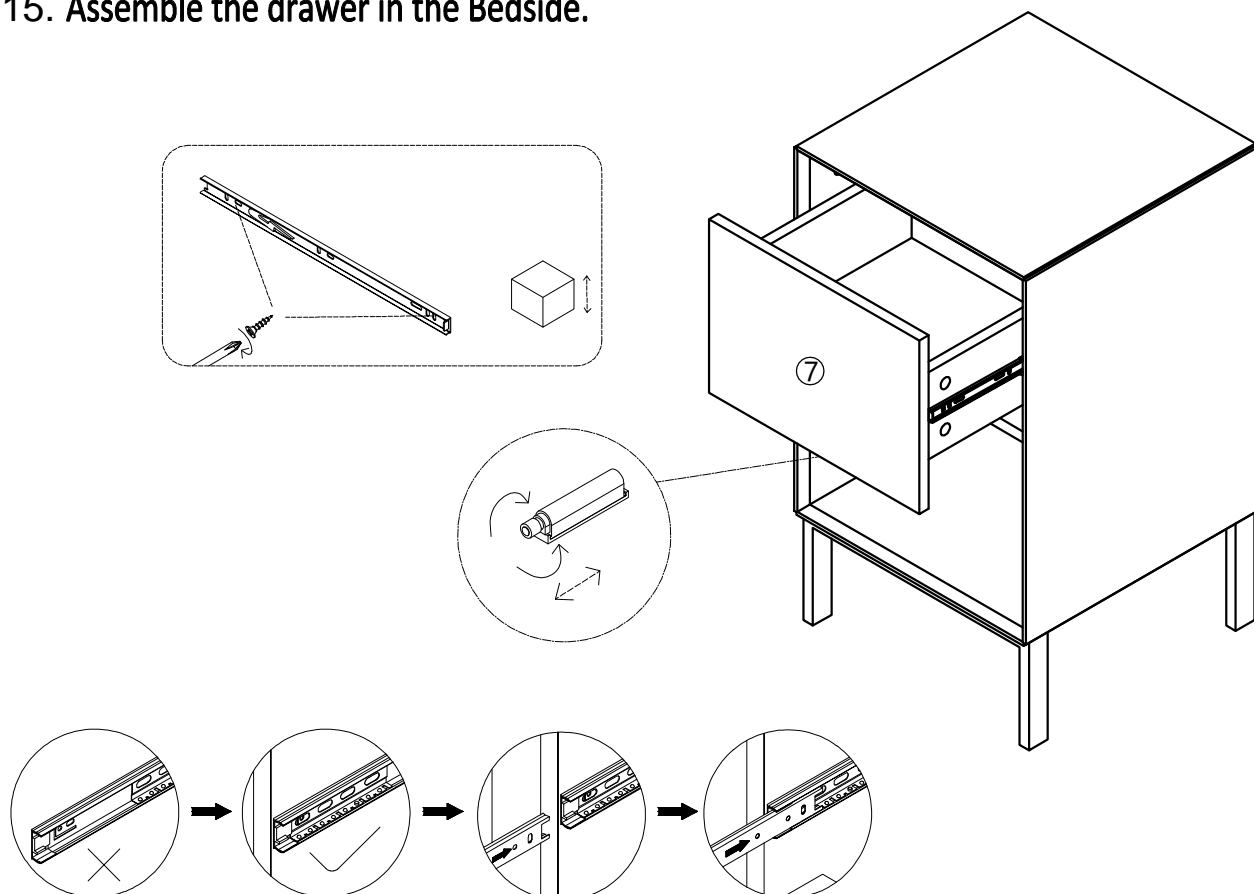

16. Fix the L-Shaped Bracket to the wall.

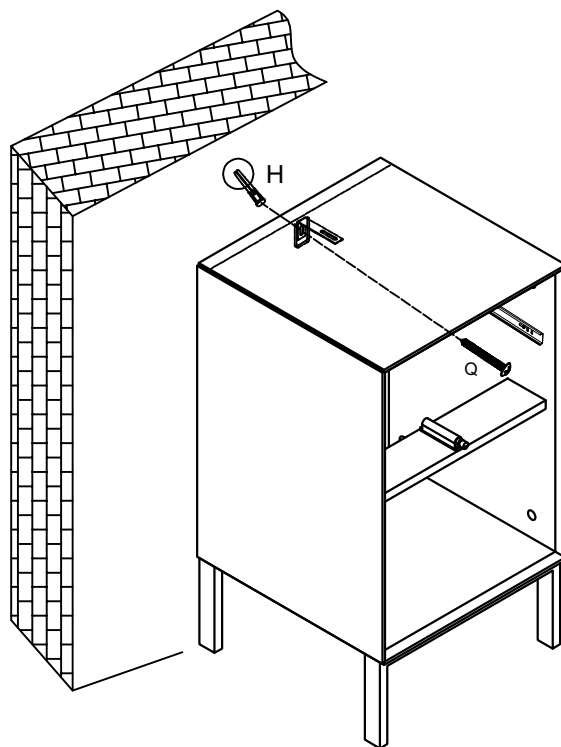

| | |
|---|---|
| Q | H |
|  |  |
| M4x40mm Screw | Φ8mm Expansion Tube |
| 1pc | 1pc |