## DUSK.COM LIVING I BEDROOM I DINING


Range Name : Poppy/Nell Product Dimension : Nell:W93xD56xH180cm

Box 1 dimensions: W195xD62.5xH19cm Box 2 dimensions: W108xD64.5xH16cm

Poppy:W90xD54.5xH180cm


Box 1 dimensions :W195xD62.5xH19cm Box 2 dimensions :W105xD63xH16cm

### 2 Door / 1 Drawer Wardrode

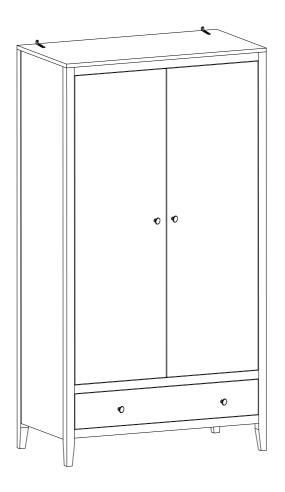



Up to 60 minutes assembly time



Two person assembly



Electric screwdriver prohibited

### **IMPORTANT**

### **ASSEMBLY TIP**

Before you begin, it's best to identify all of the parts and fittings to build your 2 Door / 1 Drawer Wardrode frame.

We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

#### TOP TIP

We recommend that you assemble the 2 Door / 1 Drawer Wardrode in the room you'd like it to be located.

This will help prevent any risk of damage to the frame whilst moving it.

### SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

### HELP AND SUPPORT


Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

### **RECYCLING**

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

### CARE AND MAINTENANCE:

- 1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
- 2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
- 3.Do not scrub or rub the surface when cleaning.
- 4. Do not drag the 2 Door / 1 Drawer Wardrode when moving, lift it off the floor instead.
- 5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
- 6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
- 7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
- 8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
- 9. Avoid sharp items such as a screwdriver or any pointy tools.
- 10. Dispose of all packaging carefully and responsibly recycle where possible.

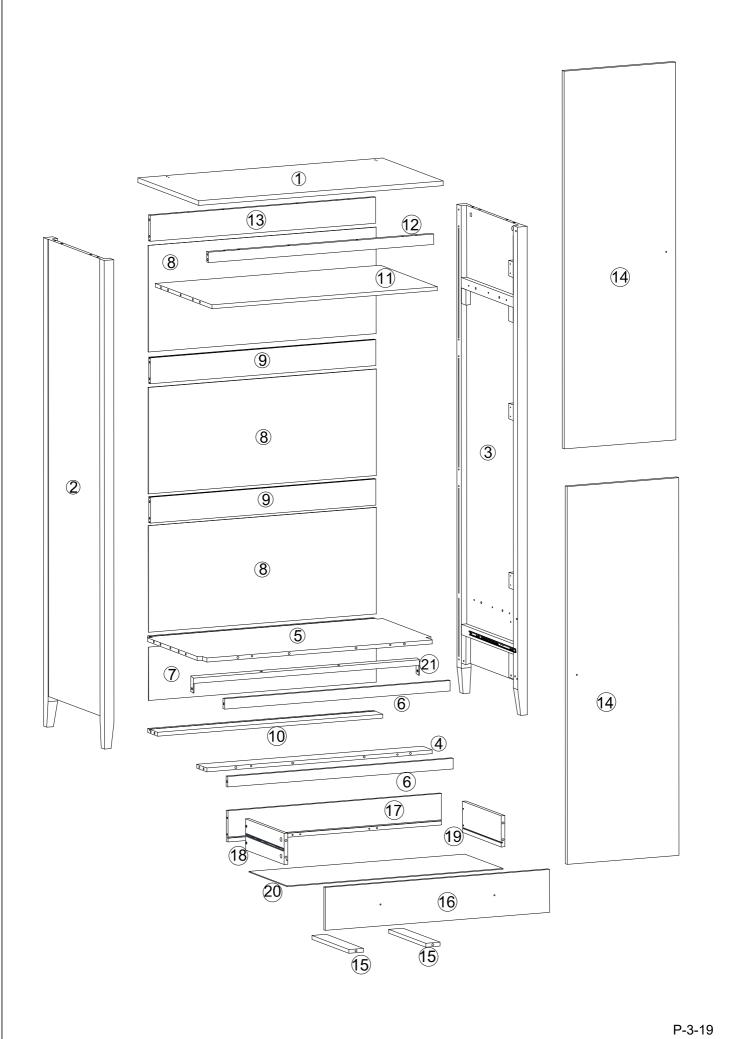

### Parts list


Before you begin building your 2 Door / 1 Drawer Wardrode, please take a moment to read through the instructions and make surethat you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
1	Top Panel	1pc	Box 2
2	Left Side Panel With Slide	1рс	Box 1
3	Right Side Panel With Slide	1рс	Box 1
4	Centre Support	1рс	Box 2
5	Bottom Shelf Panel	1рс	Box 2
6	Centre Support	2pcs	Box 2
7	Back Panel	1рс	Box 2
8	Back Panel	3pcs	Box 2
9	Centre Support	2pcs	Box 2
10	Centre Support	1pc	Box 2
11	Top Shelf Panel	1рс	Box 2


Part Number	Part Description	Quantity	Box No
12	Centre Support	1рс	Box 2
13	Centre Support	1рс	Box 2
14)	Door	2pcs	Box 1
15)	Drawer Floor	2pcs	Box 2
16	Drawer Front	1рс	Box 2
17	Drawer Back Side	1pc	Box 2
18	Drawer Left Side With Slide	1pc	Box 2
19	Drawer Right Side With Slide	1pc	Box 2
20	Drawer Bottom	1pc	Box 2
21	Supporting metal tube	1pc	Box 2

### **Fittings**


Please check you have all the fittings listed below with your product box 1.

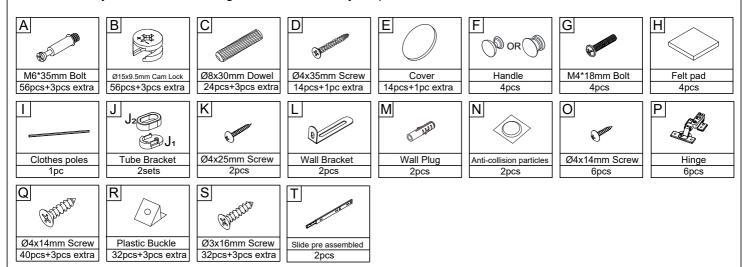

### Pre-assembled Fittings.



### **Bolt Length Ruler:**





### Tool required



# 1.Attach parts to the centre support. X2


### 2.Attach parts to the top panel.

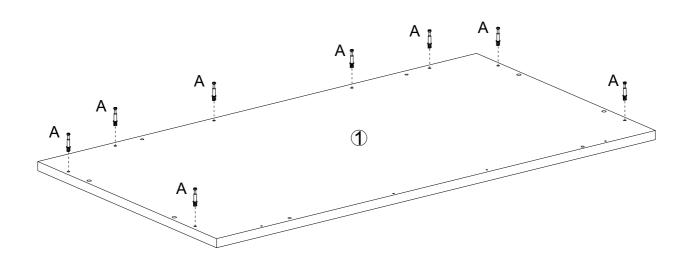






M6\*35mm Bolt

### 3. Attach centre support to the other one.

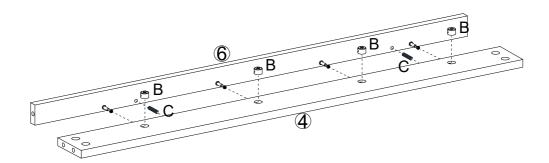






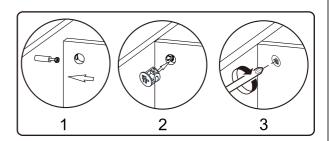



### 4. Attach centre support and metal tube to the shelf panel.

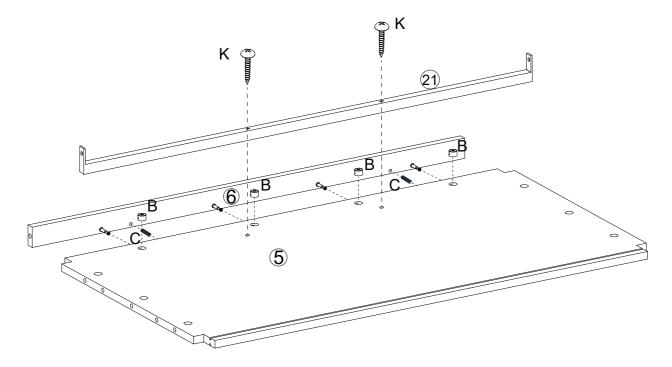










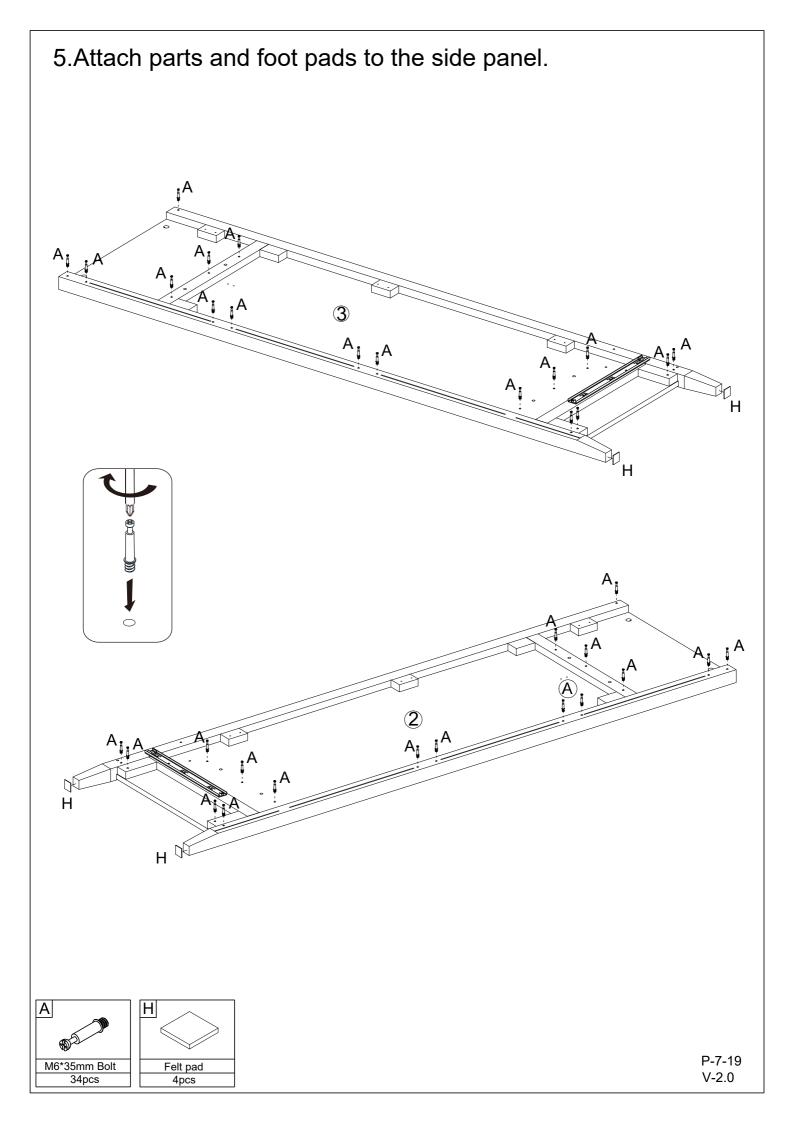

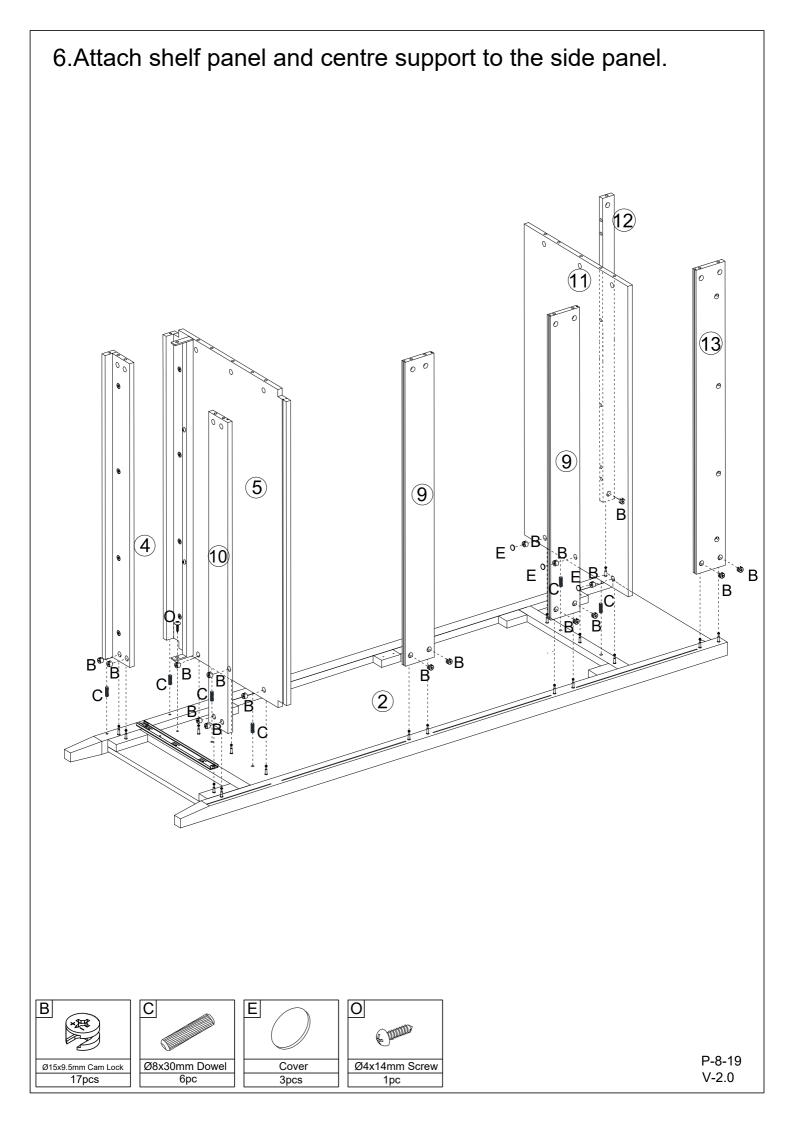


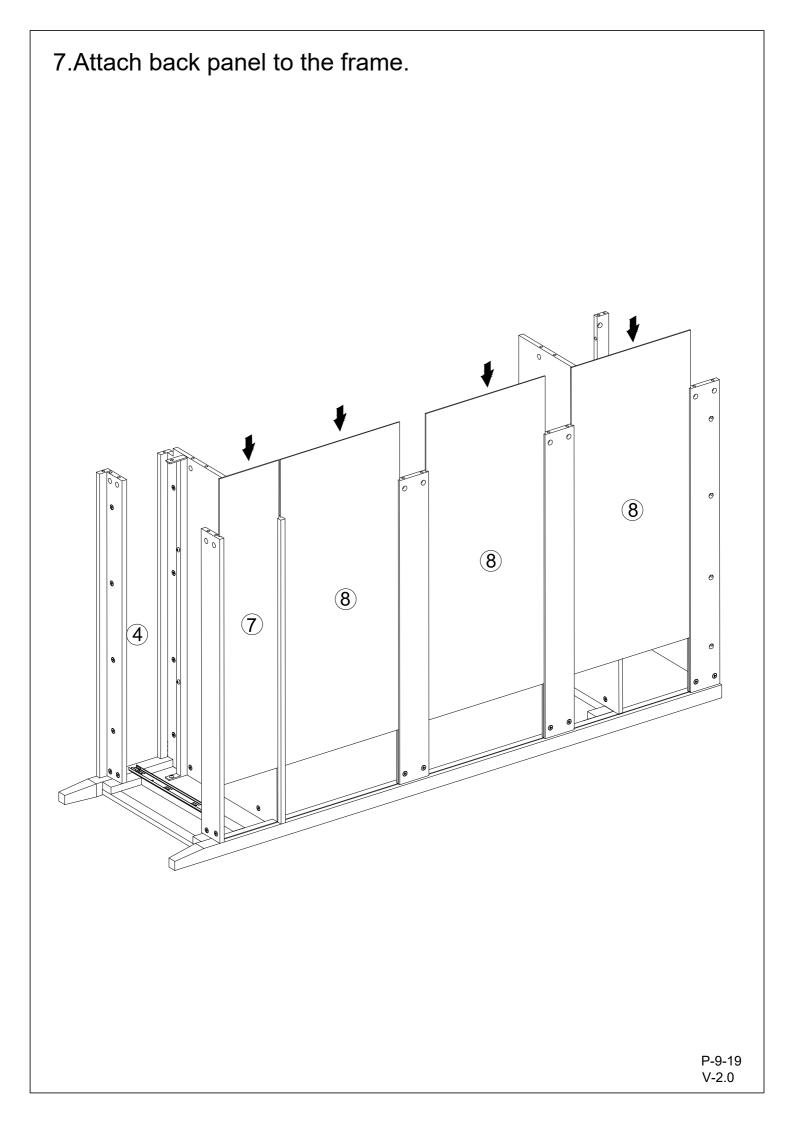

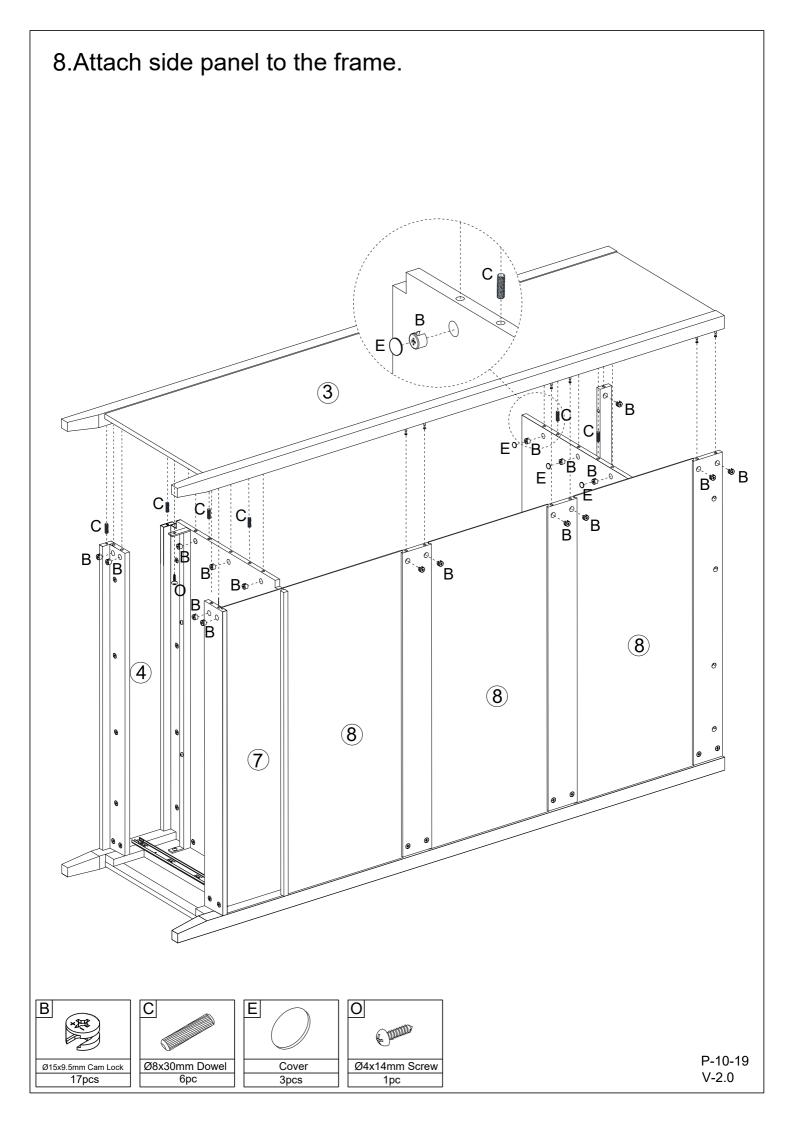



### 9. Attach top panel to the frame.










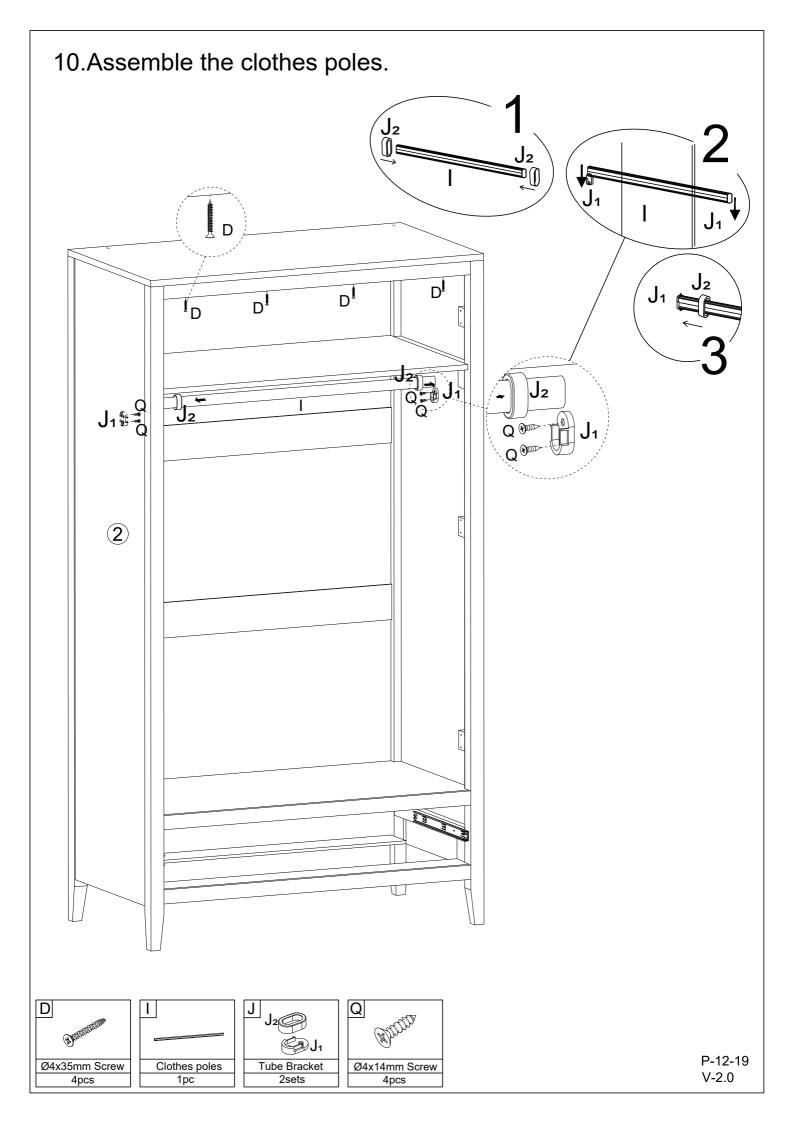


### 11.Assemble the drawer.

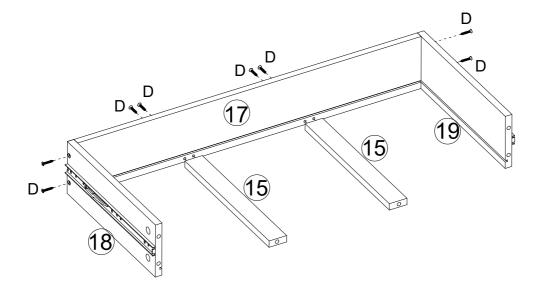





### 12.Assemble the drawer.

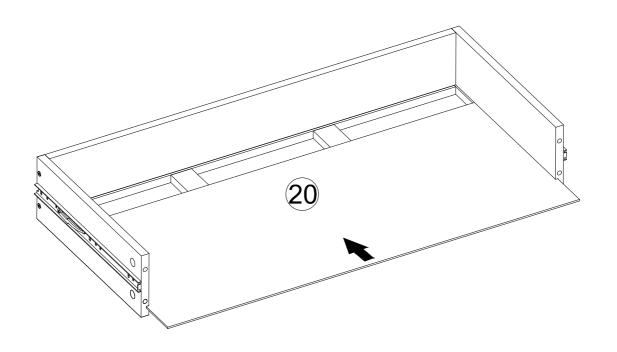

### 13.Assemble the drawer front.

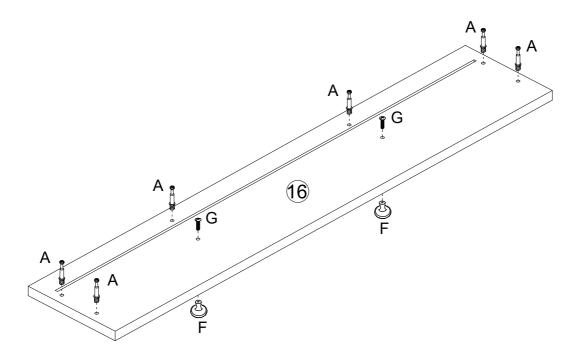











### 14. Assemble the drawer.

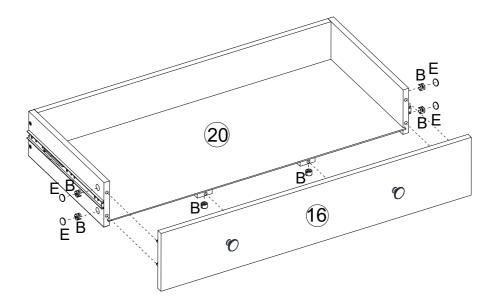







# 15.Assemble the drawer to the wardrobe.

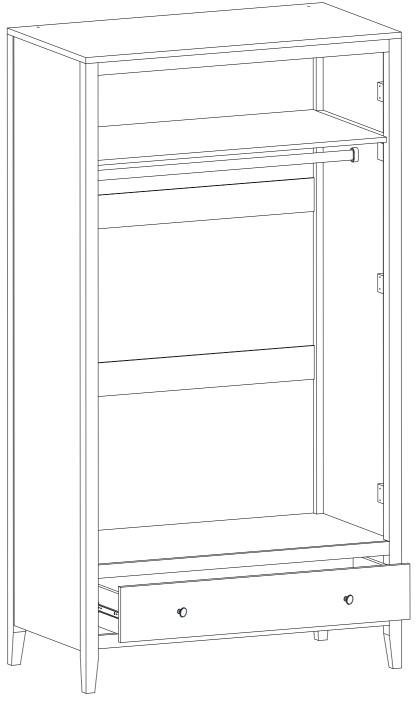


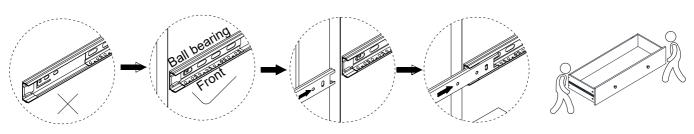


The assembly of the large drawer requires twopeople to align the slide rails synchronously

### 16.Assemble the door.

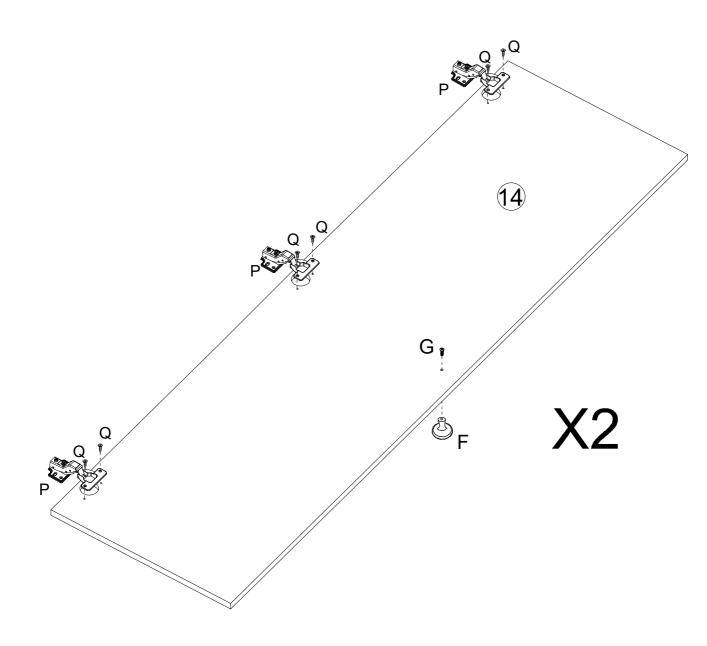









# 17. Assemble the door to the wardrobe. ν N þ Q 14 (14) **O** 0 Q P-17-19 Ø4x14mm Screw Anti-collision particles V-2.0 24pcs 2pcs

### 18. Attach the plastic buckle. $O_{\tilde{\gamma}_{\tilde{\gamma}}}O$ ′Sx32₽ **Rx32** Manually adjust the frame slightly to ensure the drawers are in the correct position, even and parallel before attaching the plastic buckles. P-18-19 Wall Bracket Plastic Buckle Ø3x16mm Screw Ø4x14mm Screw V-2.0 32pcs 2pcs 32pcs 4pcs

