

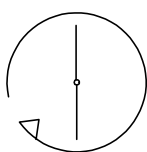


## Bedside

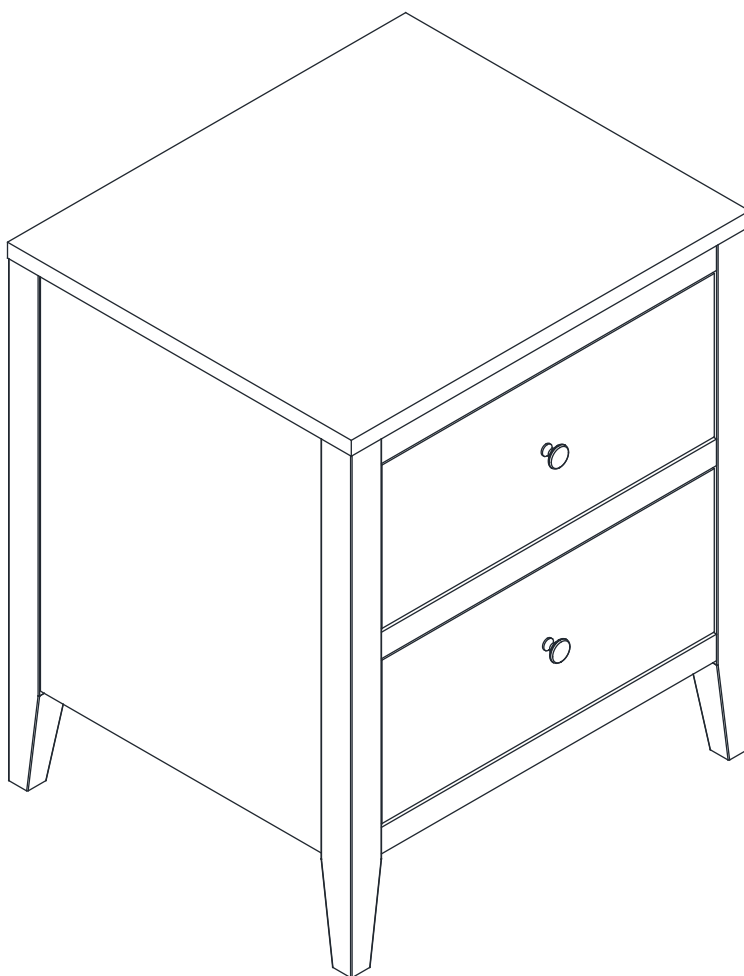

Up to 30 minutes  
assembly time

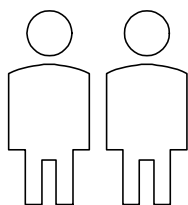

Two person  
assembly



Electric screwdriver  
prohibited

## IMPORTANT

### ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

### TOP TIP

We recommend that you assemble the Bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

### SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

### HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

### RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.


### CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Bedside when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

## Parts list

Before you begin building your Bedside, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

| Part Number | Part Description             | Quantity | Box No |
|-------------|------------------------------|----------|--------|
| ①           | Top                          | 1pc      | Box 1  |
| ②           | Left Side Panel With Slide   | 1pc      | Box 1  |
| ③           | Right Side Panel With Slide  | 1pc      | Box 1  |
| ④           | Centre Support               | 1pc      | Box 1  |
| ⑤           | Centre Support               | 2pcs     | Box 1  |
| ⑥           | Centre Support               | 1pc      | Box 1  |
| ⑦           | Back Panel                   | 1pc      | Box 1  |
| ⑧           | Drawer Front                 | 2pcs     | Box 1  |
| ⑨           | Drawer Left Side With Slide  | 2pcs     | Box 1  |
| ⑩           | Drawer Right Side With Slide | 2pcs     | Box 1  |
| ⑪           | Drawer Back Side             | 2pcs     | Box 1  |
| ⑫           | Drawer Bottom                | 2pcs     | Box 1  |
| ⑬           | Centre Support               | 1pc      | Box 1  |

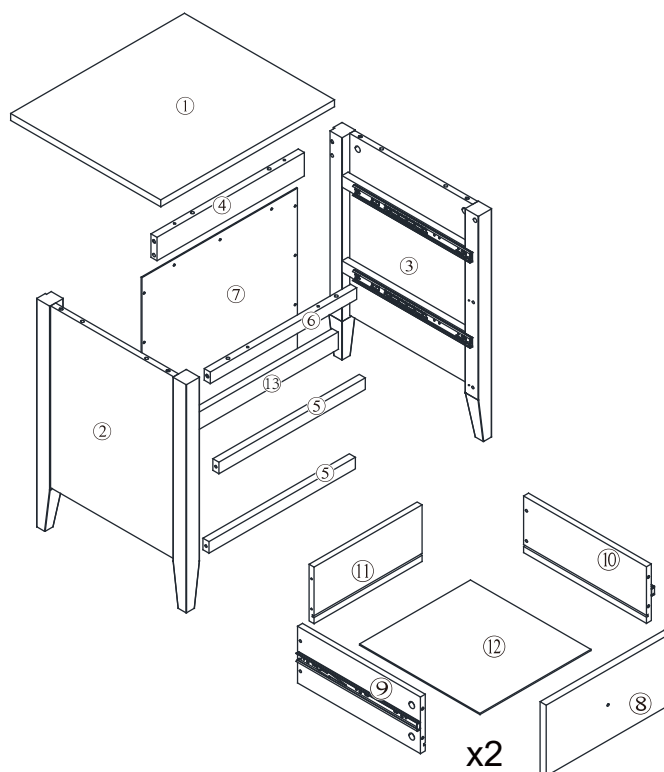

## Fittings


Please check you have all the fittings listed below with your product box 1.

|  |  |  |  |   |                                |                                      |                                  |
|--|--|--|--|---|--------------------------------|--------------------------------------|----------------------------------|
| <b>A</b><br><br>M6*35mm Bolt<br>22pcs+2pcs extra | <b>B</b><br><br>Ø15x9.5mm Cam Lock<br>22pcs+2pcs extra | <b>C</b><br><br>Ø8x30mm Dowel<br>10pcs+1pc extra | <b>D</b><br><br>Ø4x35mm Screw<br>10pcs+1pc extra | <b>E</b><br><br>Cover<br>8pcs               | <b>F</b><br><br>Handle<br>2pcs | <b>G</b><br><br>M4*18mm Bolt<br>2pcs | <b>H</b><br><br>Felt pad<br>4pcs |
| <b>I</b><br><br>Ø3x12mm Screw<br>12pcs+1pc extra | <b>J</b><br><br>Ø4x14mm Screw<br>8pcs+1pc extra        | <b>K</b><br><br>Ø6x30mm Dowel<br>4pcs            | <b>L</b><br><br>Connector<br>4pcs                | <b>T</b><br><br>Slide pre assembled<br>4pcs |                                |                                      |                                  |

Pre-assembled Fittings.

|   |   |  |
|---|---|--|
| <b>T<sub>1</sub></b><br><br>Slide<br>4pcs | <b>T<sub>2</sub></b><br><br>Slide<br>4pcs | <b>U</b><br><br>Ø3x12mm Screw<br>24pcs |
|---|---|--|

## Bolt Length Ruler:







## Tool required







Crosshead Screwdriver (not provided)

P-3-8  
V-2.0




## 1. Attach parts to the side panels.

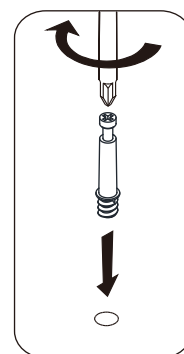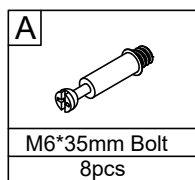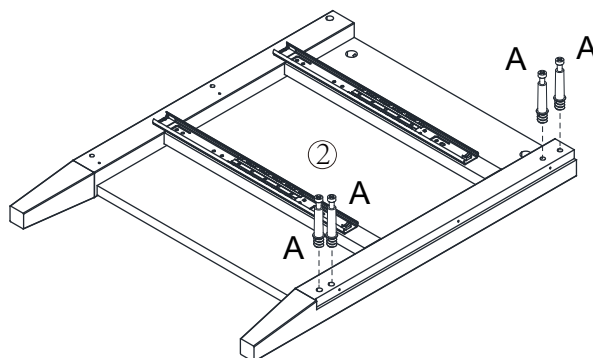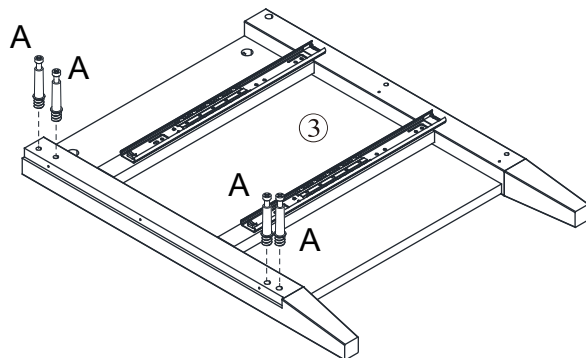



## 2. Attach centre support to the side panels.

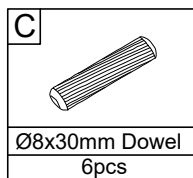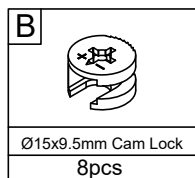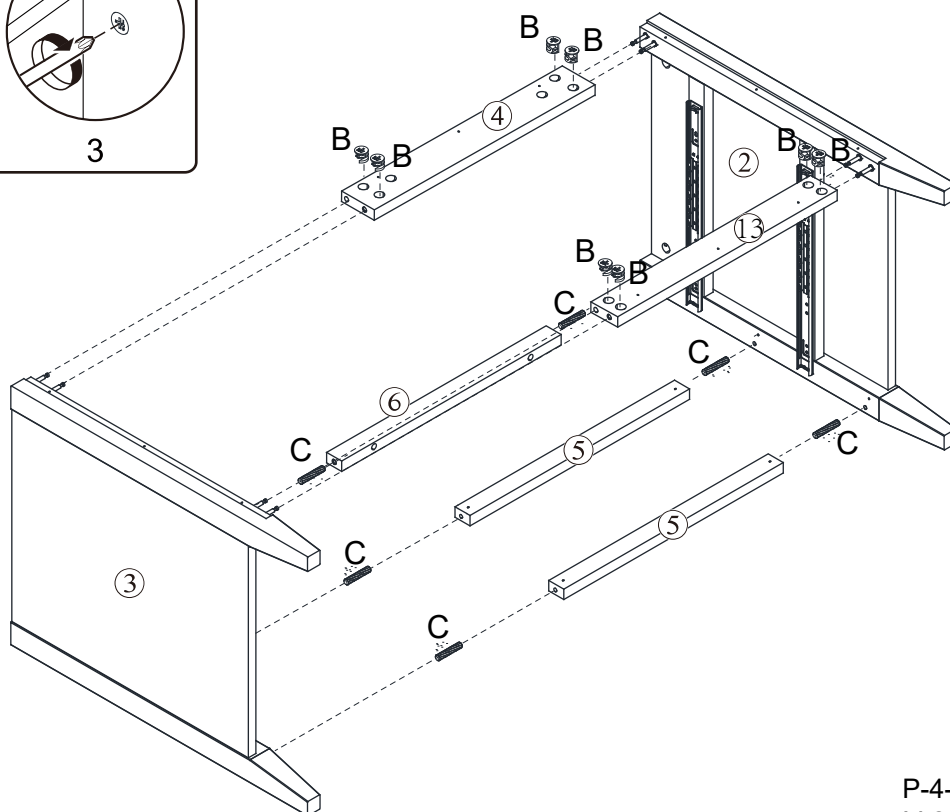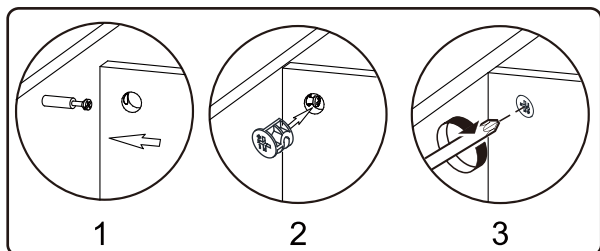






3.Attach connector to the frame.

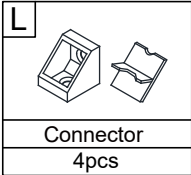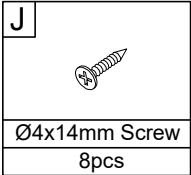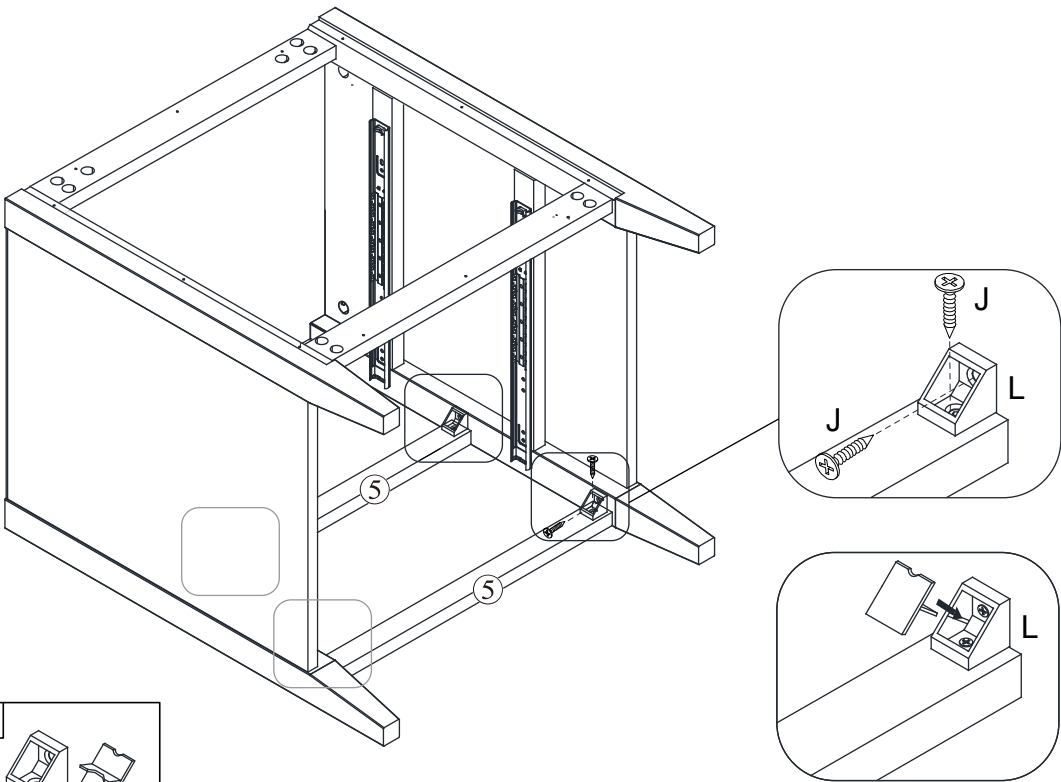





4.Attach parts to the top panel.

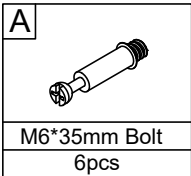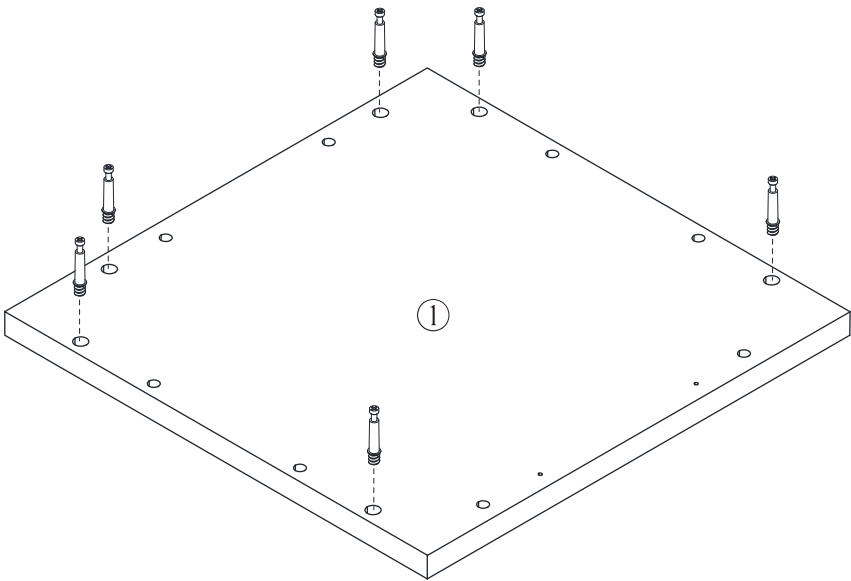



5.Attach top panel to the frame.

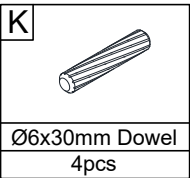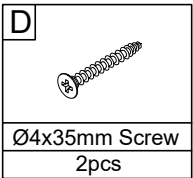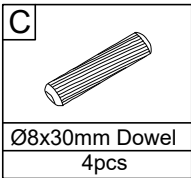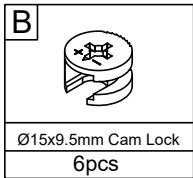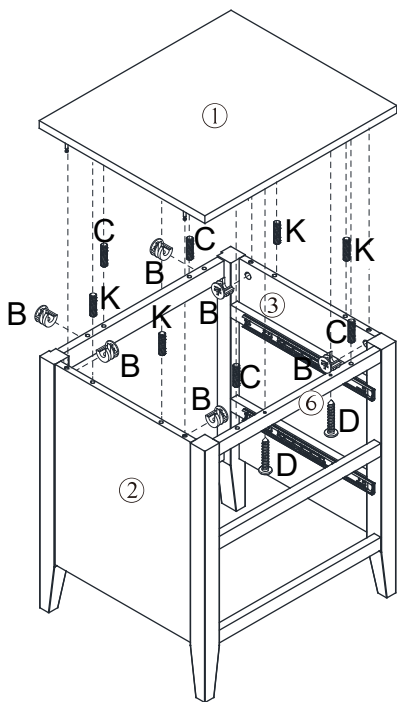







6.Attach back panel and foot pads to the frame.

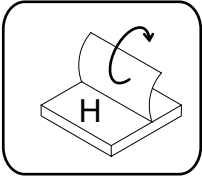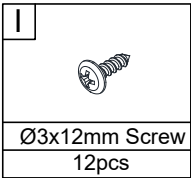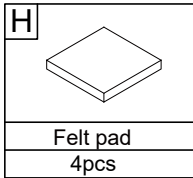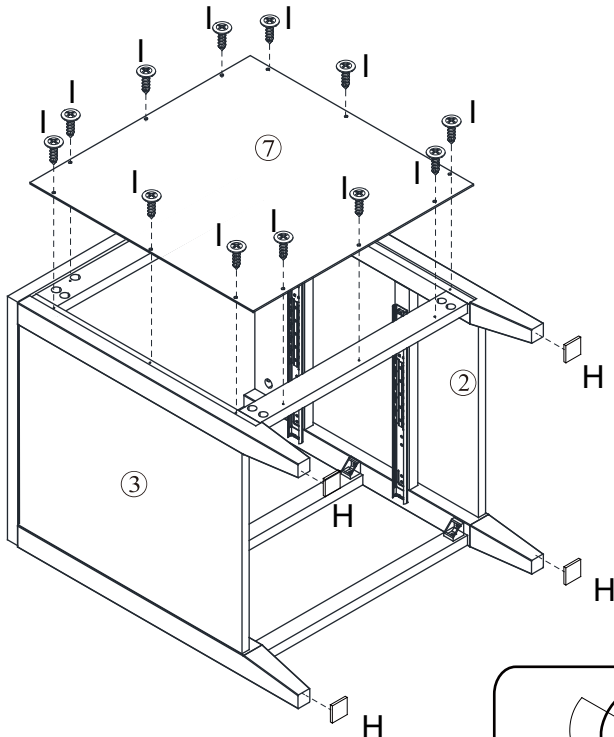

7.Assemble the drawers.

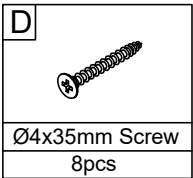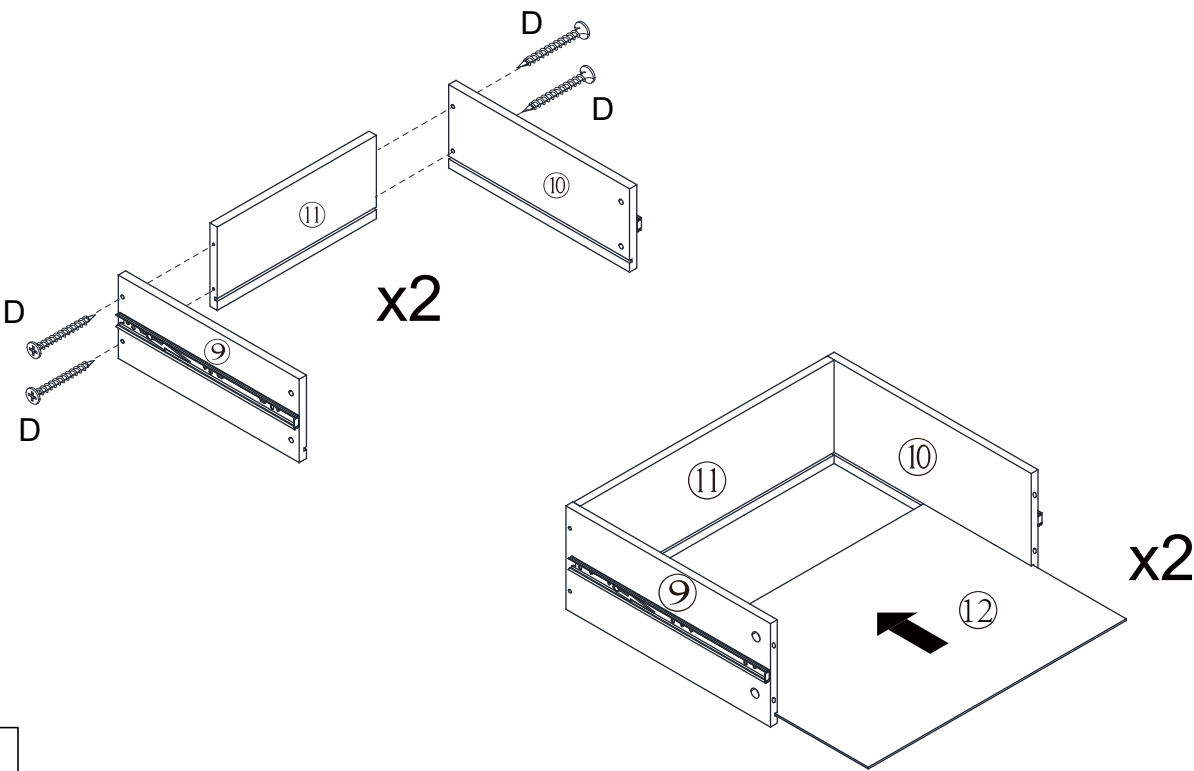

8.Assemble the drawers.

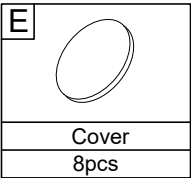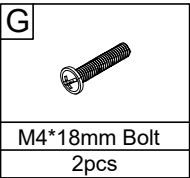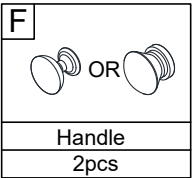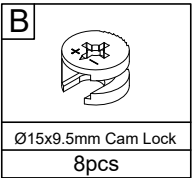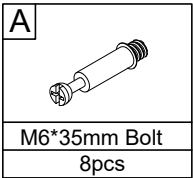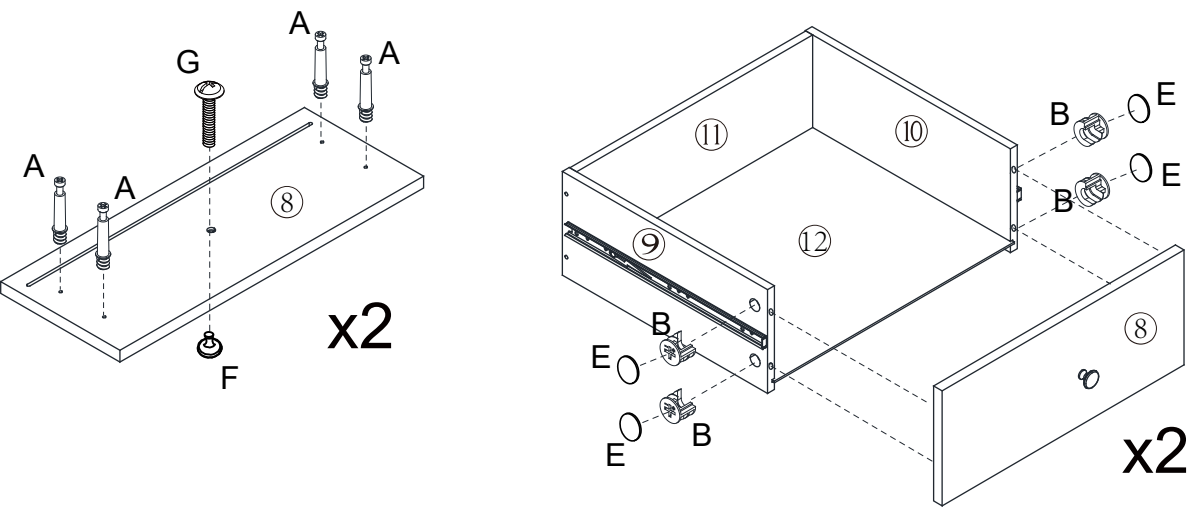

## 9. Assemble the drawers to the bedside.

