

DUSK.COM

LIVING I BEDROOM I DINING


Range Name:Primrose
Product Dimension:W30xD30xH60cm
Box 1 dimensions:W71xD39.5xH26.5cm

Primrose 3 Drawer Compact Bedside

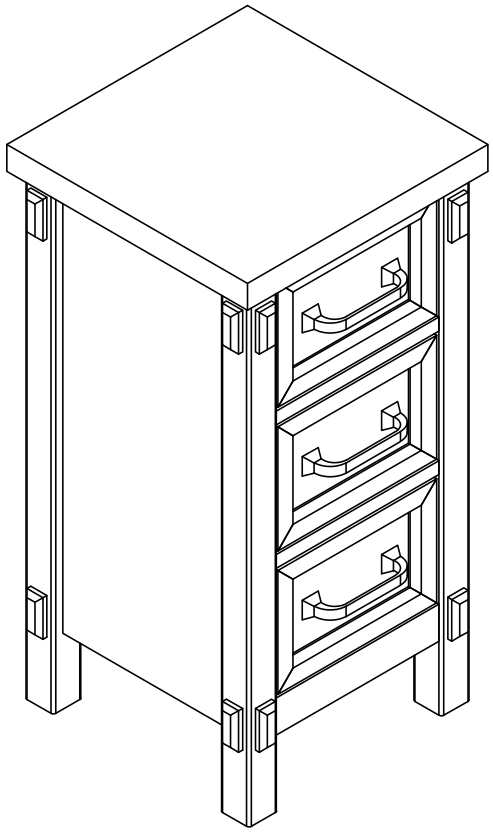

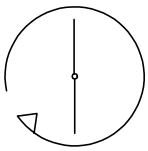

Up to 45 minutes assembly time

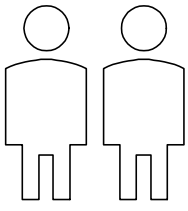

Two person assembly



Electric screwdriver prohibited

This product is intended for domestic use only,not for commercial purposes.

P-1-9
V-1.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Primrose 3 Drawer Compact Bedside frame.
We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP
We recommend that you assemble the Primrose 3 Drawer Compact Bedside in the room you'd like itto be located.This will help prevent any risk of damage to the frame whilst moving it.


SAFETY AND CARE
It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT
Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING
Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:
1.Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2.Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3.Do not scrub or rub the surface when cleaning.
4.Do not drag the Primrose 3 Drawer Compact Bedside when moving, lift it off the floor instead.
5.Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6.It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7.Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8.Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9.Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list

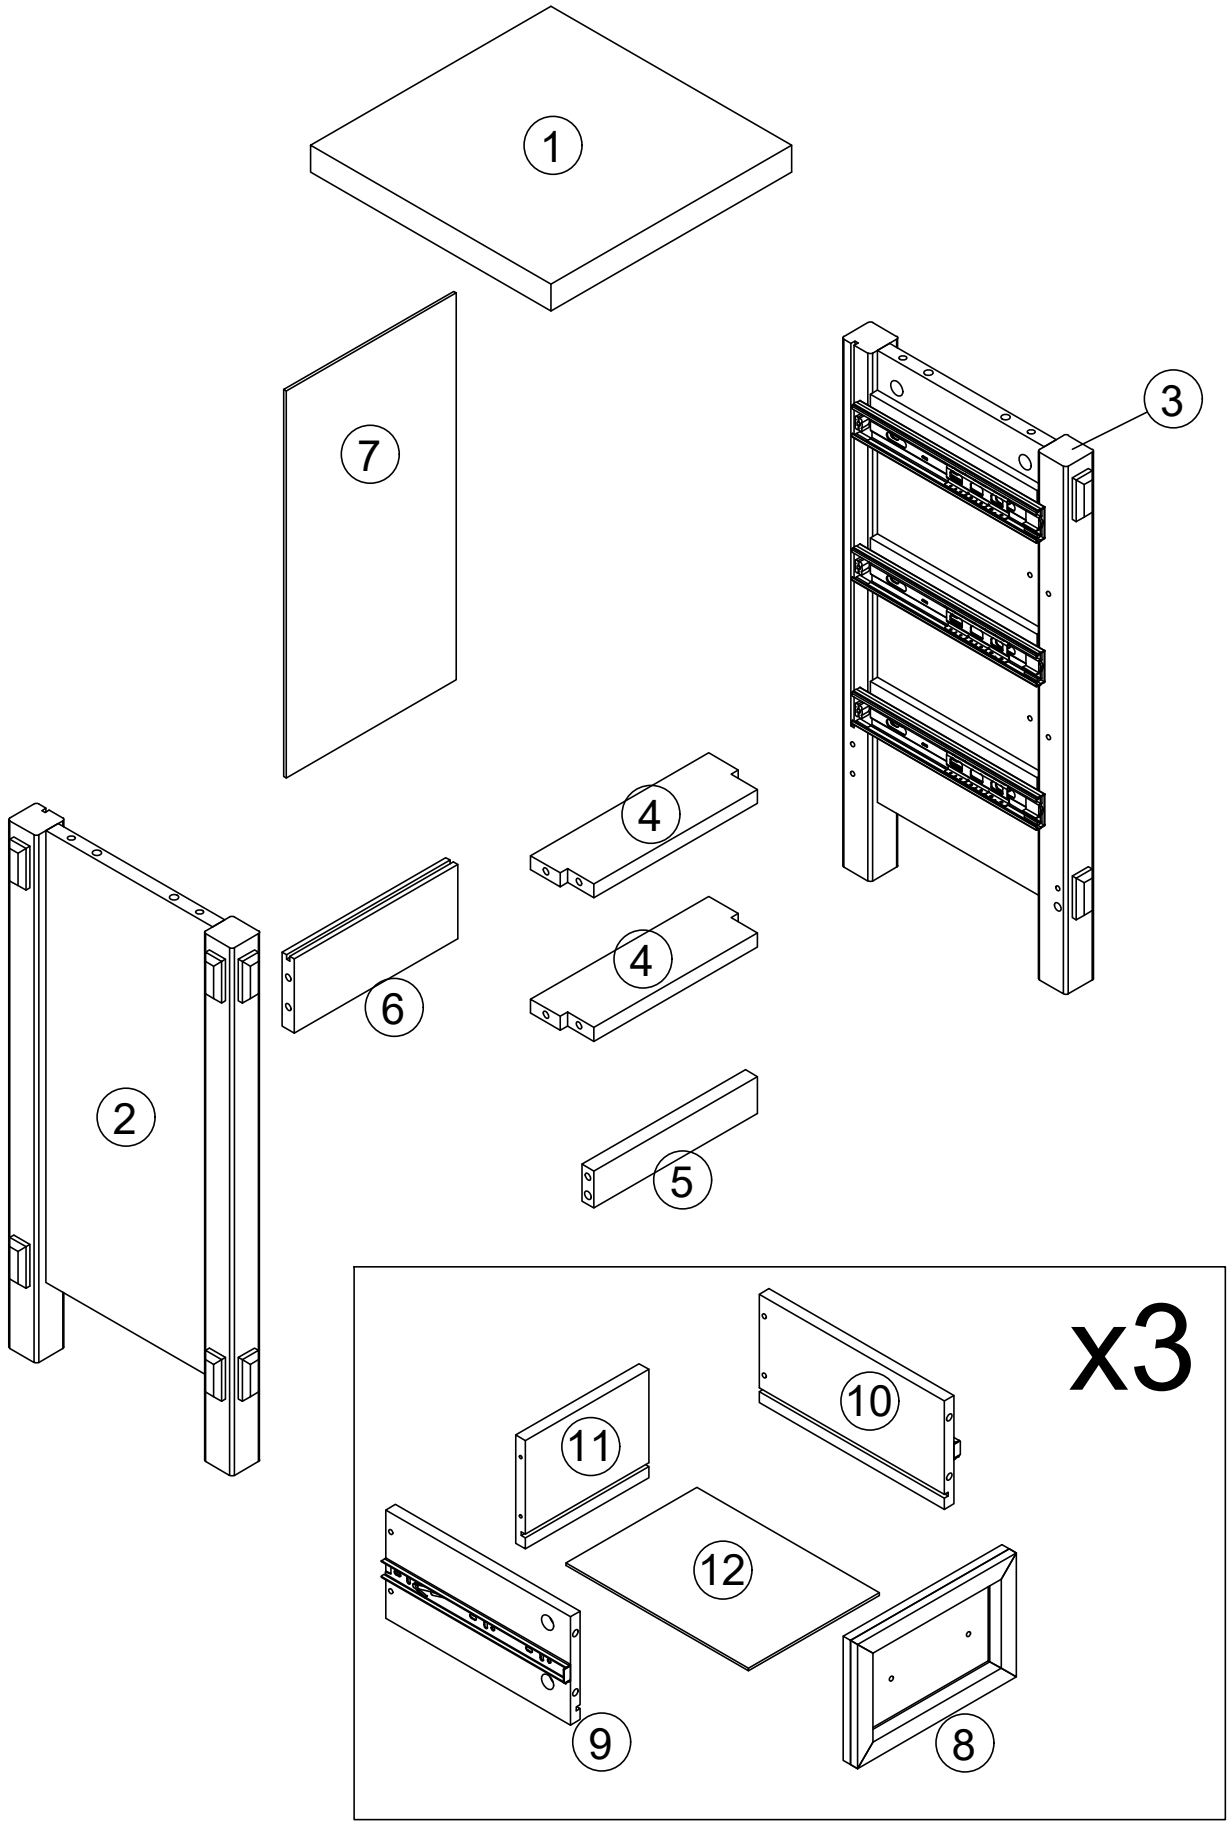

Parts list


Before you begin building your Primrose 3 Drawer Compact Bedside,please take a moment to read through the instructions and make surethat you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Top	1pc	Box 1
②	Left Side Panel With Slide	1pc	Box 1
③	Right Side Panel With Slide	1pc	Box 1
④	Centre Support	2pcs	Box 1
⑤	Centre Support	1pc	Box 1
⑥	Centre Support	1pc	Box 1


Part Number	Part Description	Quantity	Box No
⑦	Back Panel	1pc	Box 1
⑧	Drawer Front	3pcs	Box 1
⑨	Drawer Left Side With Slide	3pcs	Box 1
⑩	Drawer Right Side With Slide	3pcs	Box 1
⑪	Drawer Back	3pcs	Box 1
⑫	Drawer Bottom	3pcs	Box 1

Fittings


Please check you have all the fittings listed below with your product box 1.

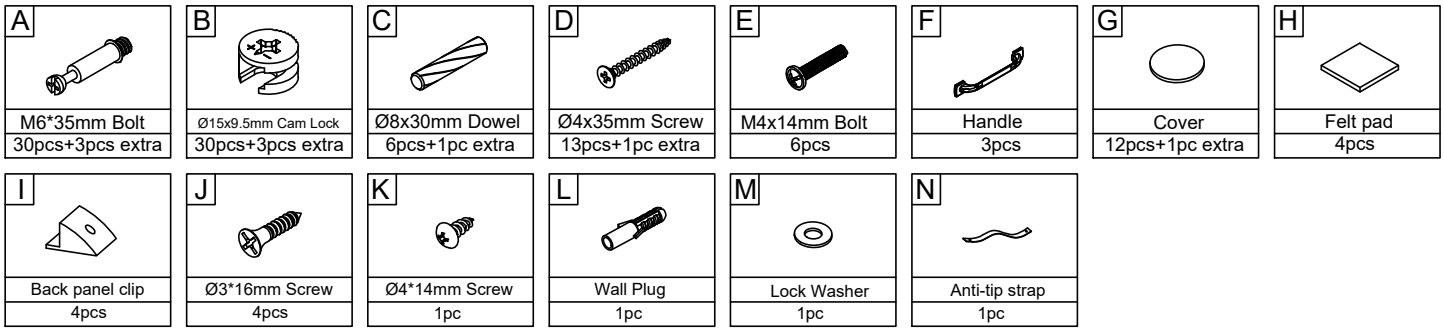


Pre-assembled Fittings.

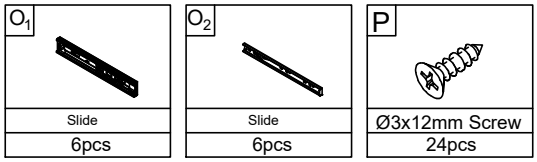

Bolt Length Ruler:





Tool required





Crosshead Screwdriver（not provided）

1.Attach parts to the top and side panel.

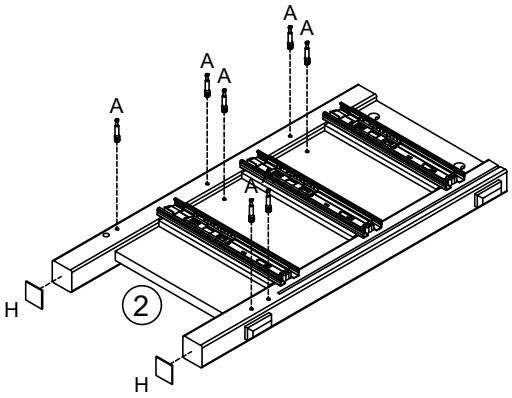

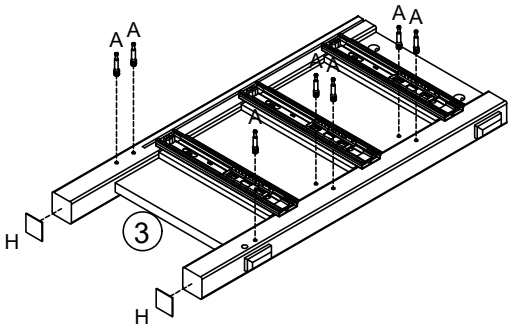


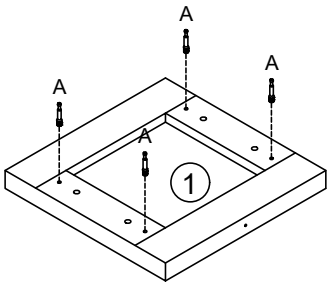


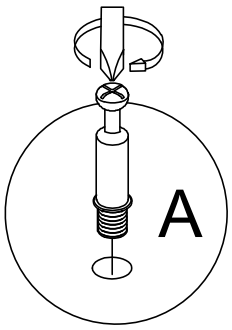

A	H
	
M6*35mm Bolt	Felt pad
18pcs	4pcs


2.Attach the centre support to the left side panel.

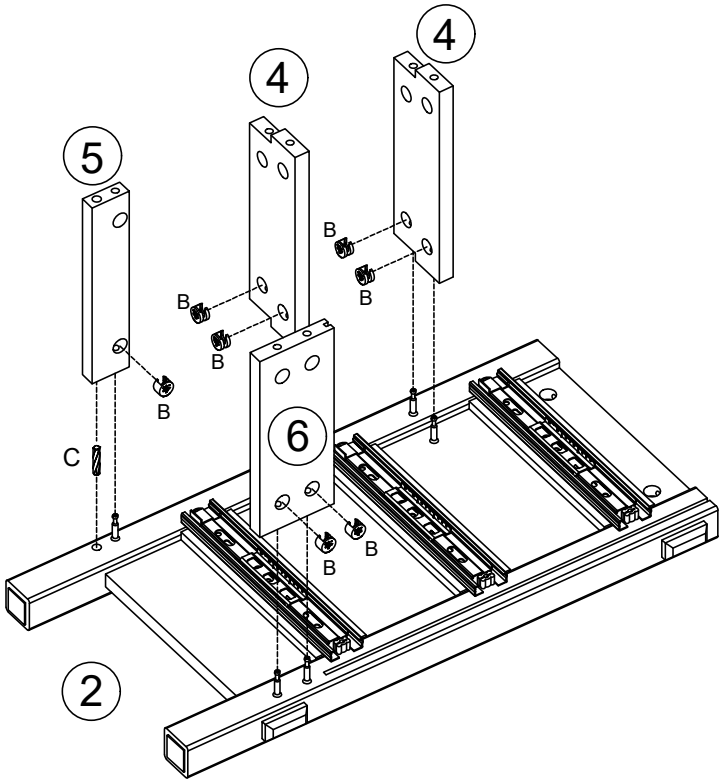


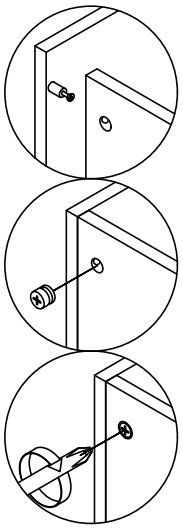

B	C
	
Ø15x9.5mm Cam Lock	Ø8x30mm Dowel
7pcs	1pc


3.Attach the right side panel to the frame.

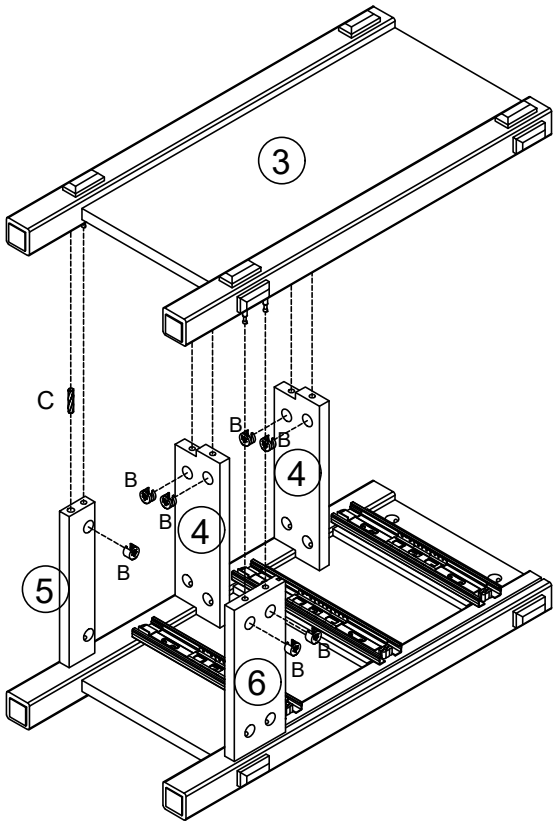

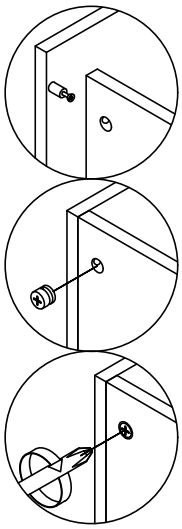



B	C
	
Ø15x9.5mm Cam Lock	Ø8x30mm Dowel
7pcs	1pc

4.Attach the back panel to the frame.

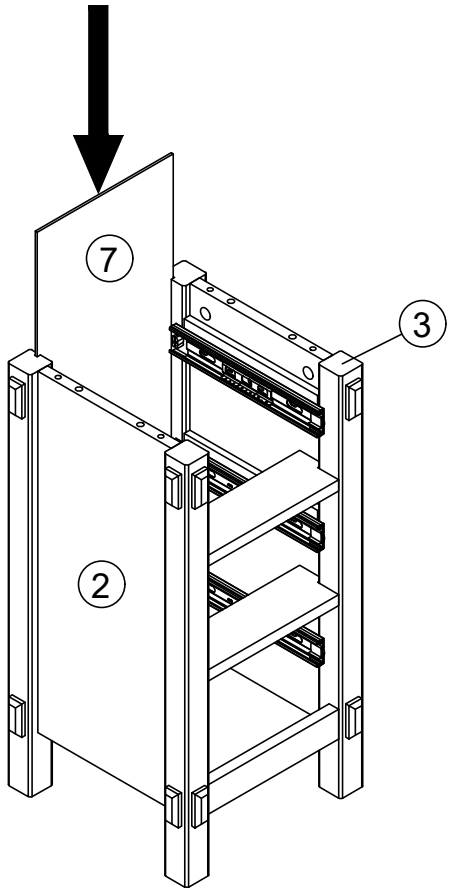

5.Attach the top panel to the frame.

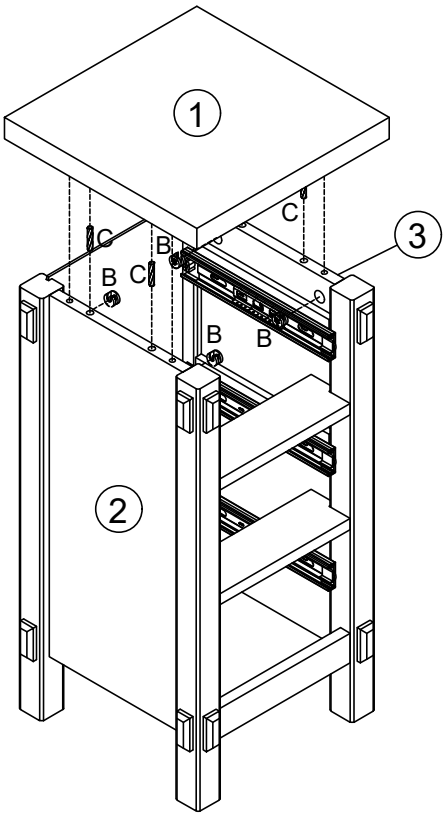


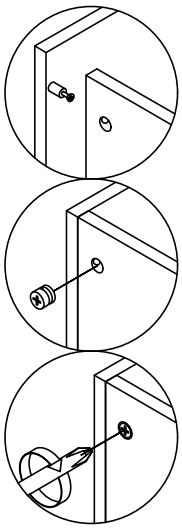



B	C
	
Ø15x9.5mm Cam Lock	Ø8x30mm Dowel
4pcs	4pcs


6.Assembe the drawers.


x3

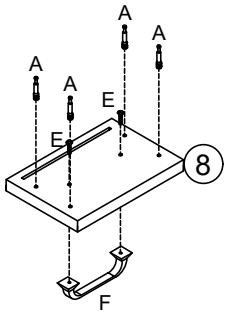

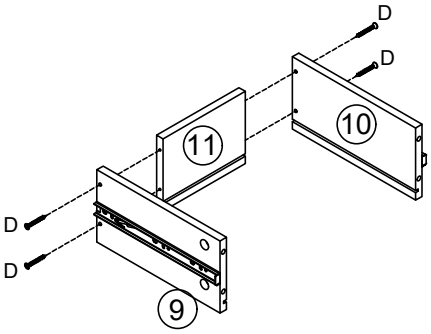


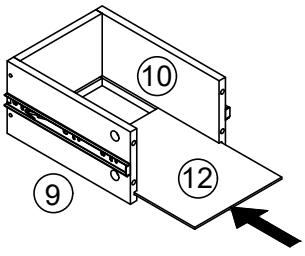

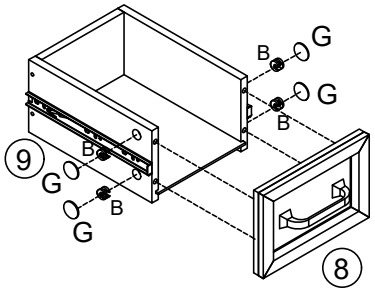

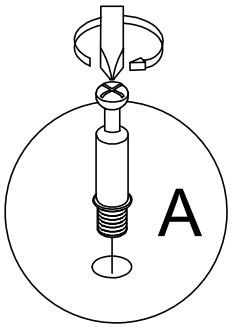



A	B	D
		
M6*35mm Bolt	Ø15x9.5mm Cam Lock	Ø4x35mm Screw
12pcs	12pcs	12pcs
E	F	G
		
M4x14mm Bolt	Handle	Cover
6pcs	3pcs	12pcs

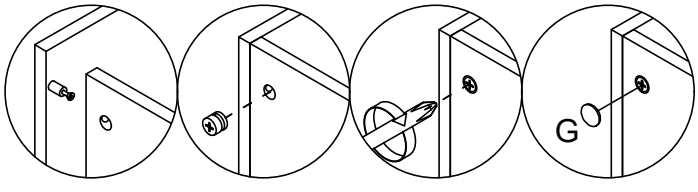

P-7-9
V-1.0


7.Attach parts to the back panel.

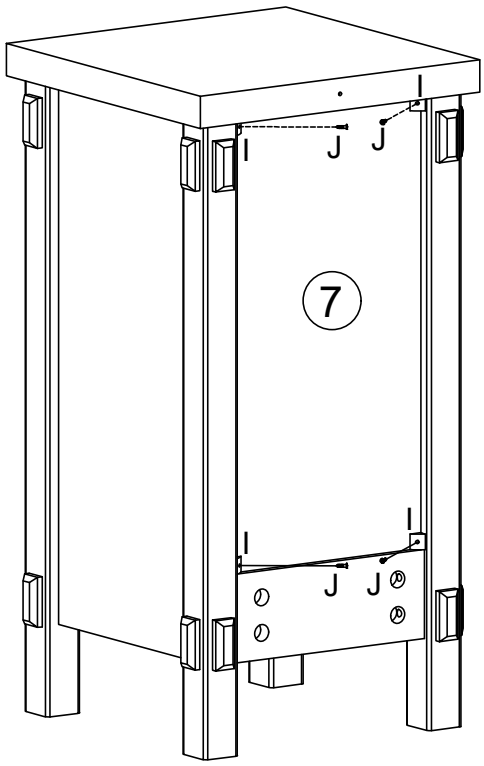


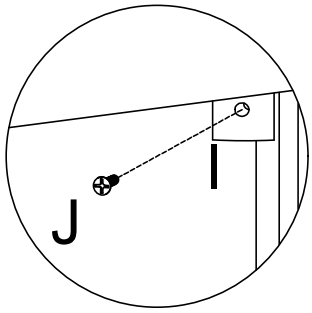


I	J
	
Back panel clip	Ø3*16mm Screw
4pcs	4pcs

8.Assemble the drawers to the frame.

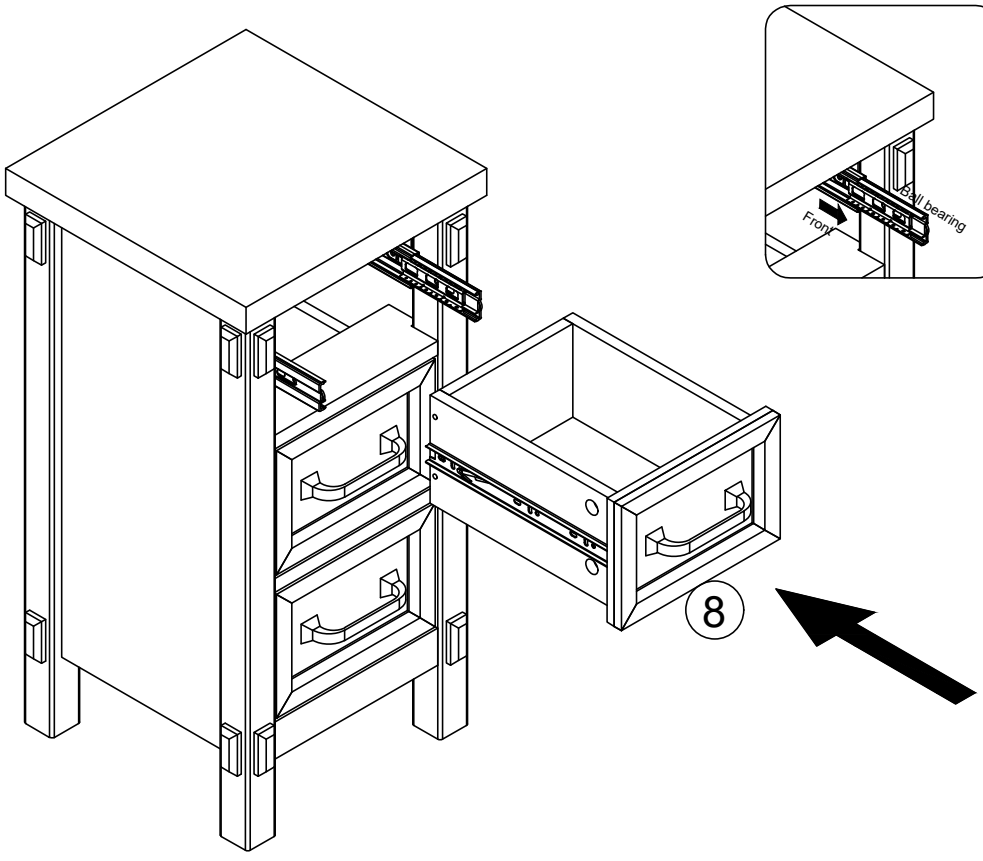

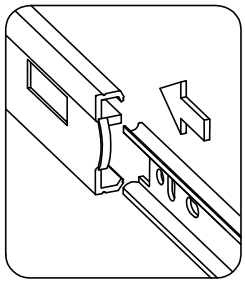



9.Attach the anti-tip strap.

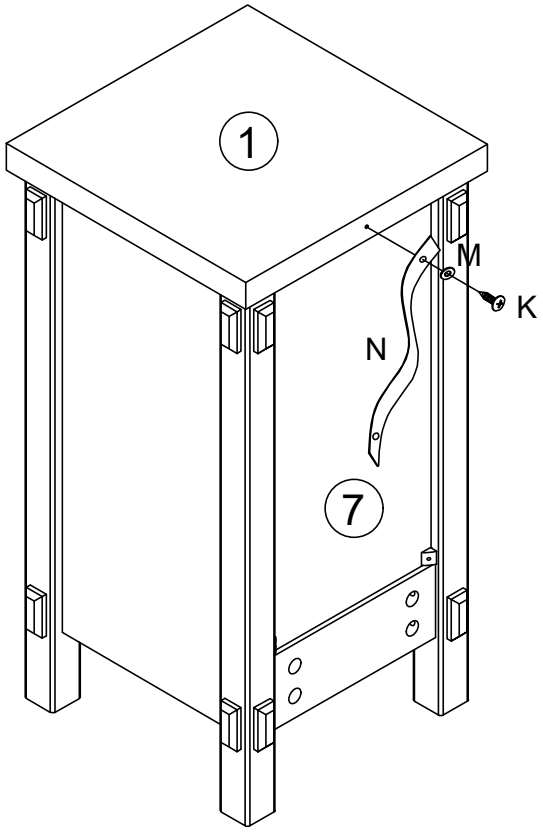

K	M	N
		
Ø4*14mm Screw	Lock Washer	Anti-tip strap
1pc	1pc	1pc

10.Fix the anti-tip strap to the wall.

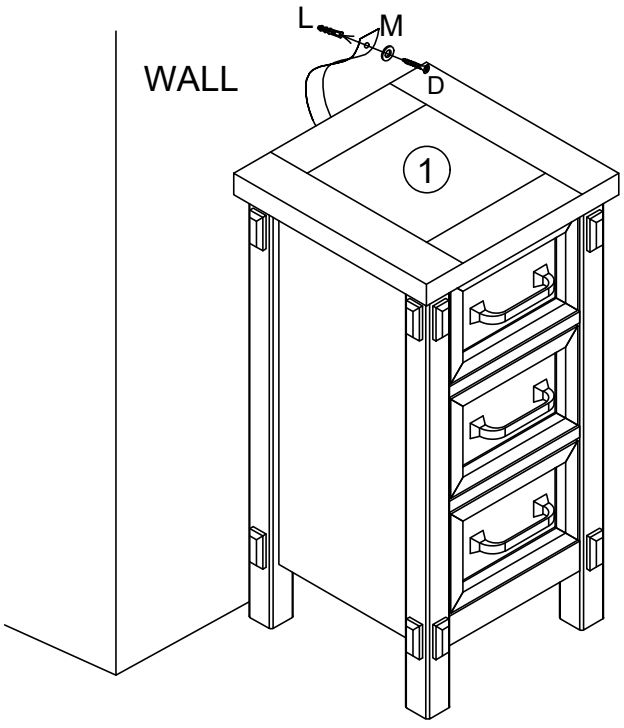

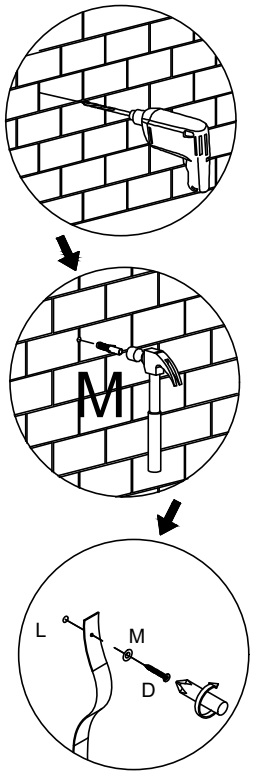

D	L	M
		
Ø4x35mm Screw	Wall Plug	Lock Washer
1pc	1pc	1pc