






Riviera Bed Frame Rattan
Double/King/Super King

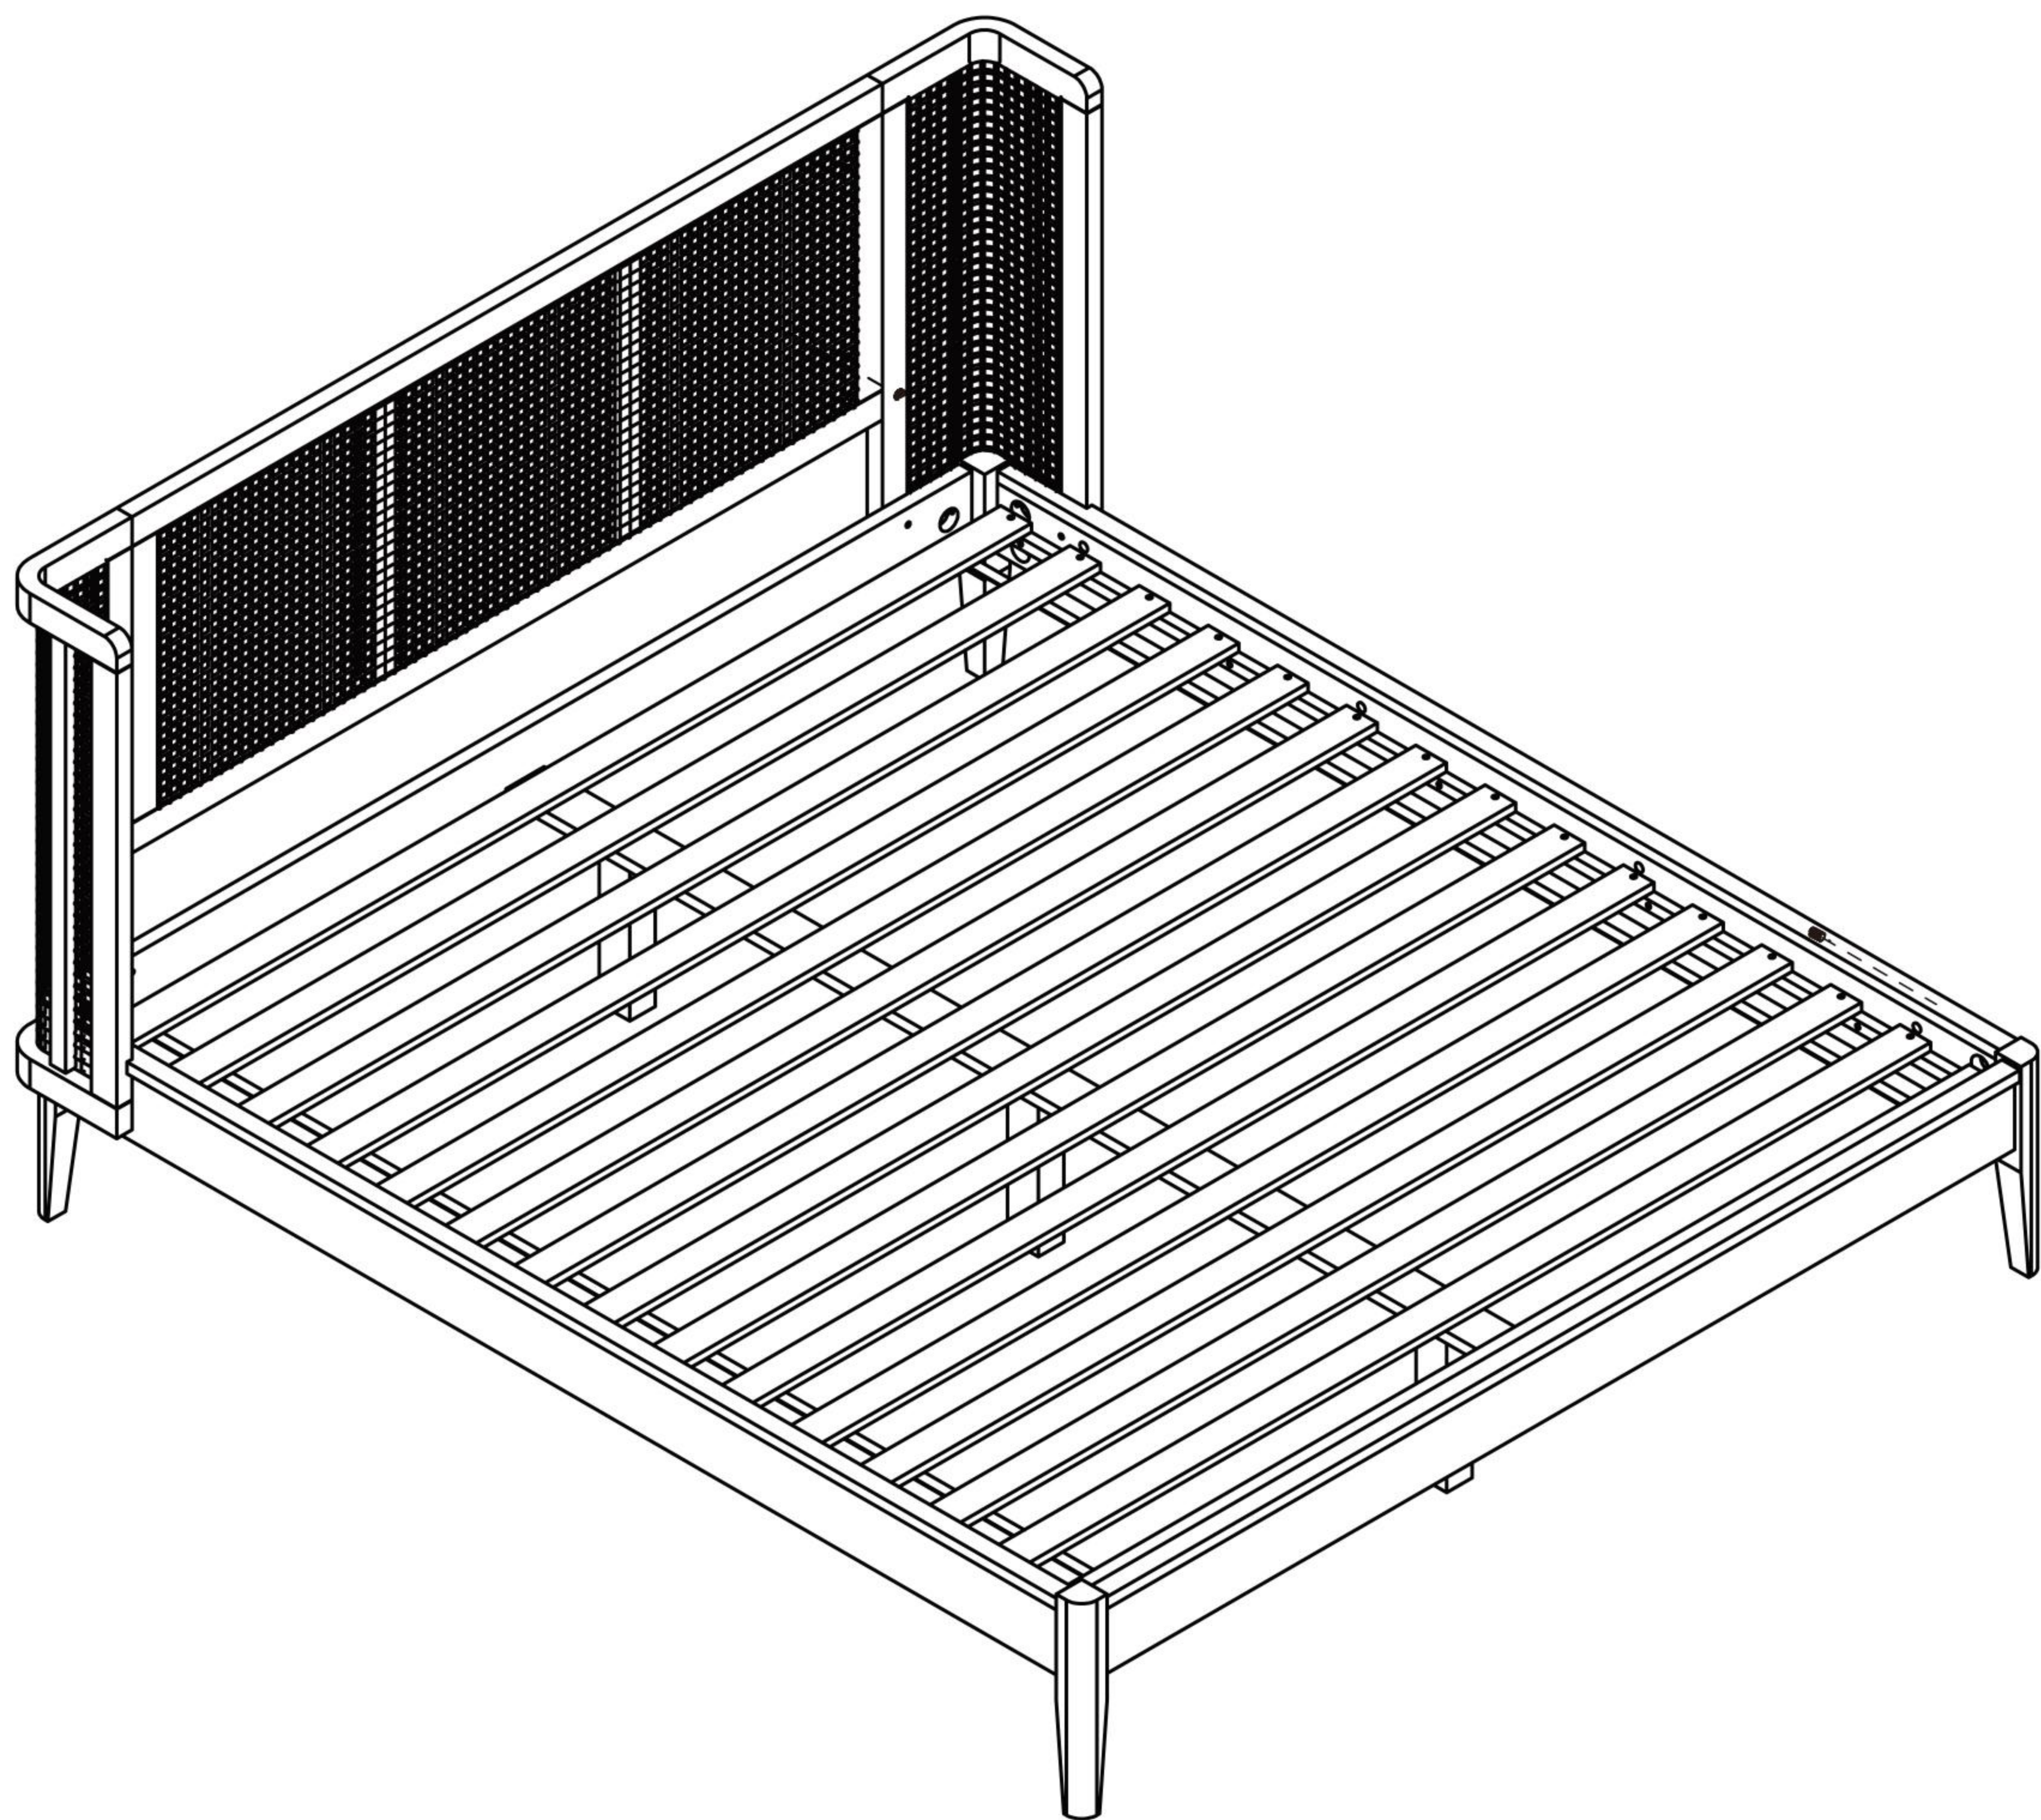

Up to 1 hour
assembly time

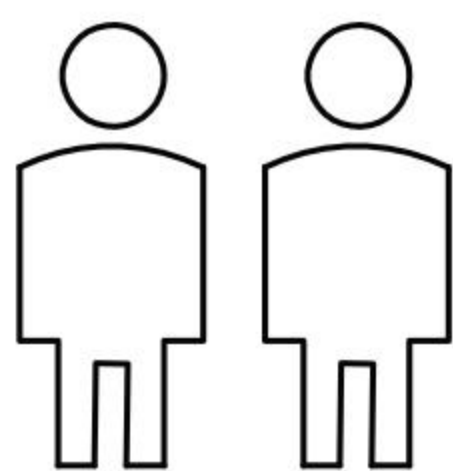

Two person
assembly

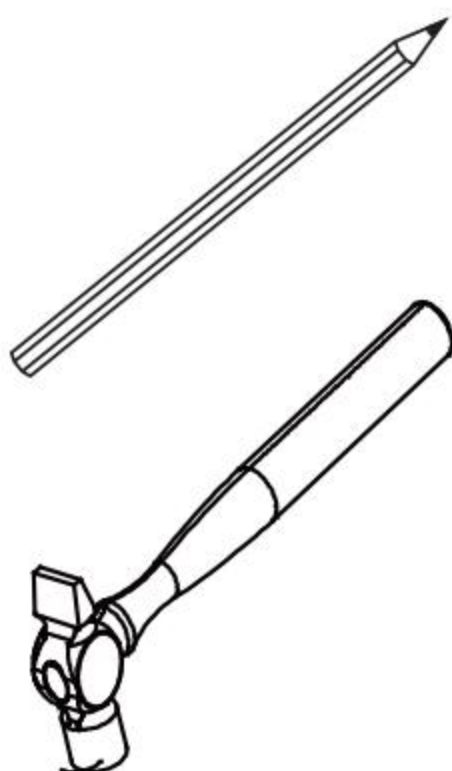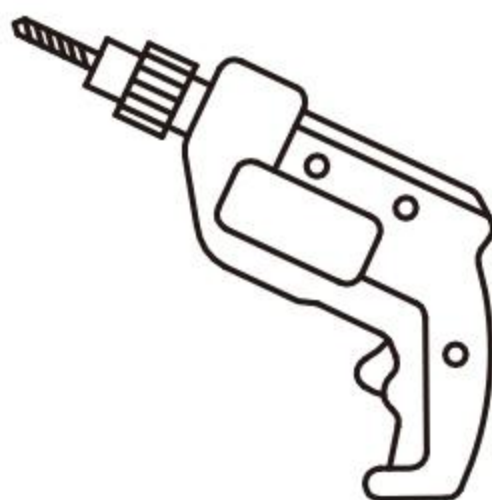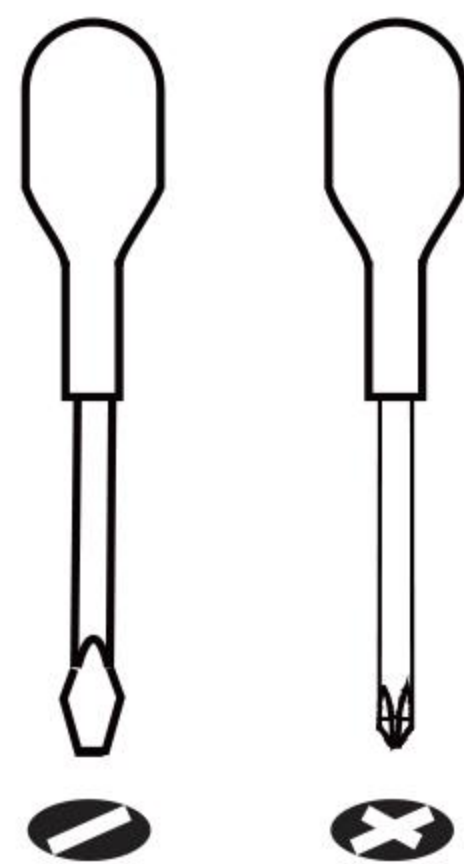

IMPORTANT

ASSEMBLY TIP

Before you begin , it's best to identify all of the parts and fittings to build your chest frame . We advise laying these out on the clean and flat floor to check you have everything , and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the chest in the room you'd like it to be located . This will help prevent any risk of damage to the frame whilst moving it .

SAFETY AND CARE

1. Do not stand on your product. Pregnant women should take additional care when using this product. Do not leave the child unattended. Children should always be under direct adult supervision whilst using this product. Always use on firm level ground, ensuring all legs remain in contact with the ground.
2. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING


Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only use clean , colourless sponge or cloth to avoid any colour transfer or smearing , do not use bleach or abrasive cleaners as they may damage the chest top over time.
2. Do not use a very wet cloth or allow any liquid to contact with the chest for a long period of time . Wipe any spillage immediately.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the chest when moving , lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e . g . hot drinks and dishes) on the chest surface.
6. It is not recommended to place the item next to sources of heat such as radiators , fires or directly exposed to sunlight.
7. Regularly check all fixings to ensure none have come loose . Re - tighten if necessary.
8. Avoid sharp items such as a screwdriver or any pointy tools.
9. Dispose of all packaging carefully and responsibly - recycle where possible.
10. Due to the delicate nature of this product , please gently place hard items onto the chest top to avoid damaging the surface.

Parts

Before you begin building your bed frame, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on parts check list.

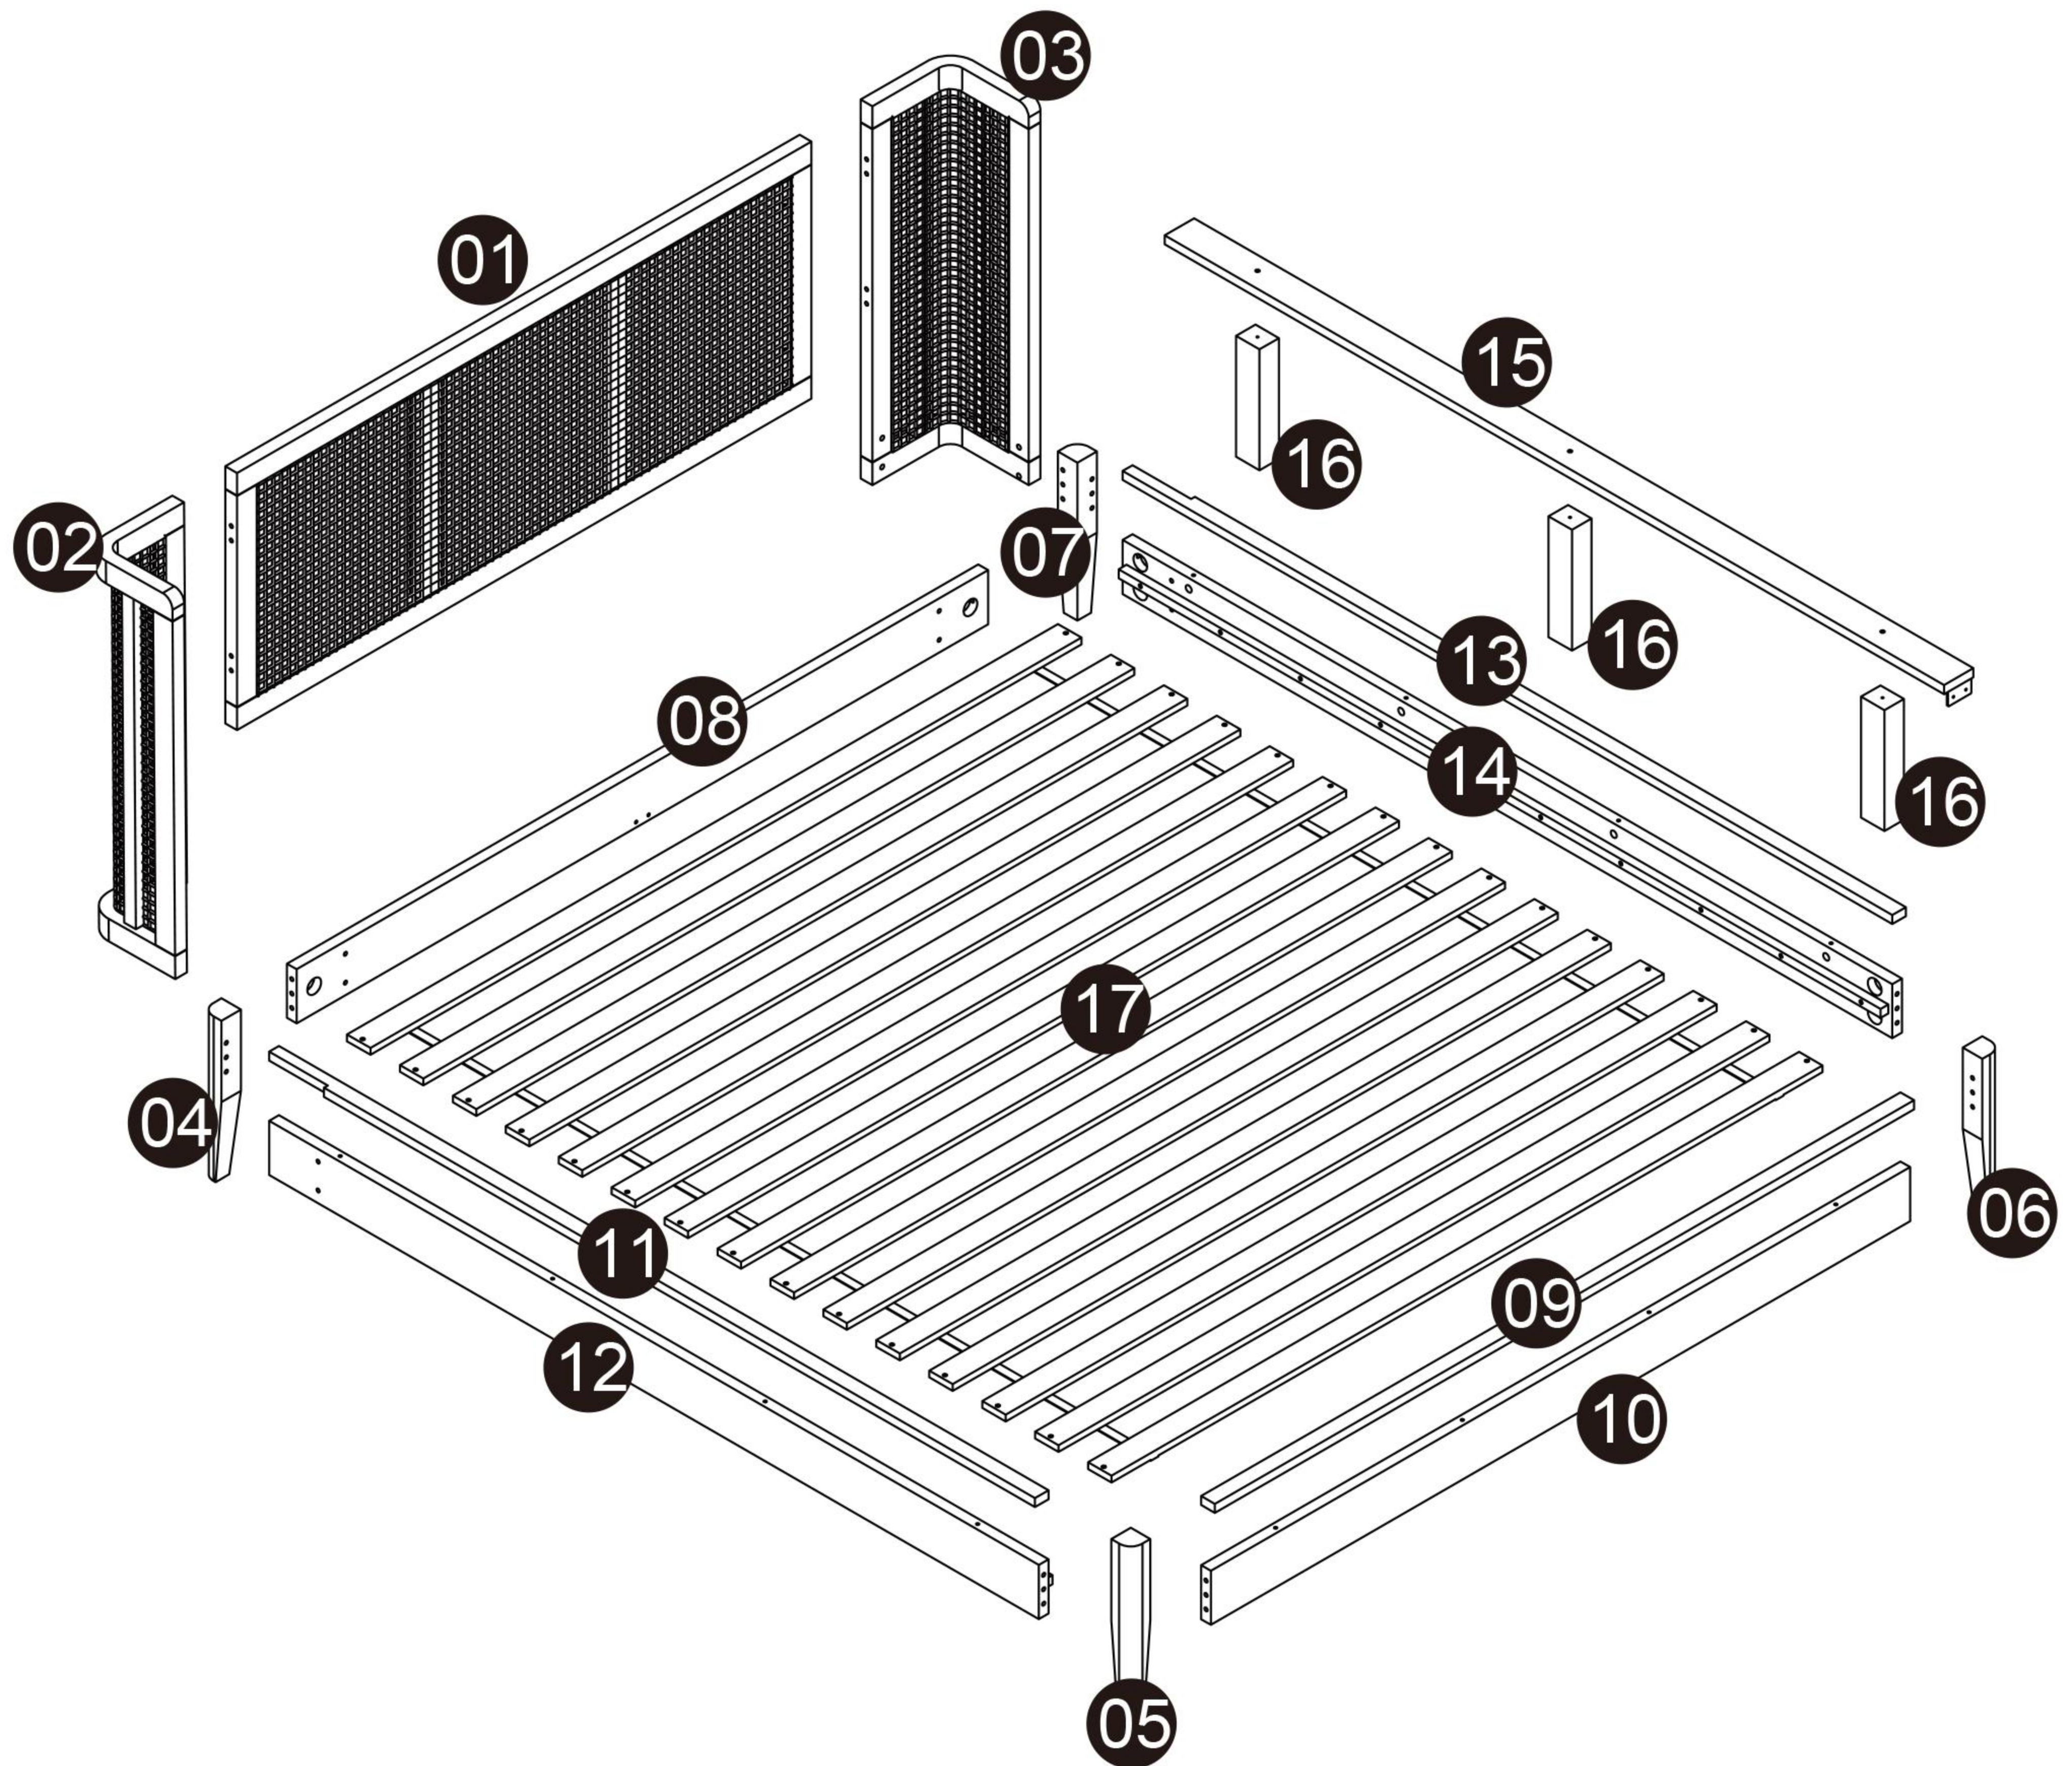















Parts Check List

No.	Part List	Qty	CTN
1	Main Backpanel	1	1
2	Left Wing for Backpanel	1	3
3	Right Wing for Backpanel	1	3
4	Left Back Leg	1	2
5	Left Front Leg	1	2
6	Right Front Leg	1	2
7	Right Back Leg	1	2
8	Headboard	1	2
9	Top Rail for Footboard	1	2


No.	Part List	Qty	CTN
10	Footboard	1	2
11	Top Rail for Left Side Rail	1	2
12	Left Side Rail	1	2
13	Top Rail for Right Side Rail	1	2
14	Right Side Rail	1	2
15	Centre Support Rail	1	2
16	Centre Support Legs	3	2
17	Slat	15	1

Fittings


Please check you have all the fitting listed below with you product.

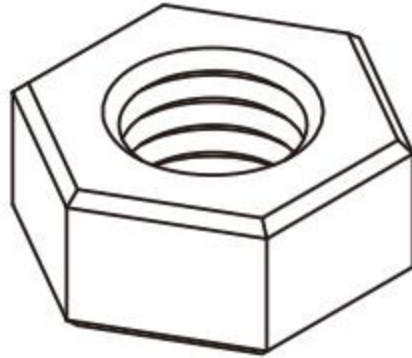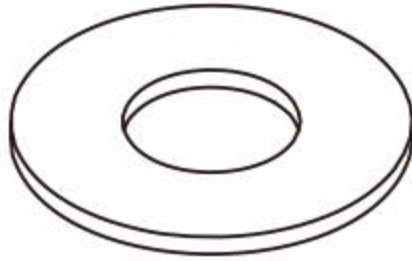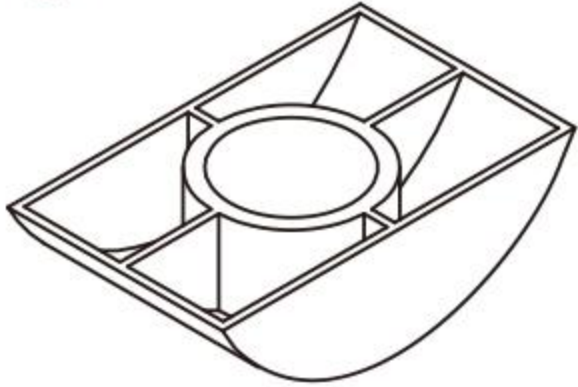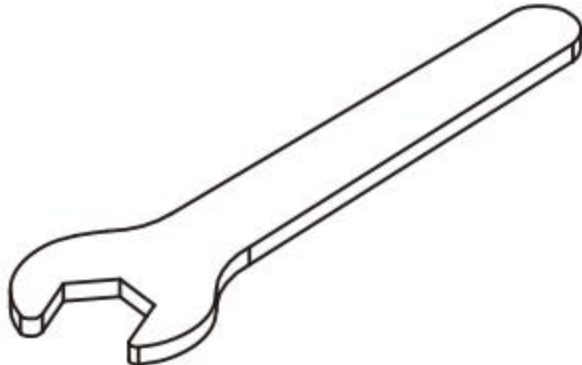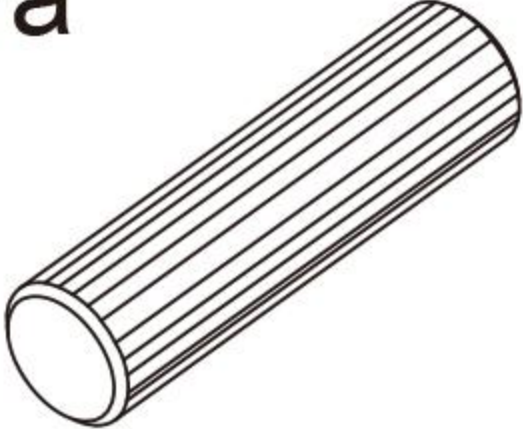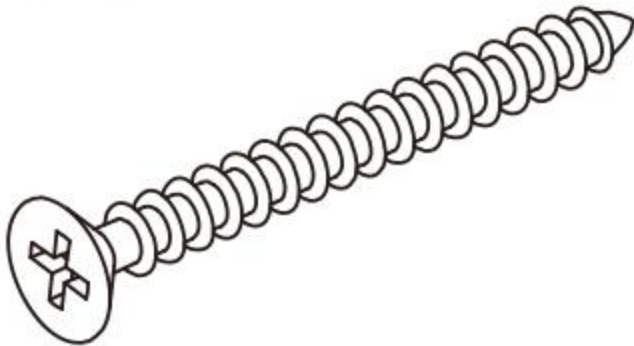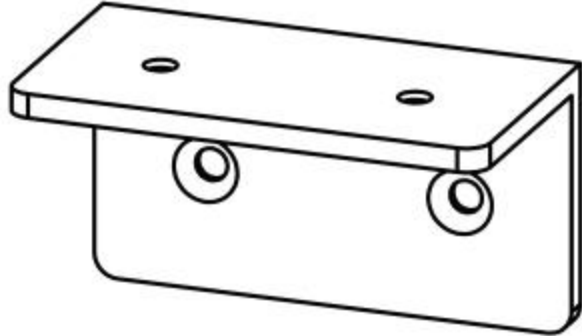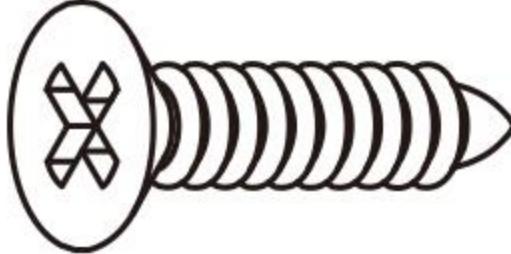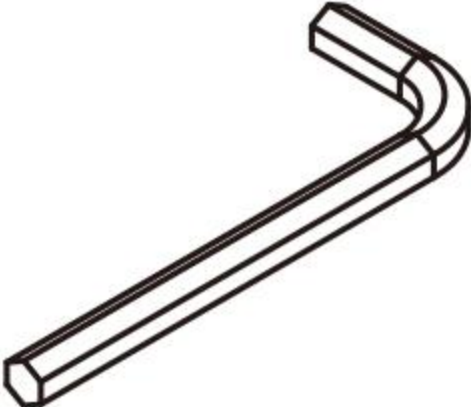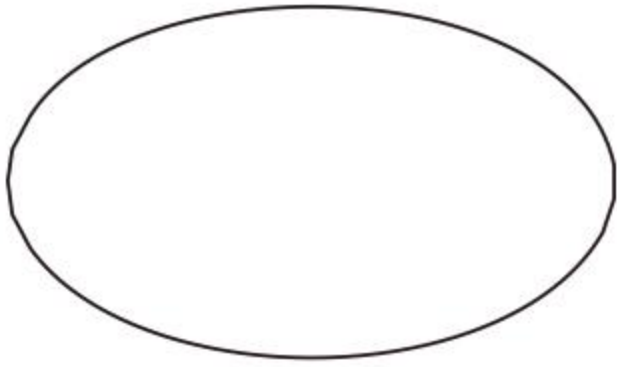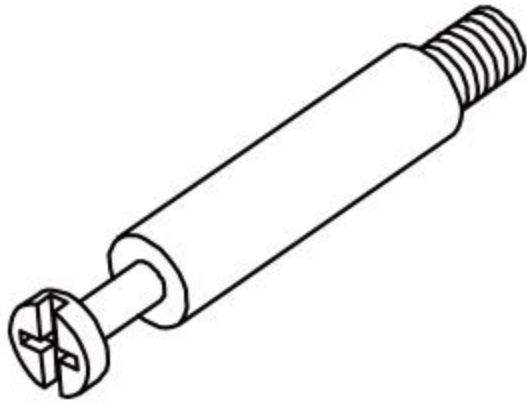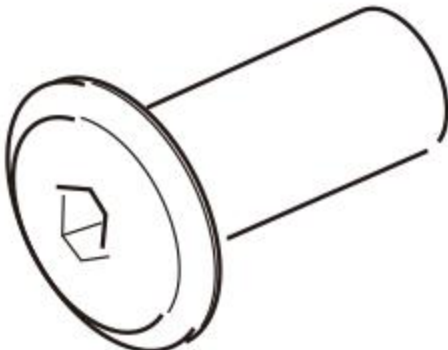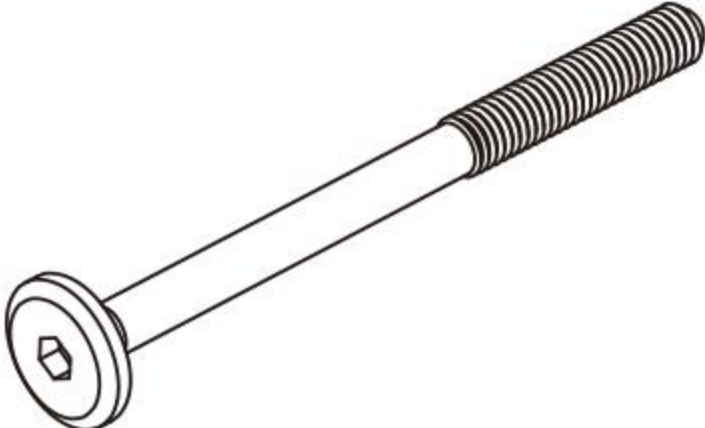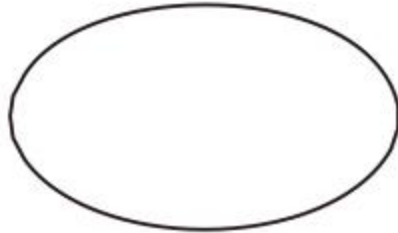A x12 + 1 extra  Threaded studs (M6x70mm)	B x12 + 1 extra  Nuts for M6 stud	C x12 + 1 extra  Flat Washer for M6 stud
D x12 + 1 extra  Half-moon bracket	E x1  Spanner for M6 nut	F x16 + 1 extra  Dowel (Ø8x30mm)
G x30 + 3 extra  Screw (Ø4x30mm)	H x3  Carcass Screw (M6x60mm)	J x8 + 1 extra  Bolt (M6x40mm)
K x2  Metal Bracket	L x8 + 1 extra  Screw (Ø3x16mm)	M x2  Allen Key
N x12 + 1 extra  Sticker Cover (Ø40mm)	P x12  Cam Bolt	Q x12  Cam Lock
R x4  Sleeve Nut (M6x20mm)	S x4  Bolt (M6x90mm)	T x12 + 1 extra  Sticker Cover (Ø20mm)

Step 1 Attach Threaded Studs.


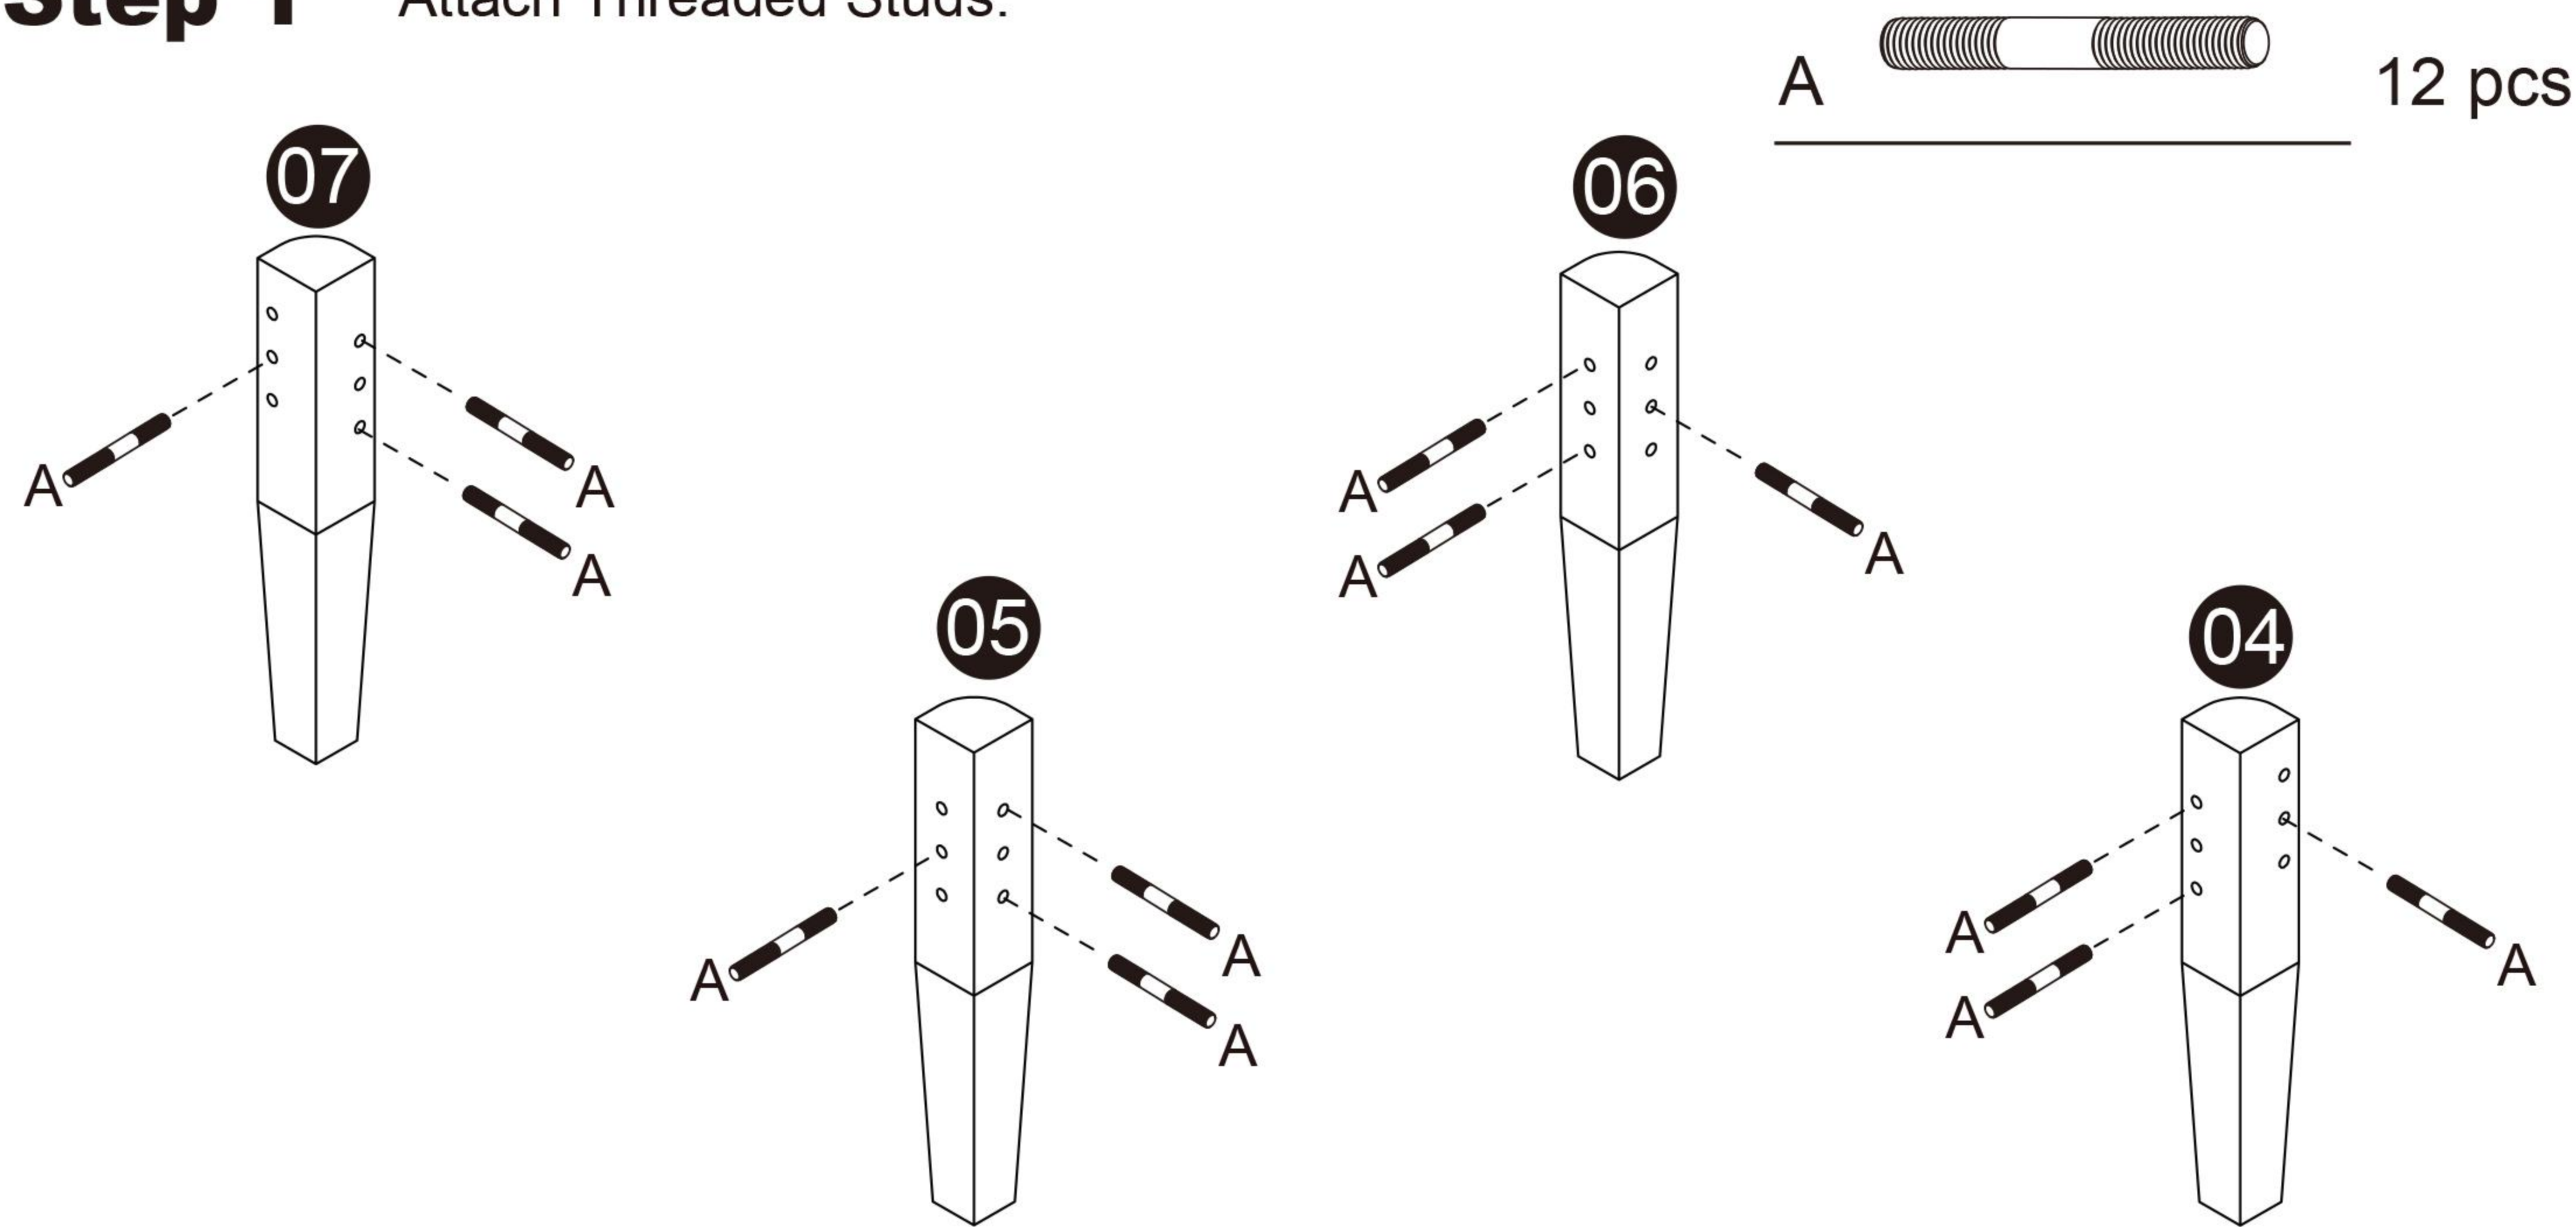


Step 2 Attach Wood Dowels.

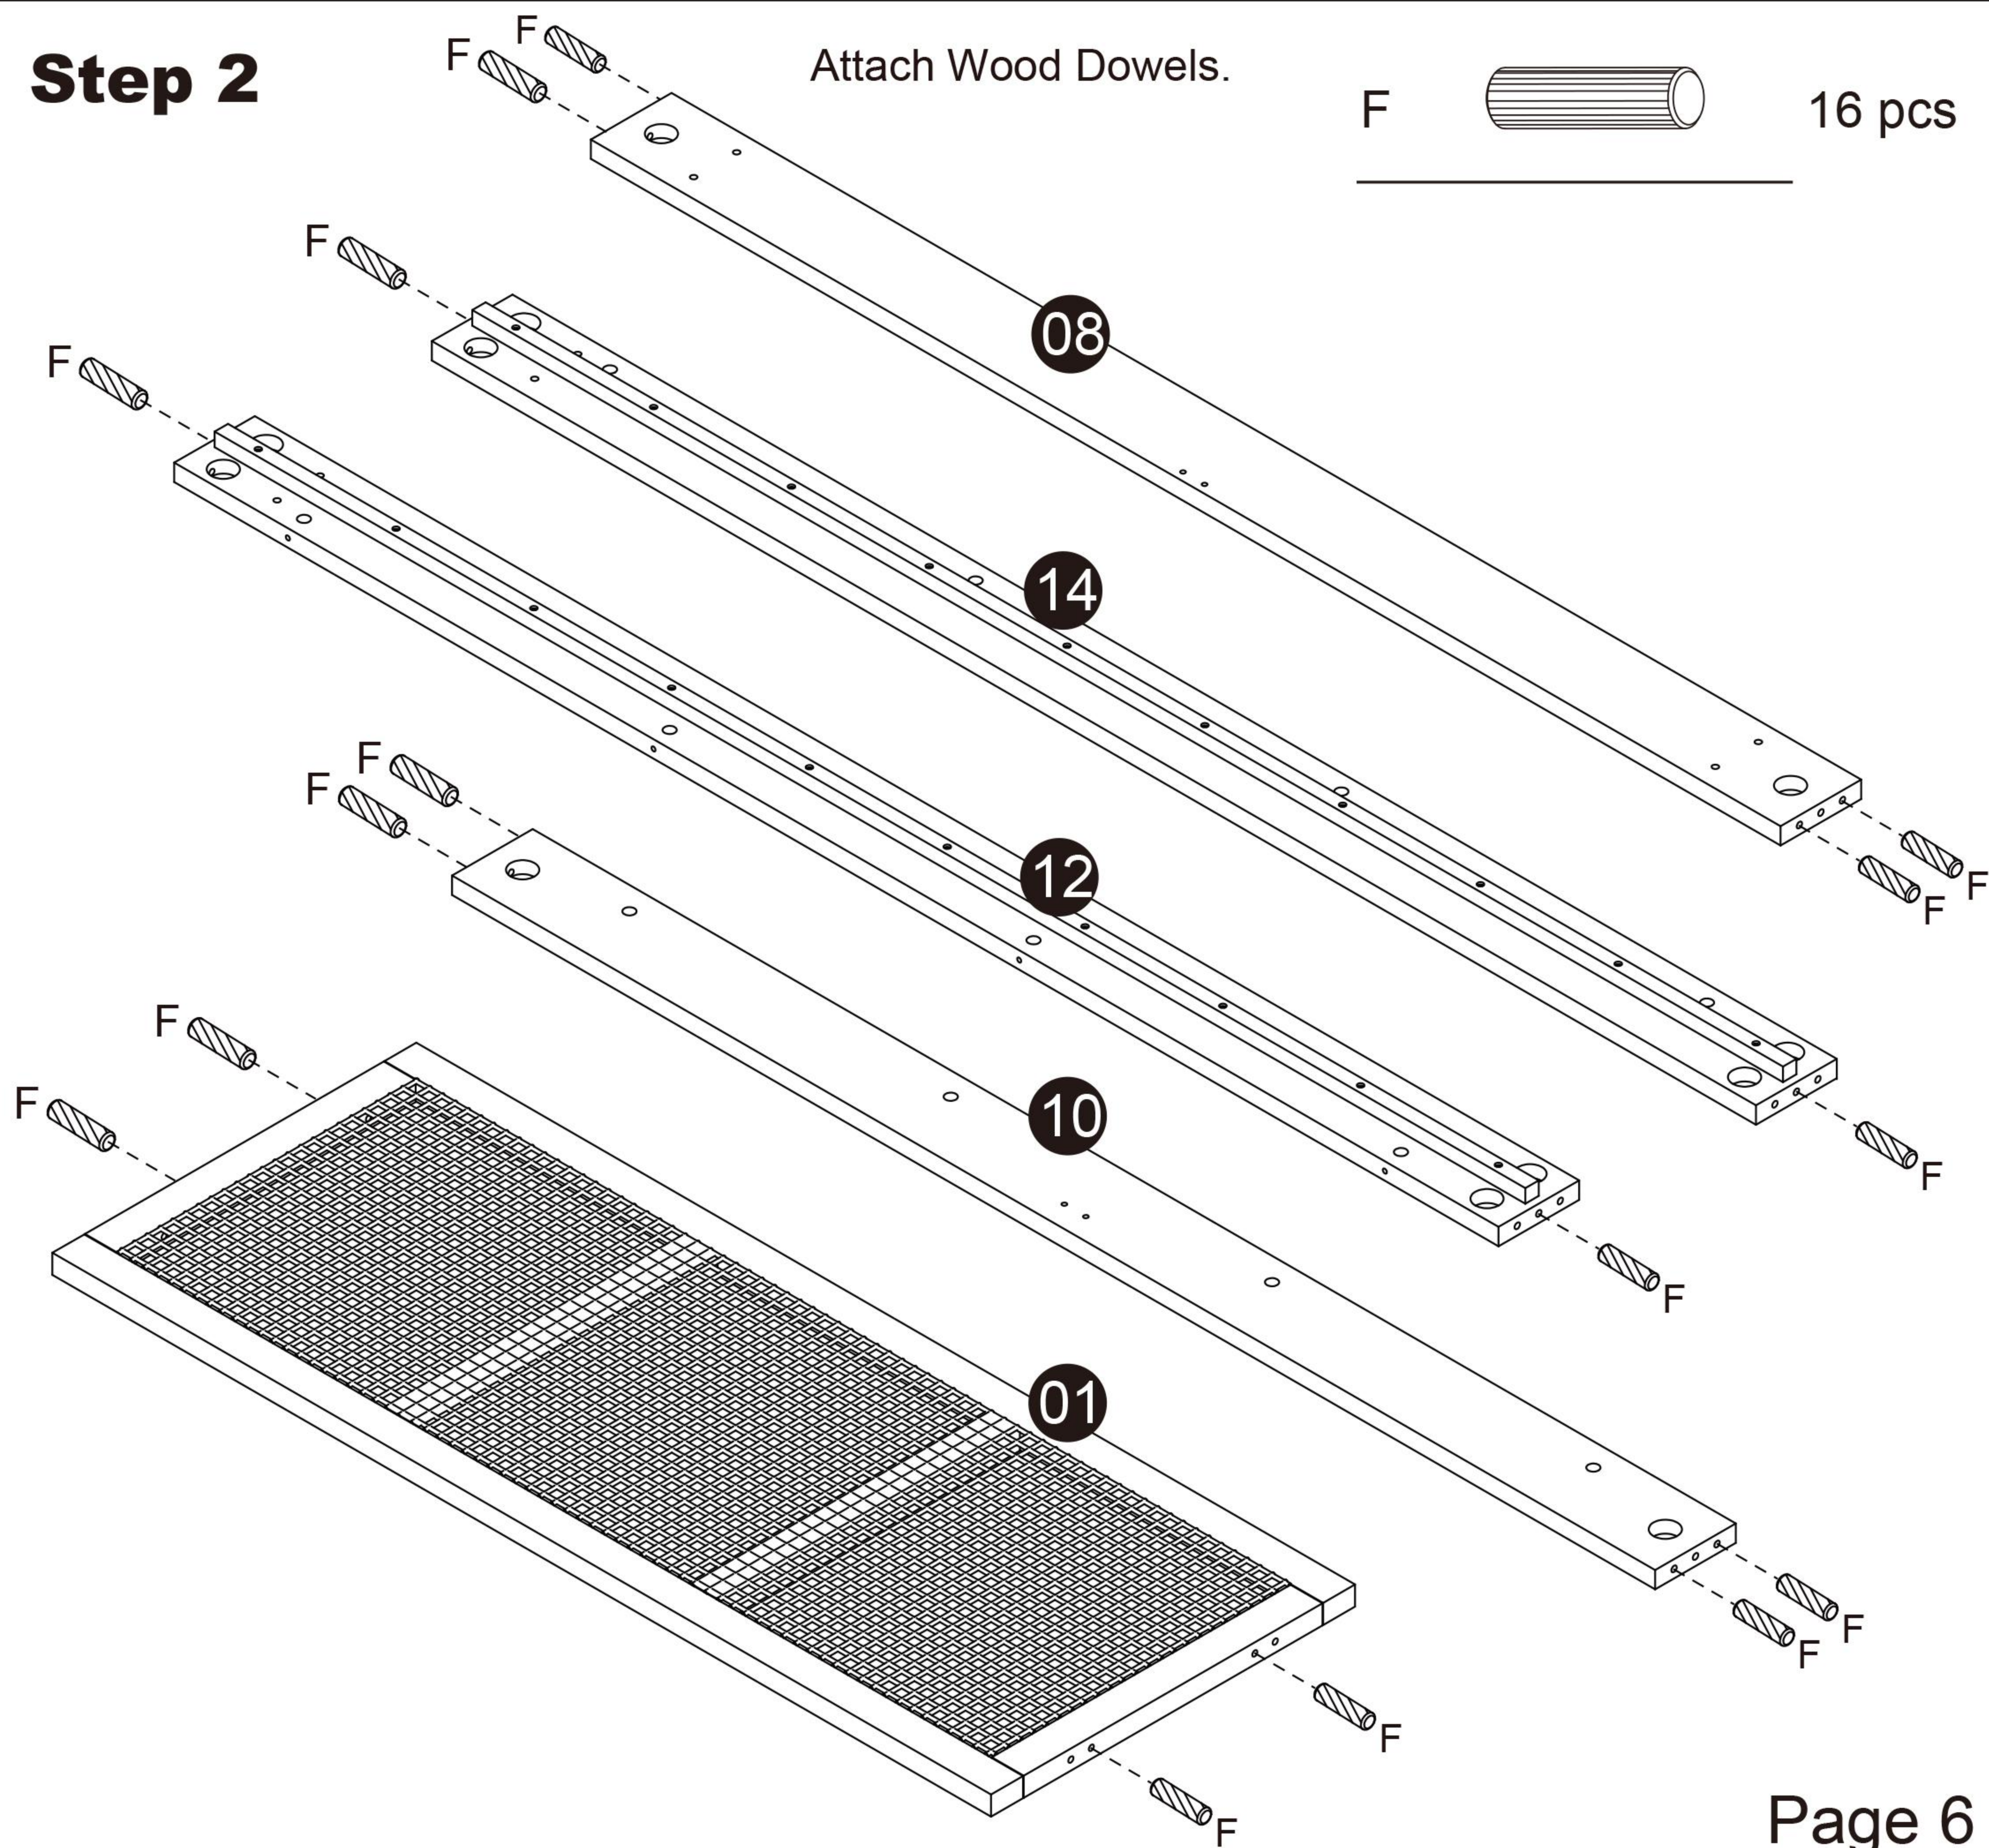


Step 3

Attach Top Rail to Side rail

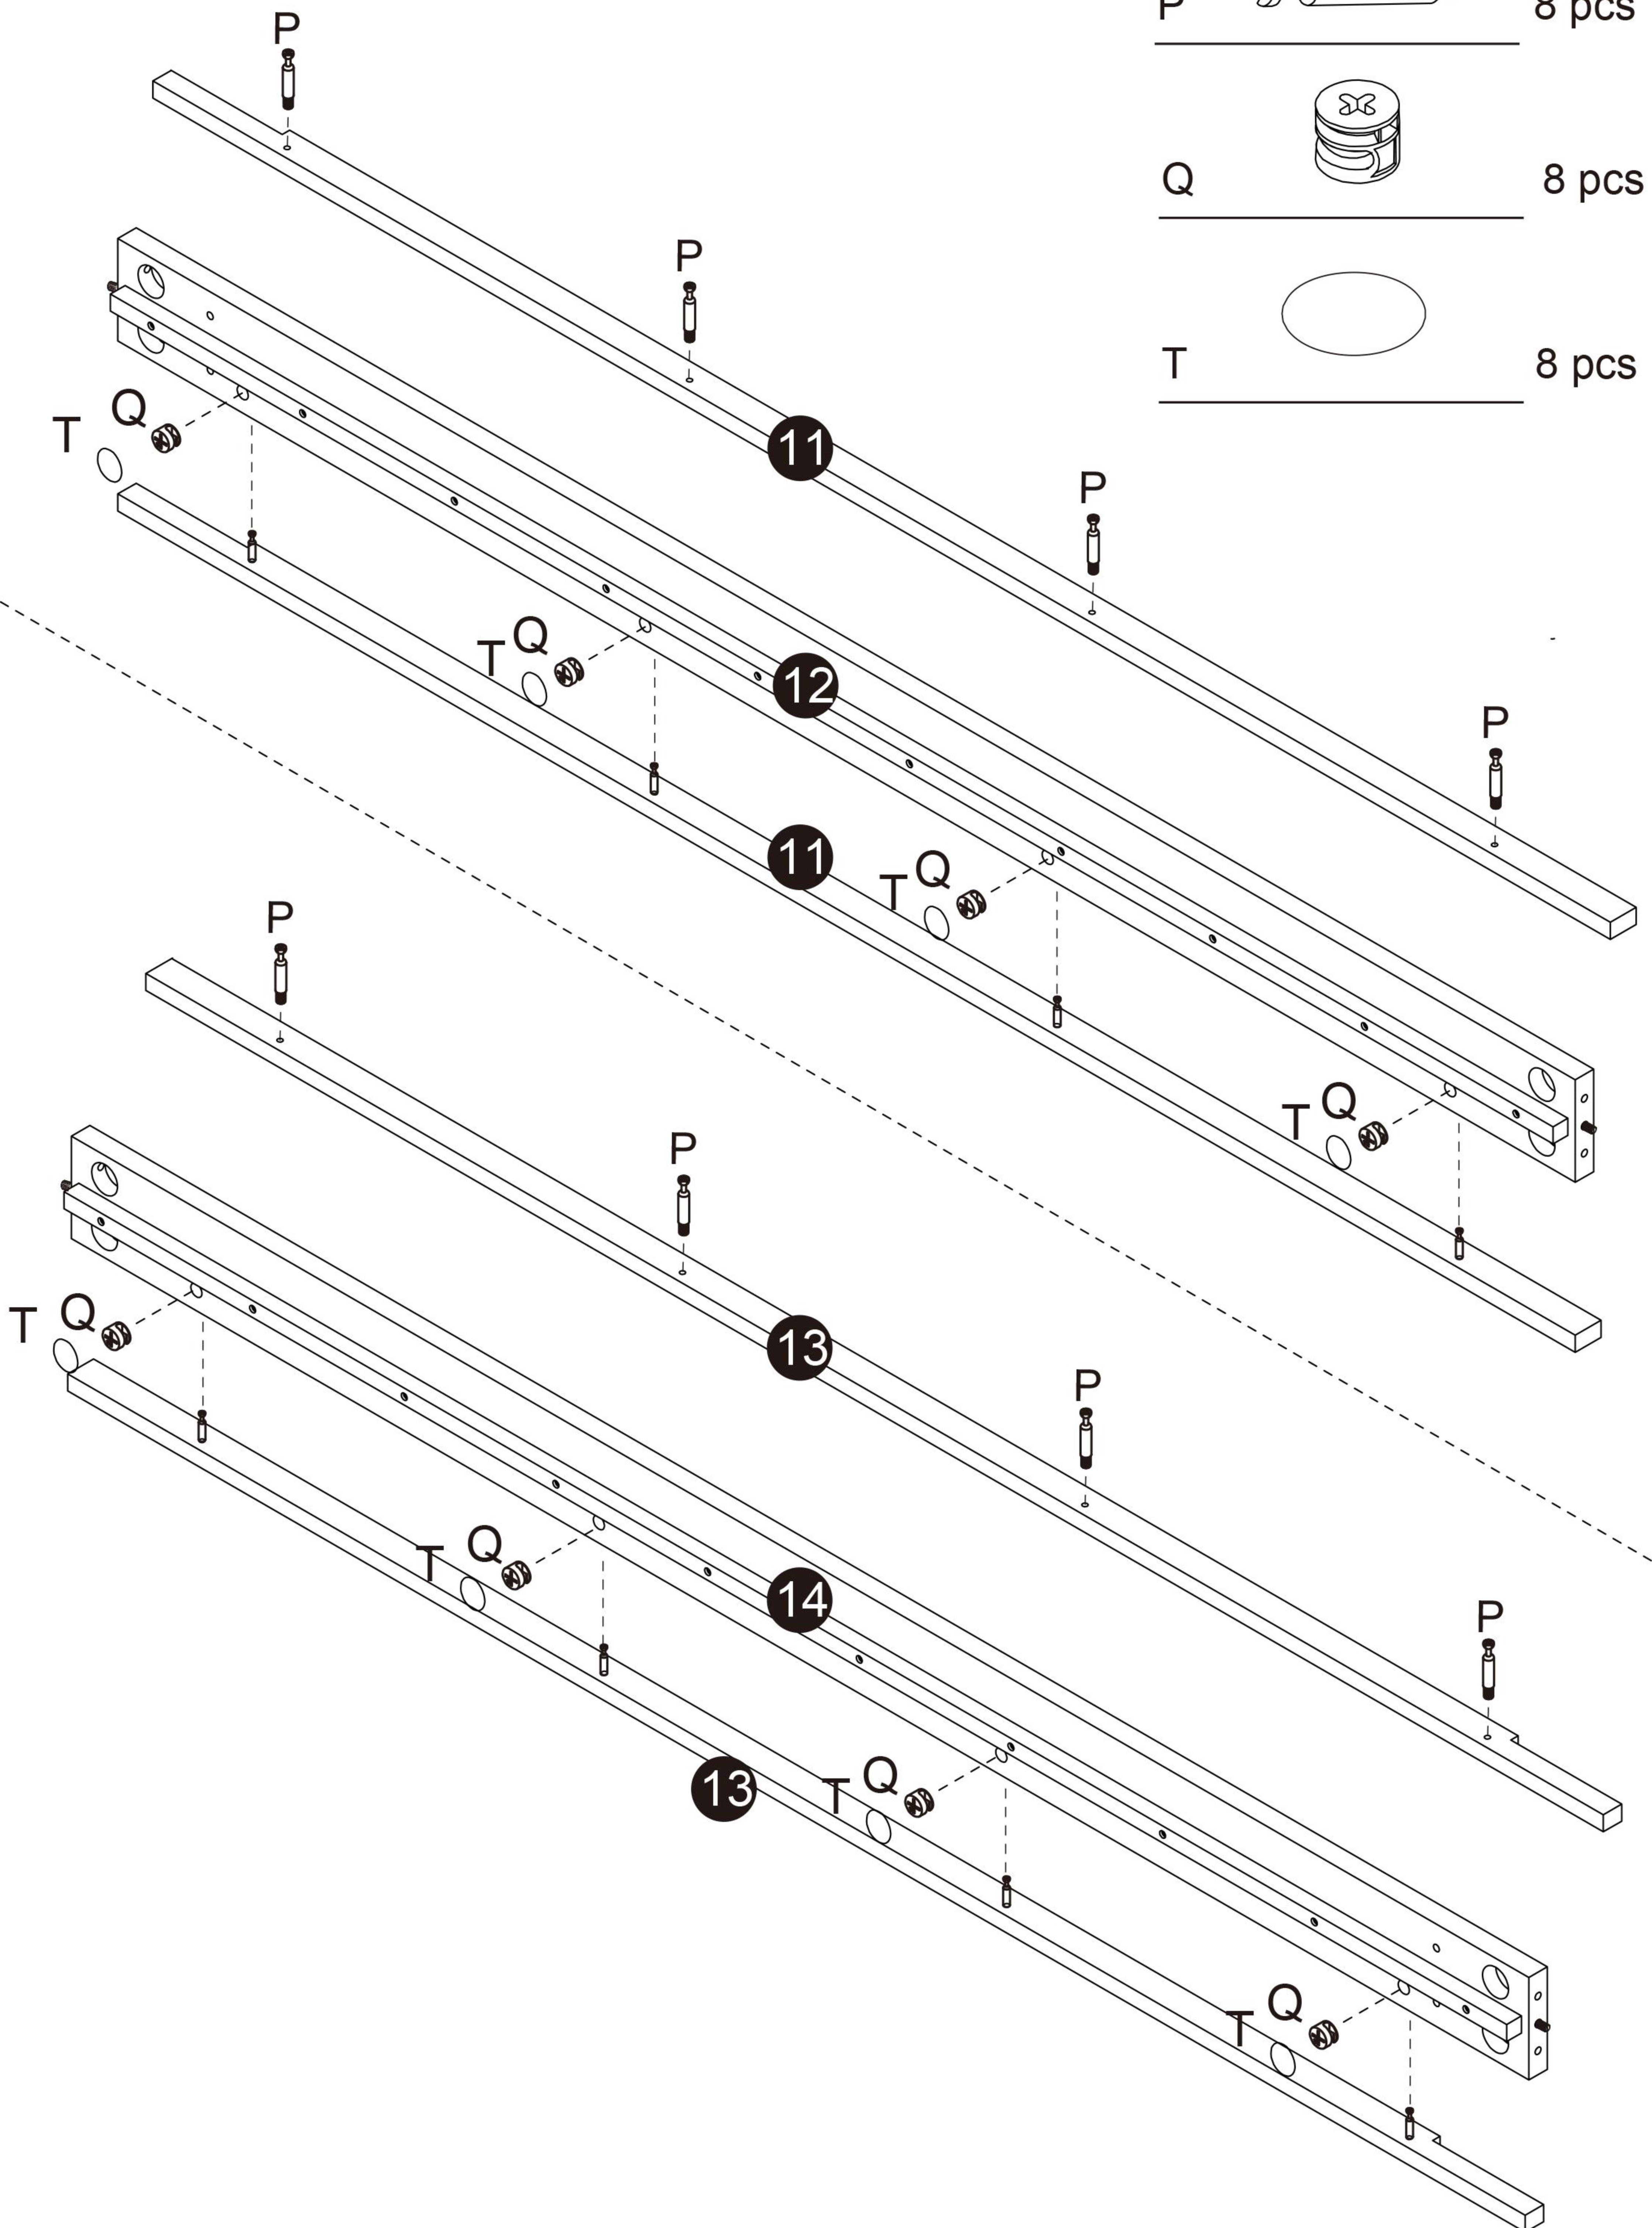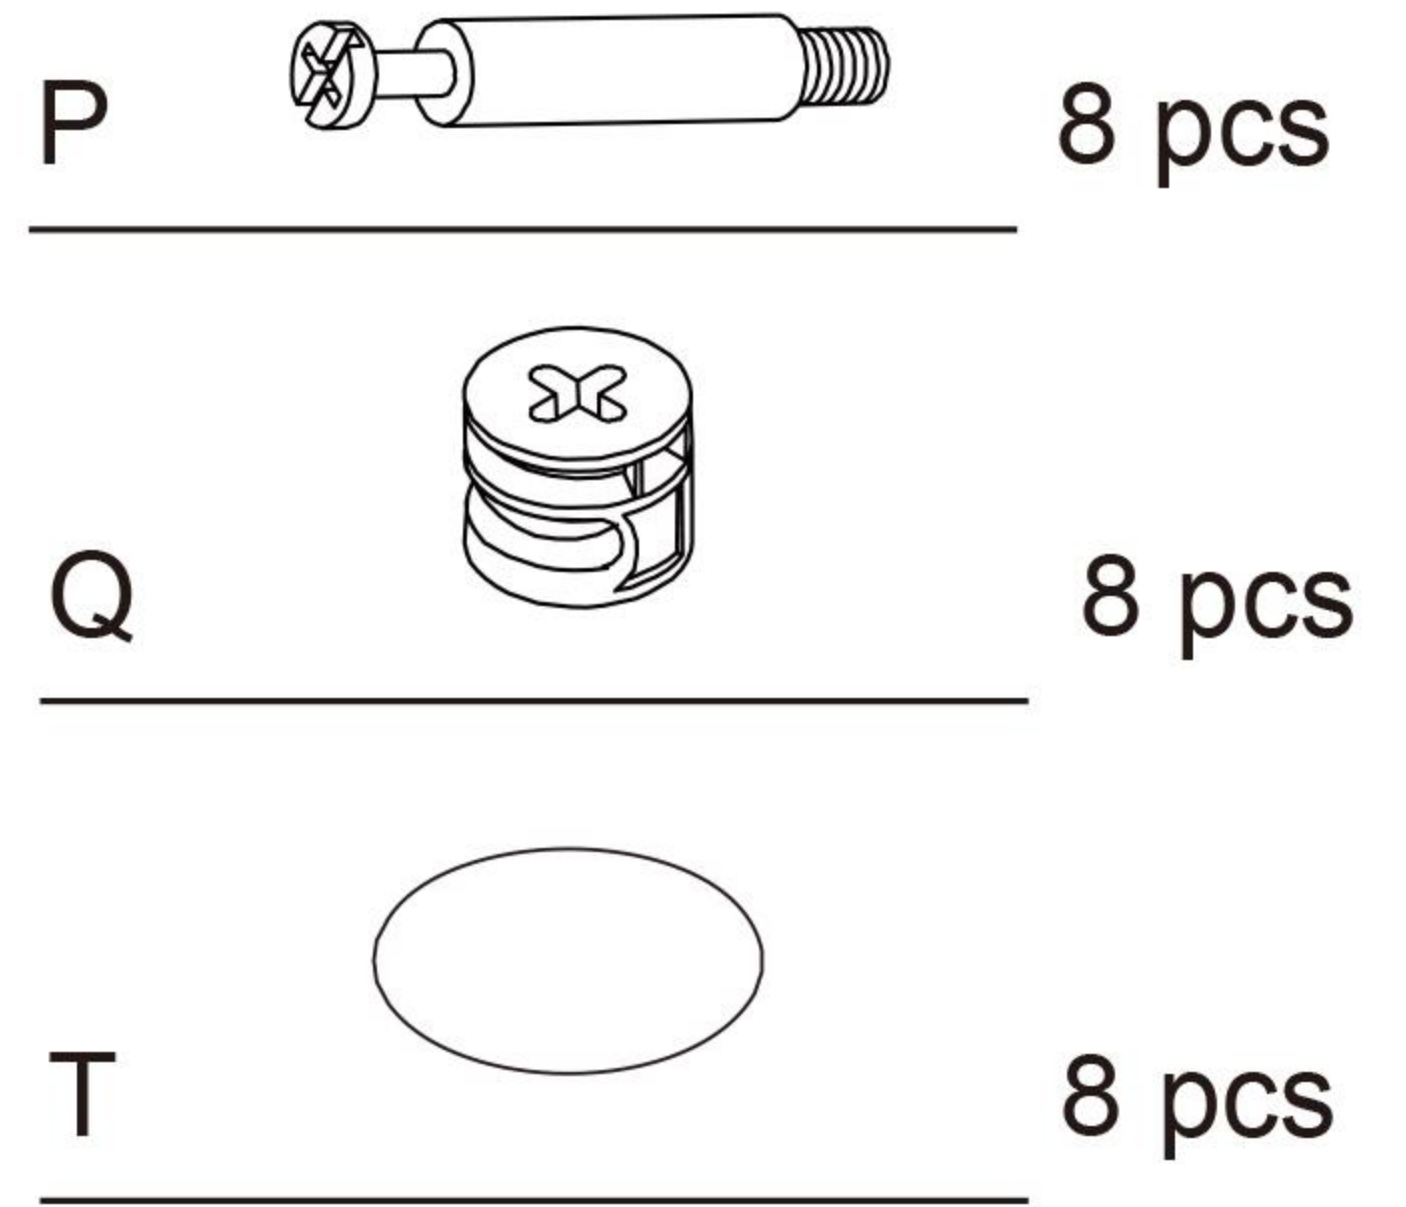


Step 4

Attach Top Rail to Footboard

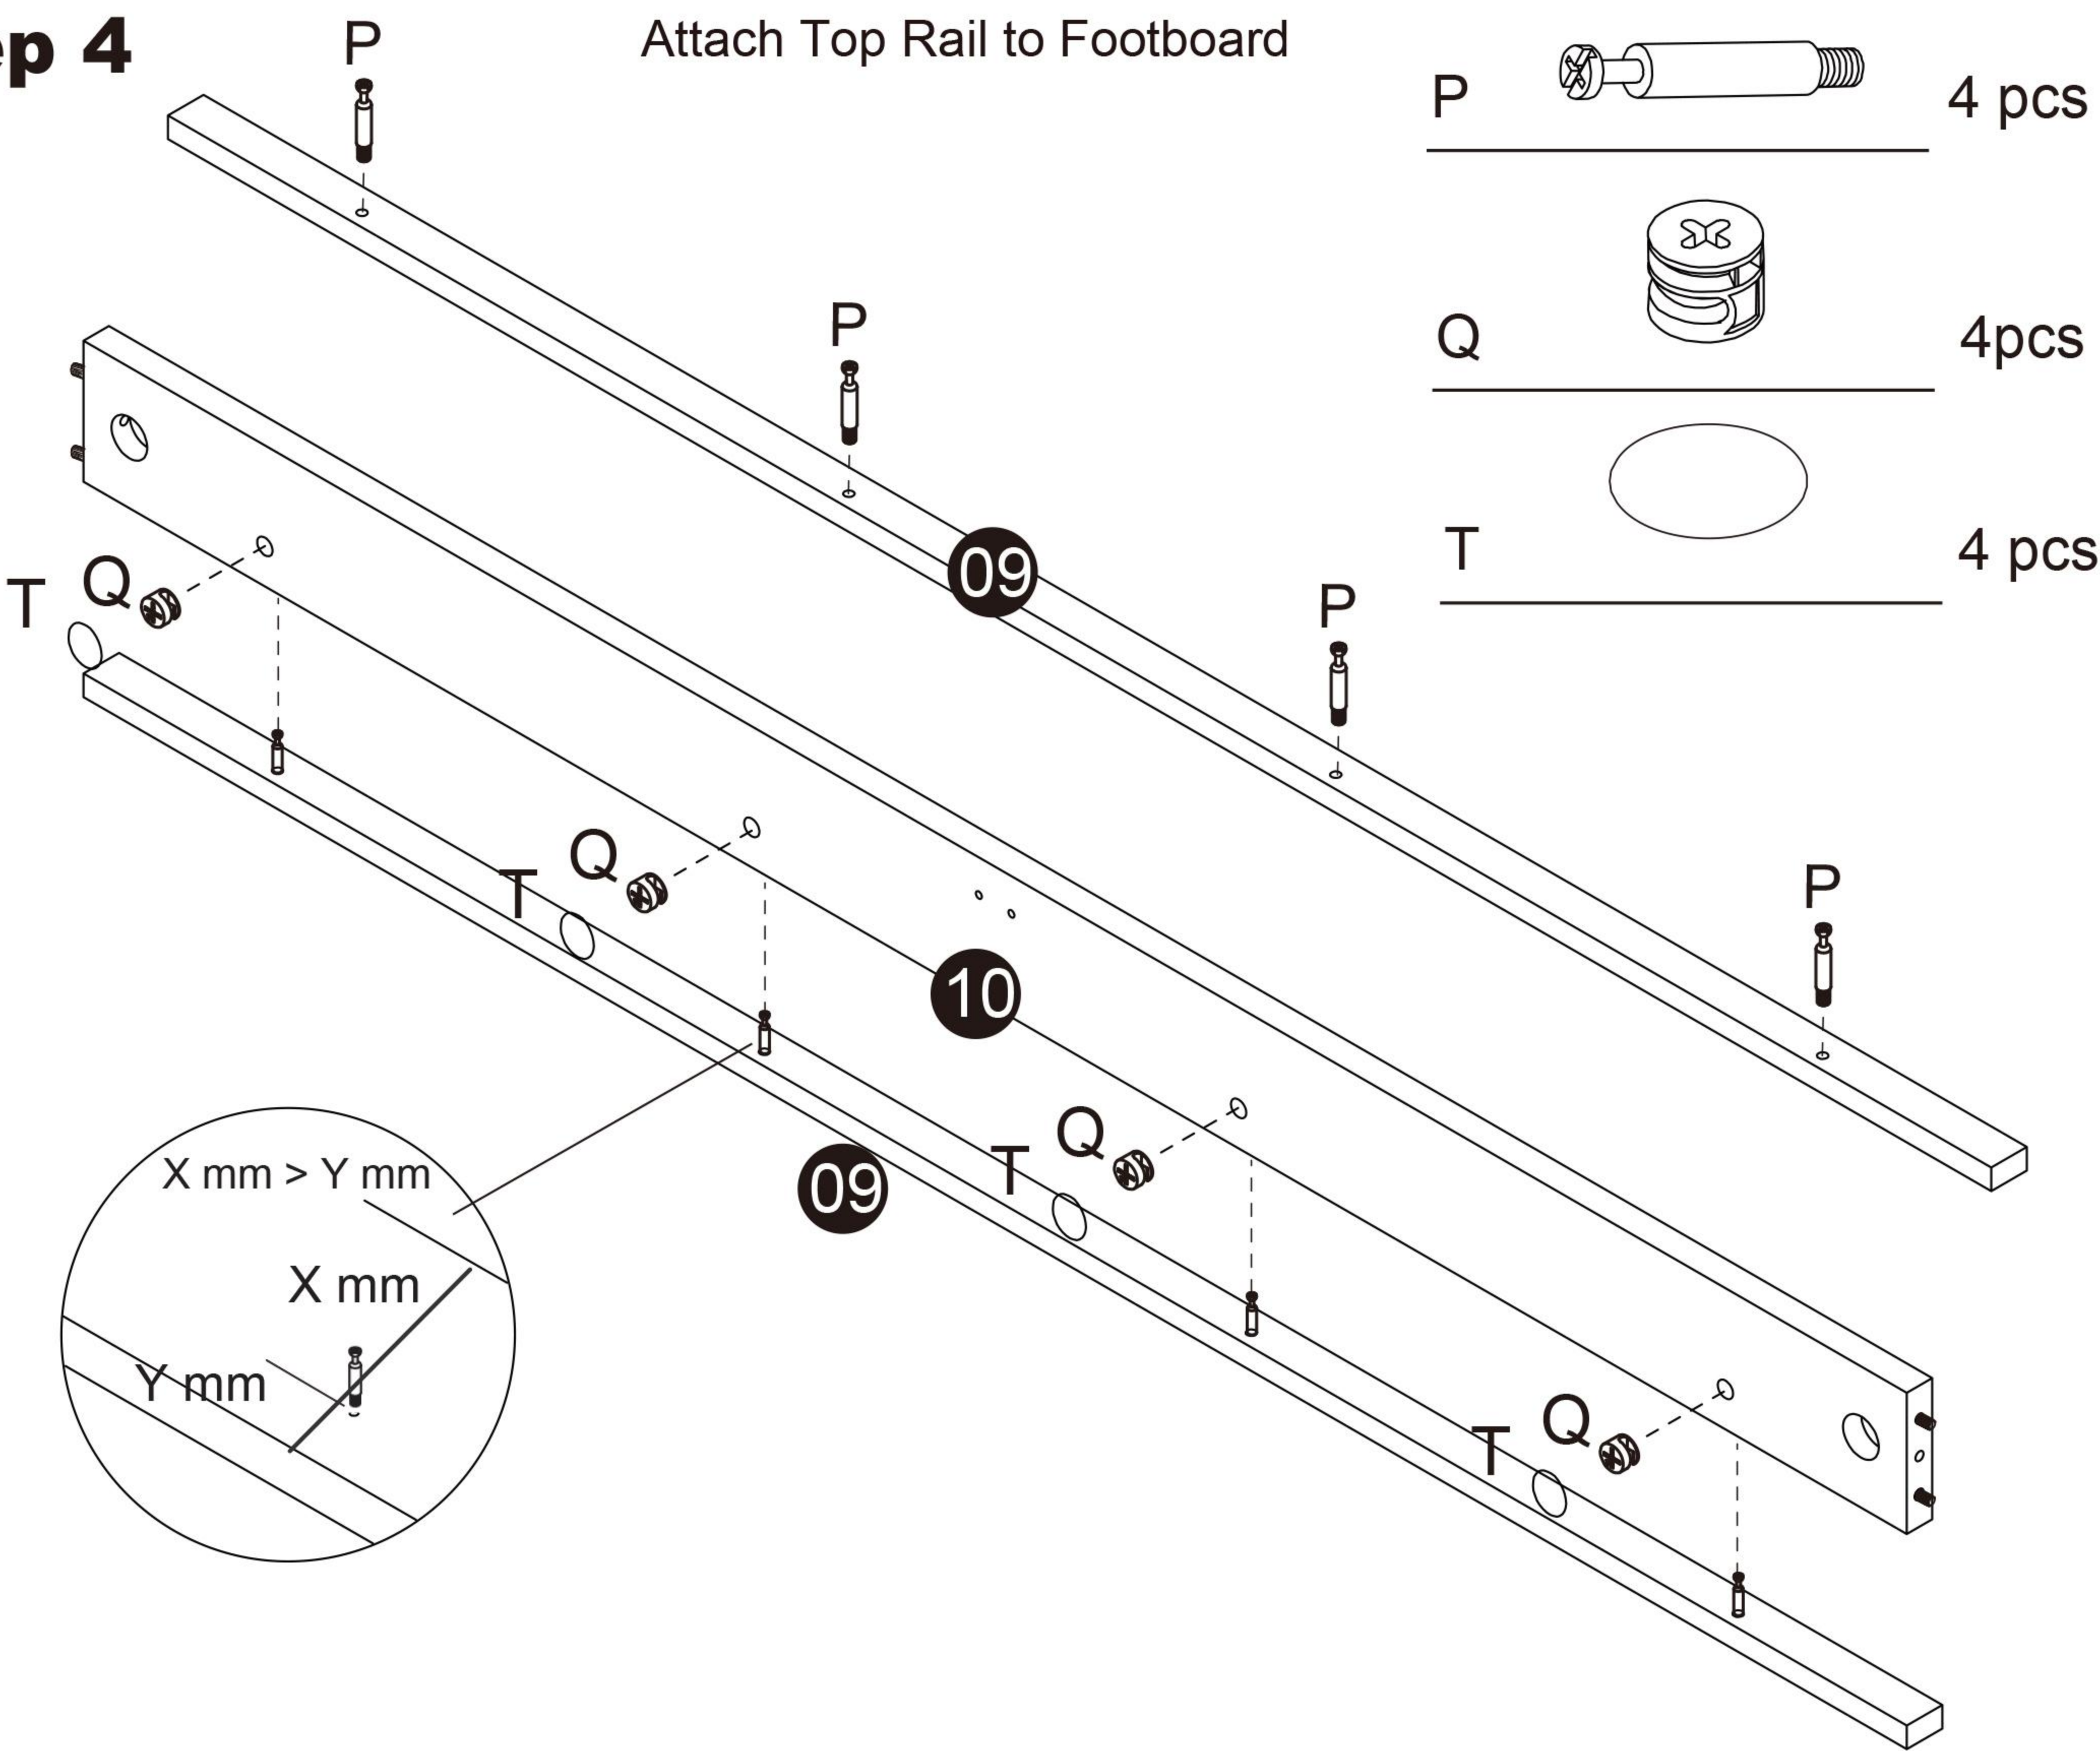


Step 5


Attach Legs to Footboard.

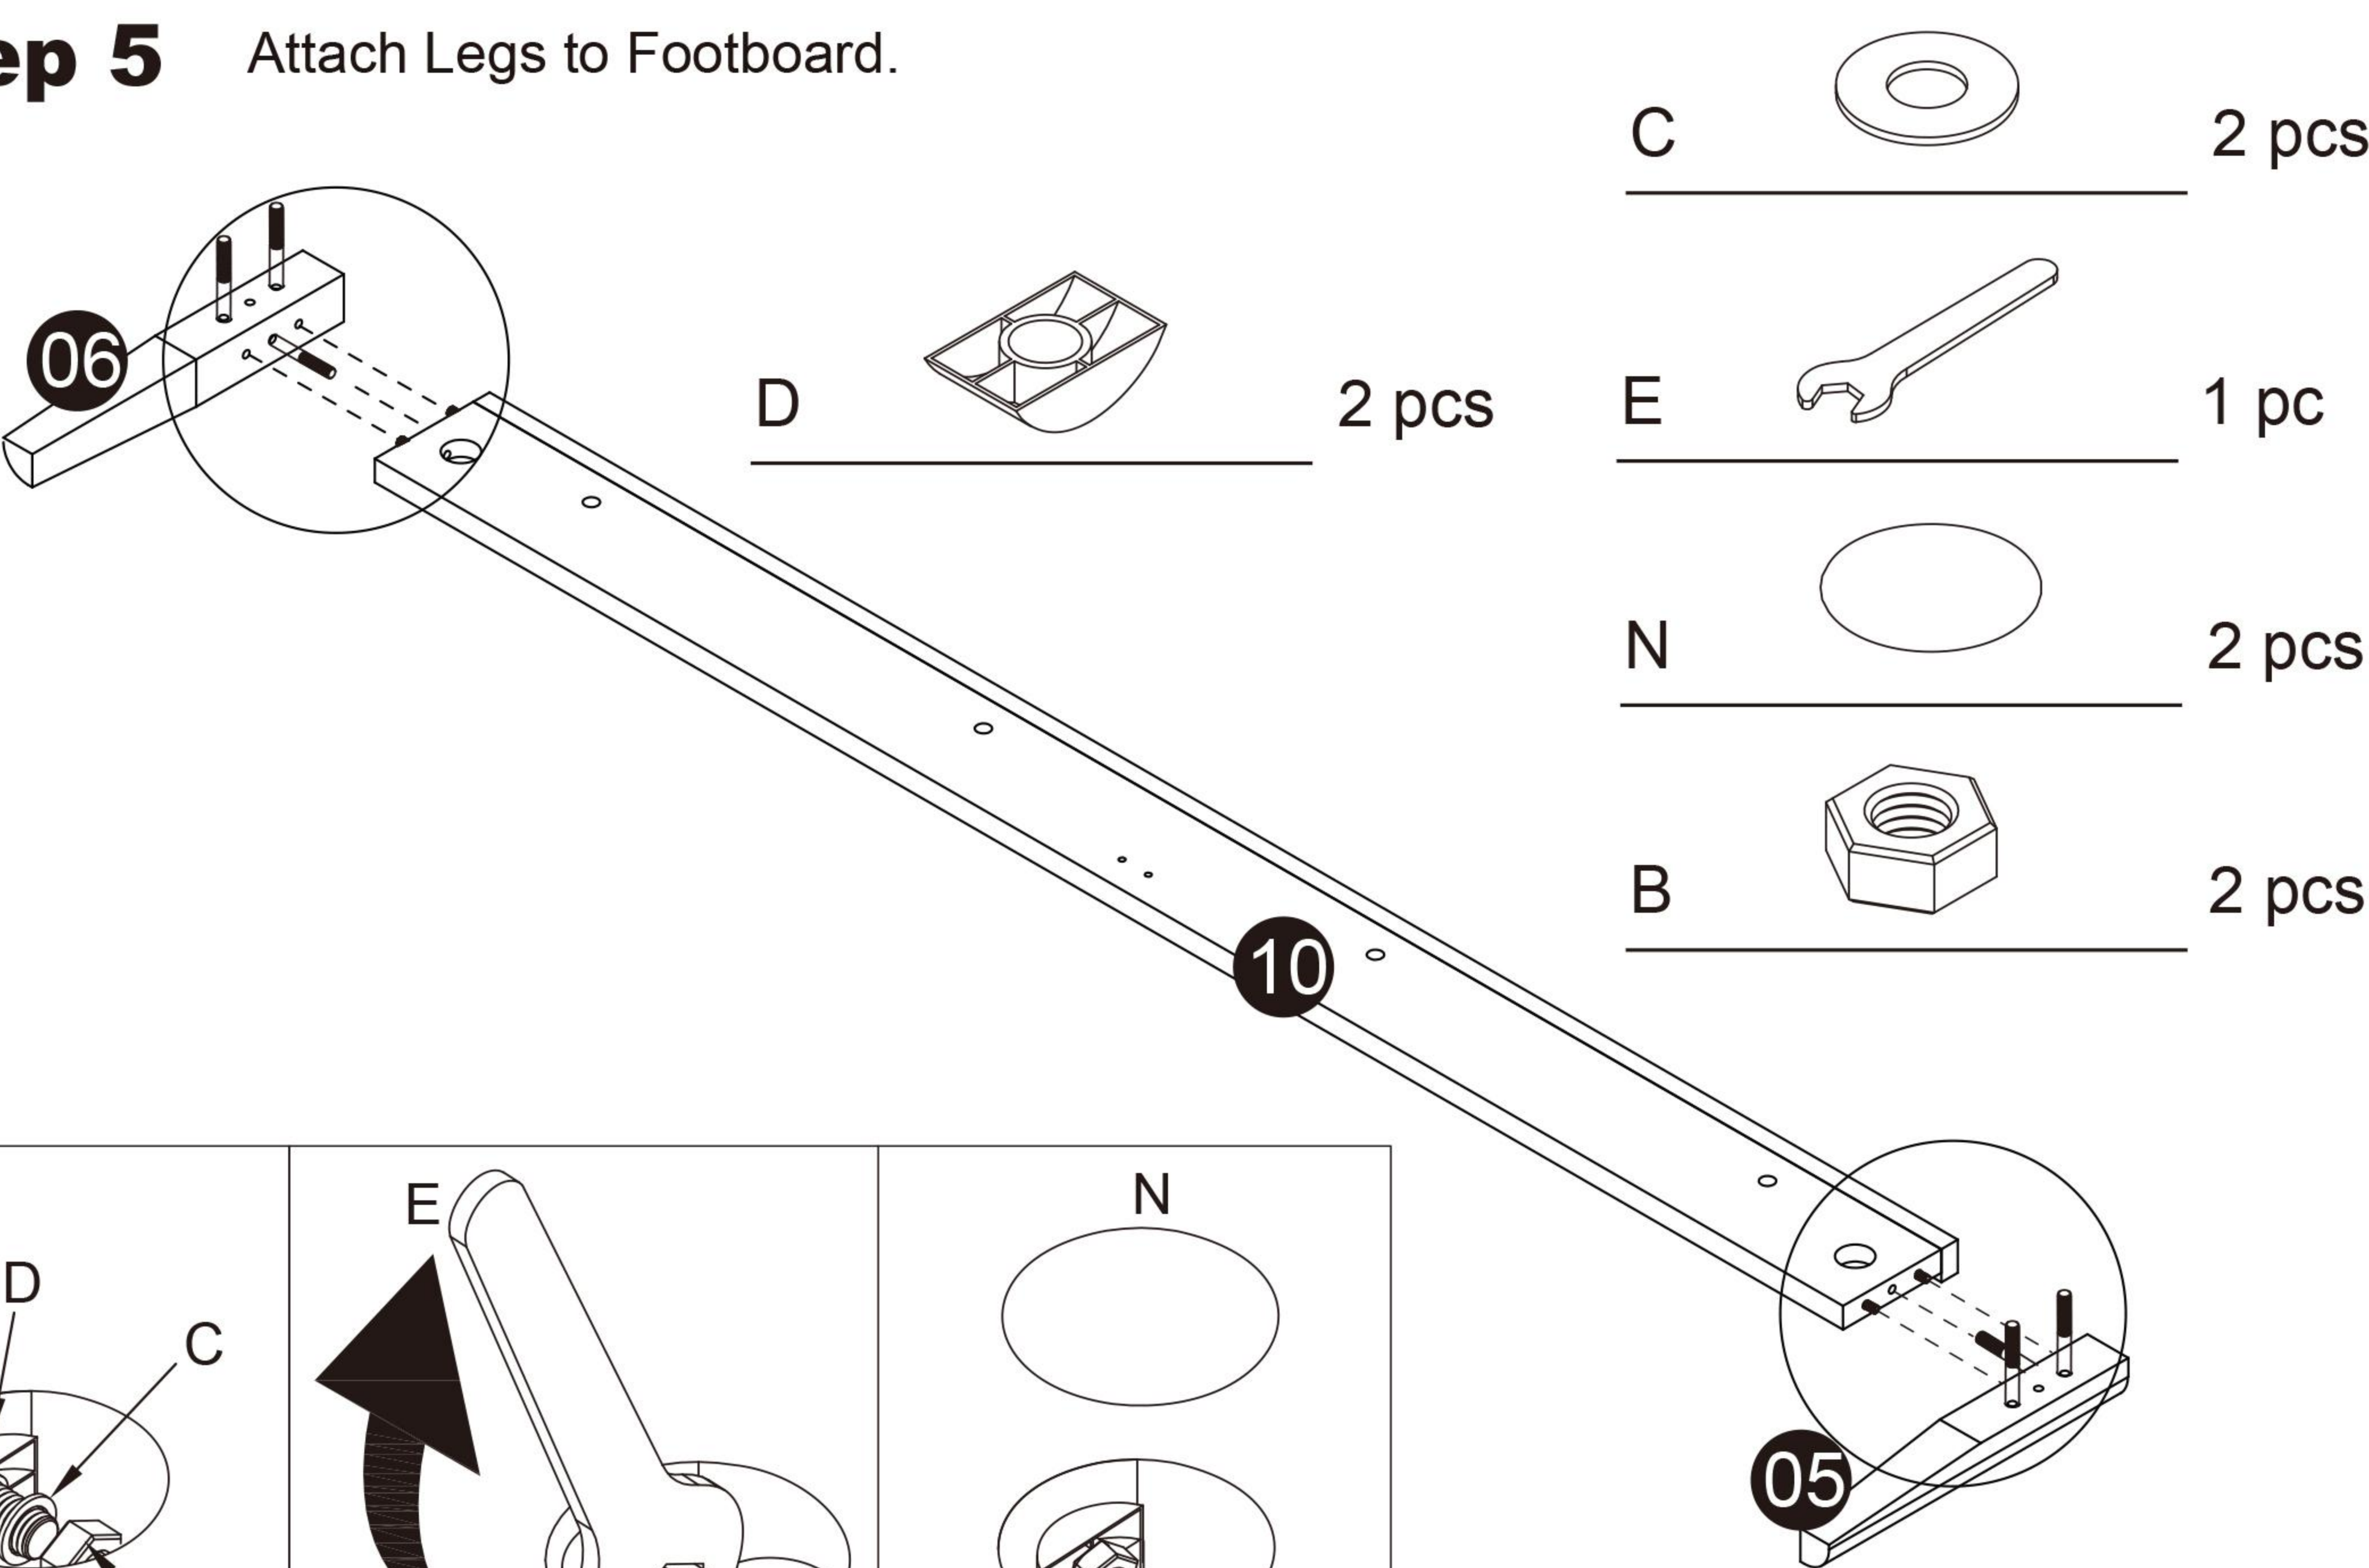





Step 6 Attach Legs to Headboard.


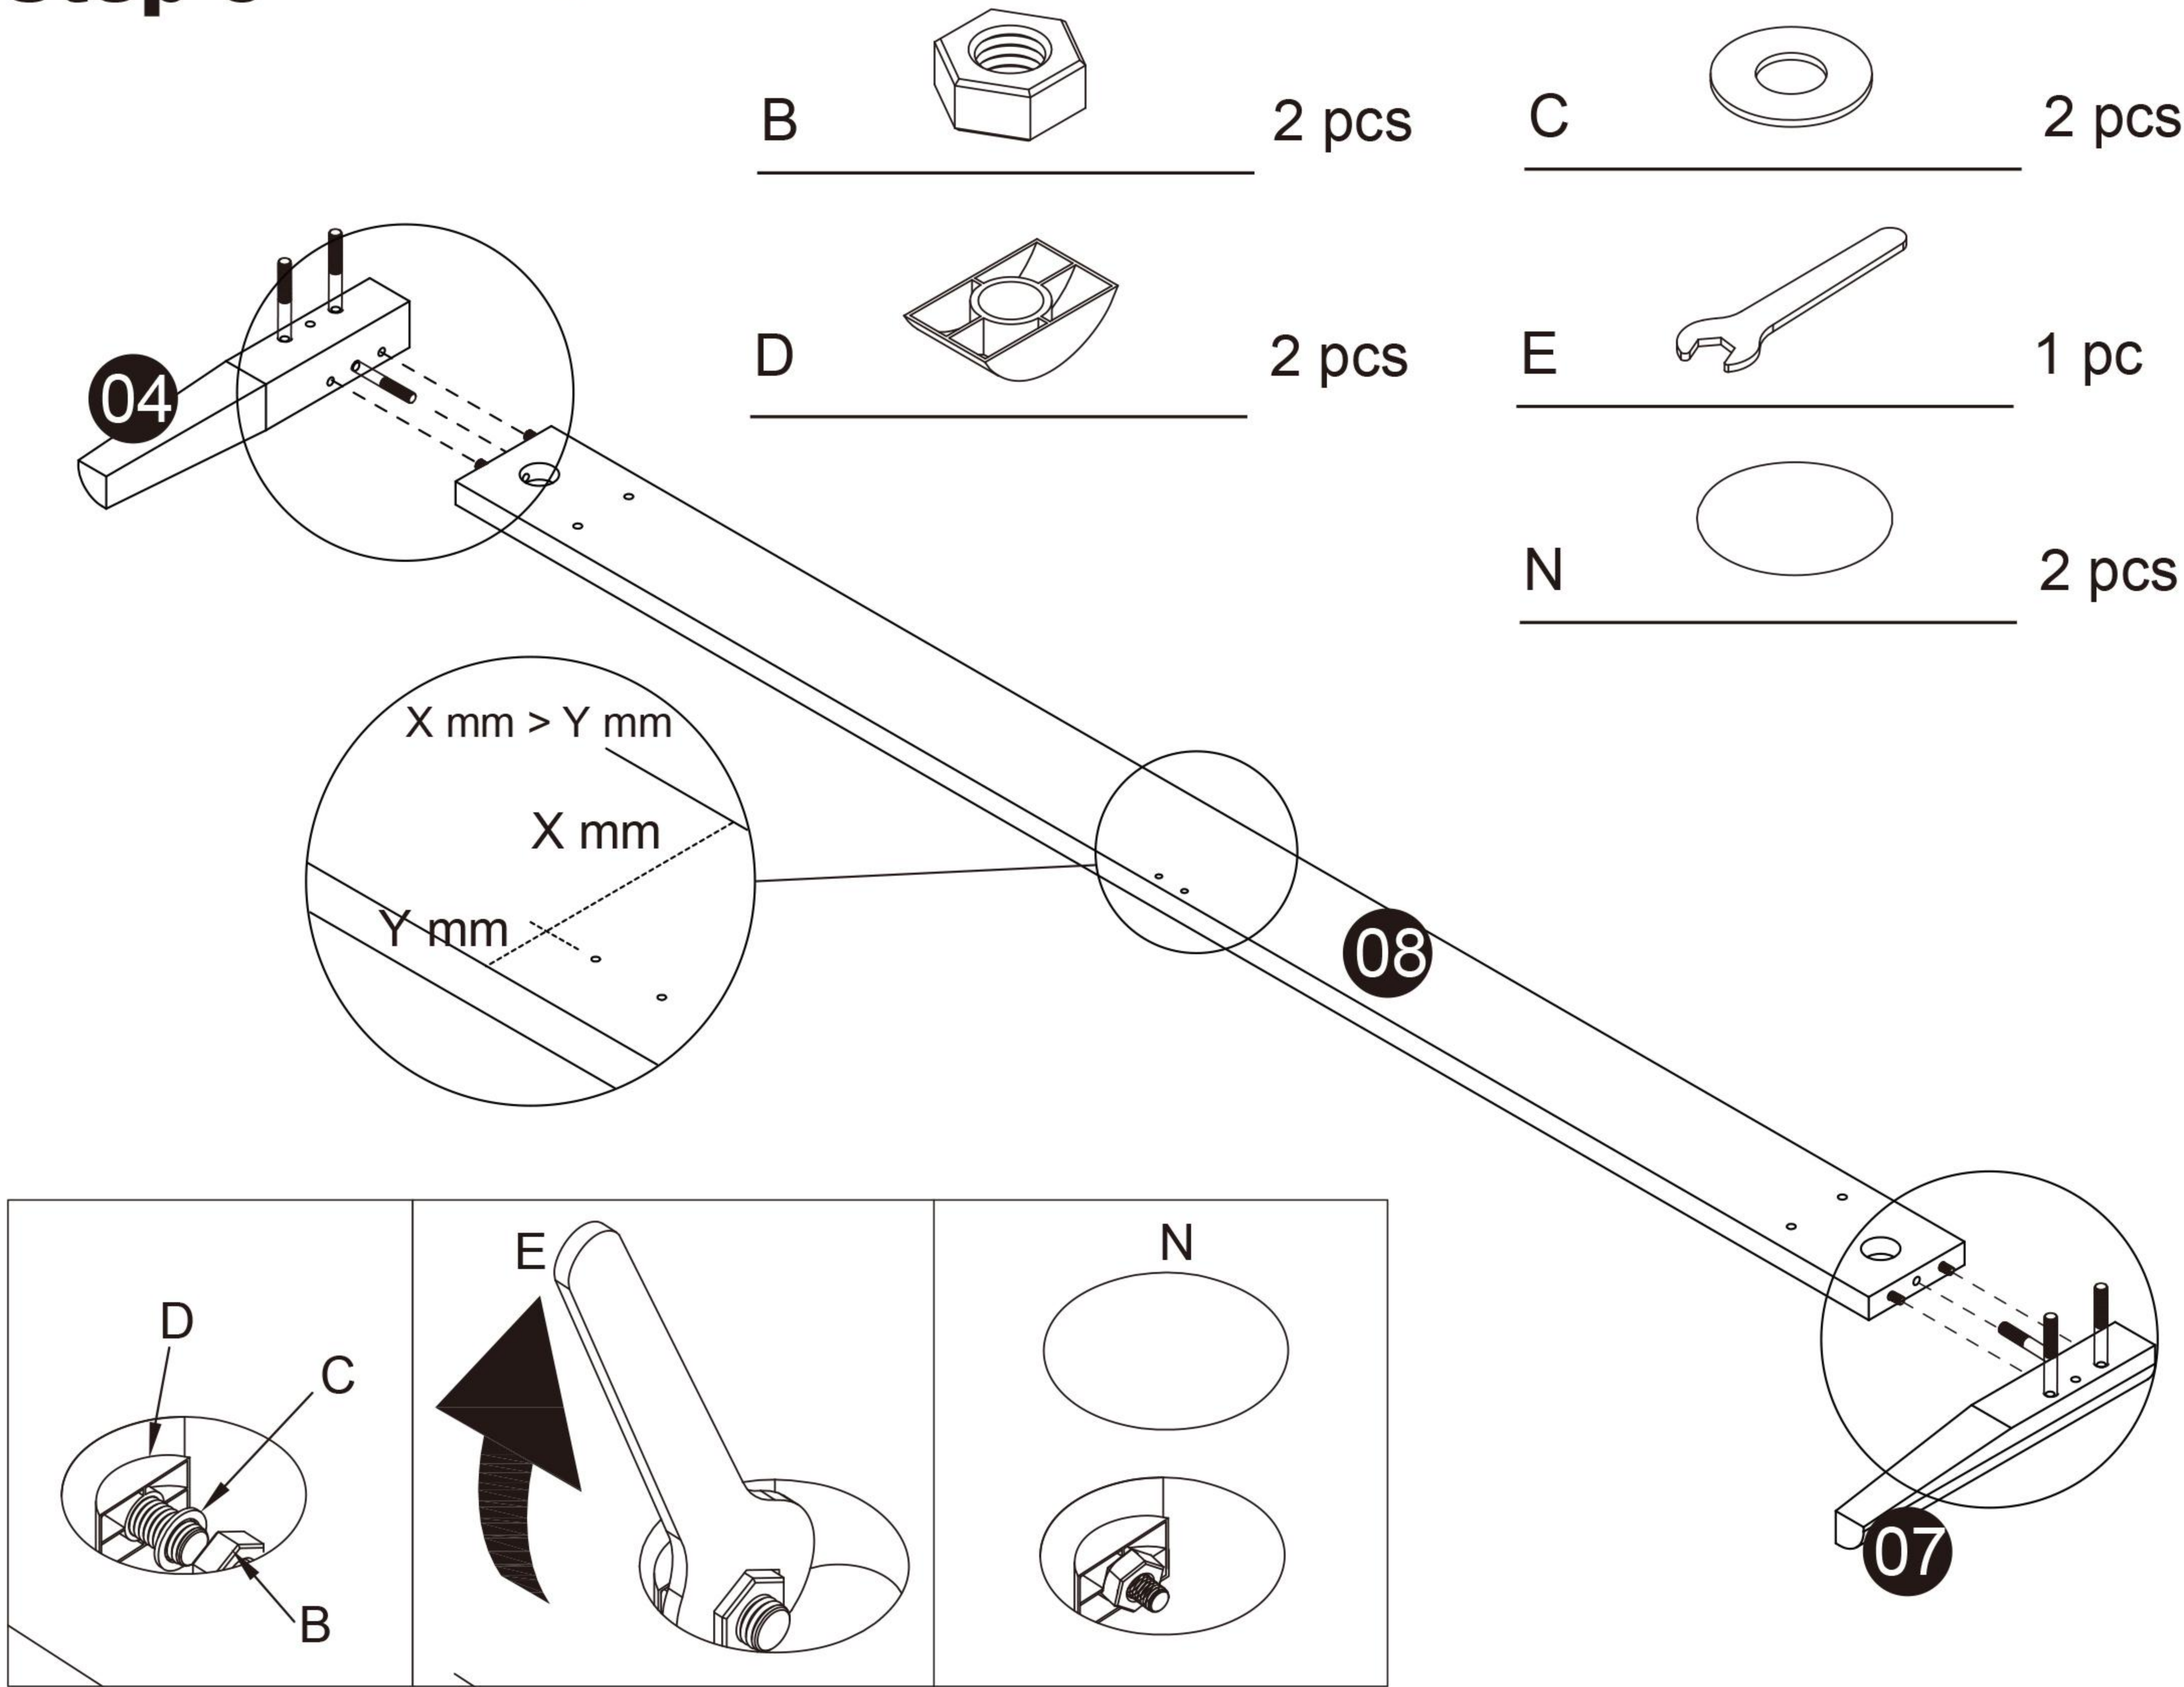


Step 7 Attach Central Support Legs and Metal Bracket to the Central Support Rails.

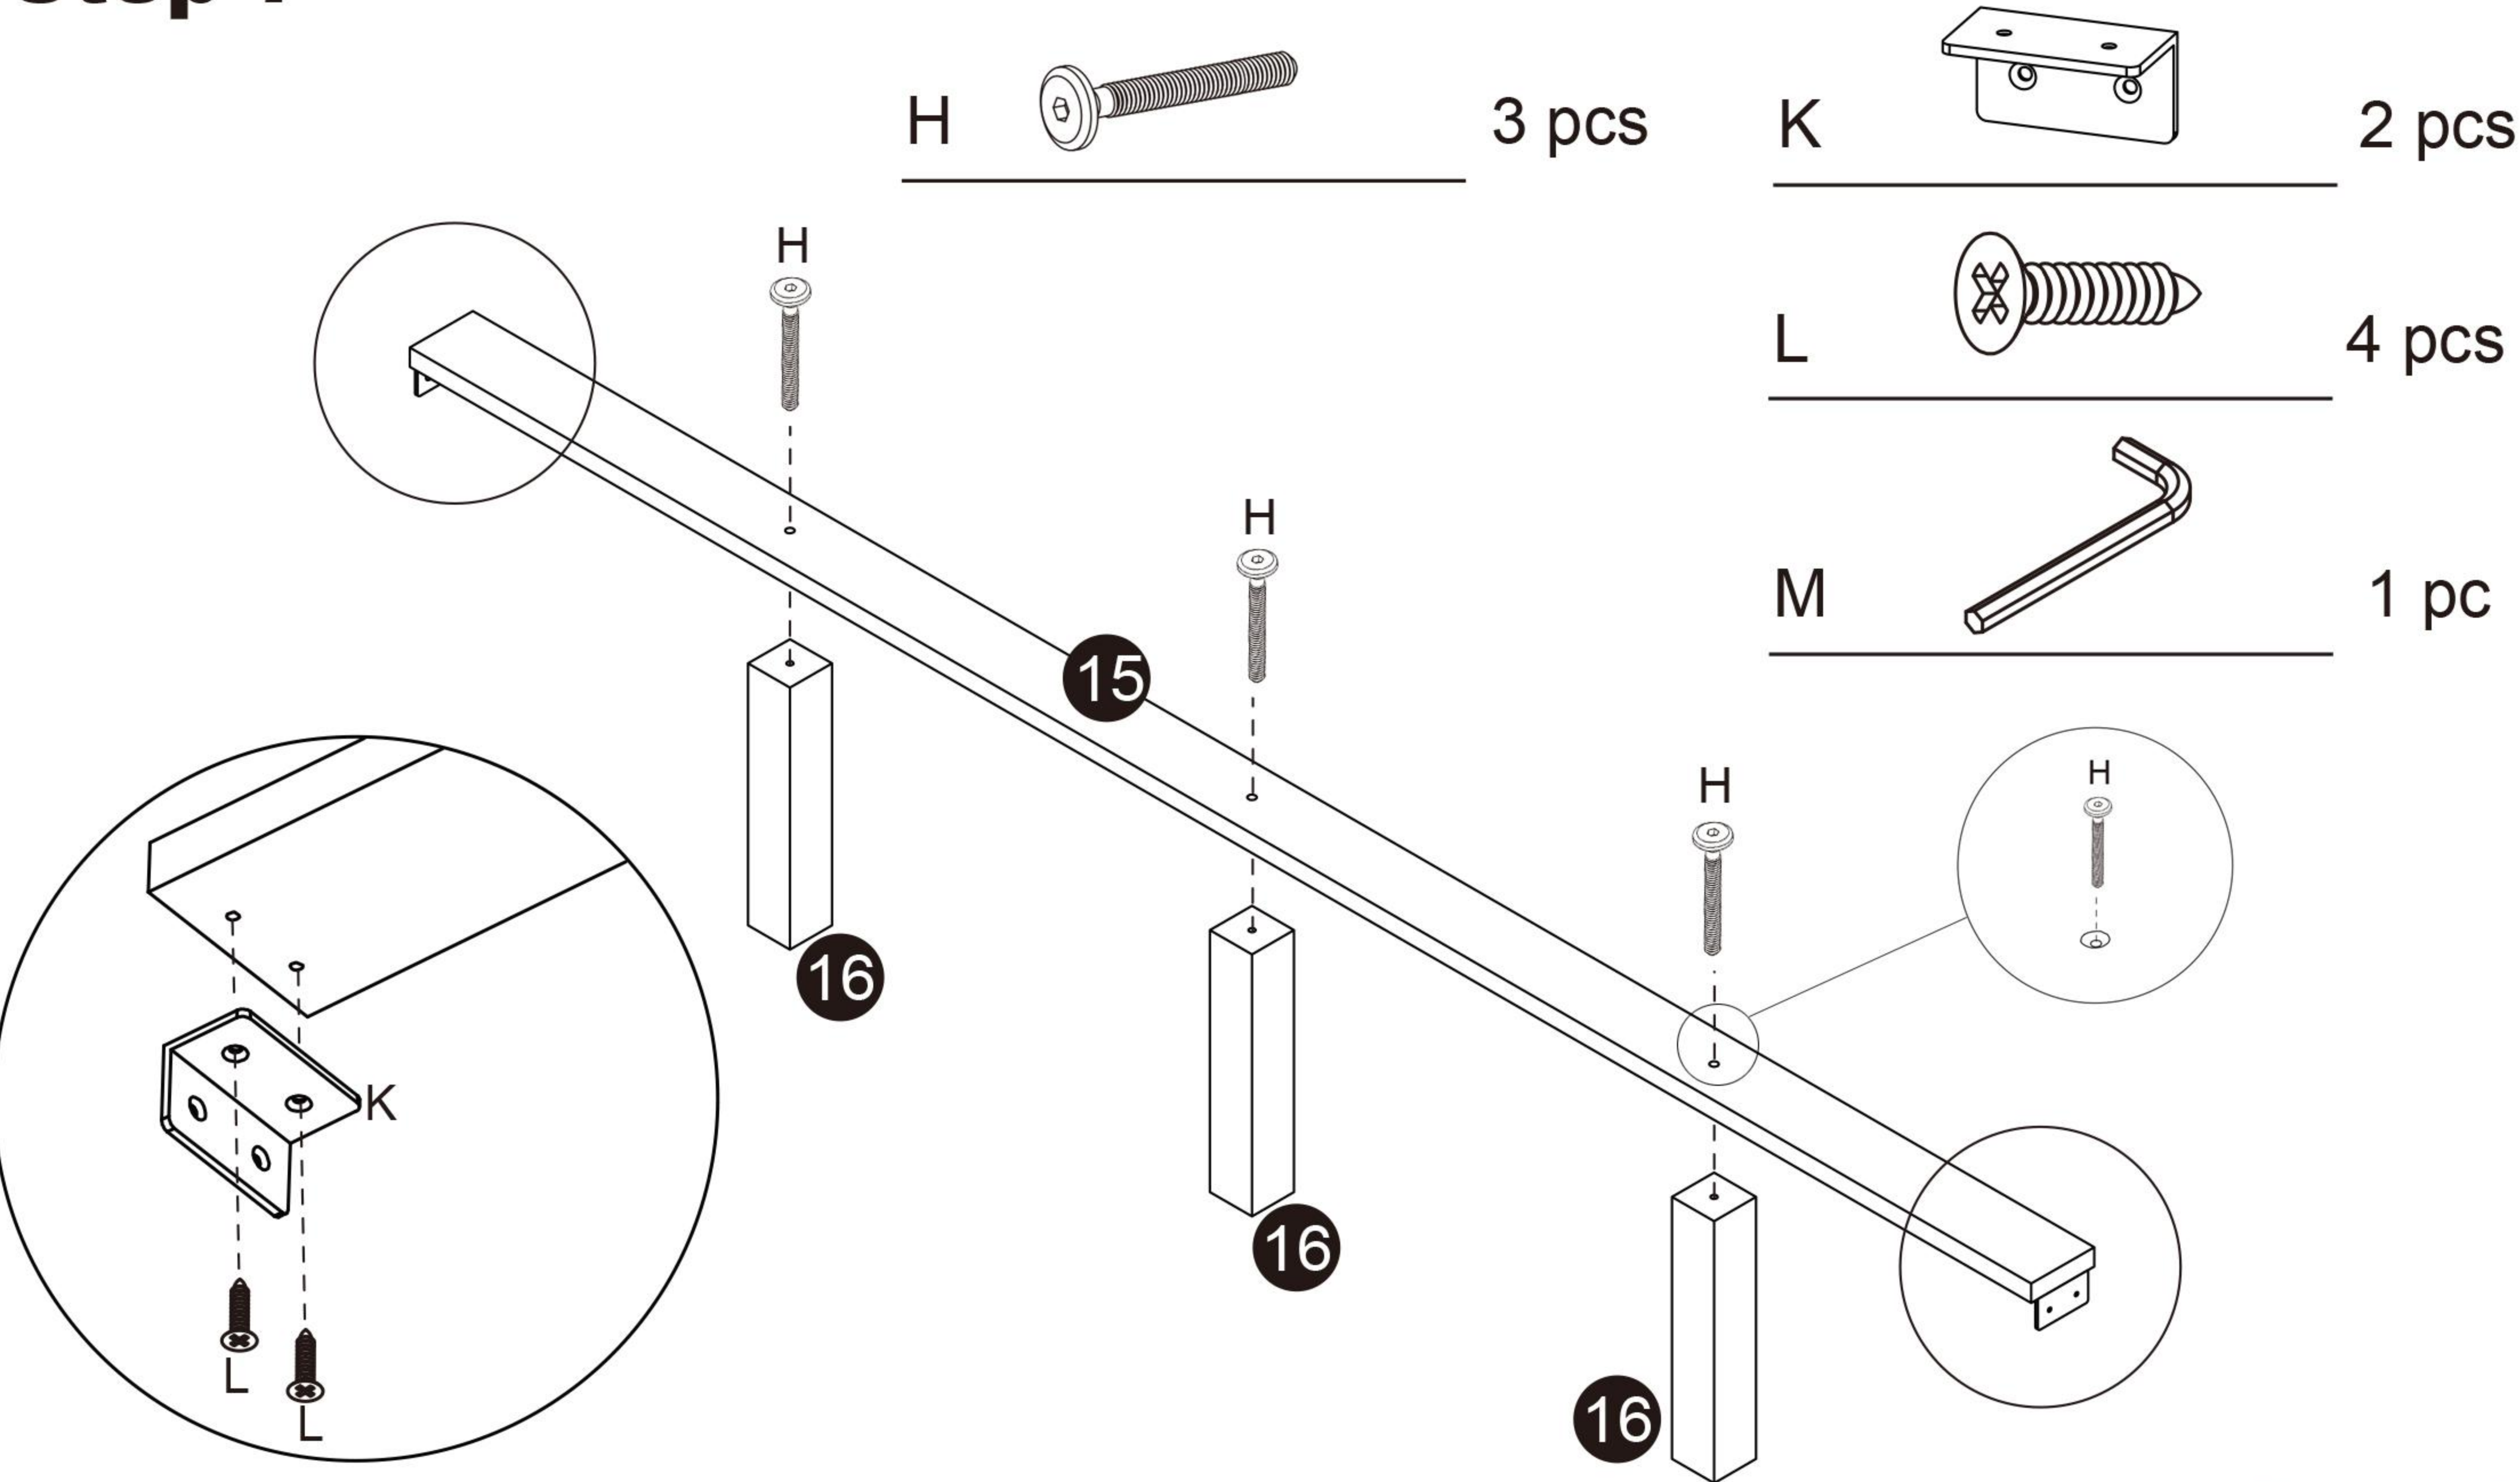


Step 8 Attach Side Rail to the Headboard and Footboard.

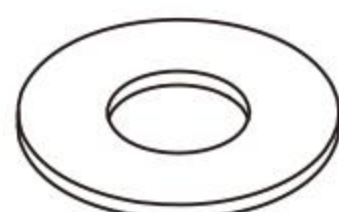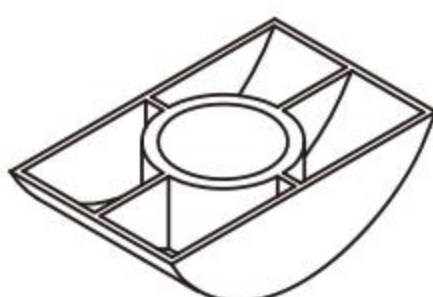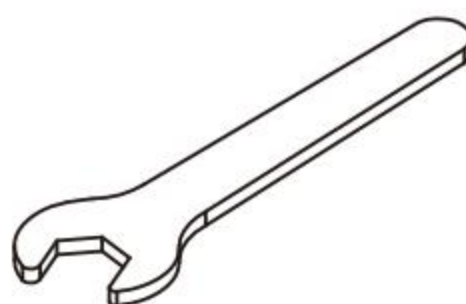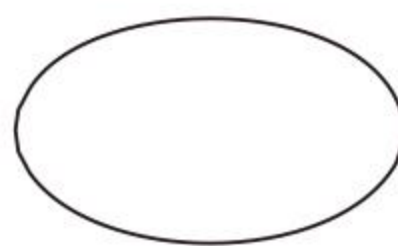	B		8 pcs	C		8 pcs		
D		8 pcs	E		1 pc	N		8 pcs

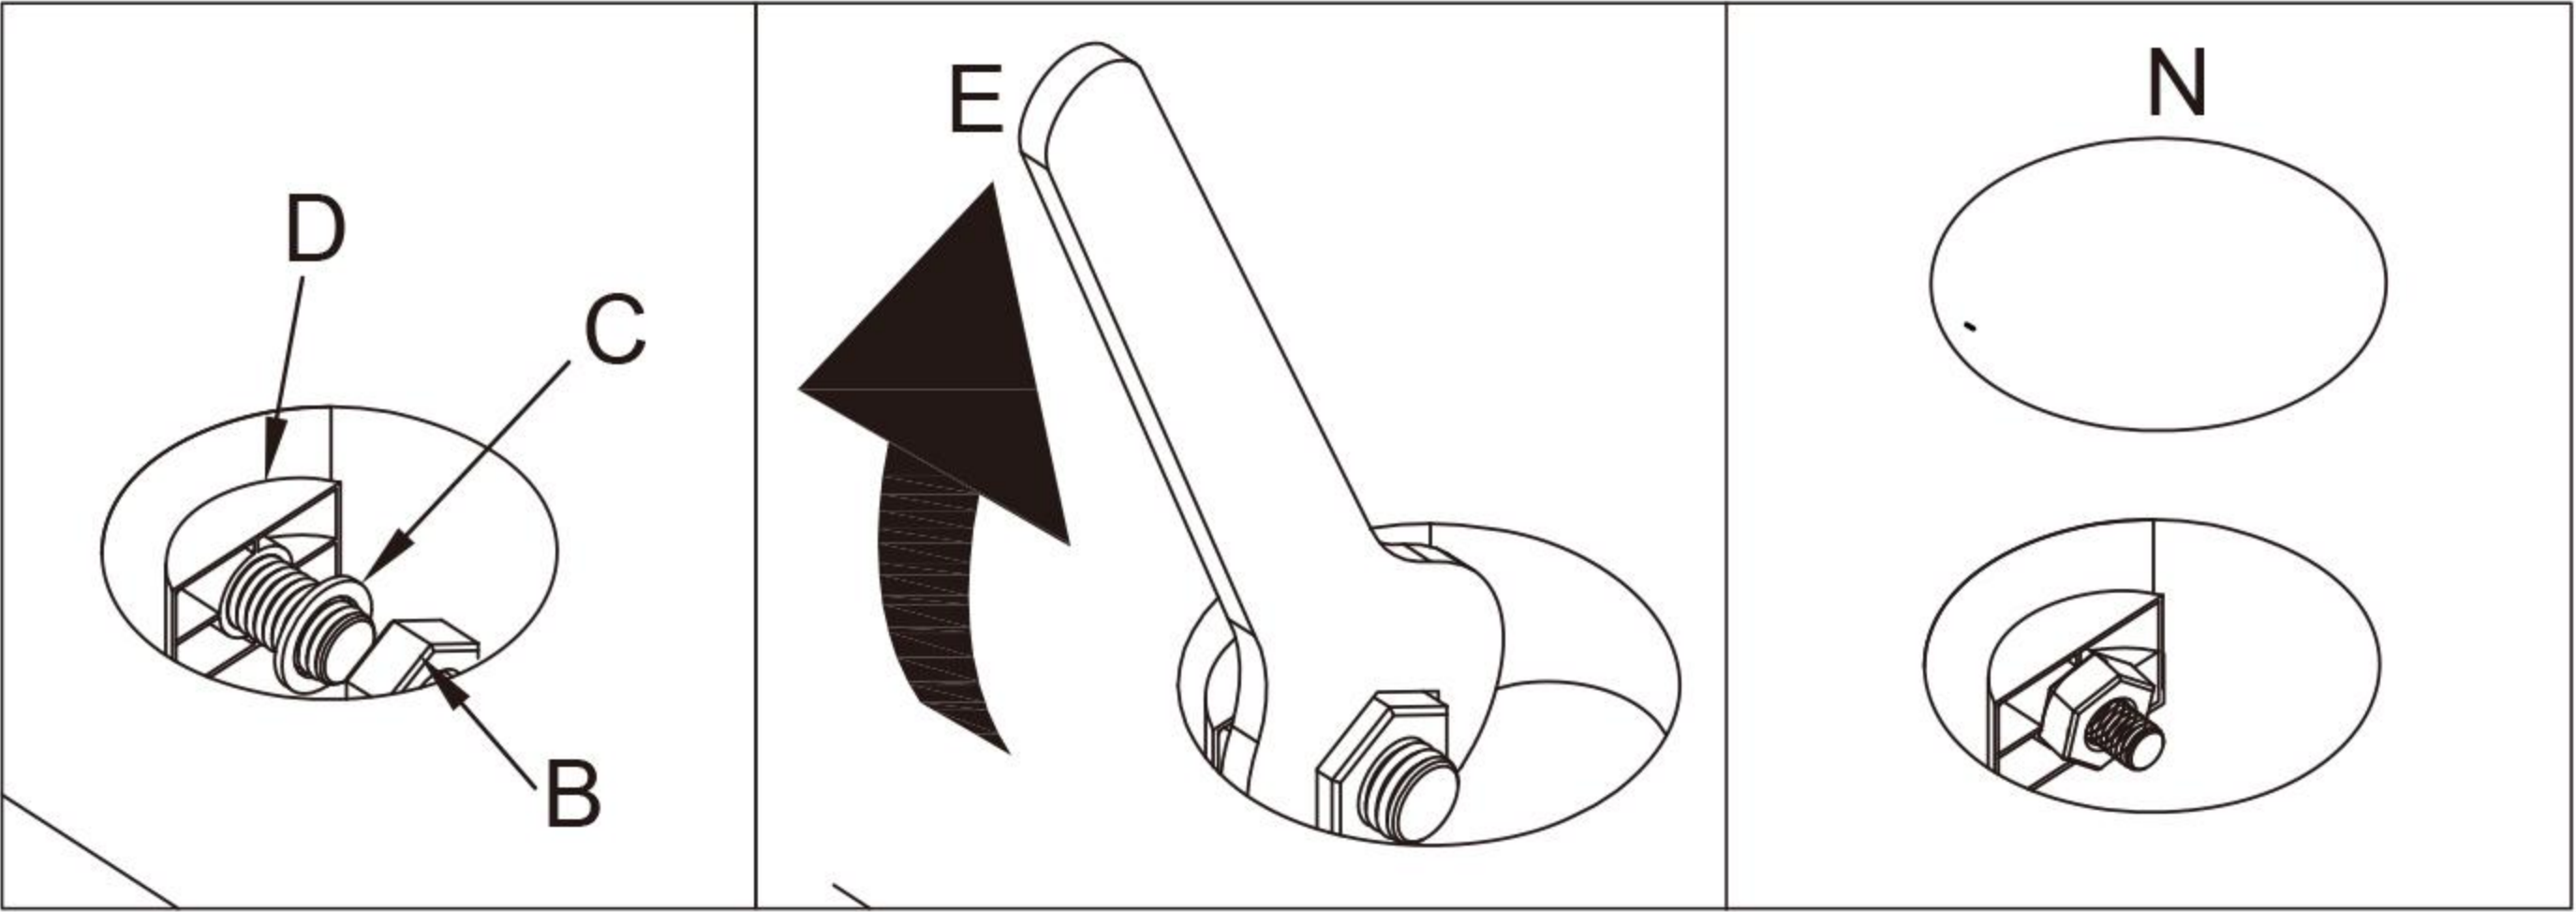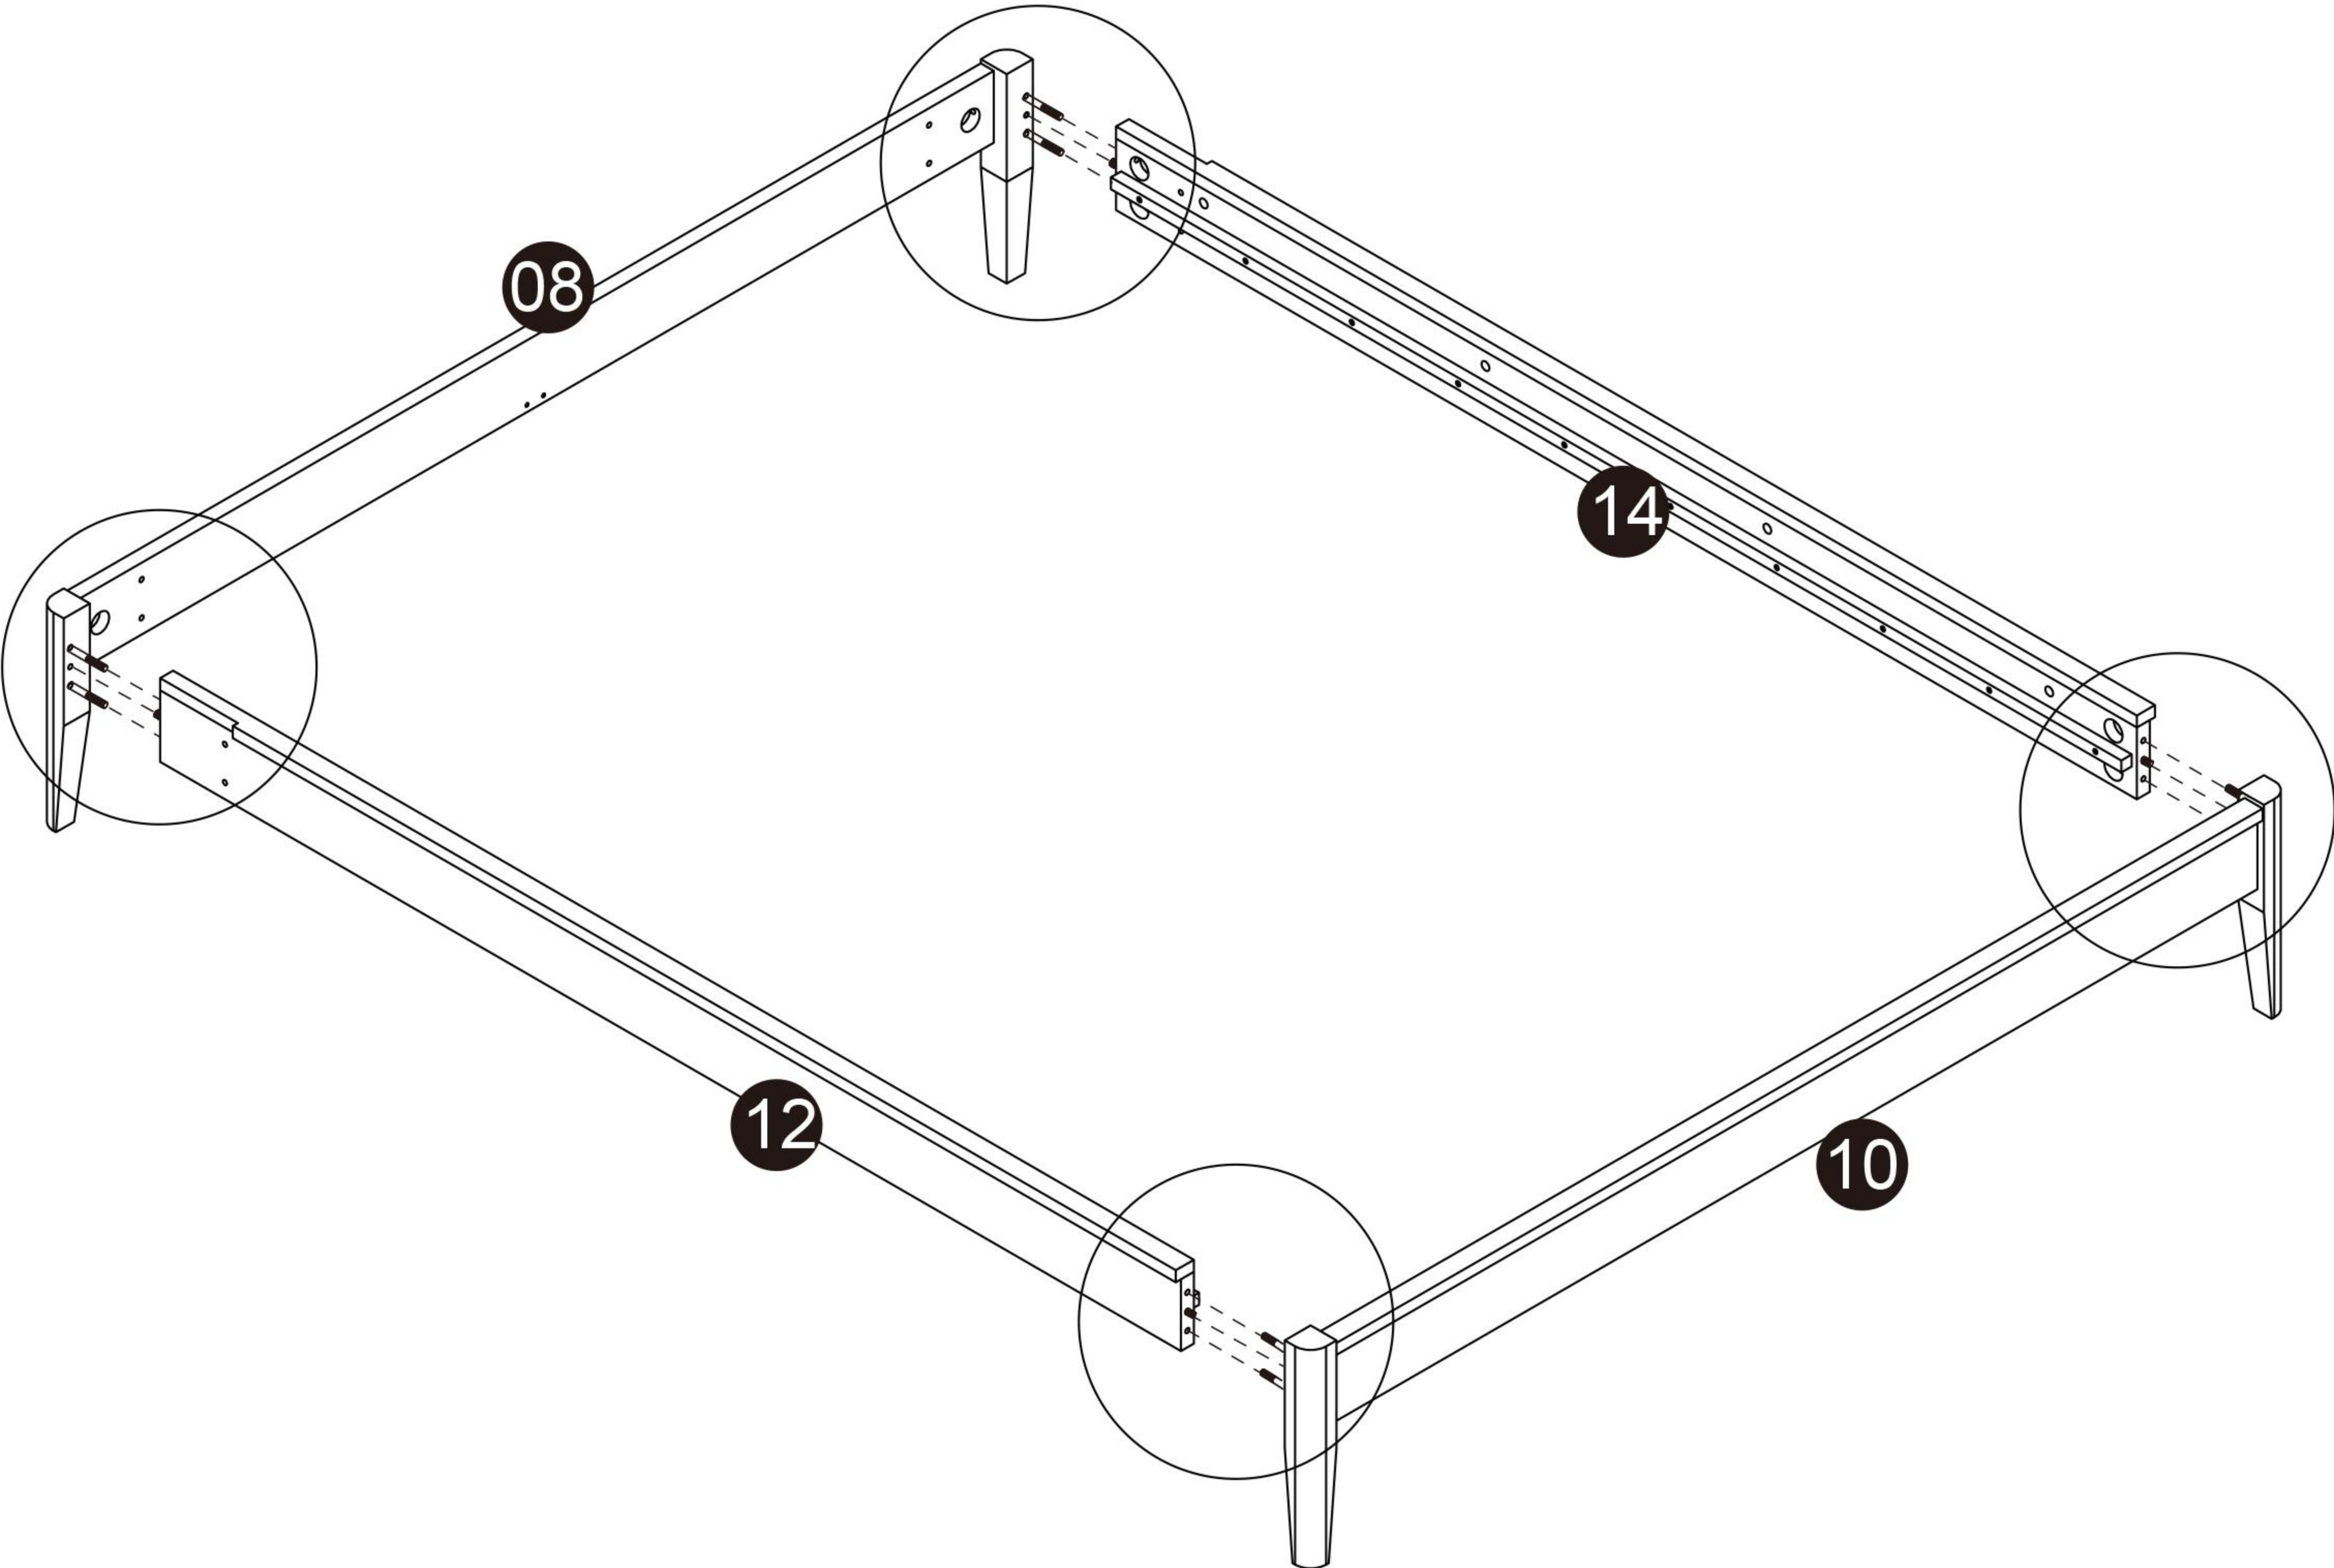


Step 9 Attach the Central Support Rail.

L  4 pcs

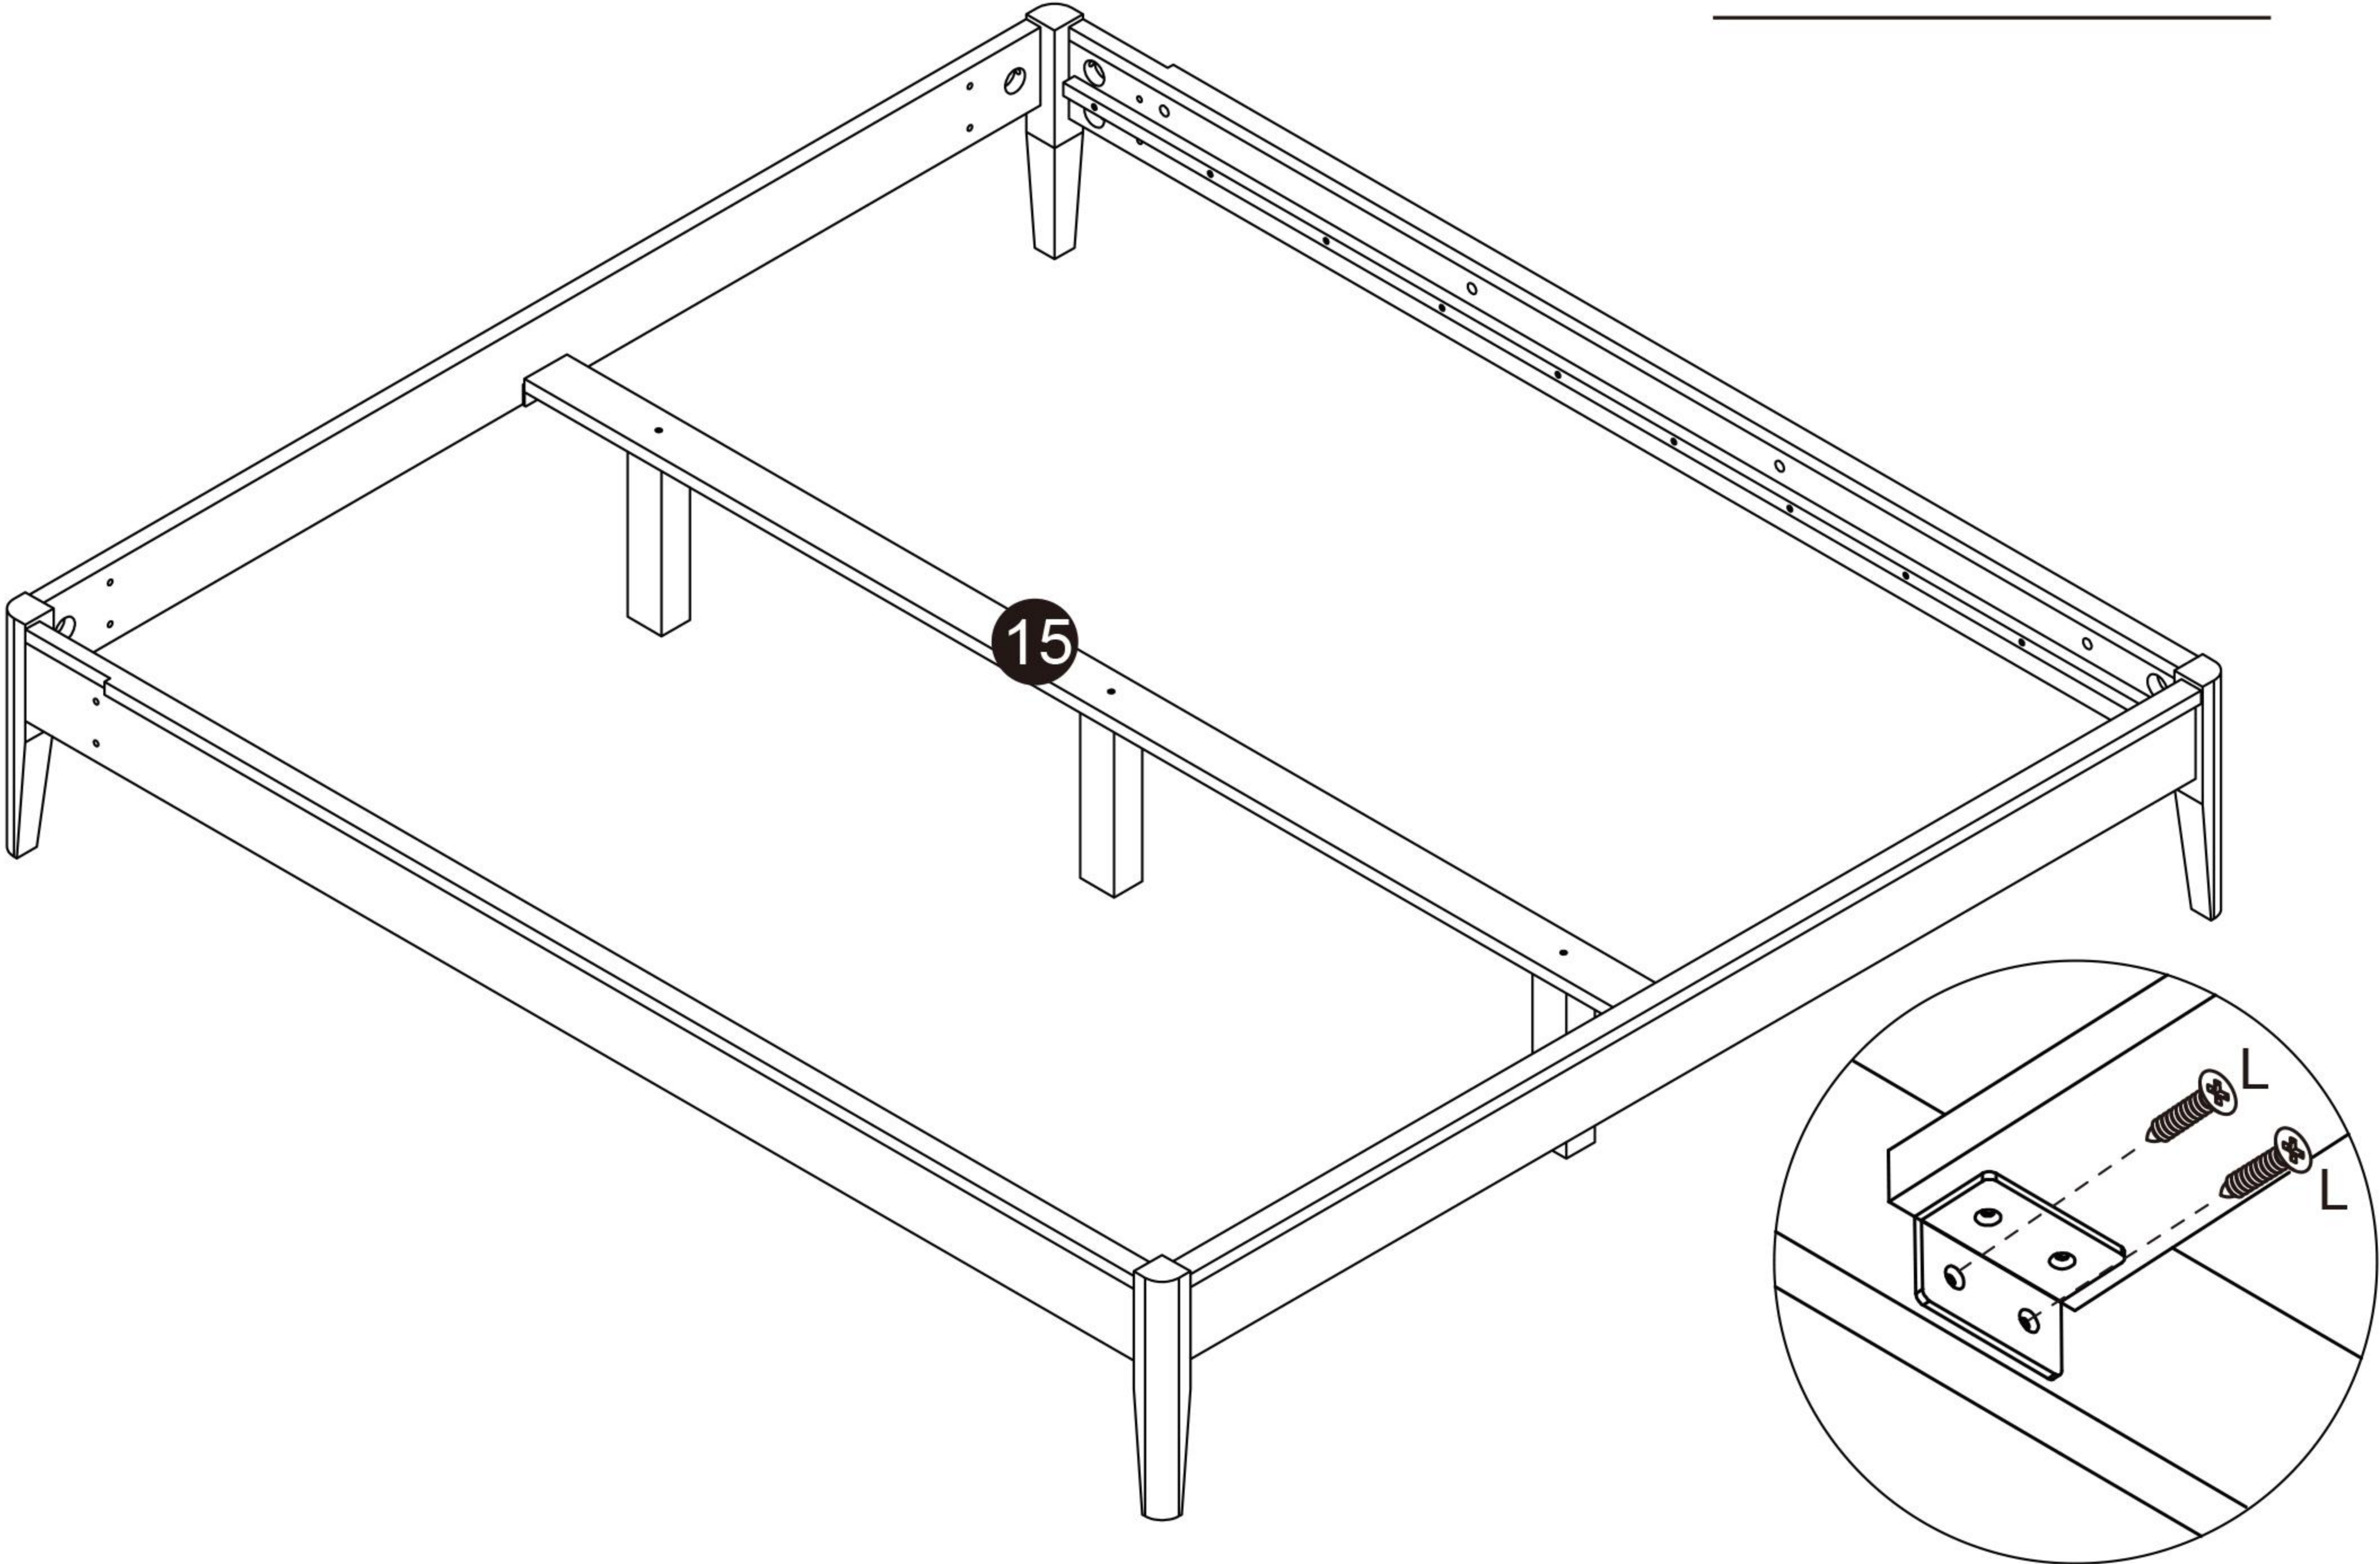


Step 10 Attach Wings to the Backpanel.

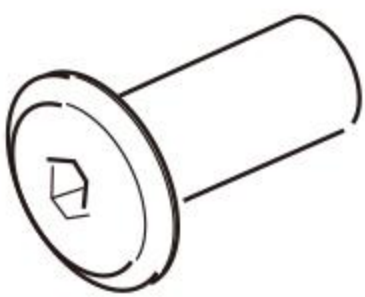
R  4 pcs

S  4 pcs


M  2 pcs

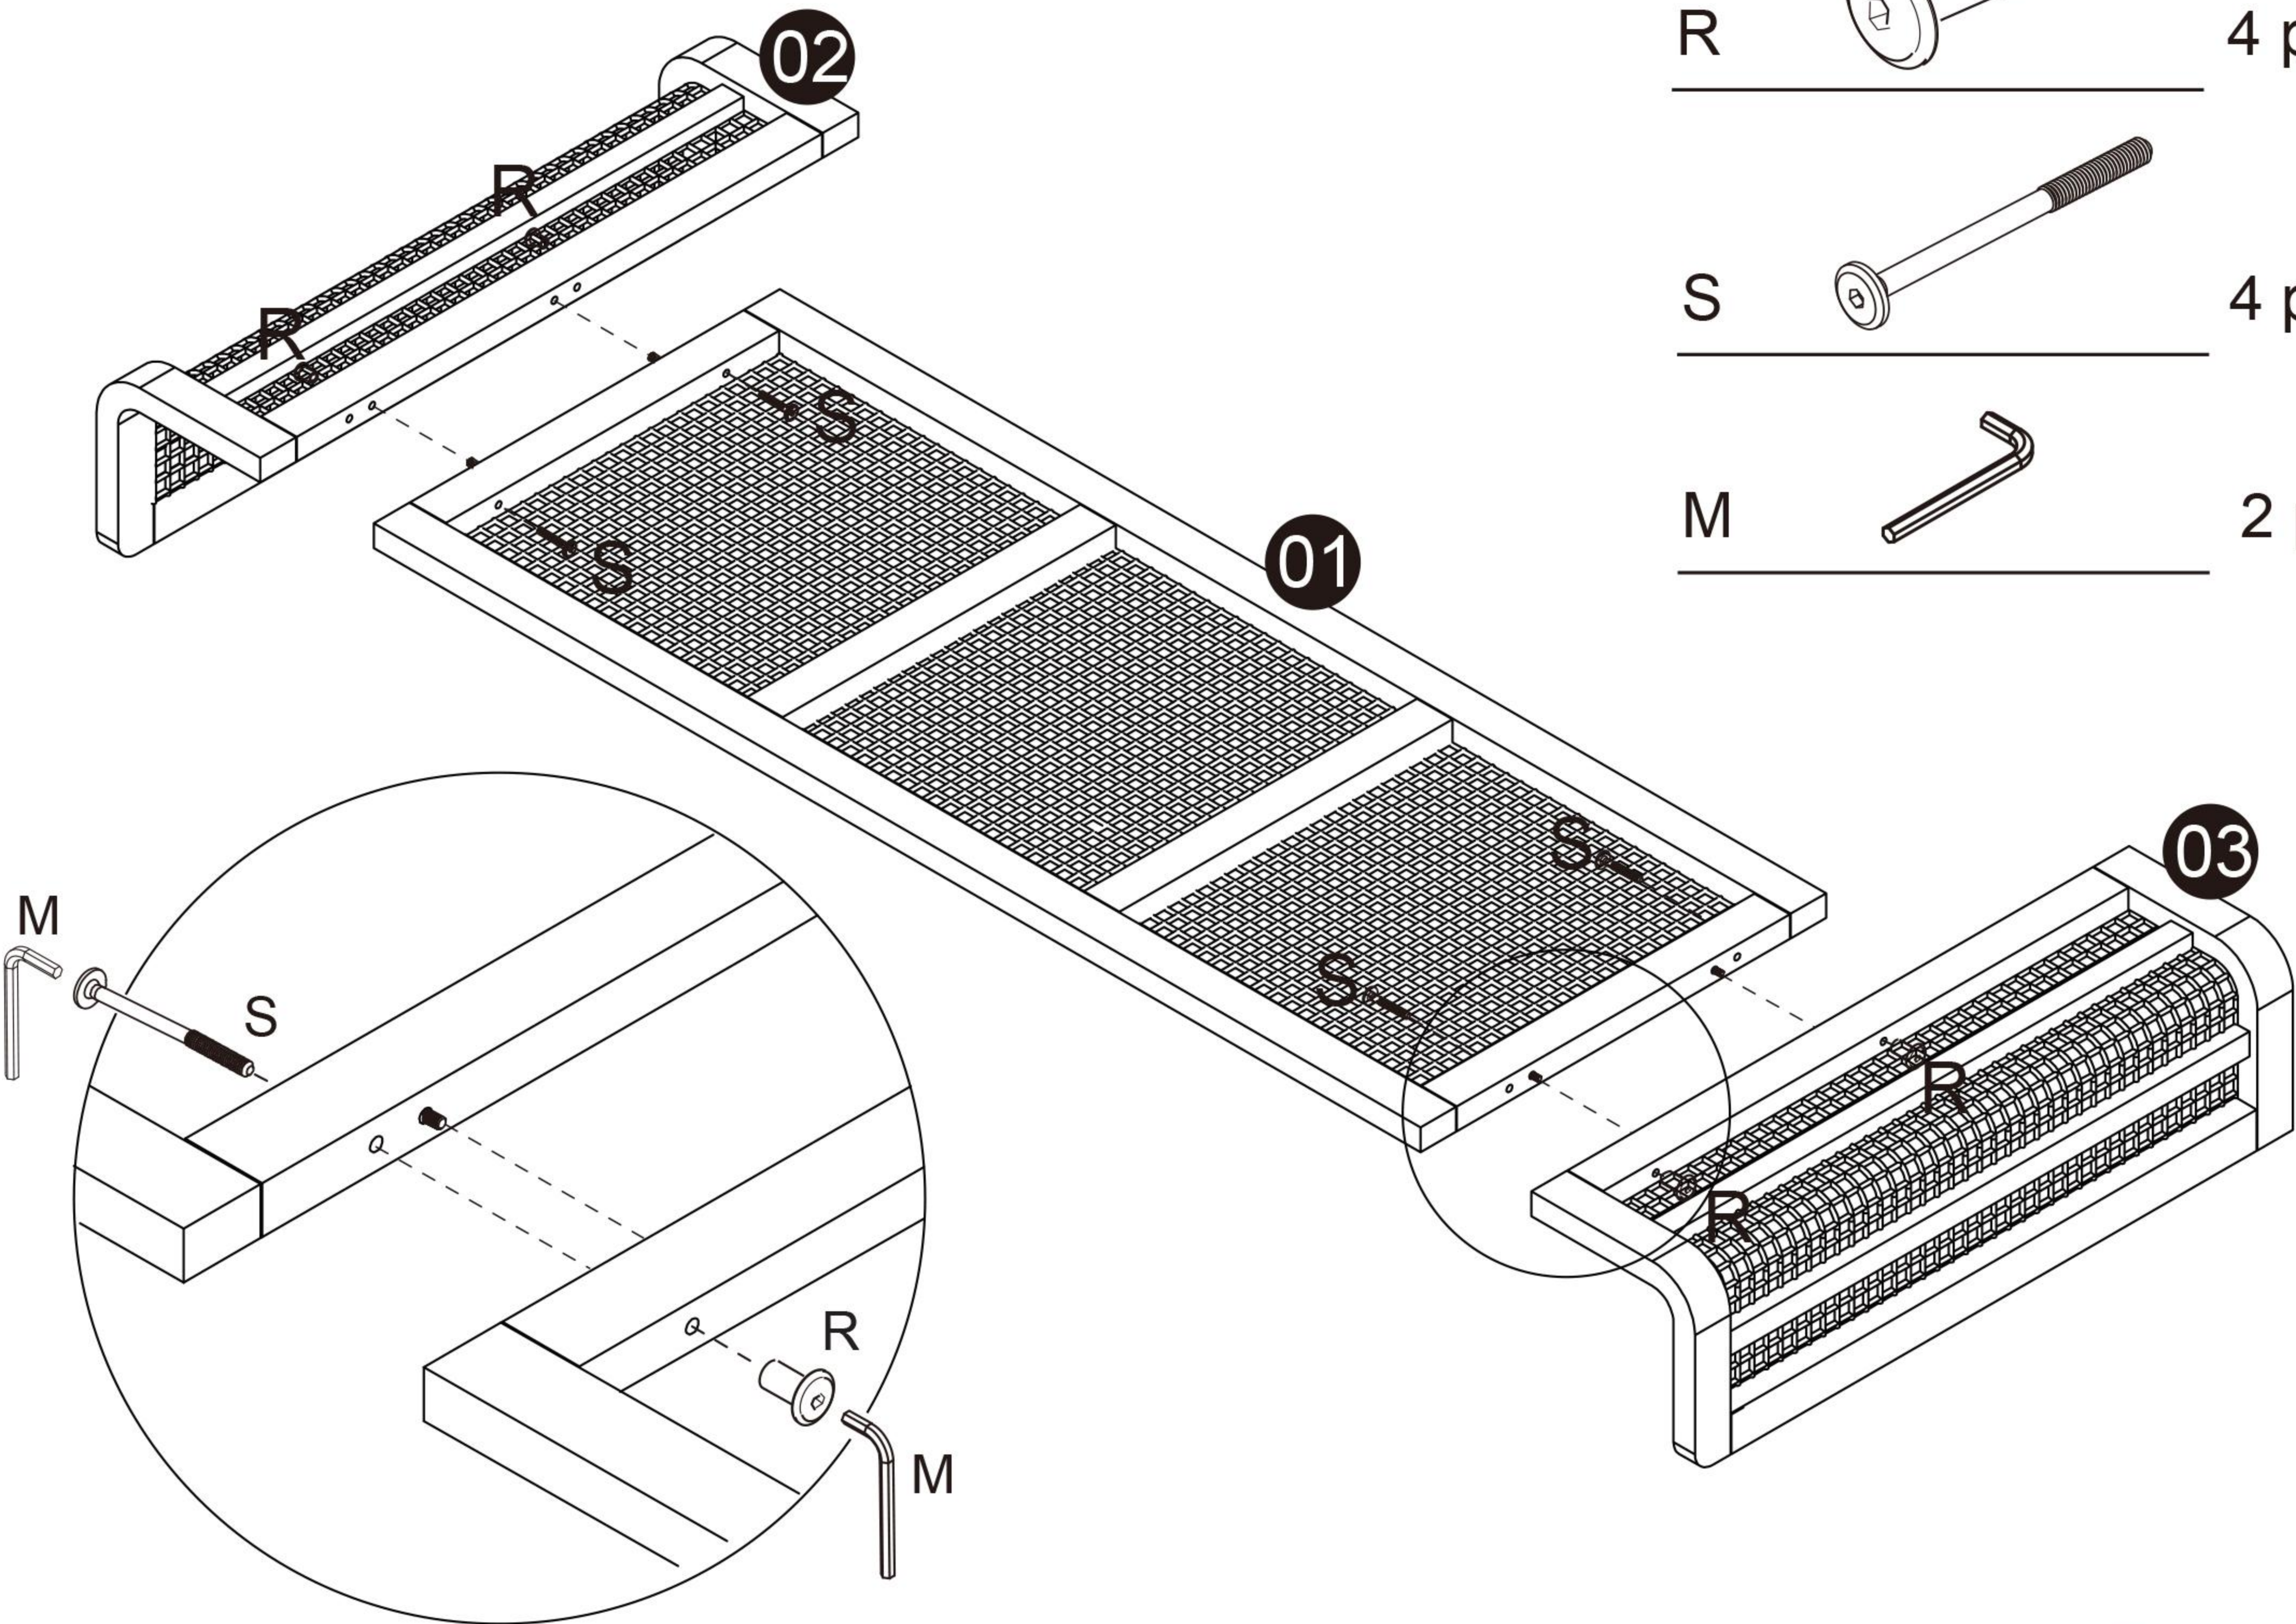


Step 11 Attach Backpanel to Bed.

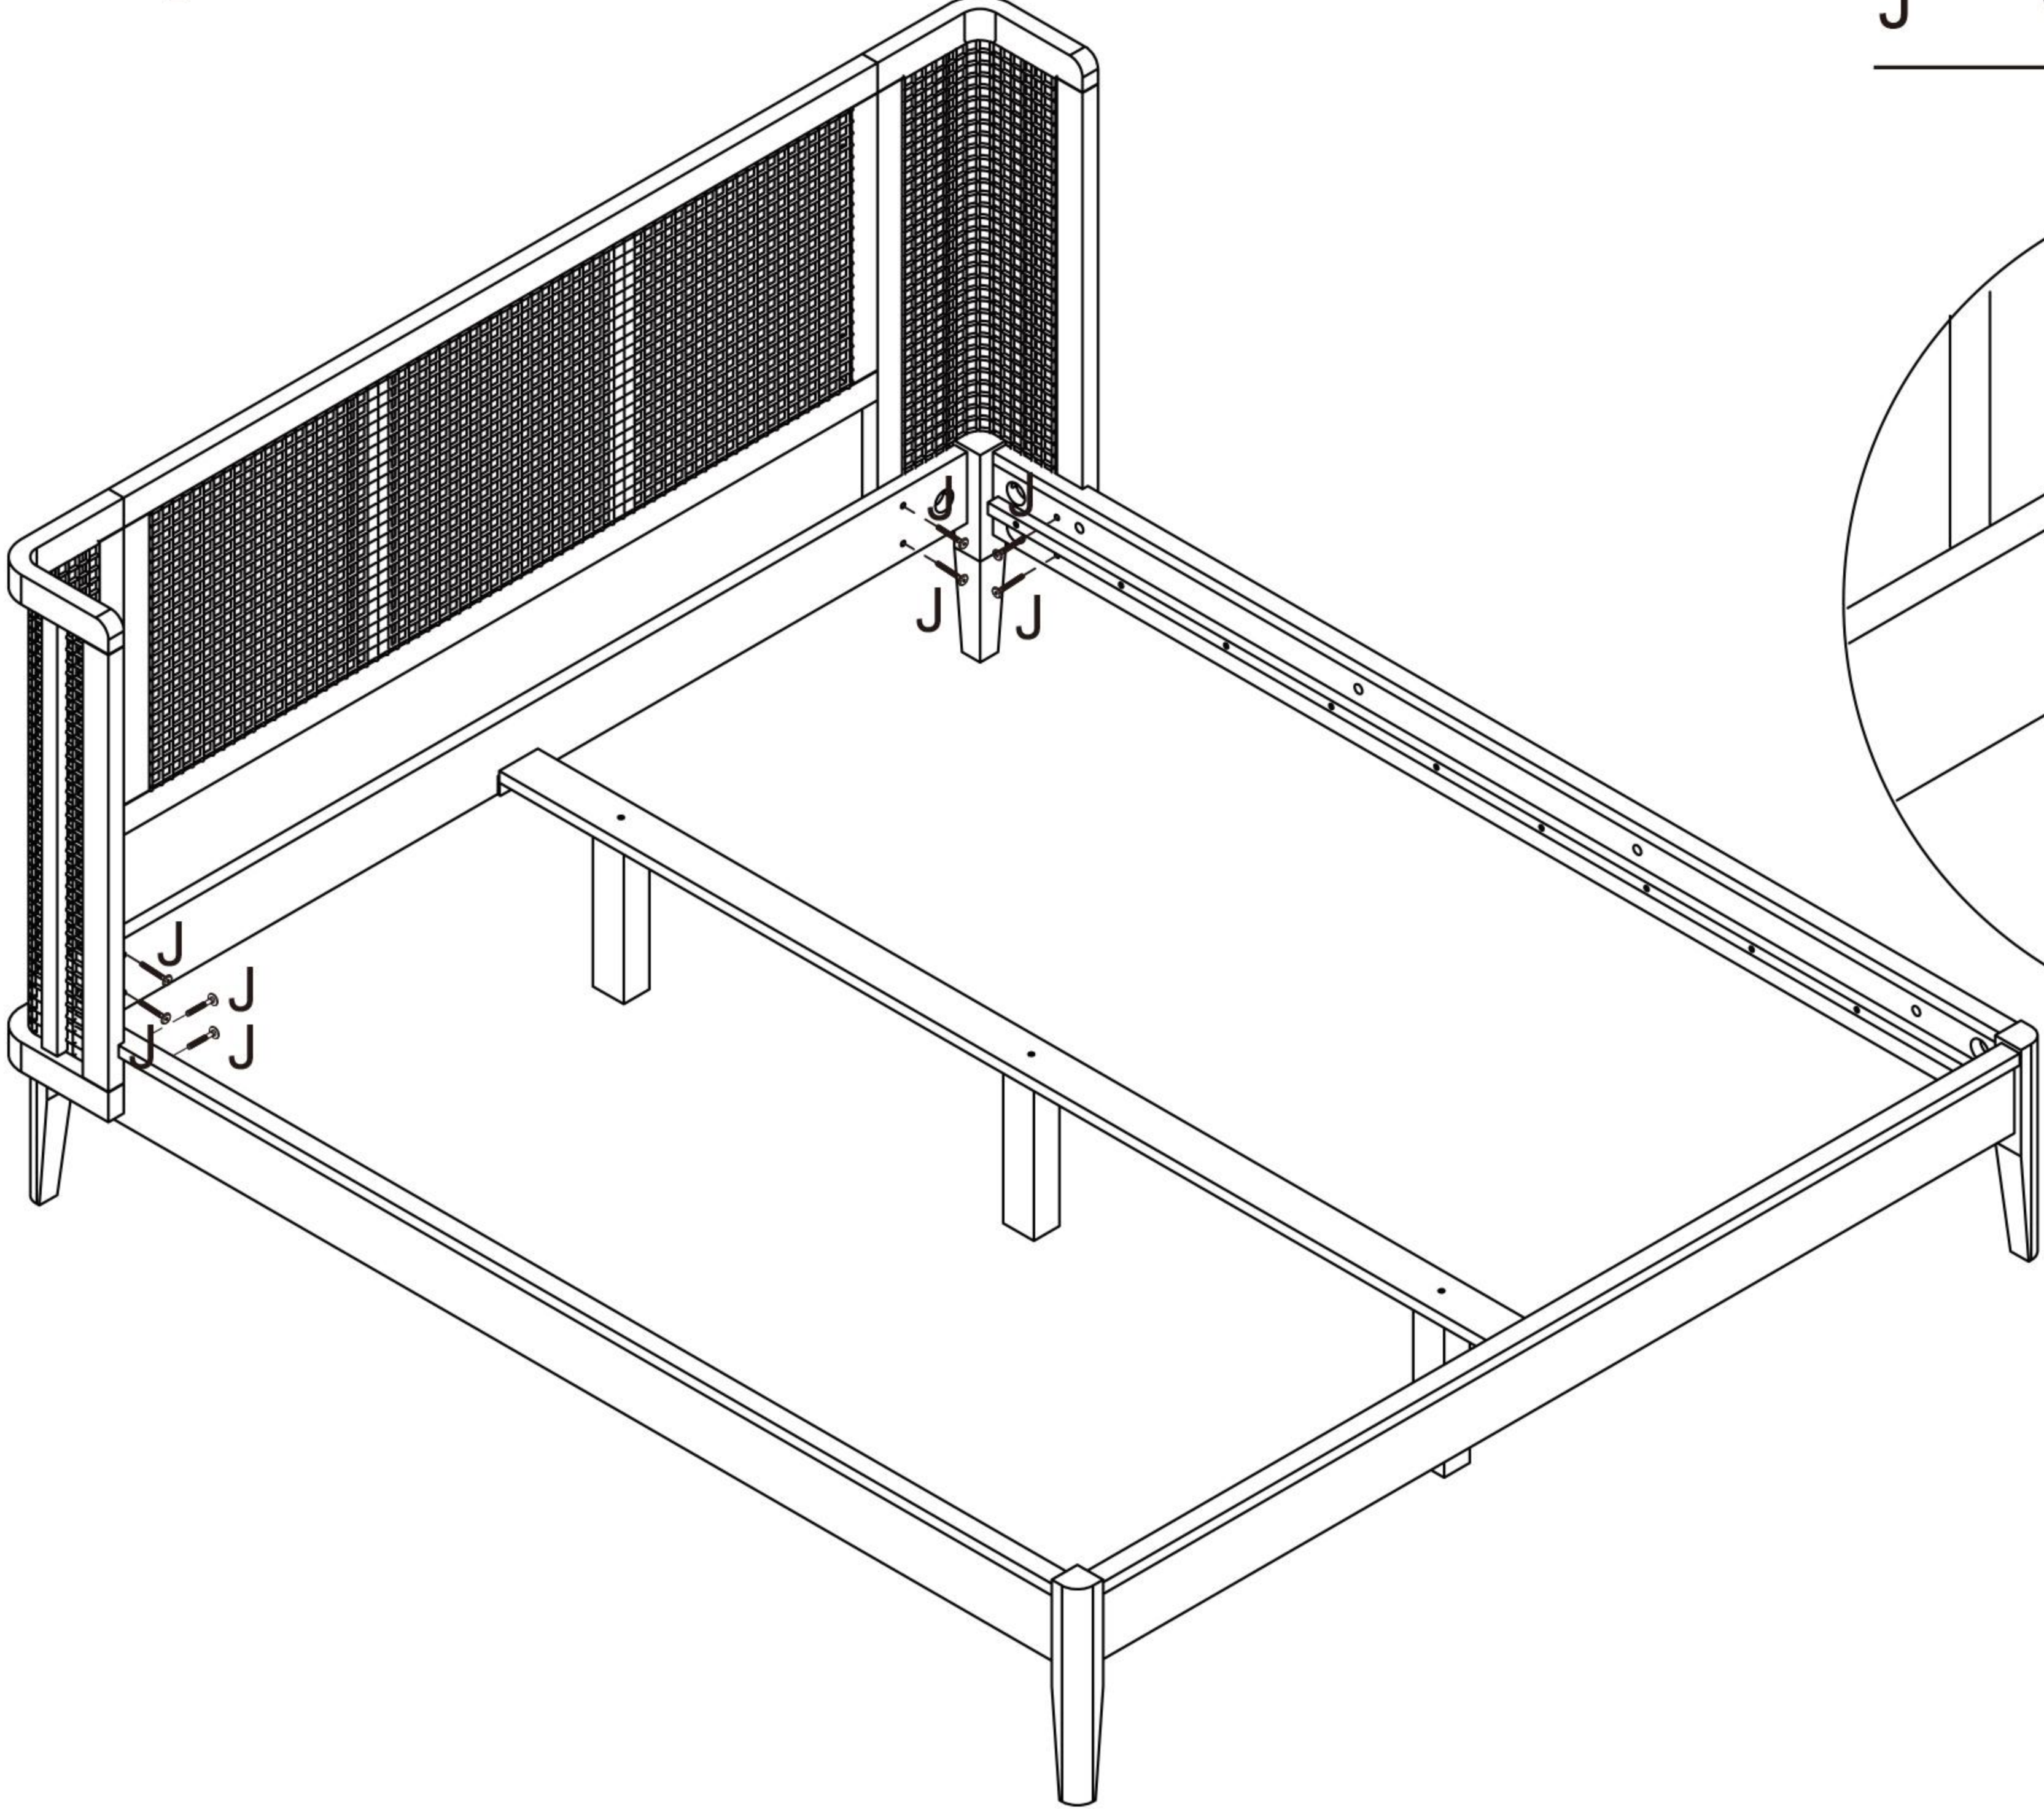

J 8 pcs

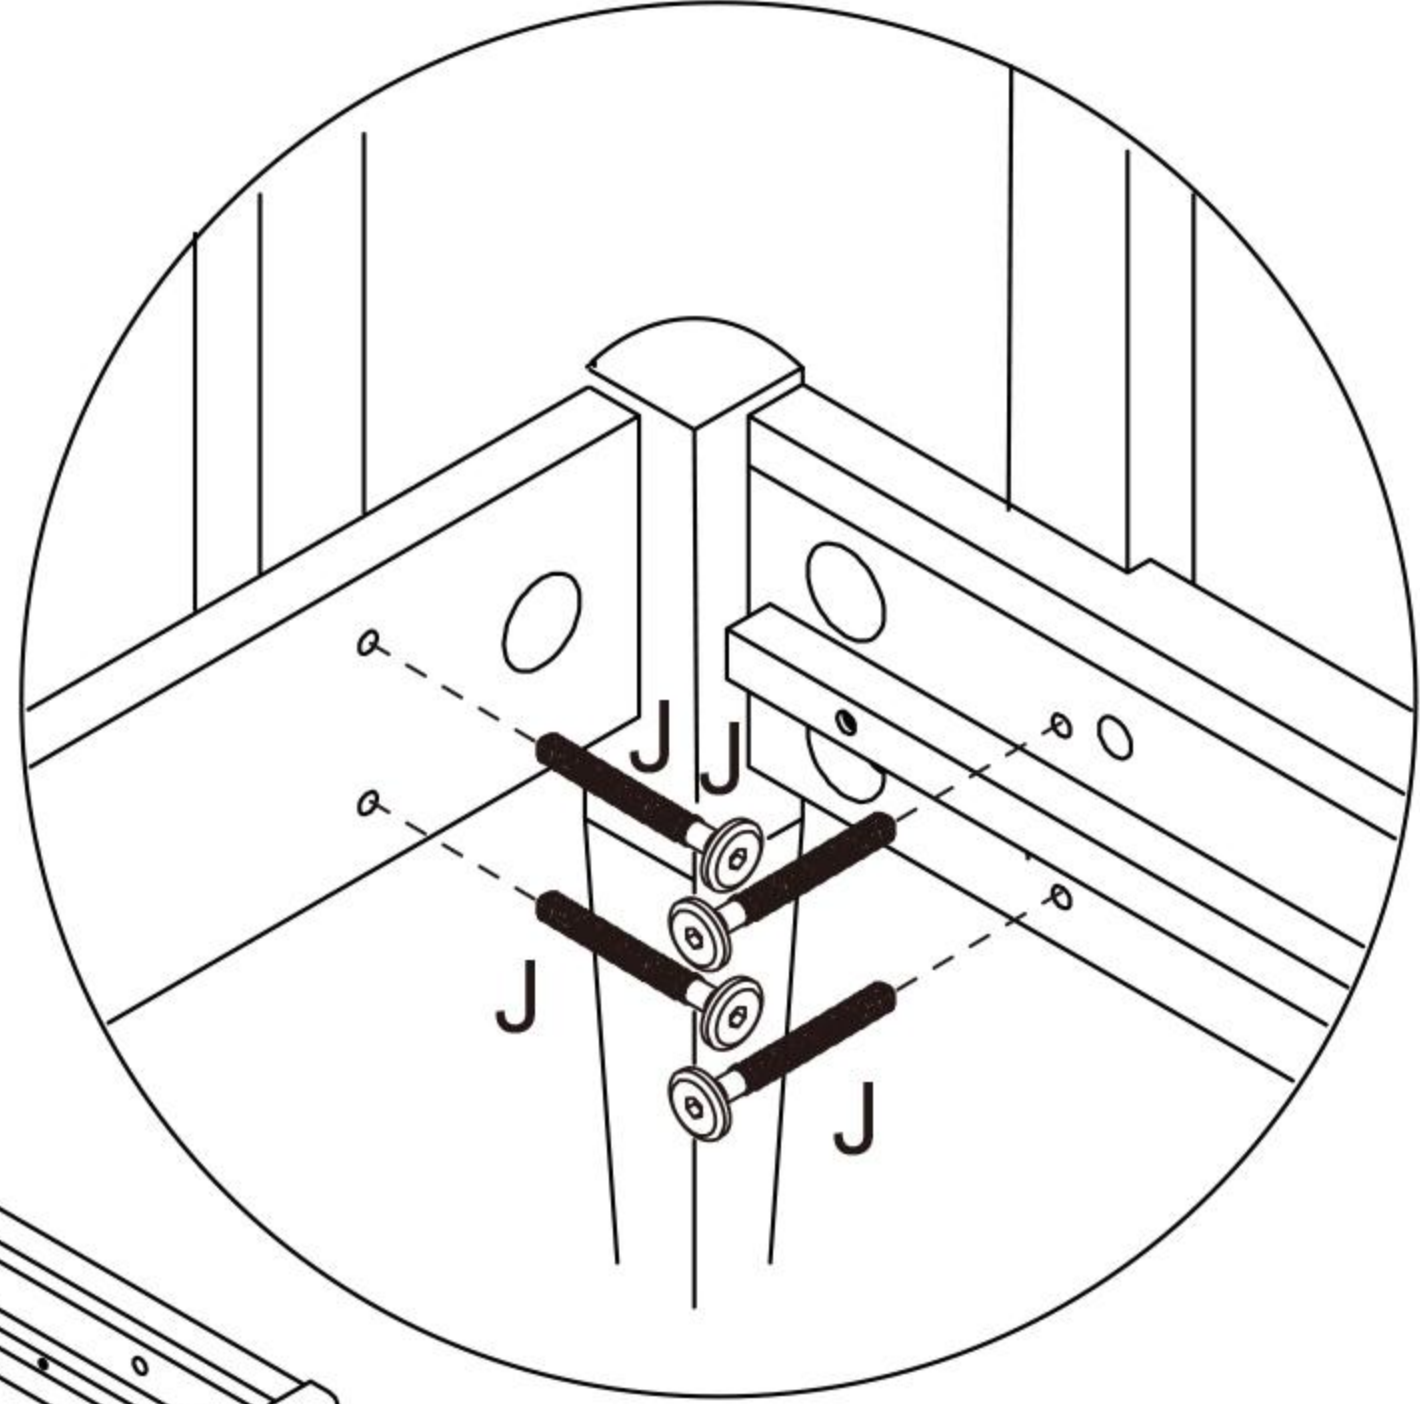

Step 12 Attach Slats

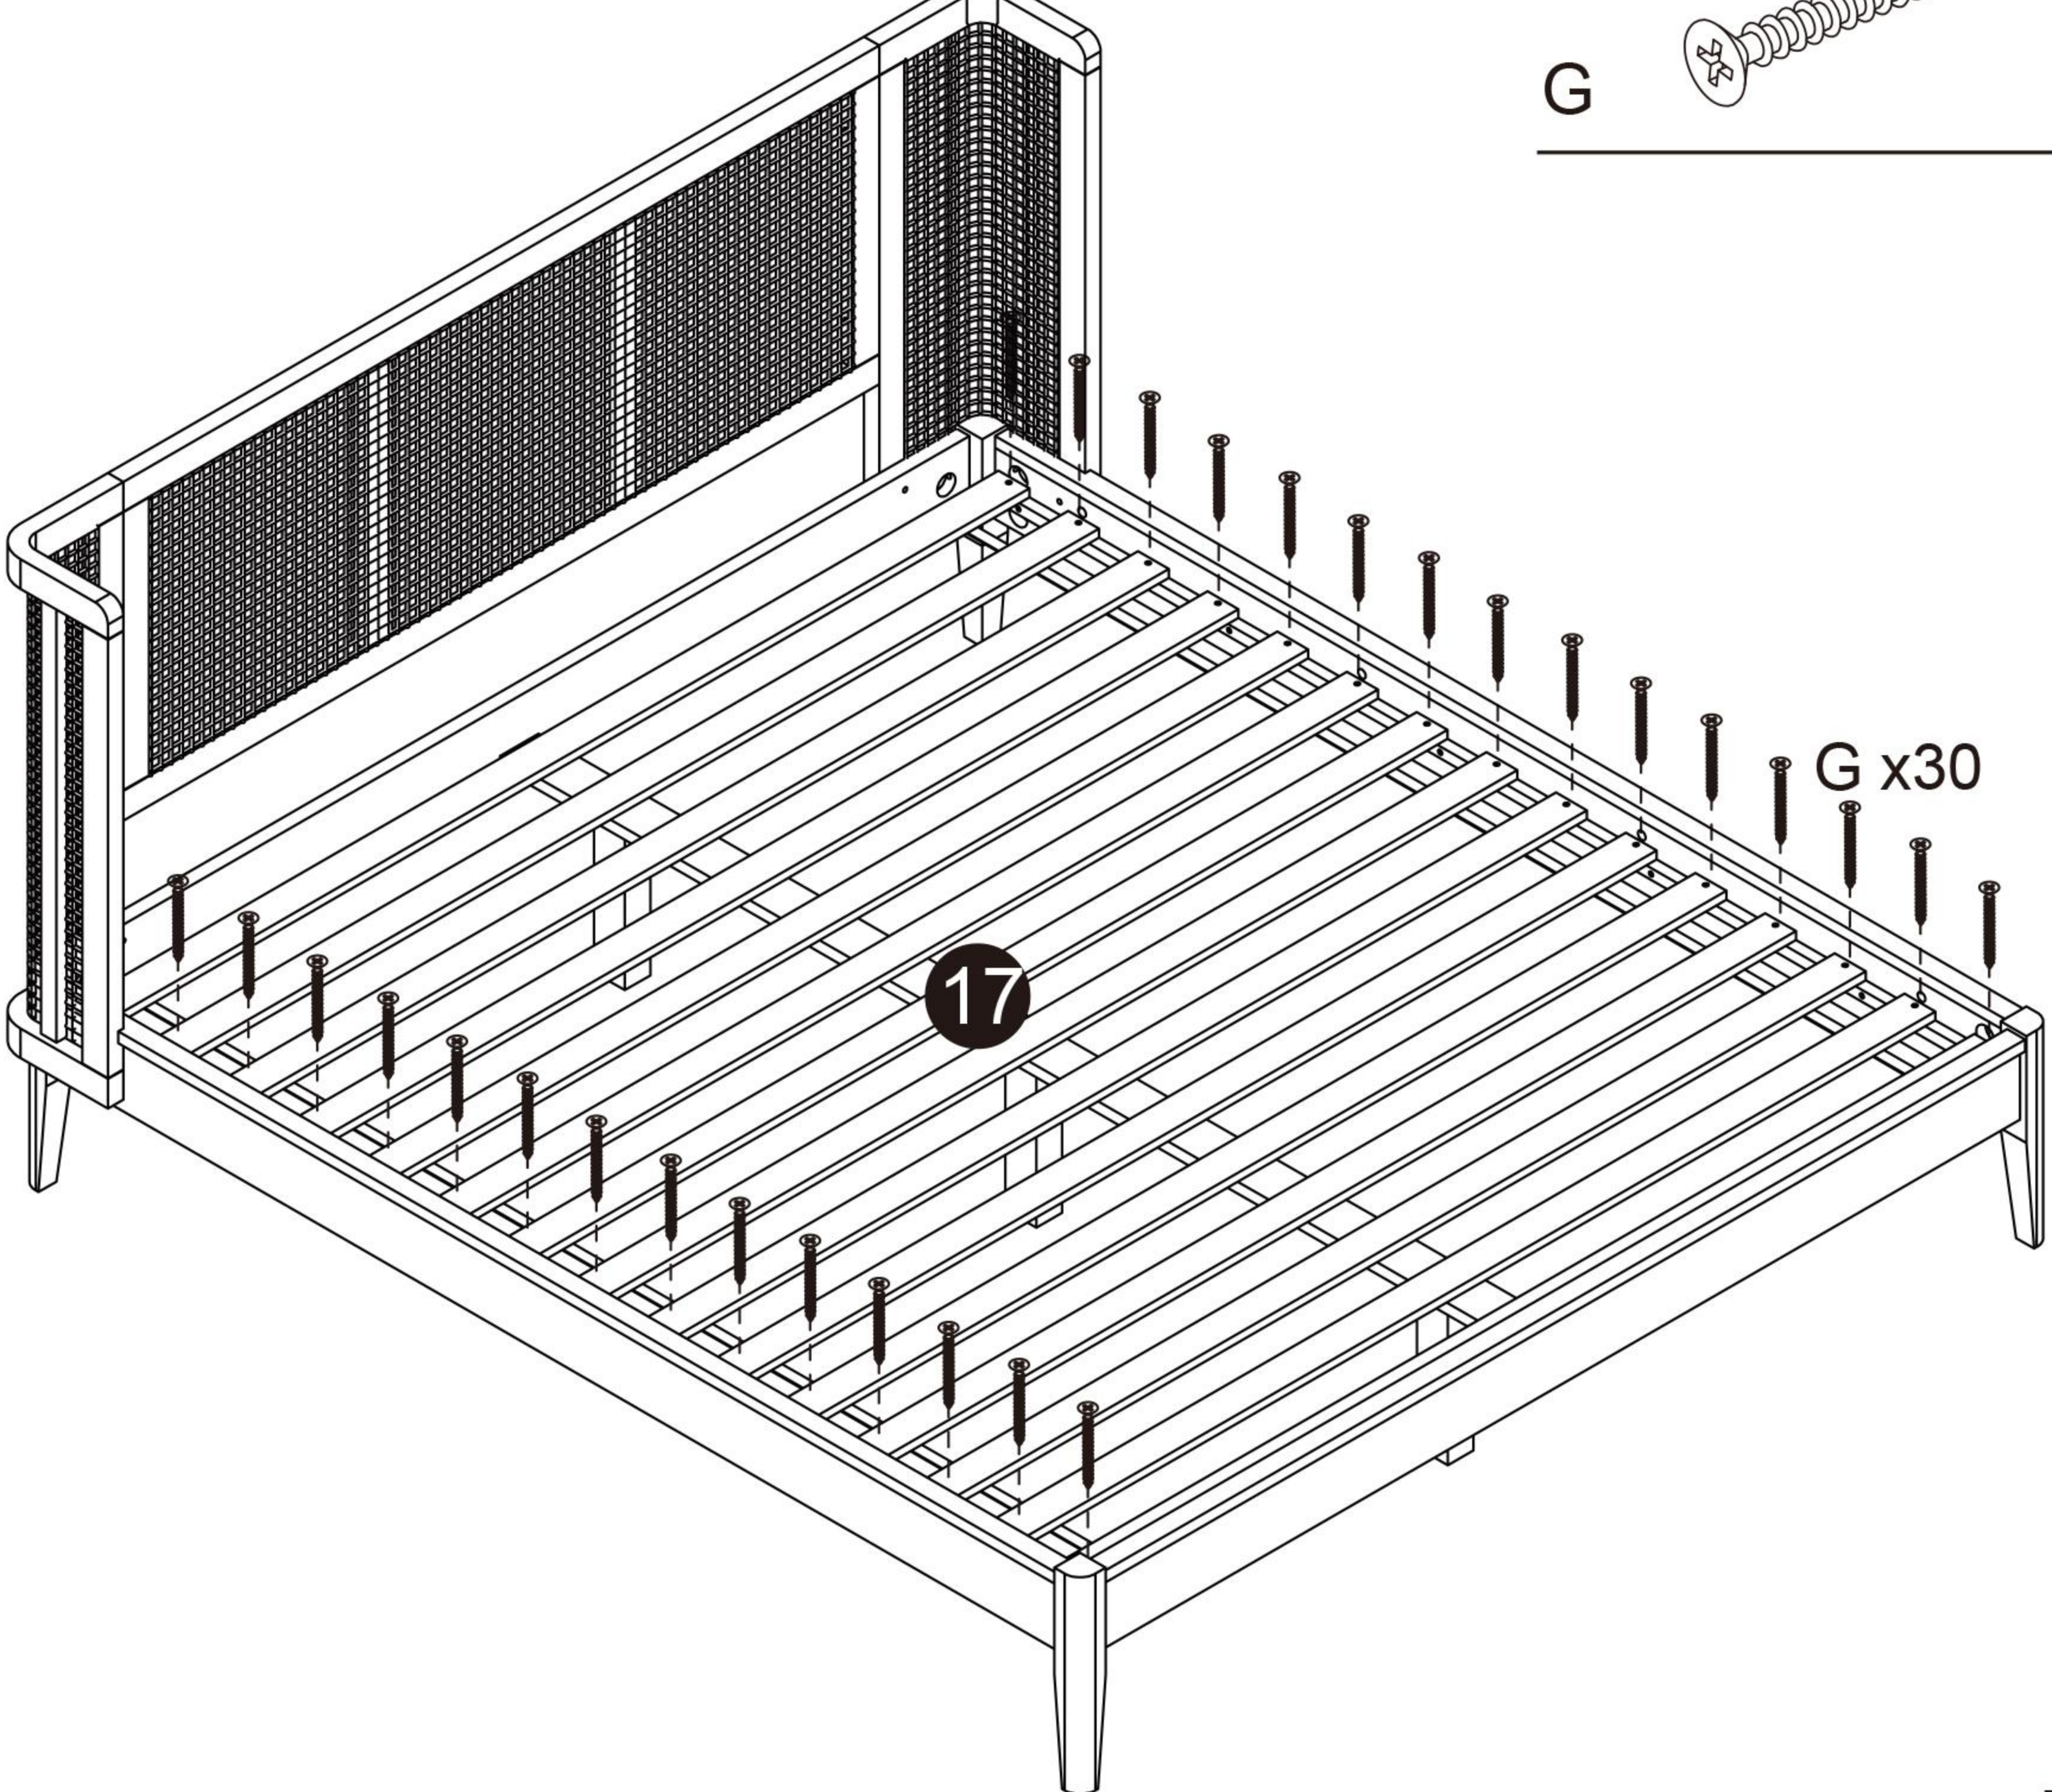

G 30 pcs