

DUSK.COM

LIVING | BEDROOM | DINING


Range Name: Ruby

Box 1 Dimensions: W195.5x D63.5 x H12.5 cm


Box 2 Dimensions: W149x D61.5 x H18.8 cm

Product Dimensions: W135 x D55 x H180 cm


3 Door Wardrobe

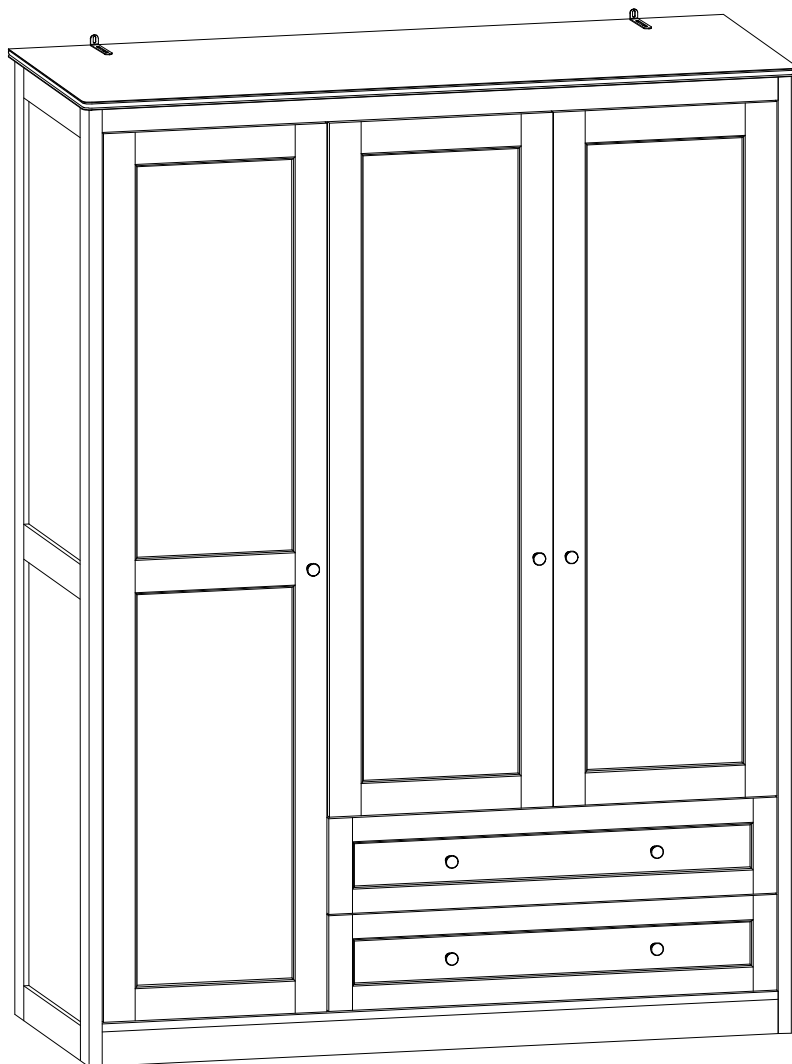

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

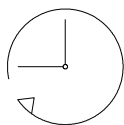

Up to 90 minutes
assembly time

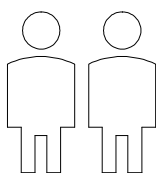

Two person
assembly

This product is intended for domestic use only, not for commercial purposes.

P-1-23
V-2.0

Important

Assembly Tip

Before you begin, we advise laying everything out on a clean and soft level surface to avoid damaging the unit or your floor. It's best to identify all of the parts and fittings to build your 3 door wardrobe, and to familiarise yourself with all of the parts and fittings before building.

Top Tip

We recommend that you build your new 3 door wardrobe in the room you'd like it to be located. This will help prevent any risk of damage to the product whilst moving it.

Safety and Care

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this 3 door wardrobe which could present a choking hazard.

All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. The installation of anti tipping kit to secure your furniture is strongly suggested.
9. Serious or fatal crushing injuries can occur from tipping furniture.

Help and Support

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


Recycling

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

Care and Maintenance

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
3. Do not scrub or rub the surface when cleaning.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
4. Do not drag the 3 door wardrobe when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the change of the humidity and temperature.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

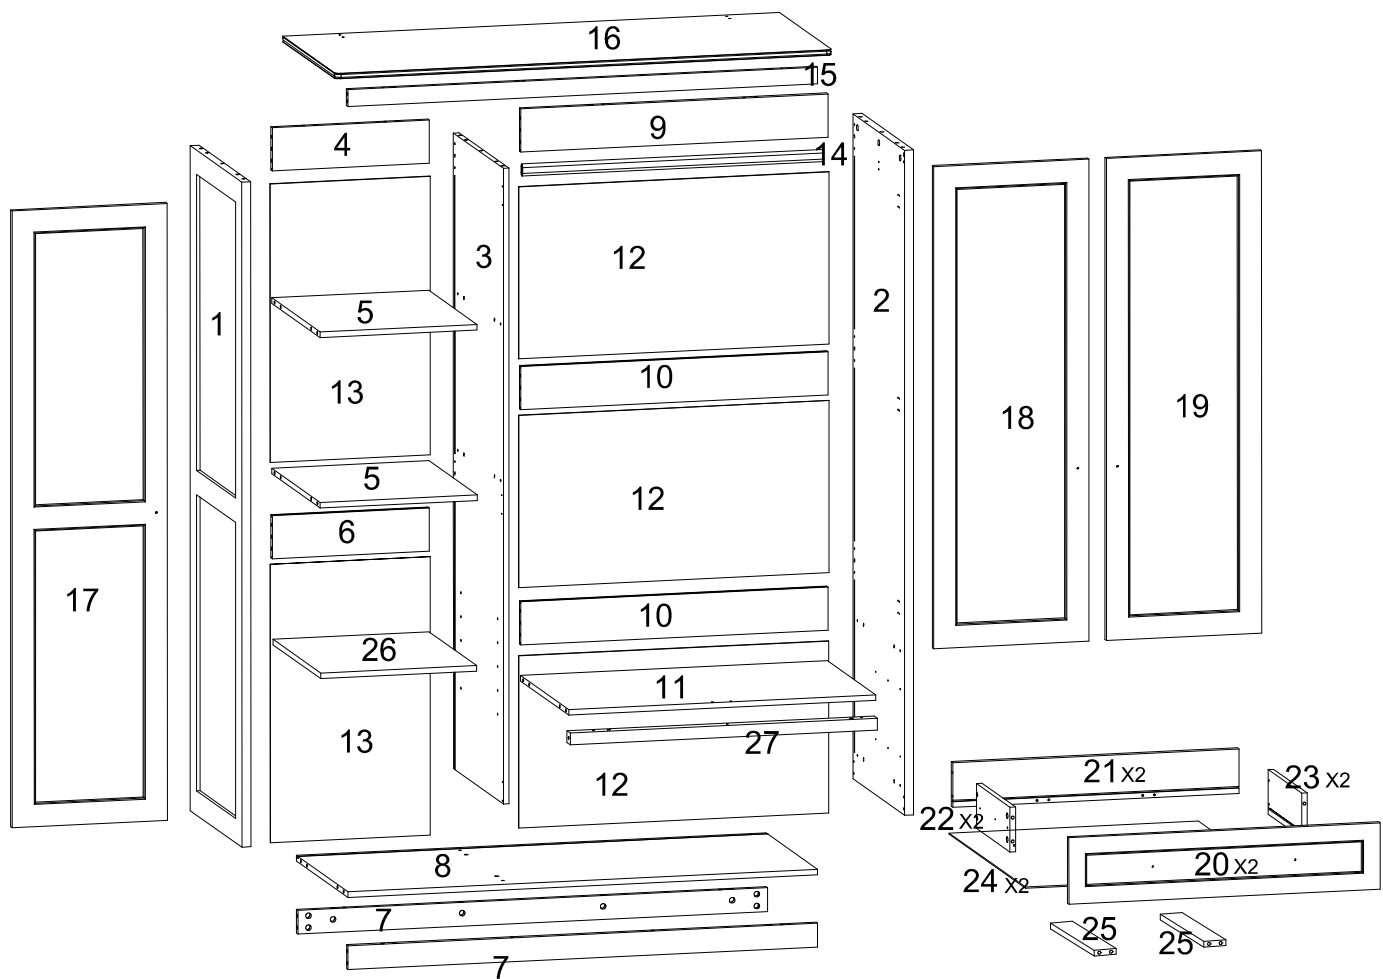

Parts list



















Before you begin building your product, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.






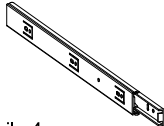

Part Number	Part Description	Quantity	Box No
1	Left Panel	1 pc	Box1
2	Right Panel	1 pc	Box1
3	Middle Panel	1 pc	Box1
4	Upper Left Support Bar	1 pc	Box2
5	Upper Left Shelf Panel	2 pcs	Box2
6	Lower Left Support Bar	1 pc	Box2
7	Lower Front Support Panel	2 pcs	Box2
8	Bottom Panel	1 pc	Box2
9	Upper Right Support Bar	1 pc	Box2
10	Lower Right Support Bar	2 pcs	Box2
11	Right Shelf Panel	1 pc	Box2
12	Right Back Panel	3 pcs	Box2
13	Left Back Panel	2 pcs	Box2
14	Hanging Bar	1 pc	Box2

Part Number	Part Description	Quantity	Box No
15	Upper Front Support Bar	1 pc	Box1
16	Top Panel	1 pc	Box2
17	Left Door	1 pc	Box1
18	Middle Door	1 pc	Box2
19	Right Door	1 pc	Box2
20	Drawer Front	2 pcs	Box2
21	Drawer Back Side	2 pcs	Box2
22	Drawer Left Side	2 pcs	Box1
23	Drawer Right Side	2 pcs	Box1
24	Drawer Bottom	2 pcs	Box2
25	Drawer support bar	4 pcs	Box2
26	Lower Left Shelf Panel	1 pc	Box2
27	Shelf Panel Support Bar	1 pc	Box1


Fittings checklist

Please check you have all the fittings listed below with your product in box 2.


 A M6x35mm Cam Bolt x83pcs(+4 extra)	 B Ø15x9mm Cam Lock x83pcs(+4 extra)	 C Ø8x30mm Wood Dowel x50pcs(+4 extra)
 D M4x40mm Screw x24pcs(+3 extra)	 E EVA Mat x4pcs	 F Plastic Buckle x36pcs(+4 extra)
 G M3x14mm Screw x48pcs(+4 extra)	 H Slide Rail x4pcs	 I M3x12mm Screw x31pcs(+3 extra)
 J Hinge x7pcs	 K M3.5x12mm Screw x60pcs(+4 extra)	 L Cover x17pcs(+2 extra)
 M Door Strike Plate x7pcs	 N Door Catch x5pcs	 O Tube Bracket x2sets
 P M3x14mm Screw x4pcs	 Q Wall Bracket x2pcs	 R Wall Anchor x2pcs

 (S) M3x18mm Screw x2pcs	 (T) M4x25mm Screw x5pcs	 (U) Wooden Block x1pc
 (V) M4x8mm Screw x7pcs	 (W) Handle x7pcs	 (X) Shelf Support x4pcs
 (Y) Hinge x3pcs		

Bolt Length Ruler:




Tool required




Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Pay attention when connecting !
The sliding module must be at the front end.

STEP 1 : Extend Slide


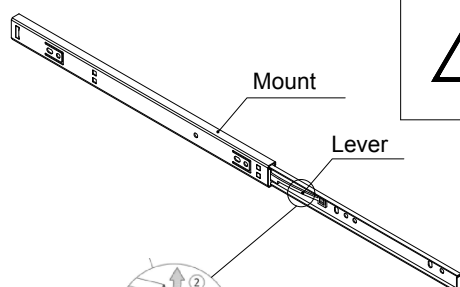


STEP 2: Push Lever UP

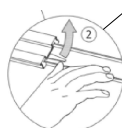



Push lever for the left of drawer ,
press the lever for the right of drawer

STEP 3: Remove Runner

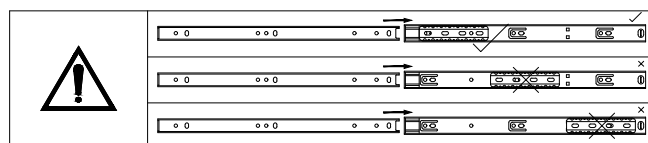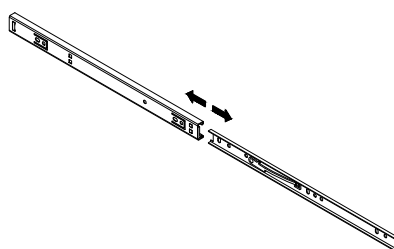

Step 1: Attach the Cam Bolt to the Bottom Panel (8).



(A)  8pcs

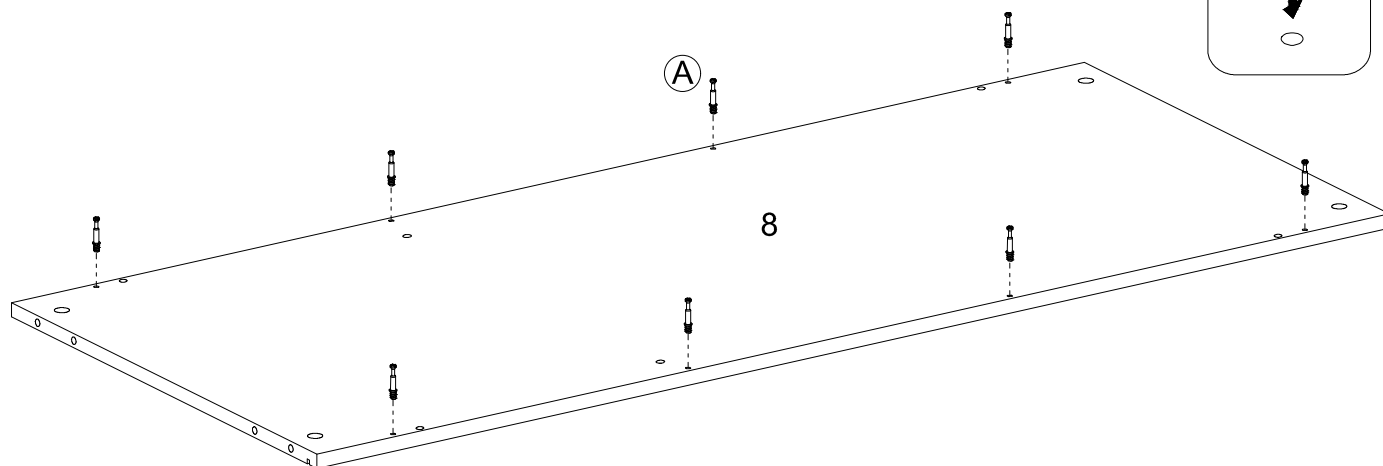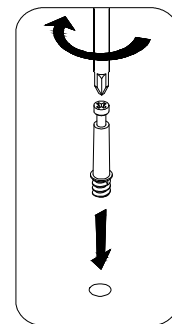






Step 2: Attach the Lower Front Support Bar (7) to the Bottom Panel (8).

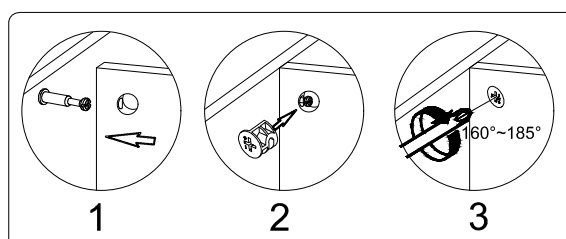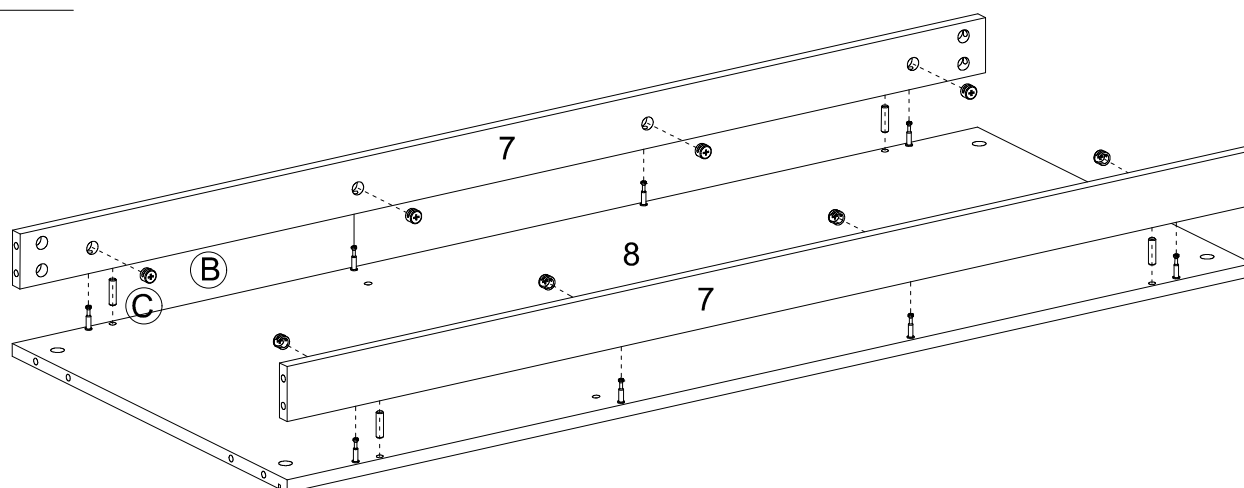
(B)  8pcs

(C)  4pcs




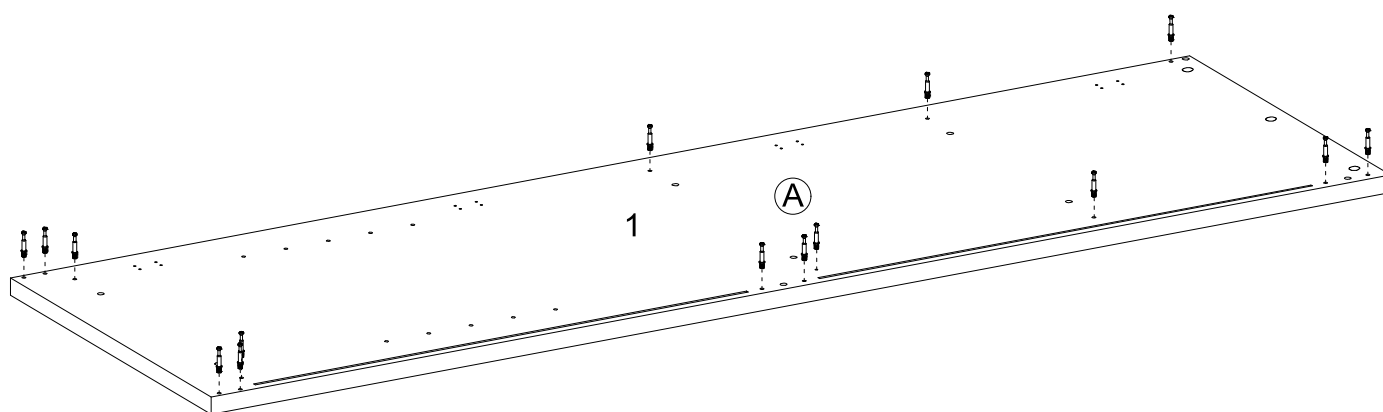
Step 3: Attach fittings , Slide Rail to the Right Panel (2).

- A  15pcs
- G  2pcs
- H  2pcs
- I  6pcs
- O  1pc

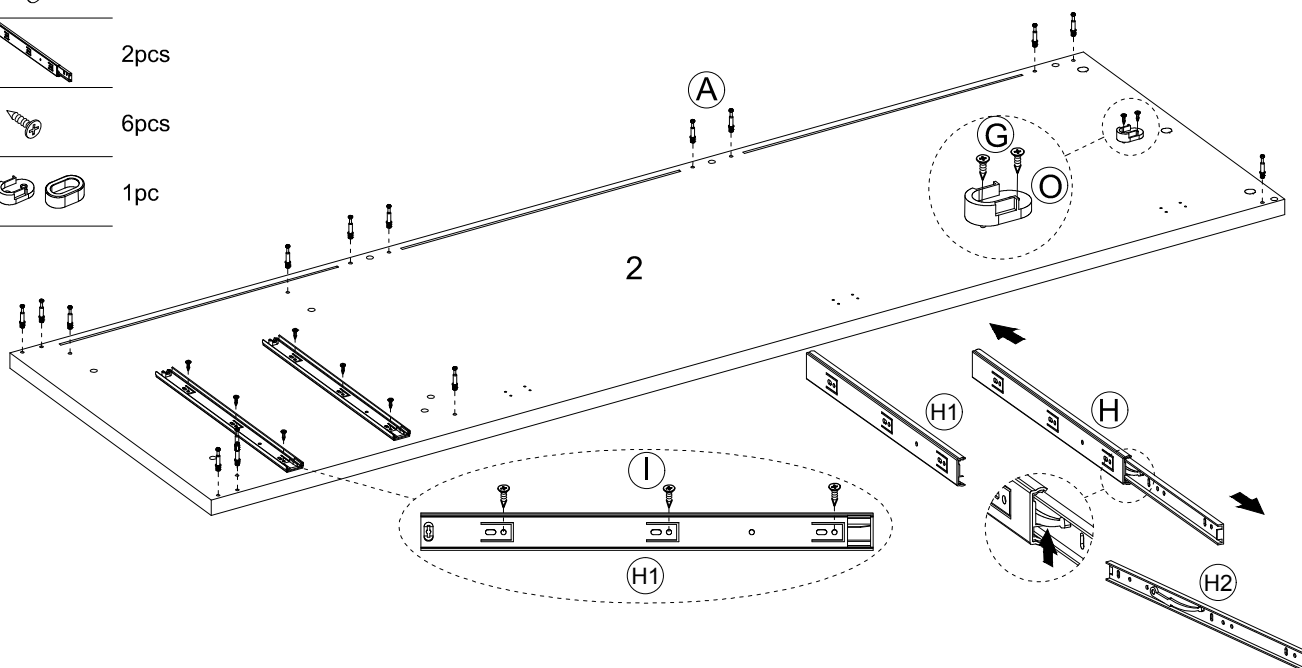

Step 4: Attach the Cam Bolt to the Left Panel (1).


- A  15pcs




Step 5: Attach parts (4,5,6) to the Left Panel (1).

Ⓑ 8pcs

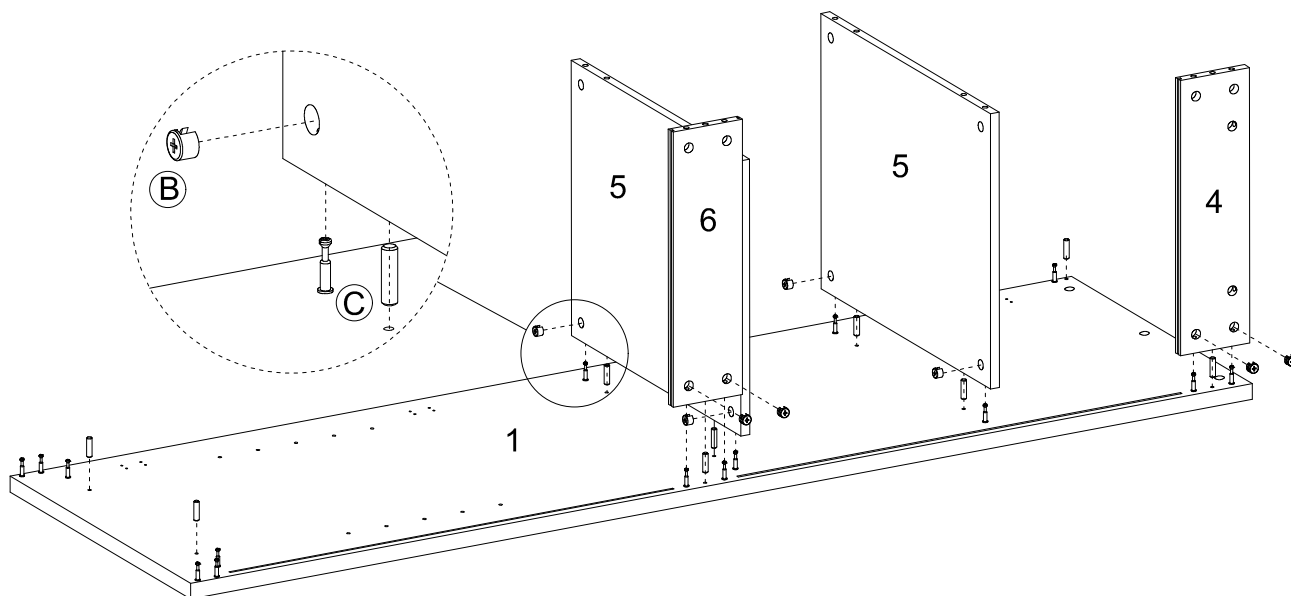


Ⓒ 9pcs

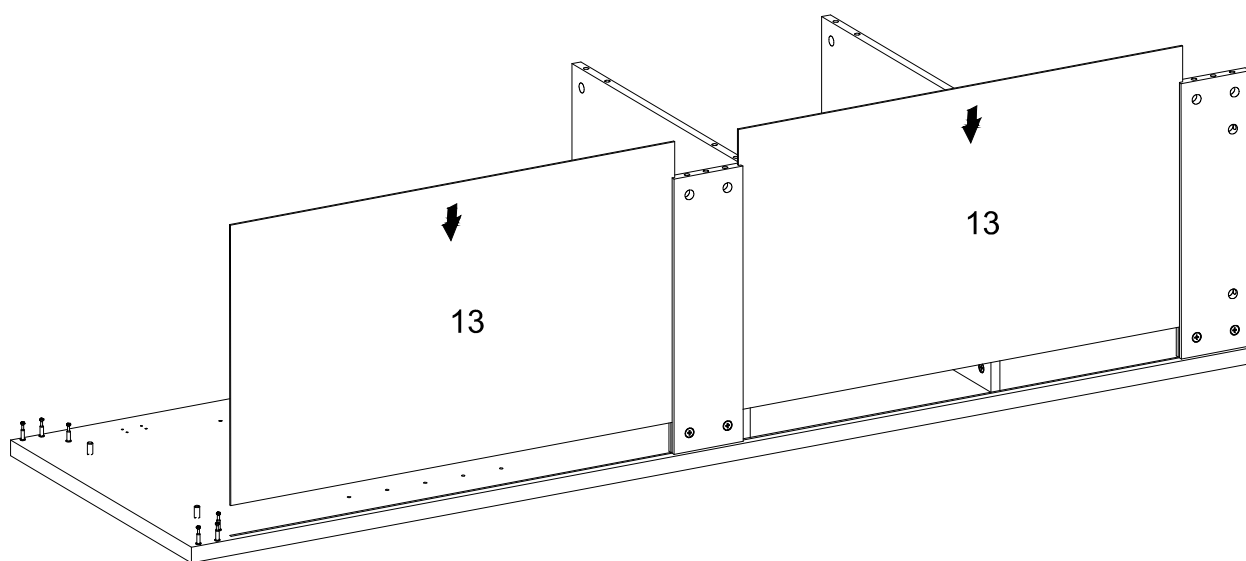


Step 6: Attach the Left Back Panel (13) to the Frame.






Step 7: Attach the Cam Bolt and Door Catch to the Middle Panel (3).

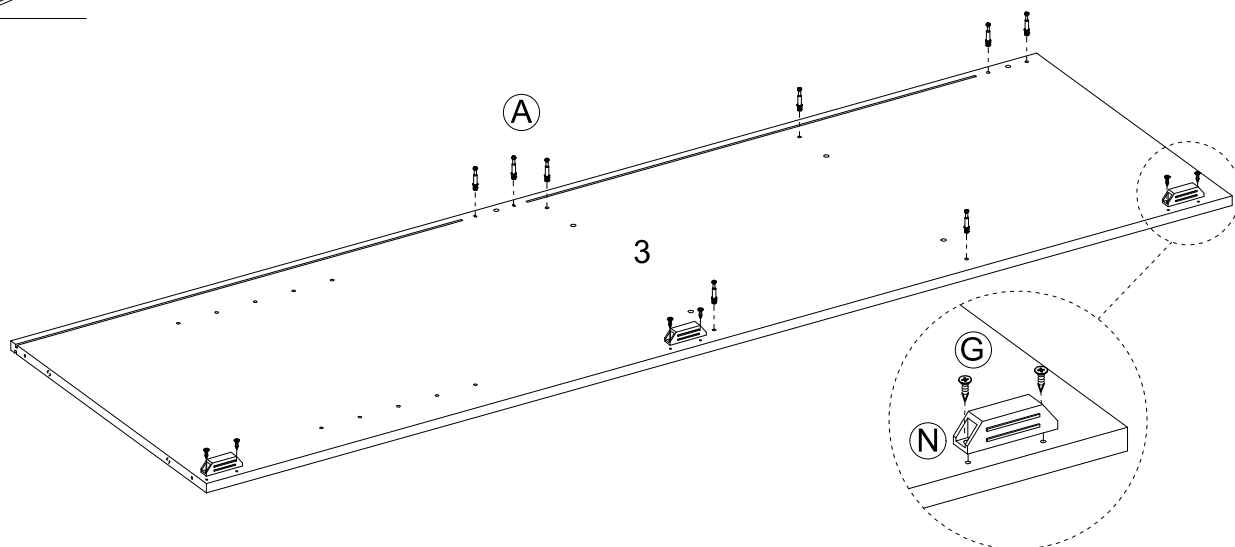- A  8pcs
- G  6 pcs
- N  3 pcs







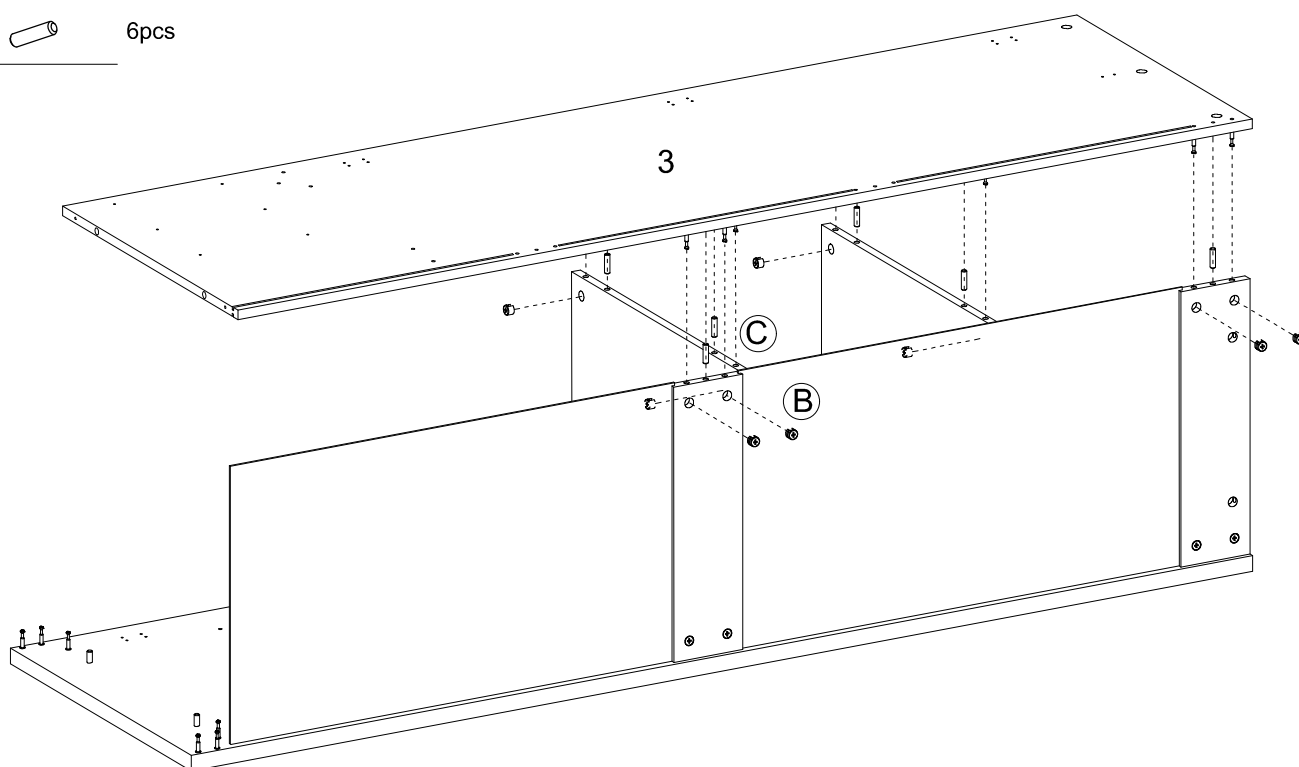







Step 8: Attach the Middle Panel (3) to the Frame .

- B  8pcs
- C  6pcs




Step 9: Attach fittings , Slide Rail to the Frame .
 Attach the wooden block and door catch to Upper Front Support Bar (15), then attach the Upper Front Support Bar (15) to the Frame.

- (A)  8pcs
- (B)  1pc
- (C)  2pcs
- (G)  2pcs
- (H)  2pcs
- (I)  6pcs
- (N)  1pc
- (O)  1pc
- (S)  2pcs
- (T)  2pcs
- (U)  1pc

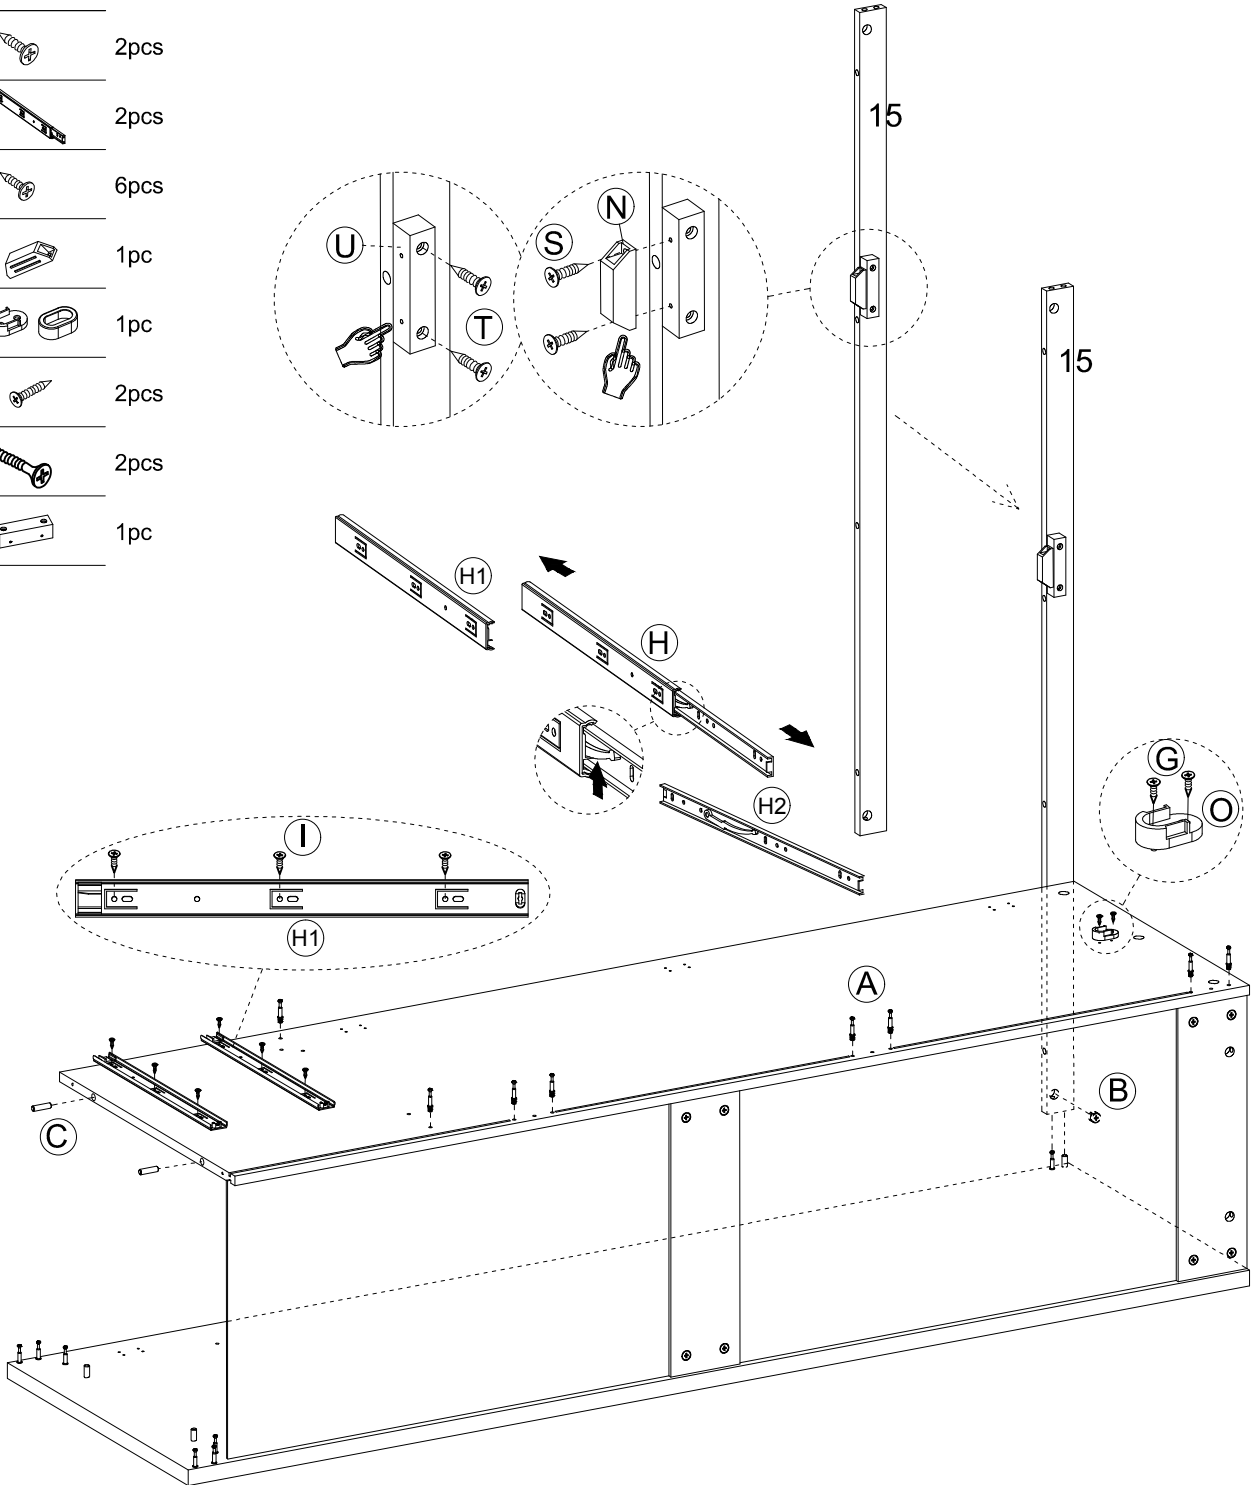


Step 10: Attach the Bottom Panel (8) to the Frame.

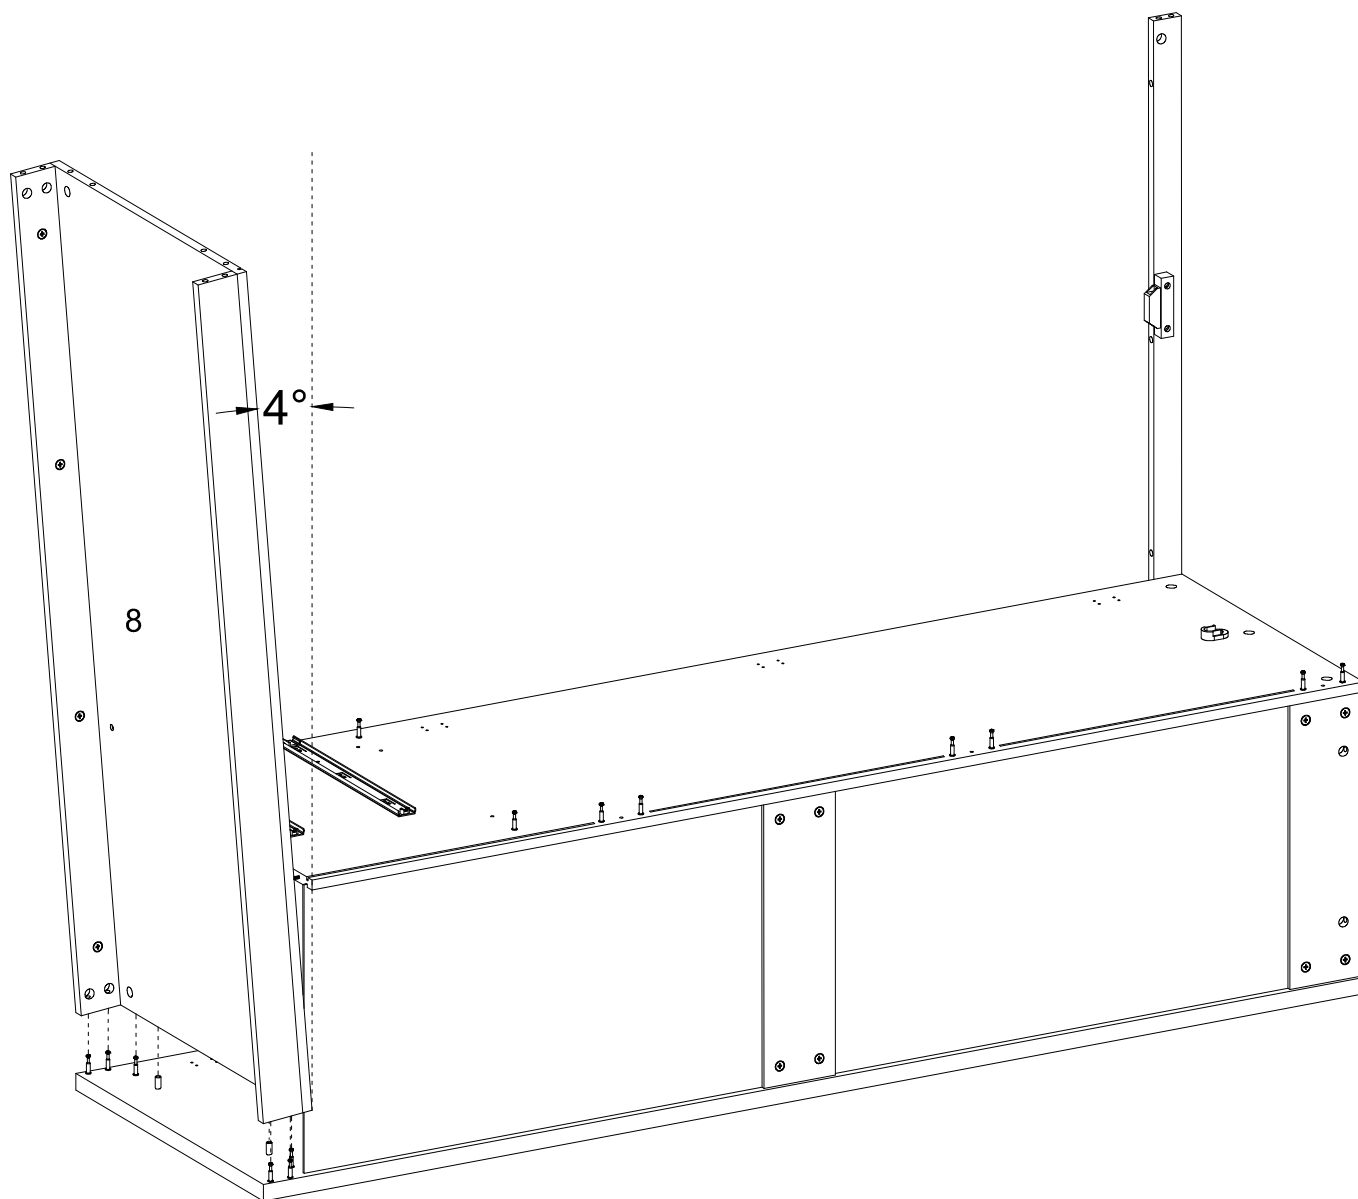

Step 11: Attach fittings to the Frame.

(B)  6pcs


(D)  2pcs

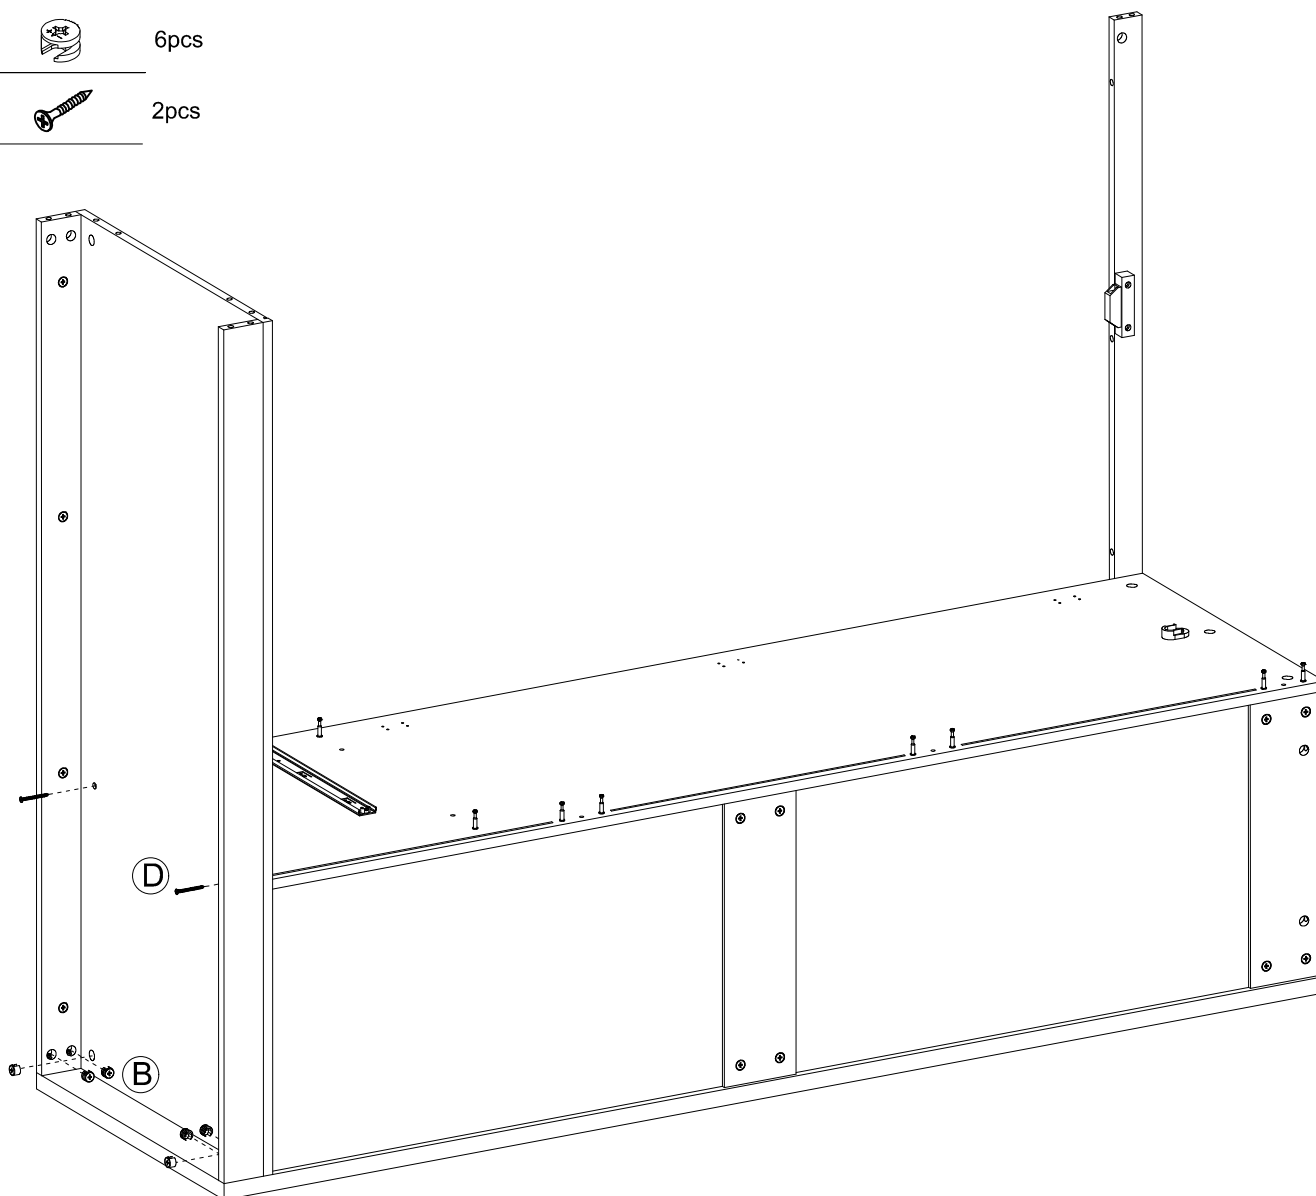

Step 12: Attach the Shelf Panel Support Bar (27) to the Right Shelf Panel (11).

(C)  2pcs


(T)  3pcs

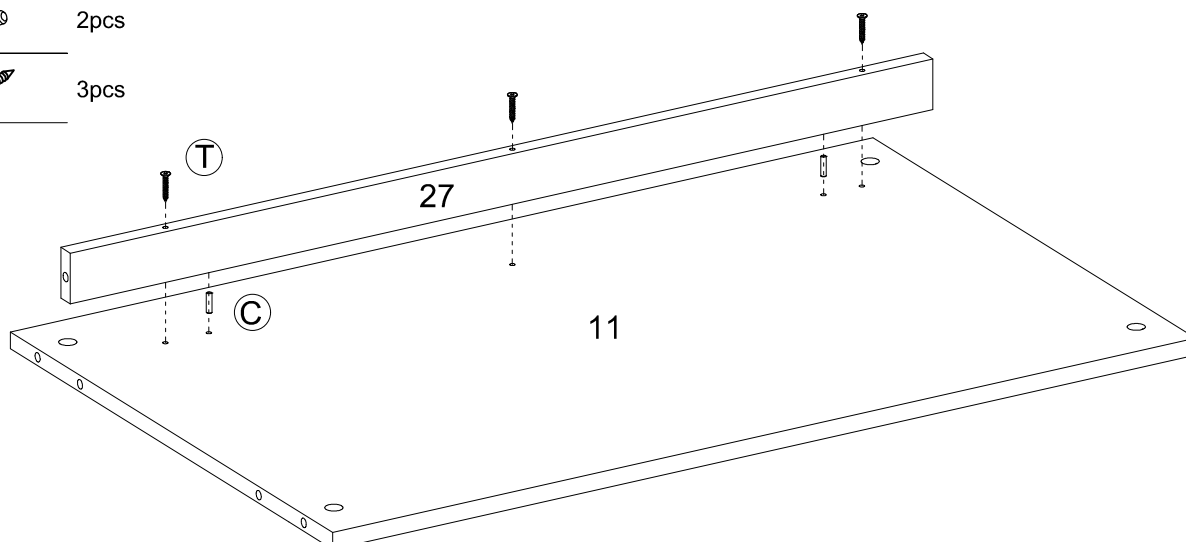


Step 13: Attach parts (9,10,11) to the Frame.

Ⓑ  8pcs

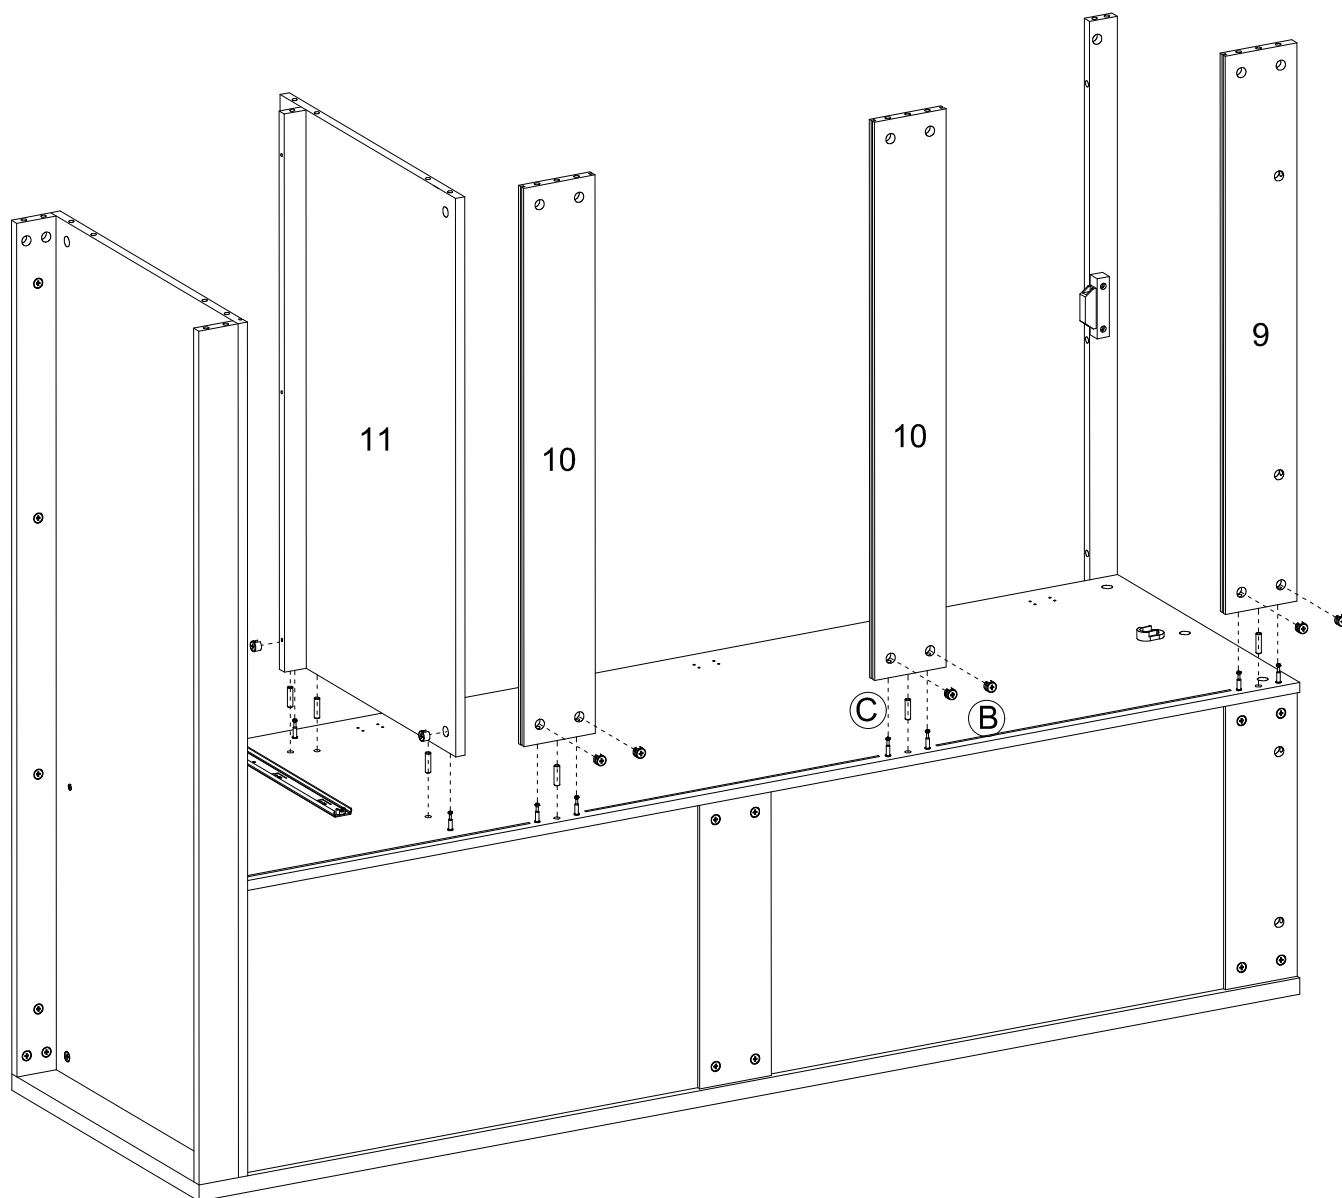


Ⓒ  6pcs

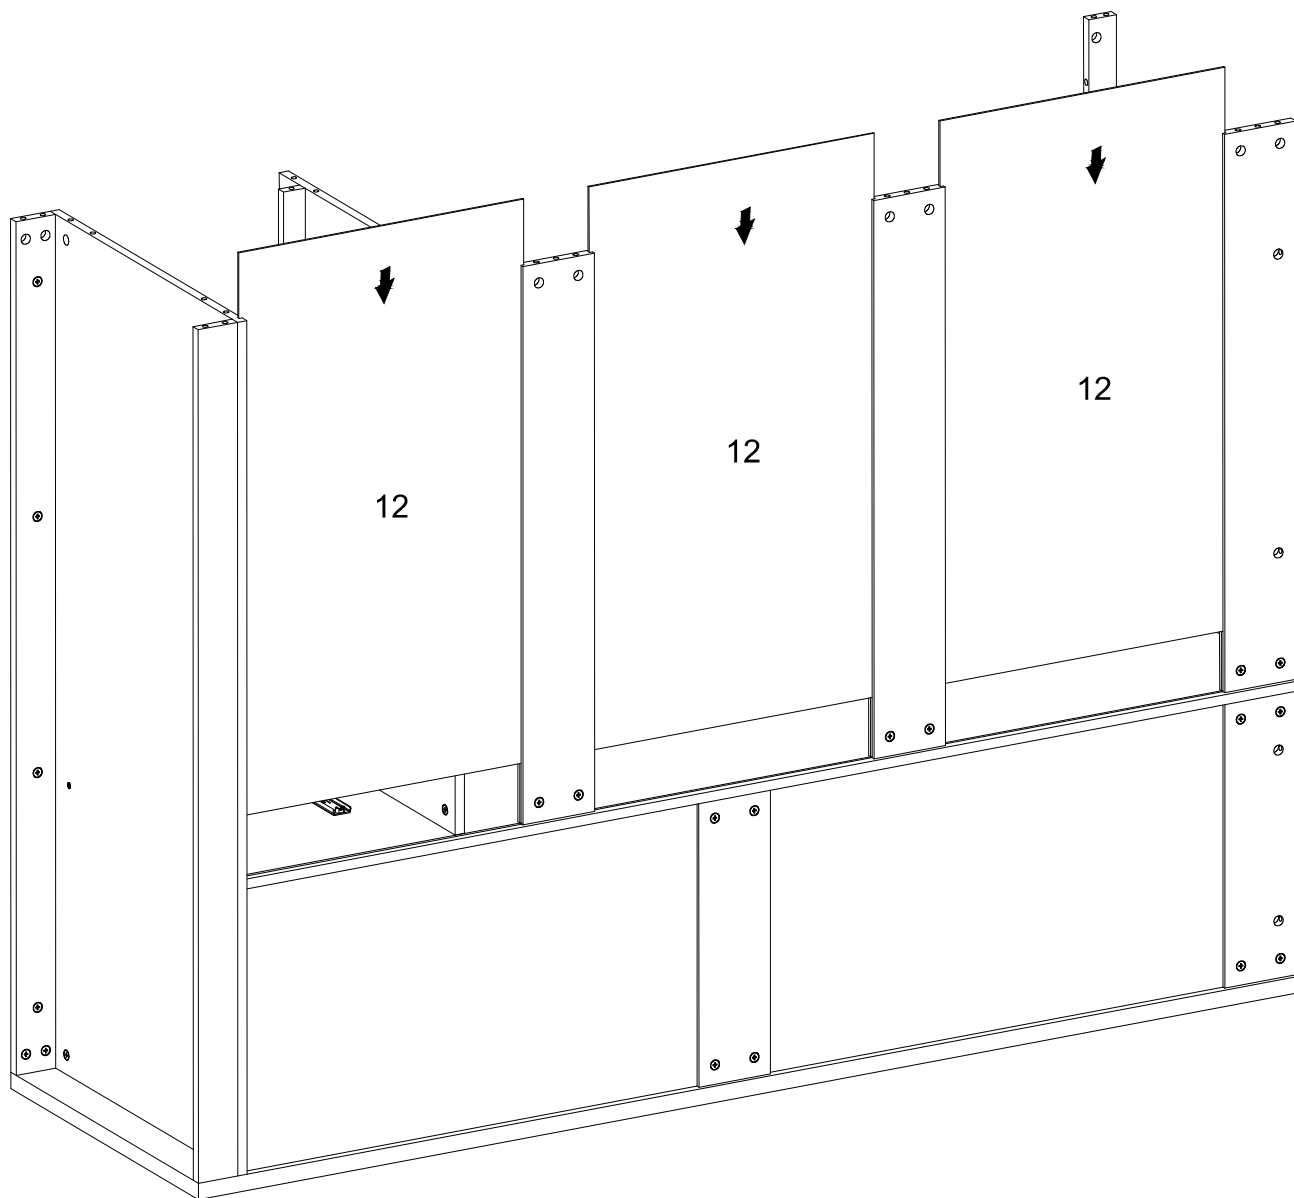


Step 14: Attach the Right Back Panel (12) to the Frame.





Step 15: Attach the Right Panel (2) to the Frame.

- B  15pcs
- C  9pcs
- E  4pcs

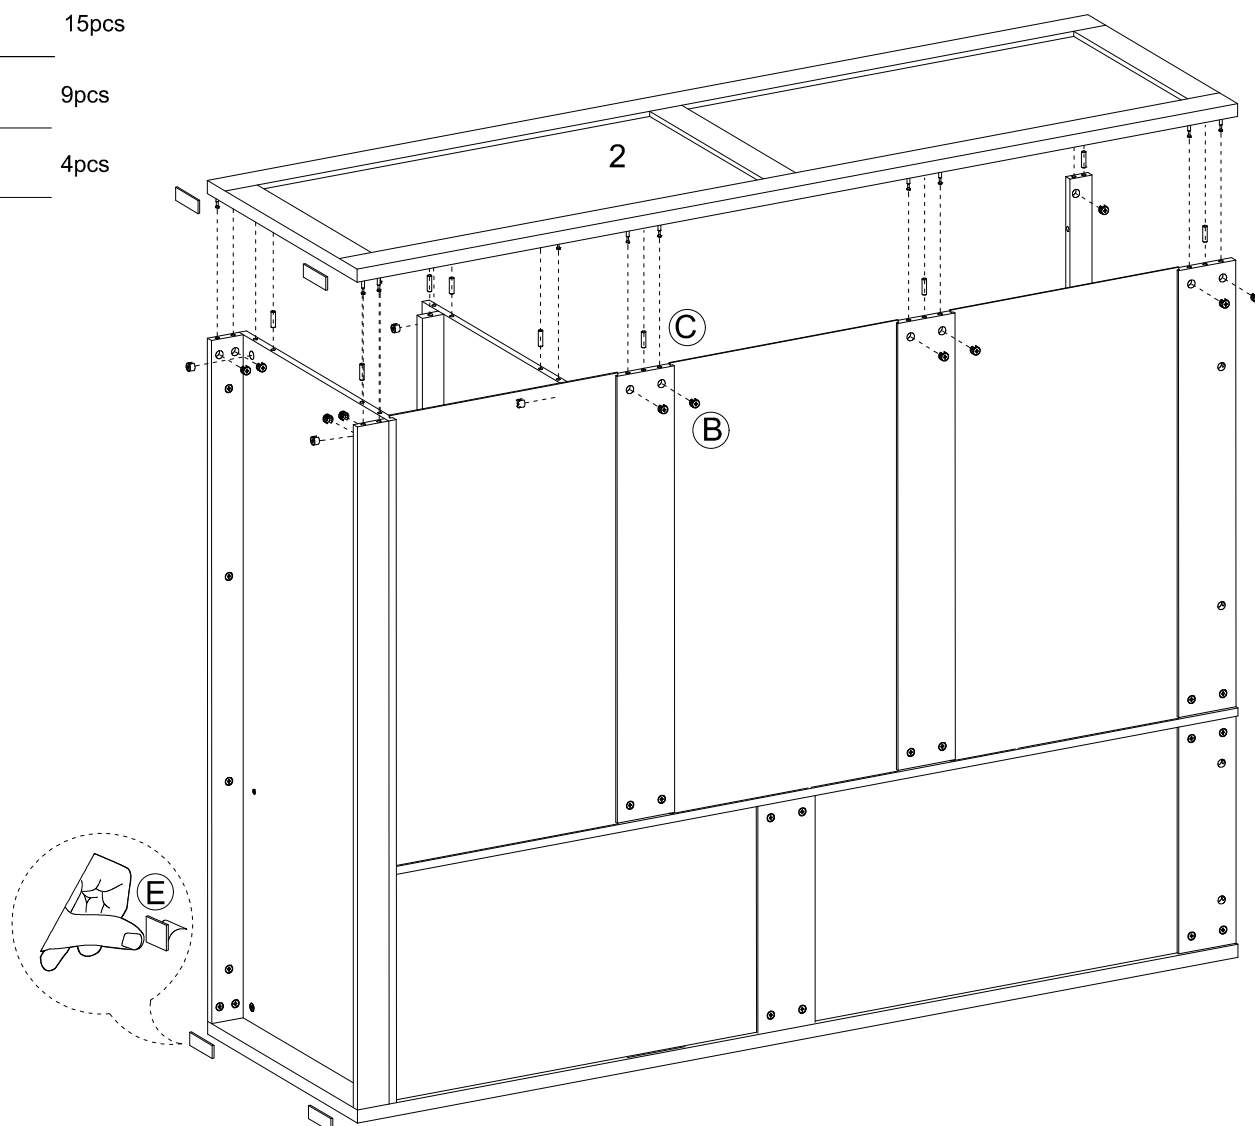

Step 16: Attach the Cam Bolt to the Top Panel (16).

- A  13pcs

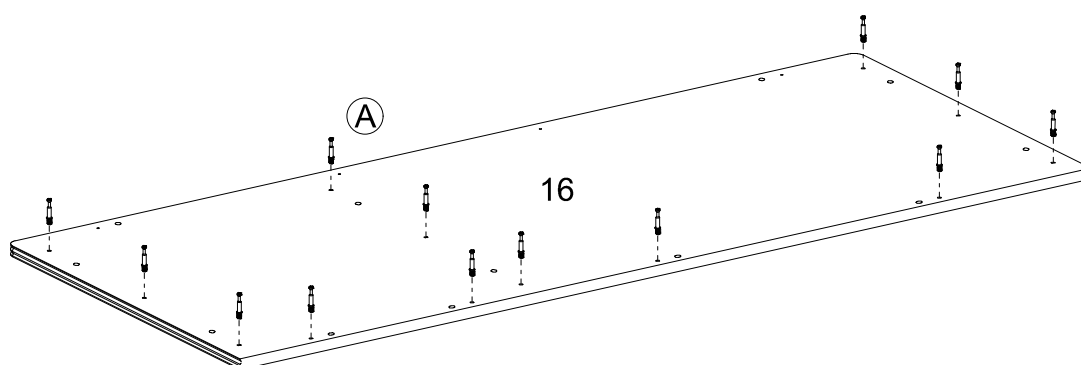


Step 17: Attach the Top Panel (16) to the Frame.

Ⓑ 13pcs





Ⓒ 12pcs

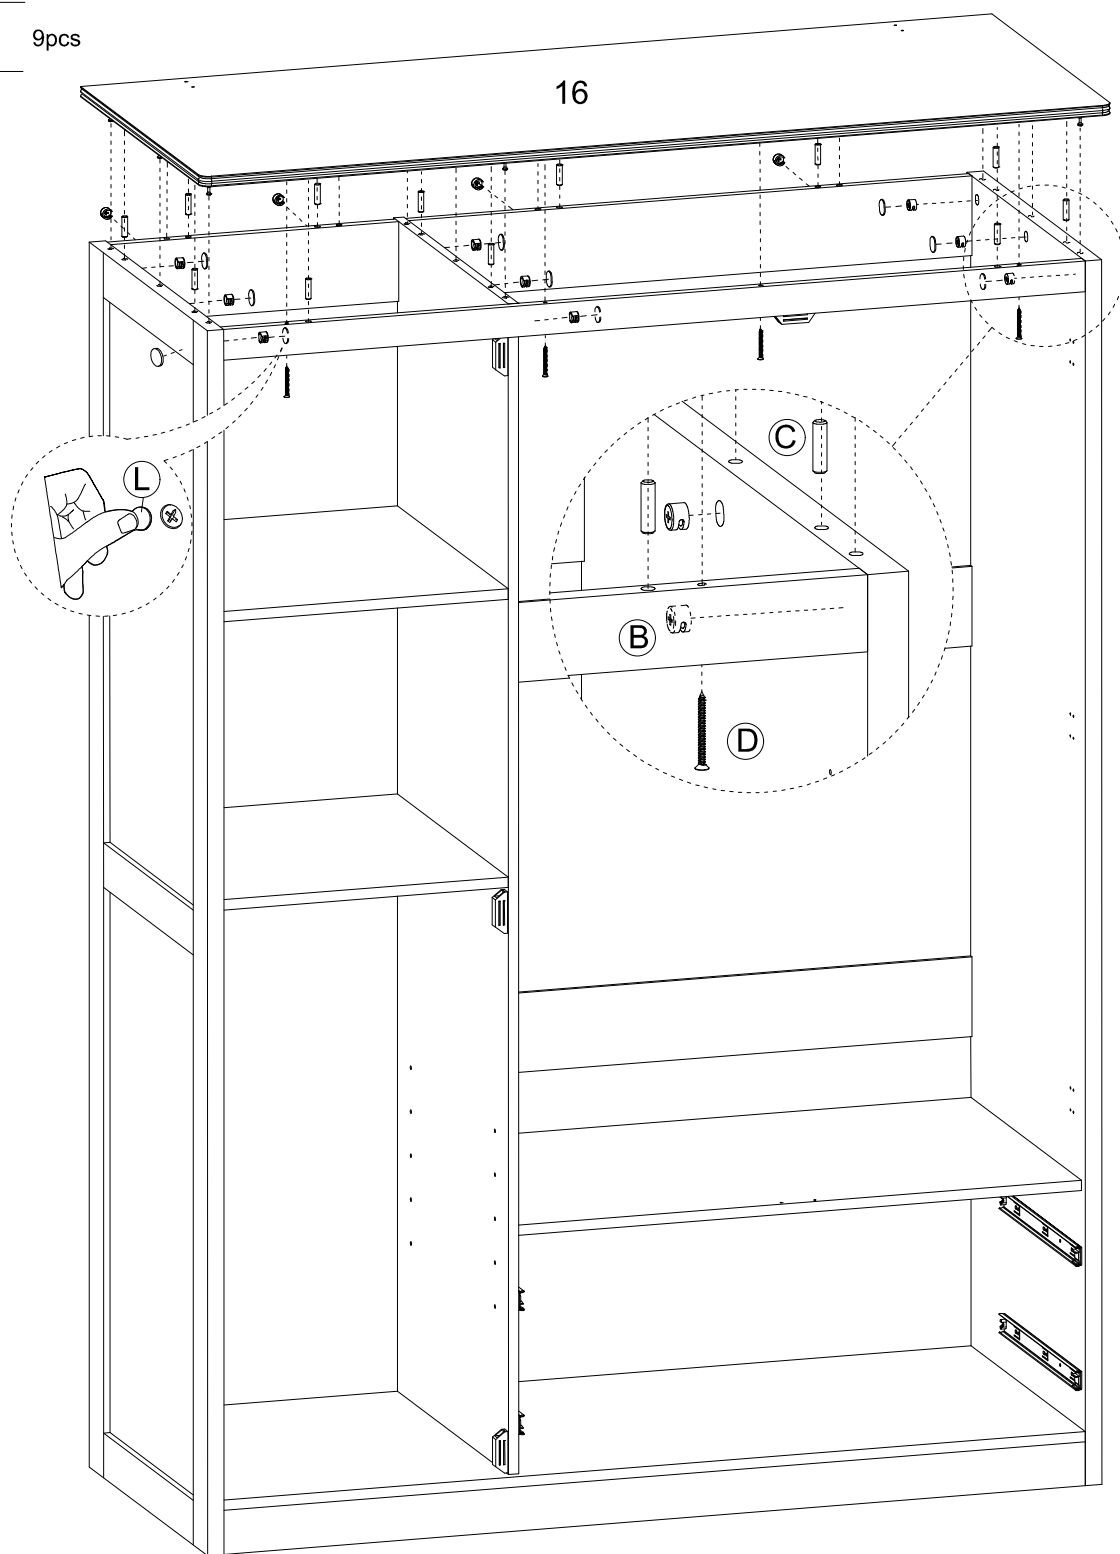
Ⓓ 4pcs

Ⓕ 9pcs






Step 18: Attach the Hanging Bar (14) and the Lower Left Shelf Panel(26) to the Frame.

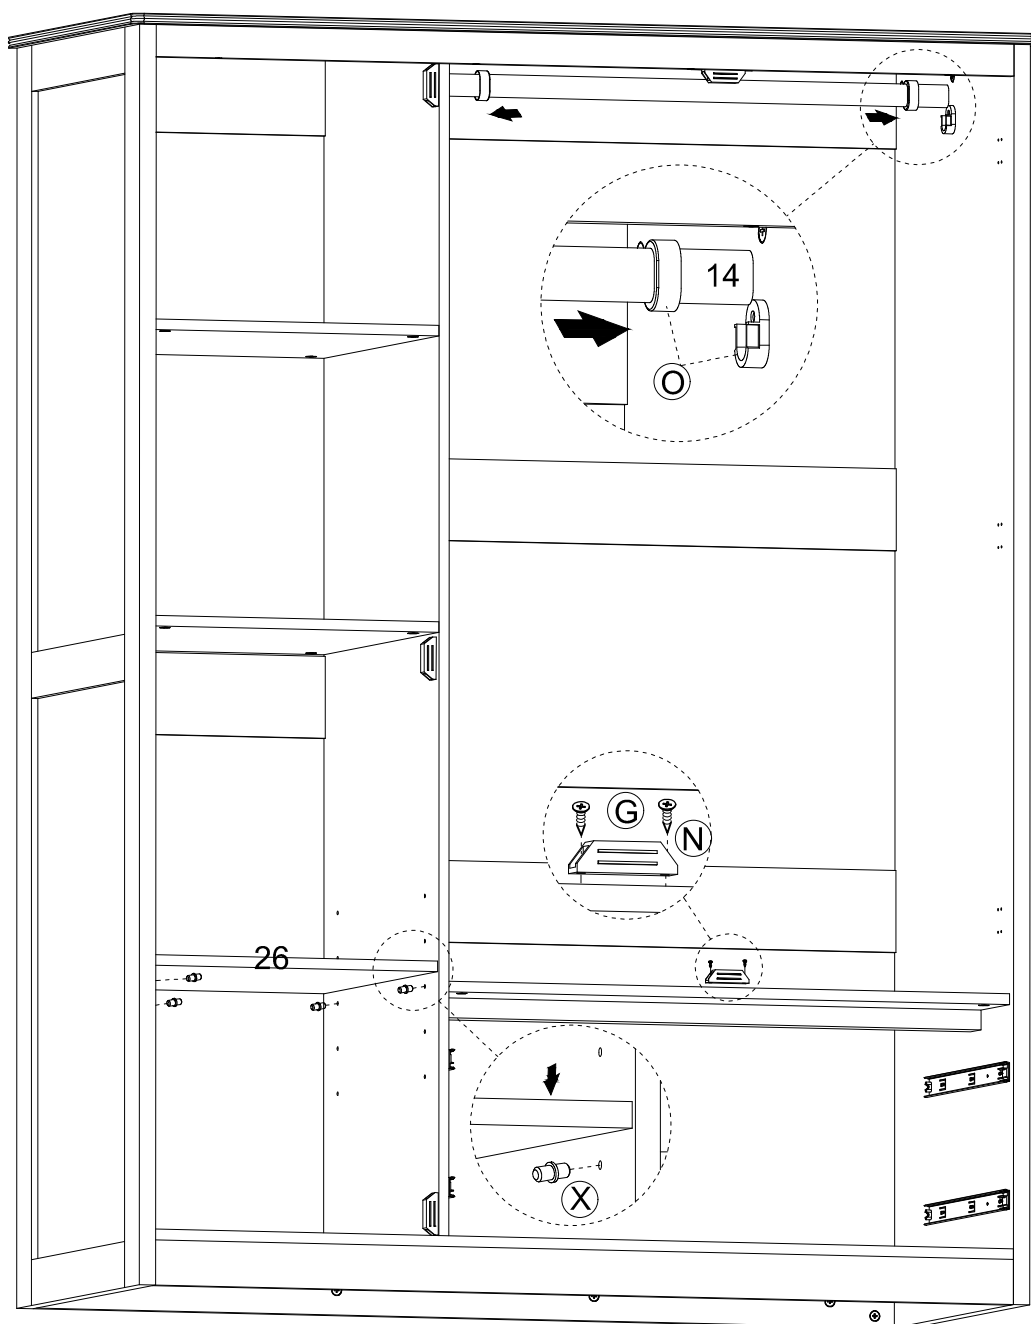- | | | |
|---|---|------|
| G |  | 2pcs |
| N |  | 1pc |
| O |  | 2pcs |
| X |  | 4pcs |




Step 19: Attach the Slide Rail to the Drawer Left Side (22) and Drawer Right Side (23).

- (H)  4pcs
- (I)  12pcs

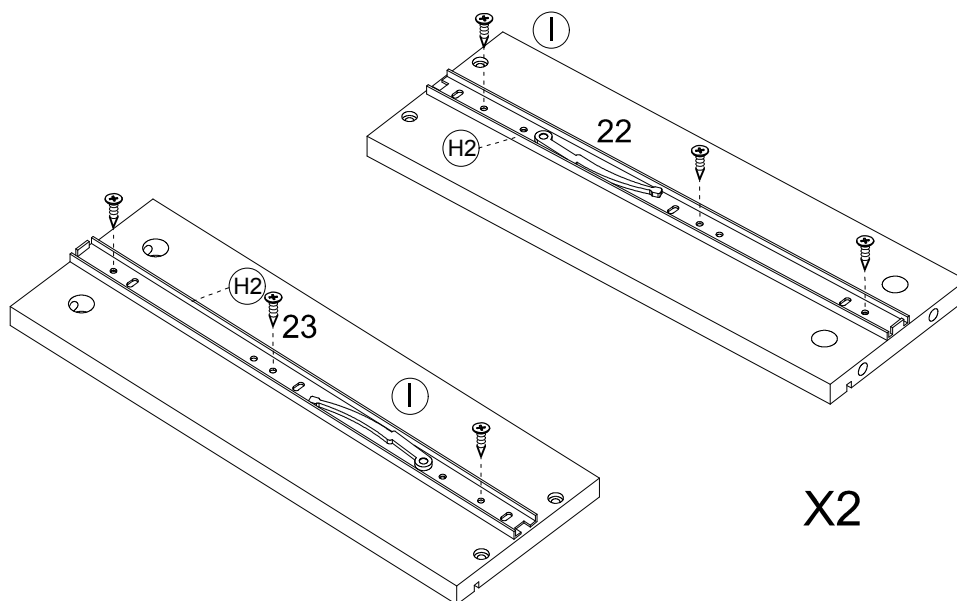





Step 20: Attach the Drawer.

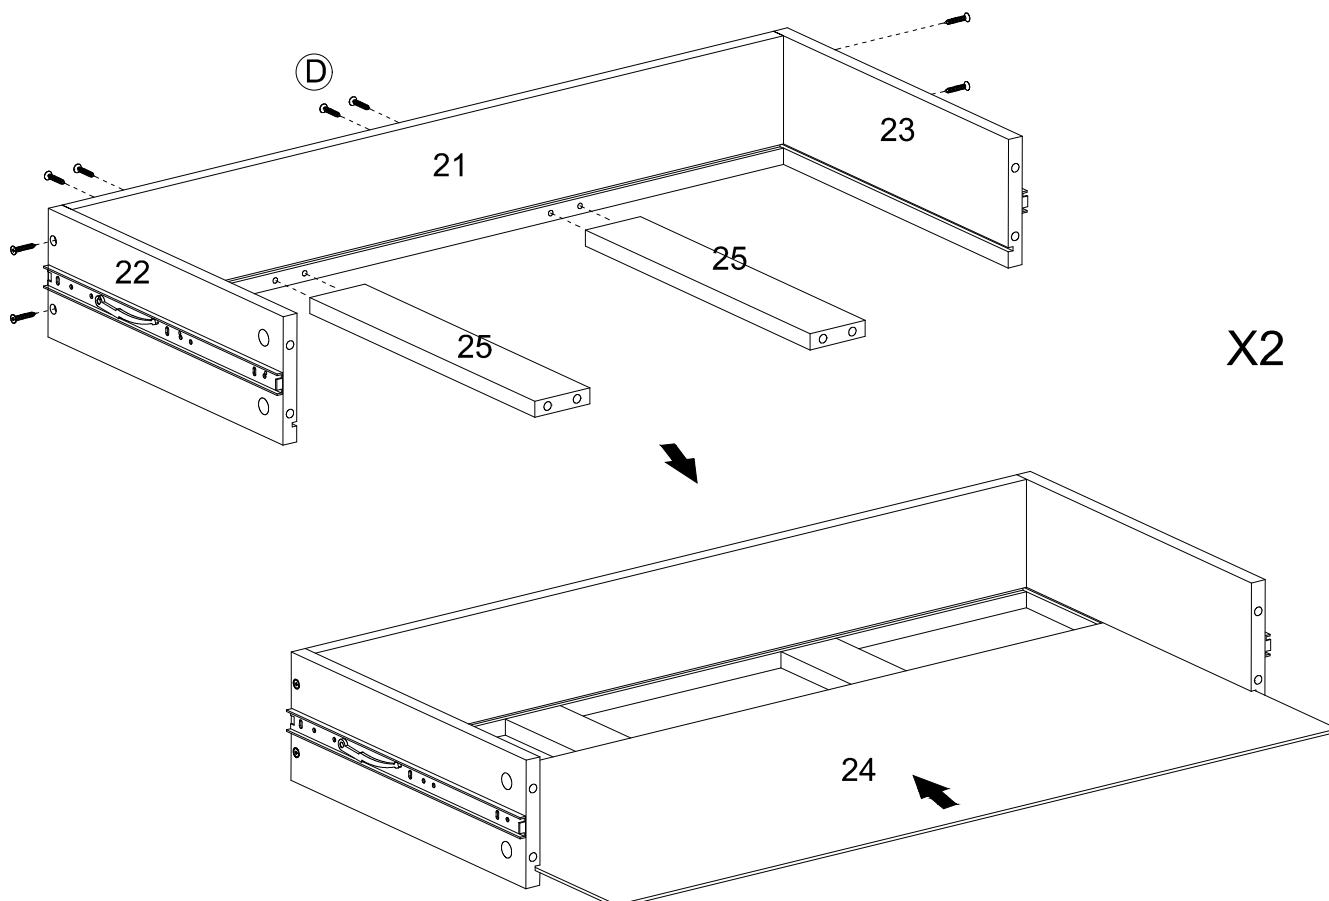- (D)  16pcs






Step 21: Attach the Fittings and Handle to the Drawer Front (20).

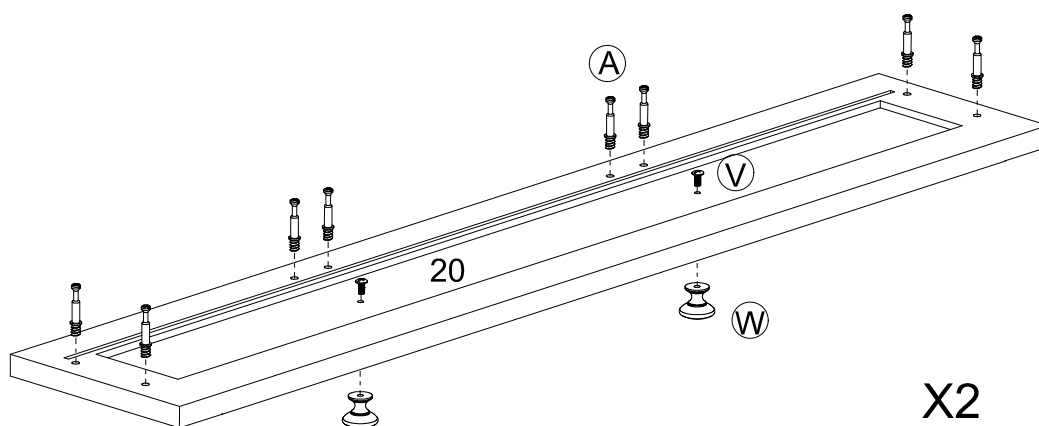- | | | |
|-----|---|-------|
| (A) |  | 16pcs |
| (V) |  | 4pcs |
| (W) |  | 4pcs |







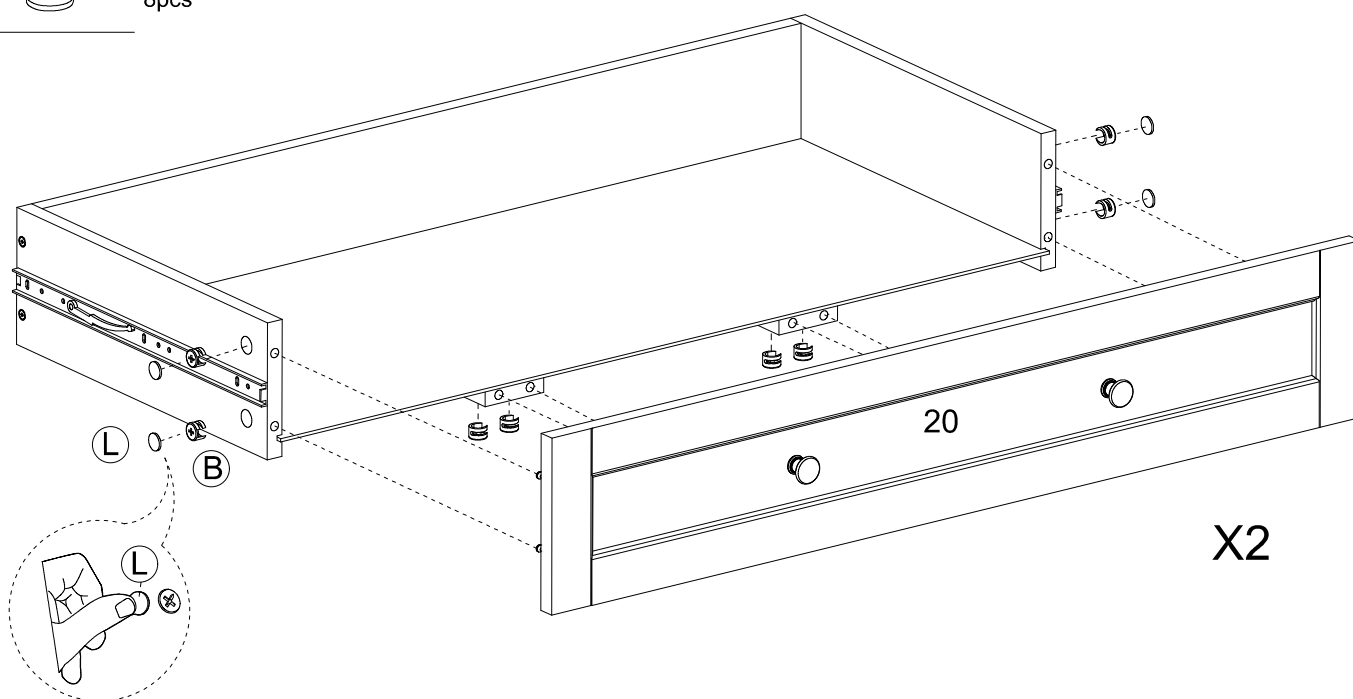


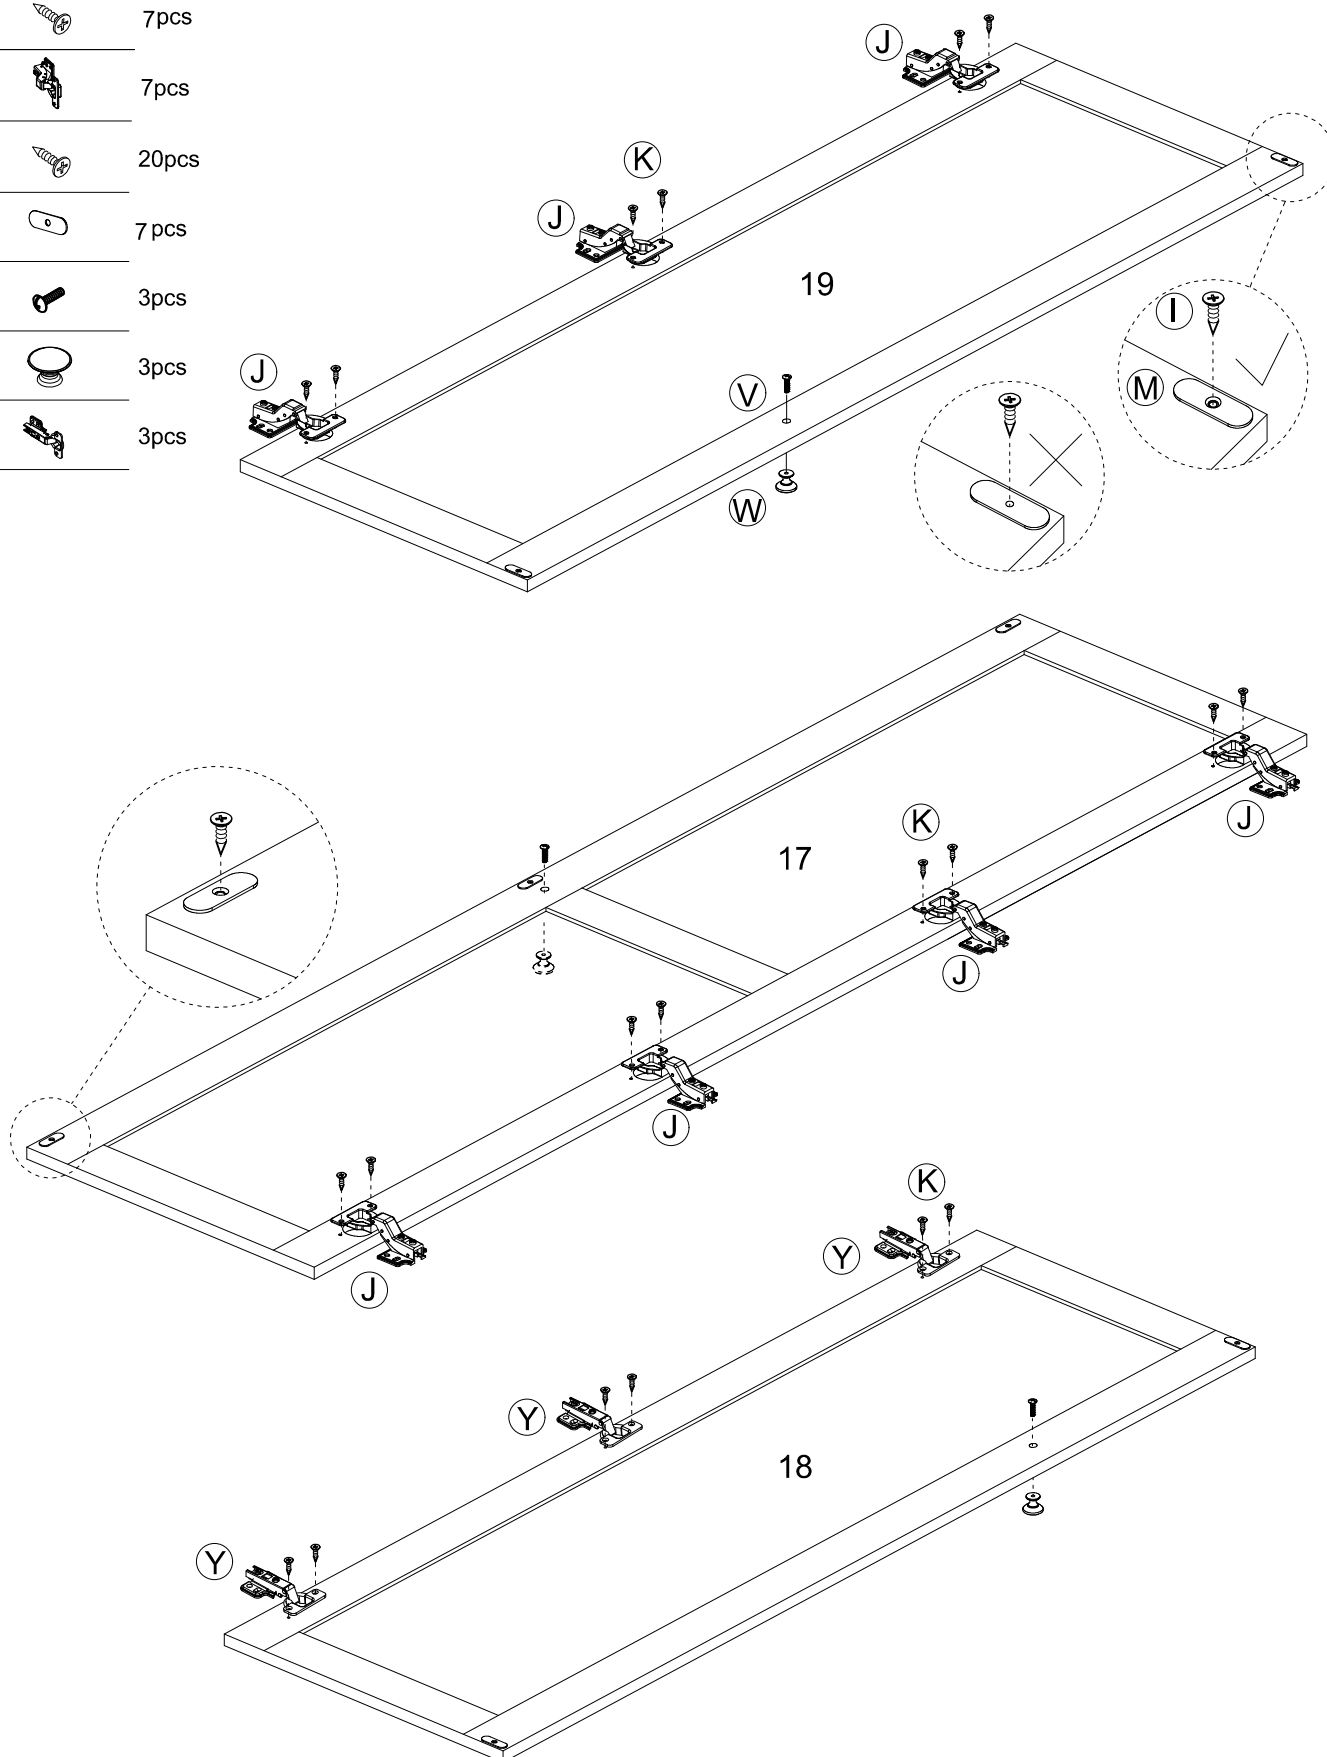
Step 22: Attach the Drawer Front (20) to the Frame.

- | | | |
|-----|---|-------|
| (B) |  | 16pcs |
| (L) |  | 8pcs |



Step 23: Attach the Hinges, Handle and Door Strike Plate to Door (17,18,19).

(I)		7pcs
(J)		7pcs
(K)		20pcs
(M)		7pcs
(V)		3pcs
(W)		3pcs
(Y)		3pcs






Step 24: Attach the Door (17,18,19) to the Frame,Slide the drawer into the Frame.





(K)

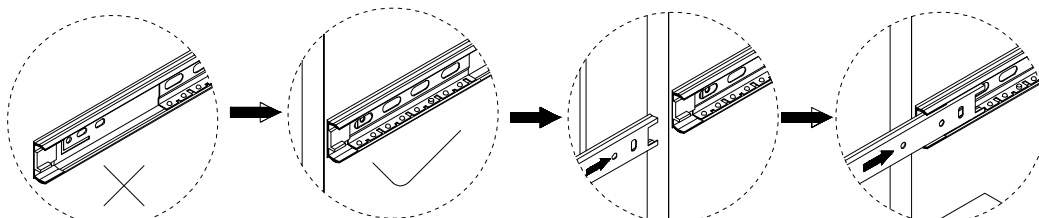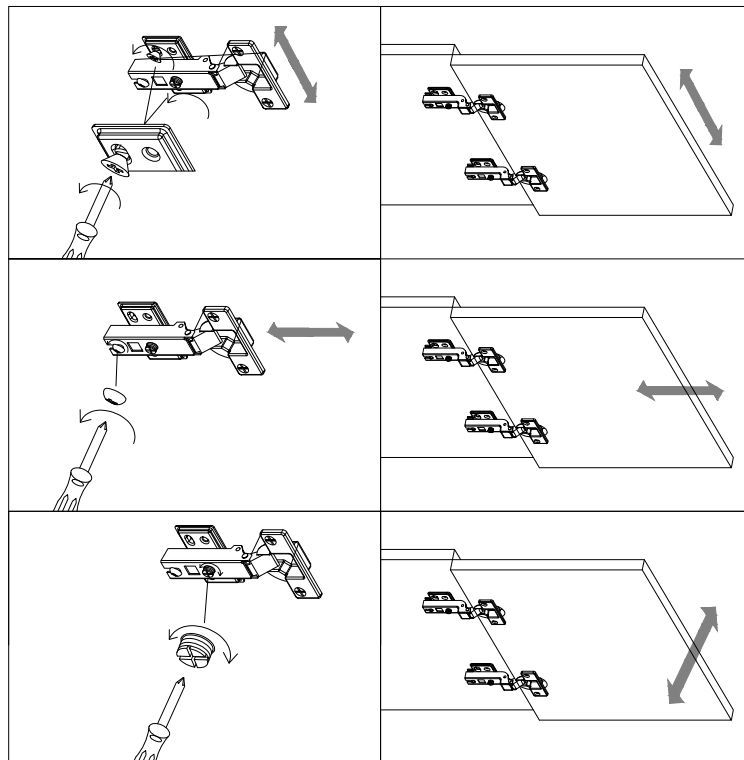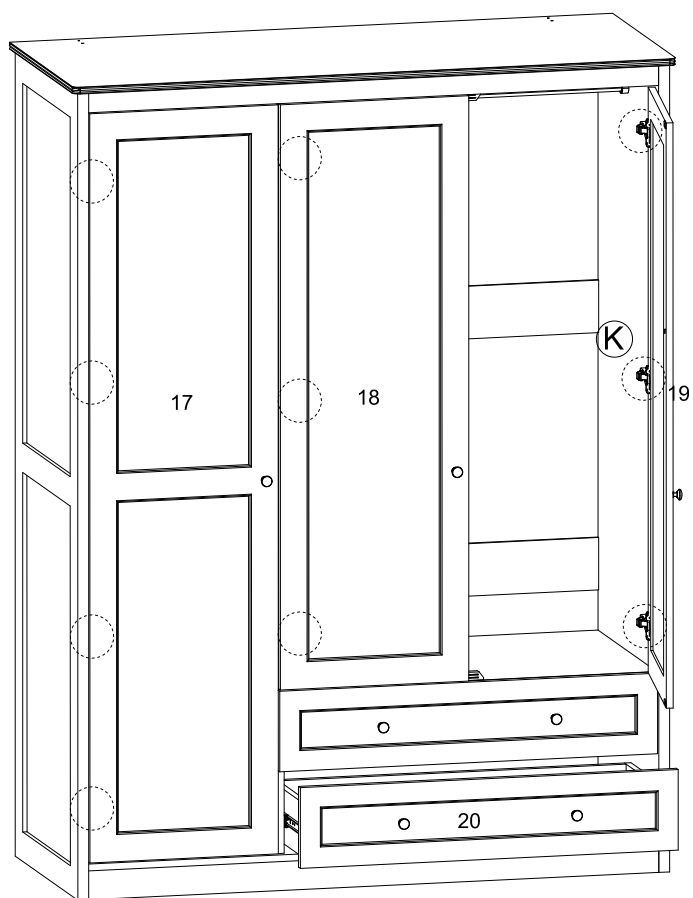


40pcs



Step 25: Attach the plastic buckles and wall bracket. Before securing the plastic buckles, manually adjust the frame to ensure the door is properly aligned, even, and parallel.

- | | | |
|-----|---|-------|
| (F) |  | 36pcs |
| (G) |  | 36pcs |
| (P) |  | 4pcs |
| (Q) |  | 2pcs |

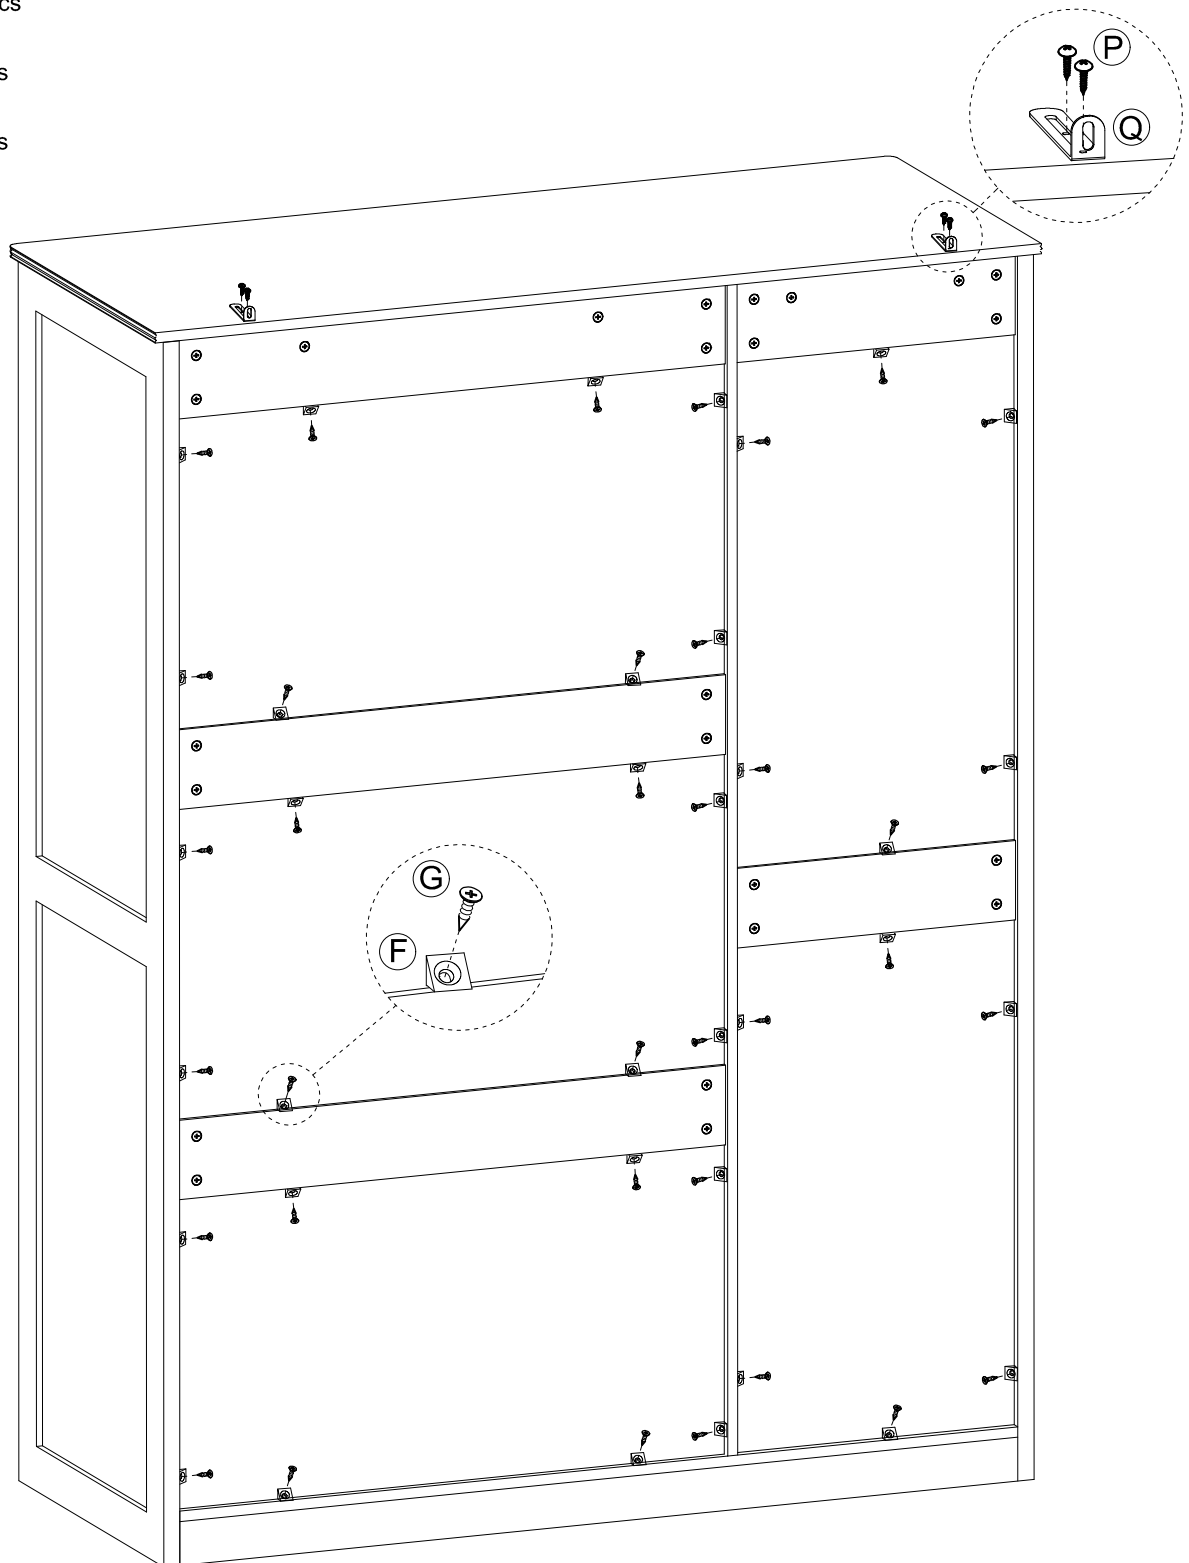

Step 26: Fix the wall bracket to the wall by drilling holes, inserting wall anchors, and securing it with screws.

Ⓓ  2pcs

Ⓔ  2pcs

