

DUSK.COM


LIVING | BEDROOM | DINING

Range : Ruby

Box Dimensions: W61xD37xH20 cm

Product Dimensions: W35xD30xH55 cm


Ruby Compact 2 Drawer Bedside Table

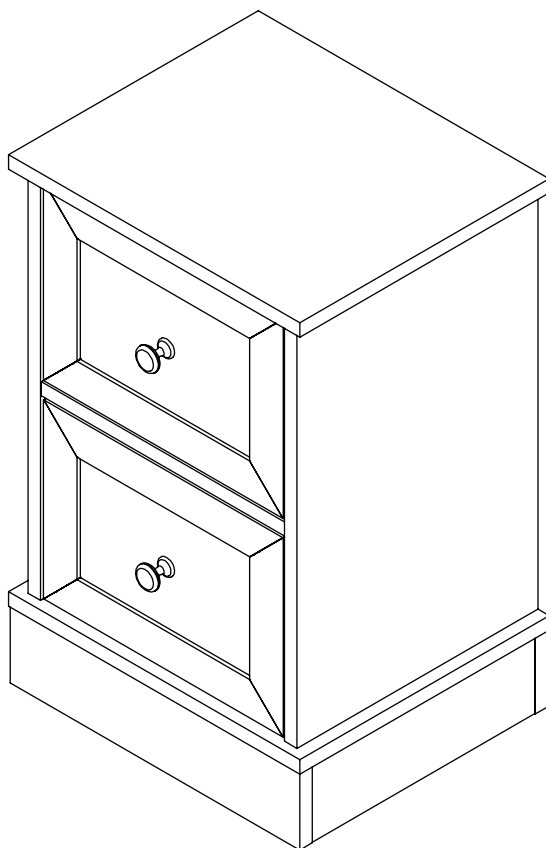

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Up to 60 minutes
assembly time

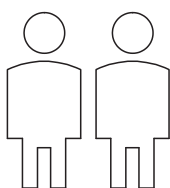

Two person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

V-1.0
P-1

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. In order to prevent overturning, this product must be used with the wall attachment device provided.
9. Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the bedside when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

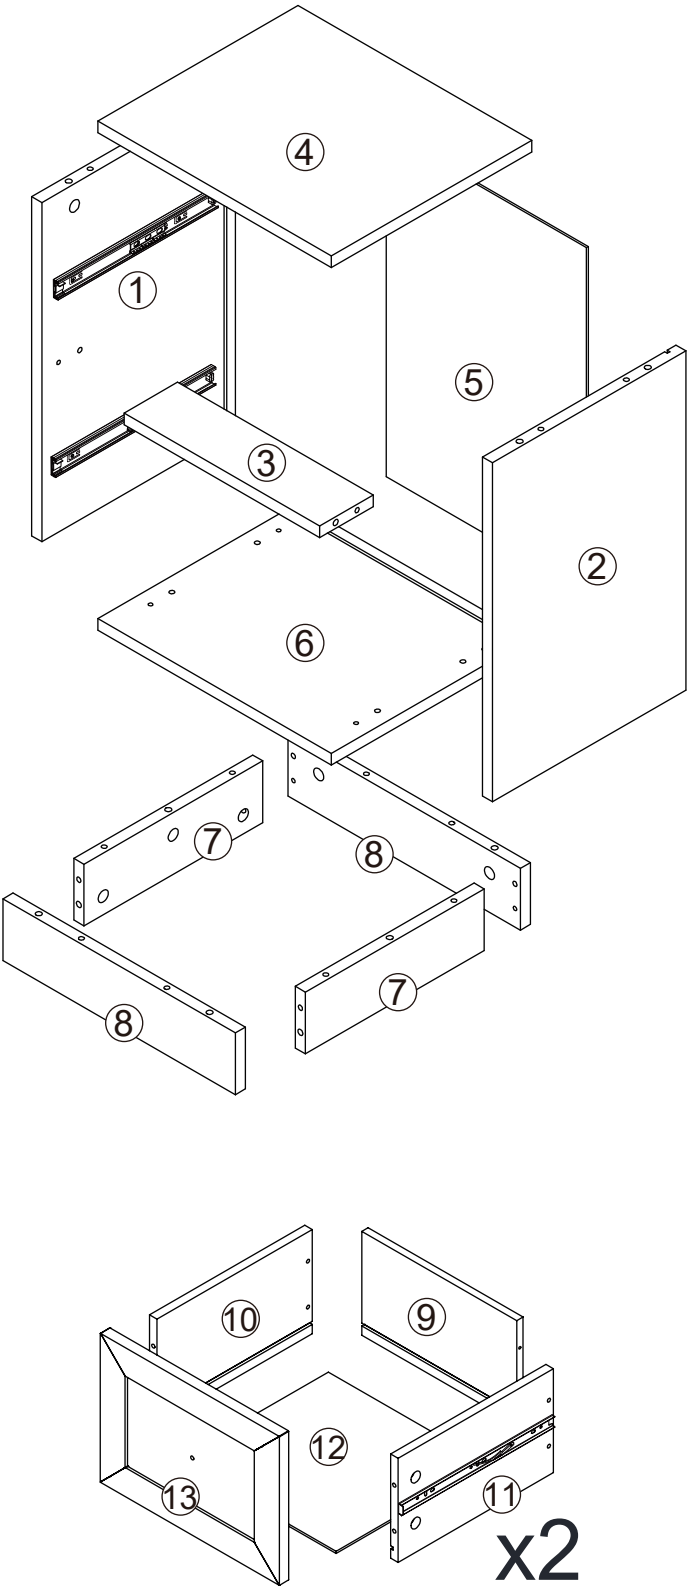

Parts list



Before you begin building your bedside, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
1	Left Side Panel With Slide Pre-assembled	1 pc	Box1
2	Right Side Panel With Slide Pre-assembled	1 pc	Box1
3	Front Support Bar	1 pc	Box1
4	Top Panel	1 pc	Box1
5	Back Panel	1 pc	Box1
6	Bottom Panel	1 pc	Box1
7	Leg Short Panel	2 pcs	Box1
8	Leg Long Panel	2 pcs	Box1
9	Drawer Back Side	2 pcs	Box1
10	Drawer Left Side With Slide Pre-assembled	2 pcs	Box1
11	Drawer Right Side With Slide Pre-assembled	2 pcs	Box1

Part Number	Part Description	Quantity	Box No
12	Drawer Bottom	2 pcs	Box1
13	Drawer Front	2 pcs	Box1

Fittings


Please check you have all the fittings listed below with your product in Box1.

A  M5*35mm Cam Lock Screw 24pcs+2pcs extra	B  Ø15*10mm Cam Lock 24pcs+2pcs extra	C  Ø6*30mm Dowel 22pcs+2pcs extra	D  M4*40mm Screw 12pcs+1pc extra	E  Cover 8pcs+1pc extra	F  Plastic Buckle 4pcs+1pc extra
G  M3*14mm Screw 4pcs+1pc extra	H  Handle 2pcs	I  M4*10mm Bolt 2pcs	J  Plastic foot pad 4pcs		


Pre- assembled Fitting

M1  Slide 4pcs	M2  Slide 4pcs	N  M3.5*12mm Screw 24pcs
---	---	---


Ensure the cam lock screws are installed correctly, as indicated by the "check mark" below.

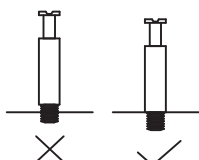


Refer to the illustration below to correctly use the cam lock screws for assembling the panels.

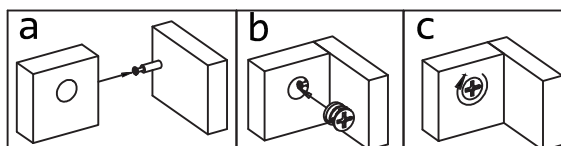

1. Attach parts to the side panel.

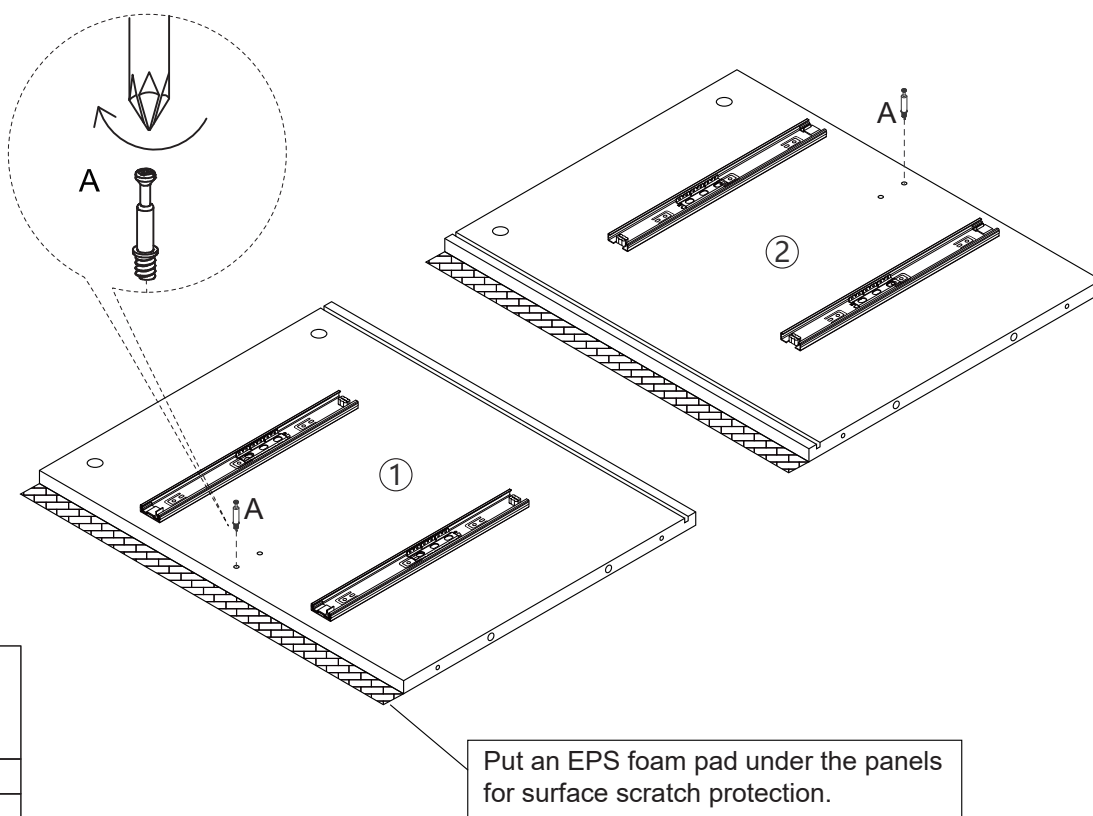


2. Assemble the left and right side panels with horizontal bars.

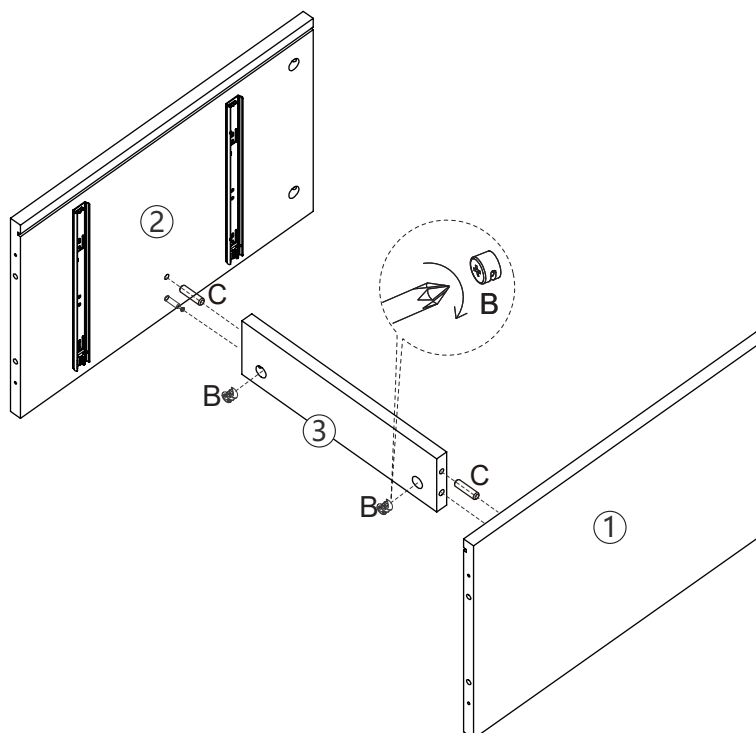


B		C	
Ø15*10mm Cam Lock		Ø6*30mm Dowel	
2pcs		2pcs	


3. Attach panels to the bottom.

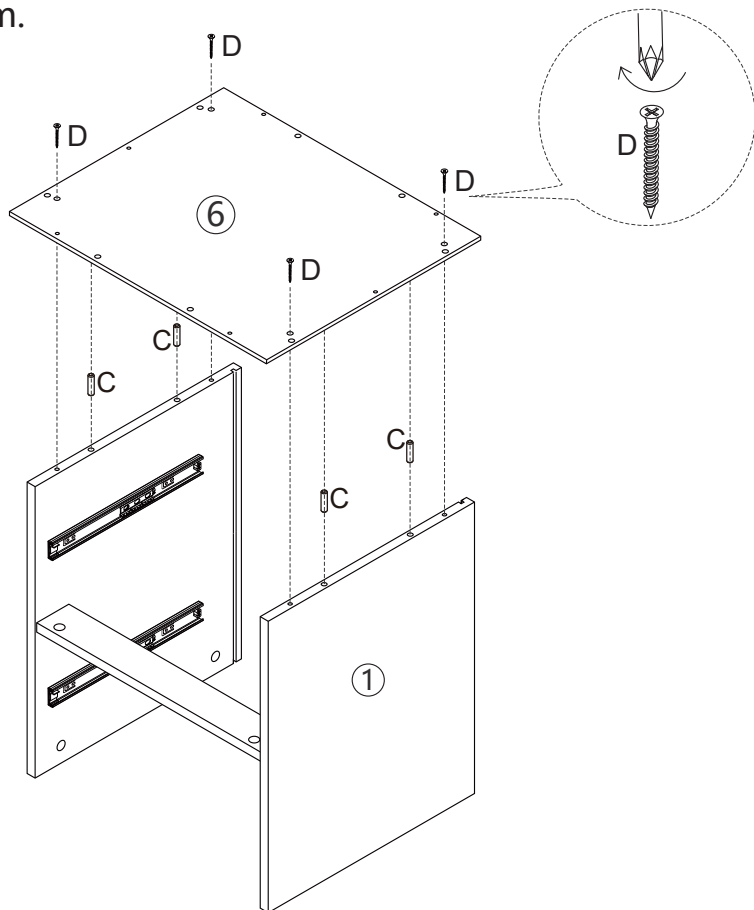


C	D
	
Ø6*30mm Dowel	M4*40mm Screw
4pcs	4pcs


4. Attach parts to the bottom panel.

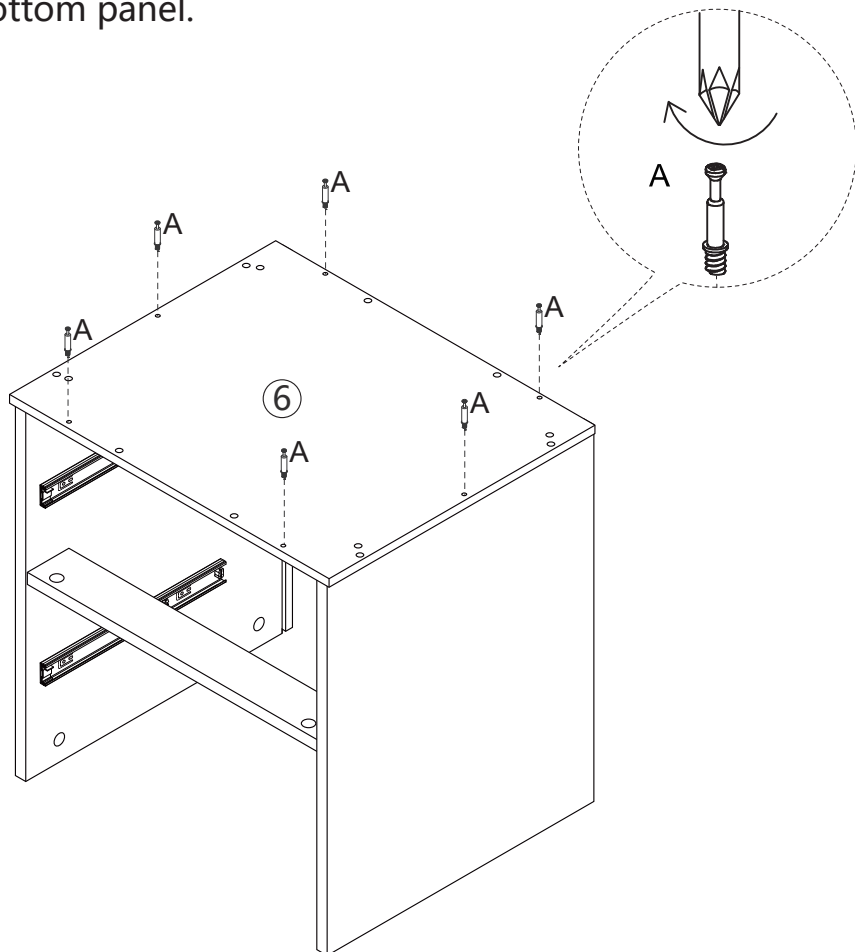


A

M5*35mm Cam Lock Screw
6pcs

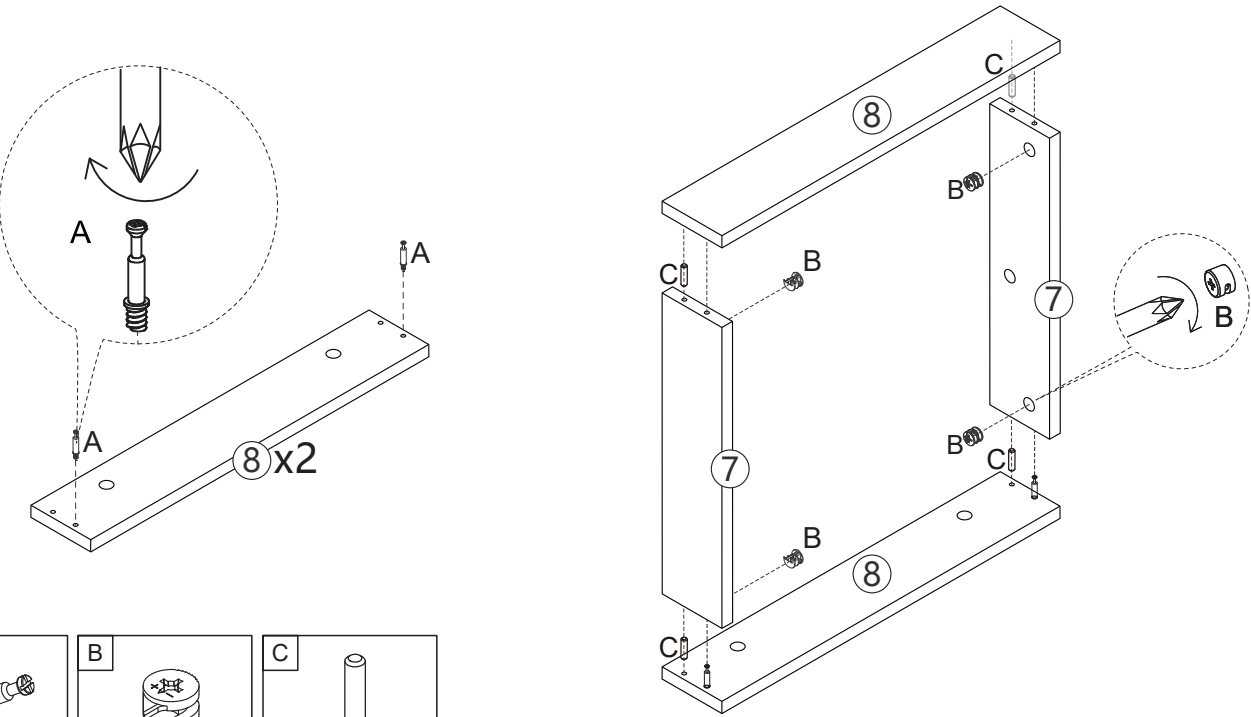5. Assemble the panels of each part together according to the diagram.



A	B	C
		
M5*35mm Cam Lock Screw 4pcs	Ø15*10mm Cam Lockk 4pcs	Ø6*30mm Dowel 4pcs


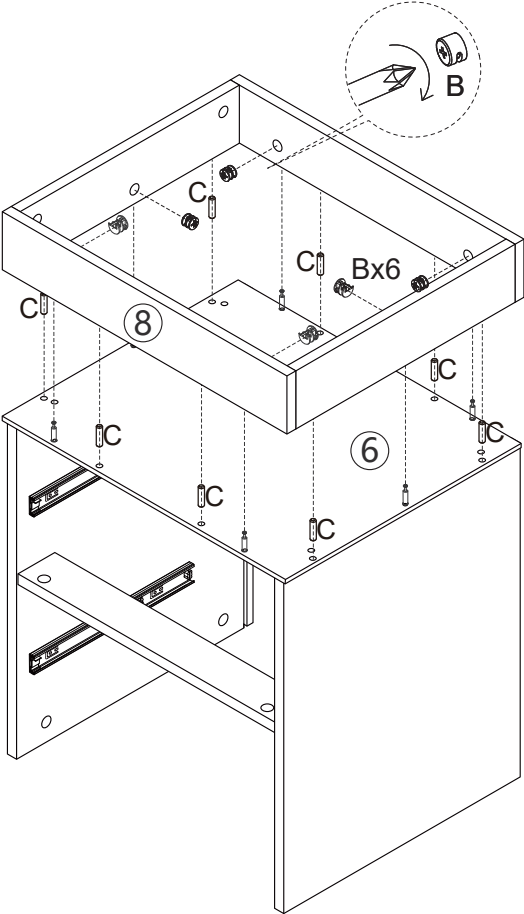
6. Attach Legs to the bottom.




B	C
	
Ø15*10mm Cam Lockk 6pcs	Ø6*30mm Dowel 8pcs

7. Attach Legs to the bottom.


This installation tool is not provided.

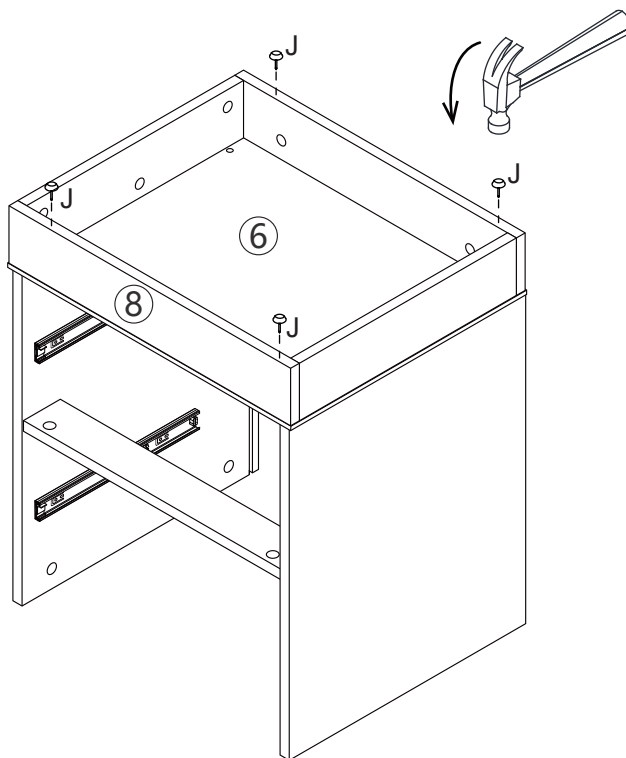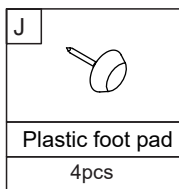


8. Assemble back panel.

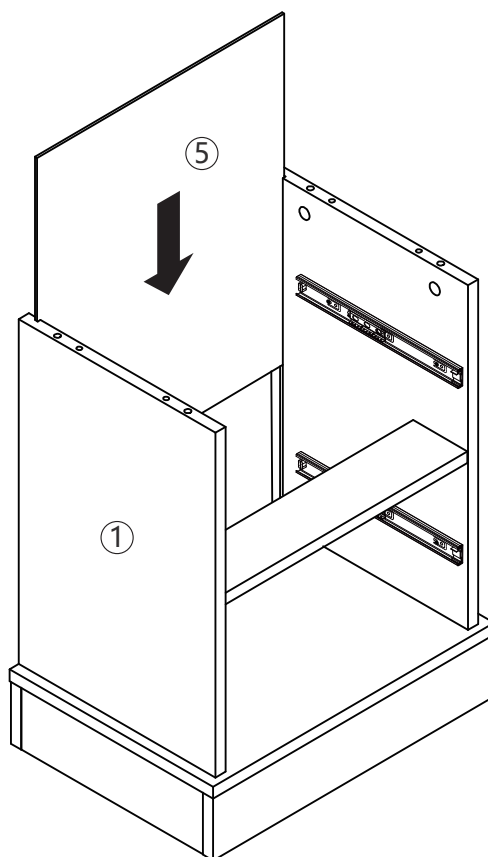


9. Attach parts to the top panel.

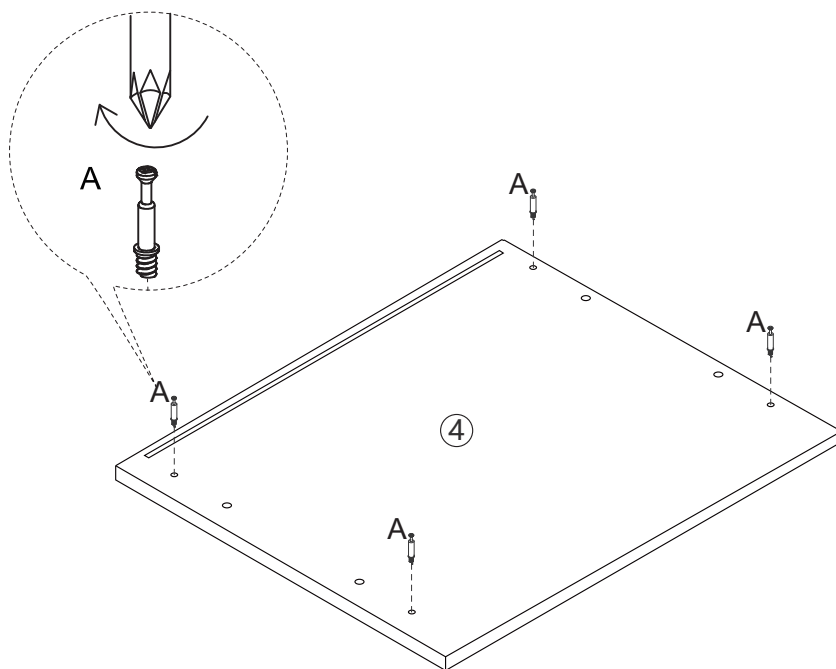

A	
	M5*35mm Cam Lock Screw
	4pcs


10. Attach the top panel to the frame.

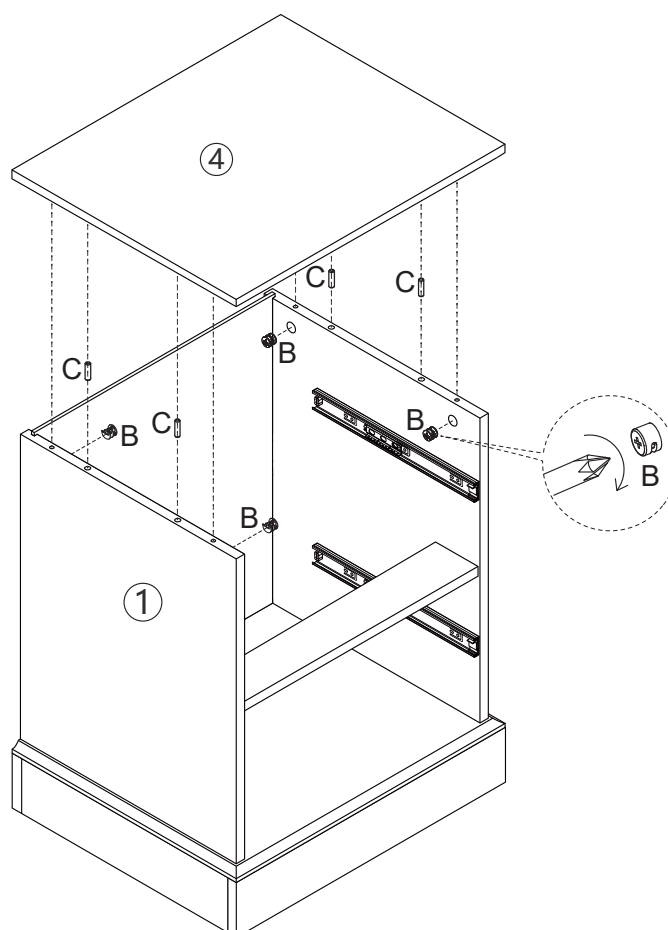

B	
	Ø15*10mm Cam Lockk
	4pcs

C	
	Ø6*30mm Dowel
	4pcs


11. Assemble the panels of each part together according to the diagram.

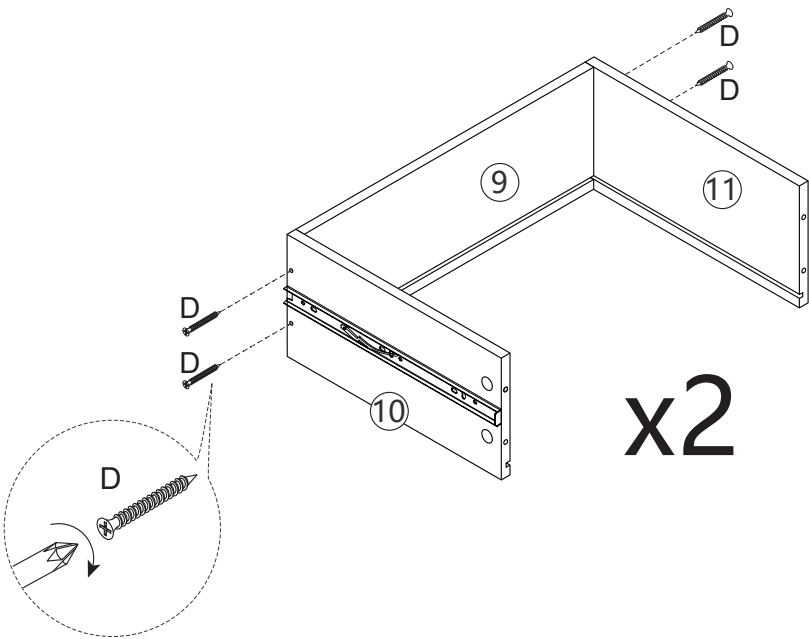


D


M4*40mm Screw
8pcs

12. Assemble the drawer by following the steps shown in the illustration below.

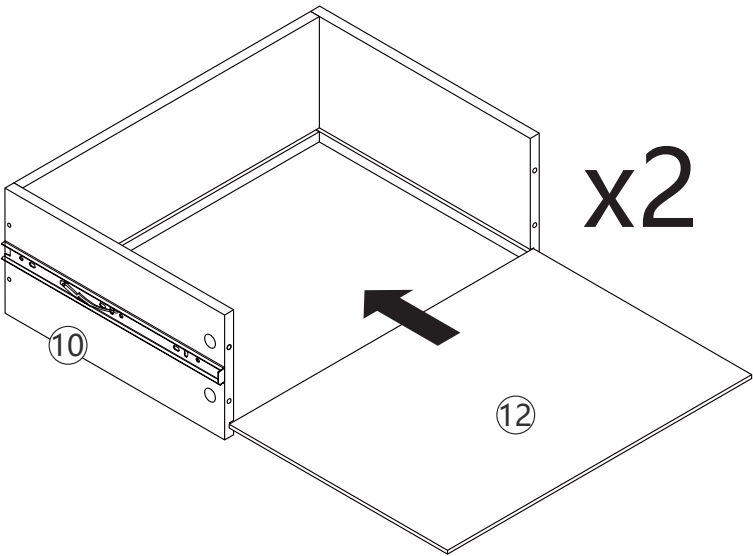


13. Attach parts to the drawer panel.

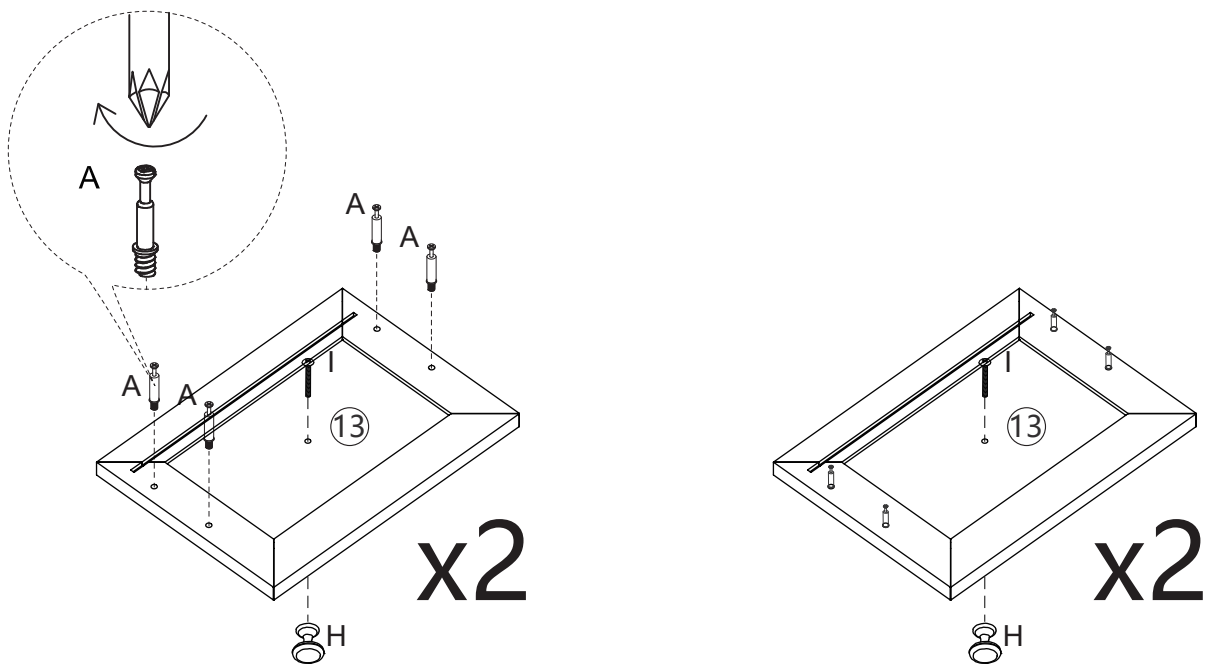


A	H	I
		
M5*35mm Cam Lock Screw 8pcs	Handle 2pcs	M4*10mm Bolt 2pcs

14. Assemble the drawer by following the steps shown in the illustration below.

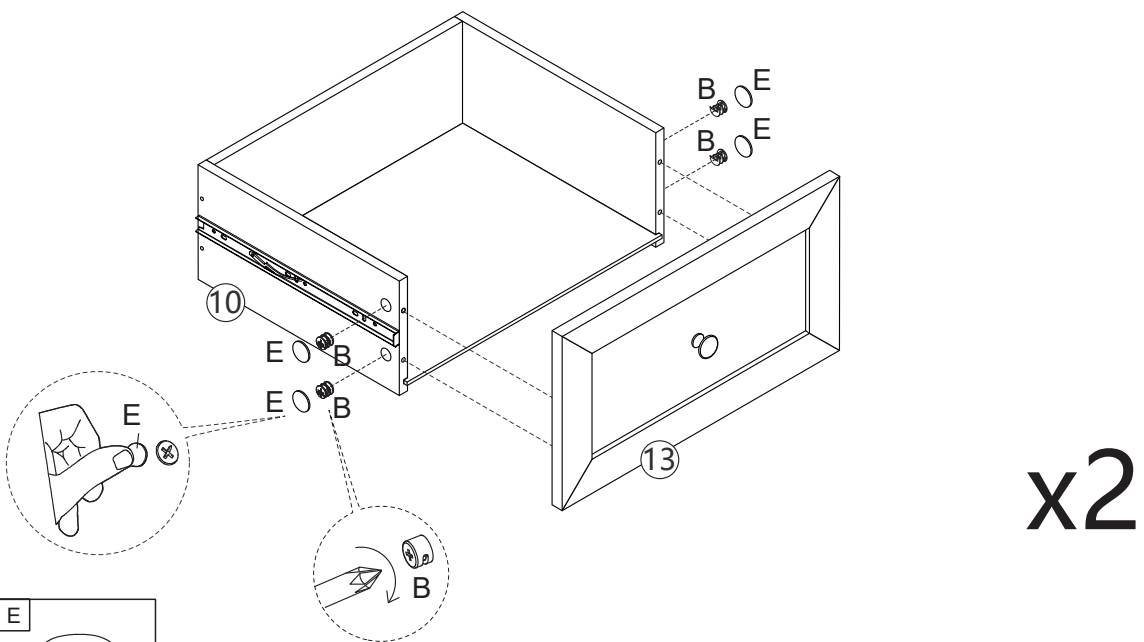


B	E
	
Ø15*10mm Cam Lock 8pcs	Cover 8pcs


15. Assemble drawer in the cabinet.

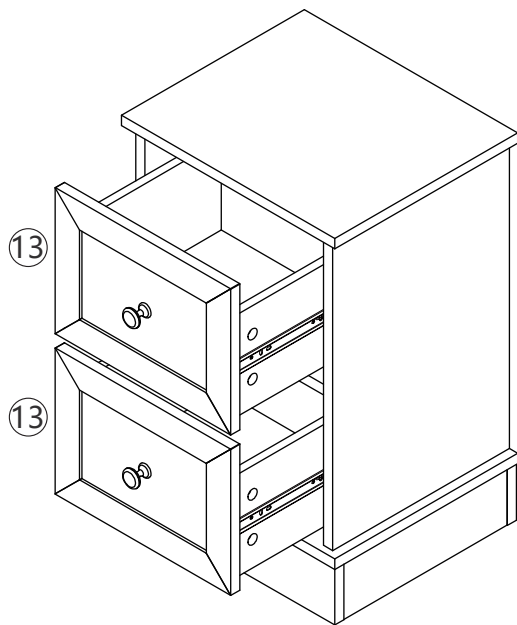



When installing the drawer into the cabinet, align the slide rails properly first. then push it gently - do not force it in. Make sure to move the metal sheet to the outermost position.

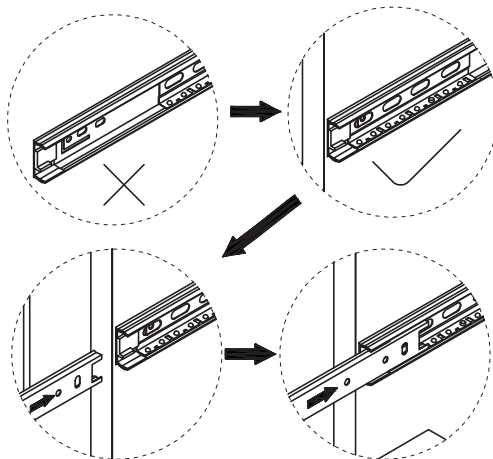

16. Attach the plastic buckles and screws.

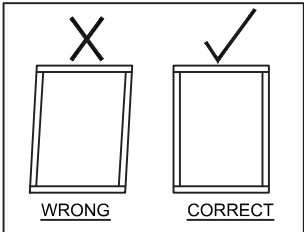


NB: Before tightening the plastic buckles and screws, please ensure the frame is square

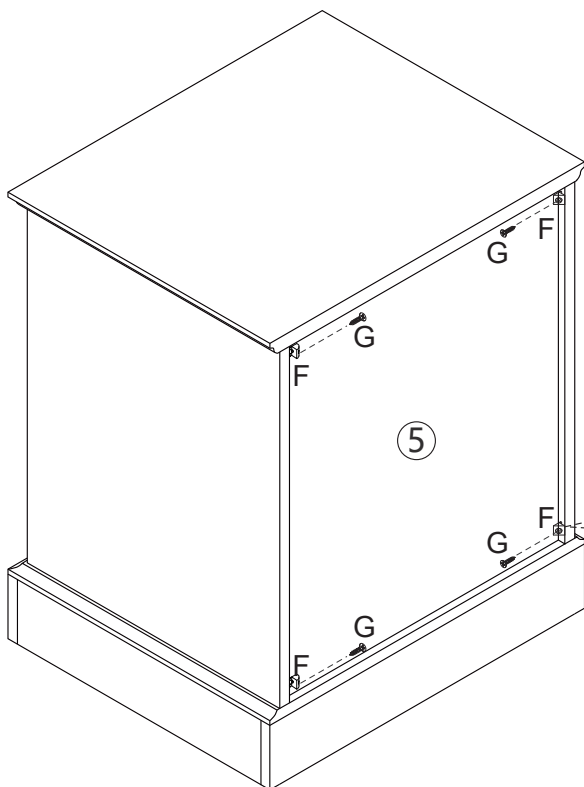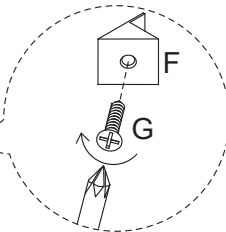

F	G
Plastic Buckle	M3*14mm Screw
4pcs	4pcs

17. Take apart the drawer by following the steps shown in the illustration below.

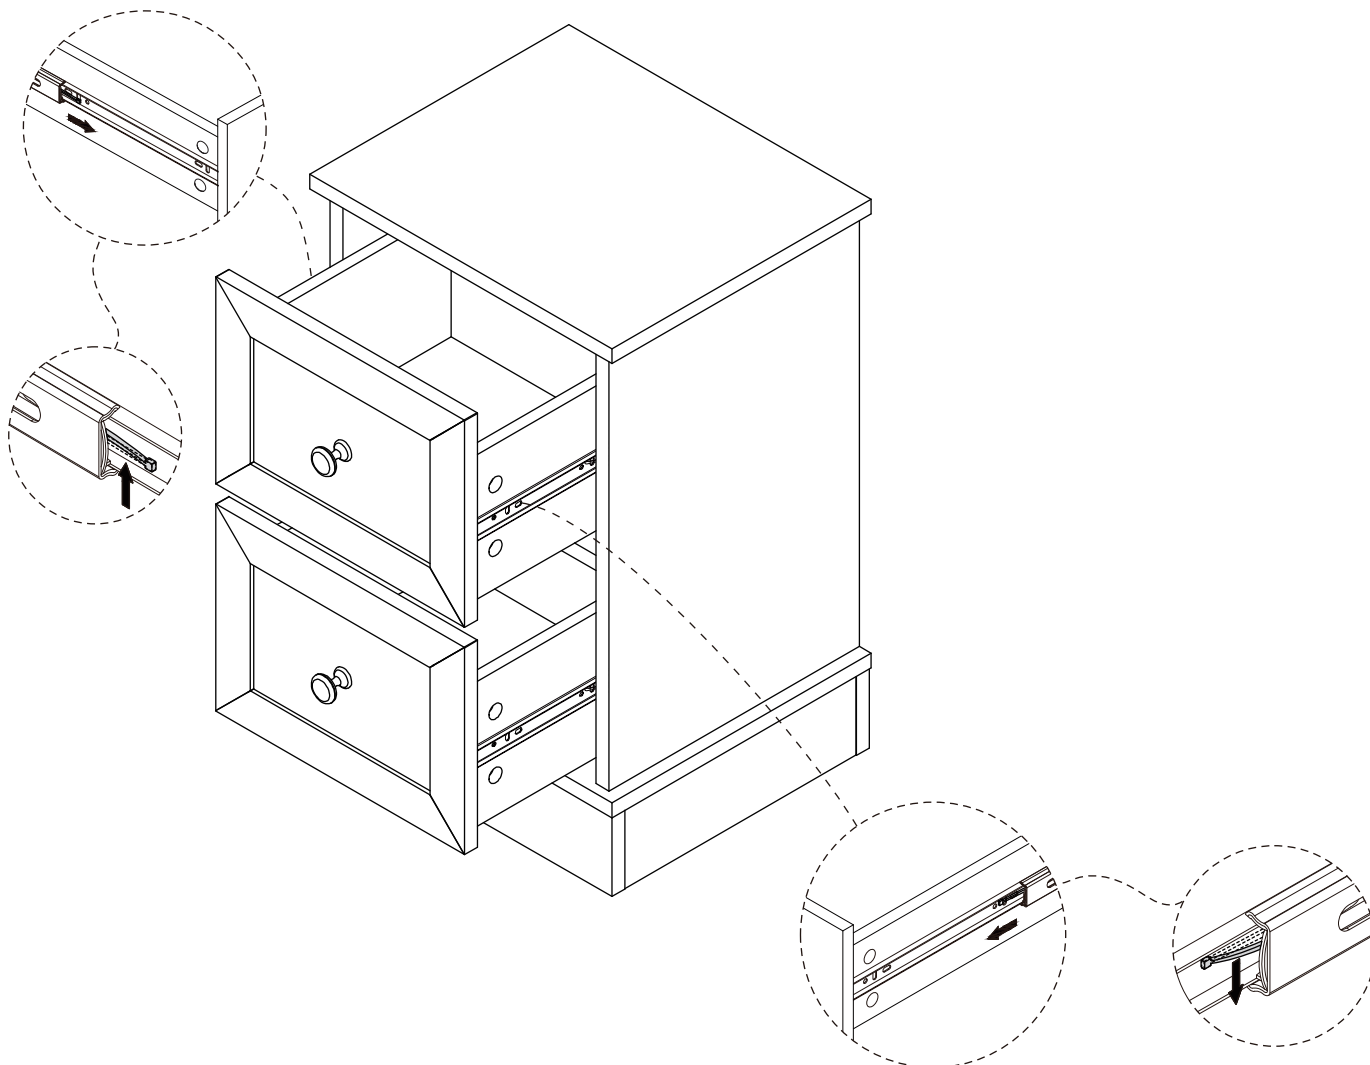

How to take apart a drawer:

1. Pull out the drawer until the plastic clips on the rail are visible.
2. Push the plastic clip on the left side up and press the right side down. You need to do both at the same time to pull out the drawer. Note that the clips on the left and right tracks face opposite directions.
3. While pressing the clips at the same time, pull out the drawer to separate the rails.