

DUSK.COM


LIVING | BEDROOM | DINING

Range Name: Ruby

Box1 Dimensions: W146xD51xH12.5 (cm)

Product Dimensions: W48xD40xH180 (cm)


Space Saving Entry Way Cabinet

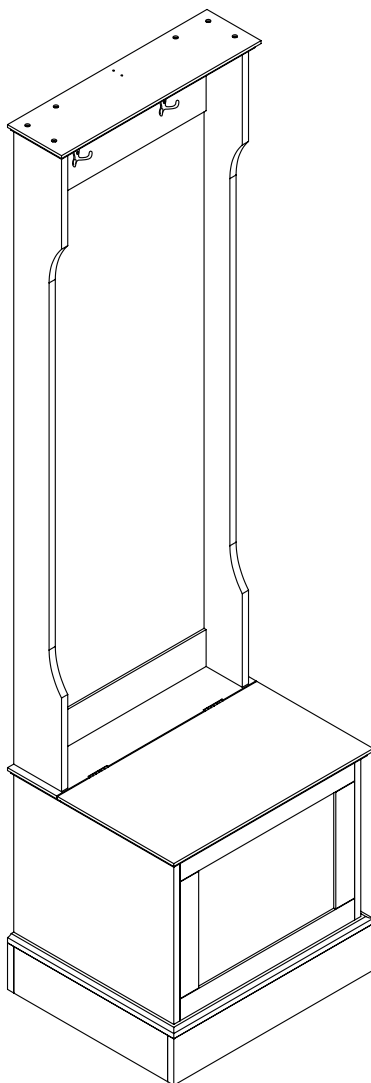

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Up to 120 minutes
assembly time

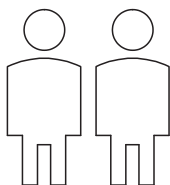

Two person
assembly



Electric screwdriver
prohibited

This product is intended for domestic use only, not for commercial purposes.

V-1.0
P-1/16

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Space Saving Entry Way Cabinet frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Space Saving Entry Way Cabinet in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. In order to prevent overturning, this product must be used with the wall attachment device provided.
9. Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Space Saving Entry Way Cabinet when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

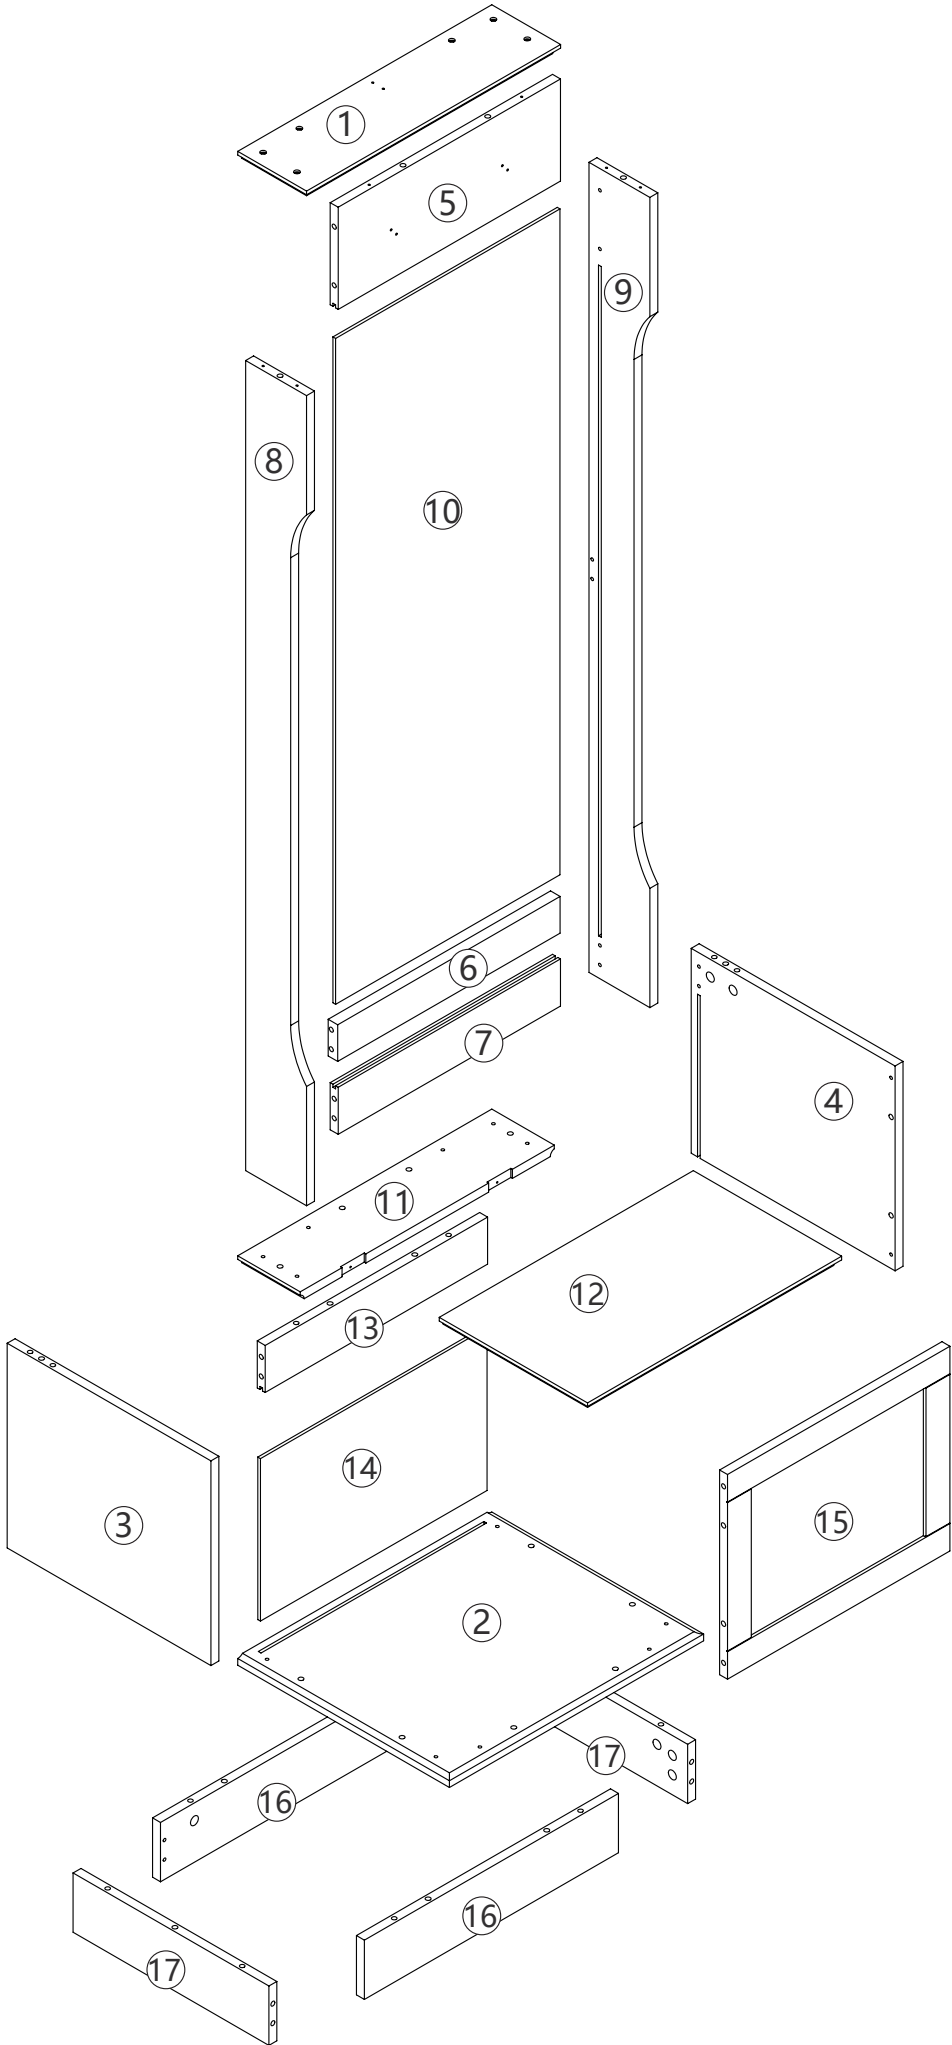

Parts list



Before you begin building your Space Saving Entry Way Cabinet, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
1	Top Panel	1 pc	Box1
2	Bottom Panel	1 pc	Box1
3	Left Side Panel	1 pc	Box1
4	Right Side Panel	1 pc	Box1
5	Upper Support Panel	1 pc	Box1
6	Back Support Bar	1 pc	Box1
7	Centre Support Bar	1 pc	Box1
8	Upper Left Panel	1 pc	Box1
9	Upper Right Panel	1 pc	Box1
10	Upper Back Panel	1 pc	Box1
11	Hinge Support Bar	1 pc	Box1
12	Door	1 pc	Box1
13	Bottom Support Bar	1 pc	Box1


Part Number	Part Description	Quantity	Box No
14	Lower Back Panel	1 pc	Box1
15	Front Panel	1 pc	Box1
16	Leg Long Panel	2 pcs	Box1
17	Leg Short Panel	2 pcs	Box1

Fittings


Please check you have all the fittings listed below with your product in Box1.

A  M6*35mm Cam Lock Screw 42pcs+4pcs extra	B  Ø15*10mm Cam Lock 42pcs+4pcs extra	C  Ø8*30mm Dowel 20pcs+3pcs extra	D  Hinge 2pcs	E  Cover 8pcs+1pc extra	F  Plastic Buckle 12pcs+1 pc extra	G  M3*14mm Screw 24pcs+3pcs extra
H  Hook 2pcs	I  M3.5*14mm Screw 4pcs	J  Plastic foot pad 4pcs	K  M4*40mm Screw 19pcs+2pcs extra	L  Ø8*50mm Dowel 4pcs	M  Wall Bracket 1pc	N  M4*14mm Screw 6pcs
O  M6*30mm Wall Anchor 1pc	P  Left Support Hinge 1pc	Q  Plastic Mat 3pcs				


Ensure the cam lock screws are installed correctly, as indicated by the "check mark" below.

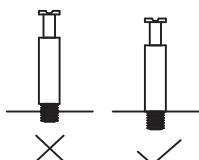


Refer to the illustration below to correctly use the cam lock screws for assembling the panels.

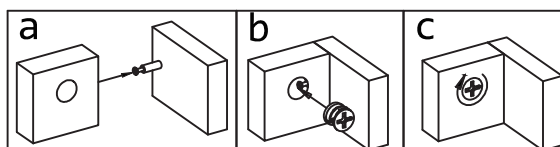


1. Attach parts to the side panel.

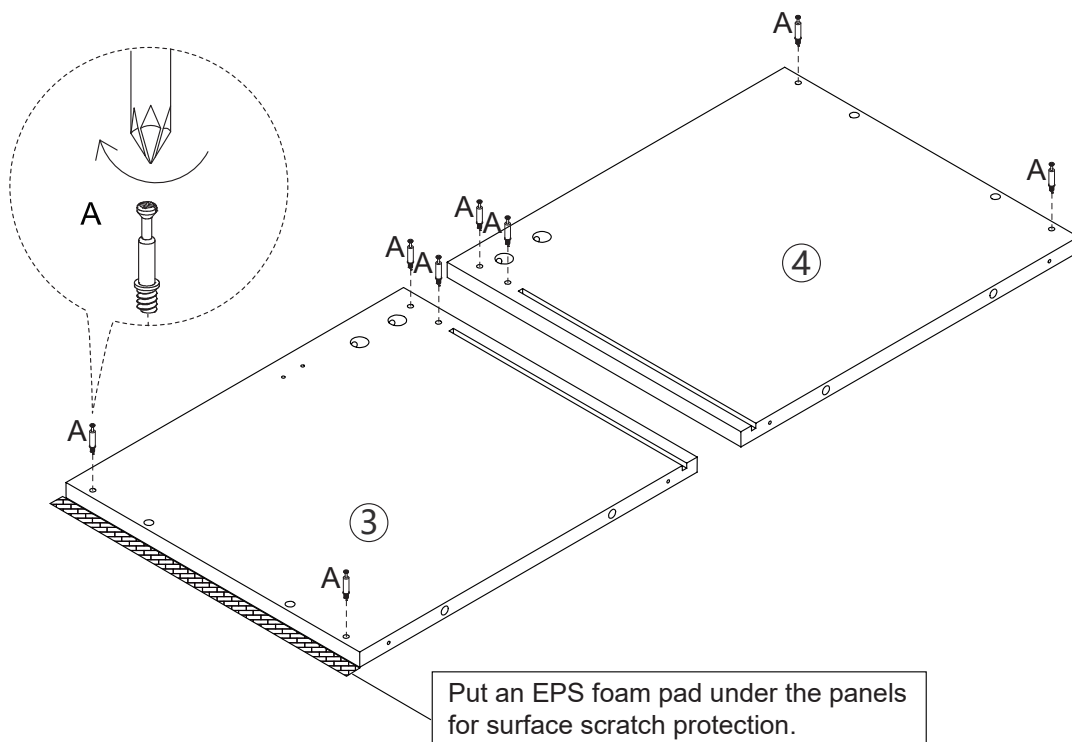

A	
	M6*35mm Cam Lock Screw
	8pcs


2. Assemble the panels of each part together according to the diagram.

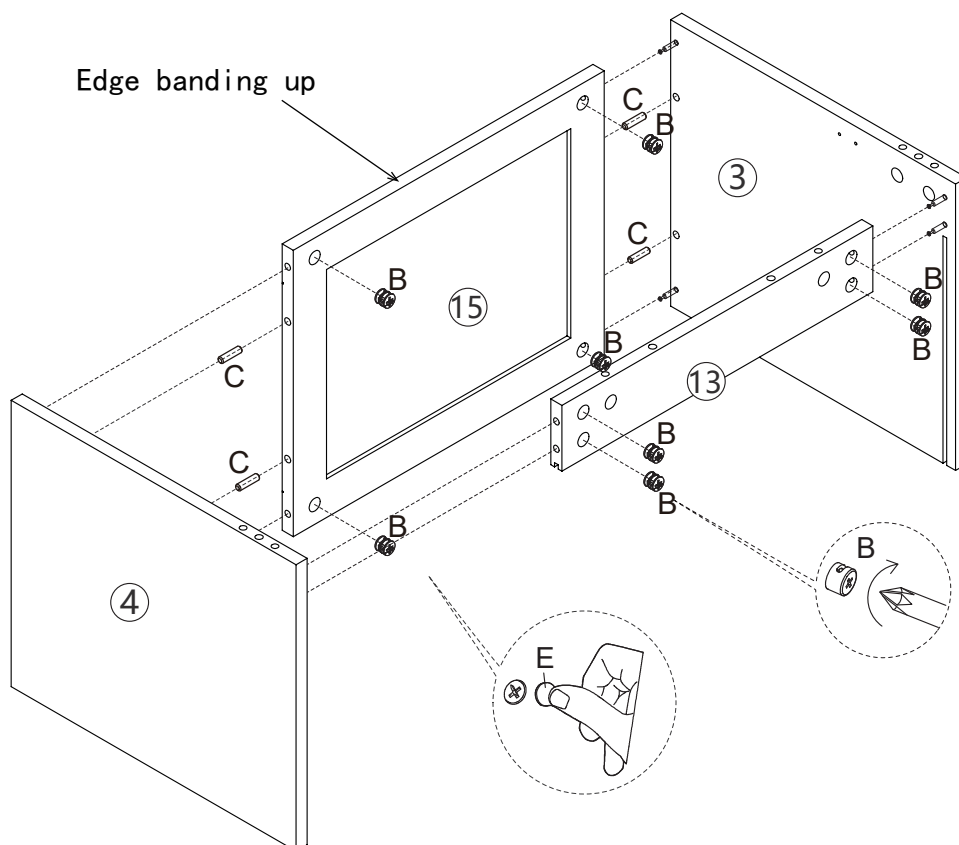


B	
	Ø15*10mm Cam Lock
	8pcs

C	
	Ø8*30mm Dowel
	4pcs

3. Assemble back panel.


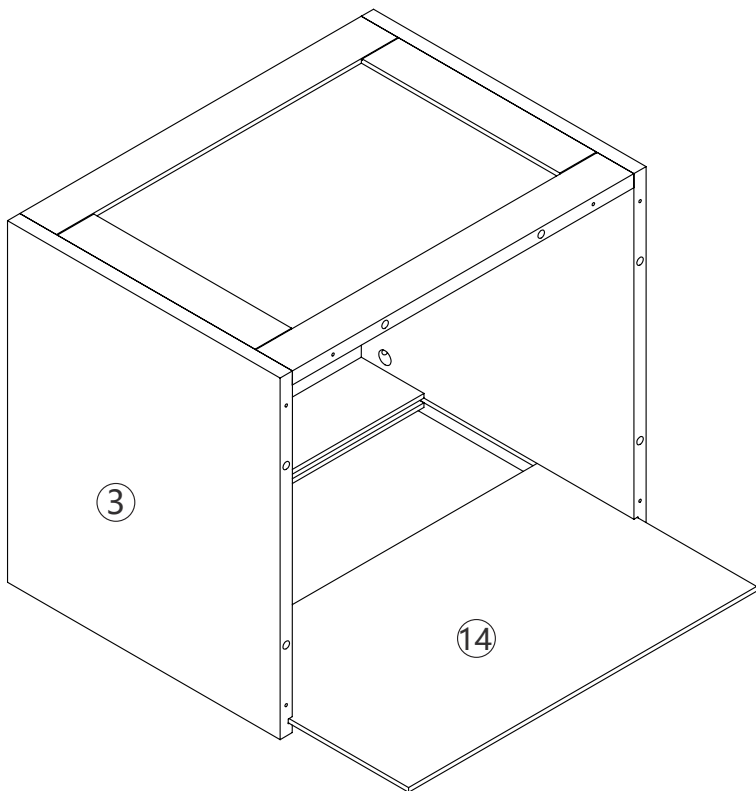


4. Attach panels to the bottom.


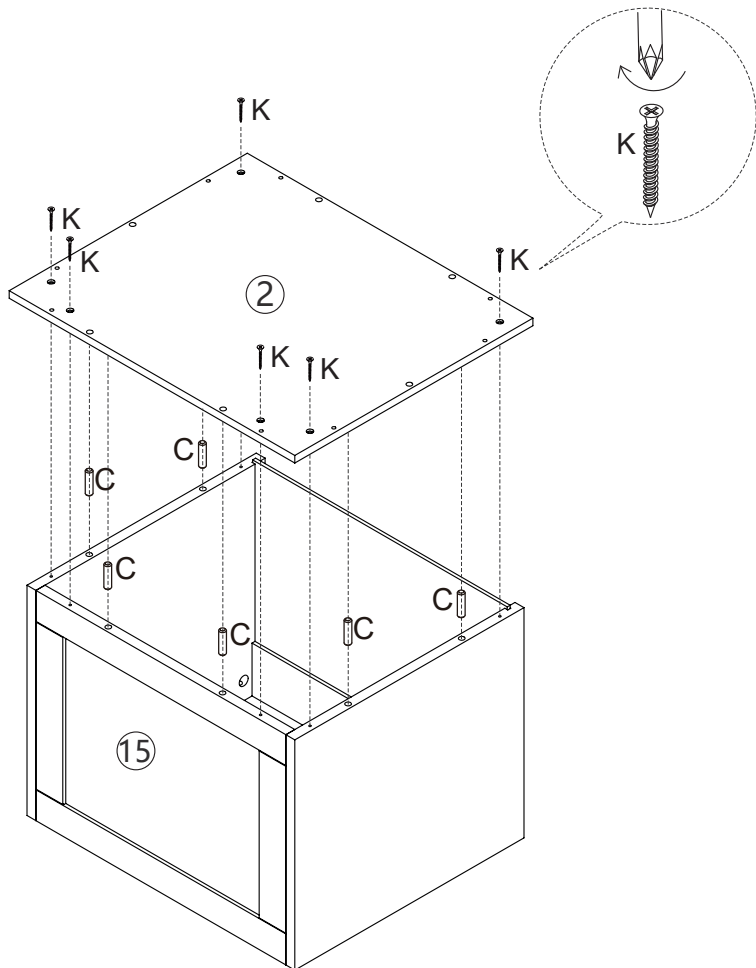


C	K
	
Ø8*30mm Dowel	M4*40mm Screw
6pcs	6pcs


5. Attach parts to the bottom panel.

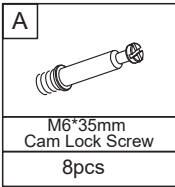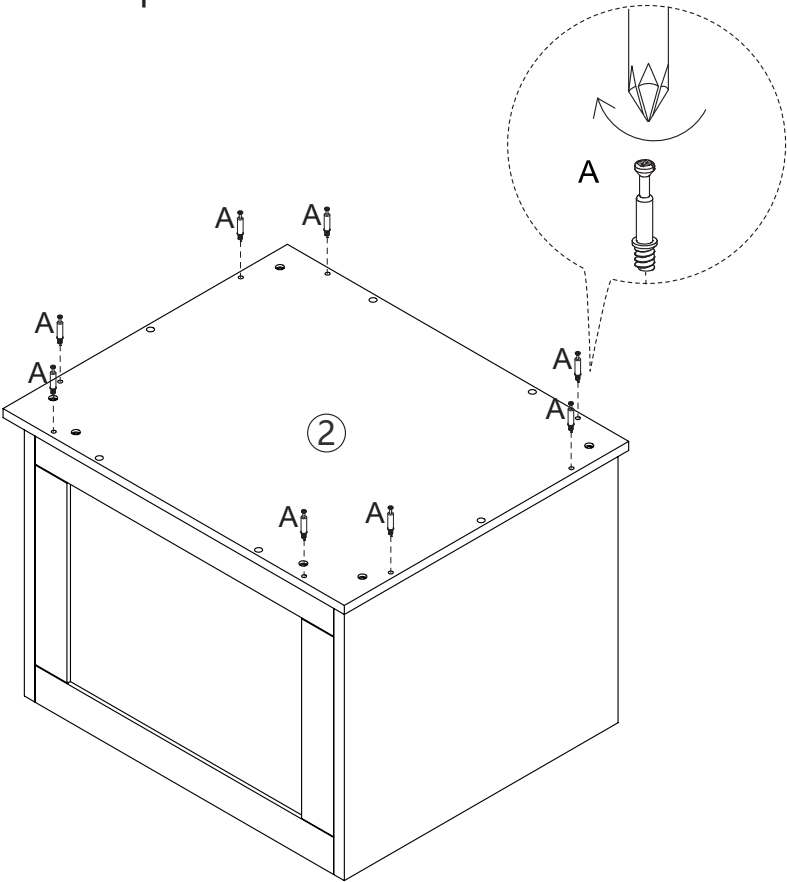

6. Assemble the panels of each part together according to the diagram.

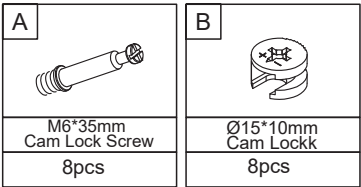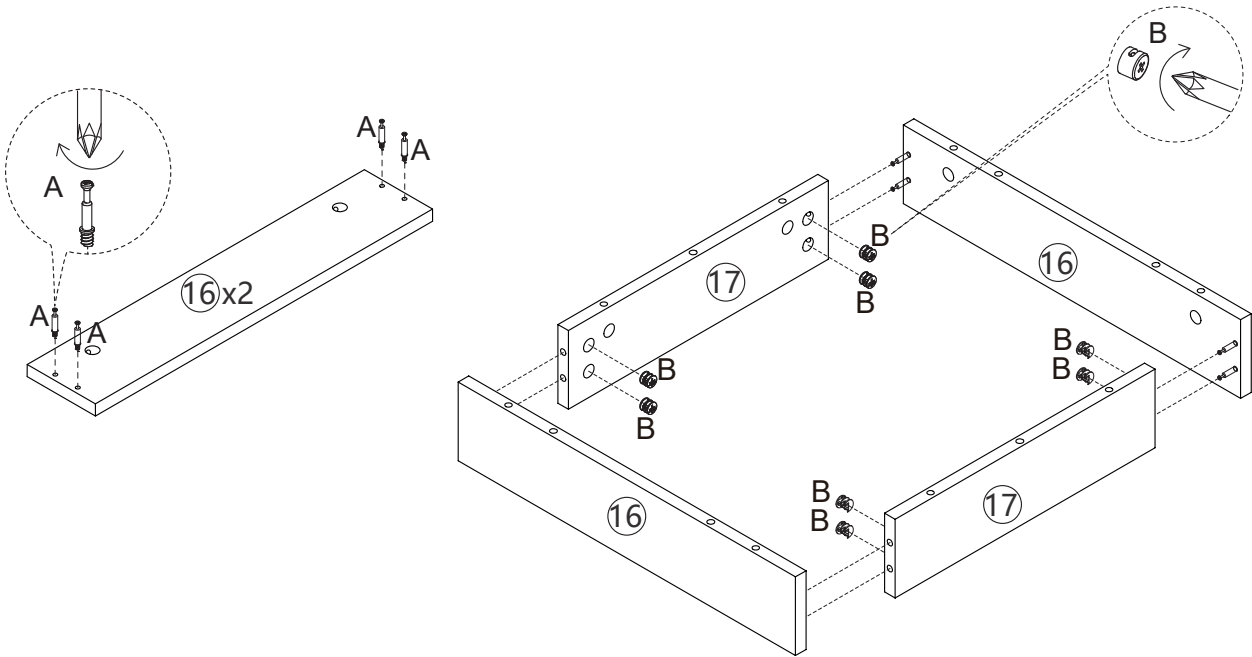



7. Attach legs to the bottom.

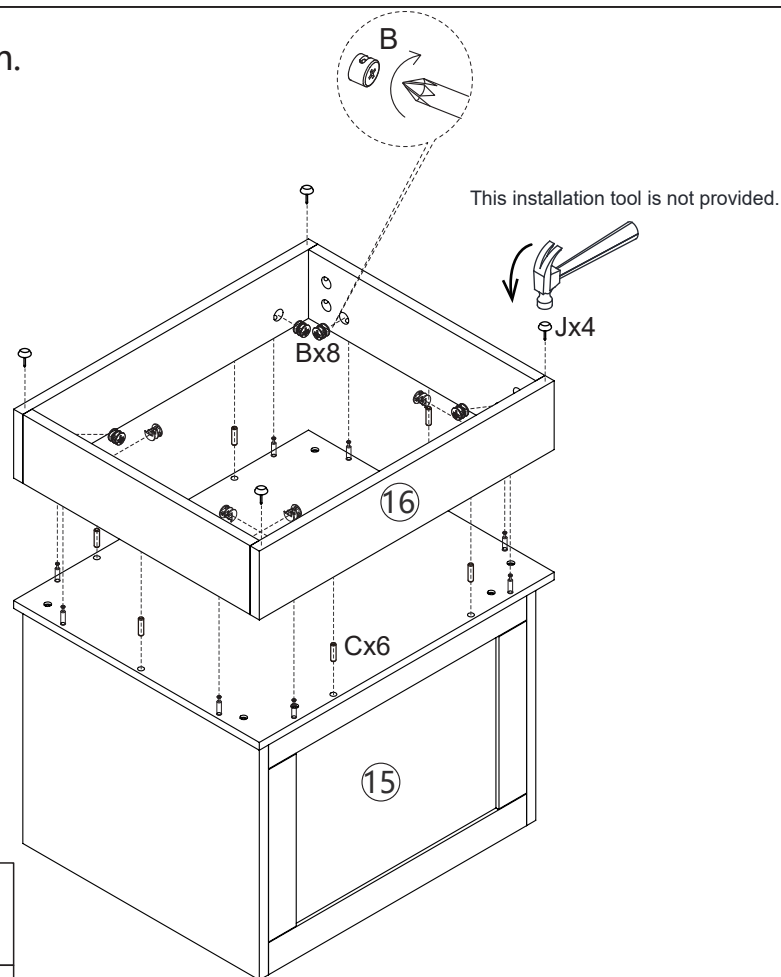



C	B	J
		
Ø8*30mm Dowel 6pcs	Ø15*10mm Cam Lock 8pcs	Plastic foot pad 4pcs

8. Attach parts to the panel.

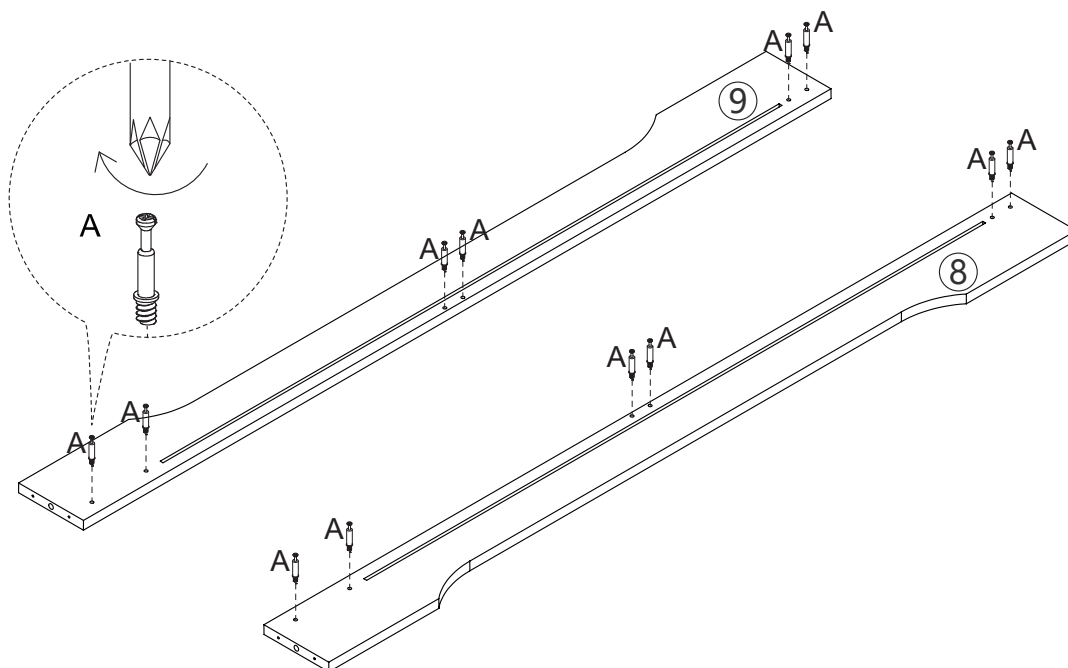


A

M6*35mm Cam Lock Screw 12pcs

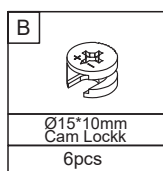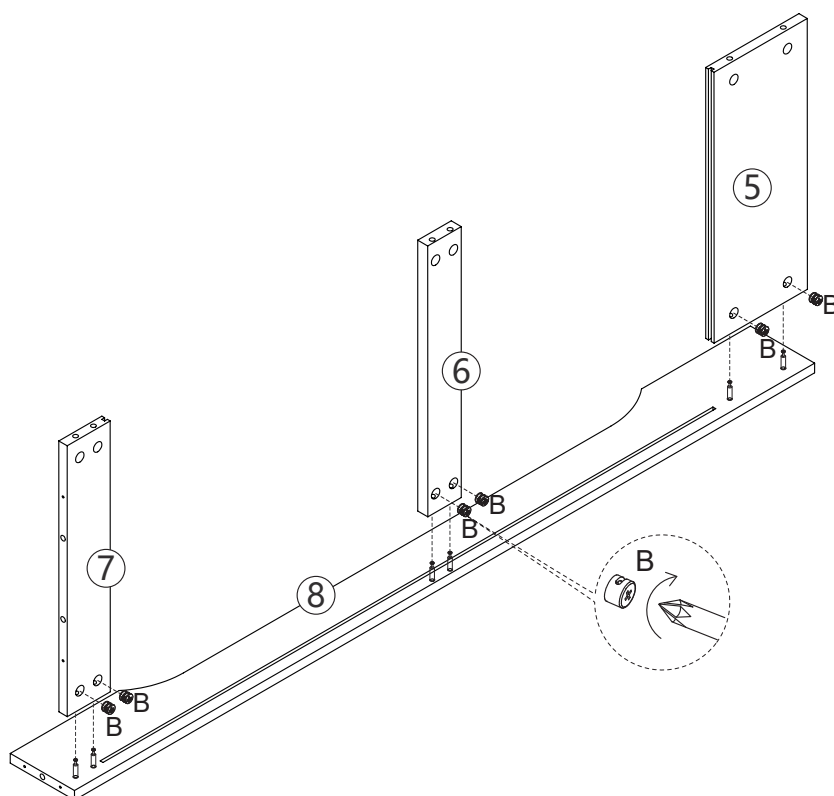
9. Assemble the panels of each part together according to the diagram.

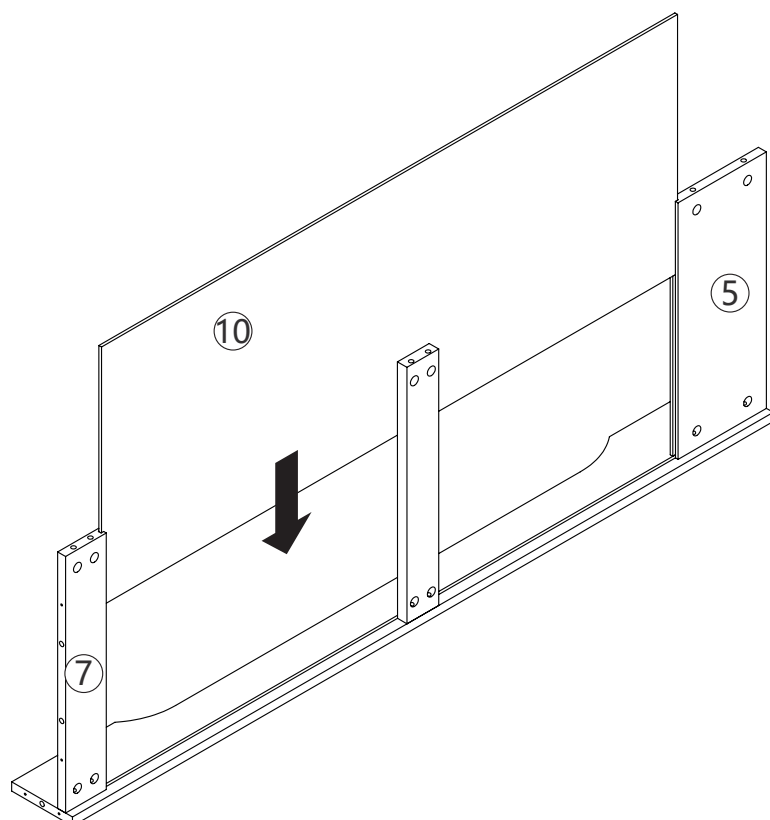


10. Assemble back panel.



Warning label is placed on the left top corner.

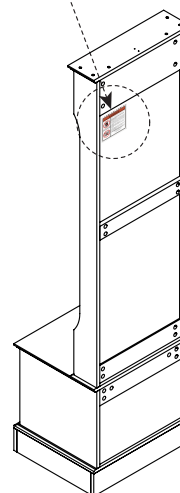


11. Assemble the panels of each part together according to the diagram.

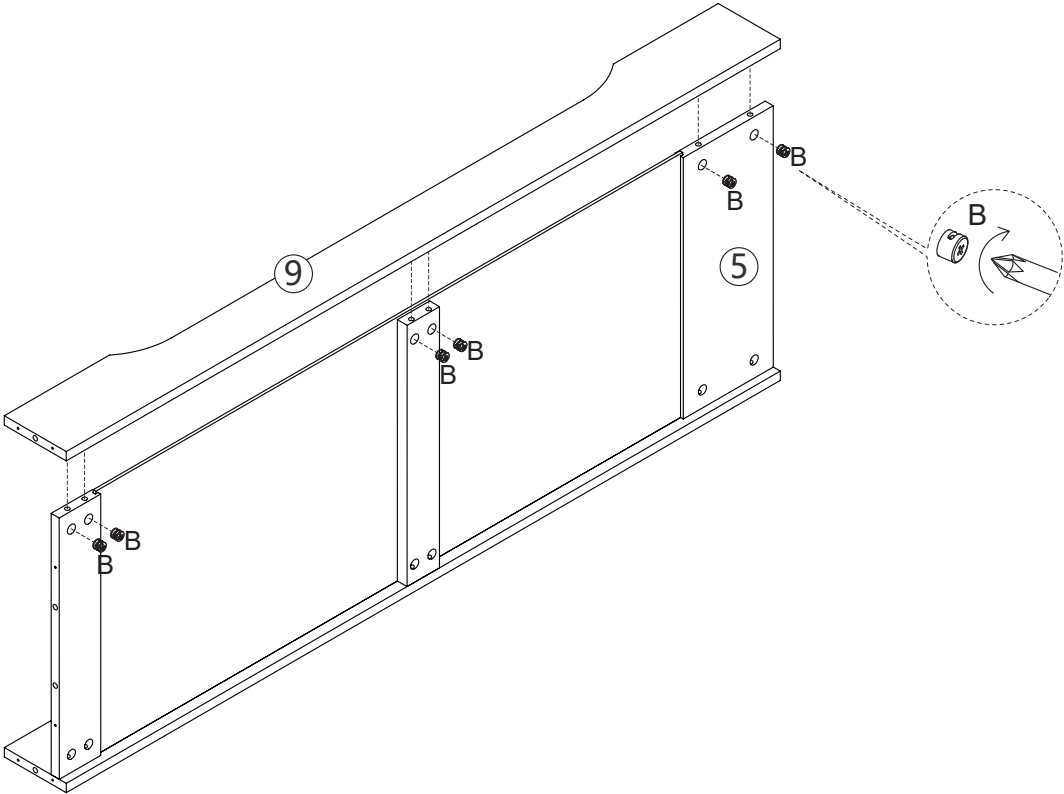


B	
Ø15*10mm Cam Lockk	
6pcs	

12. Assemble top panel.

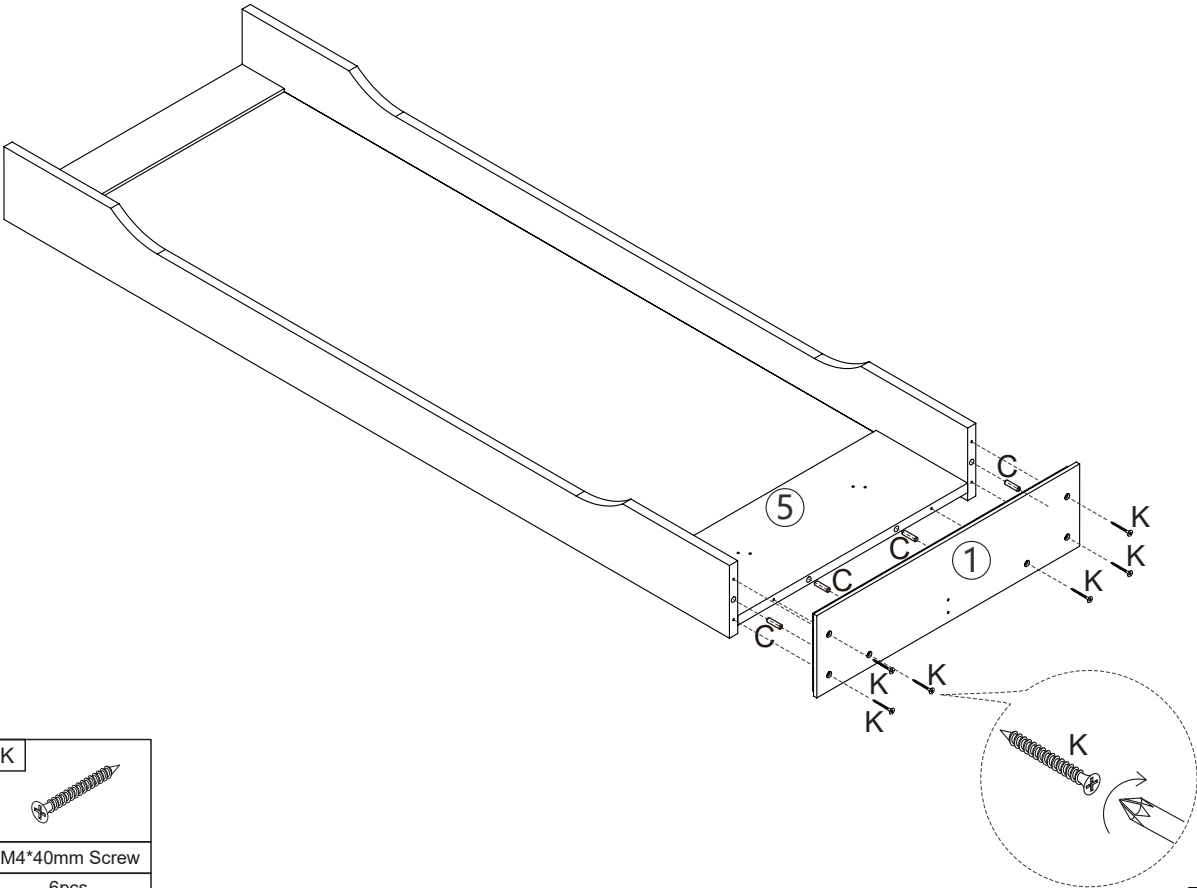


C		K	
Ø8*30mm Dowel		M4*40mm Screw	
4pcs		6pcs	


13. Assemble the panels of each part together according to the diagram.

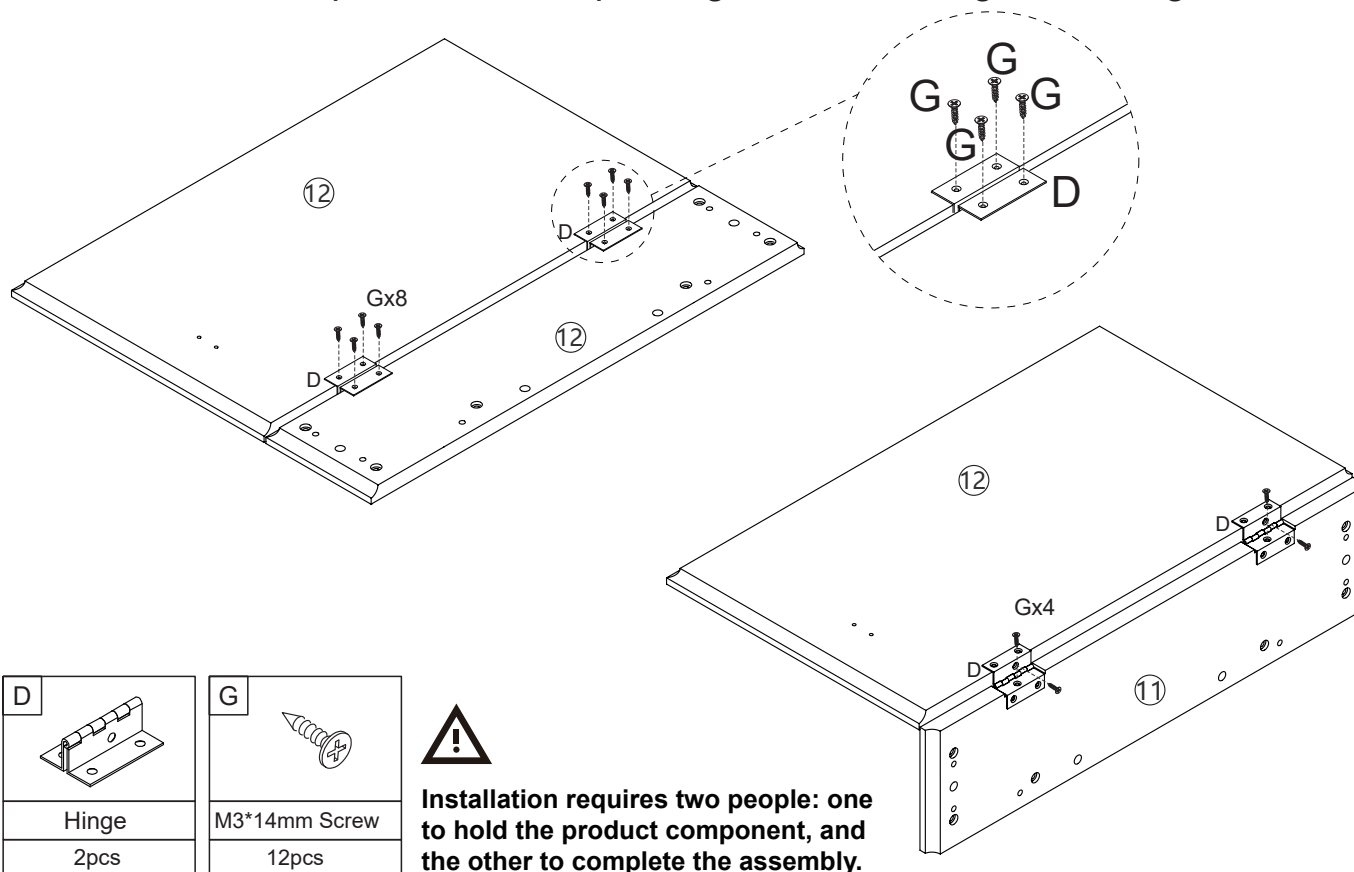


14. Assemble the panels of each part together according to the diagram.

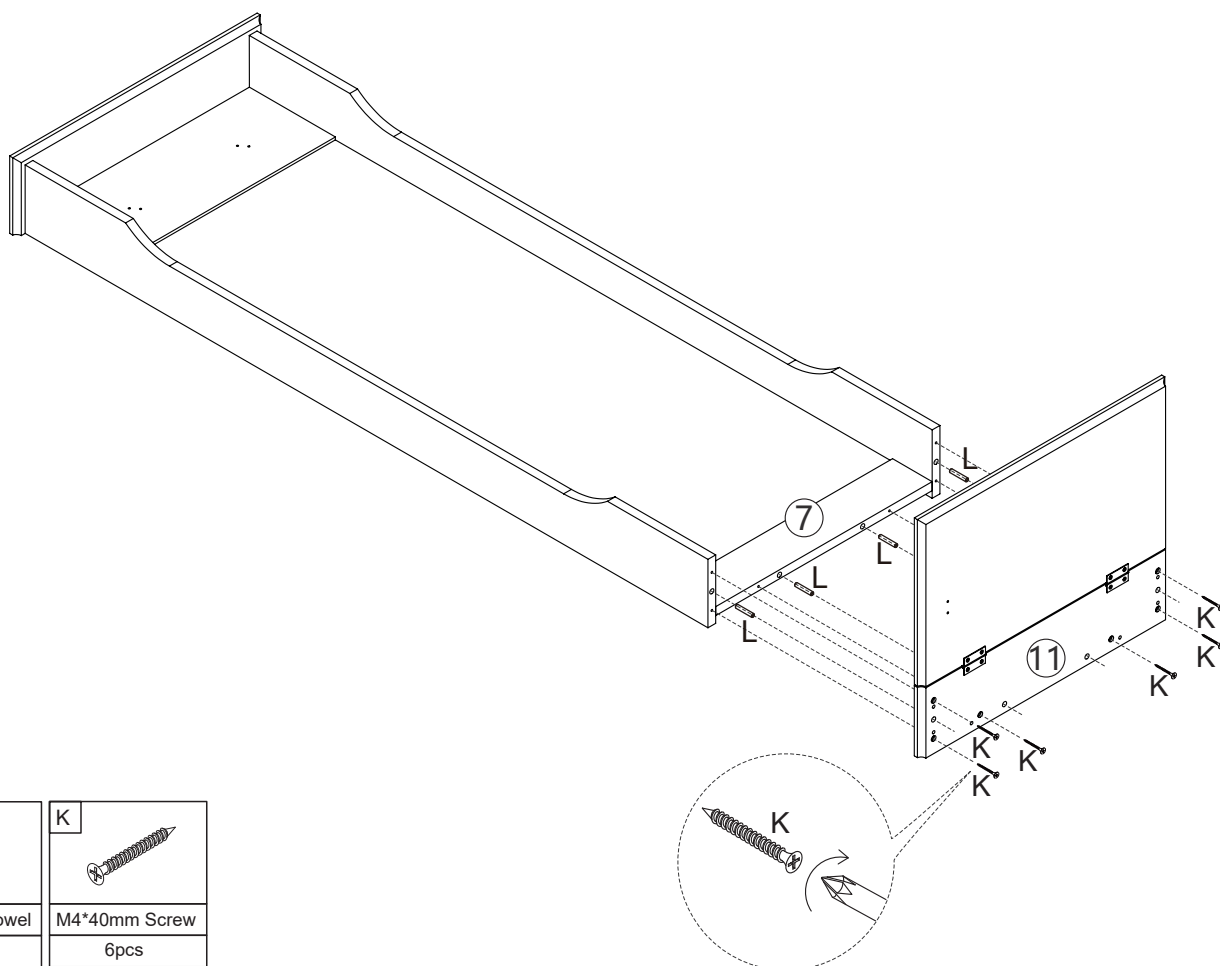

15. Attach parts to the panel.

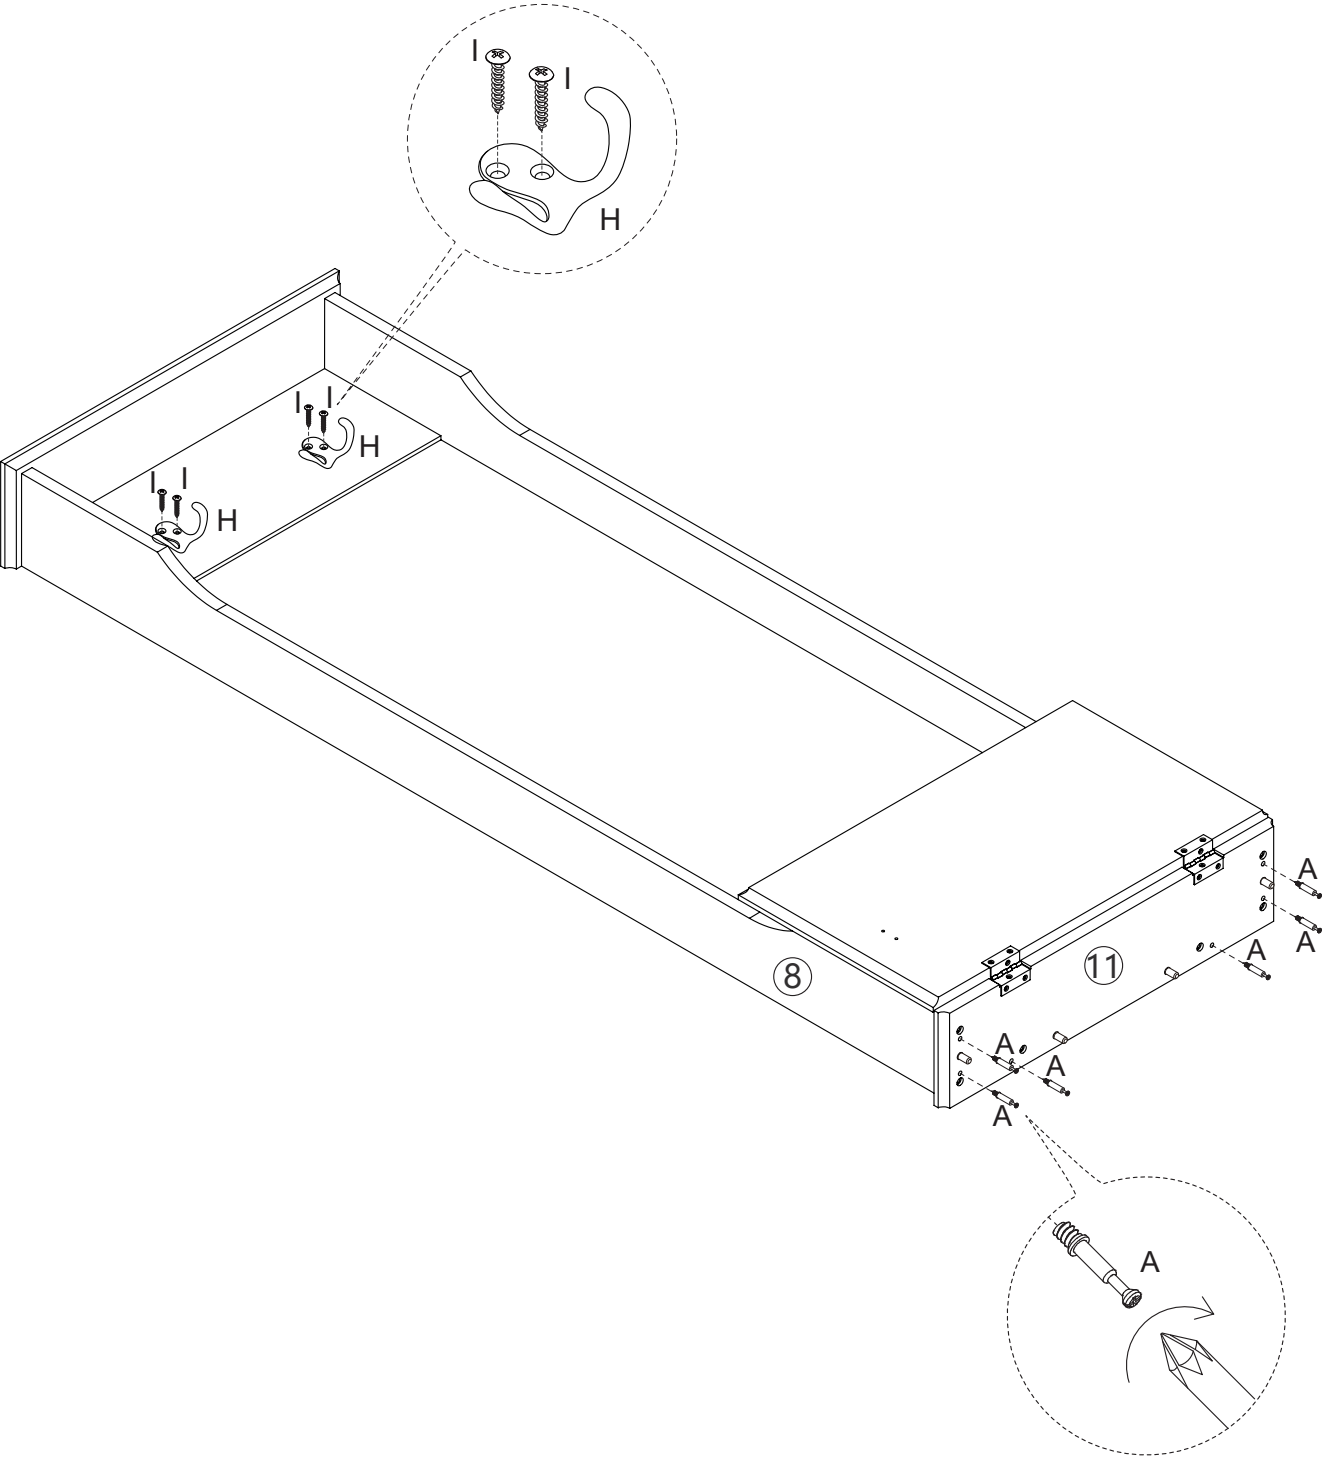

A

M6*35mm Cam Lock Screw
6pcs

H

Hook
2pcs



I

M3.5*14mm Screw
4pcs


16. Assemble the panels of each part together according to the diagram.



Installation requires two people: one to hold the product component, and the other to complete the assembly.

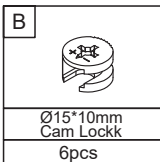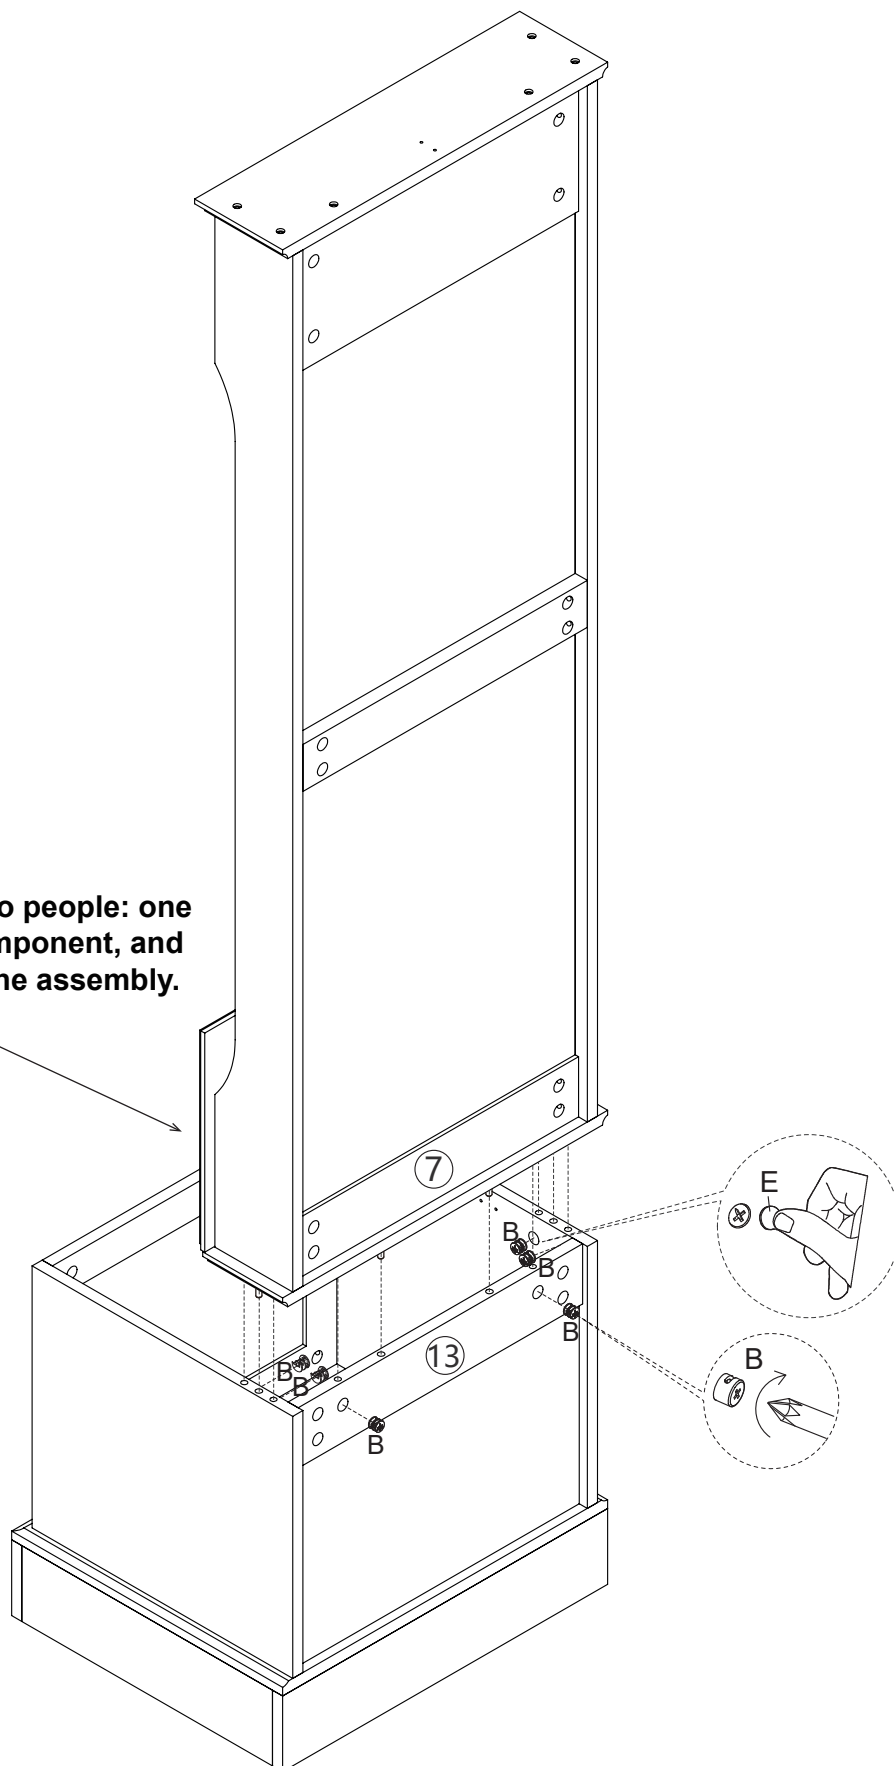


17. Attach parts to the panel.

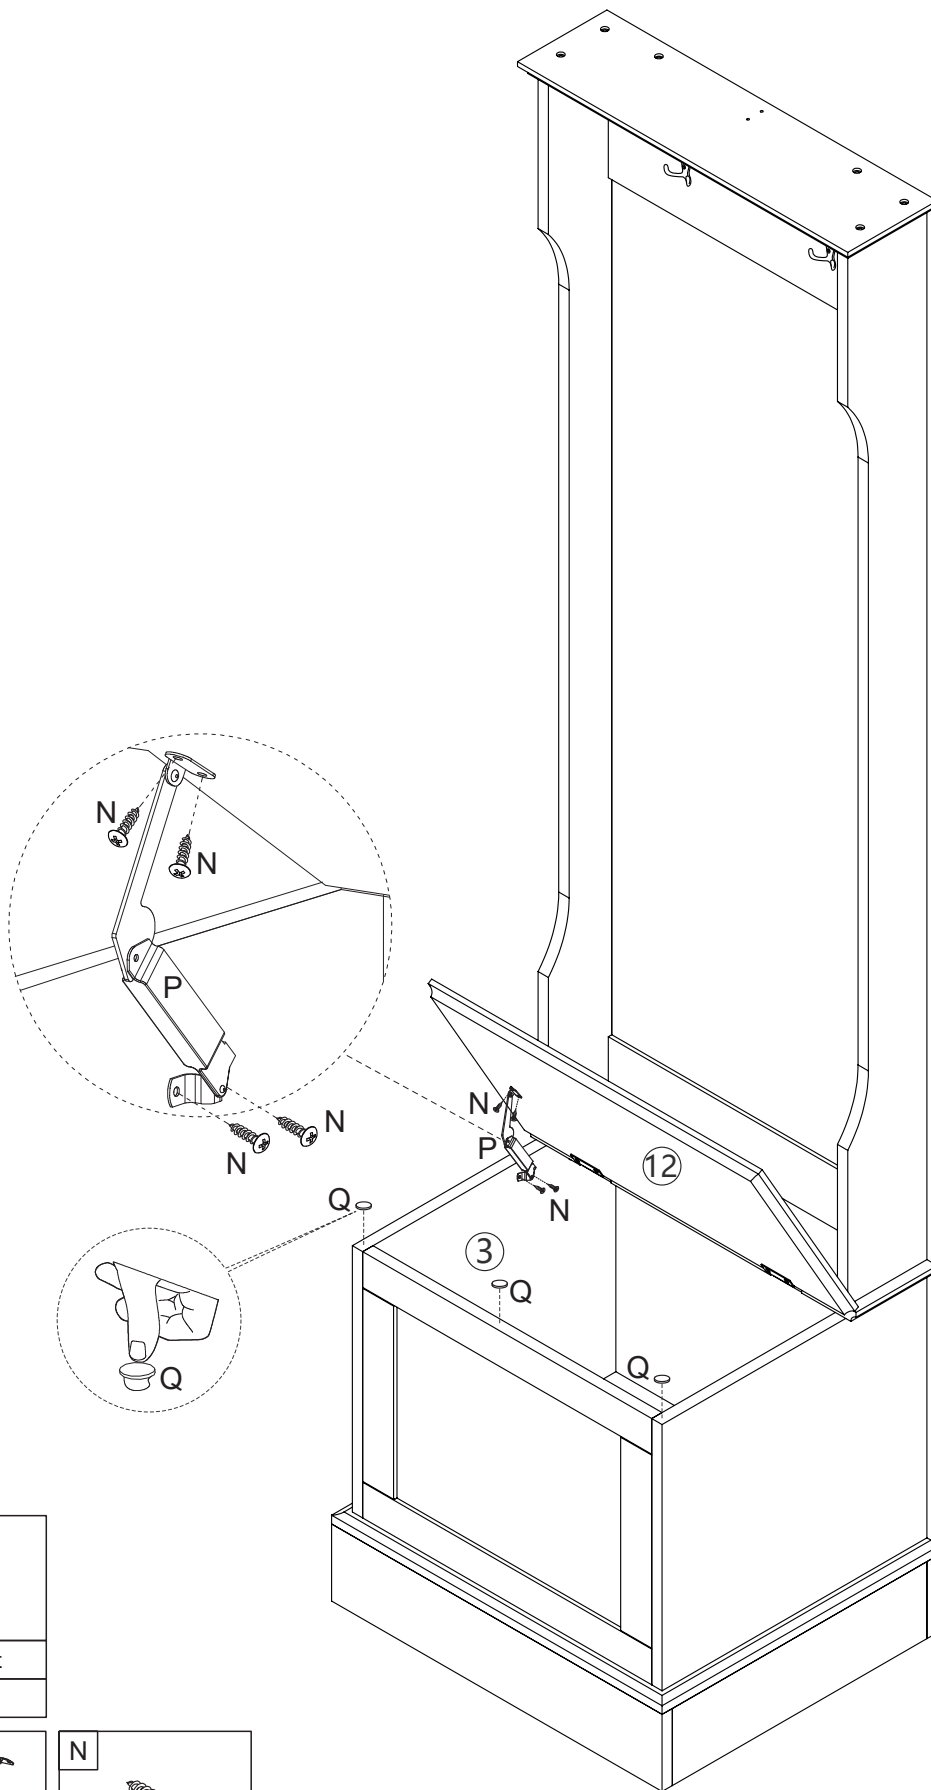

Q



Plastic Mat
3pcs

P

Left Support Hinge
1pc


N

M4*14mm Screw
4pcs

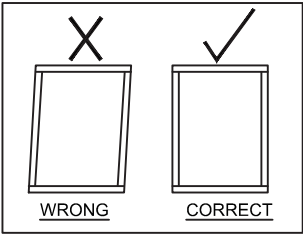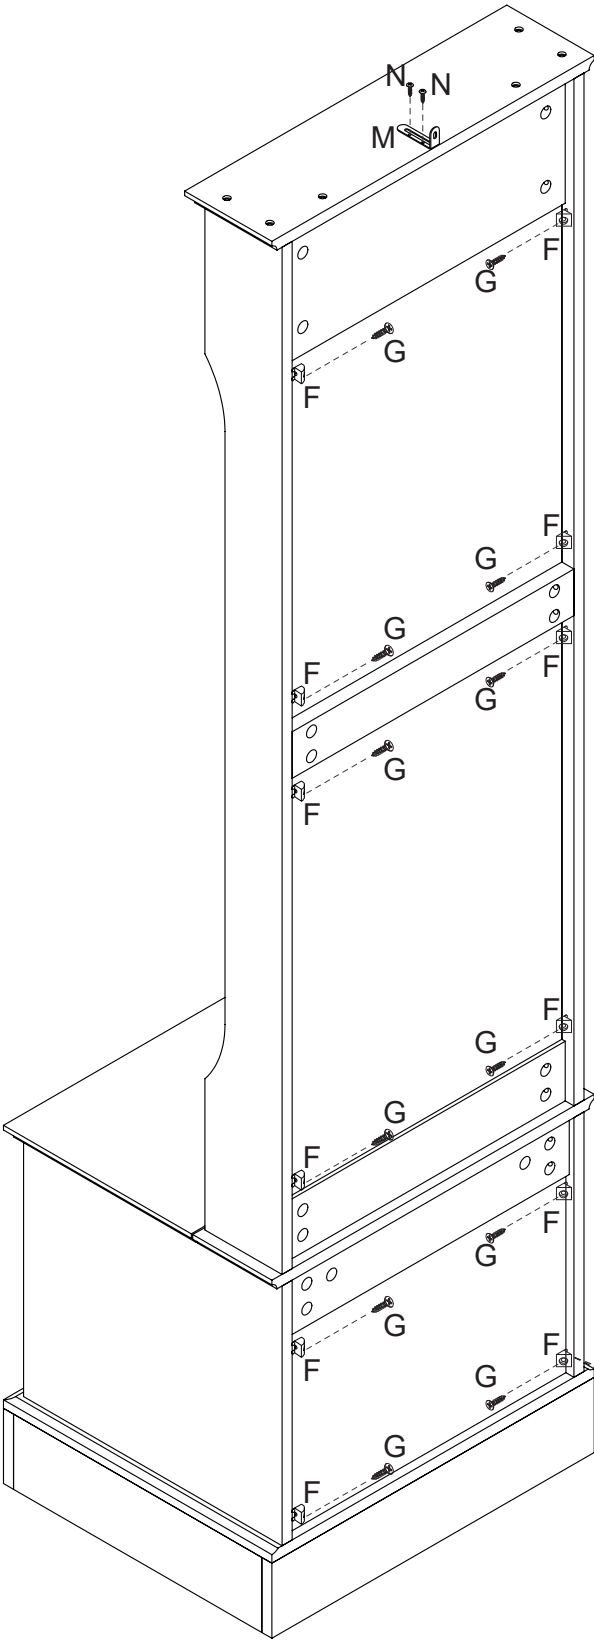18. Attach the plastic buckles and screws.




NB: Before tightening the plastic buckles and screws, please ensure the frame is square

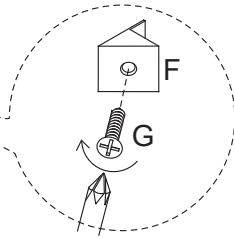

M	N	F	G
			
Wall Bracket	M4*14mm Screw	Plastic Buckle	M3*14mm Screw
1pc	2pcs	12pcs	12pcs

19. Drill holes in the wall, insert expansion bolts, and then fix the furniture to the wall with screws.

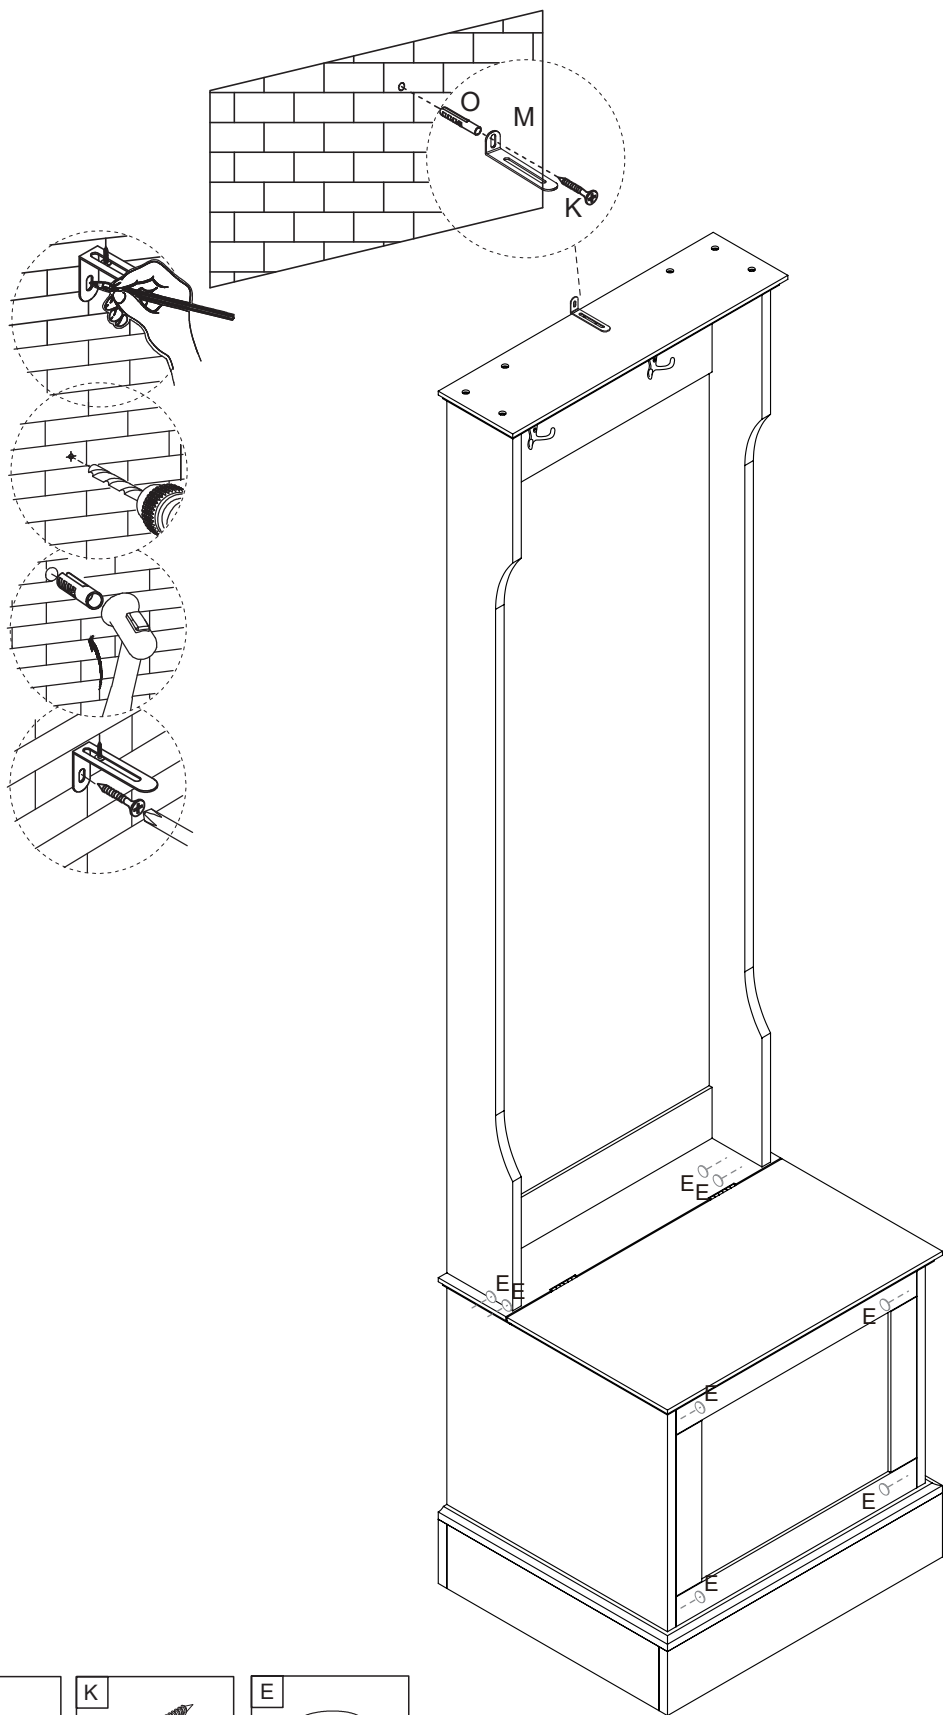

O	
M6*30mm Wall Anchor	
1pc	

K	
M4*40mm Screw	
1pc	

E	
Cover	
8pcs	