

DUSK.COM

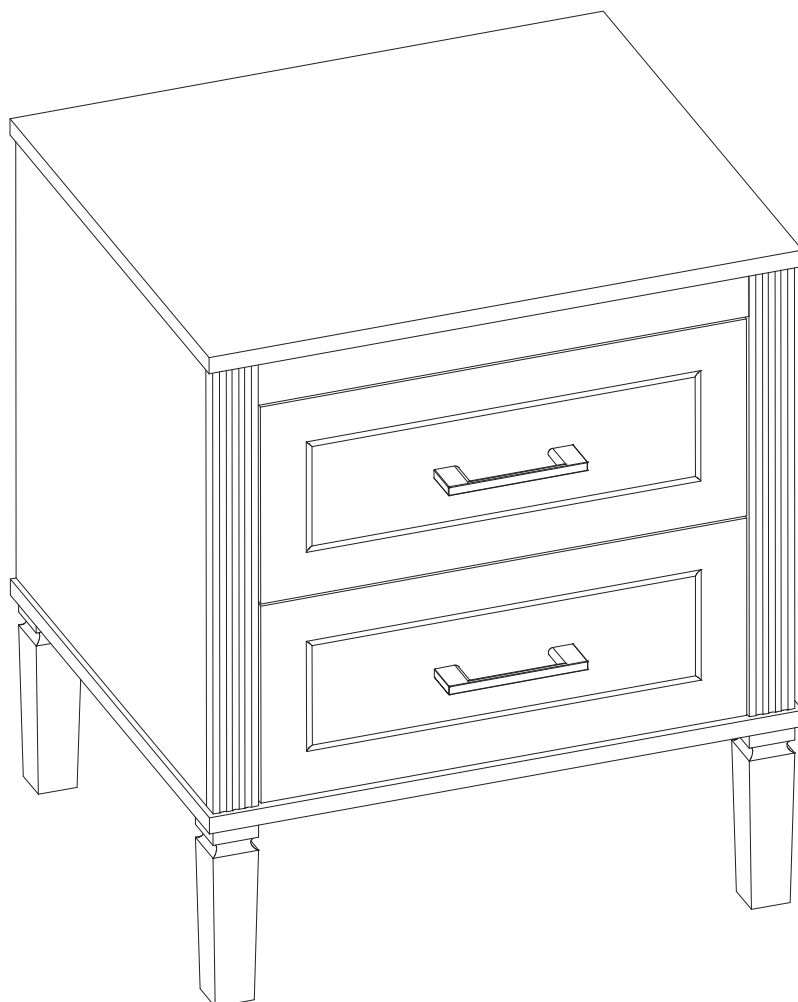
LIVING | BEDROOM | DINING

Range Name: Sienna

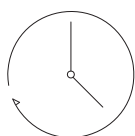
Box 1 dimensions: W63xD51.5xH16.7 cm

Product dimensions: W52xD45xH60.5 cm

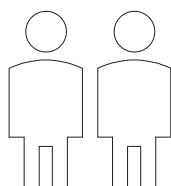
Bedside



THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Up to 40 minutes
assembly time



Two person
assembly

This product is intended for domestic use only, not for commercial purposes.

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your bedside frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. In order to prevent overturning, this product must be used with the wall attachment device provided.
9. Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

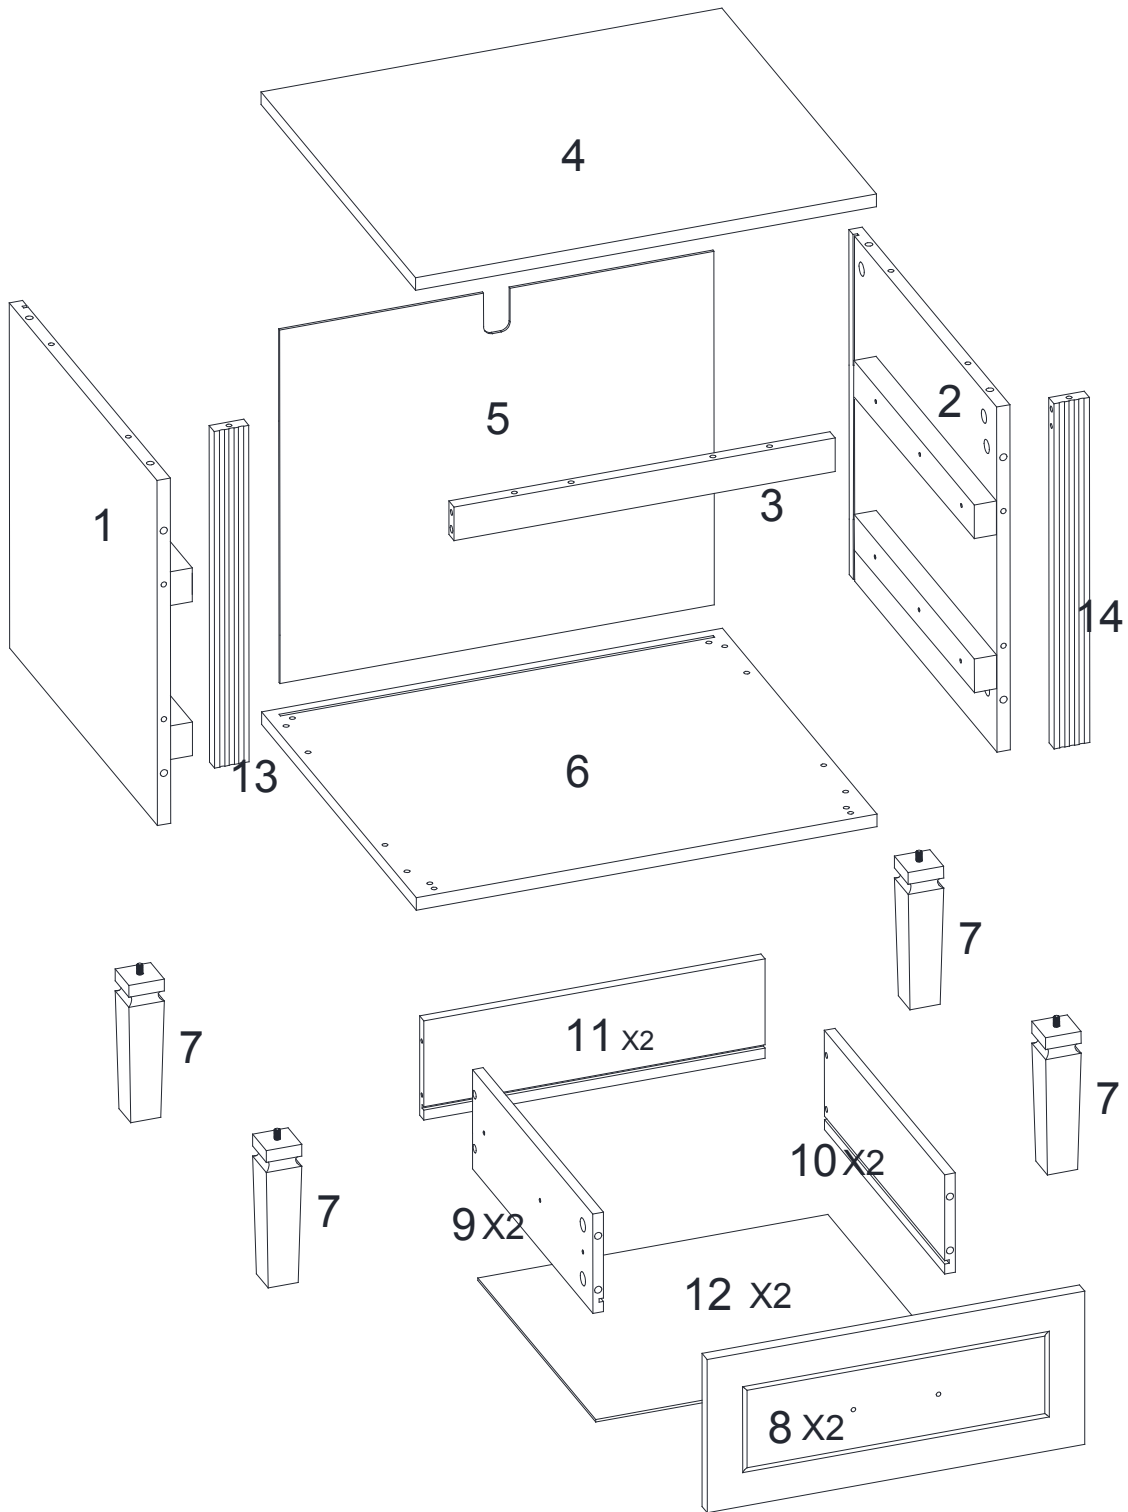
RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the bedside when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list


















Parts list

Before you begin building your bedside, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.


Part Number	Part Description	Quantity	Box No
1	Left Side Panel	1 pc	Box 1
2	Right Side Panel	1 pc	Box 1
3	Front Support Bar	1 pc	Box 1
4	Top Panel	1 pc	Box 1
5	Back Panel	1 pc	Box 1
6	Bottom Panel	1 pc	Box 1
7	Leg	4 pcs	Box 1
8	Drawer Front	2 pcs	Box 1
9	Drawer Left Side	2 pcs	Box 1
10	Drawer Right Side	2 pcs	Box 1
11	Drawer Back Side	2 pcs	Box 1
12	Drawer Bottom	2 pcs	Box 1
13	Left Side Bar	1 pc	Box 1
14	Right Side Bar	1 pc	Box 1

Fittings



Please check you have all the fittings listed below with your product in box 1.

<div>A</div>  <div>M6*35mm Cam Lock Screw</div> <div>18pcs+2pcs extra</div>	<div>B</div>  <div>Ø15*9mm Cam Lock</div> <div>18pcs+2pcs extra</div>	<div>C</div>  <div>Ø6*30mm Dowel</div> <div>20pcs+2pcs extra</div>	<div>D</div>  <div>M4*35mm Screw</div> <div>9pcs+1pc extra</div>	<div>E</div>  <div>Wall Bracket</div> <div>1pc</div>	<div>F</div>  <div>Plastic Buckle</div> <div>8pcs+1pc extra</div>
<div>G</div>  <div>M3.5*14mm Screw</div> <div>8pcs+1pc extra</div>	<div>H</div>  <div>Handle</div> <div>2pcs</div>	<div>I</div>  <div>M4*20mm Bolt</div> <div>4pcs</div>	<div>J</div>  <div>Wall Anchor</div> <div>1pc</div>	<div>K</div>  <div>M4*14mm Screw</div> <div>2pcs</div>	<div>L</div>  <div>M4*45mm Screw</div> <div>6pcs</div>
<div>M</div>  <div>Cover</div> <div>8pcs+1pc extra</div>	<div>N</div>  <div>Slide Rail</div> <div>4sets</div>	<div>O</div>  <div>M3*12mm Screw</div> <div>24pcs+3pcs extra</div>			

Bolt Length Ruler:



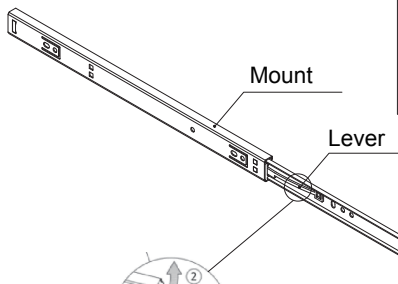
Tool required

  Crosshead Screwdriver (not provided)

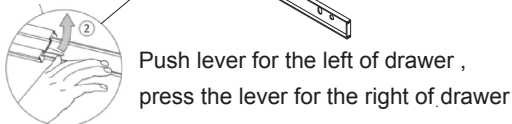
Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Pay attention when connecting !
The sliding module must be at the front end.

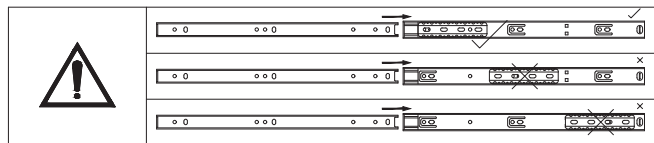
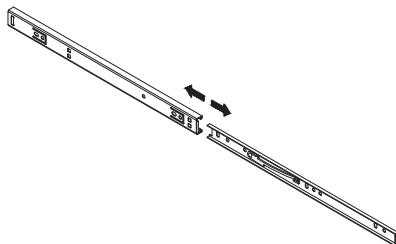
STEP 1 : Extend Slide



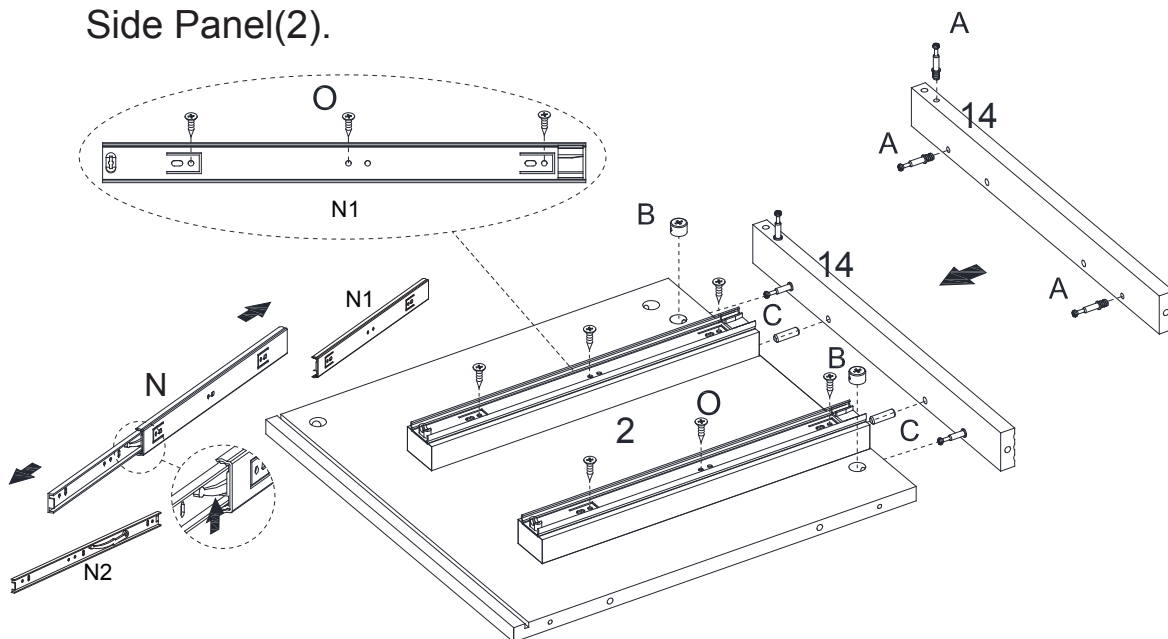
STEP 2: Push Lever UP








STEP 3: Remove Runner

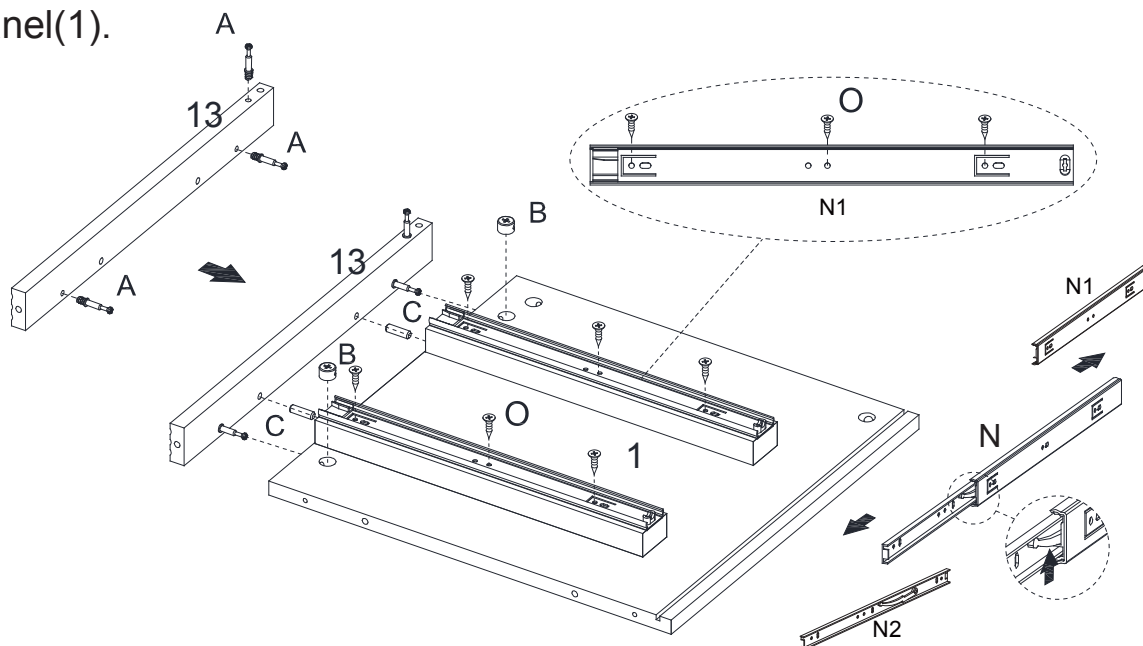







1. Attach Cam Lock Screws to Right Side Bar (14) ,then attach Right Side Bar (14) to the Right Side Panel (2) , attach fitting and Slide Rail to the Right Side Panel(2).



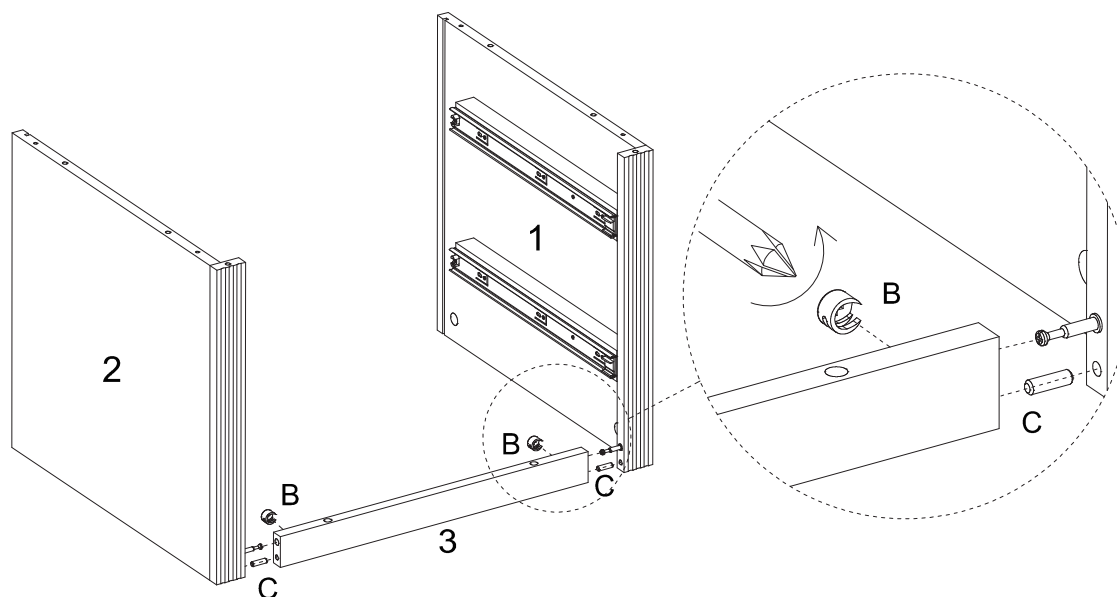
				
M6*35mm Cam Lock Screw 3pcs	Ø15*9mm Cam Lock 2pcs	Ø6*30mm Dowel 2pcs	Slide Rail 2pcs	M3*12mm Screw 6pcs



2. Attach Cam Lock Screws to Left Side Bar (13) ,then attach Left Side Bar (13) to the Left Side Panel (1) ,attach fitting and Slide Rail to the Left Side Panel(1).



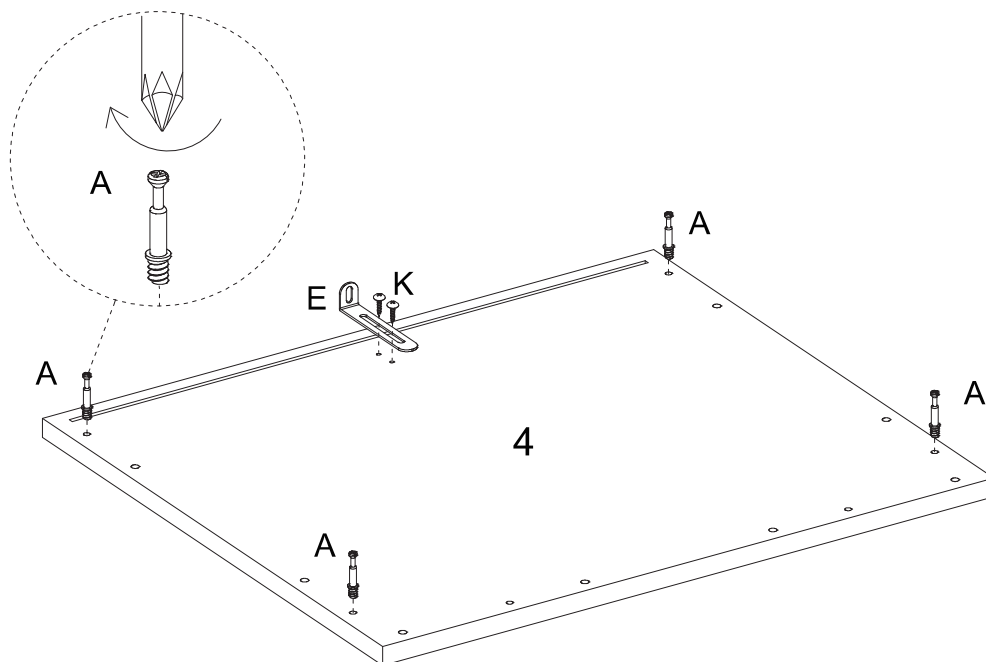
				
M6*35mm Cam Lock Screw 3pcs	Ø15*9mm Cam Lock 2pcs	Ø6*30mm Dowel 2pcs	Slide Rail 2pcs	M3*12mm Screw 6pcs




3. Attach Left Side Panel (1) and Right Side Panel (2) to Front Support Bar (3).



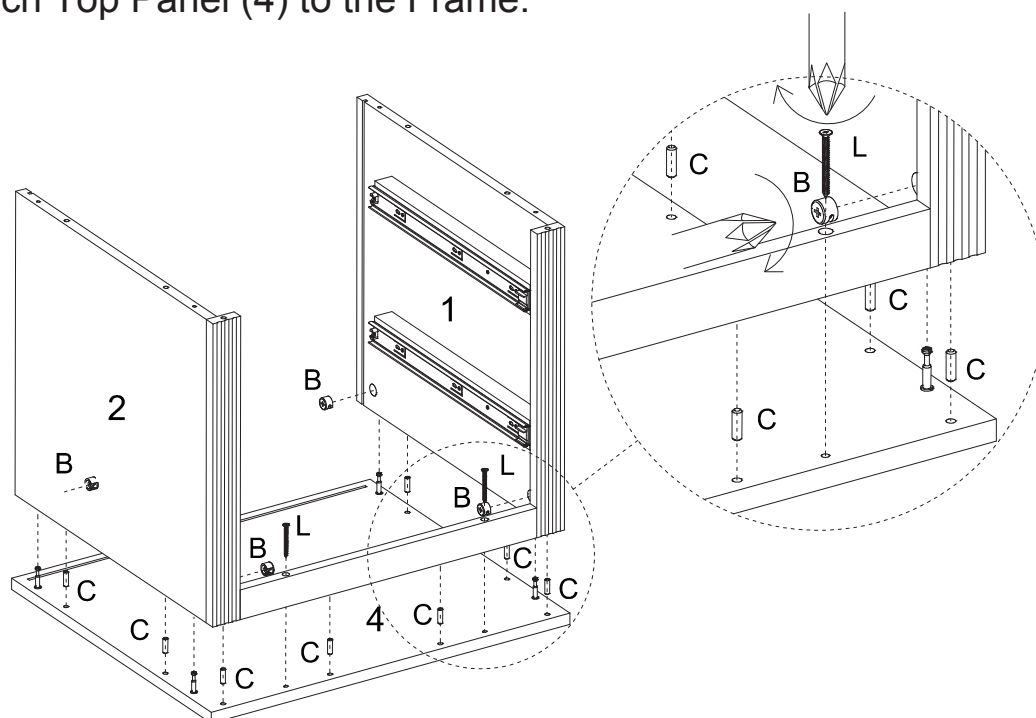
B		C	
Ø15*9mm Cam Lock		Ø6*30mm Dowel	
2pcs		2pcs	




4. Attach the Wall Bracket and Cam Lock Screws to Top Panel (4).



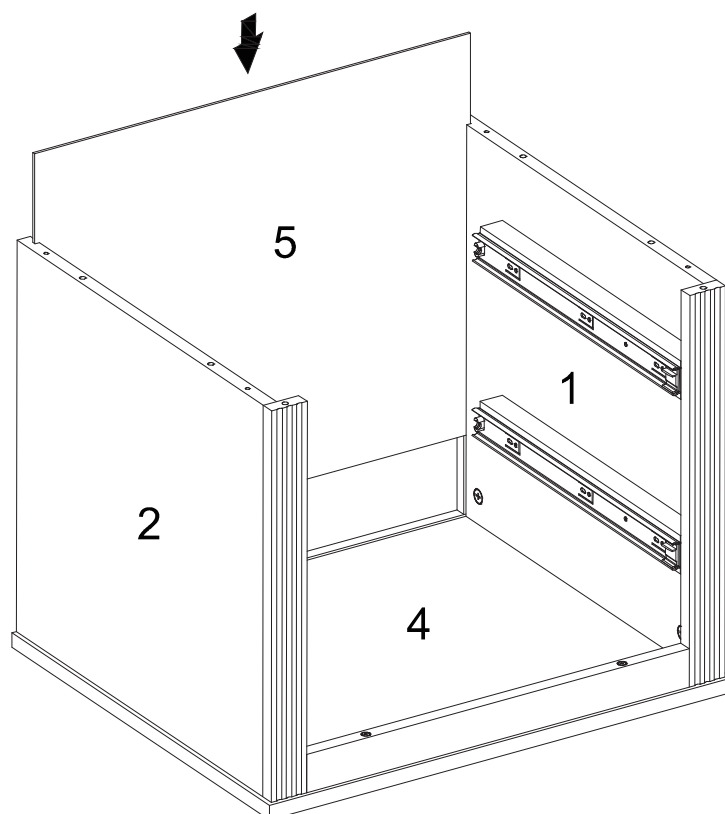
A		E		K	
M6*35mm Cam Lock Screw		Wall Bracket		M4*14mm Screw	
4pcs		1pc		2pcs	

5. Attach Top Panel (4) to the Frame.

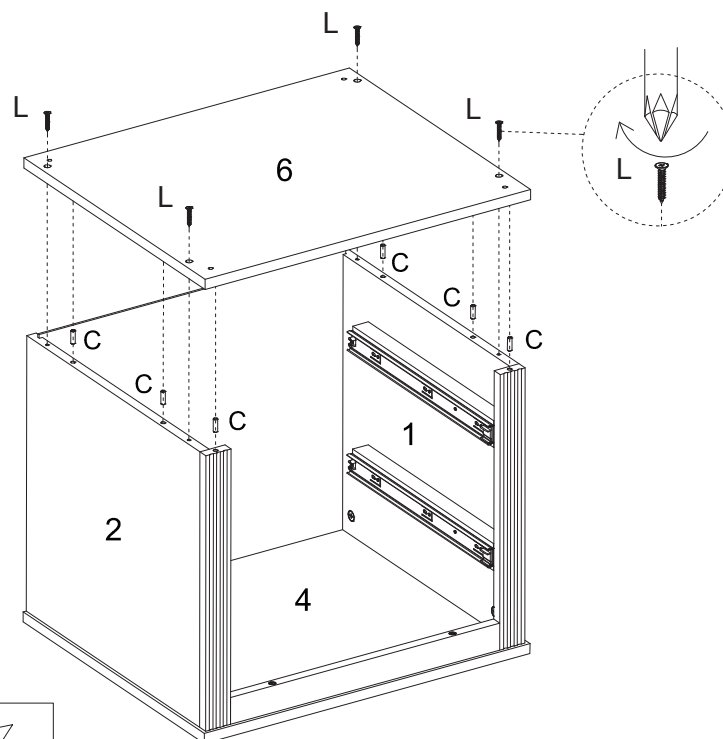




B 	C 	L 
Ø15*9mm Cam Lock 4pcs	Ø6*30mm Dowel 8pcs	M4*45mm Screw 2pcs

6. Insert the Back Panel (5) to the Frame.

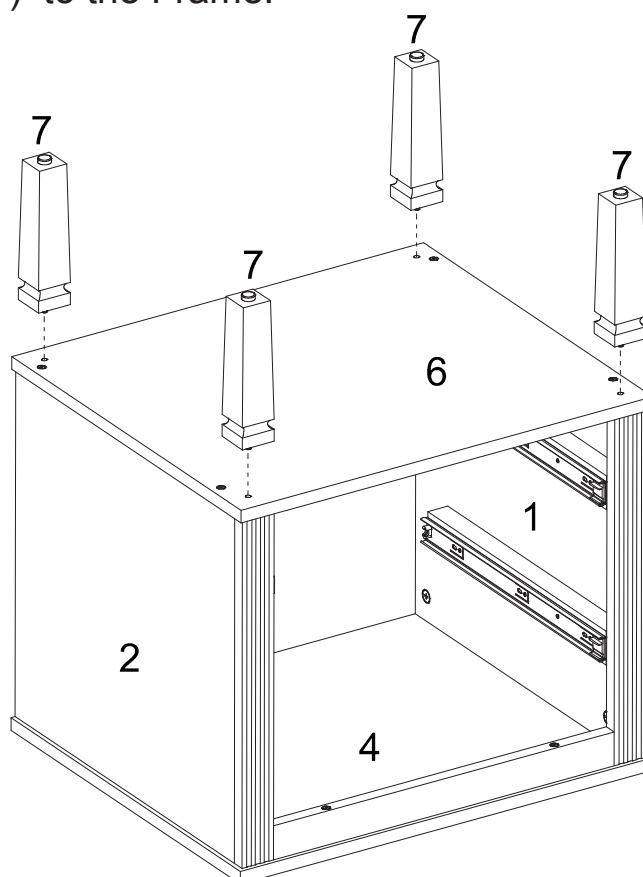


7. Attach Bottom Panel (6) to the Frame.

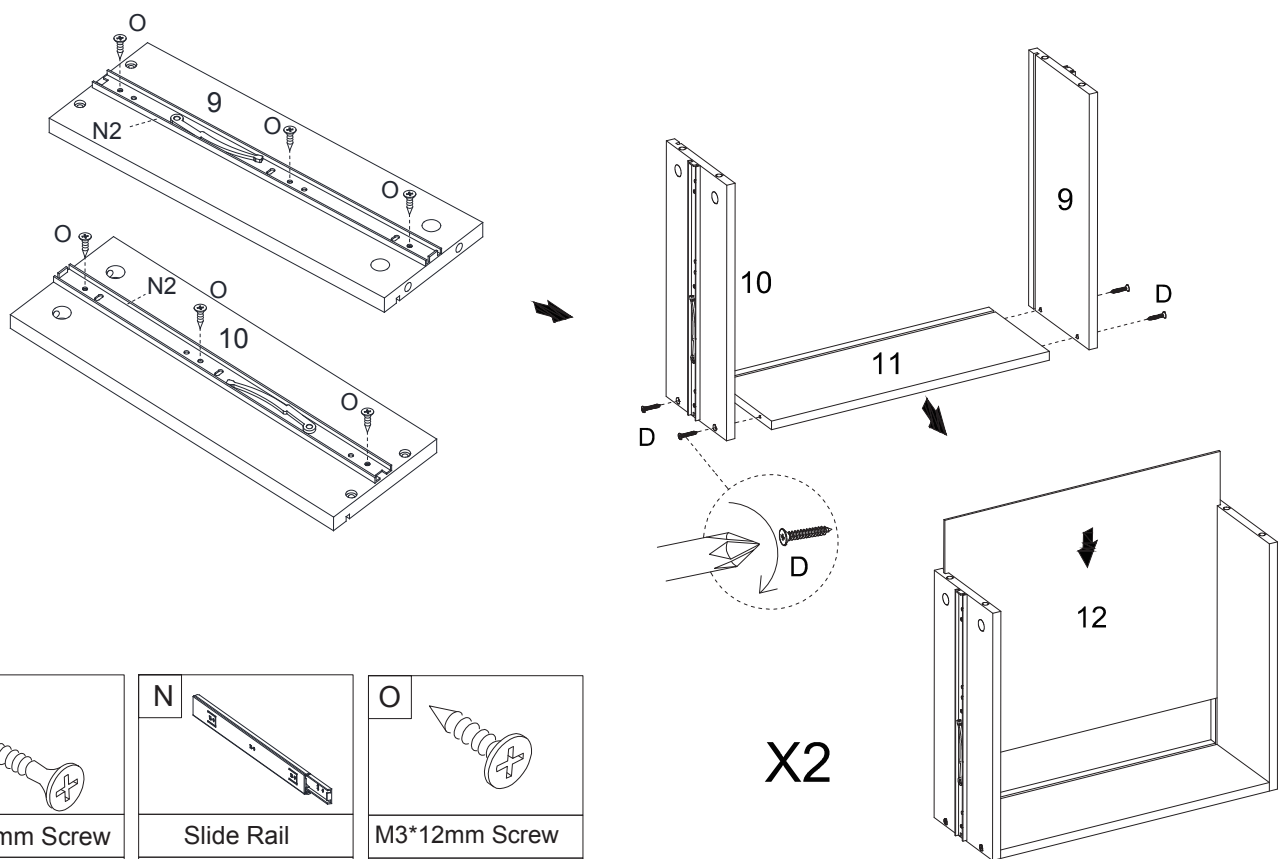





C	L
	
Ø6*30mm Dowel	M4*45mm Screw
6pcs	4pcs

8. Attach the Legs (7) to the Frame.

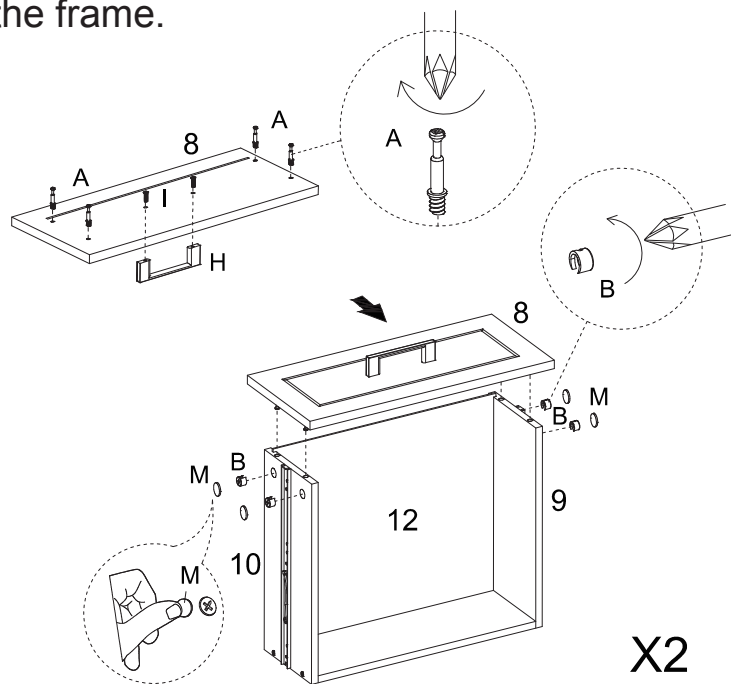







9. Assemble the drawer by following the steps shown in the illustration below.



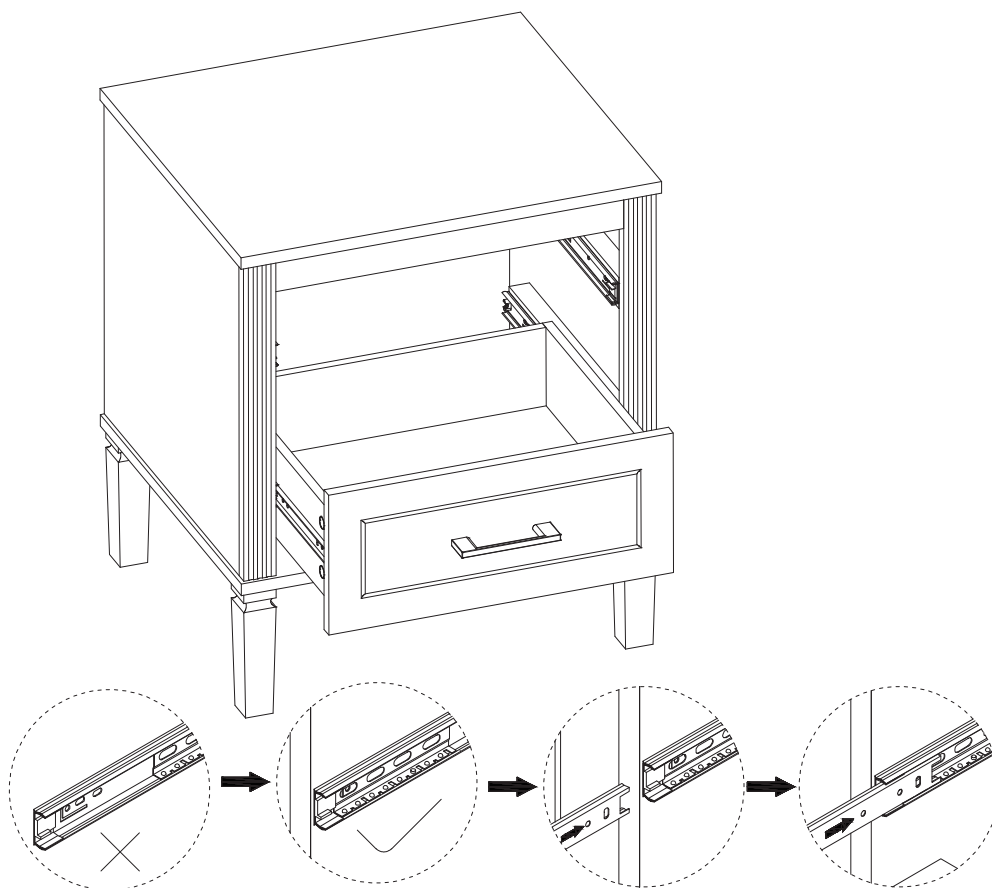
D	N	O
		
M4*35mm Screw	Slide Rail	M3*12mm Screw
8pcs	4pcs	12pcs

10. Align and attach the handle to the Drawer Front (8), then secure the Drawer Front (8) to the frame.

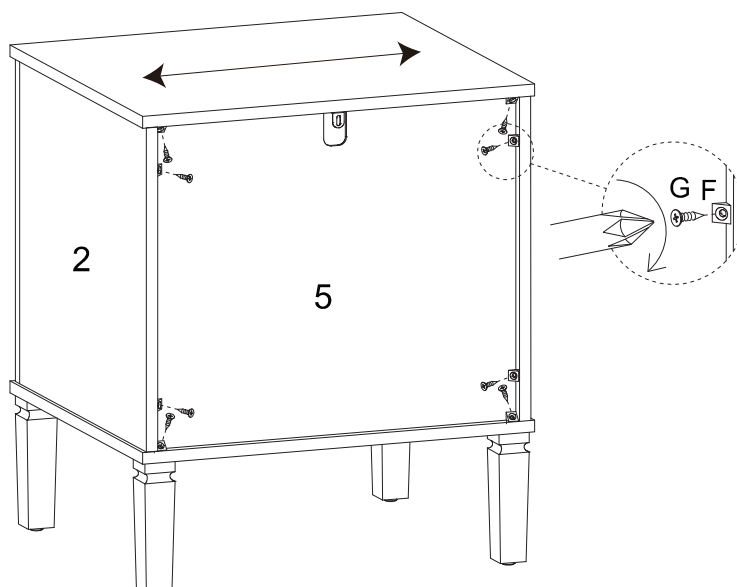




A	B	H	I	M
				
M6*35mm Cam Lock Screw	Ø15*9mm Cam Lock	Handle	M4*20mm Bolt	Cover
8pcs	8pcs	2pcs	4pcs	8pcs

11. Slide the lower Drawer into the Frame.

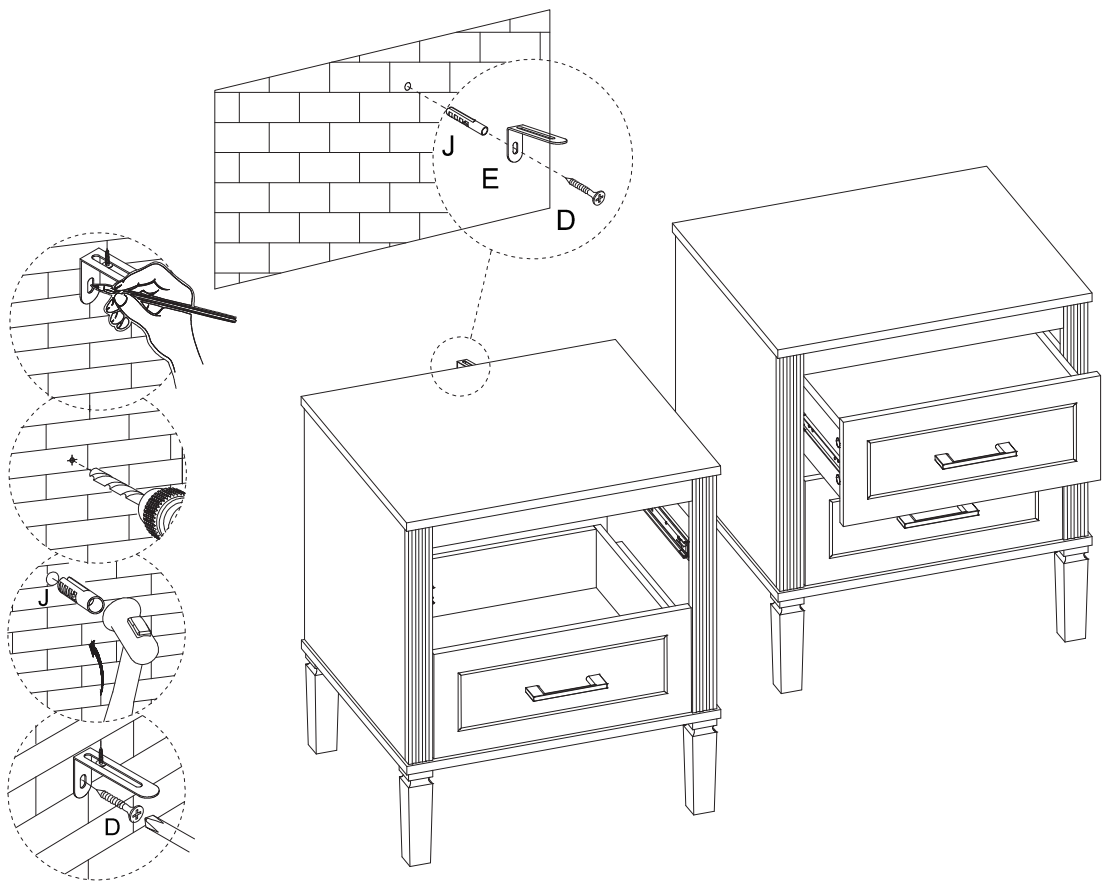



12. Attach the plastic buckles on back. Before securing them, manually adjust the frame to ensure the drawers are properly aligned, even, and parallel.




F	G
	
Plastic Buckle	M3.5*14mm Screw
8pcs	8pcs

13. Fix the wall bracket to the wall by drilling holes, inserting wall anchors, and securing it with screws. Slide the upper Drawer into the Frame.



D

M4*35mm Screw
1pc

J

Wall Anchor
1pc