

DUSK.COM



LIVING | BEDROOM | DINING

Range Name: Sienna


Box 1 dimensions: W112.5xD47.5xH18.5 cm

Product dimensions: W100xW40 xH45 cm

Storage Cupboard With Seat

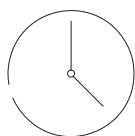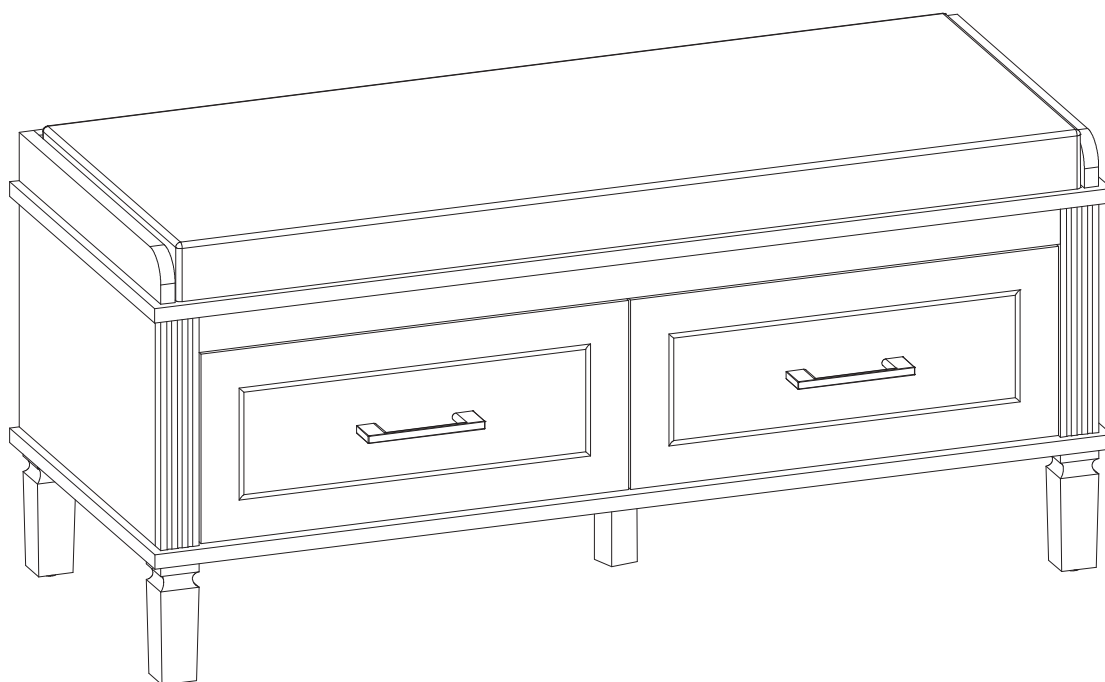

Up to 40 minutes
assembly time

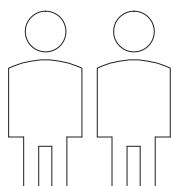

Two person
assembly

This product is intended for domestic use only, not for commercial purposes.

P-1-13
V-2.0

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your storage cupboard frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the storage cupboard in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the storage cupboard when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

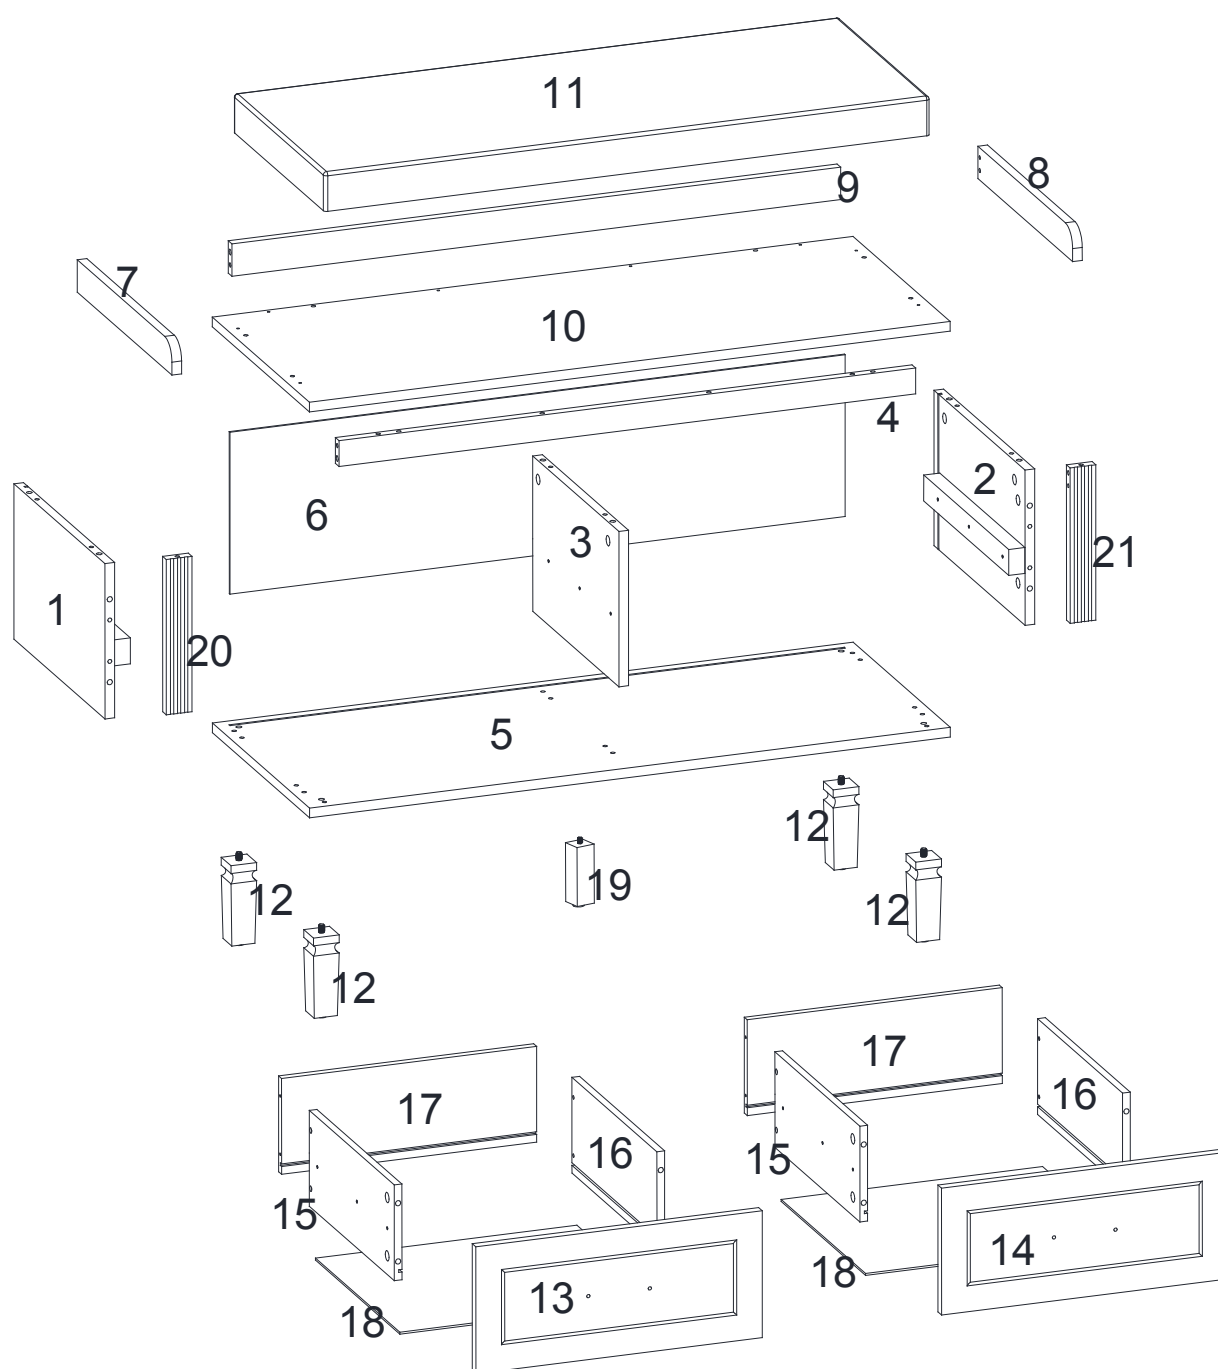













Parts list

Before you begin building your storage cupboard, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.


Part Number	Part Description	Quantity	Box No
1	Left Side Panel	1 pc	Box 1
2	Right Side Panel	1 pc	Box 1
3	Middle Panel	1 pc	Box 1
4	Front Support Bar	1 pc	Box 1
5	Bottom Panel	1 pc	Box 1
6	Back Panel	1 pc	Box 1
7	Seat Side Bar Left	1 pc	Box 1
8	Seat Side Bar Right	1 pc	Box 1
9	Seat Side Bar Back	1 pc	Box 1
10	Top Panel	1 pc	Box 1
11	Cushion	1 pc	Box 1
12	Leg	4 pcs	Box 1
13	Drawer Front Left	1 pc	Box 1
14	Drawer Front Right	1 pc	Box 1
15	Drawer Left Side	2 pcs	Box 1
16	Drawer Right Side	2 pcs	Box 1
17	Drawer Back Side	2 pcs	Box 1
18	Drawer Bottom	2 pcs	Box 1
19	Centre Leg	1 pc	Box 1
20	Left Side Bar	1 pc	Box 1
21	Right Side Bar	1 pc	Box 1

Fittings

Please check you have all the fittings listed below with your product in box 1.

A  M6*35mm Cam Lock Screw 22pcs+2pcs extra	B  Ø15*9mm Cam Lock 22pcs+2pcs extra	C  Ø6*30mm Dowel 30pcs+3pcs extra	D  M4*35mm Screw 16pcs+2pcs extra	E  Cover 8pcs+1pc extra	F  Plastic Buckle 10pcs+1pc extra
G  M3.5*14mm Screw 10pcs+1pc extra	H  Handle 2pcs	I  M4*20mm Bolt 4pcs	J  M4*45mm Screw 10pcs+1pcs extra	K  Slide Rail 4sets	L  M3*12mm Screw 24pcs+3pcs extra

Bolt Length Ruler:




Tool required




Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Pay attention when connecting !
The sliding module must be at the front end.

STEP 1 : Extend Slide


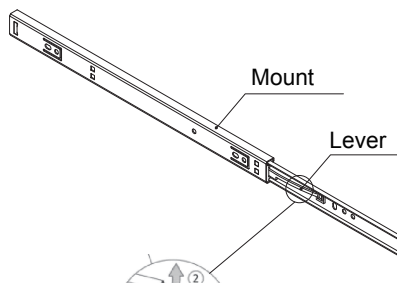


STEP 2: Push Lever UP

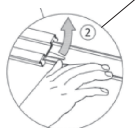


Push lever for the left of drawer ,
press the lever for the right of drawer

STEP 3: Remove Runner

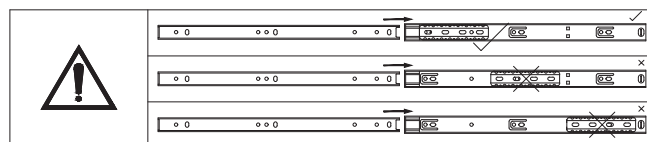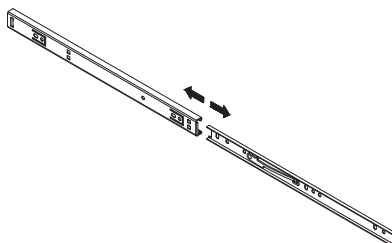


1. Attach Seat Side Bar Left (7) and Right (8) to Seat Side Bar Back (9).

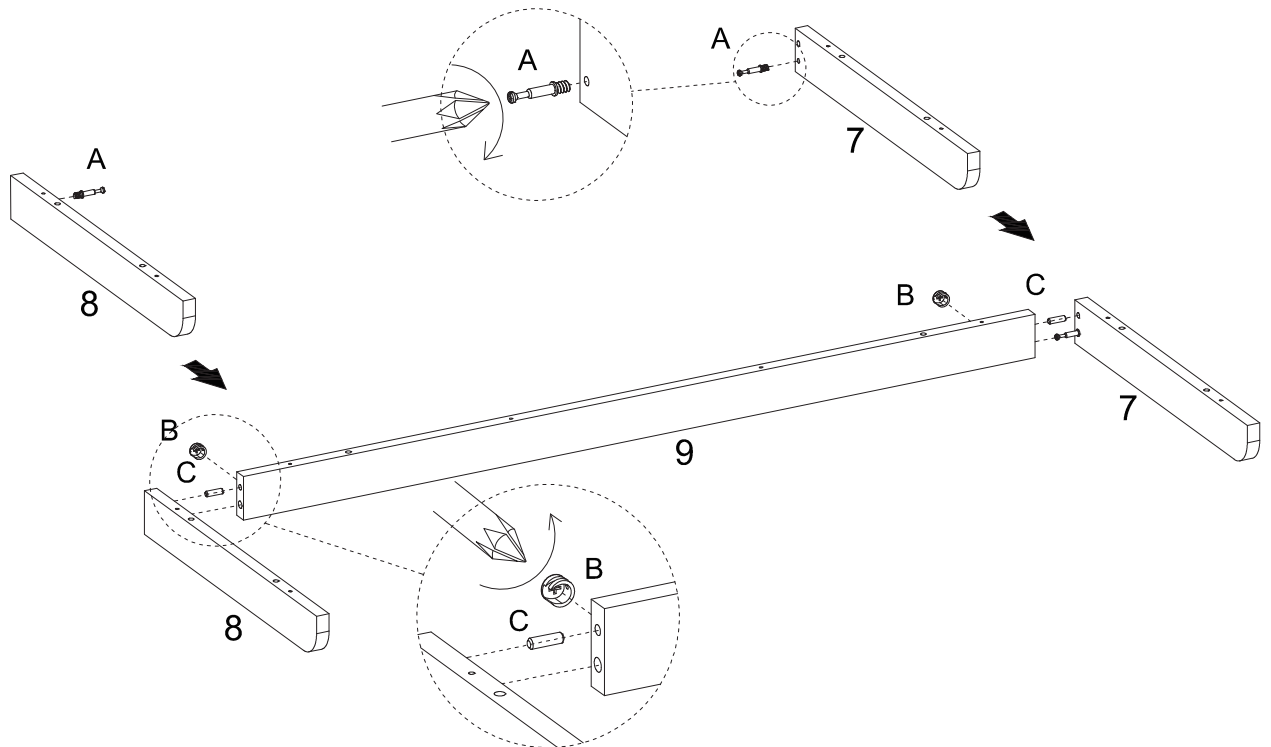


A	B	C
M6*35mm Cam Lock Screw 2pcs	Ø15*9mm Cam Lock 2pcs	Ø6*30mm Dowel 2pcs


2. Attach Top Panel (10) to the Frame.

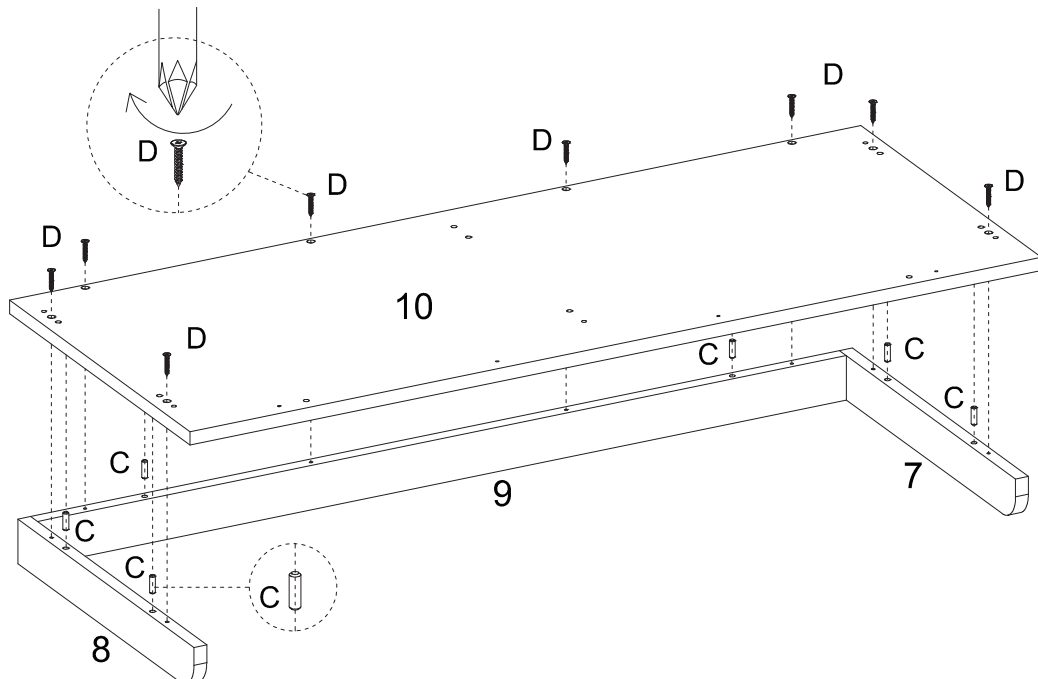


C	D
Ø6*30mm Dowel 6pcs	M4*35mm Screw 8pcs




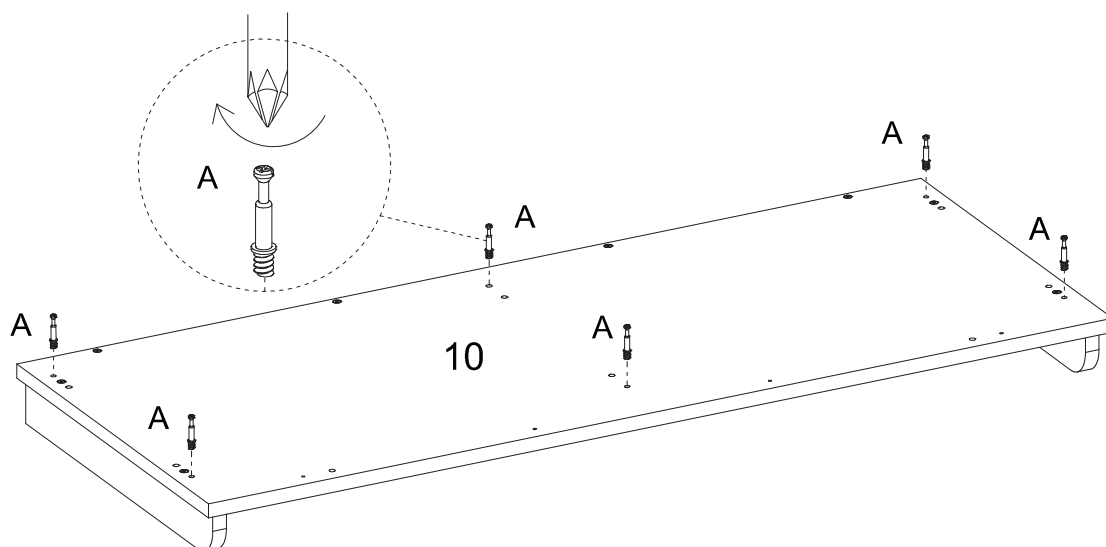

3. Attach Cam Lock Screw to Top Panel (10).

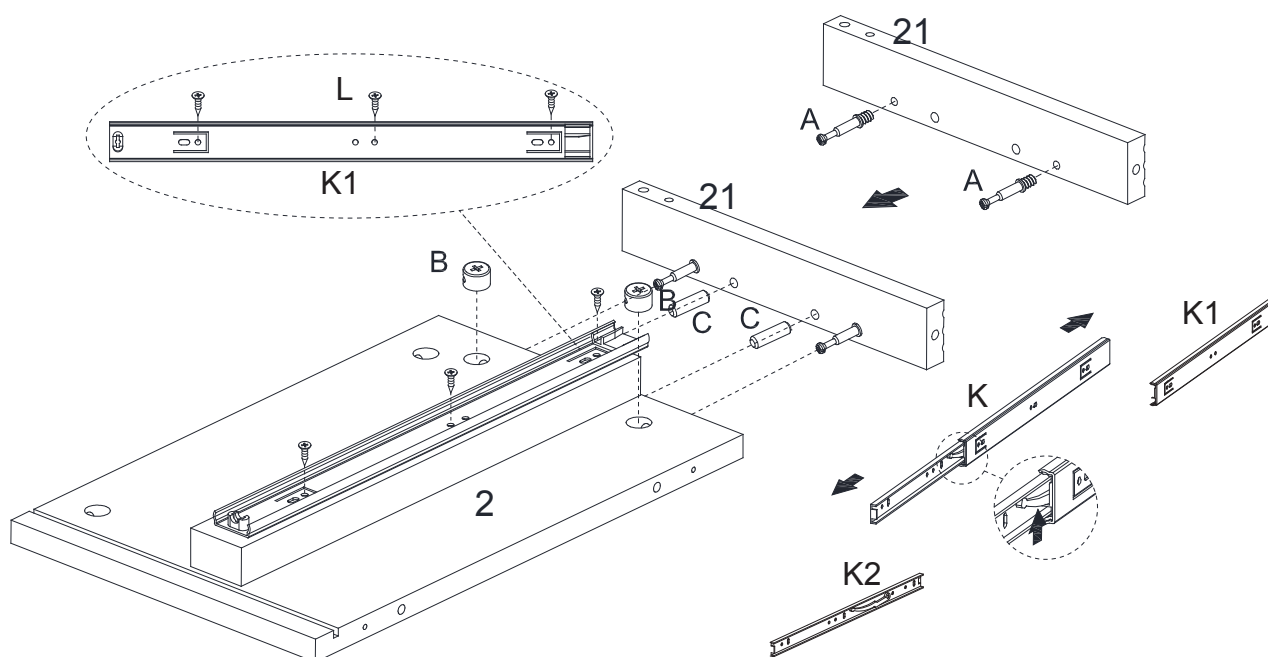


A

M6*35mm Cam Lock Screw
6pcs

4. Attach Cam Lock Screws to Right Side Bar (21), then attach Right Side Bar (21) and Right Side Panel (2), then attach Slide Rail to the Frame.




A	B	C	K	L
				
M6*35mm Cam Lock Screw	Ø15*9mm Cam Lock	Ø6*30mm Dowel	Slide Rail	M3*12mm Screw
2pcs	2pcs	2pcs	1pc	3pcs

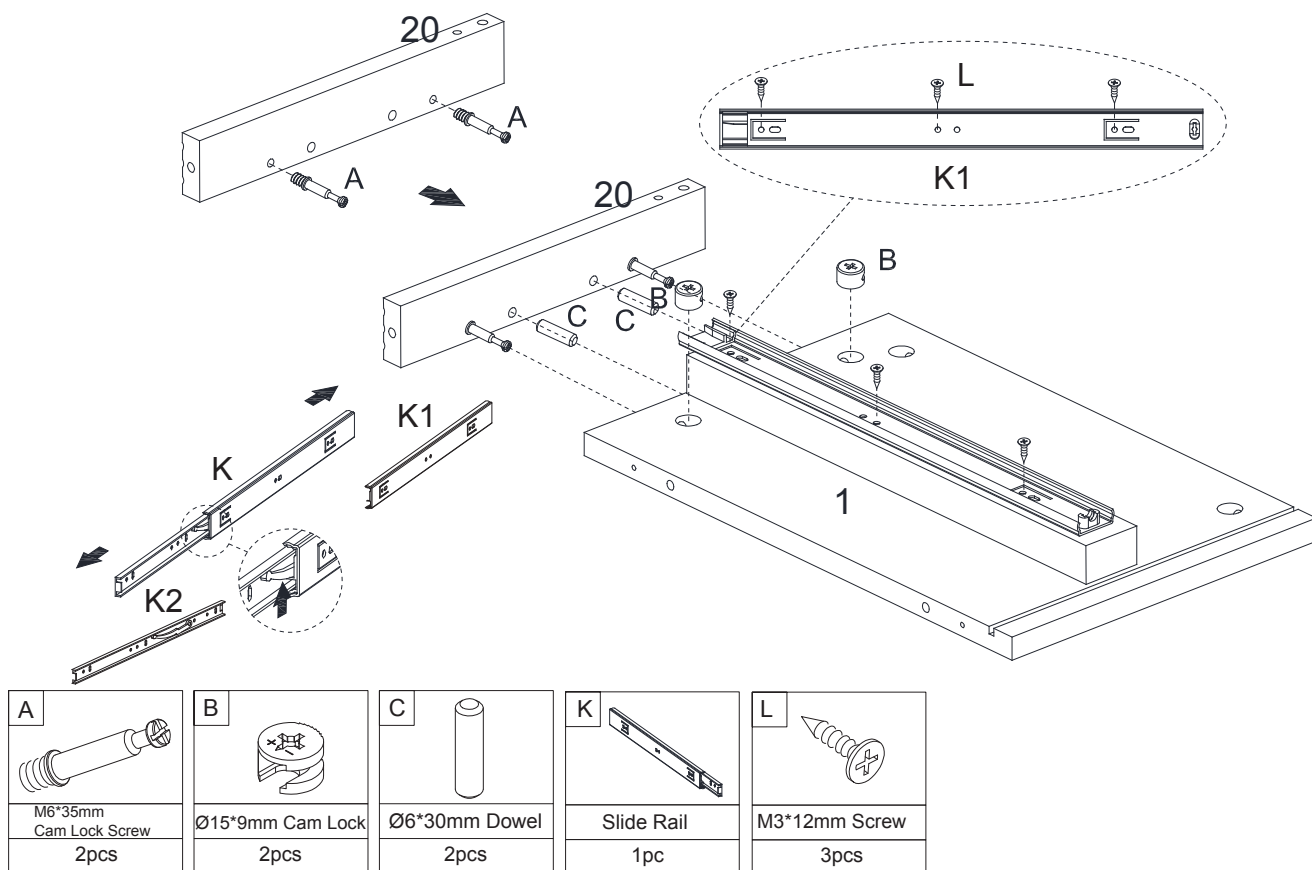
5. Attach Cam Lock Screws to Left Side Bar (20), then attach Left Side Bar (20) and Left Side Panel (1), then attach Slide Rail to the Frame.




6. Attach Left Side Panel (1) and Right Side Panel (2) to the Front Support Bar (4).

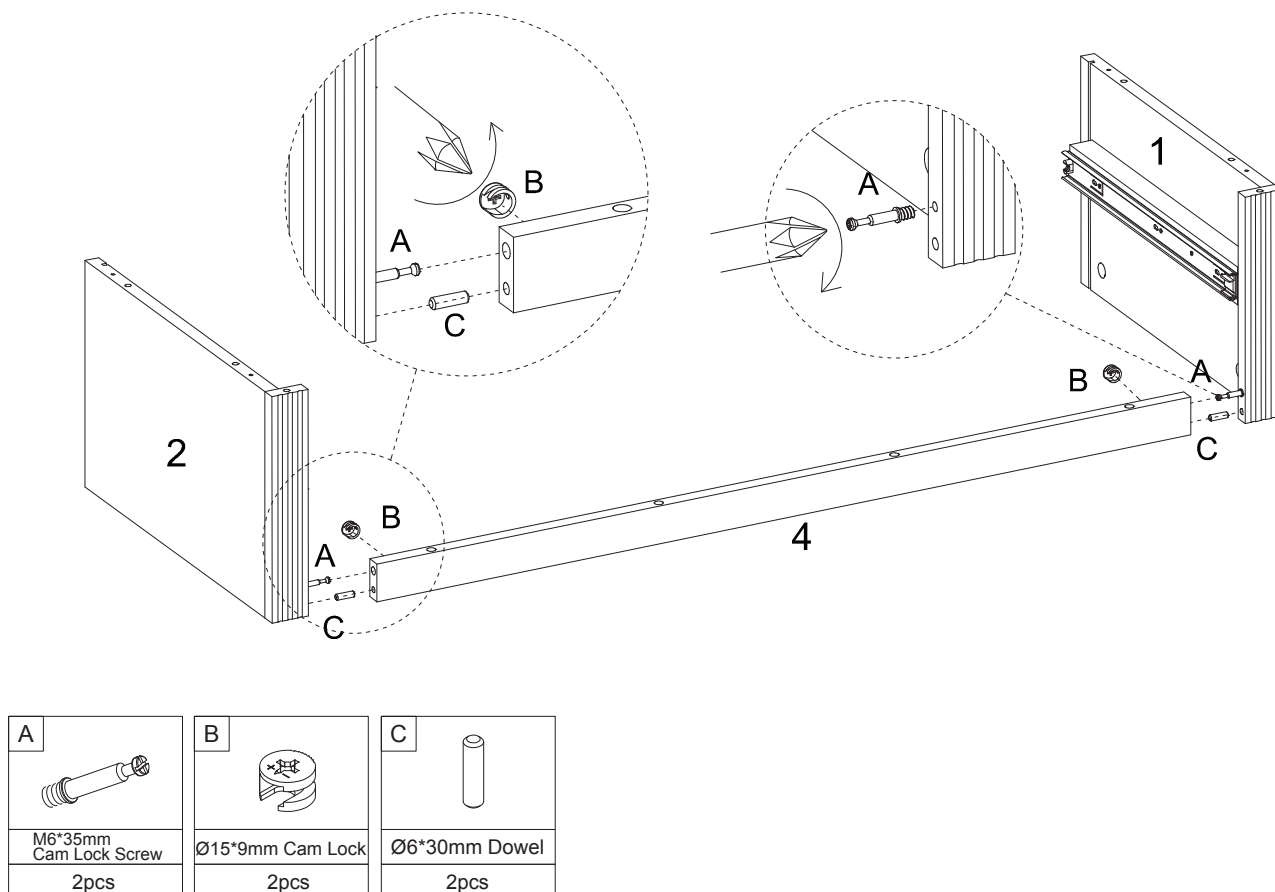

7. Attach the Slide Rail to Middle Panel (3) two sides.

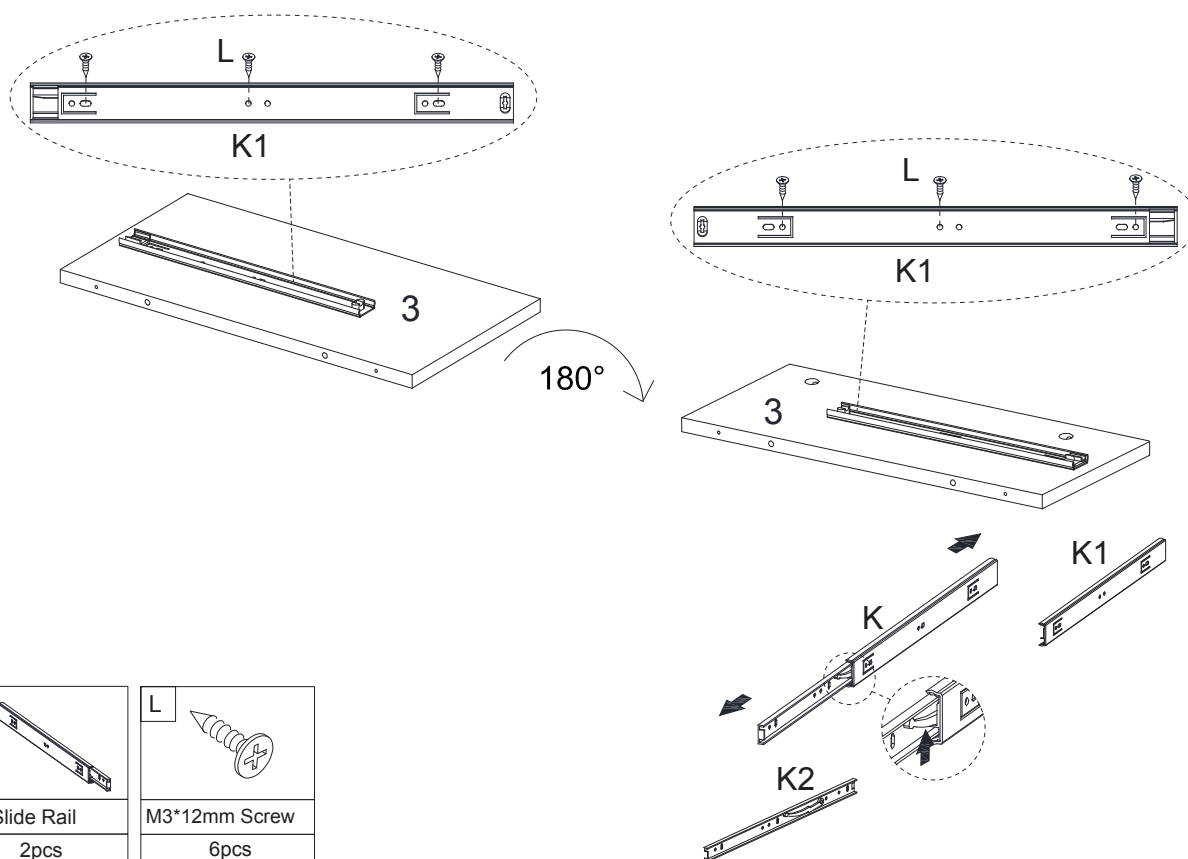


8. Attach the completed Side Panels Frame and Middle Panel (3) to the Top Panel (10).

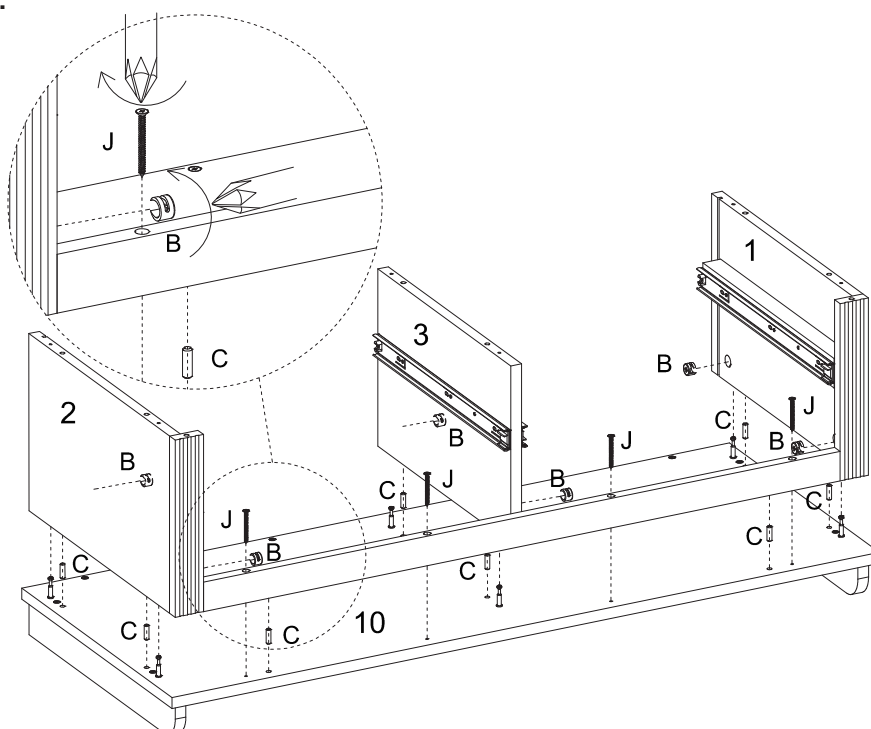




B		C		J	
Ø15*9mm Cam Lock		Ø6*30mm Dowel		M4*45mm Screw	
6pcs		8pcs		4pcs	

9. Slide Back Panel (6) to the Frame.

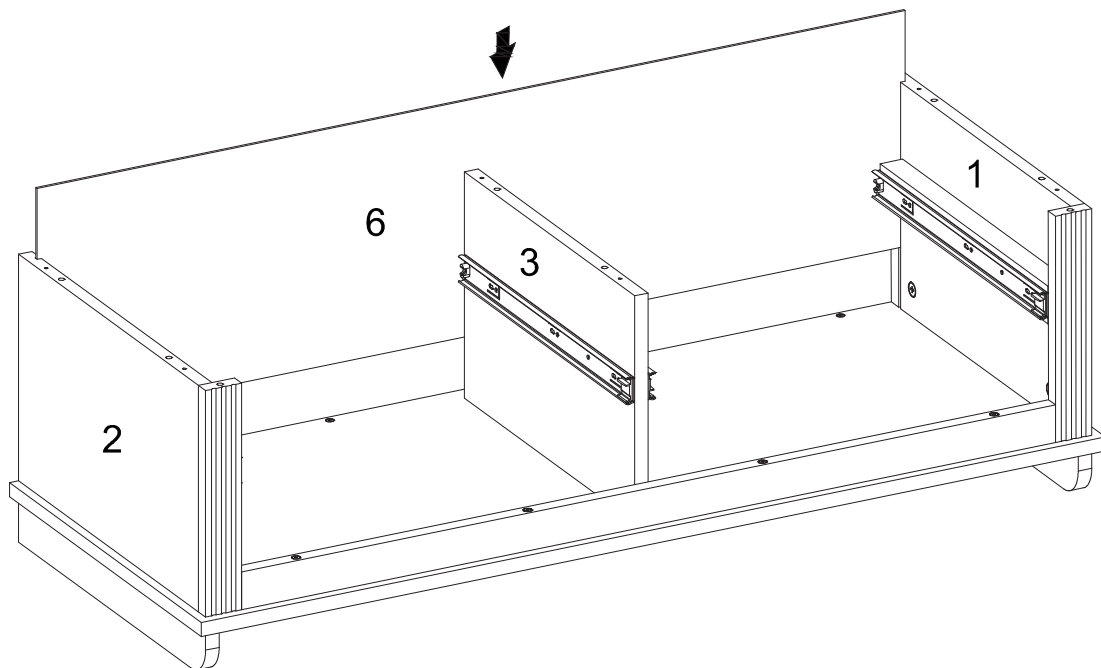


10. Attach Bottom Panel (5) to the Frame.

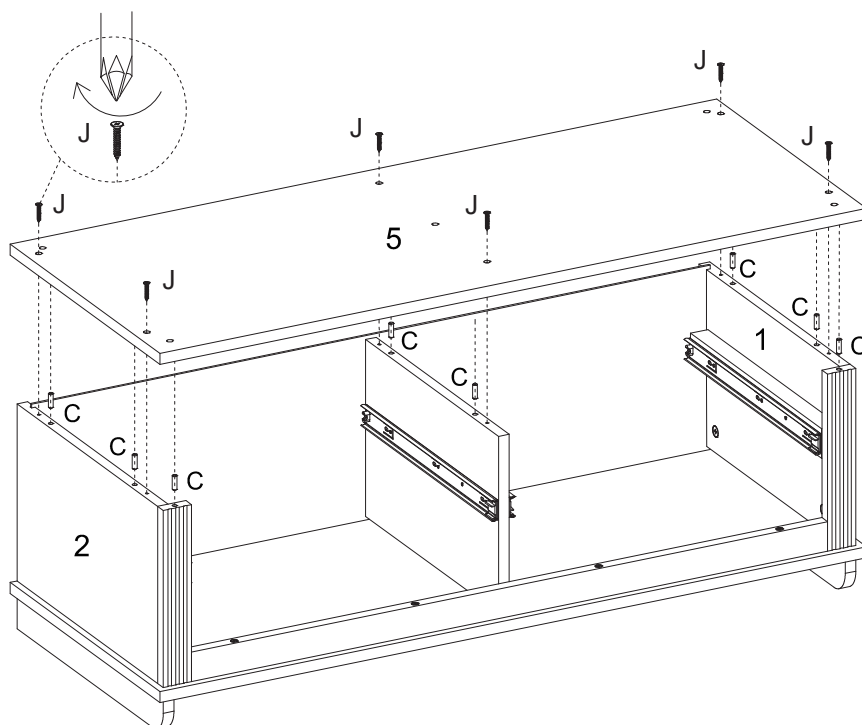




C	J
	
Ø6*30mm Dowel	M4*45mm Screw
8pcs	6pcs

11. Attach the Legs (12) and Centre Leg (19) to the Frame.

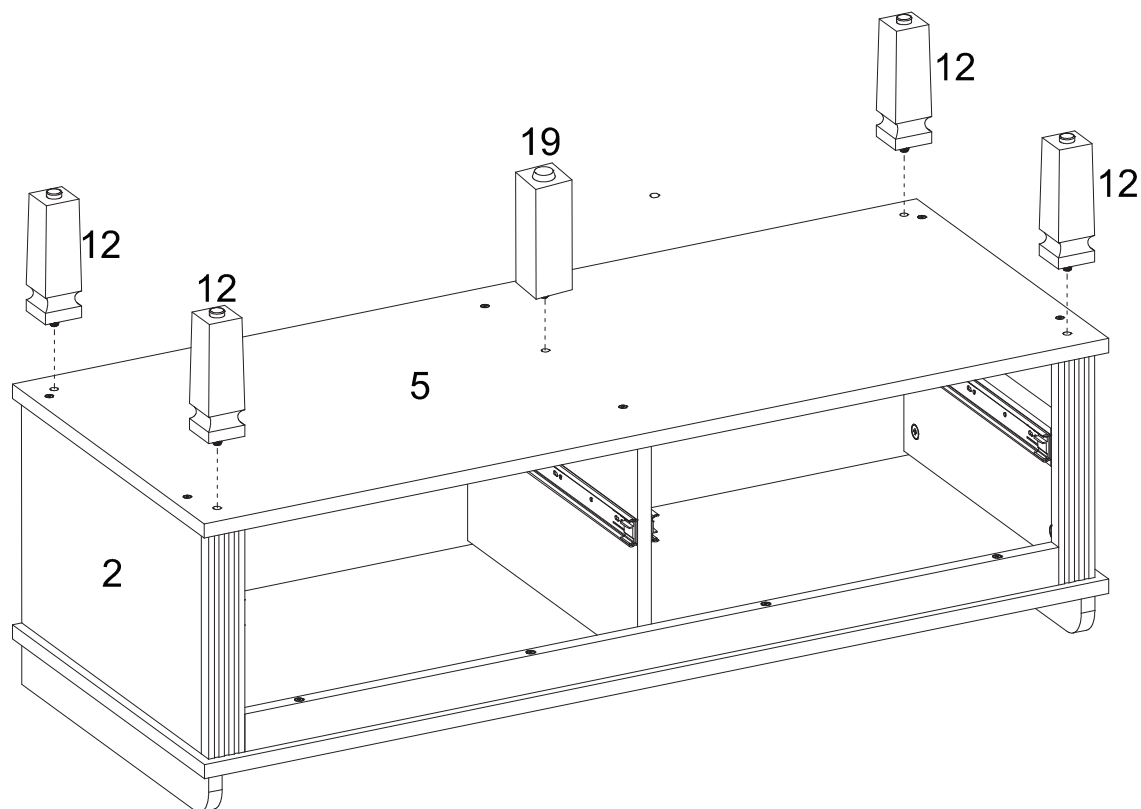


12. Attach the Slide Rail to the Drawer side(15,16).

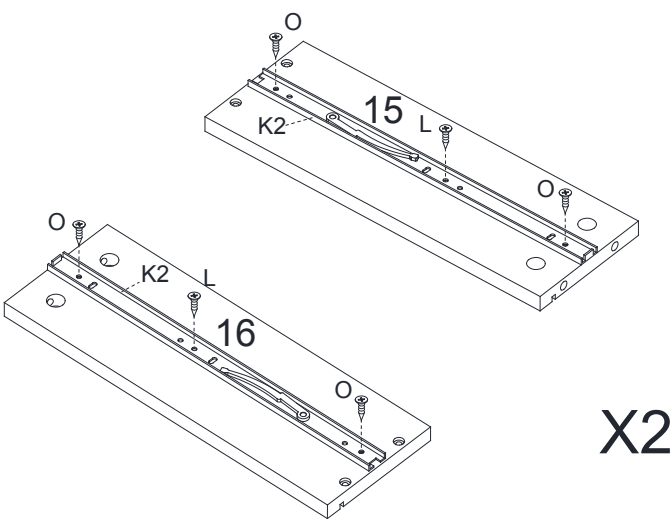


K	L
	
Slide Rail	M3*12mm Screw
4pcs	12pcs


13. Assemble the drawer by following the steps shown in the illustration below.

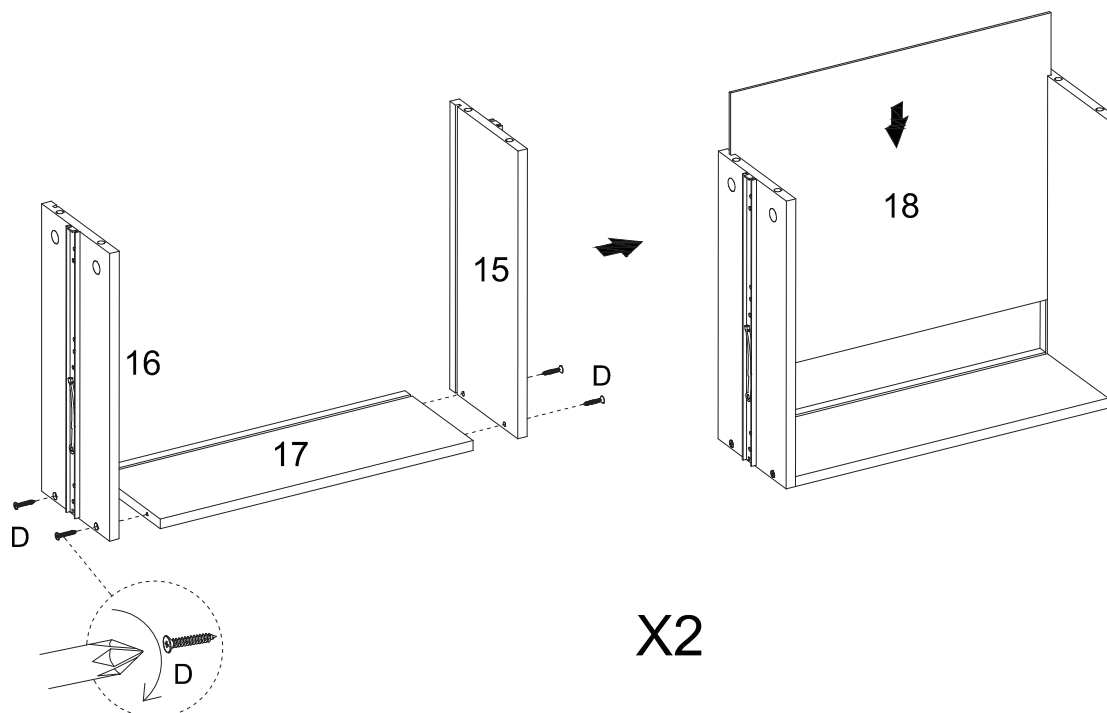






X2


D	
M4*35mm Screw	
8pcs	

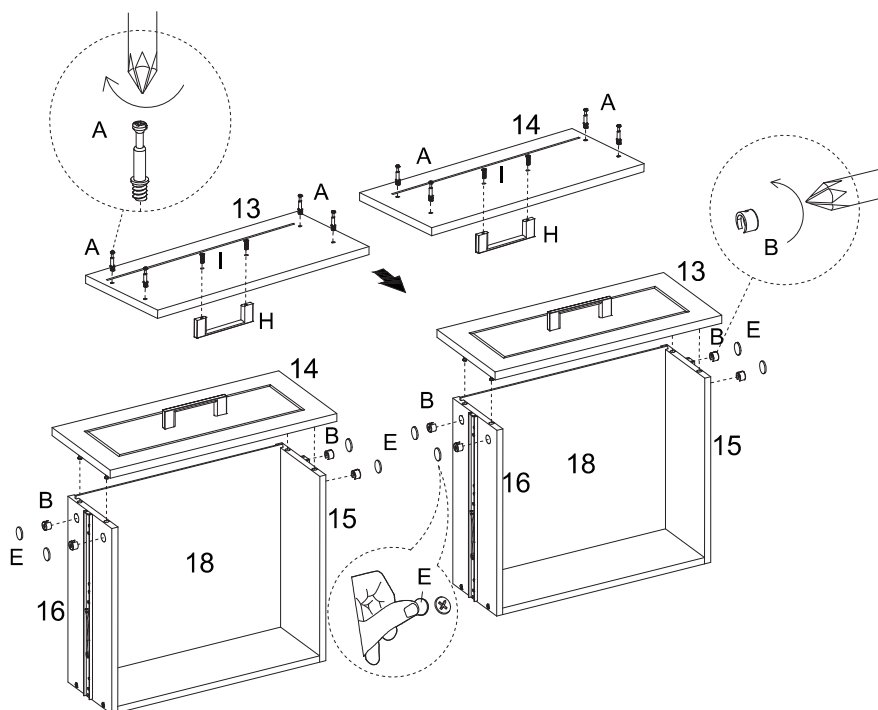14. Align and attach the handle to the drawer front (13,14), then secure the drawer front (13,14) to the frame.






A		B		E		H		I	
M6*35mm Cam Lock Screw		Ø15*9mm Cam Lock		Cover		Handle		M4*20mm Bolt	
8pcs		8pcs		8pcs		2pcs		4pcs	

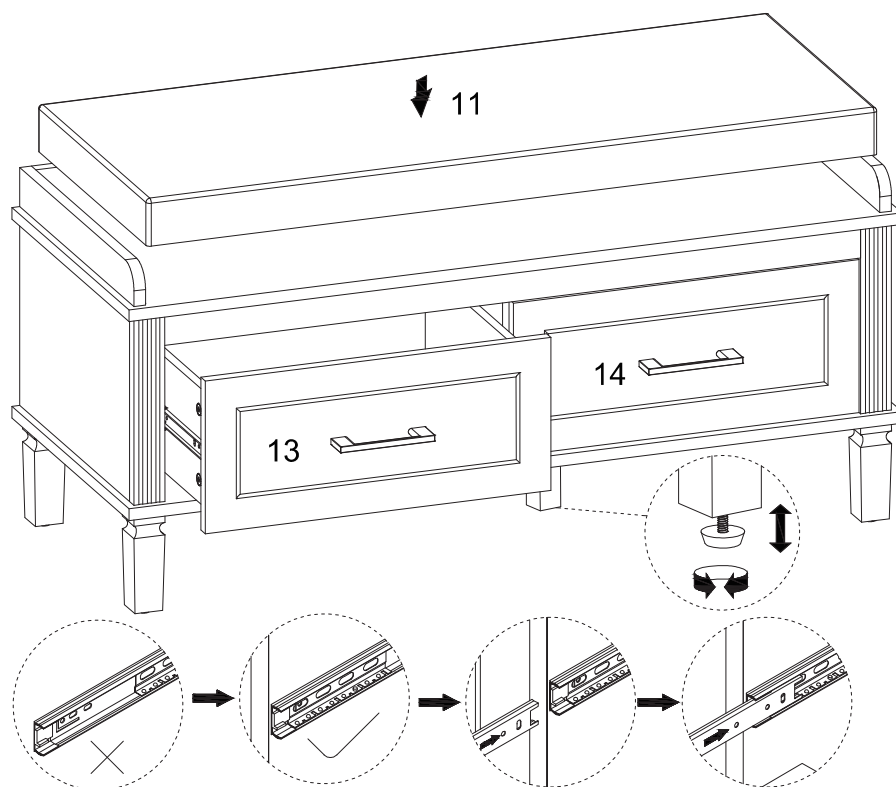15. Slide the Drawers into the Frame. The Centre Leg is adjustable if necessary. Put the Cushion (11) on storage cupboard.

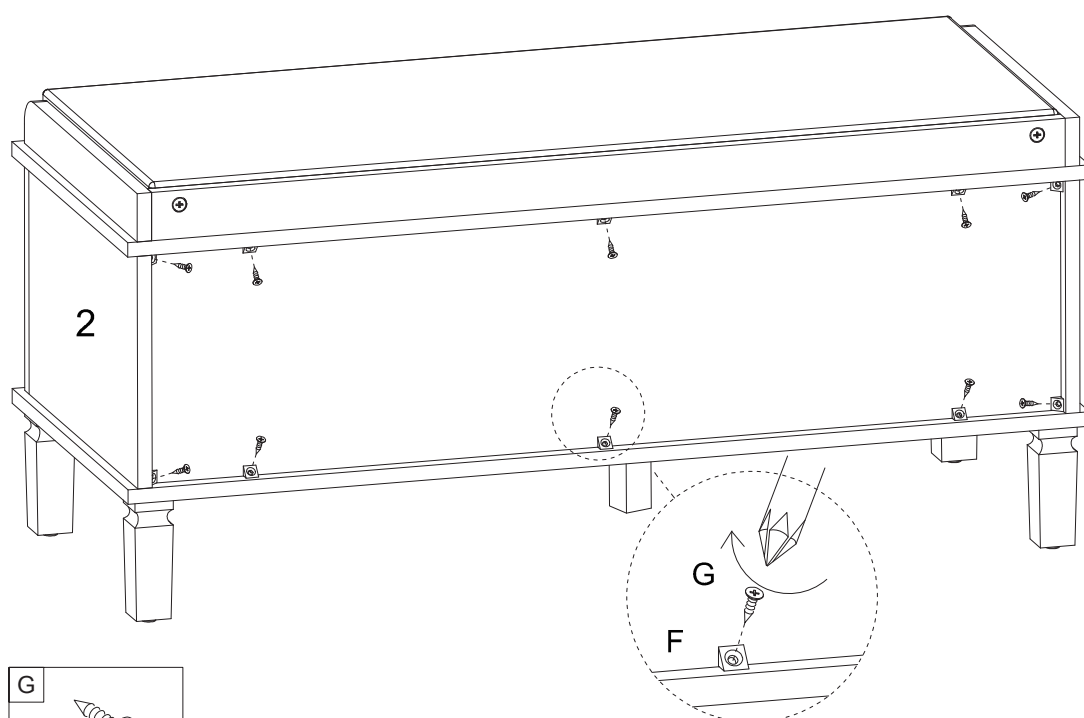

16. Attach the plastic buckles on back. Before securing them, manually adjust the frame to ensure the drawers are properly aligned, even, and parallel.



F 	G 
Plastic Buckle 10pcs	M3.5*14mm Screw 10pcs