


Range Name: Sienna

Box 1 dimensions: W181xD64.5xH22.5 cm Product dimensions: W99xW55xH180 cm

2 Door Wardrobe

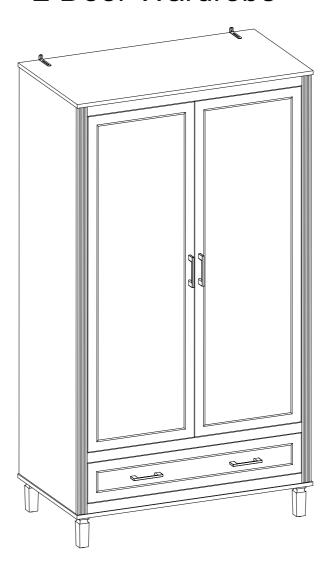

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Up to 90 minutes assembly time



Two person assembly

Important

Assembly Tip

Before you begin, we advise laying everything out on a clean and soft level surface to avoid damaging the unit or your floor. It's best to identify all of the parts and fittings to build your 2 door wardrobe, and to familiarise yourself with all of the parts and fittings before building.

Top Tip

We recommend that you build your new 2 door wardrobe in the room you'd like it to be located. This will help prevent any risk of damage to the product whilst moving it.

Safety and Care

- 1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this 2 door wardrobe which could present a choking hazard.
 - All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
- 2. Do not stand on your product.
- 3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
- 4. Place heaviest items in the lowest drawers.
- 5. Do not set TV or other heavy objects on top of the product.
- 6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
- 7. Never keep more than one drawer open at the same time.
- 8. The installation of anti tipping kit to secure your furniture is strongly suggested.
- 9. Serious or fatal crushing injuries can occur from tipping furniture.

Help and Support


Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

Recycling

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

Care and Maintenance

- 1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
- 3. Do not scrub or rub the surface when cleaning.
- 2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
- 4. Do not drag the 2 door wardrobe when moving, lift it off the floor instead.
- 5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
- 6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the change of the humidity and temperature.
- 7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
- 8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
- 9. Avoid sharp items such as a screwdriver or any pointy tools.

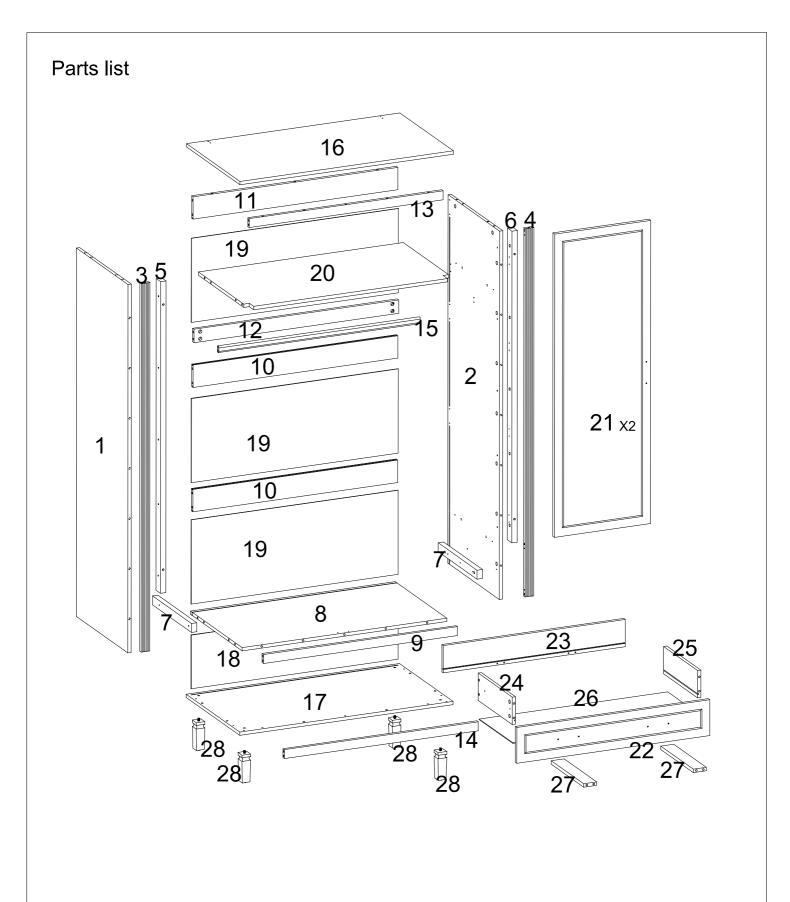

Parts list

Before you begin building your product, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.


Part Number	Part Description	Quantity	Box No	
1	Left Panel	1 pc	Box 1	
2	Side Panel	1 pc	Box 1	
3	Left Side Bar	1 pc	Box 1	
4	Right Side Bar	1 pc	Box 1	
5	Hinge Left Support Bar	1 pc	Box 1	
6	Hinge Right Support Bar	1 pc	Box 1	
7	Slide Rail Support Bar	2 pc	Box 1	
8	Bottom Shelf Panel	1 pc	Box 1	
9	Middle Front Support Bar	1 pc	Box 1	
10	Lower Back Support Bar	2 pcs	Box 1	
11	Upper Back Support Bar	1 pc	Box 1	
12	Middle Back Support Bar	1 pc	Box 1	
13	Upper Front Support Bar	1 pc	Box 1	
14	Lower Front Support Bar	1 pc	Box 1	

Part Number	Part Description	Quantity	Box No	
15	Hanging Bar	1 pc	Box 1	
16	Top Panel	1 pc	Box 1	
17	Bottom Panel	n Panel 1 pc		
18	Lower Back Panel	1 pc	Box 1	
19	Middle Back Panel	3 pcs	Box 1	
20	Top Shelf Panel	1 pc	Box 1	
21	Door	2 pcs	Box 1	
22	Drawer Front	1 pc	Box 1	
23	Drawer Back Side	1 pc	Box 1	
24	Drawer Left Side	1 pc	Box 1	
25	Drawer Right Side	1 pc	Box 1	
26	Drawer Bottom	1 pc	Box 1	
27	Drawer support bar	2 pcs	Box 1	
28	Leg	4 pcs	Box 1	

Fittings checklist

Please check you have all the fittings listed below with your product in box 1.


		_			
A	M6x35mm Cam Bolt x62pcs(+4 extra)	B	Ø15x9mm Cam Lock x62pcs(+4 extra)	(C)	Ø8x30mm Wood Dowel x42pcs(+4 extra)
	A TIMINITY				
D	M4x45mm Screw x12pcs(+1 extra)	E	M4x35mm Screw x14pcs(+1 extra)	F	Plastic Buckle x26pcs(+3 extra)
	Tago				VIII (B)
G	M3x14mm Screw x32pcs(+4 extra)	\bigcirc	Slide Rail x2sets		M3x12mm Screw x14pcs(+1 extra)
			Ting:		
(J)	Hinge x8pcs	K	M3.5x12mm Screw x48pcs(+4 extra)		Cover x22pcs(+2 extra)
	0				
M	Door Strike Plate x4pcs	N	Door Catch x2pcs	0	M6x28mm Bolt x10pcs(+1 extra)
					* mmm
P	Allen Key x1pc	Q	Tube Bracket x2 sets	R	M4x14mm Screw x4pcs

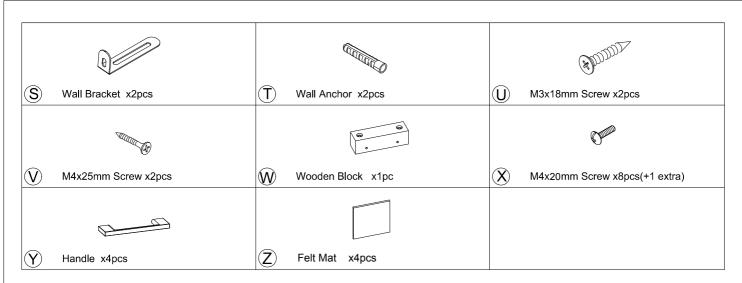


Bolt Length Ruler:



Tool required



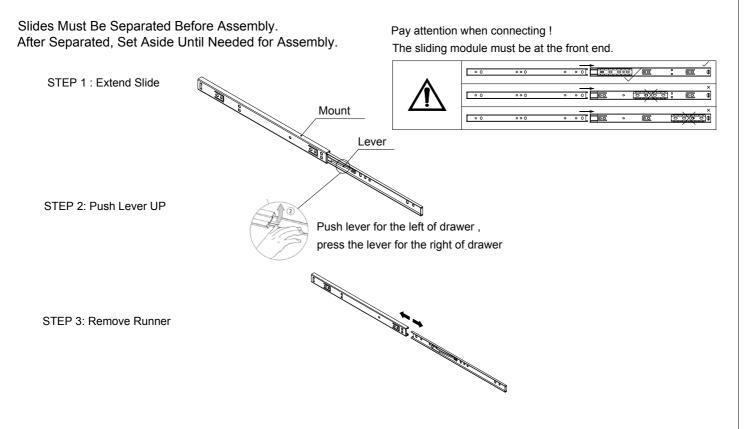

Step 1: Attach the Cam Bolt to the Left Side Bar (3) and the Right Side Bar (4). 14pcs Step 2: Attach Right Side Bar (4) to Right Panel (2). \bigcirc 7pcs **(C)** 2pcs 2 2 3 P-6-24


Step 3: Attach the Hinge Right Support Bar (6) to the Frame. **©** 2pcs 2 Step 4: Attach the Slide Rail Support Bar (7) to the Frame and tighten Bolts to the Frame. 0 5pcs \bigcirc 2pcs \bigcirc 2pcs 0 (E) 2


Step 5: Attach the fitting and Slide Rail to the Frame.

A 15pcs


H 1pc

1 pc

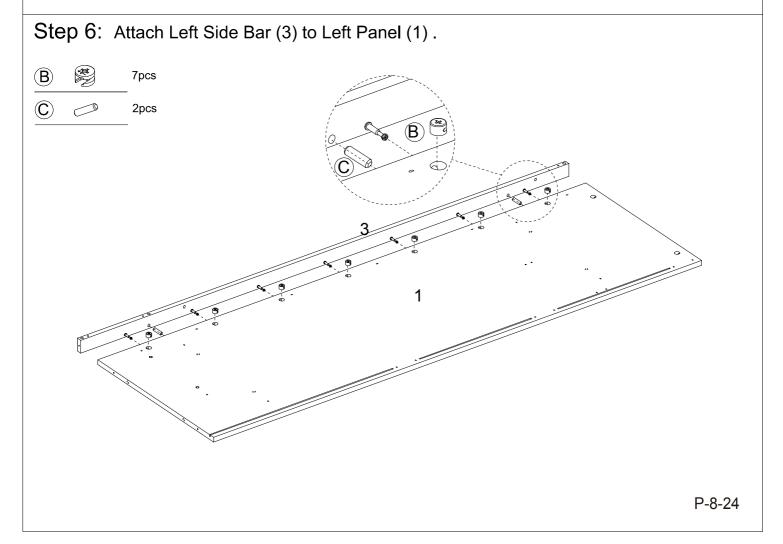

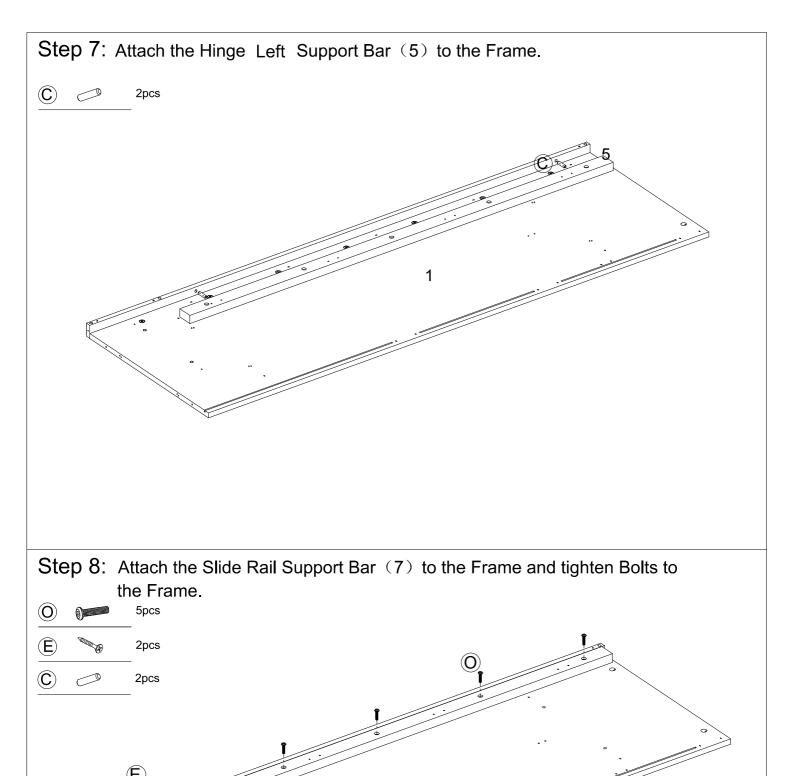


Step 9: Attach the fitting and Slide Rail to the Frame. \bigcirc 15pcs 1рс 3pcs 60 (H1) 1 Step 10: Attach the Cam Bolt to the Middle Front Support Bar (9), then attach the Middle Front Suppot Bar (9) to the Bottom Shelf Panel (8). 3pcs \bigcirc \bigcirc 3pcs (C) 2pcs

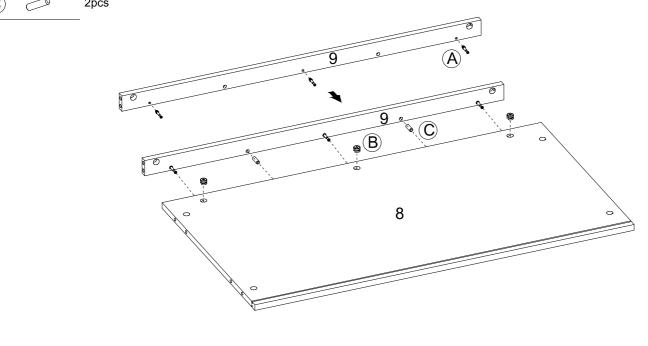



Step 11: Attach the wooden block and door catch to Upper Front Support Bar (13). Attache parts (8, 10, 11, 12, 13, 14, 20) to Right Panel (2). \bigcirc 15pcs **(C)** 7pcs ${\color{red}\widehat{\textbf{N}}}$ 1pcs \bigcirc 2pcs \bigcirc 2pcs 13 $\widehat{\mathbf{W}}$ 1рс 13 20 11 10 10 8 2 **B** P-11-24

Step 12: Attach Middle Back Panels (19) to the Frame.

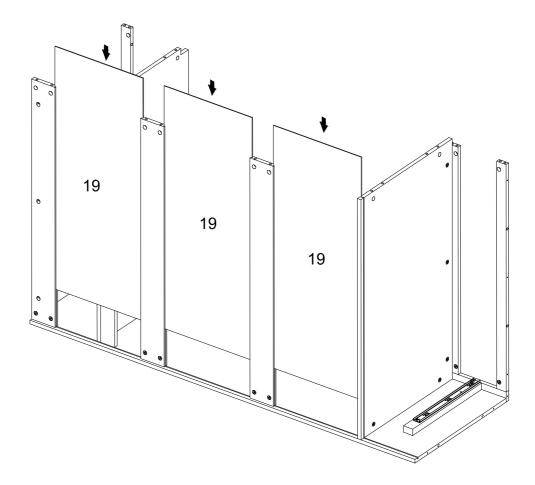

Step 13: Attach Left Panel (1) to the Frame.



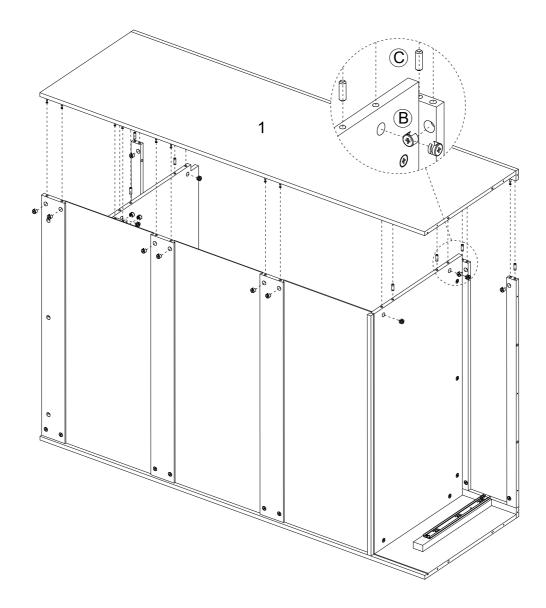


Step 14: Attach Lower Back Panels (18) to the Frame and attach the Dowel (C) to the Frame. **©** 6pcs


18


Step 15: Attach the Bottom Panel (17) to the Frame. D Briting 17

Step 16: Attach the Legs (28) to the Frame. \bigcirc 4pcs


Step 17: Attach the Cam Bolt to the Top Panel (16).

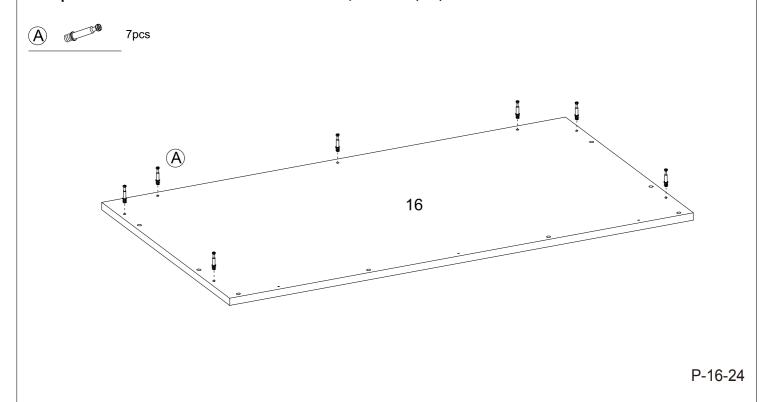

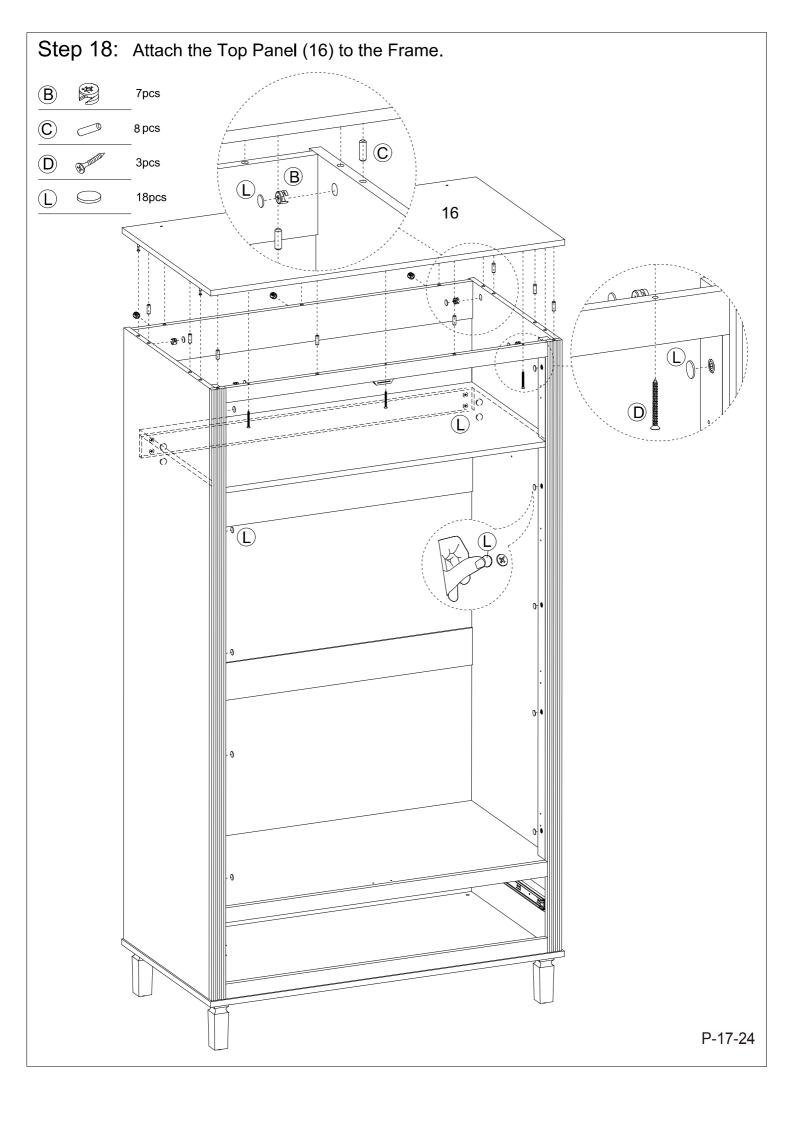


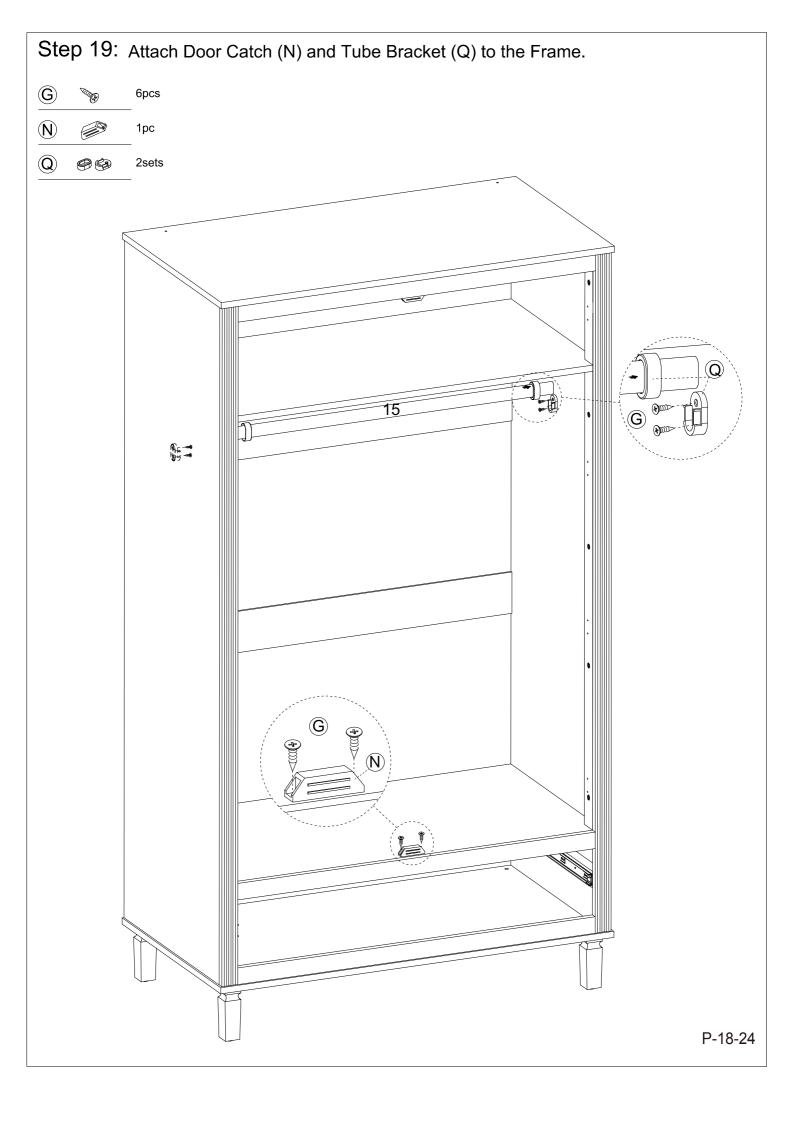



Step 20: Attach the Slide Rail to the Drawer Left Side (24) and Drawer Right Side (25).

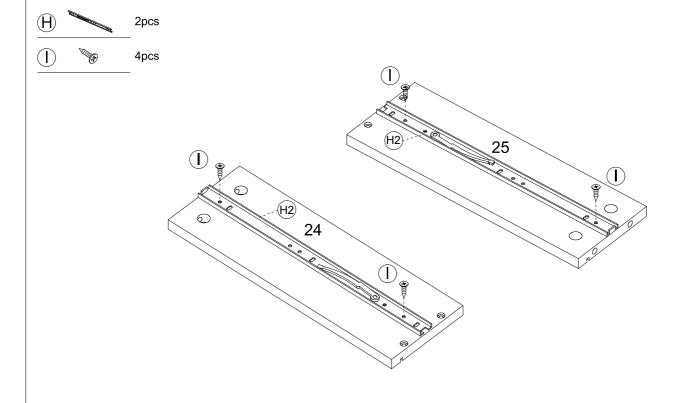

Step 21: Attach the Drawer.

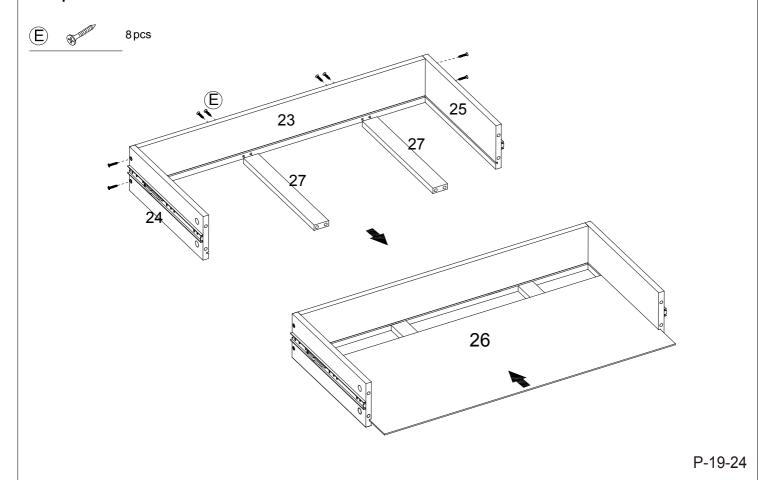

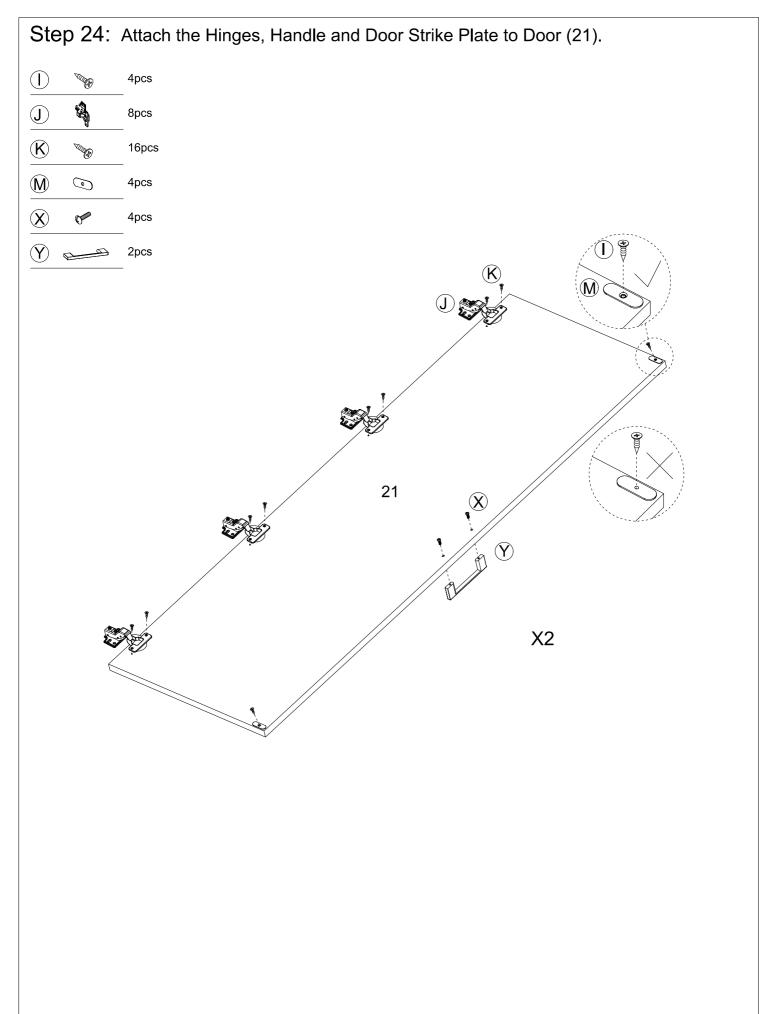

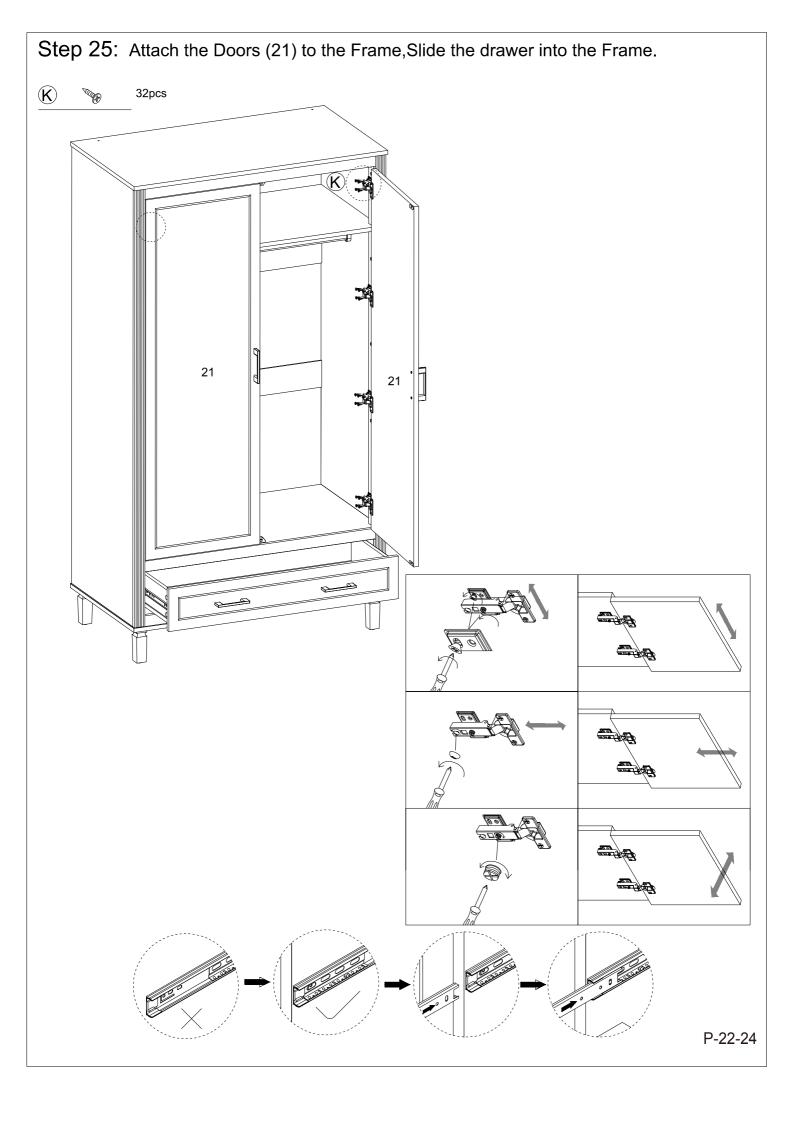

Step 26: Attach the plastic buckles and wall bracket. Before securing the plastic buckles, manually adjust the frame to ensure the drawer and doors are properly aligned, even, and parallel.

