



Stockholm Shoe Cabinet

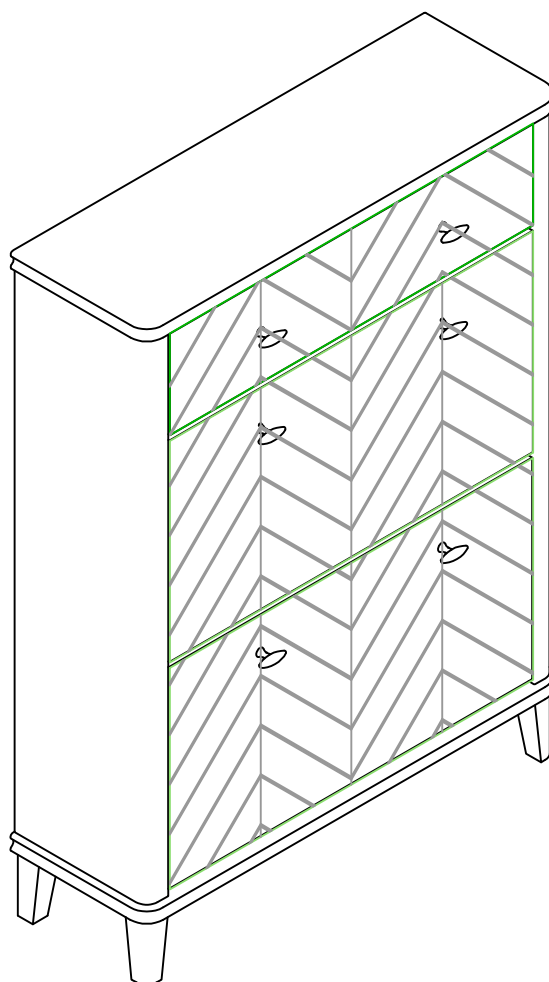

V1.0

Up to 50 minutes
assembly time

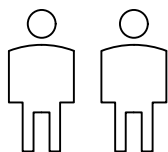

Two person
assembly

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Stockholm Shoe Cabinet. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the Stockholm Shoe Cabinet in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE:

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Stockholm Shoe Cabinet when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

Parts list






















Before you begin building your Shoe Cabinet, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity
①	Top Panel	1pc
②	Left Side Panel	1pc
③	Right Side Panel	1pc
④	Bottom Panel	1pc
⑤	Centre Support	1pc
⑥	Back Panel	2pcs
⑦	Back Slats	1pc
⑧	Front Leg	2pcs
⑨	Back Leg	2pcs
⑩	Drawer Front	1pc



Part Number	Part Description	Quantity
⑪	Drawer Back Side	1pc
⑫	Drawer Left Side	1pc
⑬	Drawer Right Side	1pc
⑭	Drawer Bottom	1pc
⑮	Drawer Support	1pc
⑯	Drawer Front	1pc
⑰	Drawer Front	1pc
⑱	Drawer Shelf	2pcs
⑲	Drawer Shelf	2pcs
⑳	Drawer Shelf	2pcs

Fittings


Please check you have all the fittings listed below with your product.

A  M6×40mm Bolt 8pcs +1pc extra	B  Ø6 Flat Washer 4pcs	C  Ø6 Spring Washer 4pcs	D  M6×35mm Bolt 11pcs+1pc extra	E  Ø15×9.5mm Cam Lock 11pcs+1pc extra
F  Cover 4pcs	G  Ø8×30mm Dowel 14pcs+1pc extra	H  Ø6×30mm Dowel 6pcs	I  M3.5×16mm Screw 10pcs +1pc extra	J  Wall Bracket 2pcs
K  M4×35mm Screw 7pcs	L  Handle 6pcs	M  M4×25mm Bolt 6pcs	N  Ø6 × 30mm Wall Plug 2pcs	O  Plastic frame 4pcs (2R&2L)
P  Plastic Stopper 4pcs	Q  M3.5×20mm Screw 20pcs+2pcs extra	R  M3.5×20mm Screw 12pcs+1pc extra	S  15×9mm Plastic Buckle 8pcs+1pc extra	T  M3.5×14mm Screw 8pcs+1pc extra
U  M4 Allen key 1pc				


Pre- assembled Fitting


V  Plastic Cap 4pcs	W  Locating Part 4pcs
--	--


Parts

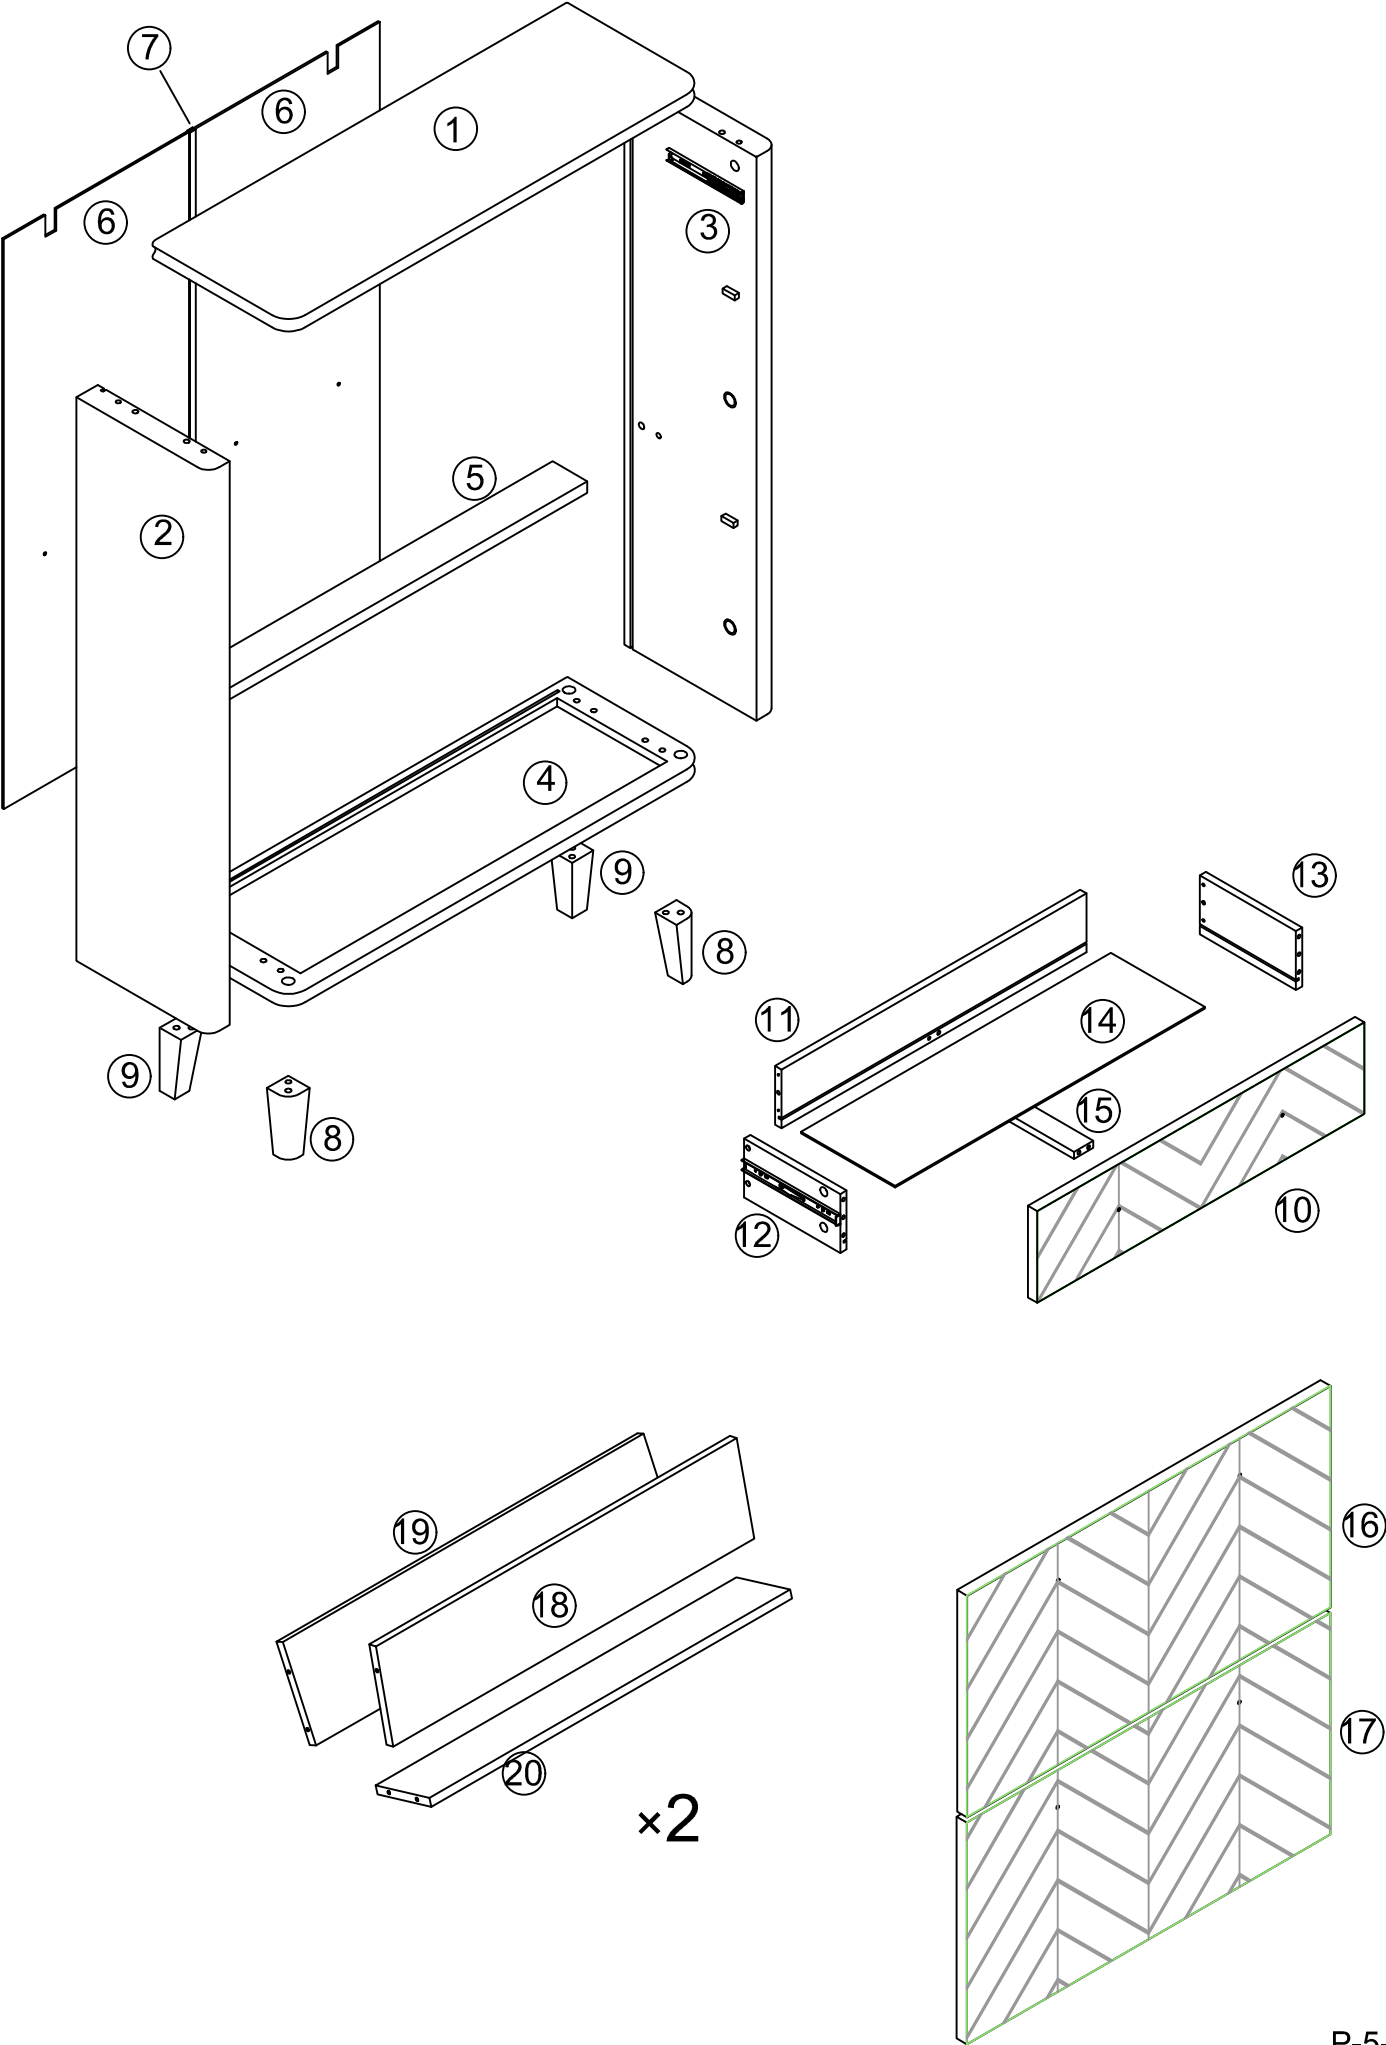


Step 1. Attach parts to the panels.

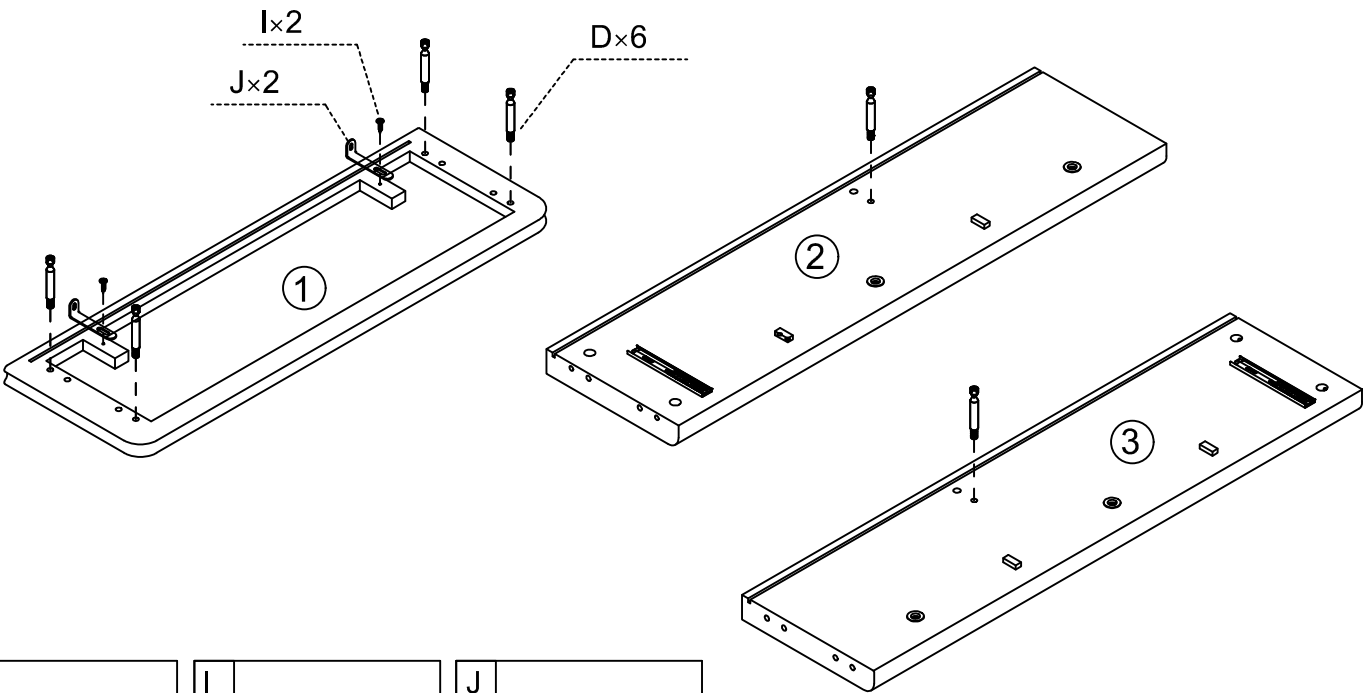



D	
M6 x 35mm Bolt	
6pcs	


I	
M3.5 x 16mm Screw	
2pcs	

J	
Wall Bracket	
2pcs	



Step 2. Attach centre support to side panels.

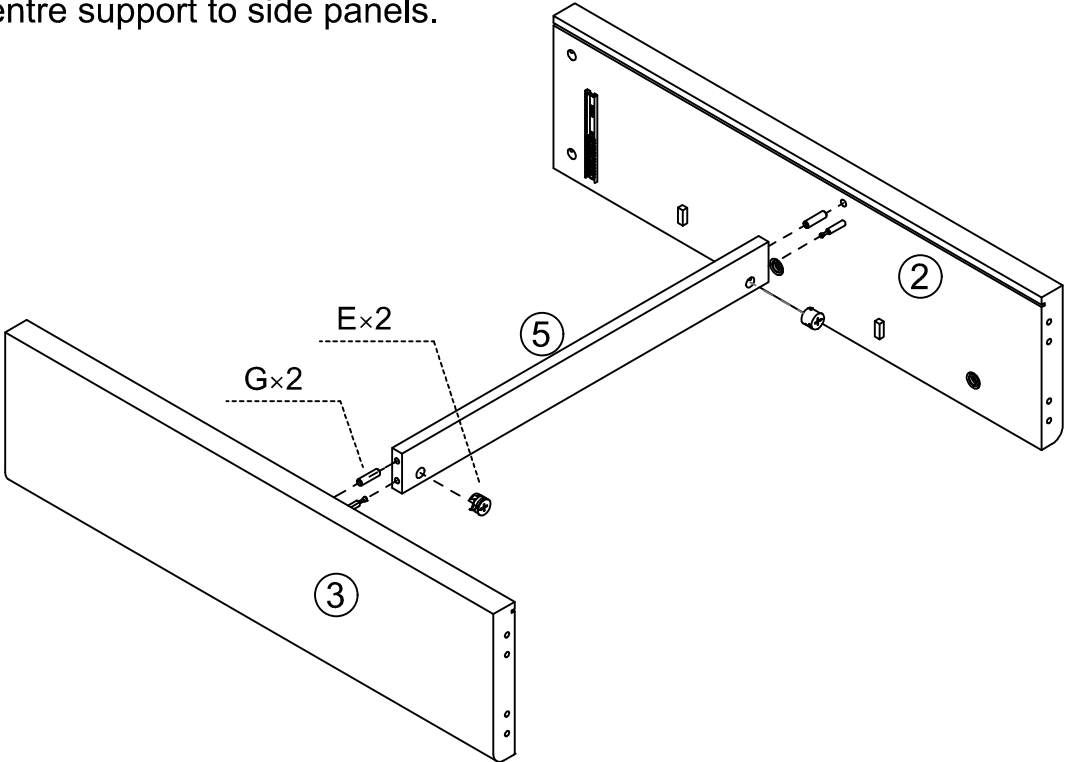


E	
Ø15 x 9.5mm Cam Lock	
2pcs	

G	
Ø8 x 30mm Dowel	
2pcs	


Step 3. Attach the top panel to the frame.

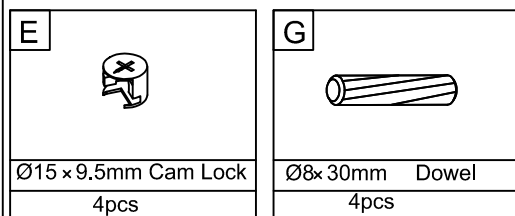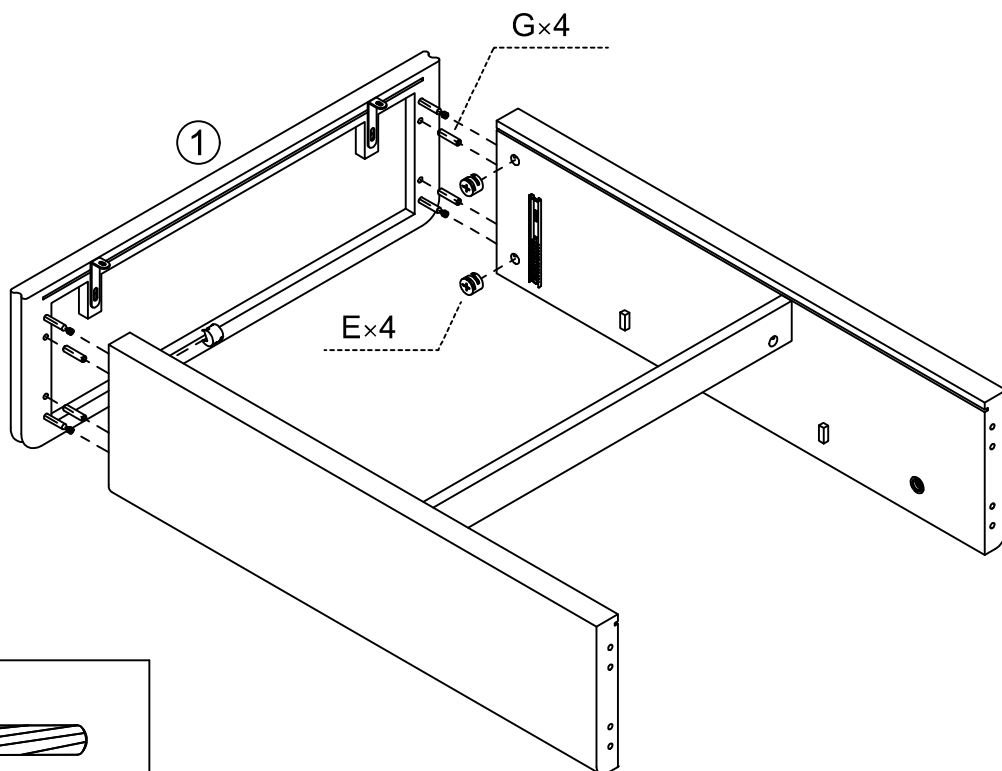

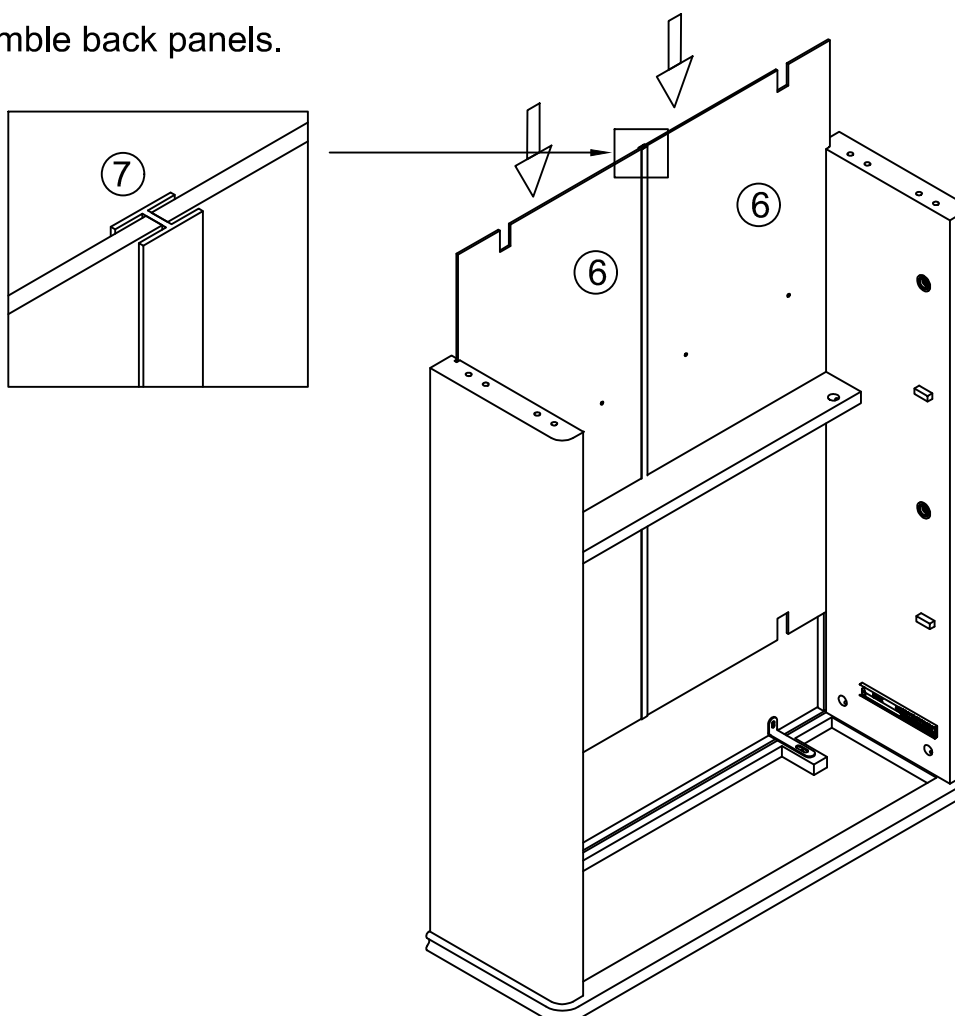

Step 4. Assemble back panels.



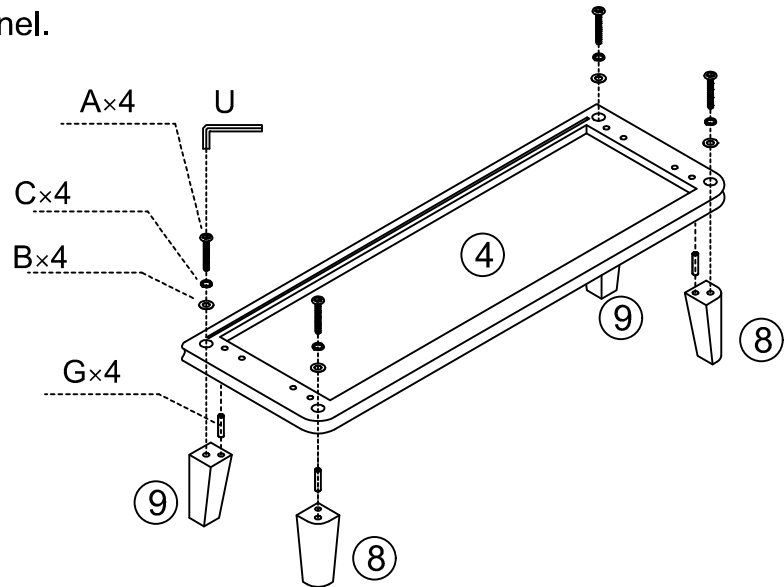

Step 5. Attach legs to bottom panel.




A

M6 x 40mm Bolt
4pcs


B

Ø6 Flat Washer
4pcs


C

Ø6 Spring Washer
4pcs


G

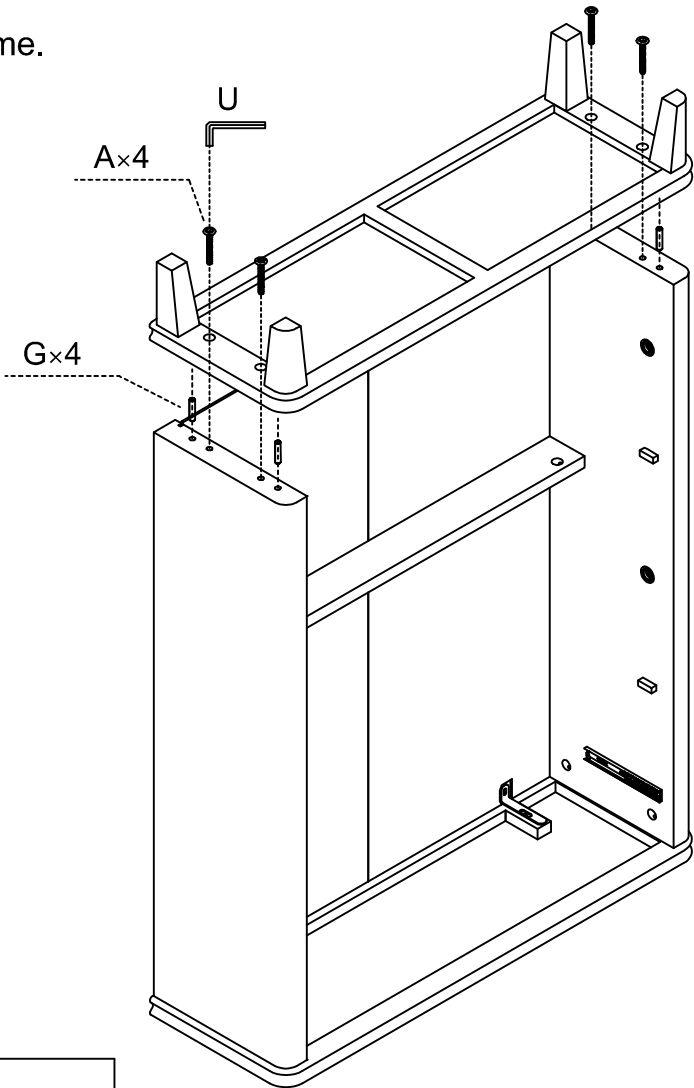Ø8x 30mm Dowel
4pcs


U

M4 Allen key
1pc

Step 6. Attach the bottom panel to the frame.







A

M6 x 40mm Bolt
4pcs


G

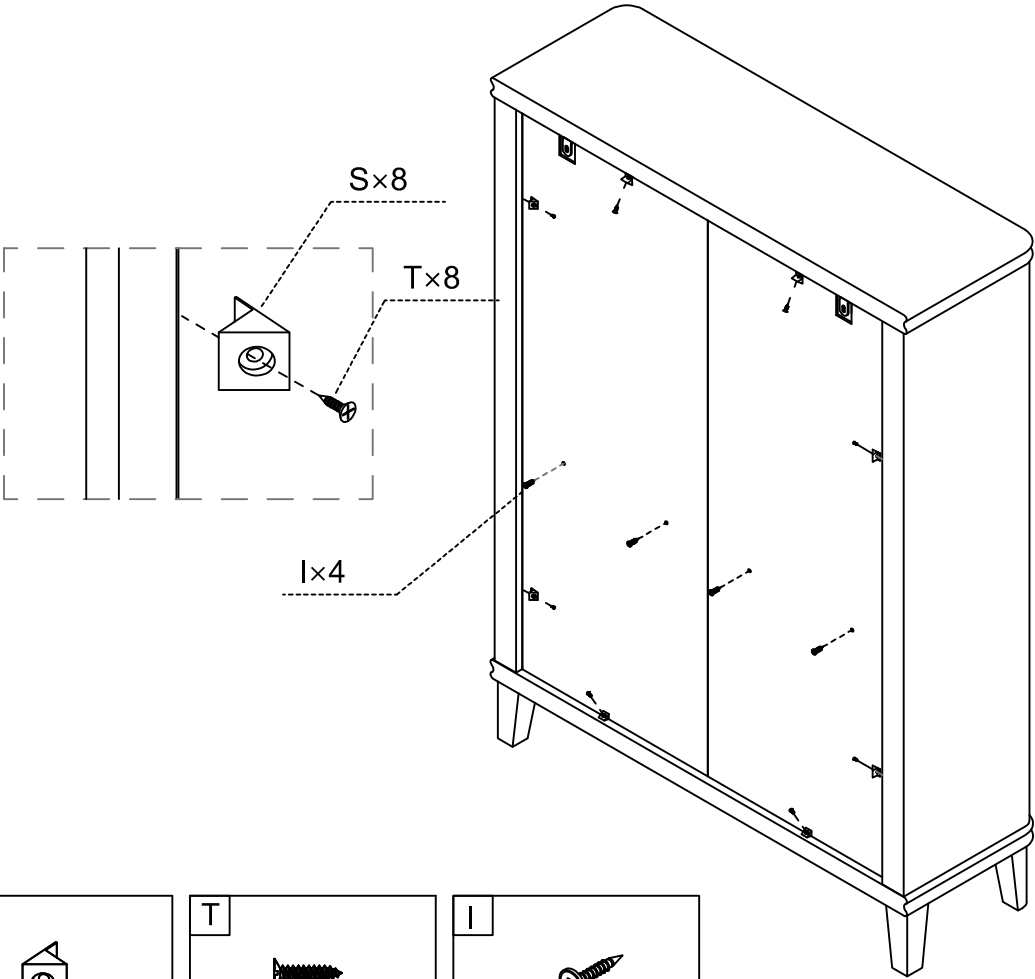Ø8x 30mm Dowel
4pcs

U

M4 Allen key
1pc

Step 7. Attach the plastic buckles and screws.

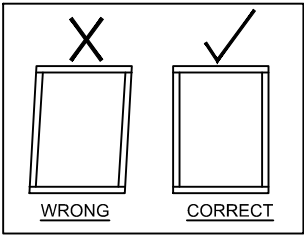




S	T	I
		
15×9mm Plastic Buckle	M3.5×14mm Screw	M3.5×16mm Screw
8pcs	8pcs	4pcs




NB: Before tightening the plastic buckles and screws, please ensure the frame is square

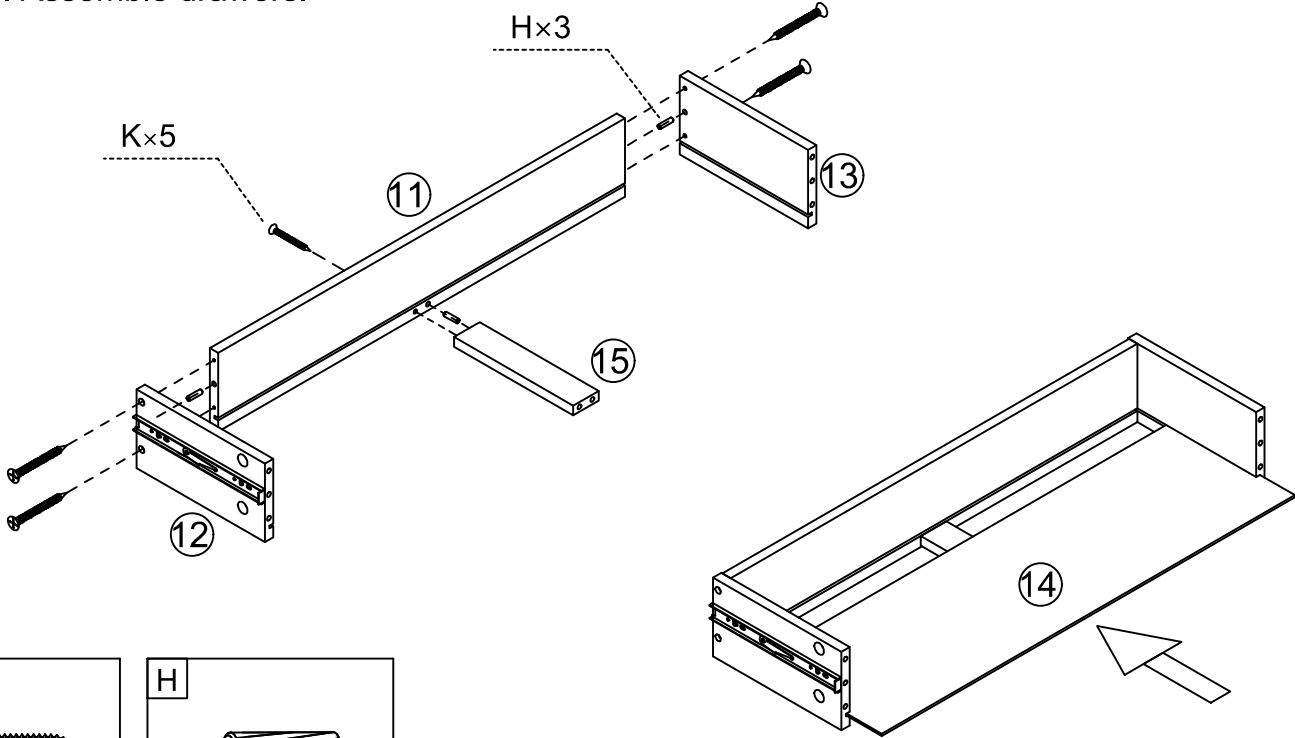


Step 8. Assemble drawers.




K	H
	
M4×35mm Screw	Ø6×30mm Dowel
5pcs	3pcs

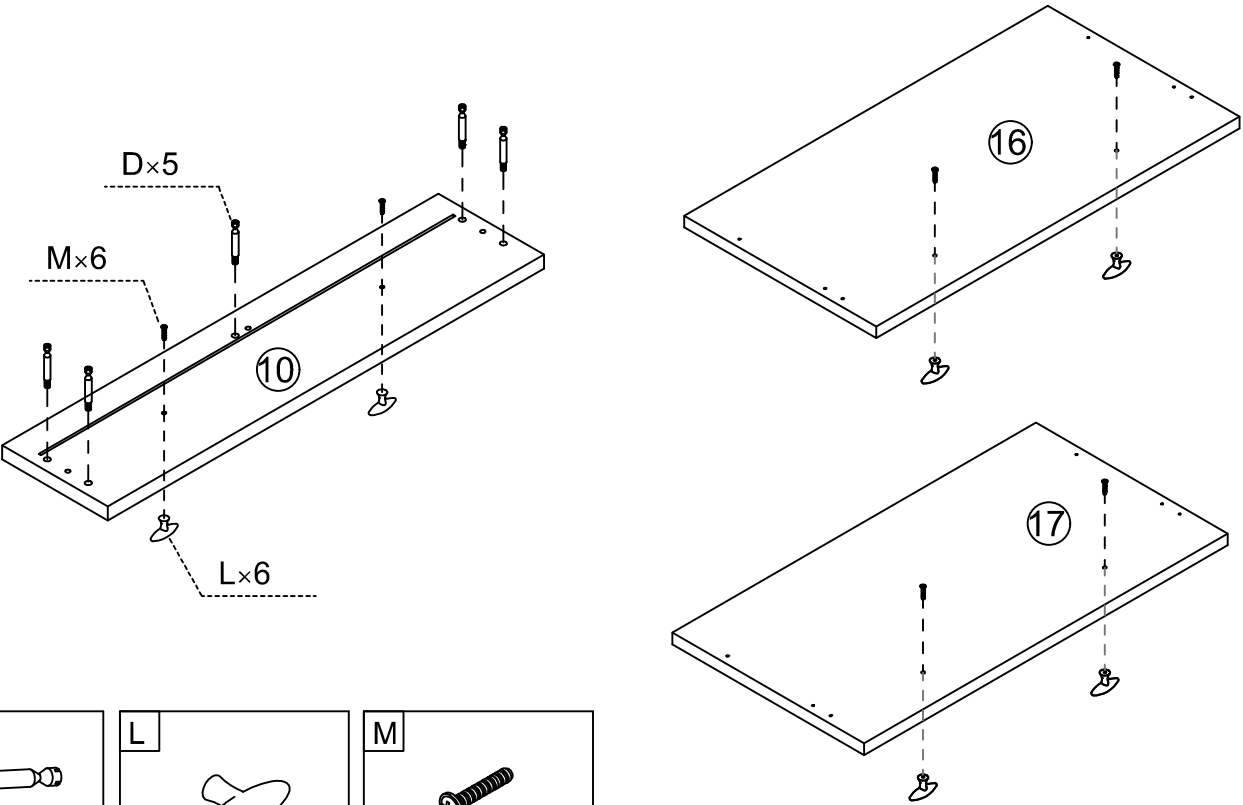


Step 9. Attach parts to the drawer front.




D	L	M
		
M6 x 35mm Bolt	Handle	M4 x 25mm Bolt
5pcs	6pcs	6pcs

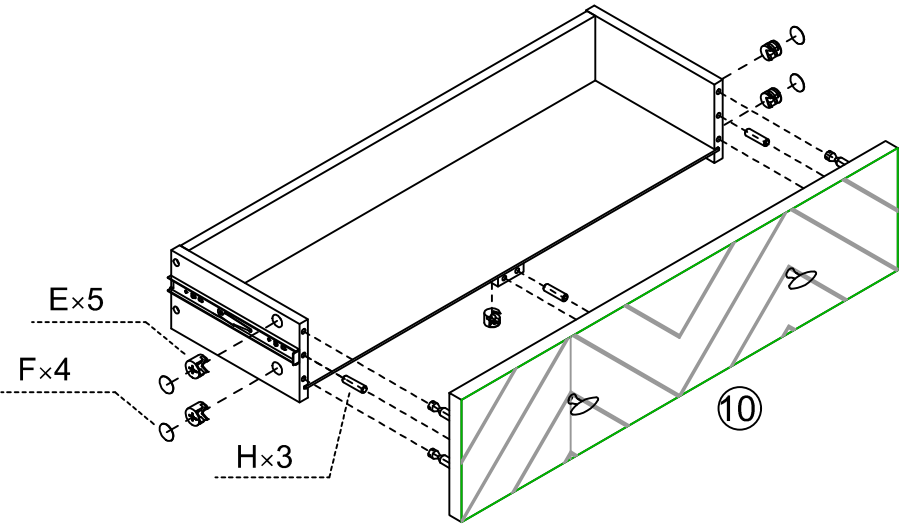
Step 10. Assemble drawer front.




E	H	F
		
	Ø6 x 30mm Dowel	Cover
5pcs	3pcs	4pcs


Step 11. Assemble drawer shelf .

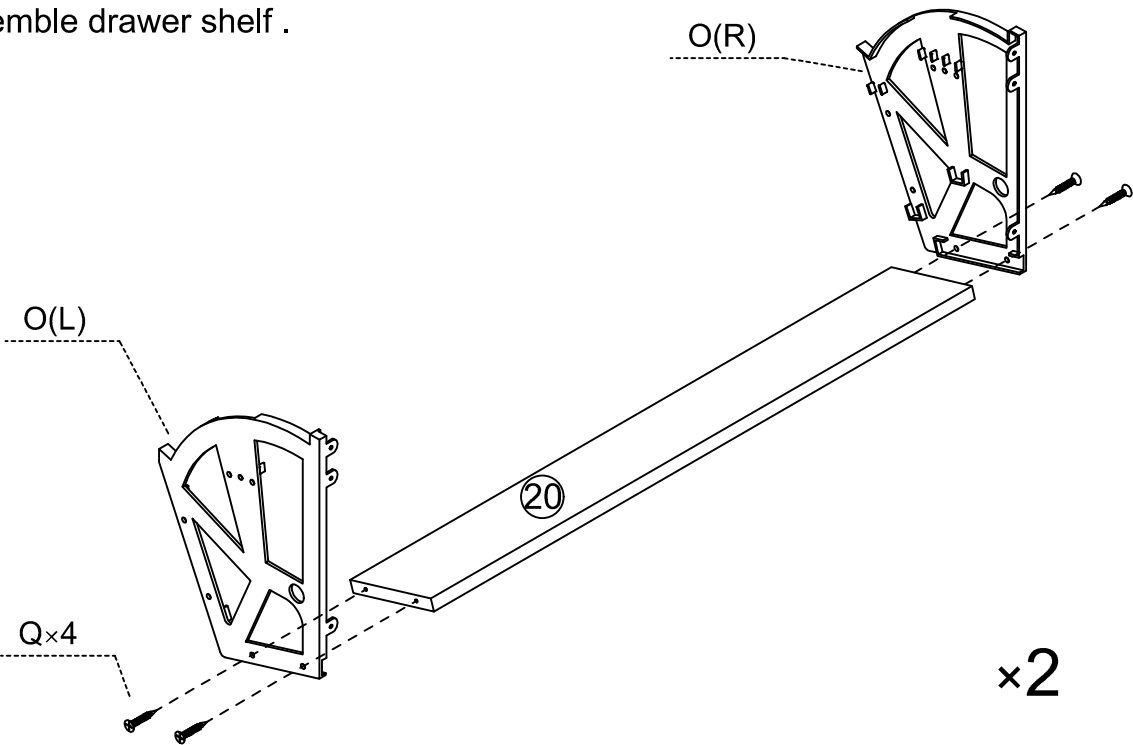


O	
Plastic frame	
4pcs	


Q	
M3.5×20mm Screw	
8pcs	


Step 12. Assemble drawer front.

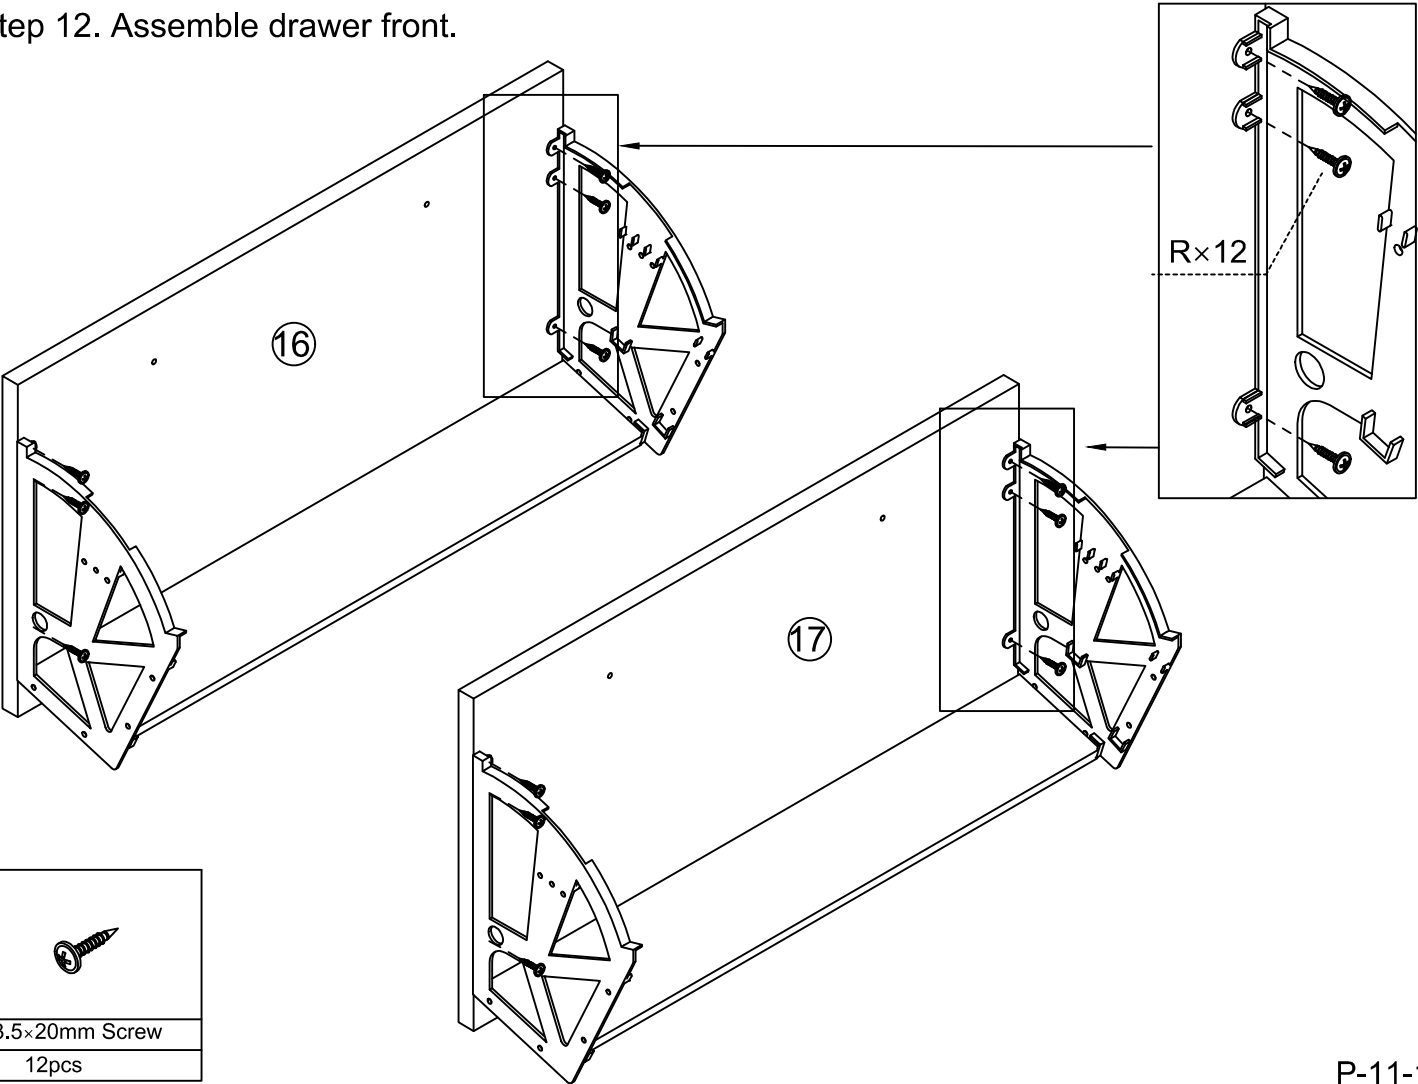


R	
M3.5×20mm Screw	
12pcs	


Step 13. Assemble drawer shelf.

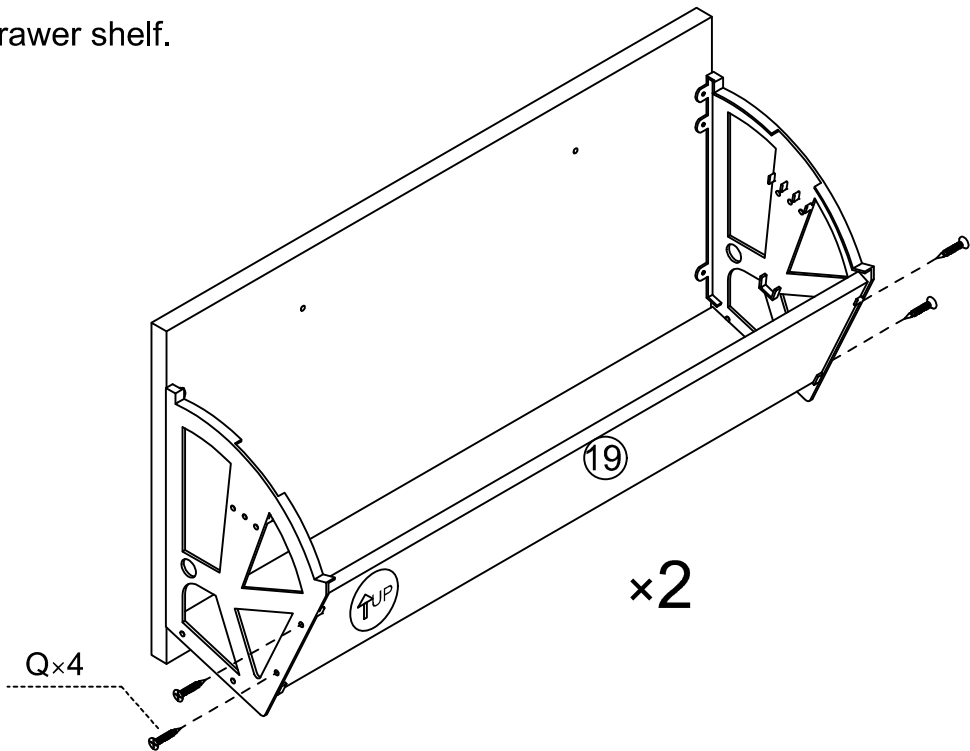


Q

M3.5x20mm Screw
8pcs

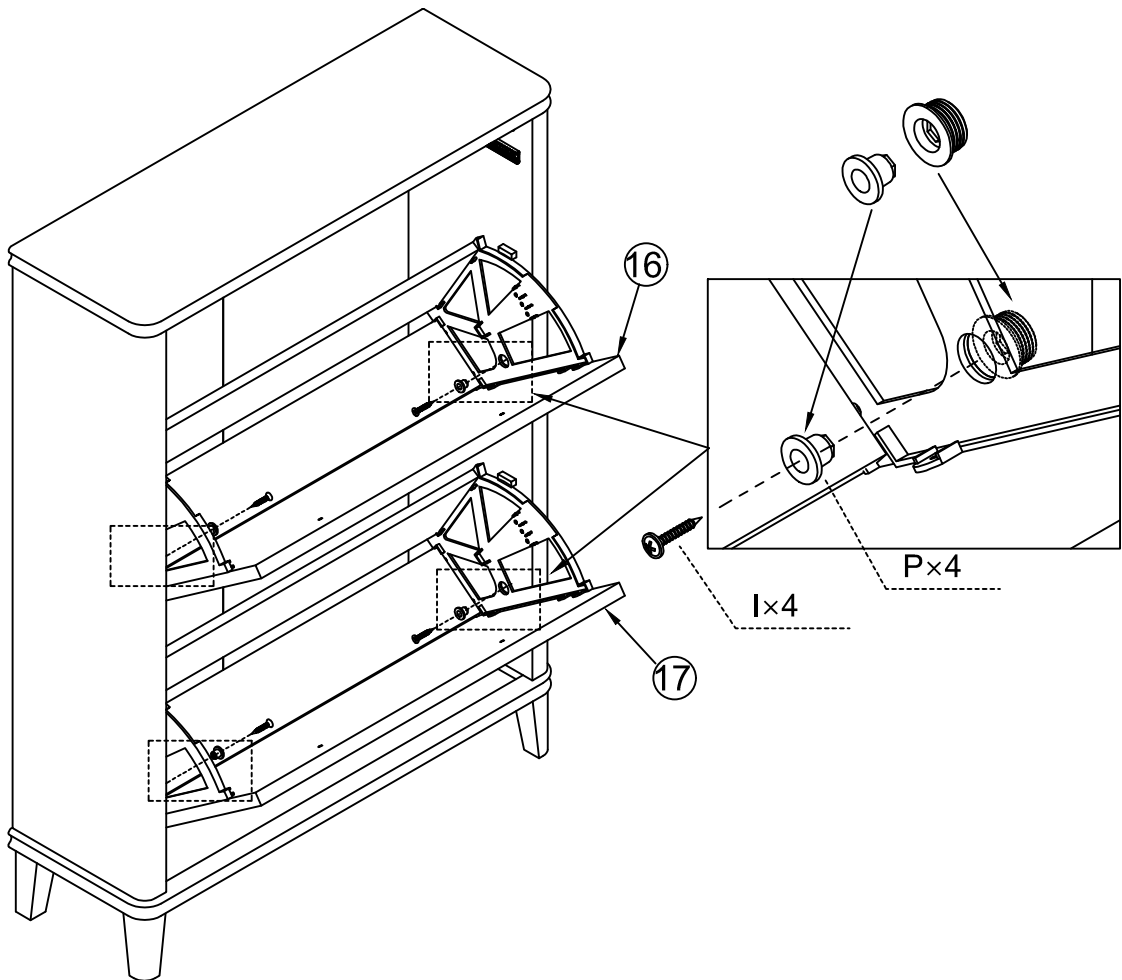
Step 14. Assemble the plastic stopper.





P

4pcs

I

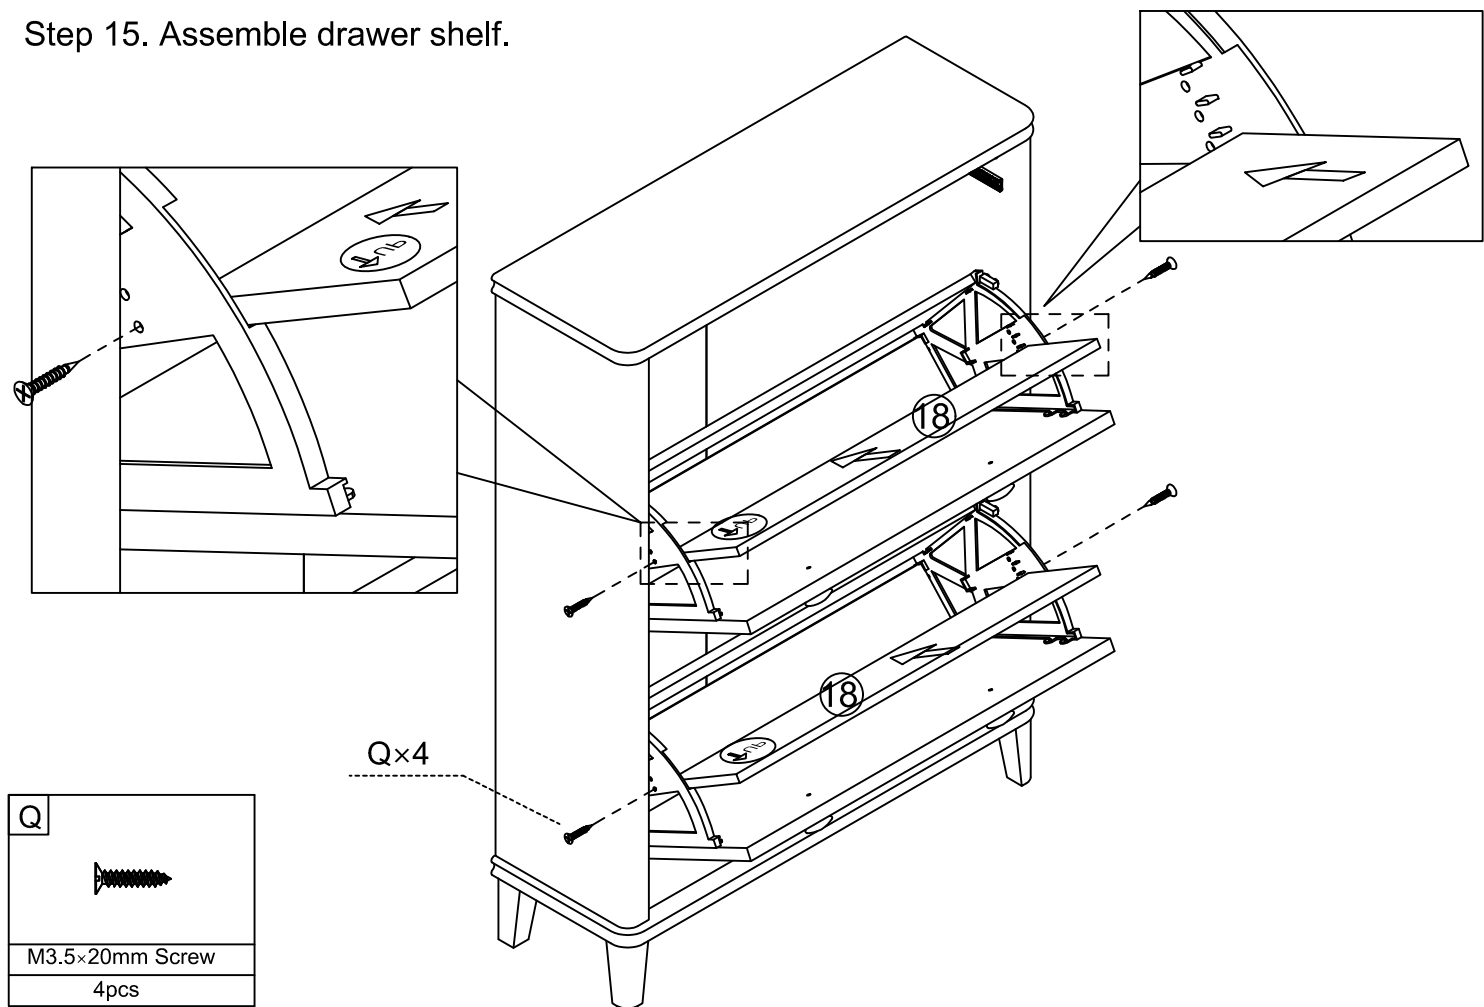M3.5x16mm Screw
4pcs

Step 15. Assemble drawer shelf.

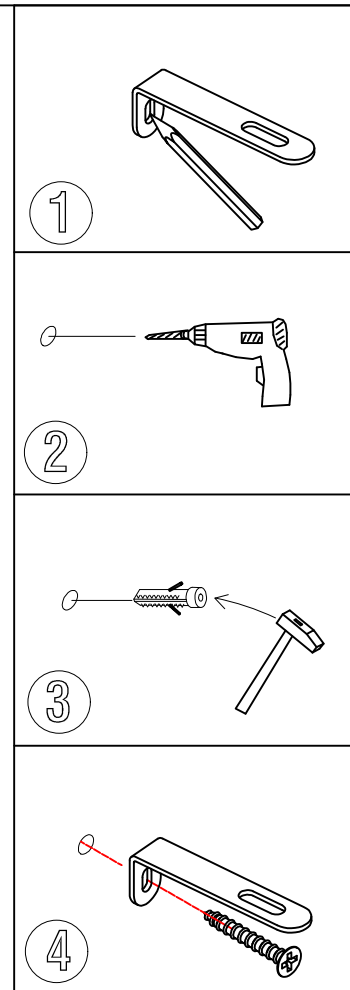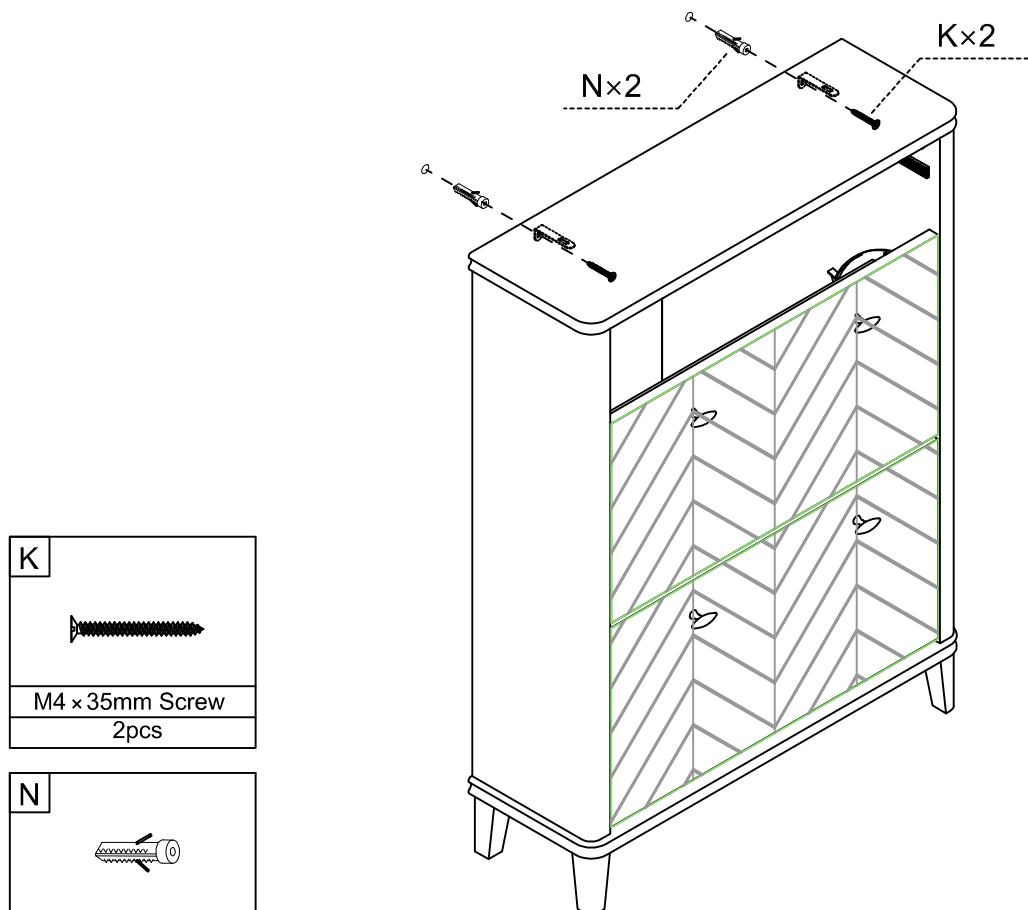

Step 16. Fix the L-shaped Bracket to the wall.



Step 17. Assemble drawer in the frame.

