


Range Name: Sienna

Box 1 dimensions: W178×D62.5×H19 cm Box 2 dimensions: W134.5×D62.5×H20 cm Product Dimension: W120×D55×H180 cm


3 Door Wardrobe

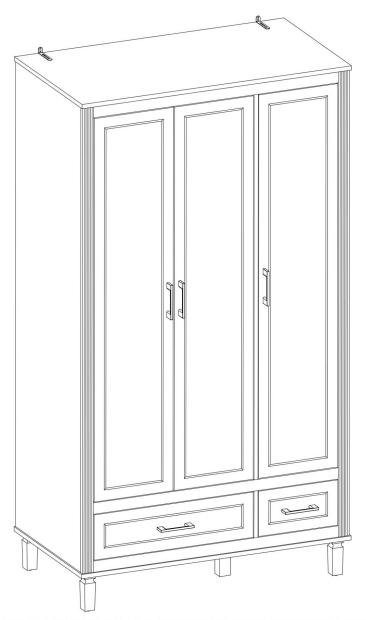

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Up to 120 minutes assembly time



Three person assembly



Electric screwdriver prohibited

Important

Assembly Tip

Before you begin, we advise laying everything out on a clean and soft level surface to avoid damaging the unit or your floor. It's best to identify all of the parts and fittings to build your 3 door wardrobe, and to familiarise yourself with all of the parts and fittings before building.

Top Tip

We recommend that you build your new 3 door wardrobe in the room you'd like it to be located. This will help prevent any risk of damage to the product whilst moving it.

Safety and Care

- 1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this 3 door wardrobe which could present a choking hazard.
 - All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
- 2. Do not stand on your product.
- 3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
- 4. Place heaviest items in the lowest drawers.
- 5. Do not set TV or other heavy objects on top of the product.
- 6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
- 7. Never keep more than one drawer open at the same time.
- 8. The installation of anti tipping kit to secure your furniture is strongly suggested.
- 9. Serious or fatal crushing injuries can occur from tipping furniture.

Help and Support


Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.

Recycling

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

Care and Maintenance

- 1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
- 3. Do not scrub or rub the surface when cleaning.
- 2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
- 4. Do not drag the 3 door wardrobe when moving, lift it off the floor instead.
- 5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the
- 6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the change of the humidity and temperature.
- 7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
- 8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
- 9. Avoid sharp items such as a screwdriver or any pointy tools.

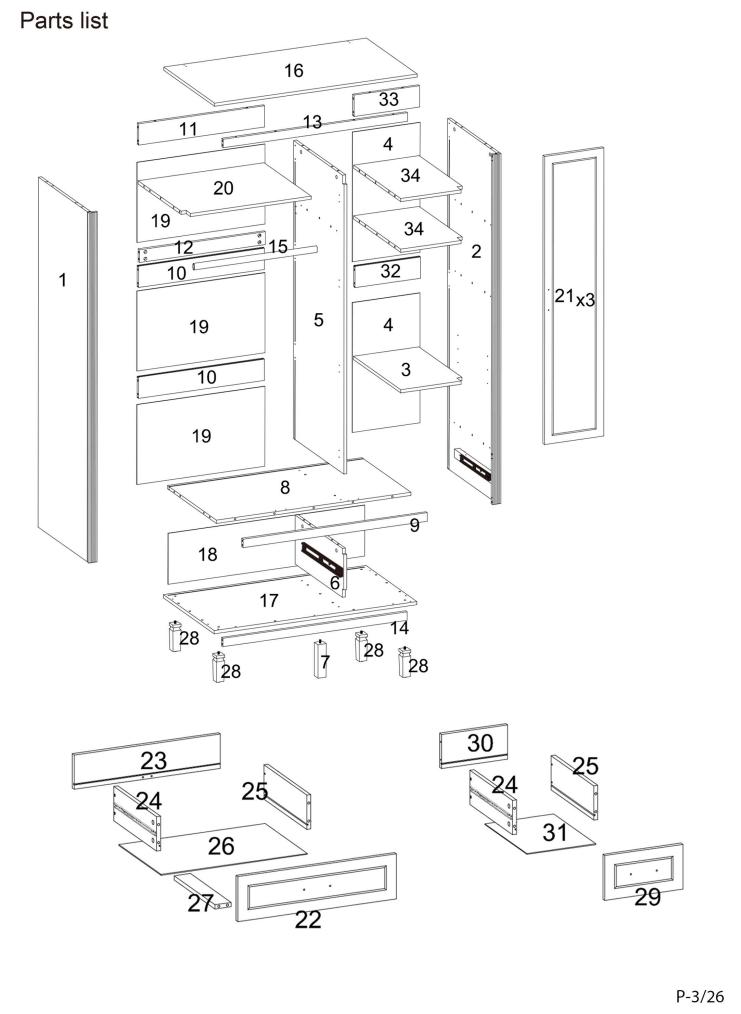


Parts list

Before you begin building your product, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.


Part Number	Part Description	Quantity	Box No
1	Left Panel With Sides Pre-assembled	1 pc	Box 1
2	Right Panel With Sides Pre-assembled	1 pc	Box 1
3	Right Lower Shelf Panel	1 pc	Box 2
4	Right Back Panel	2 pcs	Box 2
5	Middle Panel	1 pc	Box 1
6	Bottom Middle Panel With Sides Pre-assembled	1 pc	Box 2
7	Centre Leg	1 pc	Box 2
8	Bottom Shelf Panel	1 pc	Box 2
9	Middle Front Support Bar	1 pc	Box 2
10	Left Lower Back Support Bar	2 pcs	Box 2
11	Left Upper Back Support Bar	1 pc	Box 2
12	Left Middle Back Support Bar	1 pc	Box 2
13	Upper Front Support Bar	1 pc	Box 2
14	Lower Front Support Bar	1 pc	Box 2
15	Hanging Bar	1 pc	Box 2
16	Top Panel	1 pc	Box 2
17	Bottom Panel	1 pc	Box 2
18	Lower Back Panel	1 pc	Box 2
19	Left Middle Back Panel	3 pcs	Box 2
20	Left Top Shelf Panel	1 pc	Box 2
21	Door	3 pcs	Box 1
22	Left Drawer Front	1 pc	Box 2
23	Left Drawer Back Side	1 pc	Box 2
24	Drawer Left Side With Sides Pre-assembled	2 pcs	Box 2
25	Drawer Right Side With Sides Pre-assembled	2 pcs	Box 2
26	Left Drawer Bottom	1 pc	Box 2
27	Drawer support bar	1 pc	Box 2
28	Leg	4 pcs	Box 2
29	Right Drawer Front	1 pc	Box 2
30	Right Drawer Back Side	1 pc	Box 2
31	Right Drawer Bottom	1 pc	Box 2
32	Right Middle Back Support Bar	1 pc	Box 2
33	Right Upper Back Support Bar	1 pc	Box 2
34	Right Top Shelf Panel	2 pcs	Box 2

Fittings checklist

Please check you have all the fittings listed below with your product: in Box 1

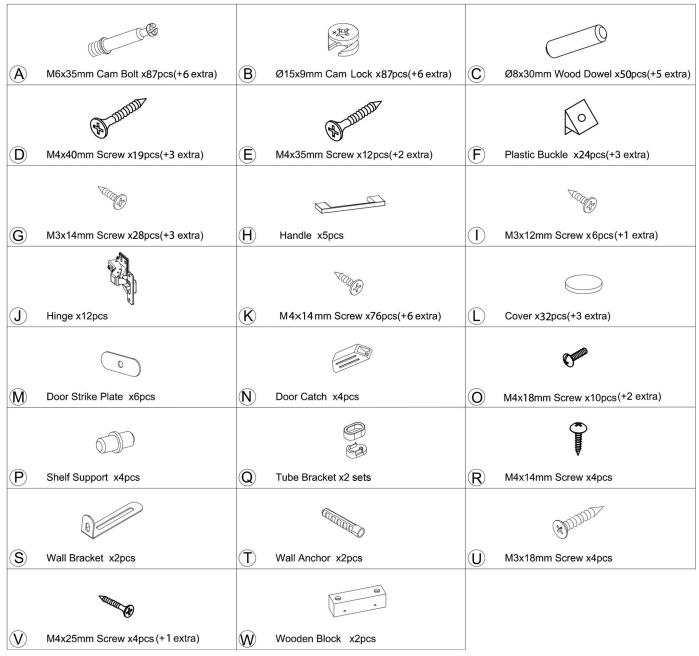

Pre-assembled Fittings.



Bolt Length Ruler:




Tool required


P-5/26

Crosshead Screwdriver (not provided)


Step 1: Attach Cam Lock Screws to Right Side Panel (2).



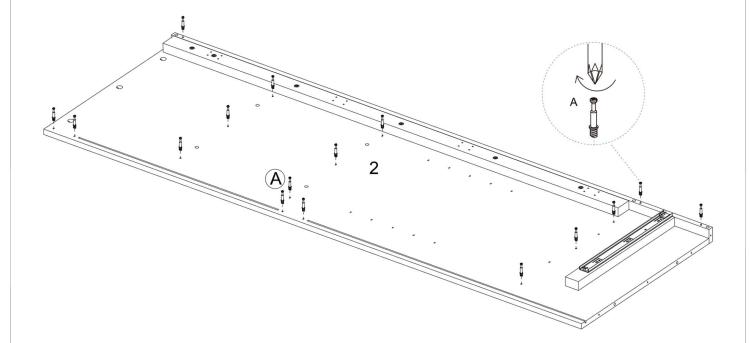


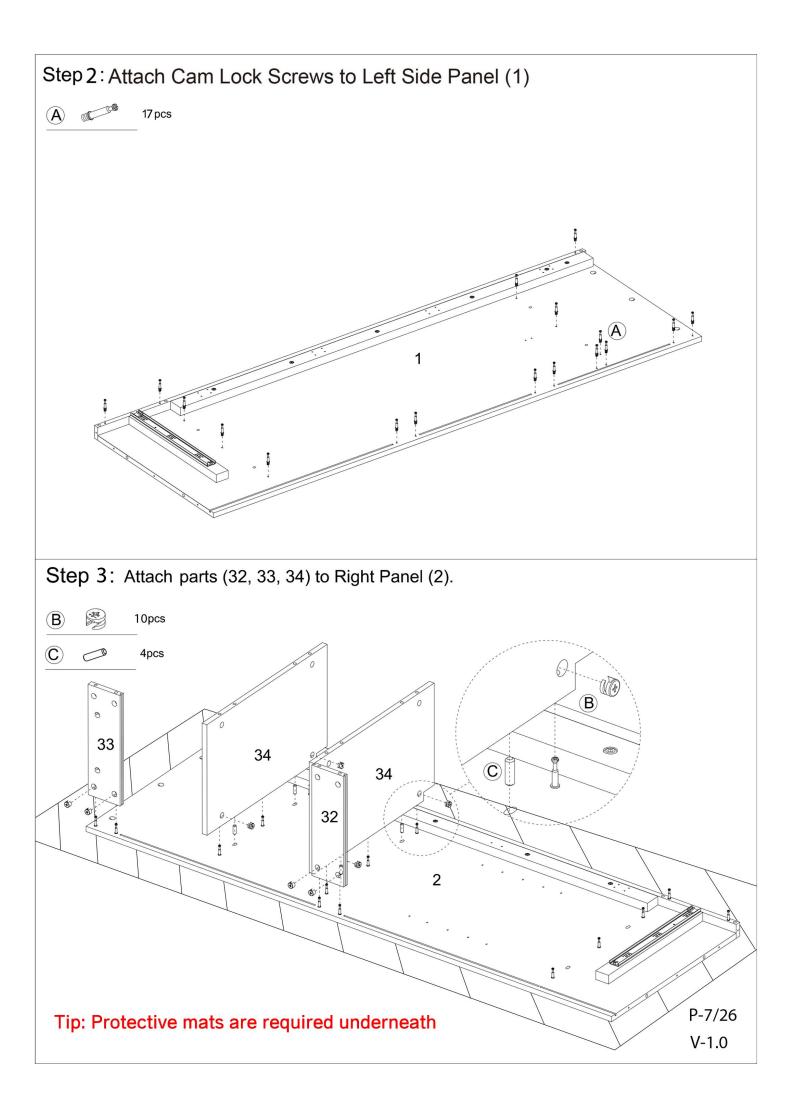



Step 4: Attach the Right Panel (4) to the Frame.

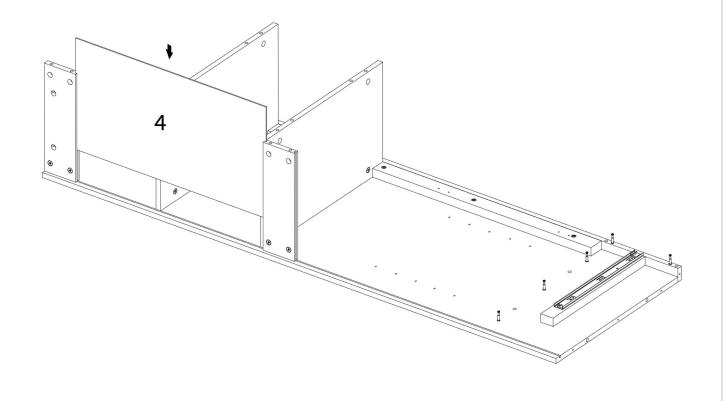


Step 5: Attach the Cam Bolt to the Middle Panel (5).

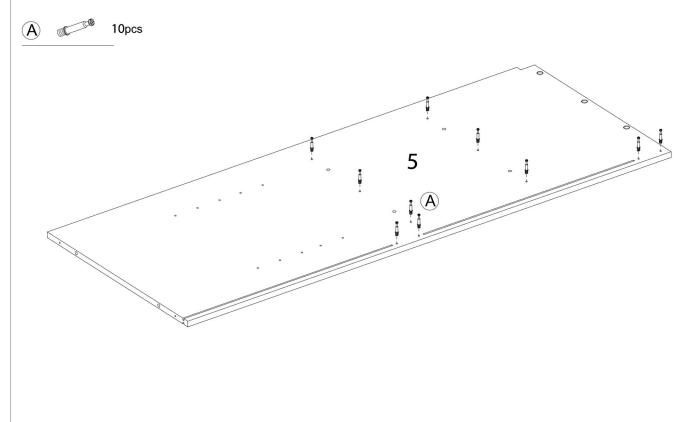

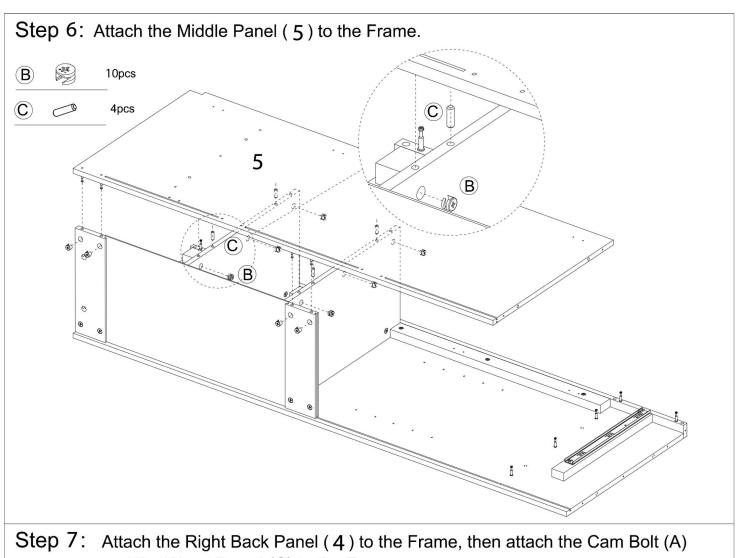


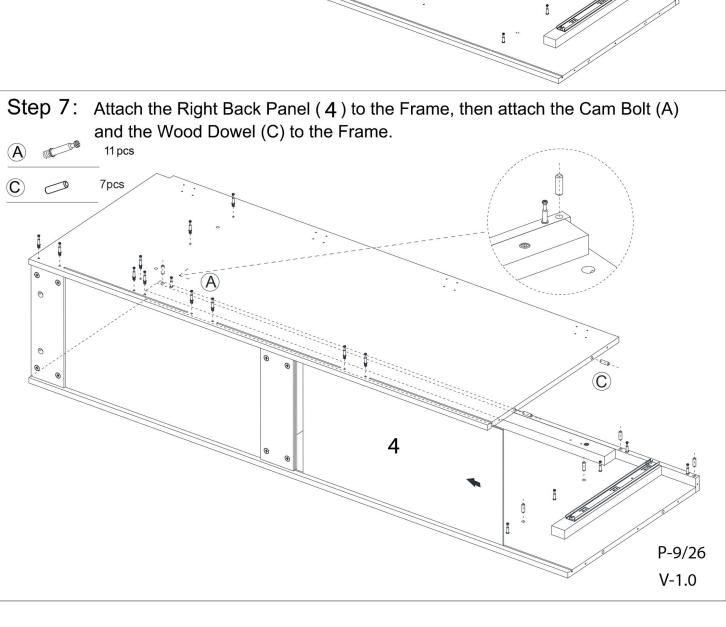

Step 8: Attach the Cam Bolt to the Middle Front Support Bar (9), then attach the Middle Front Suppot Bar (9) to the Bottom Shelf Panel (8).

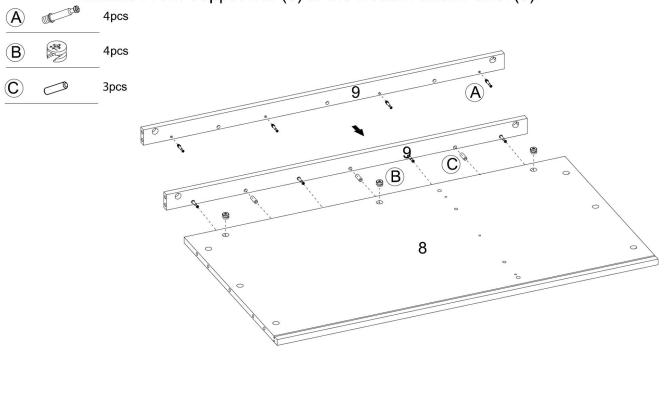

Step 9: Attach the Bottom Shelf Panel (8) to the Frame.

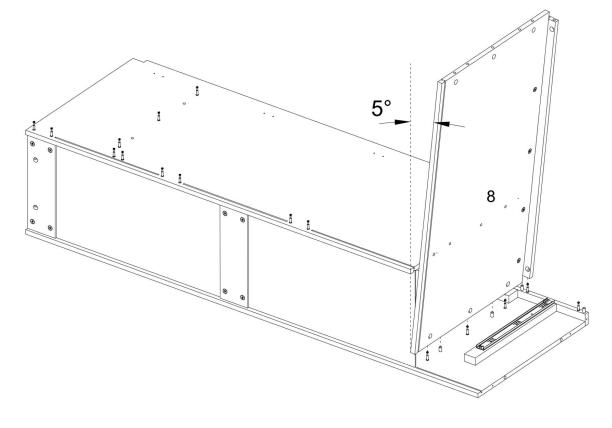


P-10/26

Step 10: Fasten the Bottom Shelf Panel (8) using screw (D) and cam lock (B), then attach the Cam Bolt (A) and Wood Dowel (C)to the Bottom Shelf Panel (8).





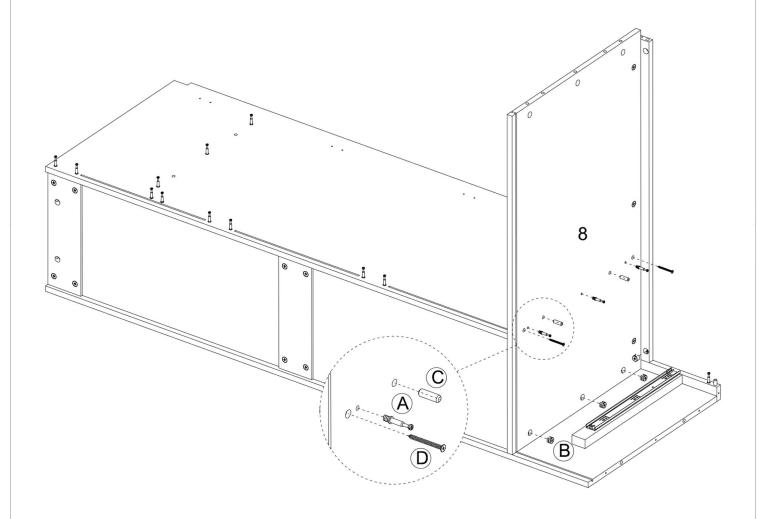


Step12: Attach the Cam Bolt to the Middle Front Support Bar(20), then attach the Middle Front Suppot Bar(20) to the Bottom Shelf Panel (12).

 \bigcirc


B

3pcs


3pcs

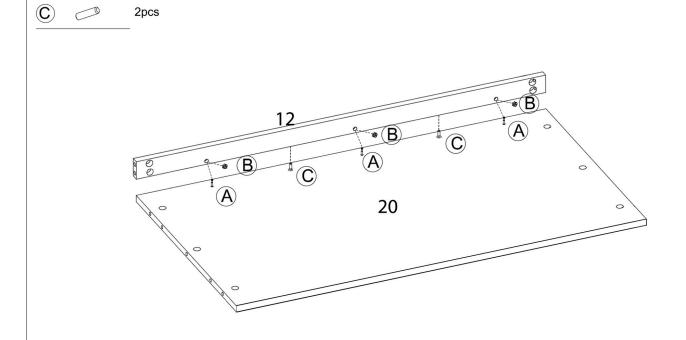

P-12/26

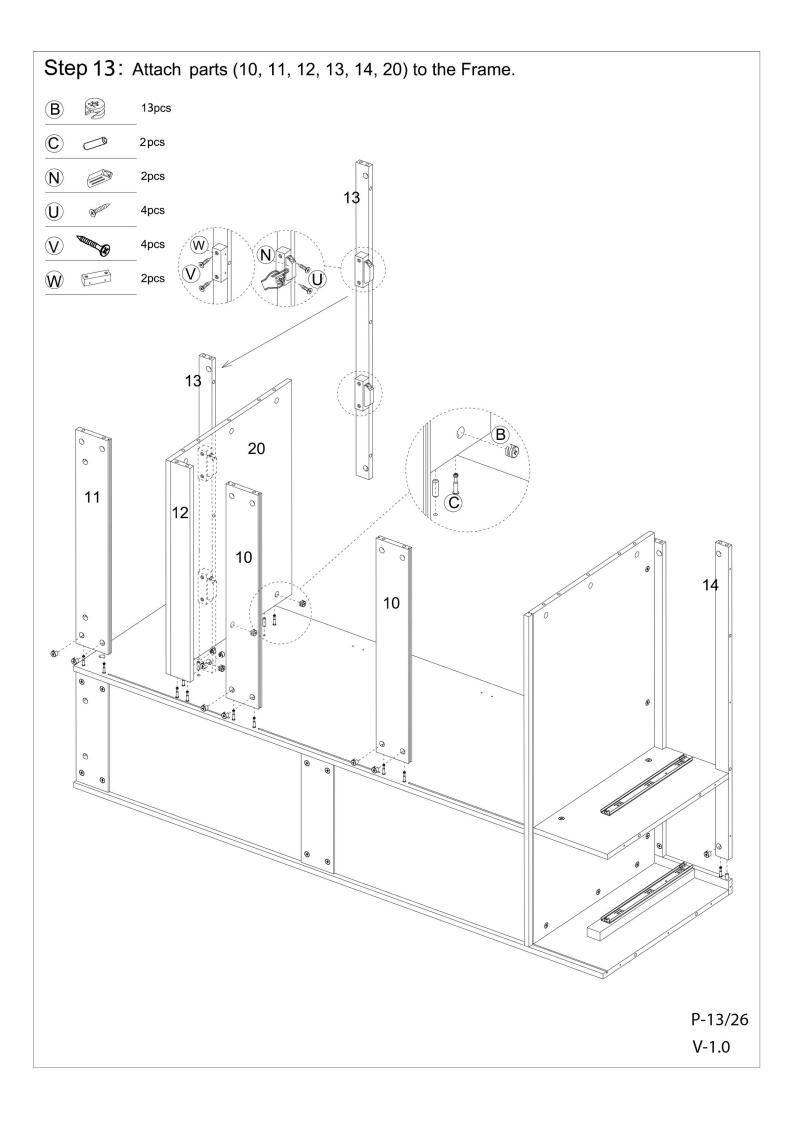


Step 14: Attach the Left Middle Back Panel (19) to the Frame. 19 19 19 P-14/26 V-1.0

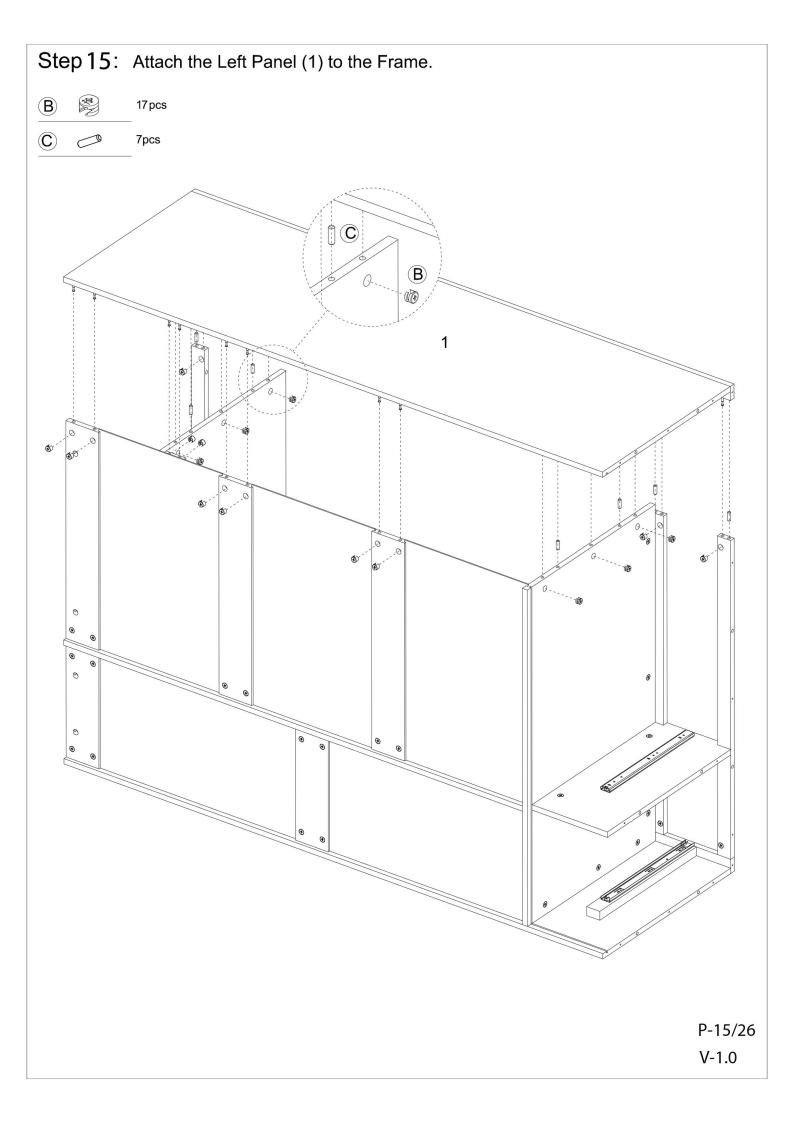

Step 16: Attach the Lower Back Panel (18) and the Wood Dowel(C) to the Frame.



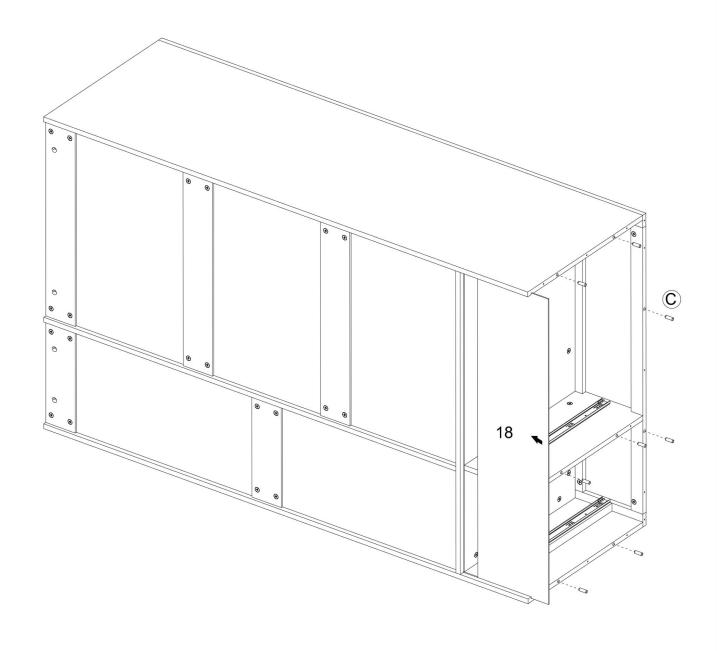


Step 17: Attach the Bottom Panel (17) to the Frame.








13pcs

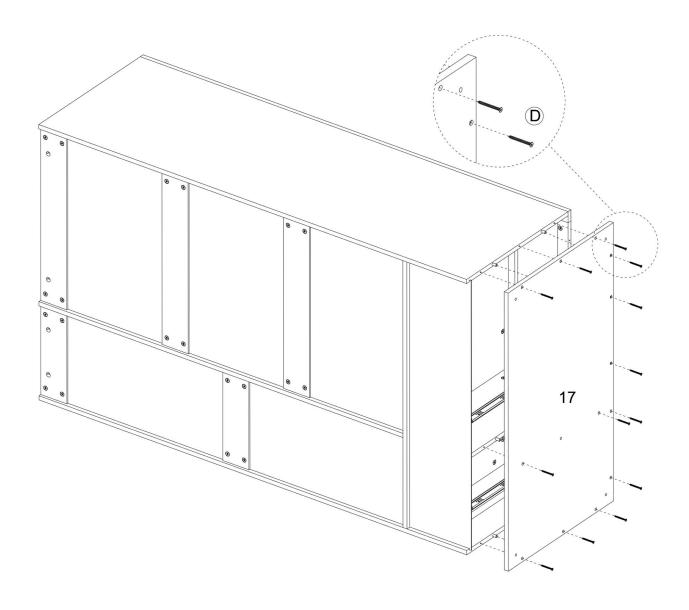

Step 18: Attach the Legs (28) and Centre Leg (7) to the Frame.

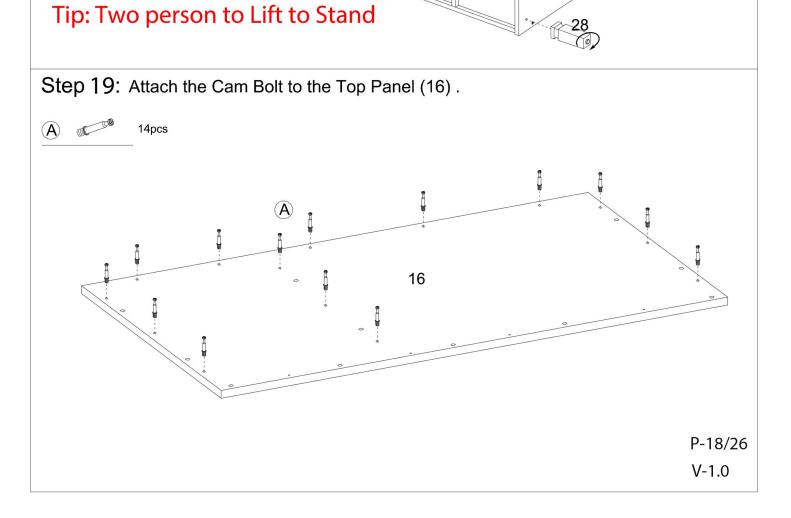


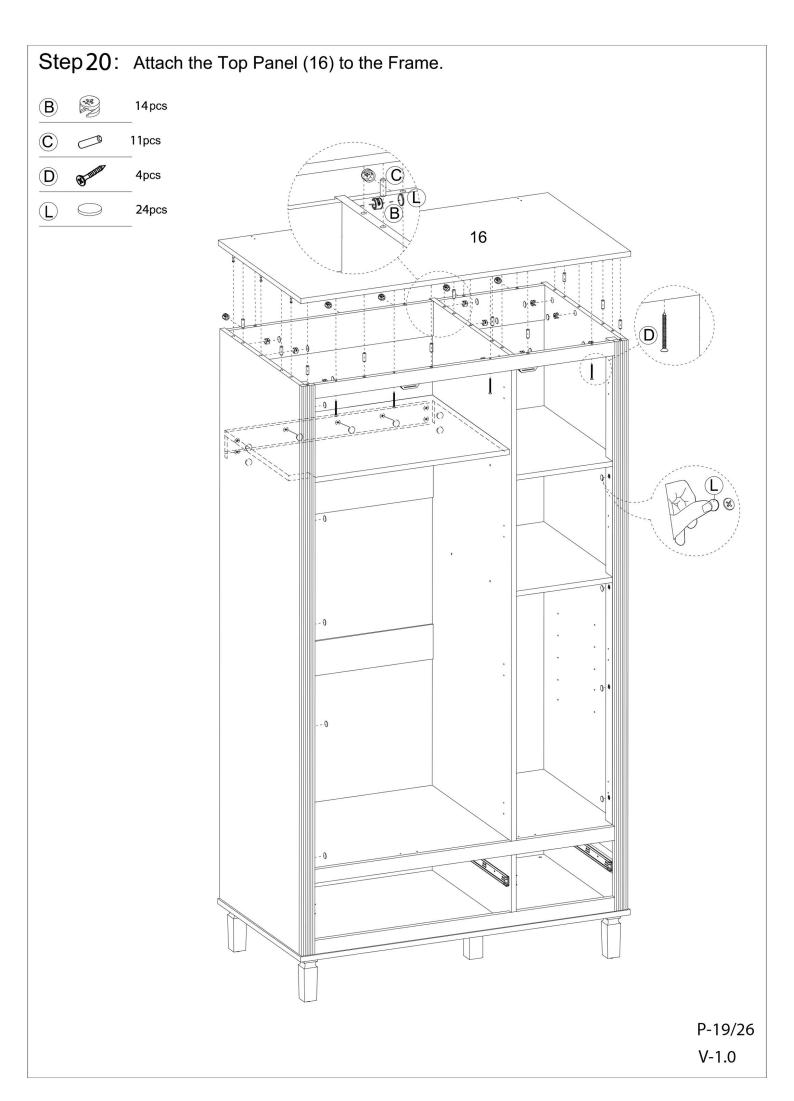

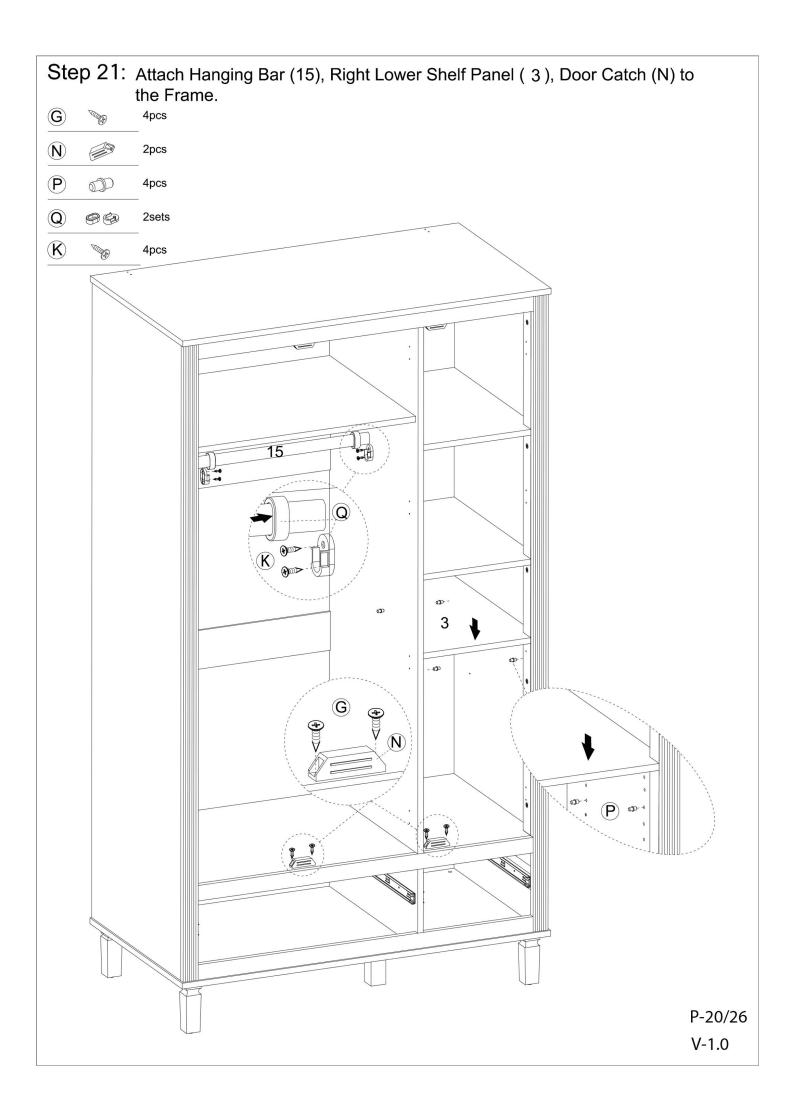



Step 22: Assemble the drawer by following the steps shown in the illustration below. A 9pcs \bigcirc 9_{pcs} 8pcs 29 25 24 B_o 0 B_o 0 L B 29 A 22 25 B₀ 0 27 Bo o 24 B 22 P-21/26 V-1.0


Step 23: Assemble the drawer by following the steps shown in the illustration below.

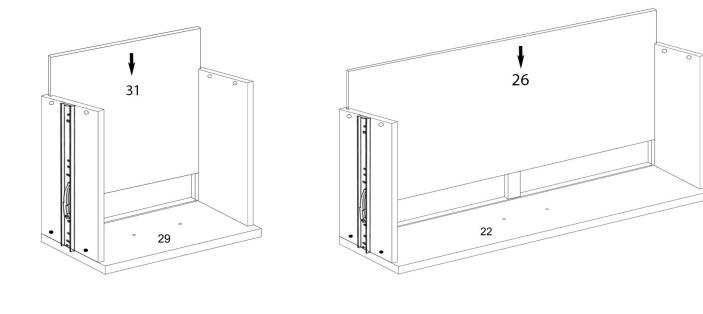

Step 24: Assemble the drawer by following the steps shown in the illustration below.




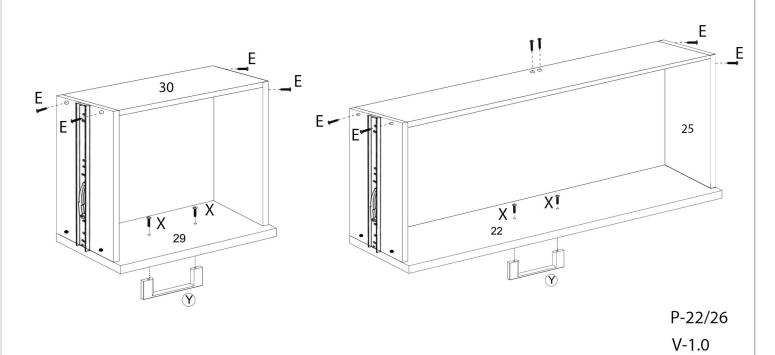


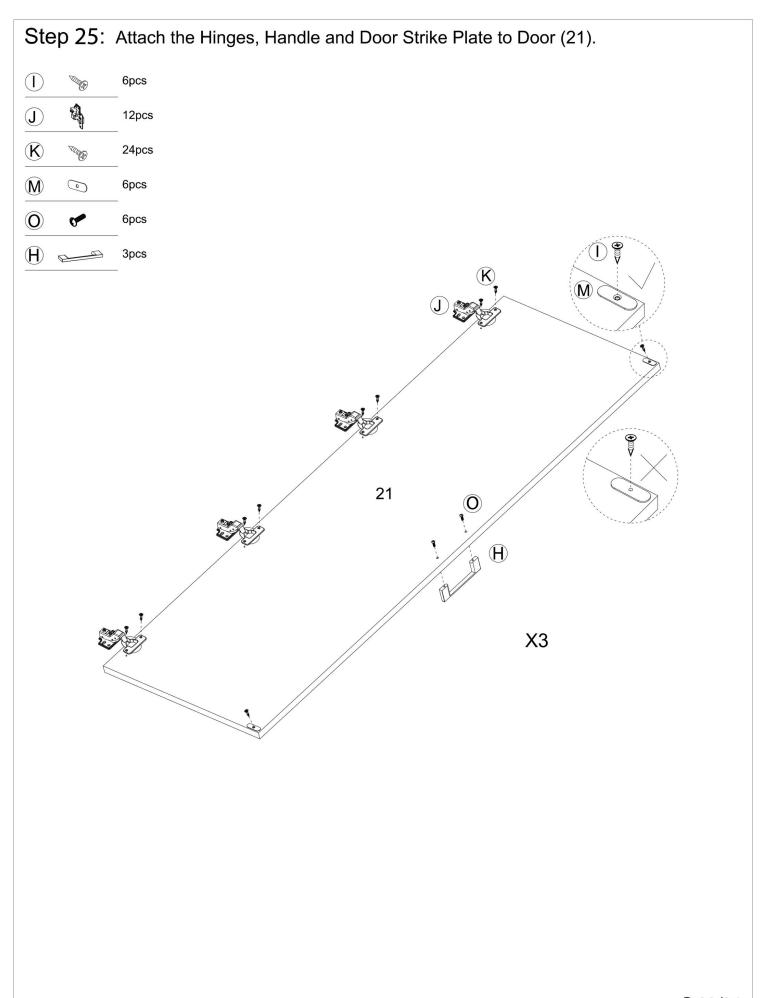

Step 26: Attach the Doors (21) to the Frame, Slide the drawer into the Frame. 48pcs 21 21 21 P-24/26 V-1.0

Step 27: Attach the plastic buckles and wall bracket. Before securing the plastic buckles, manually adjust the frame to ensure the drawer and doors are properly aligned, even, and parallel. Adjust the center leg if necessary.

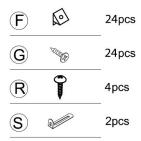

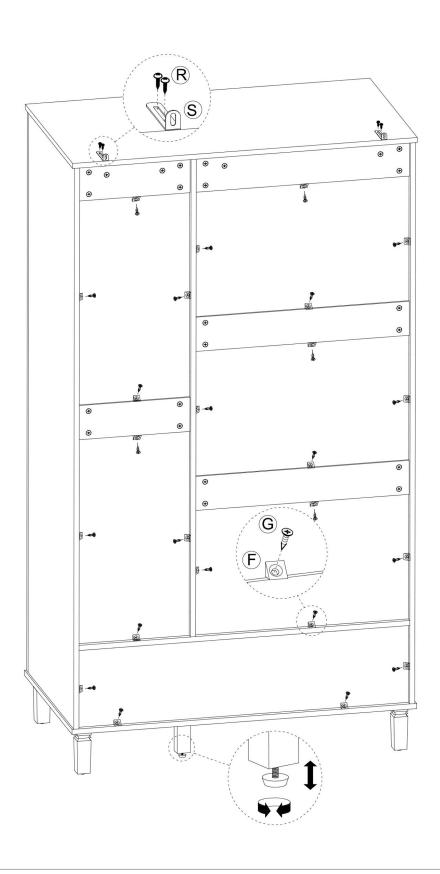

Step 28: Fix the wall bracket to the wall by drilling holes, inserting wall anchors, and securing it with screws. \bigcirc 2pcs \bigcirc 2pcs P-26/26 V-1.0