
DUSK.COM
LIVING | BEDROOM | DINING

Range Name: TIA
Box1 Dimensions: W126.5xD51.5xH27.5 (cm)
Product Dimensions: W90xD40xH200 (cm)


Wide Shelving with Doors

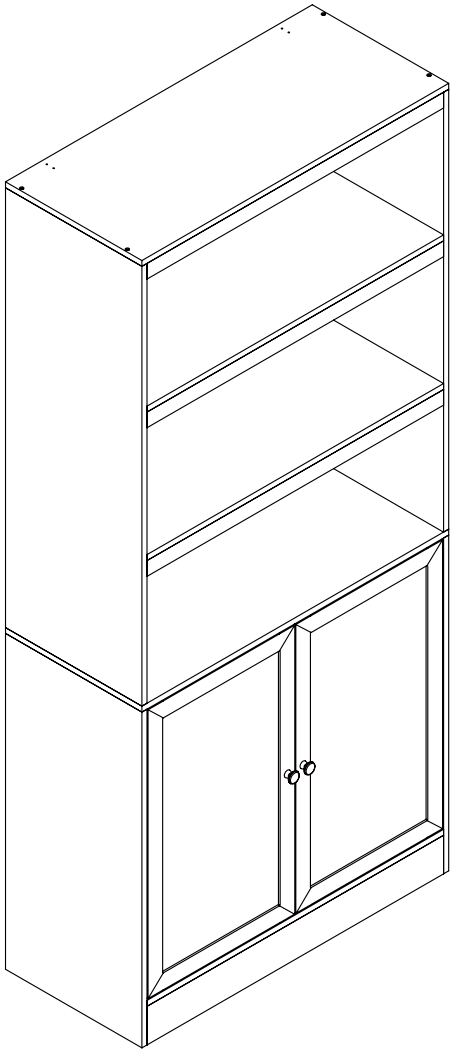

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Up to 120 minutes assembly time

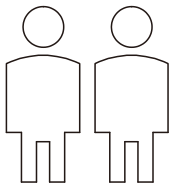

Two person assembly



Electric screwdriver prohibited

V-1.0

This product is intended for domestic use only, not for commercial purposes.

IMPORTANT

ASSEMBLY TIP

Before you begin, it's best to identify all of the parts and fittings to build your Wide Shelving with Doors frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

TOP TIP

We recommend that you assemble the bedside in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

SAFETY AND CARE

1. It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.
2. Do not stand on your product.
3. Always use the item on firm level ground, ensuring all legs remain in contact with the ground.
4. Place heaviest items in the lowest drawers.
5. Do not set TV or other heavy objects on top of the product.
6. Children should always be under supervision whilst using this product. Never allow children to climb on the drawers.
7. Never keep more than one drawer open at the same time.
8. In order to prevent overturning, this product must be used with the wall attachment device provided.
9. Serious or fatal crushing injuries can occur from tipping furniture.

HELP AND SUPPORT

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


RECYCLING

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

CARE AND MAINTENANCE

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the surface for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the Wide Shelving with Doors when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.

Parts list

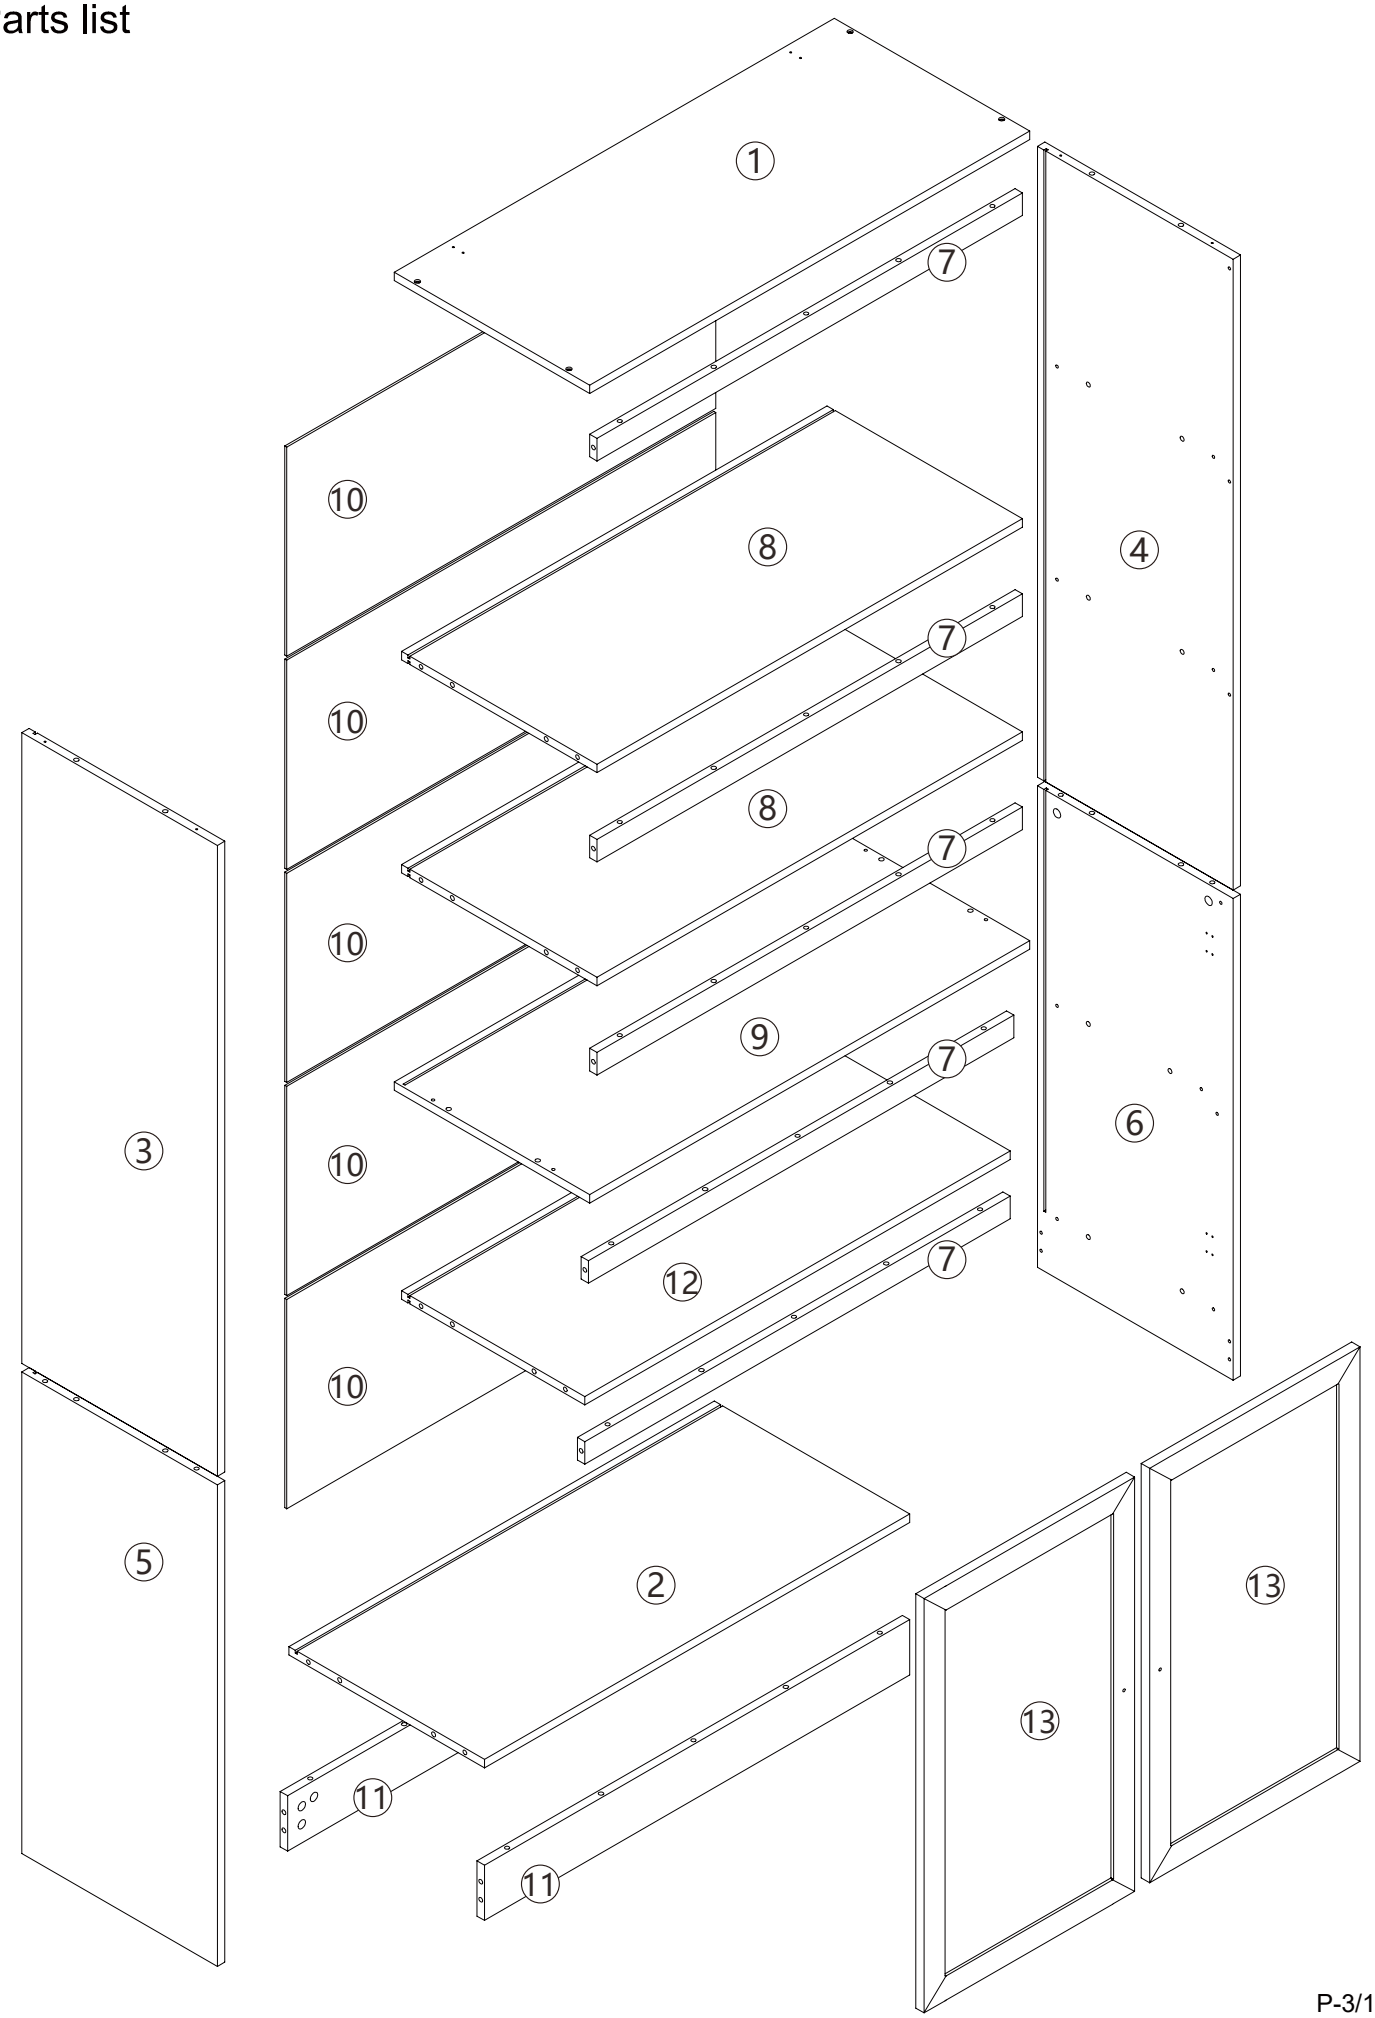



Parts list



Before you begin building your Wide Shelving with Doors, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
1	Top Panel	1 pc	Box1
2	Bottom Panel	1 pc	Box1
3	Left Side Top Panel	1 pc	Box1
4	Right Side Top Panel	1 pc	Box1
5	Left Side Bottom Panel	1 pc	Box1
6	Right Side Bottom Panel	1 pc	Box1
7	Front Support Bar	5 pcs	Box1
8	Shelf Centre Panel	2 pcs	Box1
9	Shelf Centre Panel	1 pc	Box1
10	Back Panel	5 pcs	Box1
11	Leg Long Panel	2 pcs	Box1
12	Shelf Centre Panel	1 pc	Box1
13	Door Panel	2 pcs	Box1

Fittings


Please check you have all the fittings listed below with your product in Box1.

A	B	C	D	E	F	G
						
M5*35mm Cam Lock Screw	Ø15*10mm Cam Lock	Ø8*30mm Dowel	M8*40mm Wall Anchor	Cover	Plastic Buckle	M3*12mm Screw
59pcs+4pcs extra	59pcs+4pcs extra	34pcs+4pcs extra	2pcs	4pcs	20pcs+2pcs extra	20pcs+2pcs extra


H	I	J	K	L	M	N
						
Wall Bracket	M4*12mm Screw	Mat	M4*40mm Screw	Ø8*50mm Dowel	Hinge	Handle
2pcs	4pcs	6pcs	10pcs+1pc extra	4pcs	4pcs	2pcs

O	P
	
M4*20mm Bolt	M4*14mm Screw
2pcs	24pcs+3pcs extra


Ensure the cam lock screws are installed correctly, as indicated by the "check mark" below.

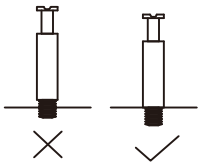

Refer to the illustration below to correctly use the cam lock screws for assembling the panels.

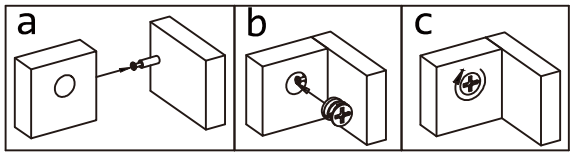


1. Assemble the panels of each part together according to the diagram.

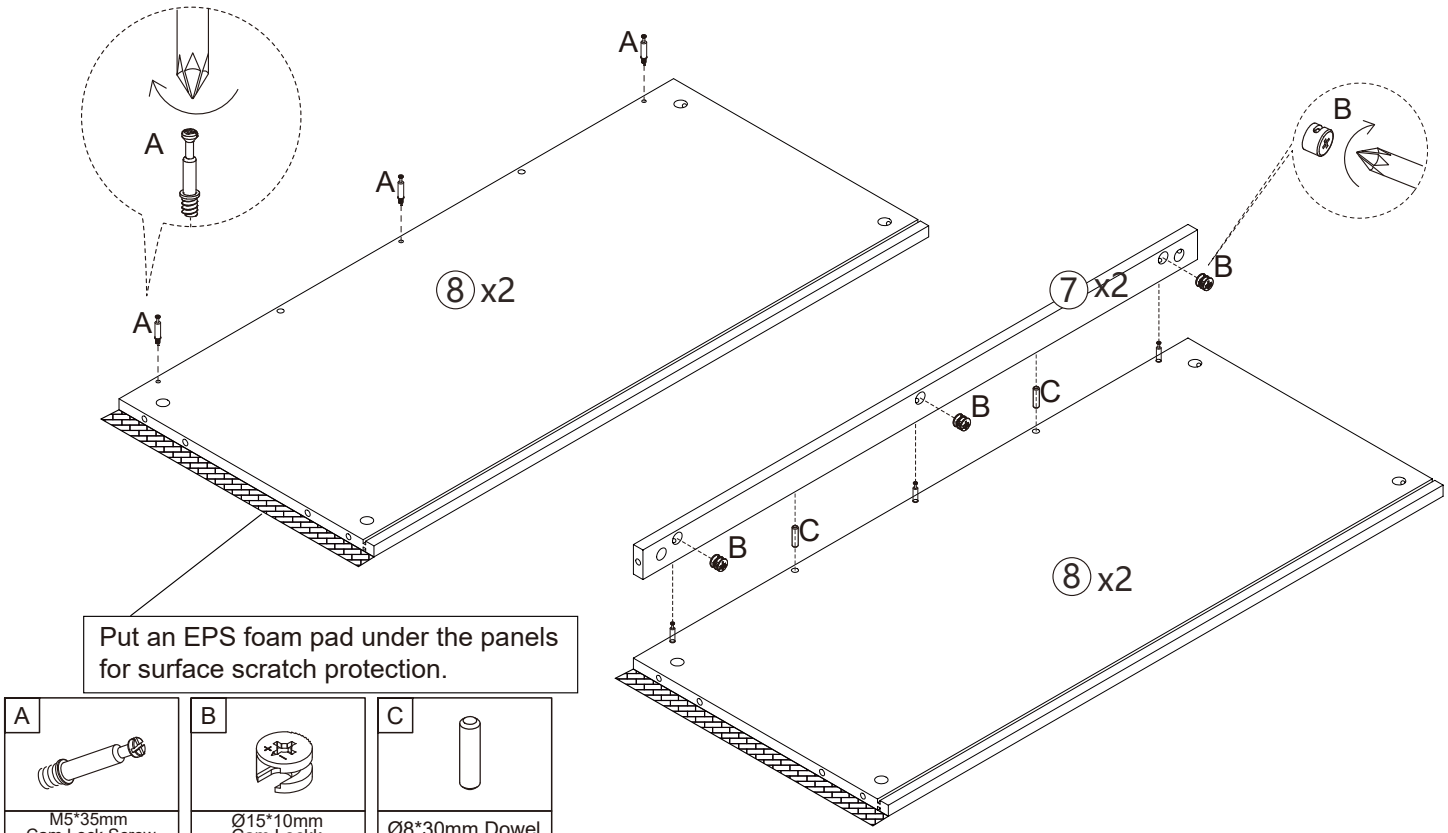

Put an EPS foam pad under the panels for surface scratch protection.


A	B	C
M5*35mm Cam Lock Screw	Ø15*10mm Cam Lockk	Ø8*30mm Dowel
6pcs	6pcs	4pcs

2. Attach parts to the side panel.

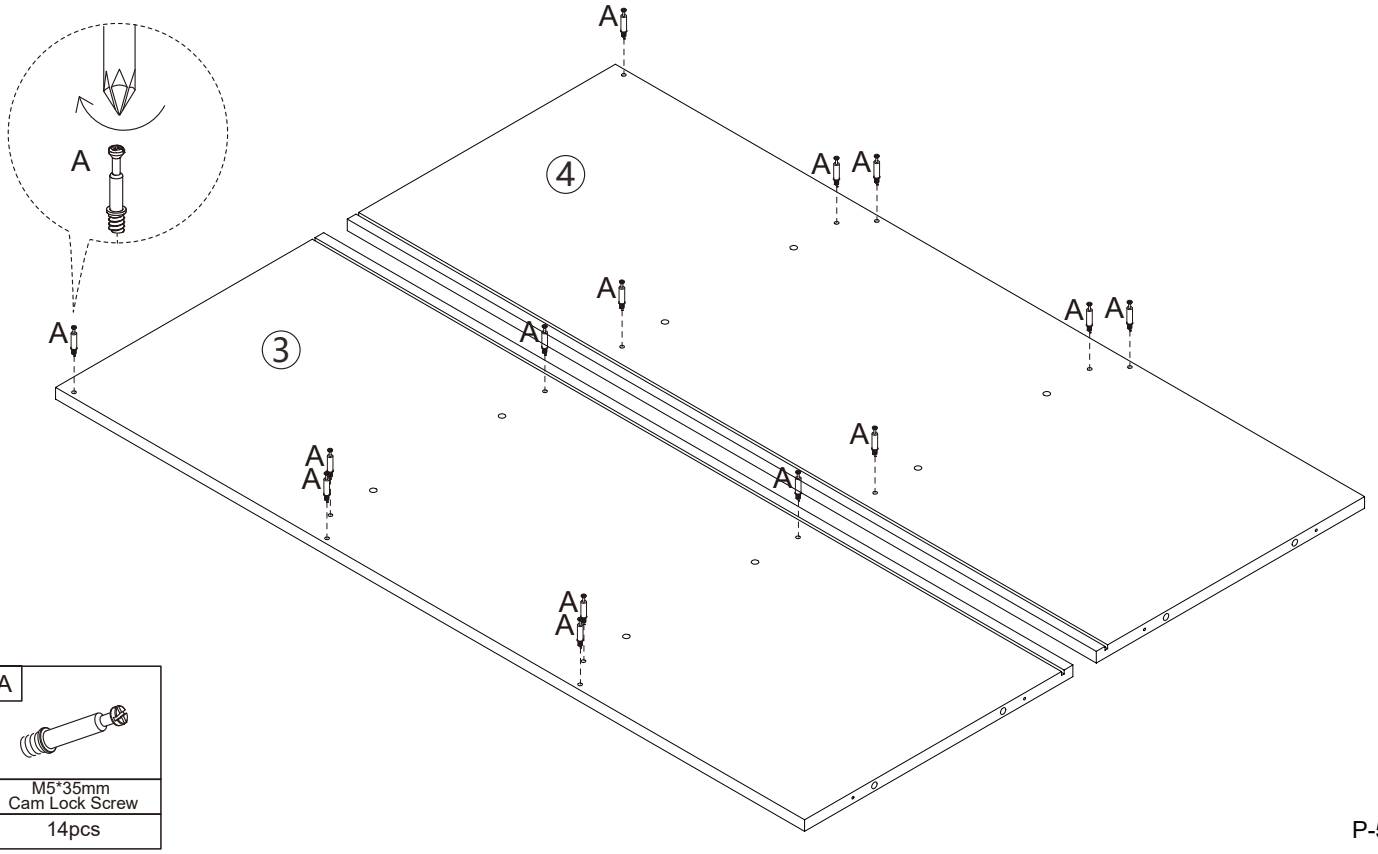

A
M5*35mm Cam Lock Screw
14pcs

3. Assemble the panels of each part together according to the diagram.

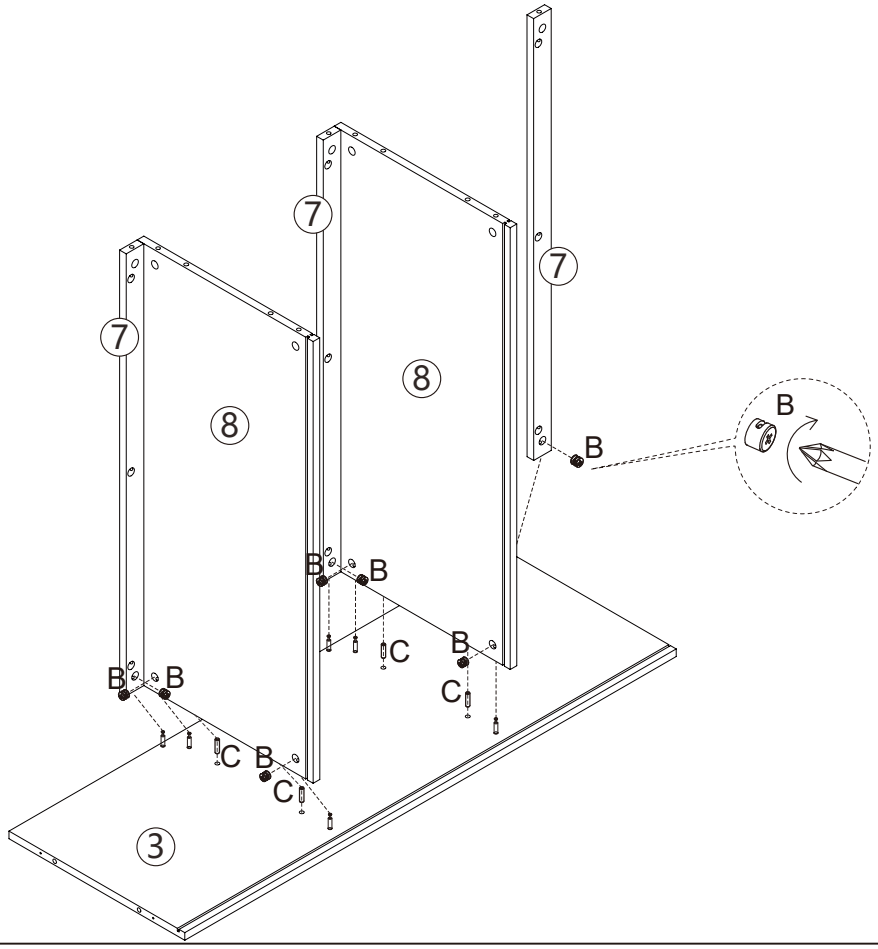


B


Ø15*10mm Cam Lockk
7pcs

C
Ø8*30mm Dowel
4pcs

4. Assemble back panel.

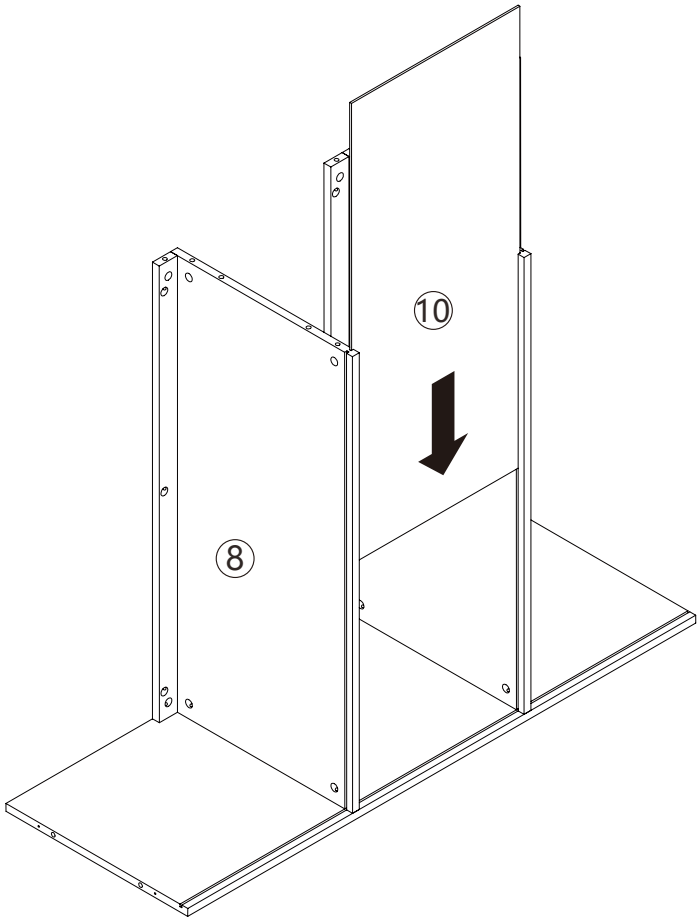

5. Assemble the panels of each part together according to the diagram.

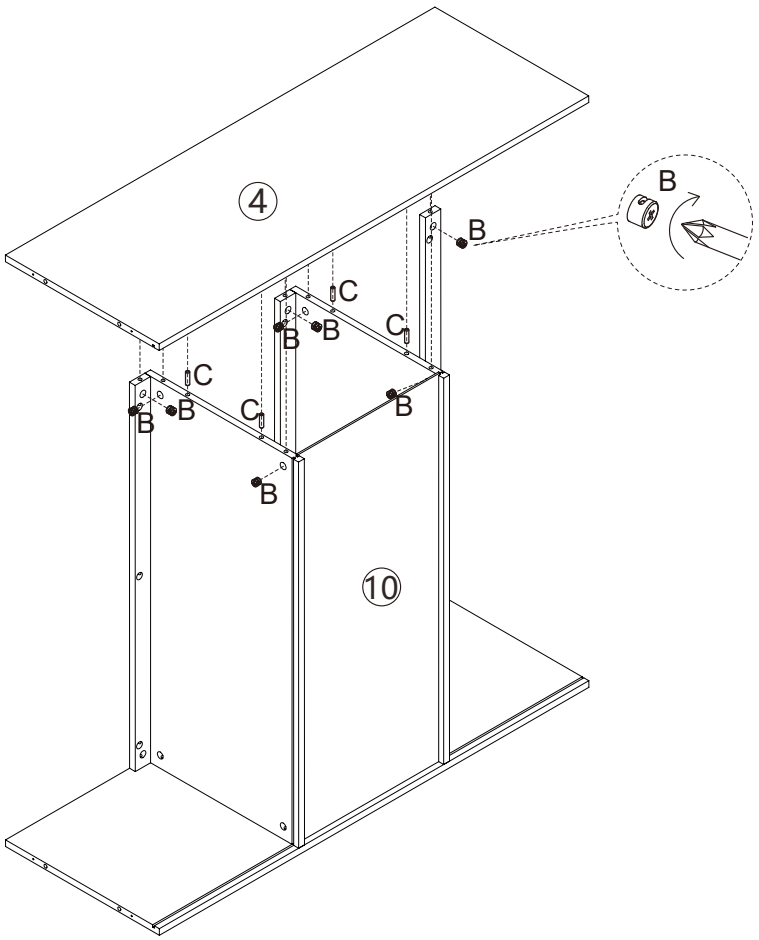


B

Ø15*10mm Cam Lockk
7pcs


C

Ø8*30mm Dowel
4pcs


6. Assemble back panel.

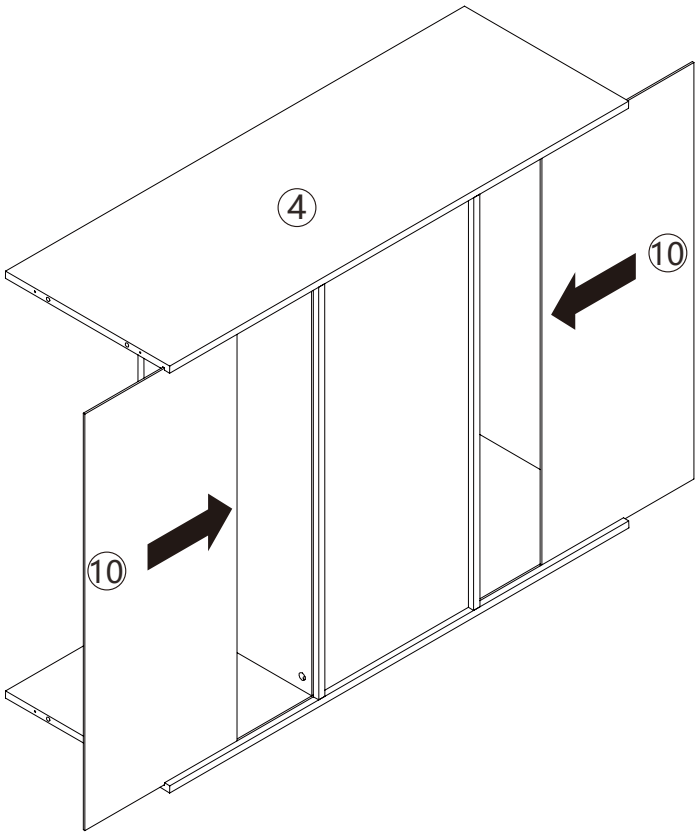

Warning label is placed on the left top conner.

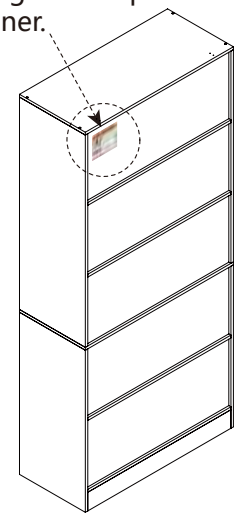


7. Attach parts to the panel.

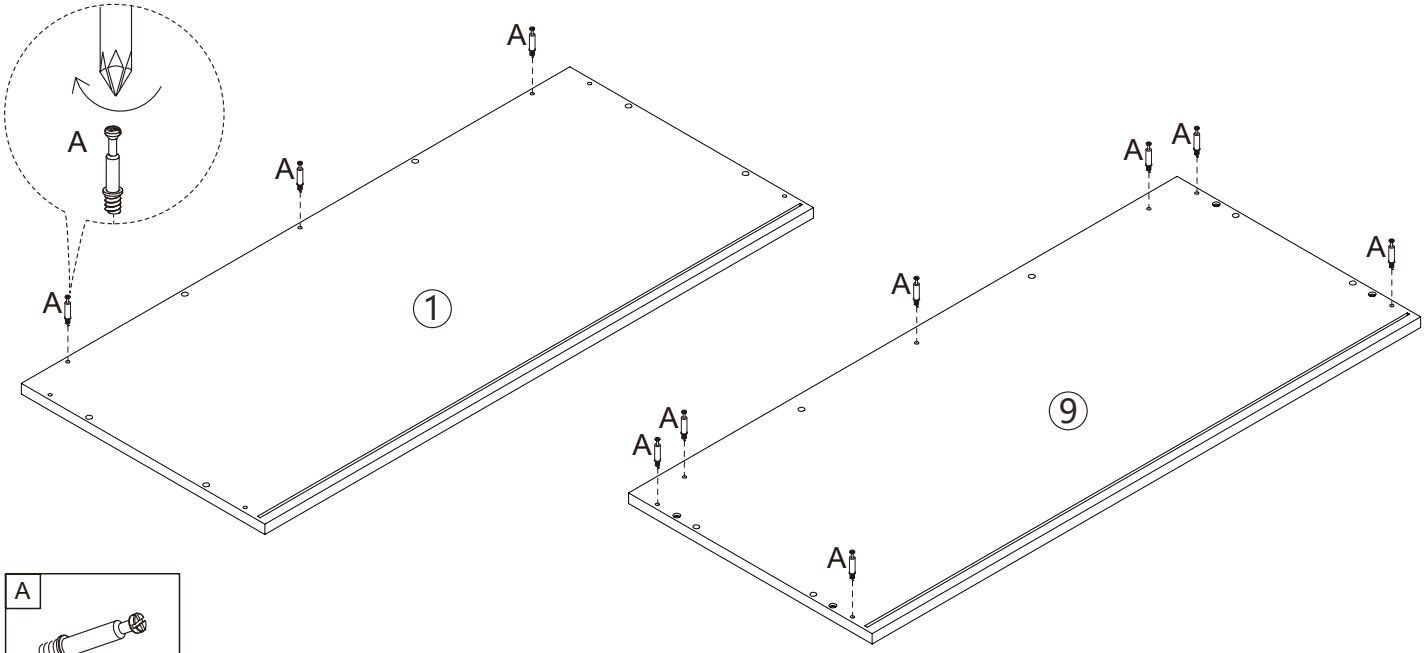

A
M5*35mm Cam Lock Screw
10pcs

8. Assemble the panels of each part together according to the diagram.

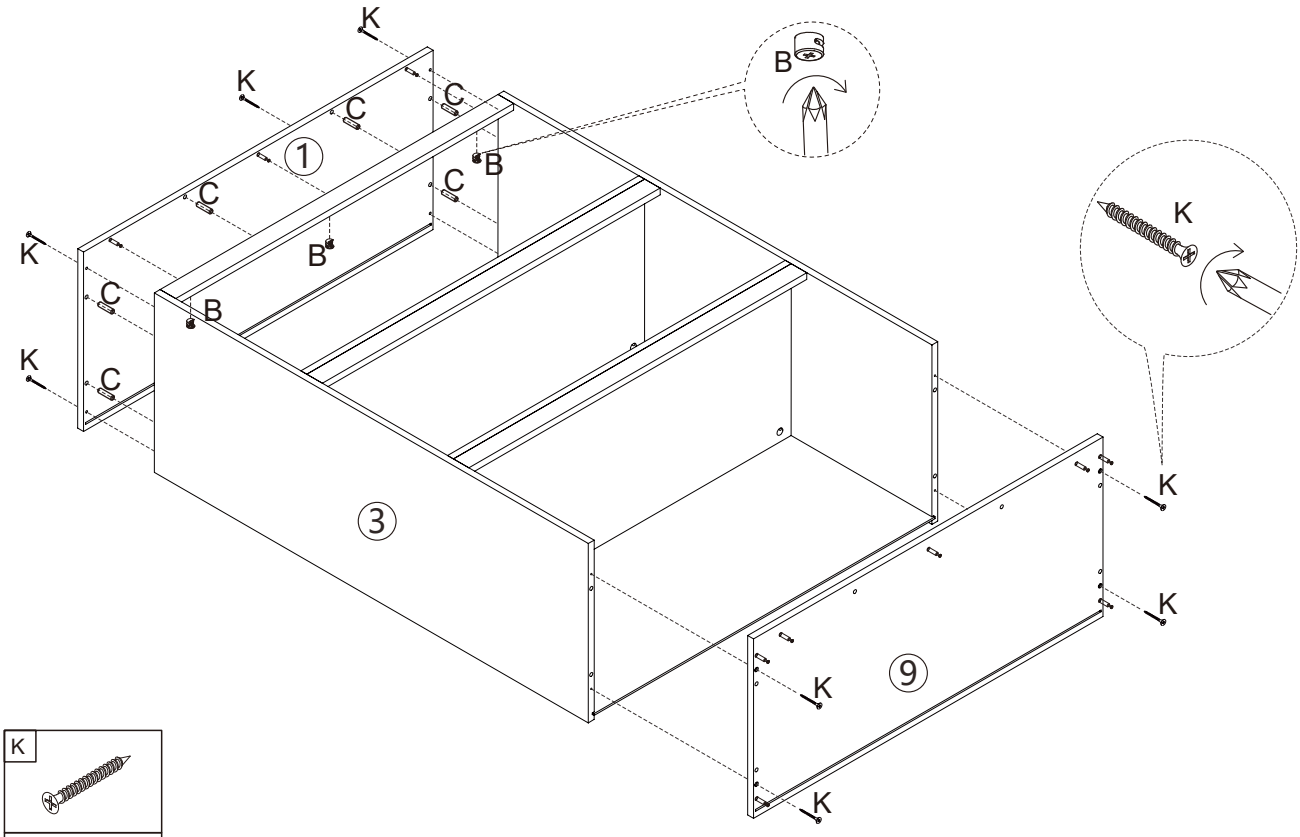


B

Ø15*10mm Cam Lockk
3pcs


C	K
	
Ø8*30mm Dowel	M4*40mm Screw
6pcs	8pcs


9. Attach parts to the side panel.

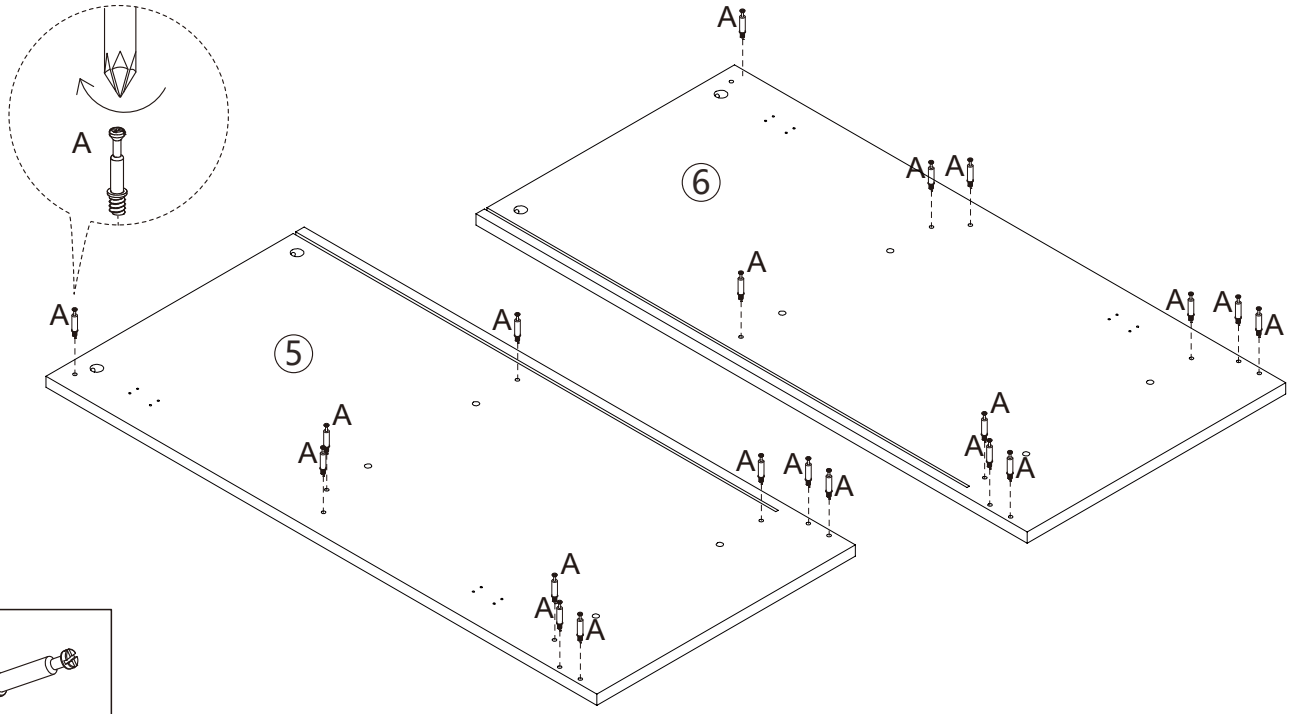


A
M5*35mm Cam Lock Screw
20pcs


10. Assemble the panels of each part together according to the diagram.

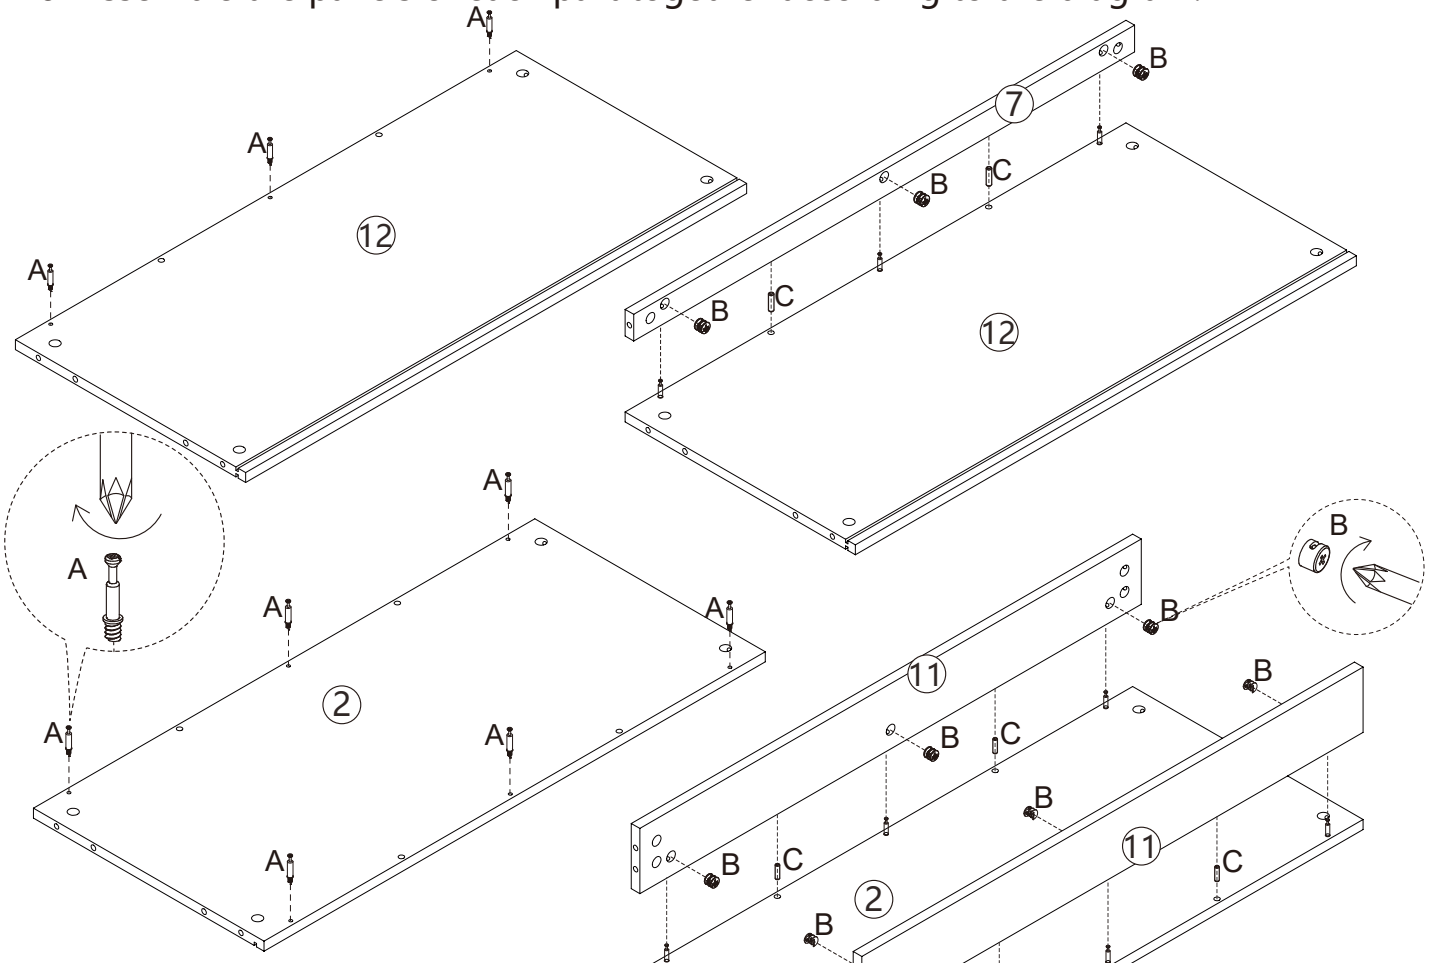


A	B	C
		
M5*35mm Cam Lock Screw	Ø15*10mm Cam Lockk	Ø8*30mm Dowel
9pcs	9pcs	6pcs


11. Assemble the panels of each part together according to the diagram.

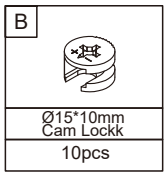

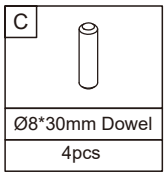


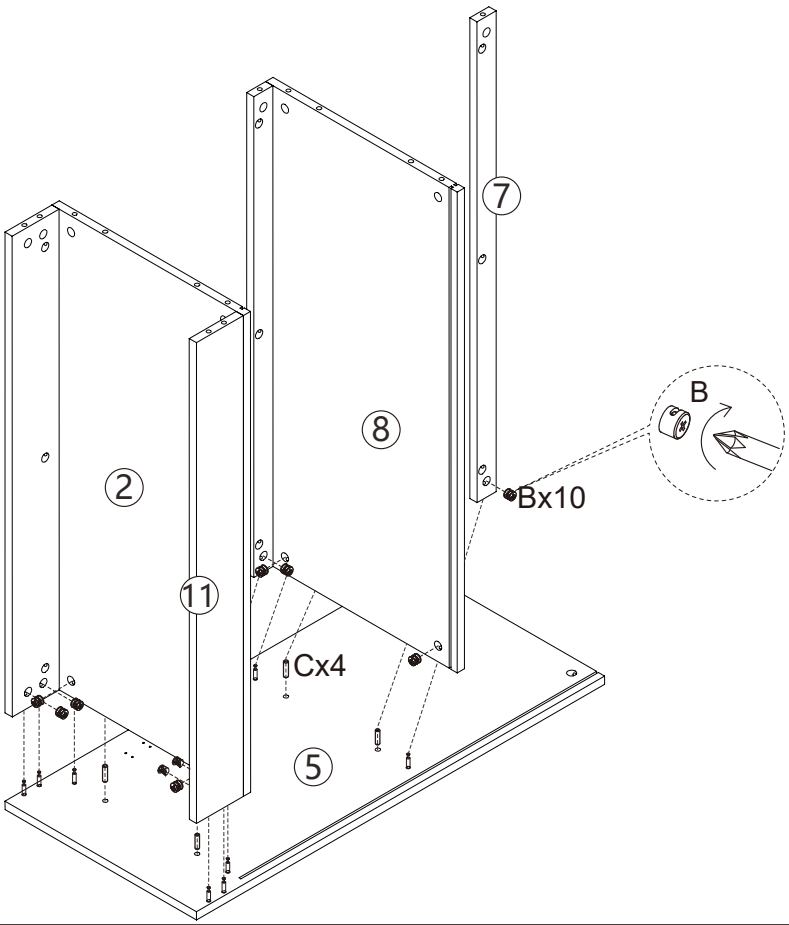

12. Assemble back panel.

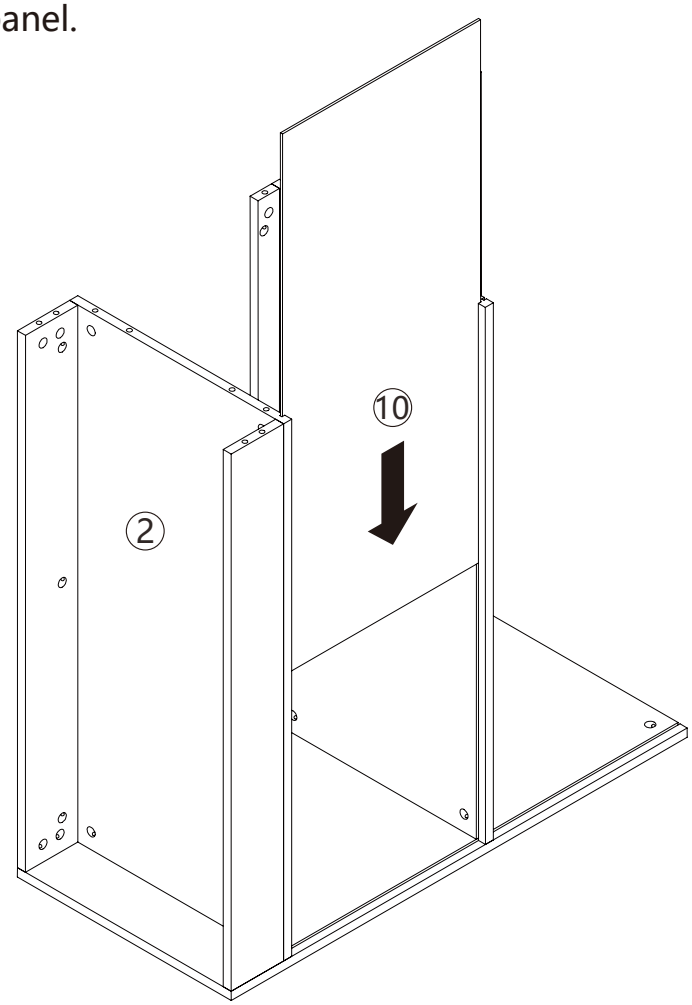

13. Assemble the panels of each part together according to the diagram.

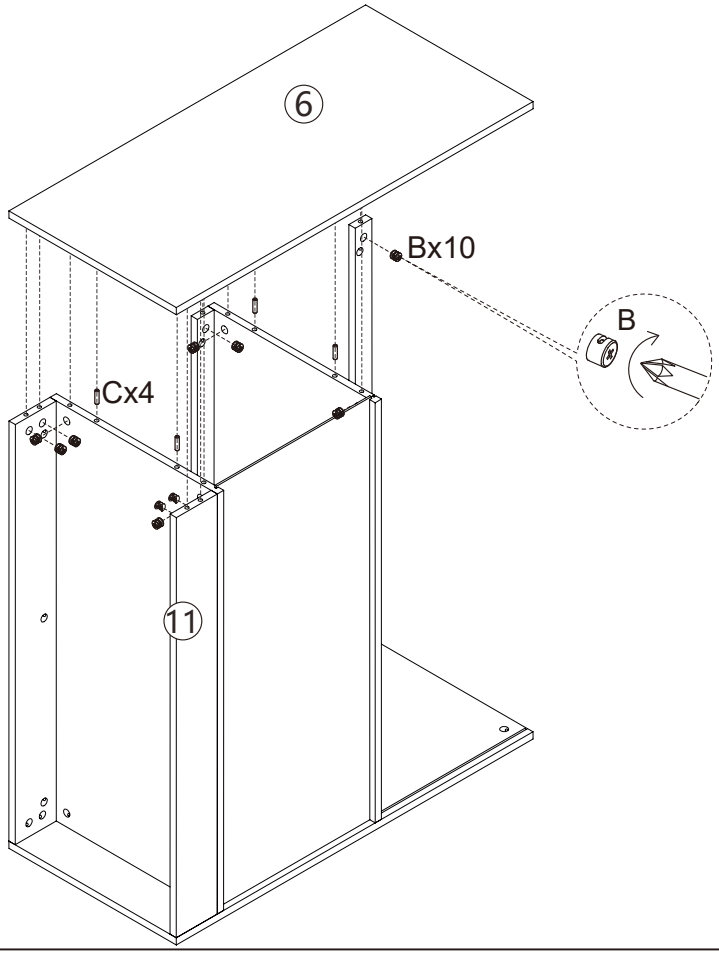


B

Ø15*10mm Cam Lockk
10pcs

C

Ø8*30mm Dowel
4pcs


14. Assemble back panel.

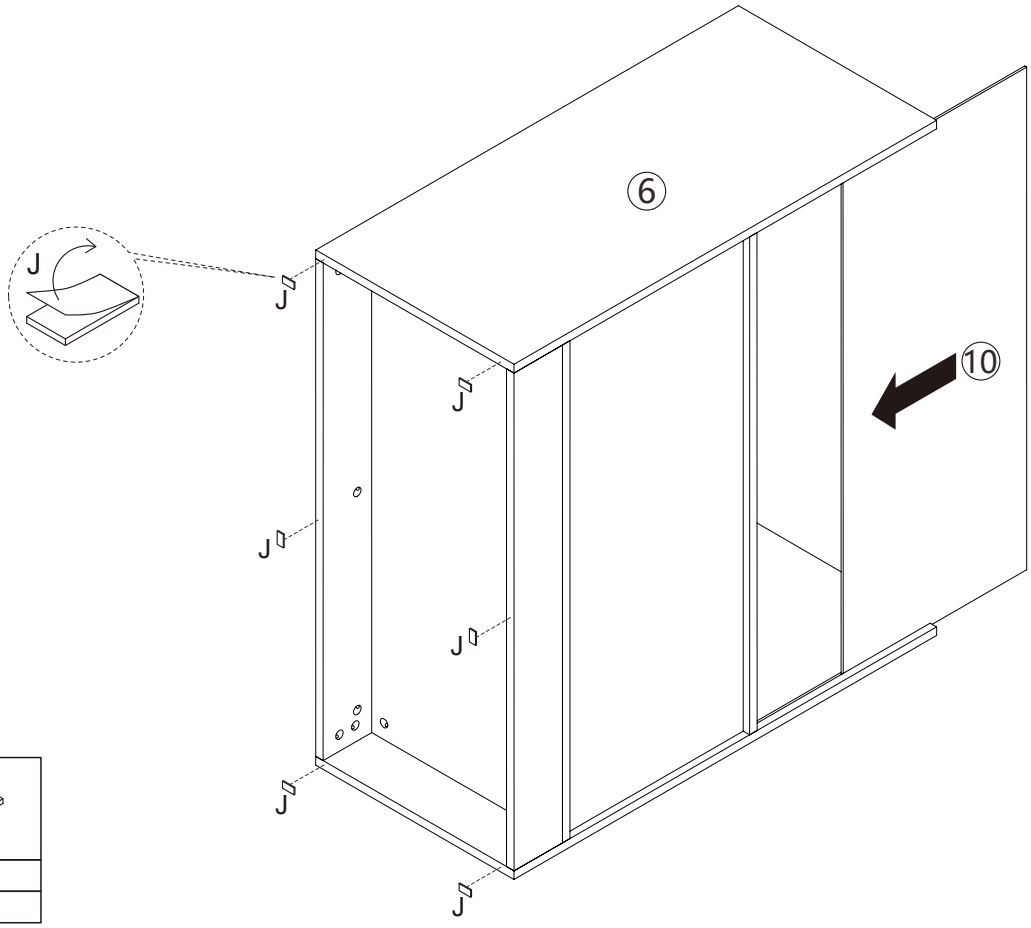

J


Mat
6pcs

15. Assemble the top parts and bottom parts together.

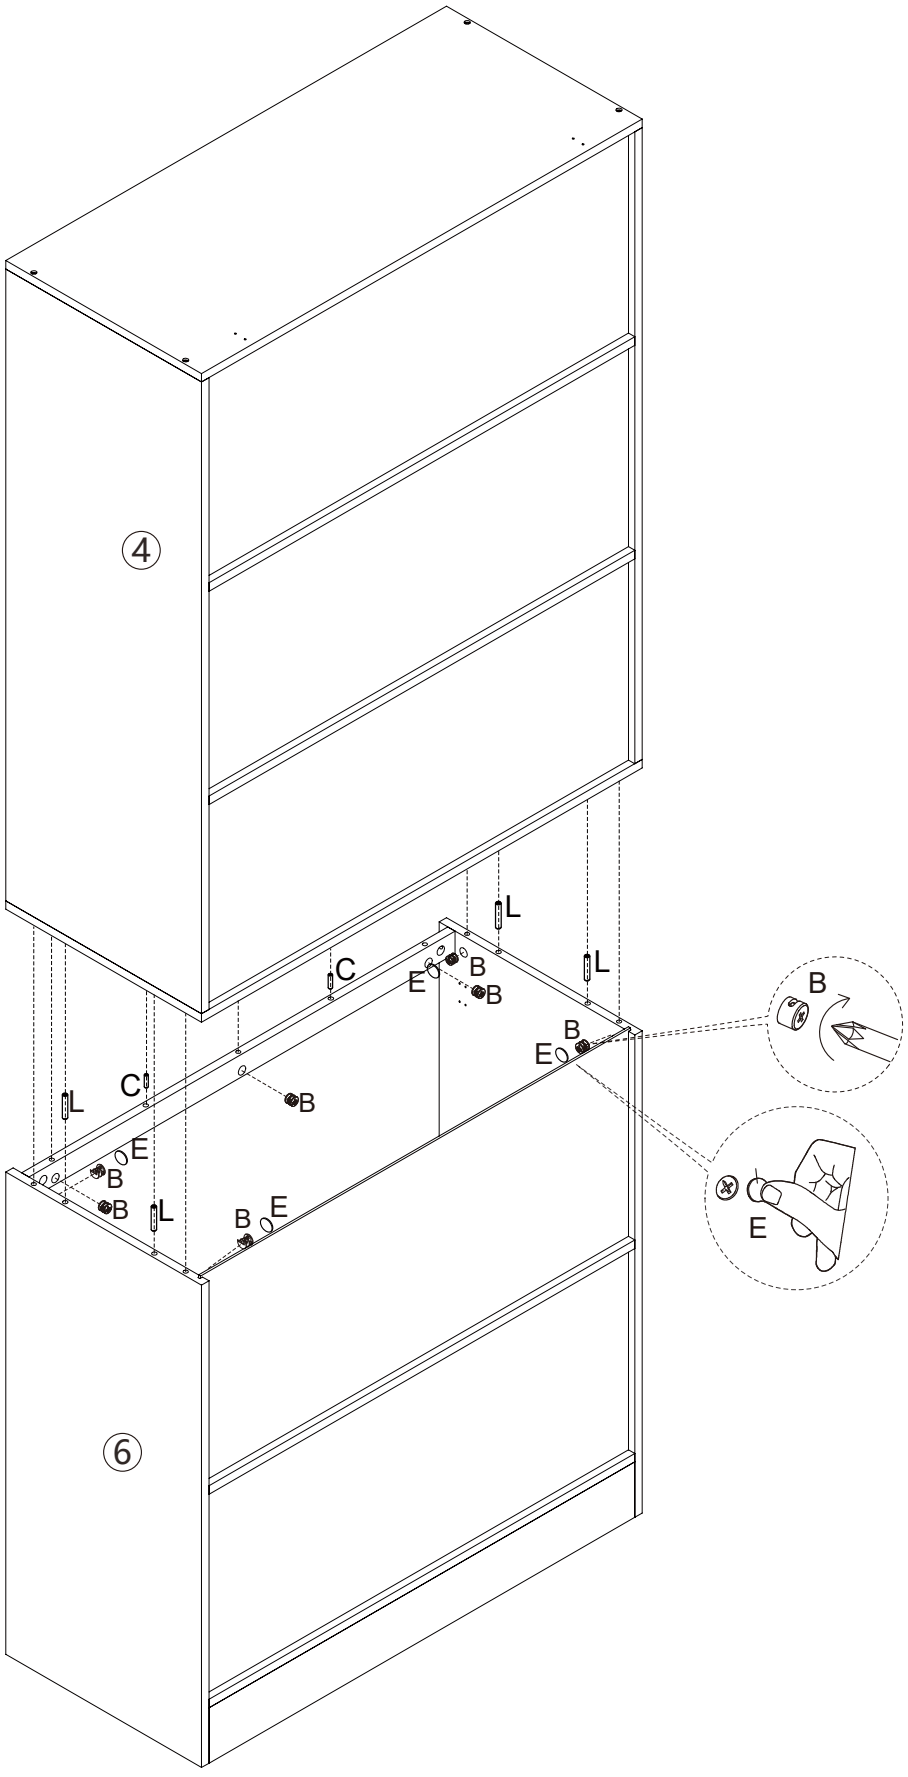

L	C	B	E
			
Ø8*50mm Dowel	Ø8*30mm Dowel	Ø15*10mm Cam Lockk	Cover
4pcs	2pcs	7pcs	4pcs


16. Assemble the hinge onto the door panel.

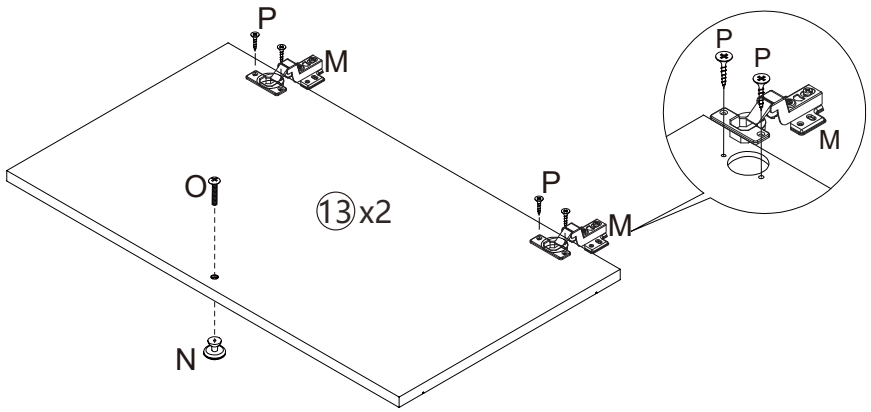


M	P
Hinge	M4*14mm Screw
4pcs	8pcs

N	O
Handle	M4*20mm Bolt
2pcs	2pcs


17. Assemble the door panel onto the cabinet and adjust it as shown in the picture, Make the door gap even and smooth.

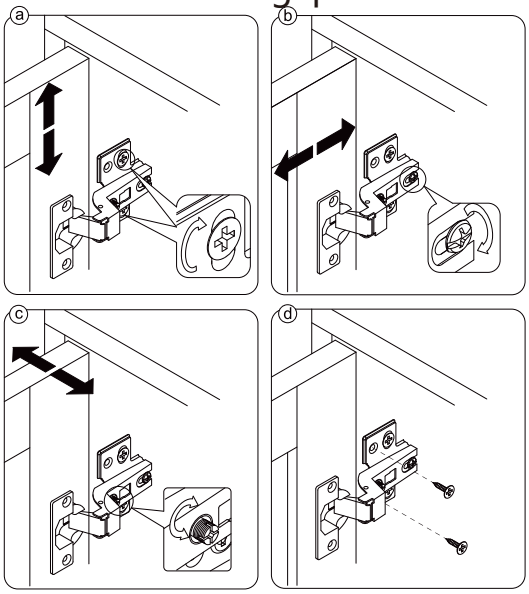

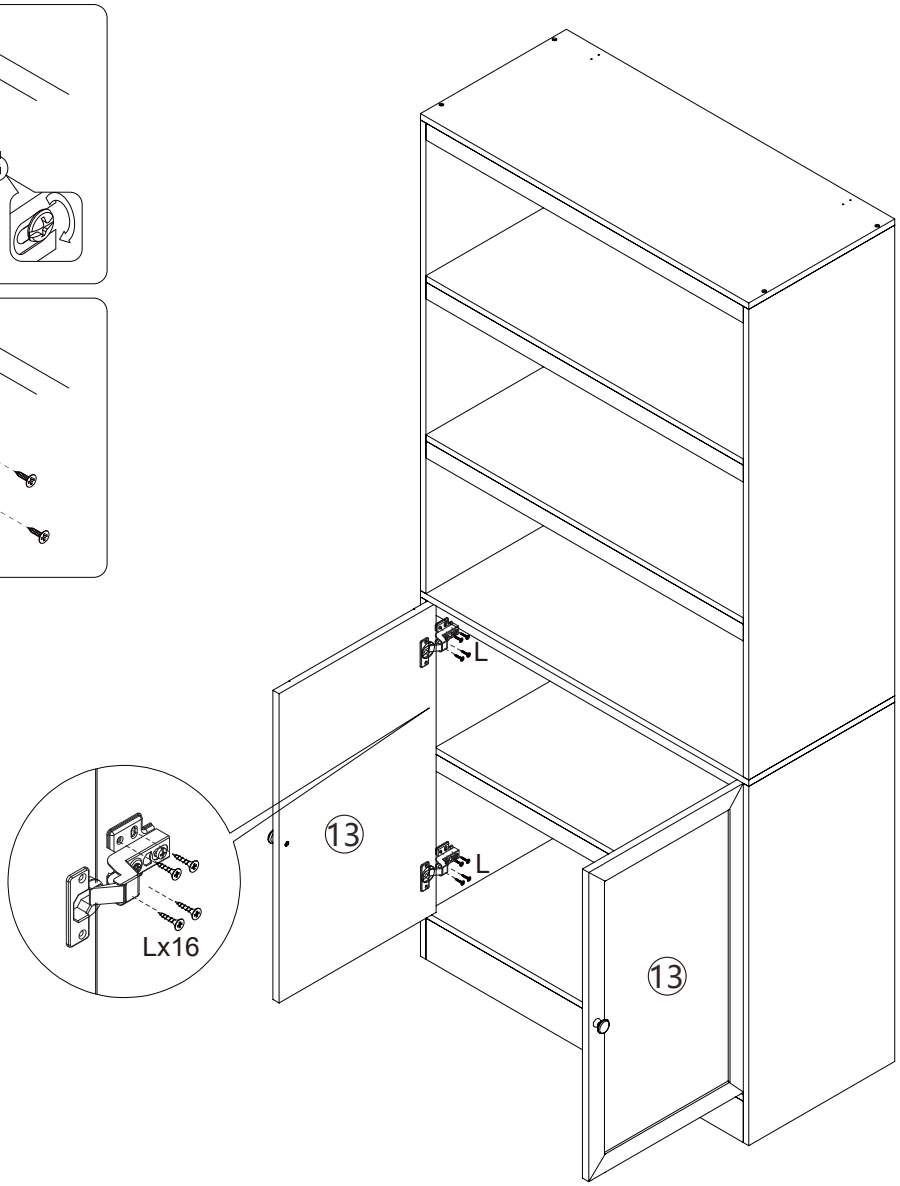

P
M4*14mm Screw
16pcs


18. Attach the plastic buckles and screws.

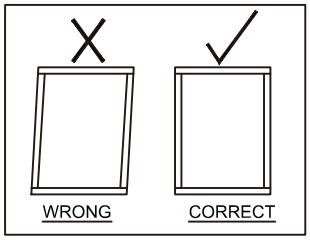

NB: Before tightening the plastic buckles and screws, please ensure the frame is square

H	I	F	G
Wall Bracket	M4*12mm Screw	Plastic Buckle	M3*12mm Screw
2pcs	4pcs	20pcs	20pcs

19. Drill holes in the wall, insert expansion bolts, and then fix the furniture to the wall with screws.

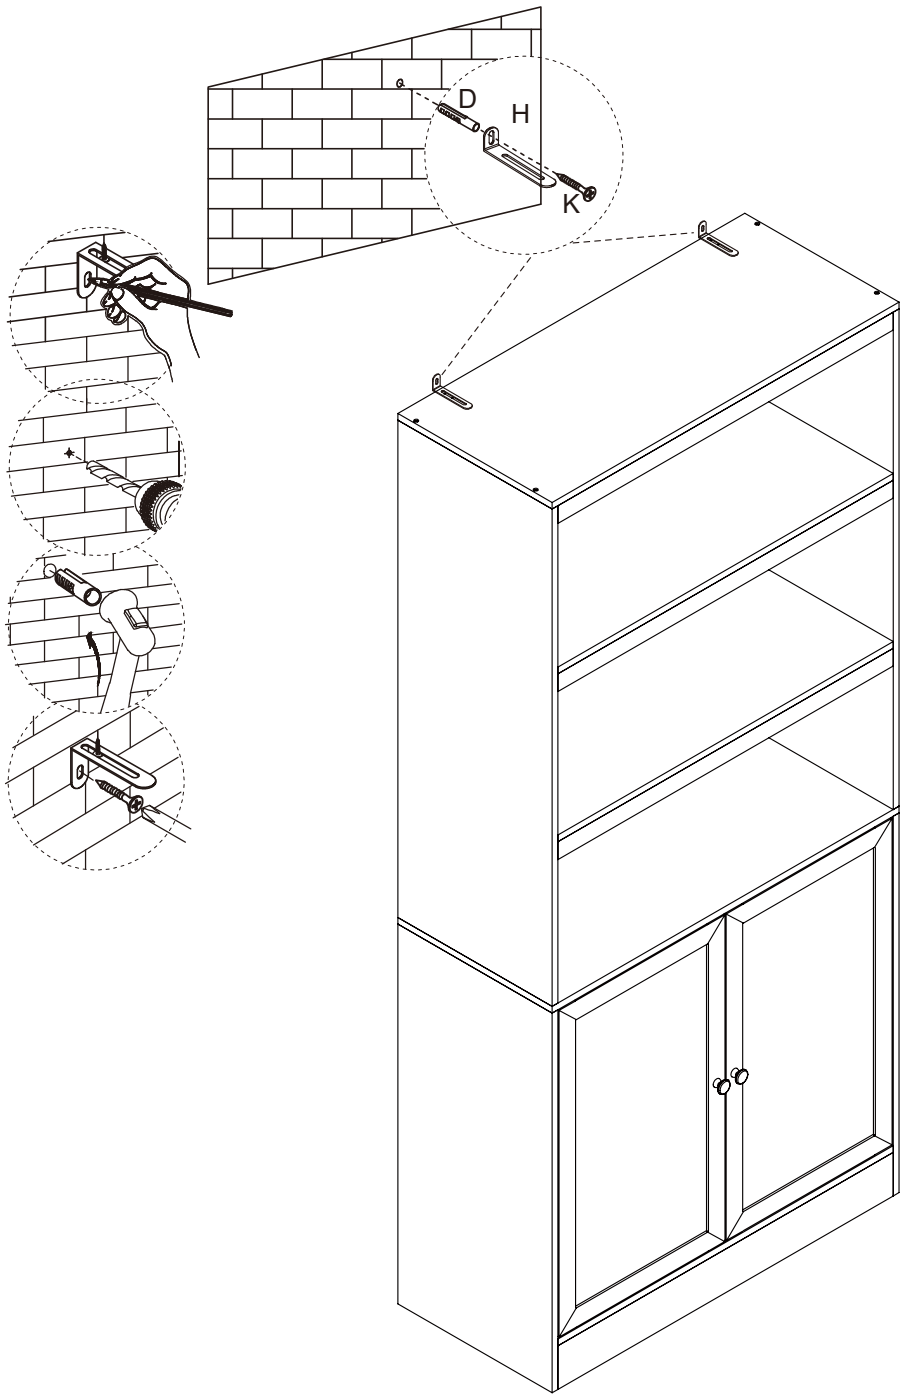

D	K
	
M8*40mm Wall Anchor	M4*40mm Screw
2pcs	2pcs