

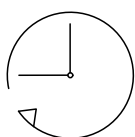


## Willow Sideboard

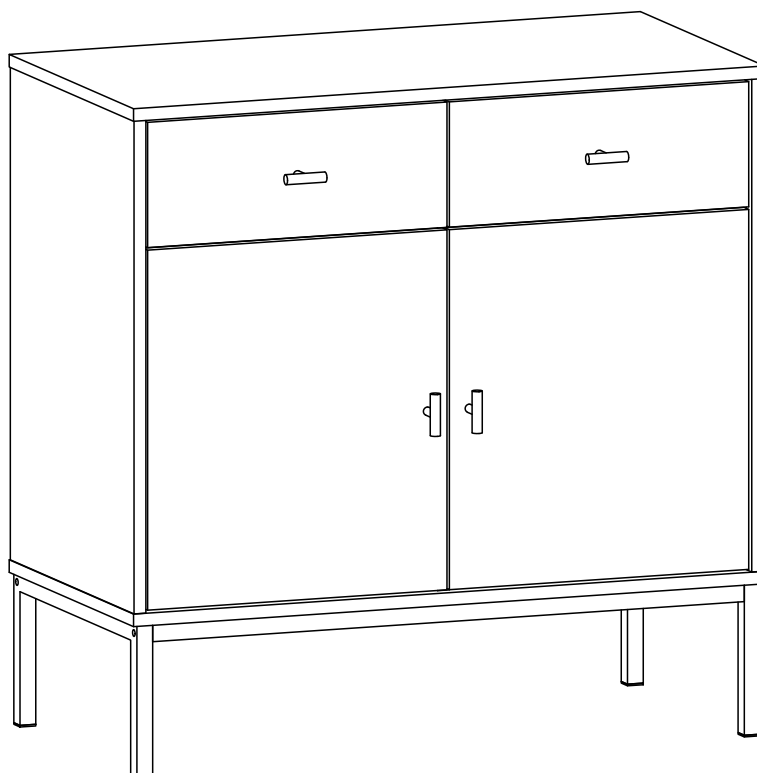

Up to 45 minutes  
assembly time

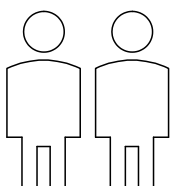

Two person  
assembly

This product is intended for domestic use only, not for commercial purposes.

# **IMPORTANT**

## **ASSEMBLY TIP**

Before you begin, it's best to identify all of the parts and fittings to build your sideboard frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

## **TOP TIP**

We recommend that you assemble the sideboard in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

## **SAFETY AND CARE**

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this product which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

## **HELP AND SUPPORT**

Please contact our customer service team on 0113 519 0311 if you have any questions or issues with your purchase.


## **RECYCLING**

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

## **CARE AND MAINTENANCE:**

1. Only clean using a damp cloth, do not use bleach or abrasive cleaners as they may damage the finish over time.
2. Do not use a very wet cloth or allow any liquid to contact with the veneer for a long period of time. Wipe any spillage immediately. Absorption can cause wood to warp or finishes to de-laminate.
3. Do not scrub or rub the surface when cleaning.
4. Do not drag the sideboard when moving, lift it off the floor instead.
5. Use a placemat or a coaster when putting hot items (e.g. hot drinks and dishes) on the wood surface.
6. It is not recommended to place the item next to sources of heat such as radiators, fires or directly exposed to sunlight. This may cause the wood to crack, split or fade due to the heat and humidity.
7. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface to be moved regularly to prevent uneven mellowing.
8. Regularly check all fixings to ensure none have come loose. Re-tighten if necessary.
9. Avoid sharp items such as a screwdriver or any pointy tools.
10. Dispose of all packaging carefully and responsibly - recycle where possible.

## Parts list

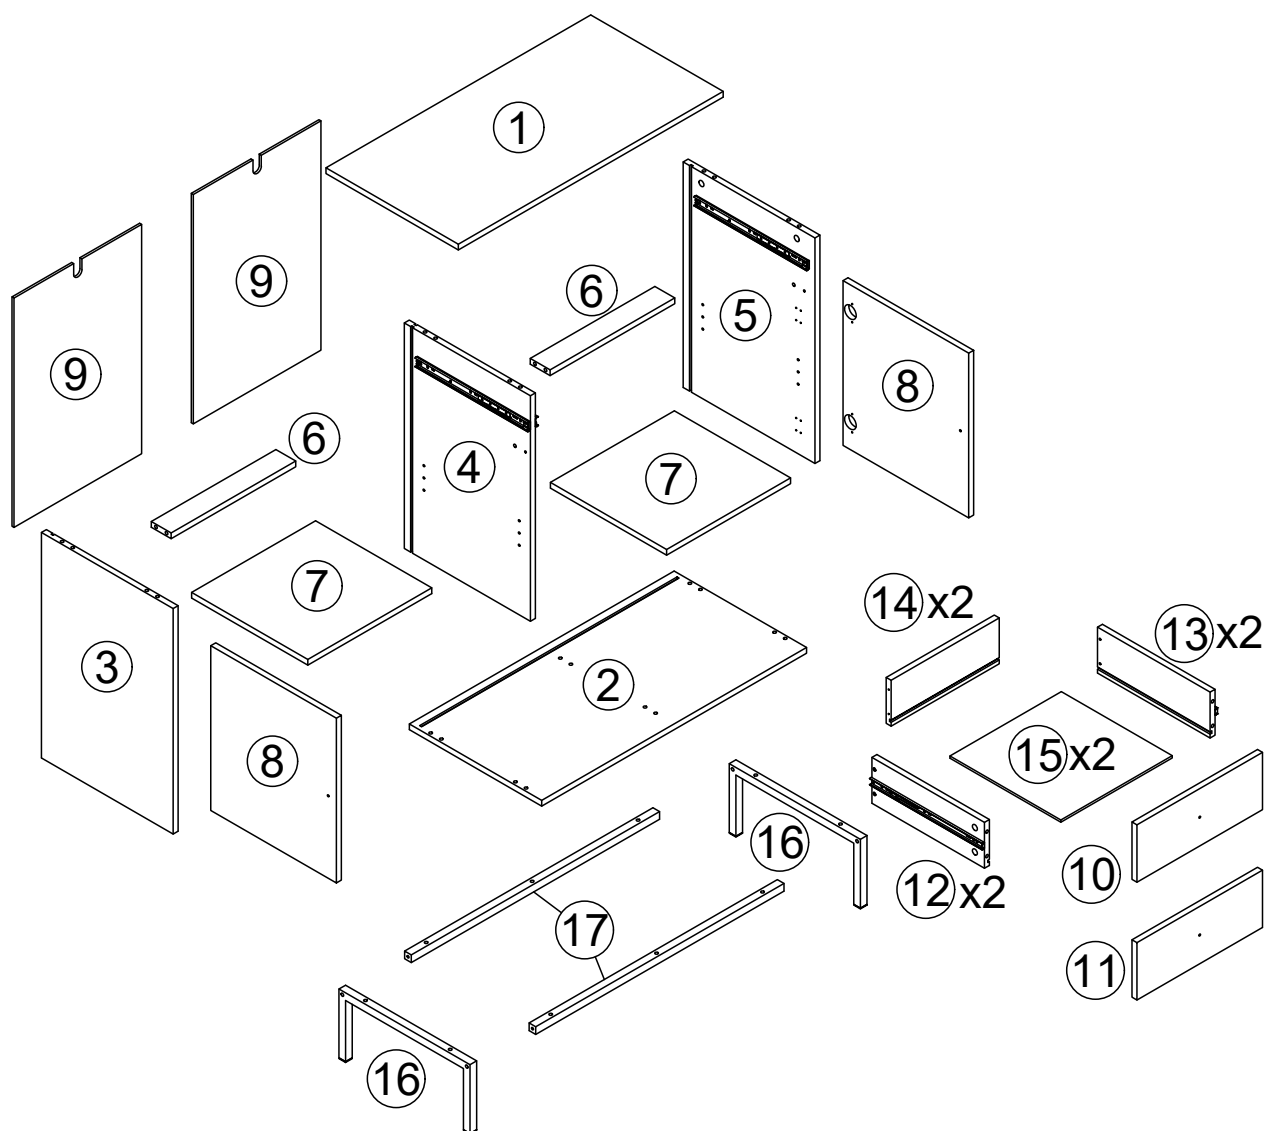

## Parts list






















Before you begin building your Willow Sideboard, please take a moment to read through the instructions and make sure that you have all the relevant parts listed on the parts check list.

Part Number	Part Description	Quantity	Box No
①	Sideboard Top	1 pc	Box 1
②	Bottom Panel	1 pc	Box 1
③	Left Side Panel With Slide	1 pc	Box 1
④	Middle Panel With Slide	1 pc	Box 1
⑤	Right Side Panel With Slide	1 pc	Box 1
⑥	Centre Support	2 pcs	Box 1
⑦	Shelf Panel	2 pcs	Box 1
⑧	Door Panel	2 pcs	Box 1
⑨	Back Panel	2 pcs	Box 1




Part Number	Part Description	Quantity	Box No
⑩	Left Drawer Front	1 pc	Box 1
⑪	Right Drawer Front	1 pc	Box 1
⑫	Drawer Left Side With Slide	2 pcs	Box 1
⑬	Drawer Right Side With Slide	2 pcs	Box 1
⑭	Drawer Back Side	2 pcs	Box 1
⑮	Drawer Bottom	2 pcs	Box 1
⑯	Leg	2 pcs	Box 1
⑰	Leg Support	2 pcs	Box 1

## Fittings


Please check you have all the fittings listed below with your product in Box 1.

<b>A</b>  M6*30mm Bolt 10pcs+1pc extra	<b>B</b>  M6*40mm Bolt 4pcs	<b>C</b>  M6*35mm Bolt 18pcs+2pcs extra	<b>D</b>  Ø15mm Cam Lock 18pcs+2pcs extra	<b>E</b>  M3.5*14mm Screw 32pcs+2pcs extra	<b>F</b>  M4*35mm Screw 8pcs+1pc extra
<b>G</b>  M7*48mm Screw 6pcs+1pc extra	<b>H</b>  Ø8*30mm Dowel 14pcs+2pcs extra	<b>I</b>  Ø8*60mm Dowel 1pc	<b>J</b>  Ø5*14mm Shelf Pin 8pcs+1pc extra	<b>K</b>  Handle 4pcs	<b>L</b>  M4*20mm Bolt 4pcs
<b>M</b>  Plastic Buckle 8pcs+1pc extra	<b>N</b>  Allen Key 1pc	<b>O</b>  M4*14mm Screw 2pcs	<b>P</b>  M4*35mm Screw 2pcs	<b>Q</b>  Ø6*30mm Wall Plug 2pcs	<b>R</b>  Wall Bracket 2pcs
<b>S</b>  Hinge 4pcs	<b>T</b>  Ø20mm Sticker 8pcs+2pcs extra	<b>U</b>  Slide Pre-assembled 4pcs			


Pre-assembled Fittings.

<b>U1</b>  Slide Pre-assembled 4pcs	<b>U2</b>  Slide Pre-assembled 4pcs	<b>E</b>  M3.5*14mm Screw 16pcs
---	---	---



## 1. Attach parts to Sideboard Top, Side Panels and Middle Panel.

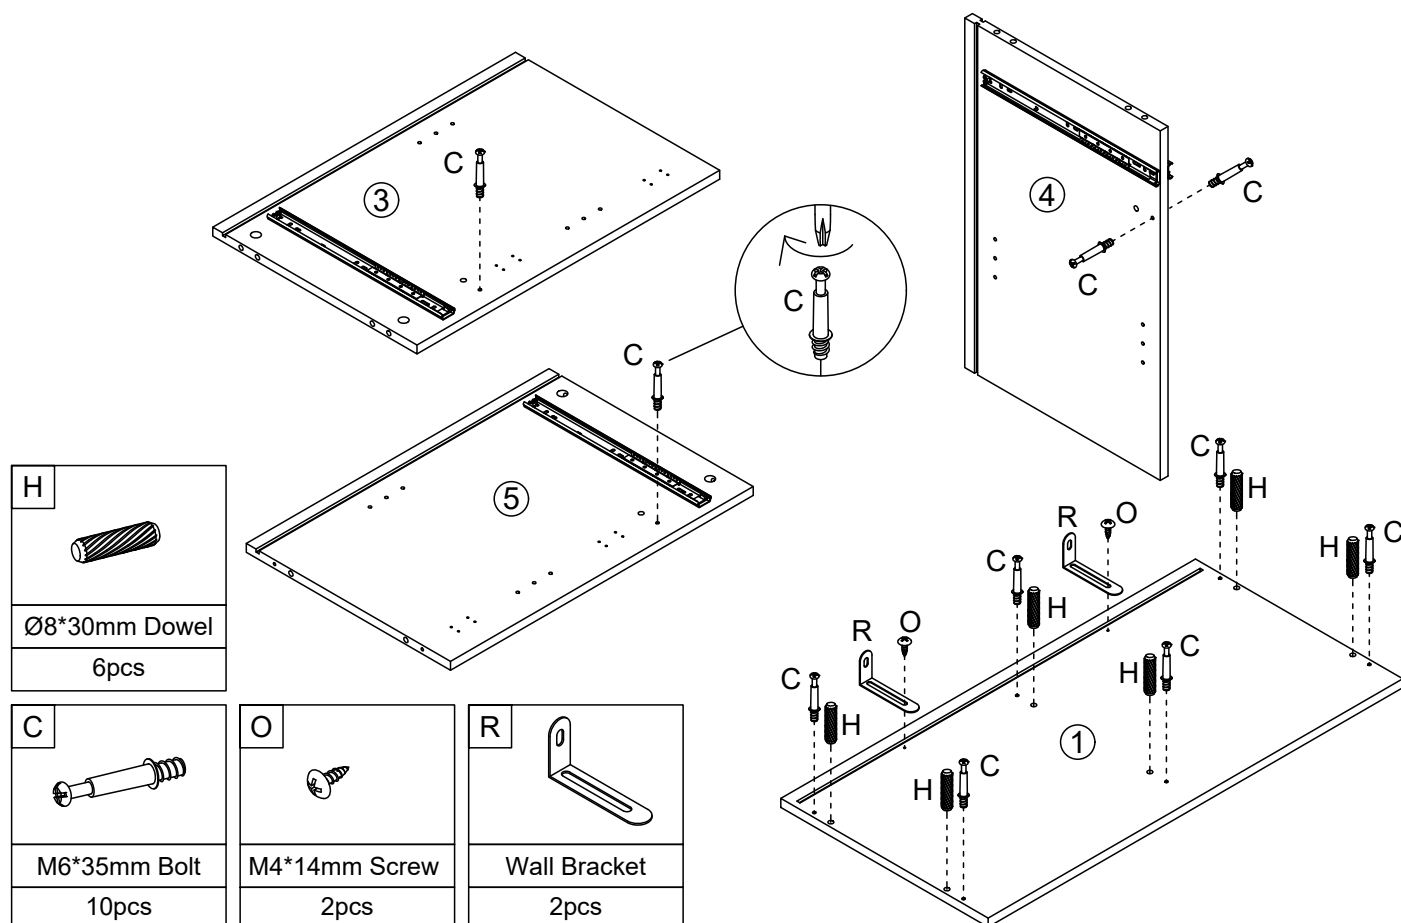


## 2. Attach Centre Support to Side Panels and Middle Panel.

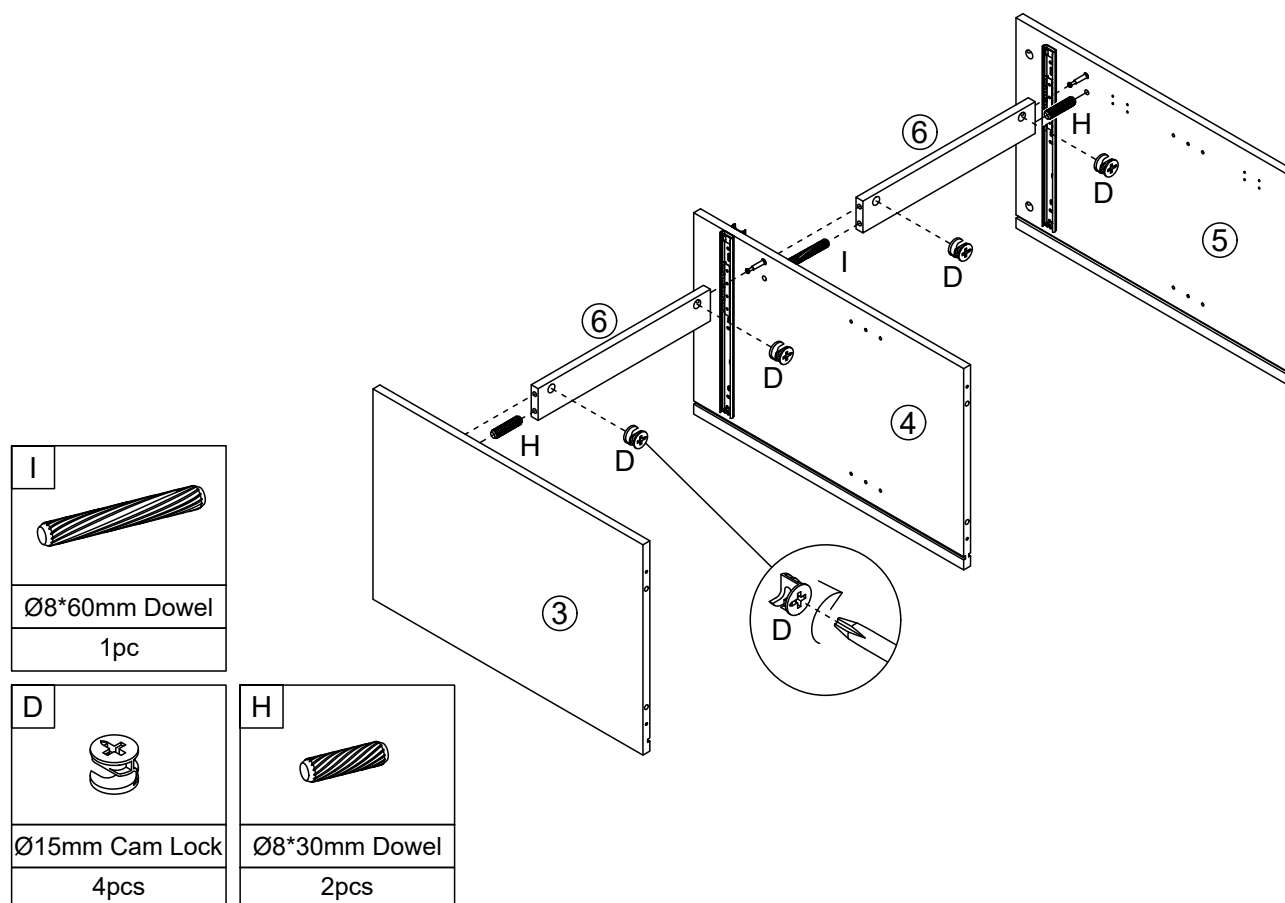


### 3. Attach Sideboard Top to Side Panels and Middle Panel.

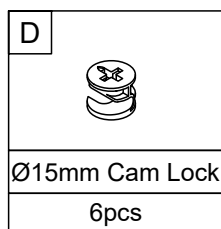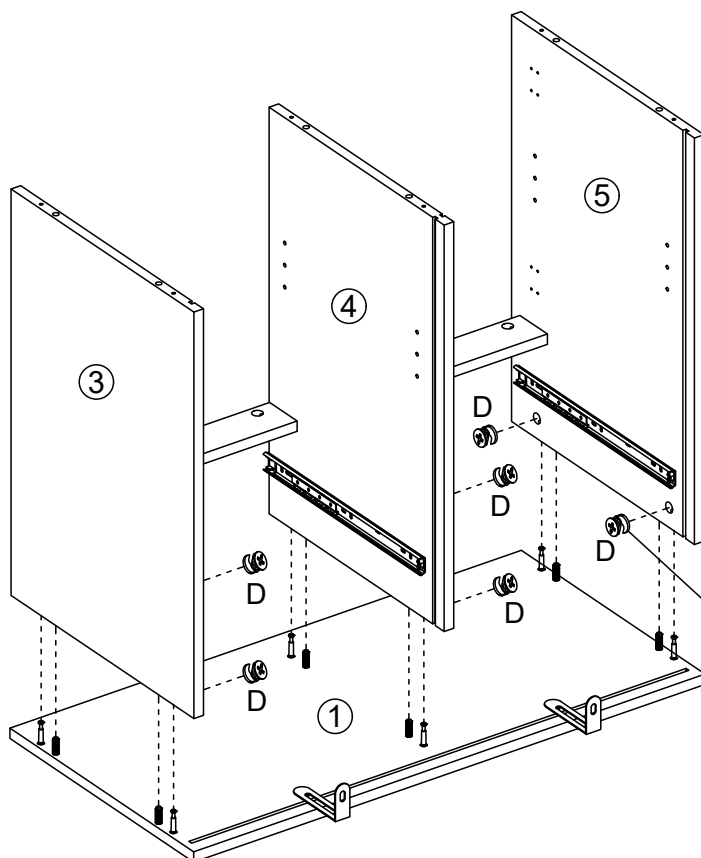



### 4. Slide Back Panels into the Frame.

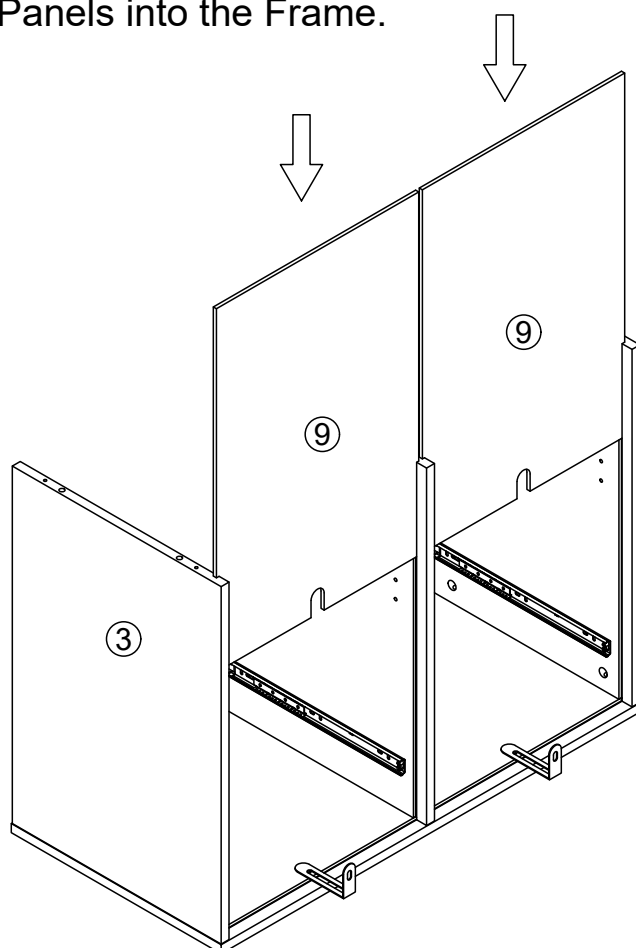


## 5. Attach the Bottom Panel onto the frame.

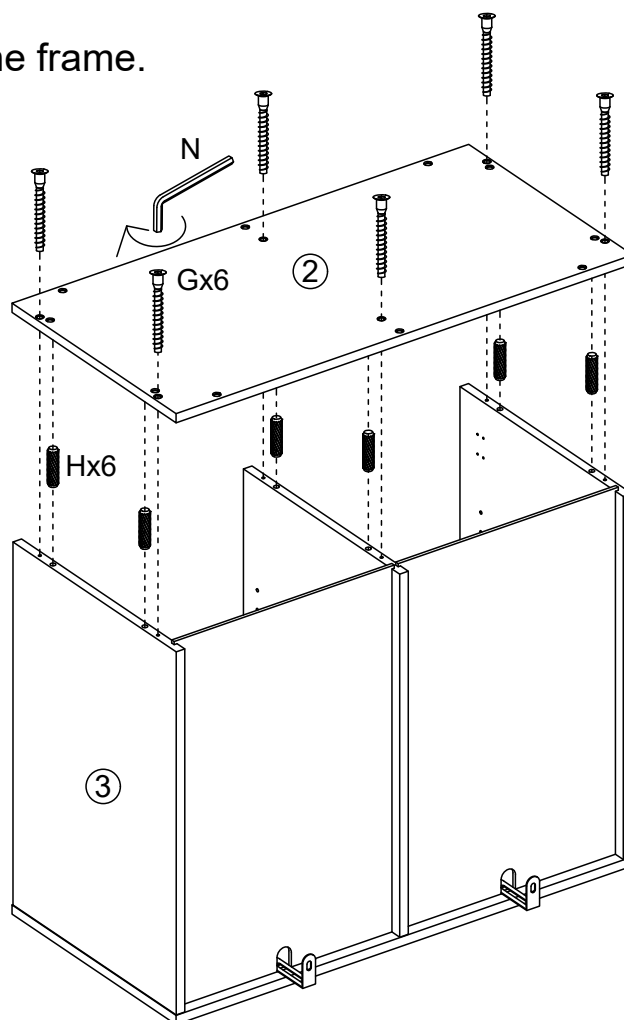



N

Allen Key
1pc


G

M7*48mm Screw
6pcs

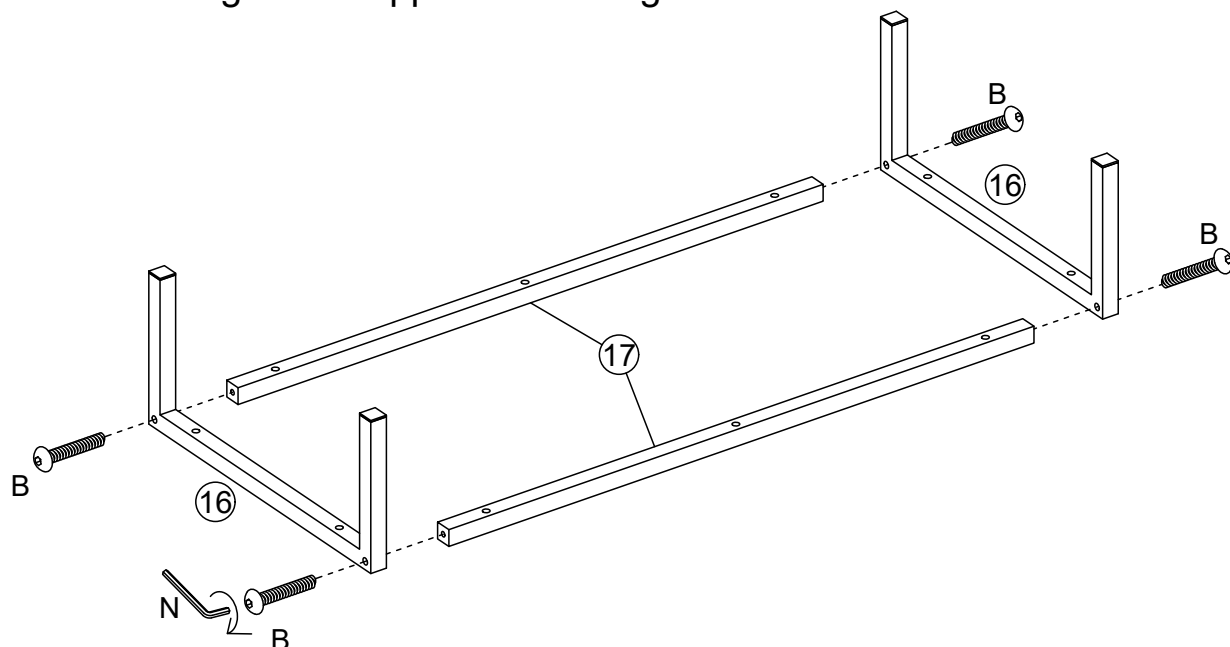H

Ø8*30mm Dowel
6pcs


## 6. Attach the Leg Side Support to the Legs.





B

M6*40mm Bolt
4pcs



N

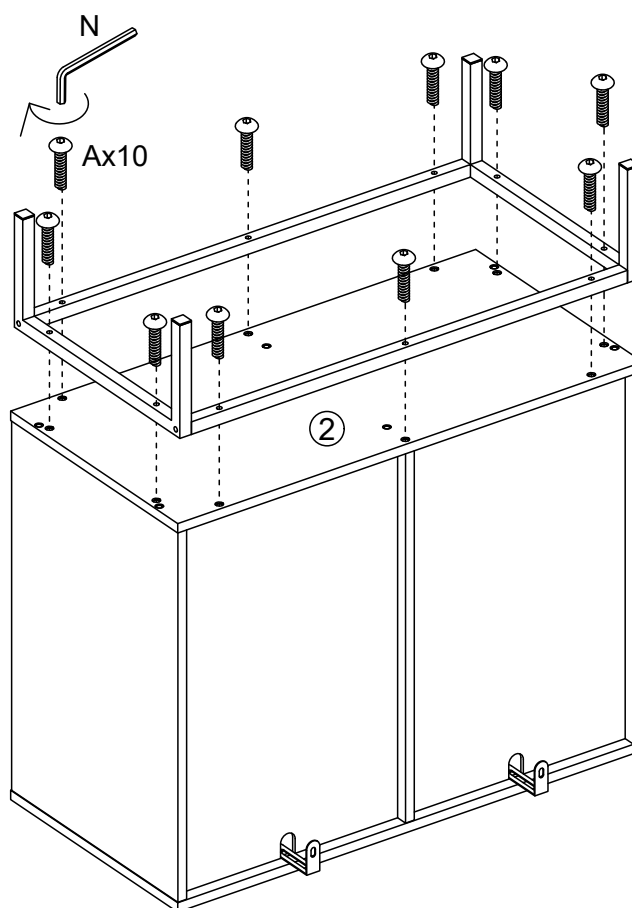Allen Key
1pc



## 7. Attach the Legs to the frame.

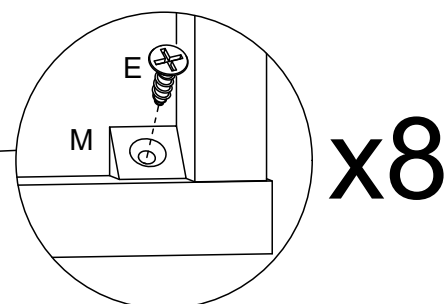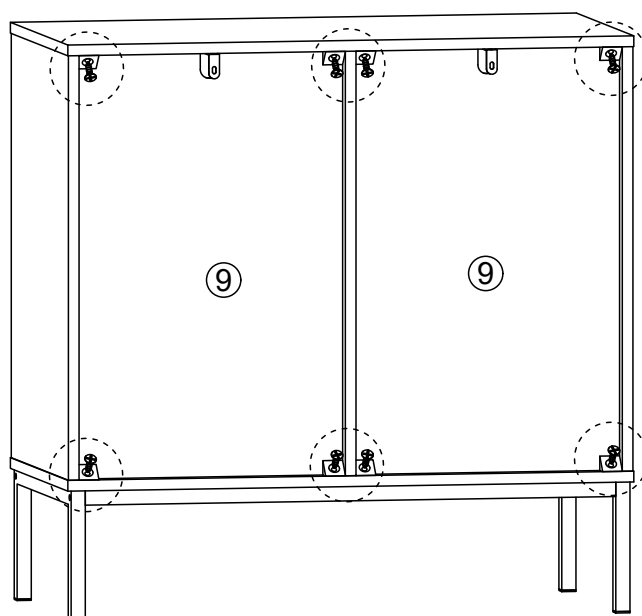






<b>A</b> 	<b>N</b> 
M6*30mm Bolt 10pcs	Allen Key 1pc

## 8. Attach the Plastic Buckles.





<b>E</b> 	<b>M</b> 
M3.5*14mm Screw 8pcs	Plastic Buckle 8pcs


## 9. Fix the Wall Bracket to the wall.

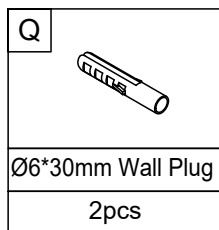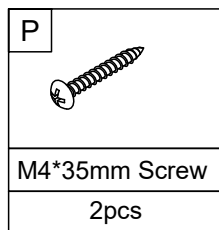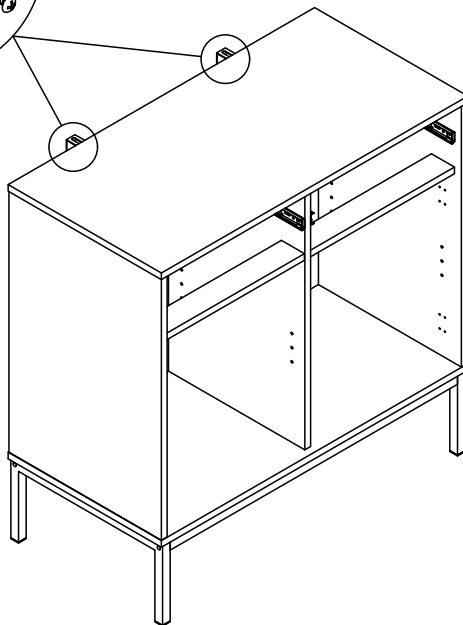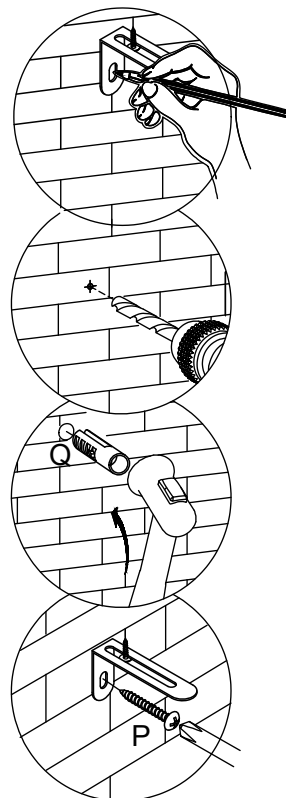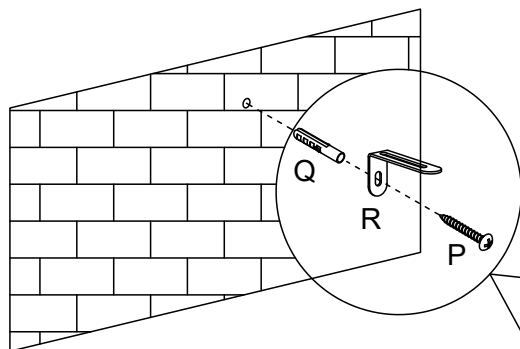


## 10. Attach Bolts to the Drawer Front.

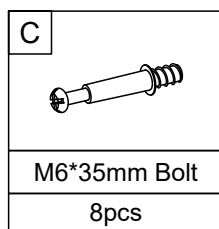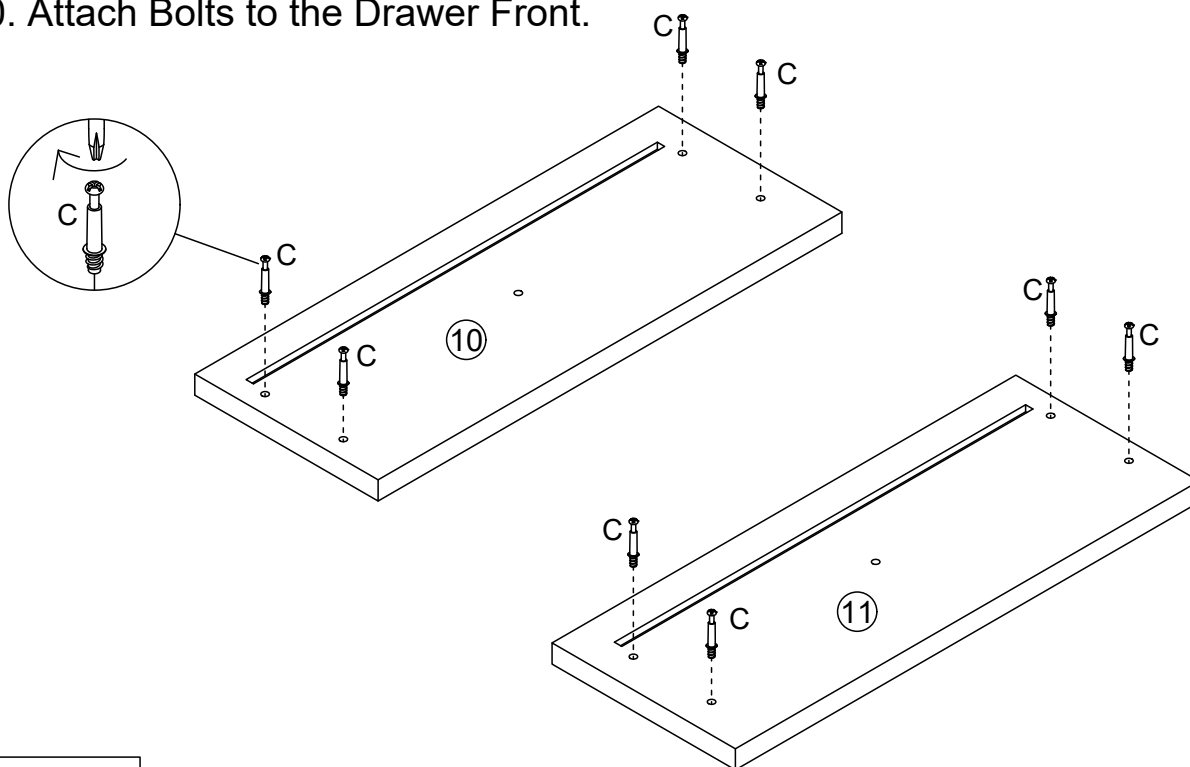


## 11. Assemble the Drawers.

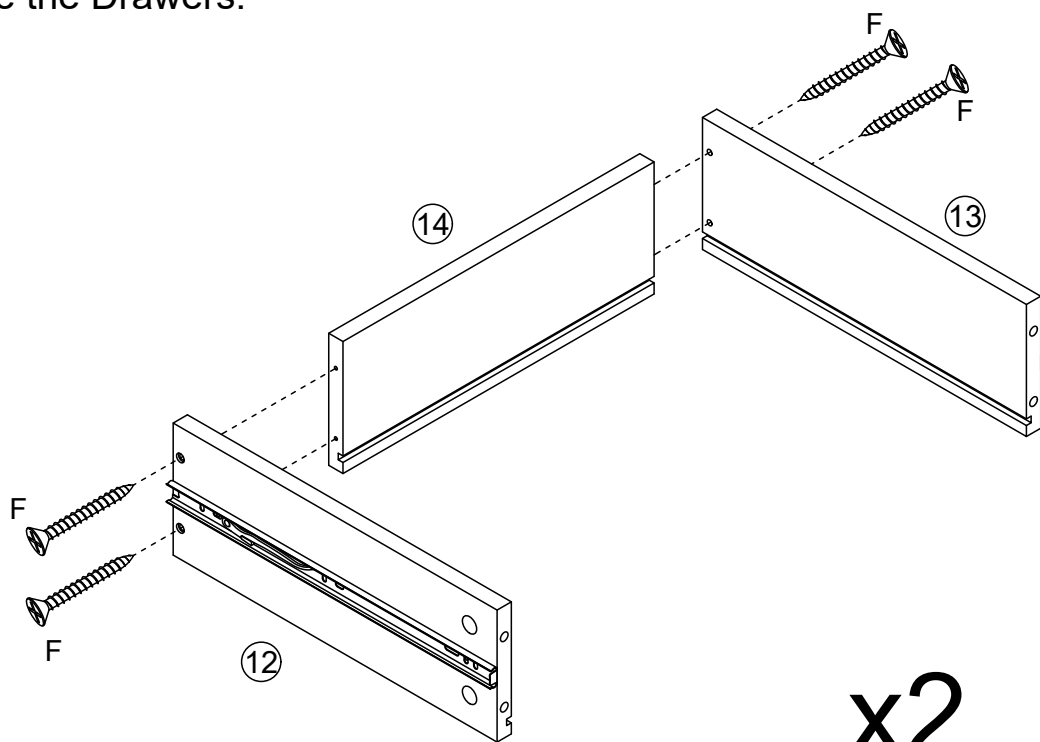

F

M4*35mm Screw
8pcs


x2
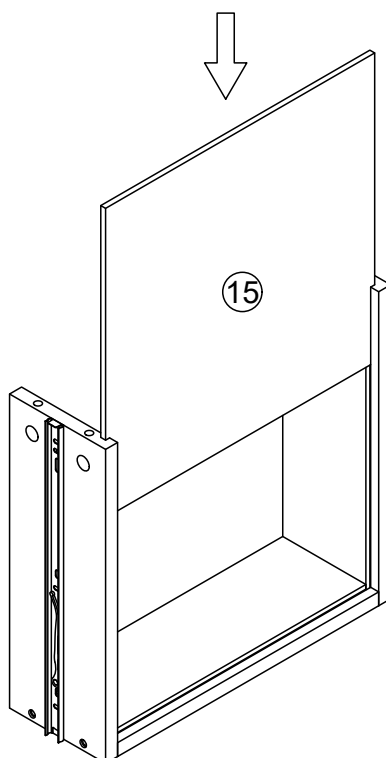
## 12. Slide the Drawer Bottom into the Drawer.




x2


### 13. Attach the Drawer Front and tighten the CAM Locks.

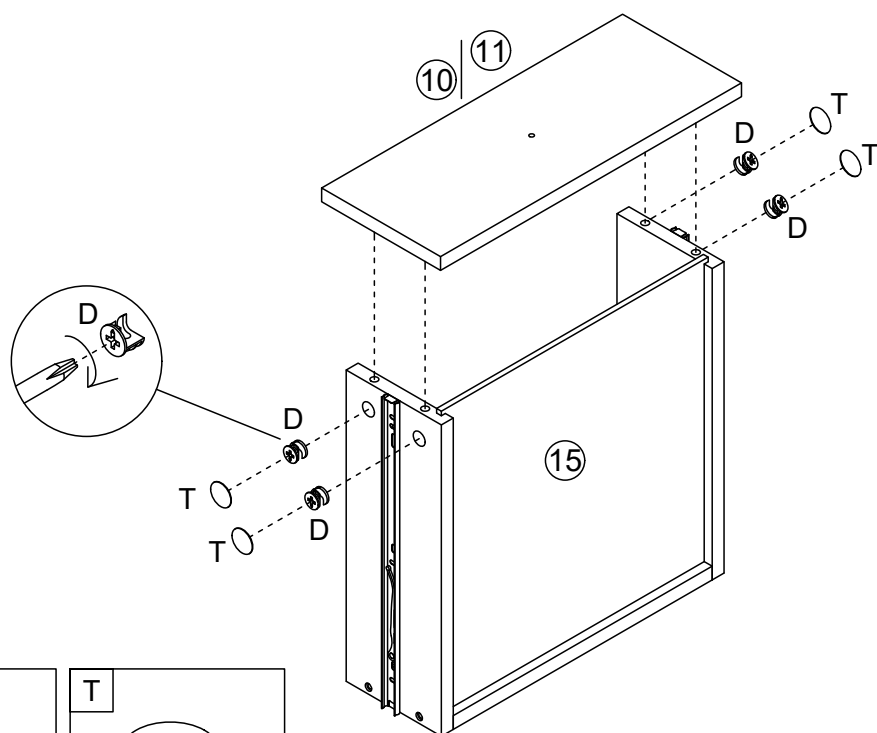

<b>D</b>	<b>T</b>
Ø15mm Cam Lock	Ø20mm Sticker
8pcs	8pcs

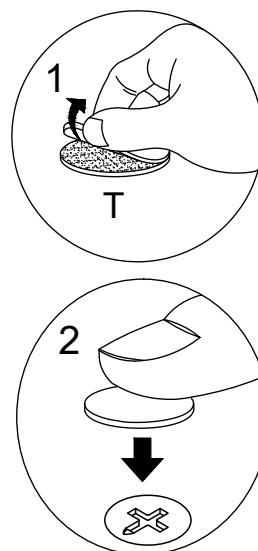


### 14. Attach the Handle.

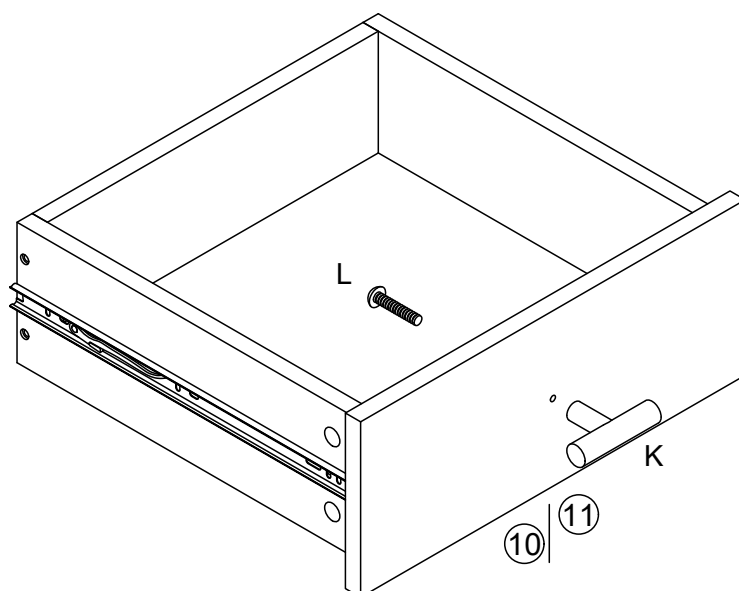






<b>K</b>	<b>L</b>
Handle	M4*20mm Bolt
2pcs	2pcs
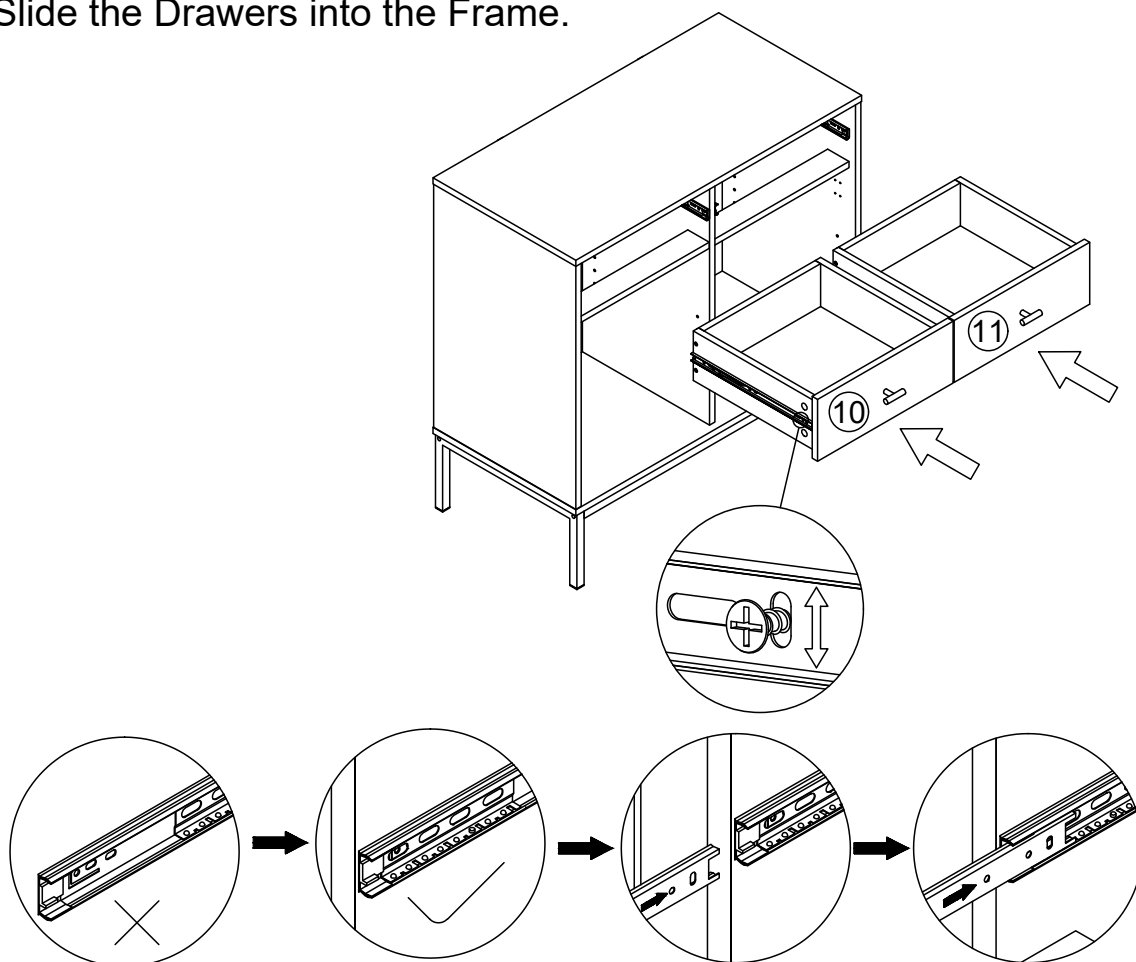
## 15. Slide the Drawers into the Frame.


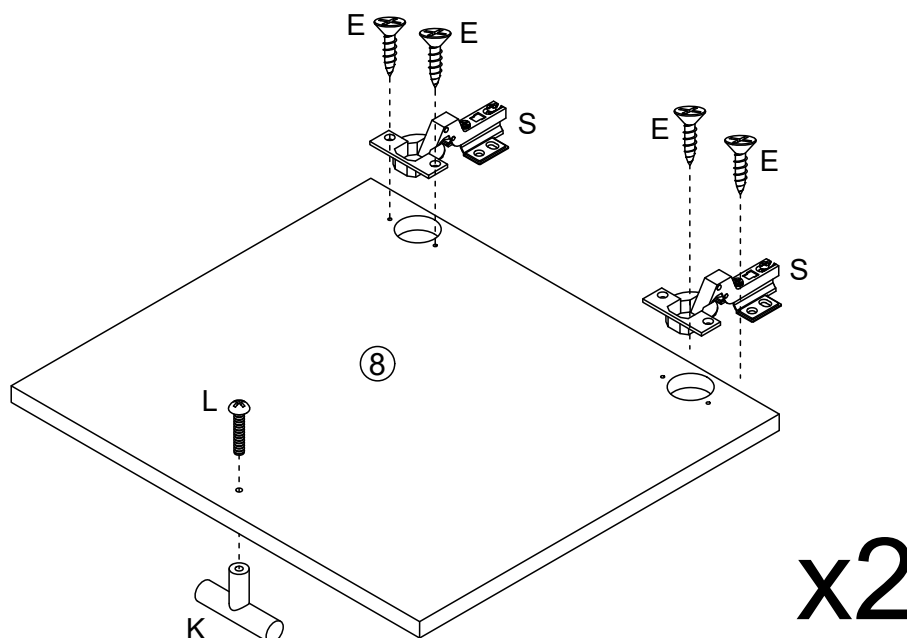



## 16. Attach the Hinges and Handles to the Door Panels.





<div data-bbox="82 1915 304 2049"> <div>K</div>  </div> <div data-bbox="82 2049 304 2143"> <div>Handle</div> <div>2pcs</div> </div>	<div data-bbox="304 1915 526 2049"> <div>L</div>  </div> <div data-bbox="304 2049 526 2143"> <div>M4*20mm Bolt</div> <div>2pcs</div> </div>	<div data-bbox="526 1915 764 2049"> <div>S</div>  </div> <div data-bbox="526 2049 764 2143"> <div>Hinge</div> <div>4pcs</div> </div>	<div data-bbox="764 1915 991 2049"> <div>E</div>  </div> <div data-bbox="764 2049 991 2143"> <div>M3.5*14mm Screw</div> <div>8pcs</div> </div>
--	--	---	---

## 17. Attach the Door Panels to the frame.

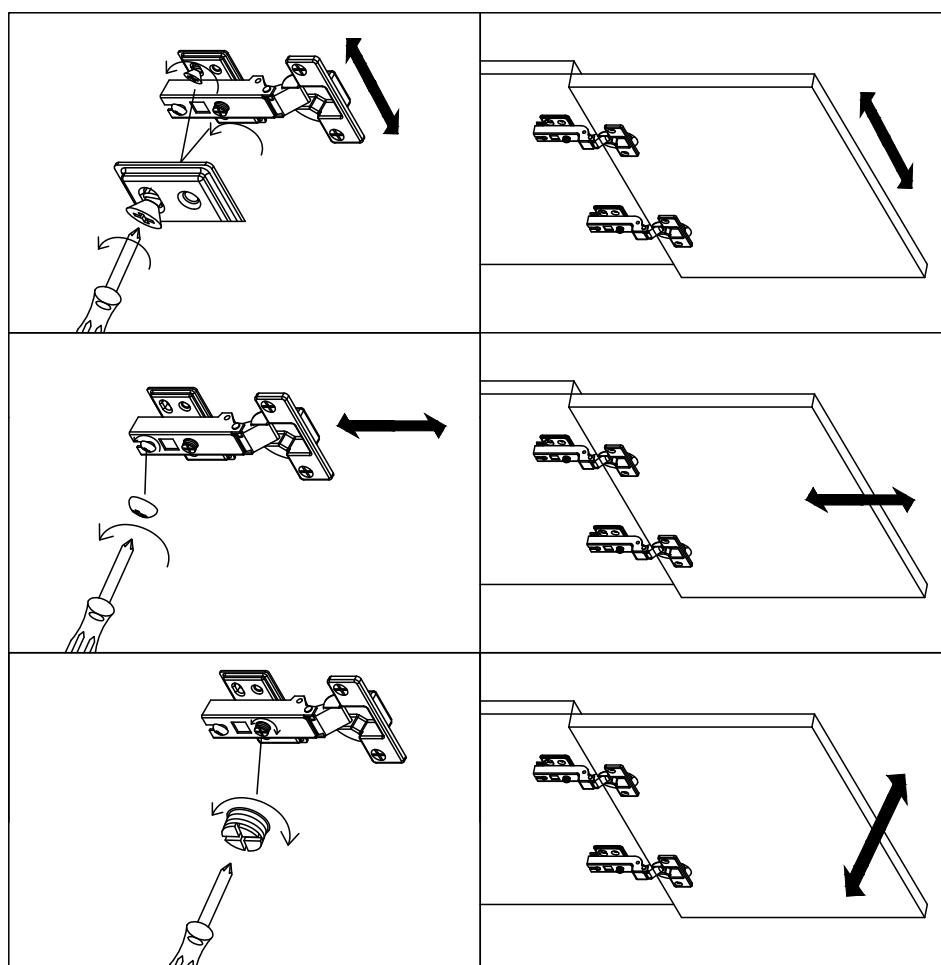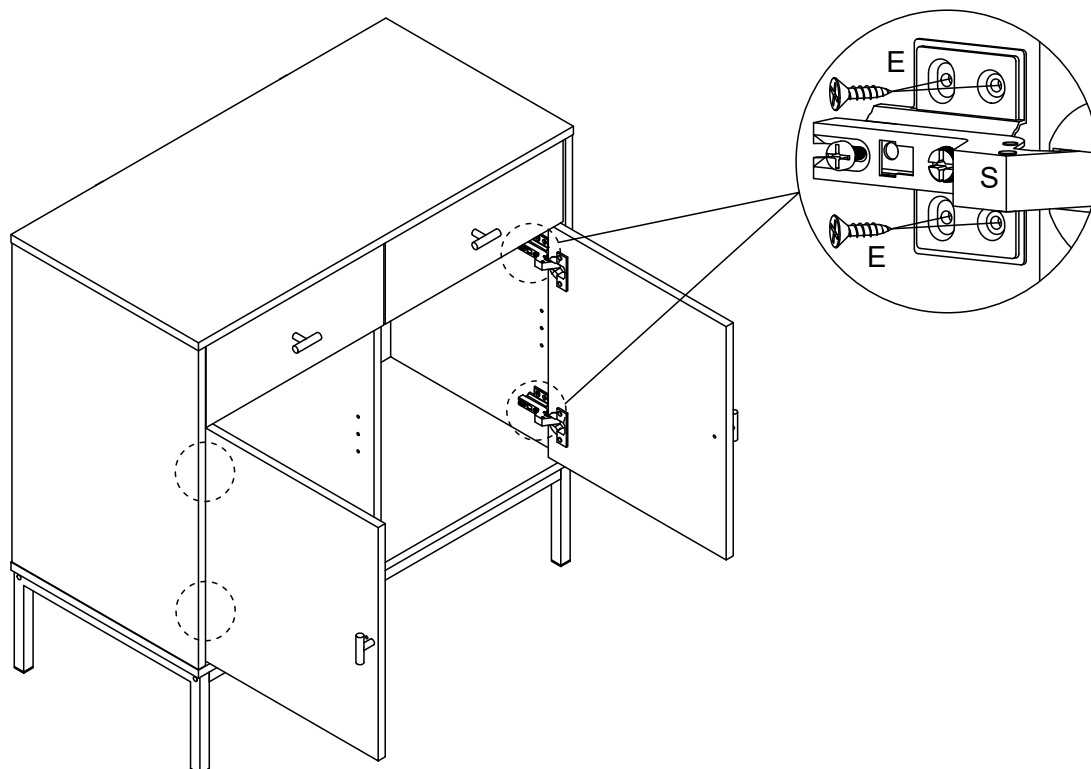


E

M3.5*14mm Screw
16pcs

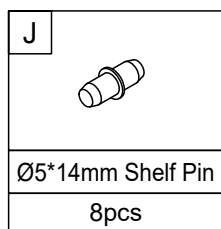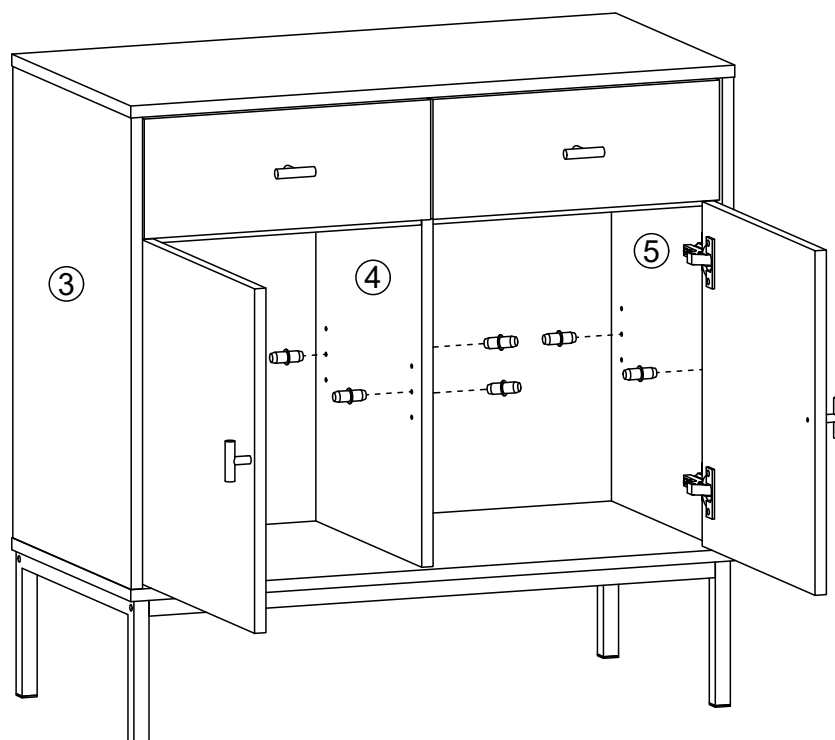18. Attach the Shelf pins to the frame.

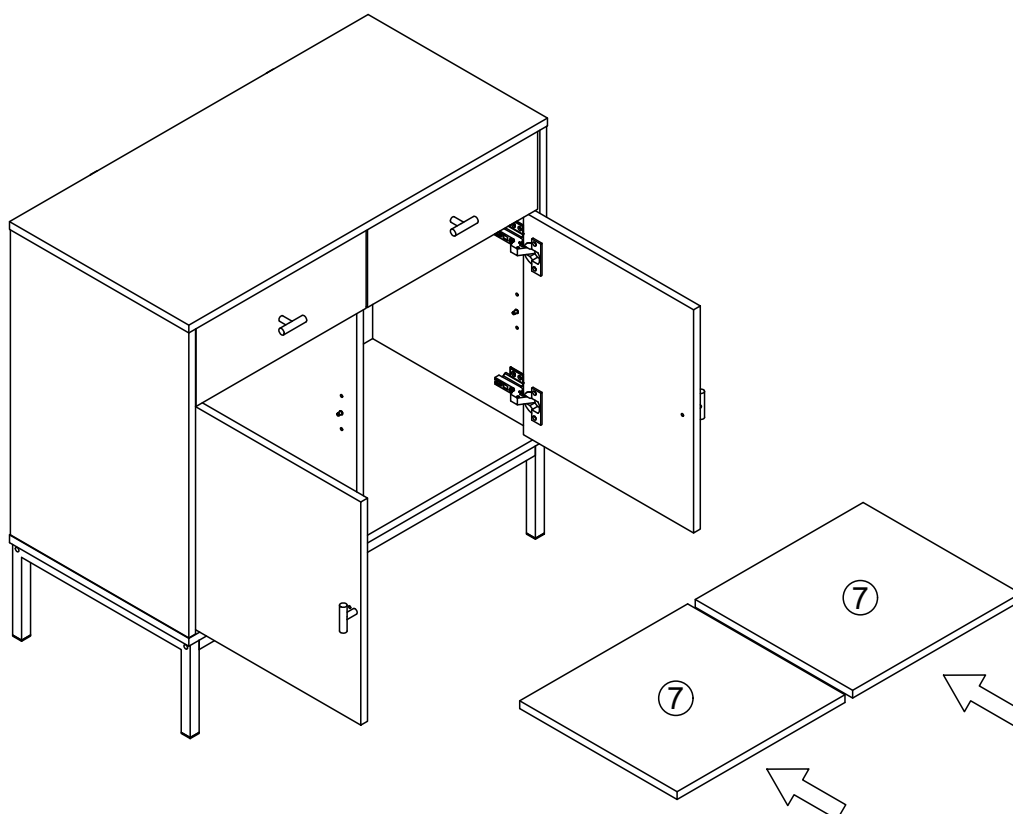

19. Slide the shelves into the frame.



20.

